






Assembly Instruction

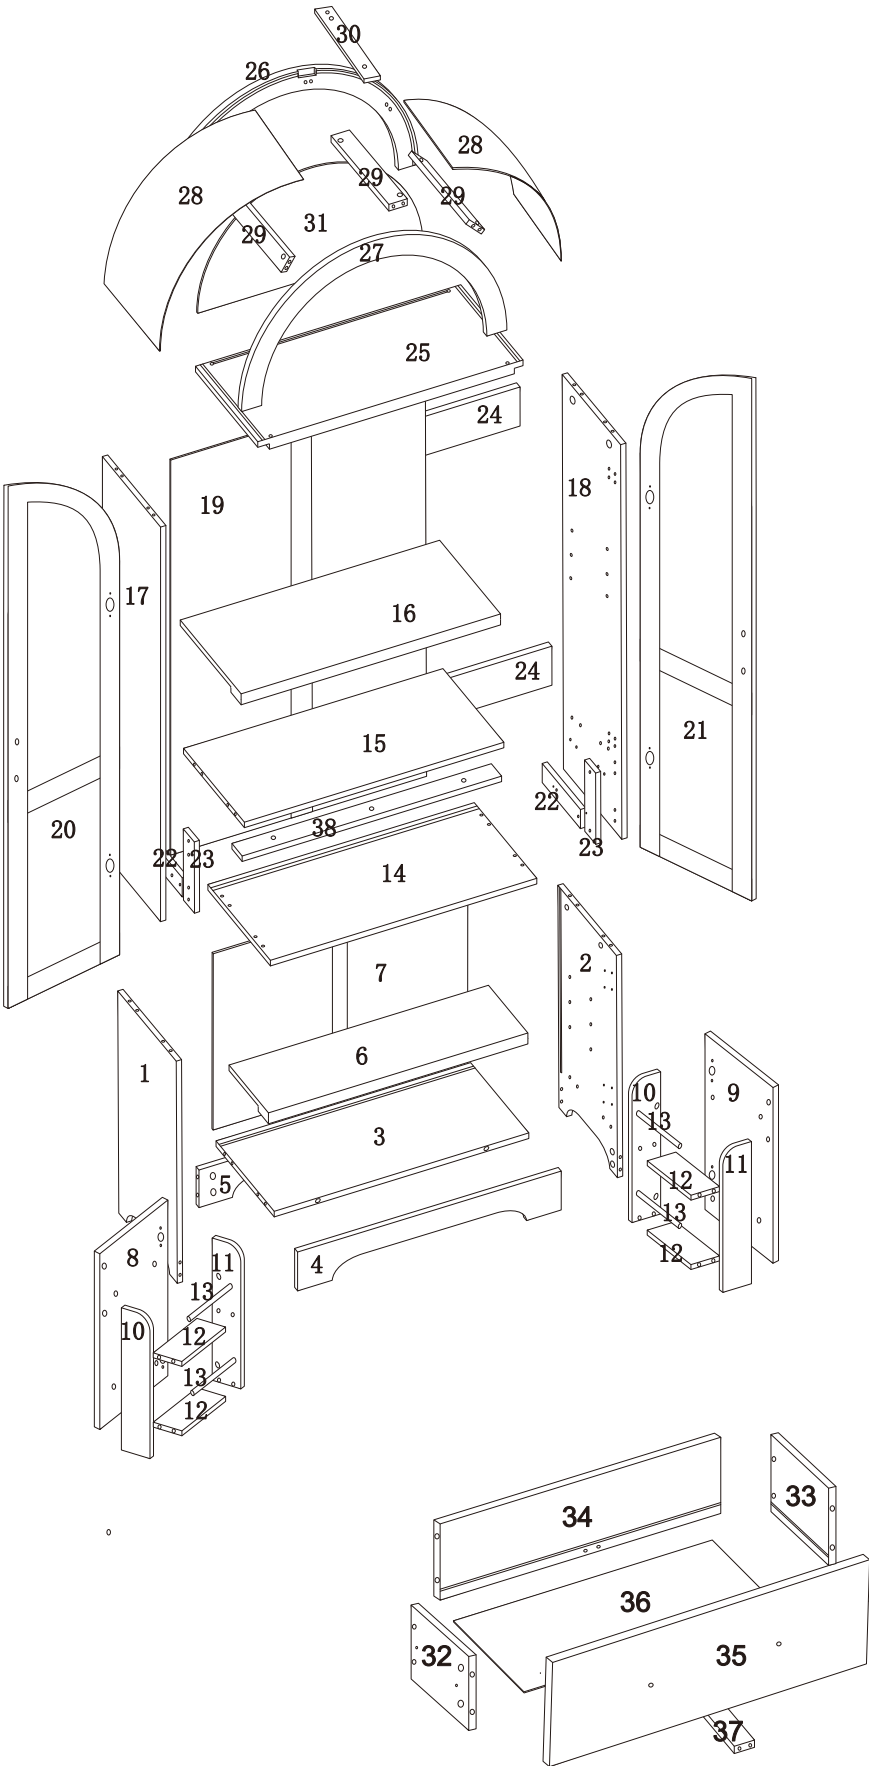


















Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

 A: 69pcs	 B: 69pcs	 Ø5x40mm C: 8pcs	 Ø3x12mm D: 10pcs	 E: 2pcs	 Ø4x15mm F: 2pcs	
 G: 2pcs	 Ø4x25mm H: 8pcs	 I: 8pcs	 Ø3x16mm J: 8pcs	 Ø6x30mm K: 31pcs	 Ø4x30mm L: 6pcs	 M: 8pcs
 Ø4x14mm N: 48pcs	 O: 8pcs	 P: 2pcs	 Q: 1pc	 R: 2pcs	 Ø6x20mm S: 8pcs	 Ø4x18mm T: 11pcs
 U: 1pc	 Ø4x25mm V: 2pcs					


Assembly Instruction

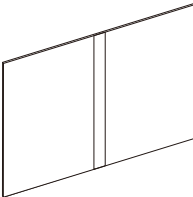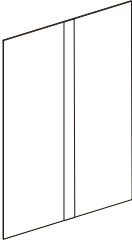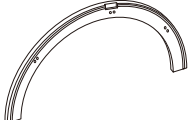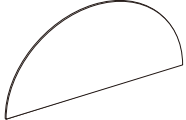					
1: 1pc	2: 1pc	3: 1pc	4: 1pc	5: 1pc	6: 1pc
					
7: 1pc	8: 1pc	9: 1pc	10: 2pcs	11: 2pcs	12: 4pcs
					
13: 4pcs	14: 1pc	15: 1pcs	16: 1pc	17: 1pc	18: 1pc
					
19: 1pc	20: 1pc	21: 1pc	22: 2pcs	23: 2pcs	24: 2pcs
					
25: 1pc	26: 1pc	27: 1pc	28: 2pcs	29: 3pcs	30: 1pc
					
31: 1pc	32: 1pc	33: 1pc	34: 1pc	35: 1pc	36: 1pc
					
37: 1pc	38: 1pc				




Step 1

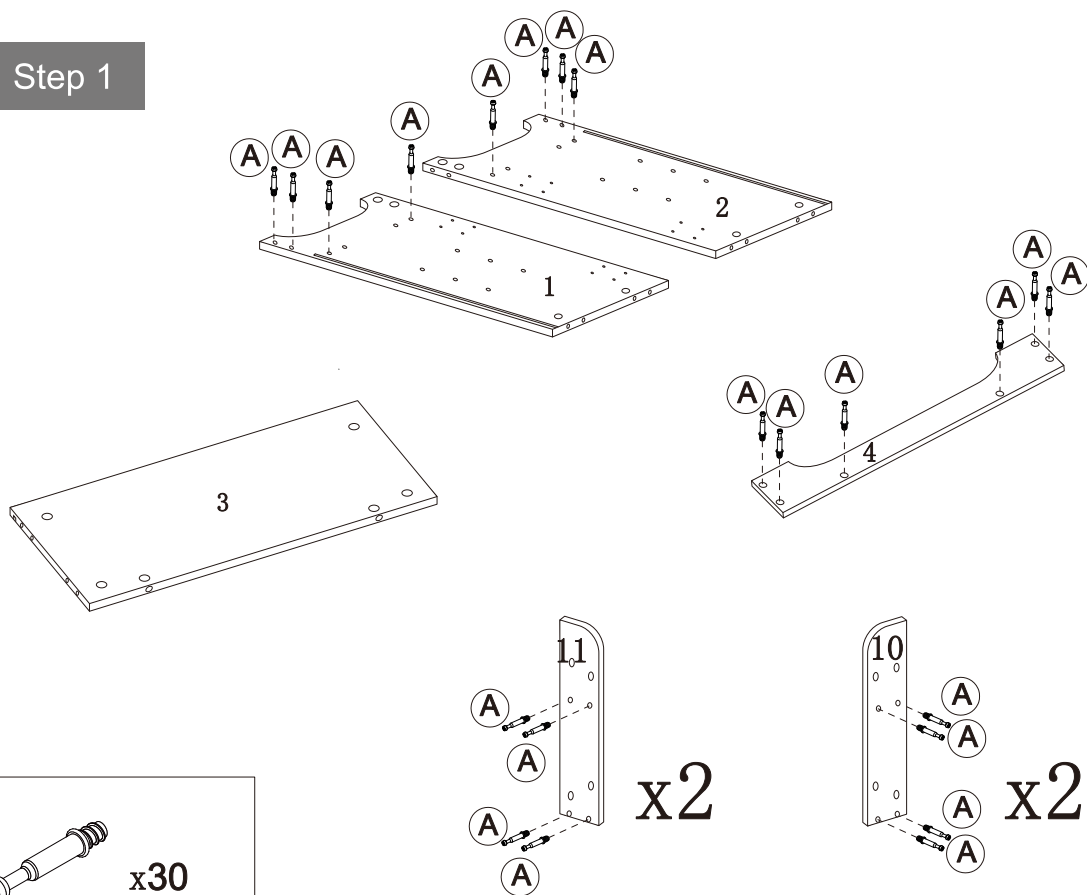




Step 2

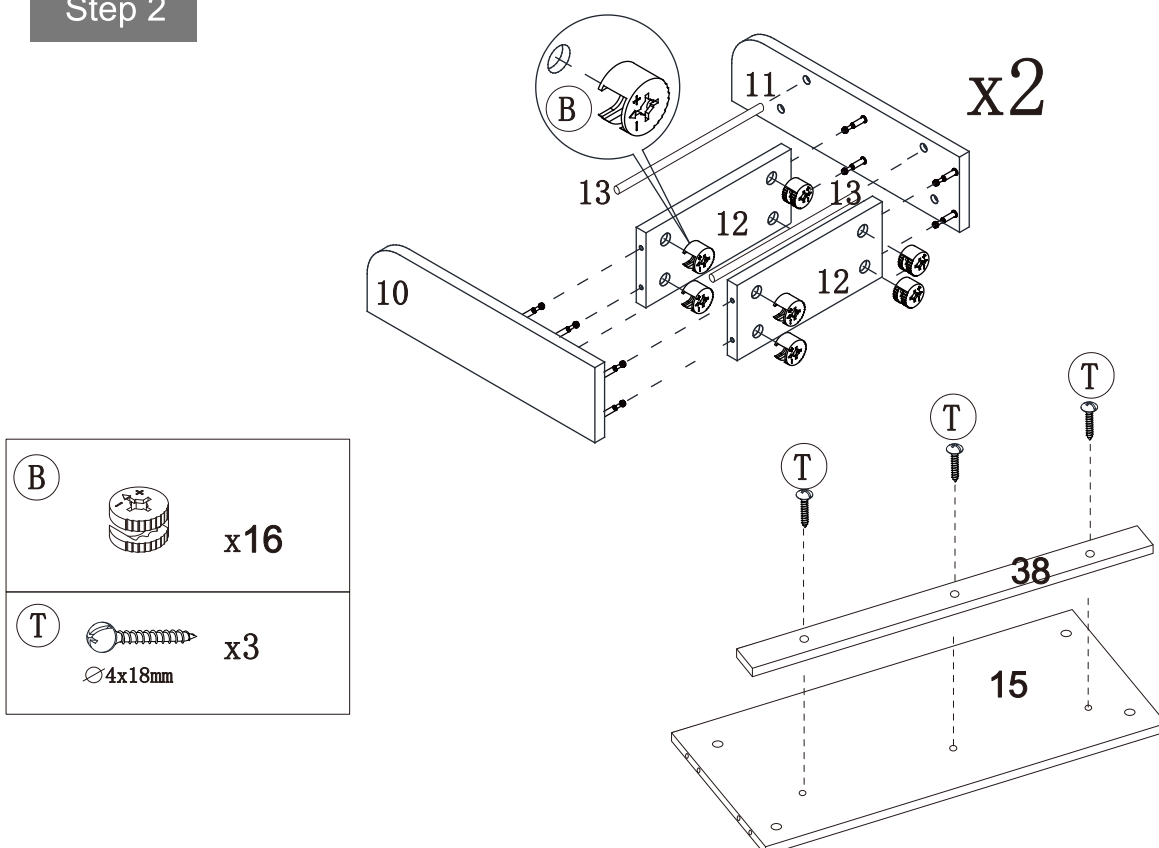





Step 3

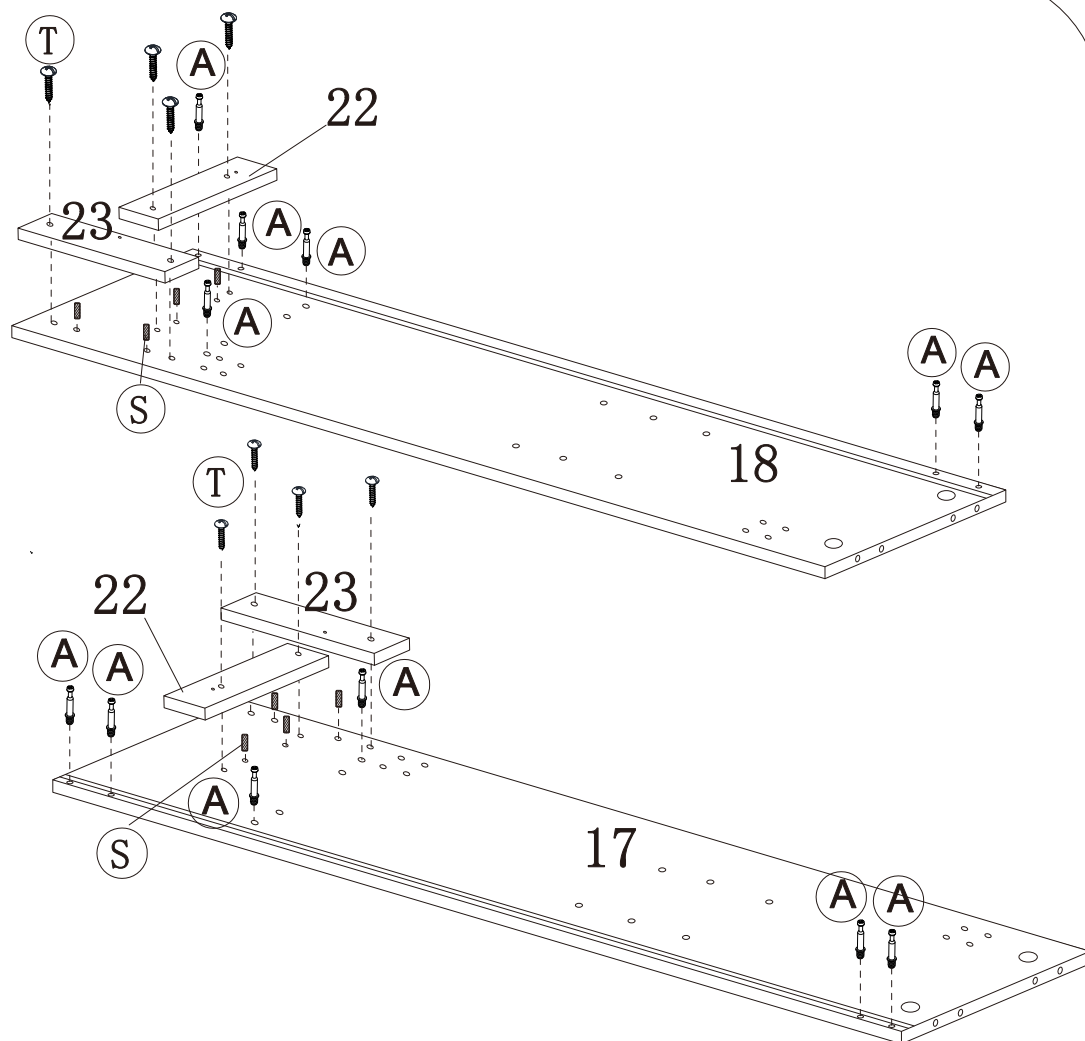

Step 4



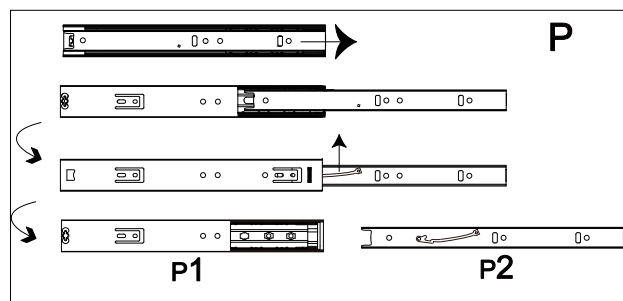
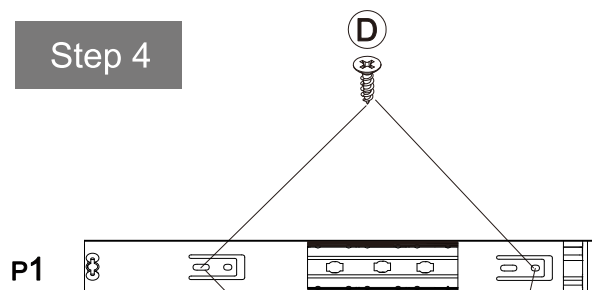


Step 5


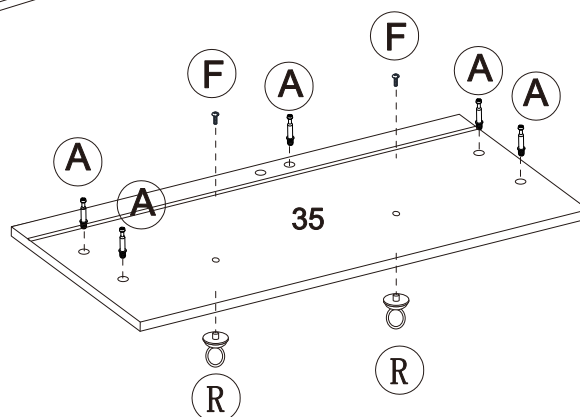
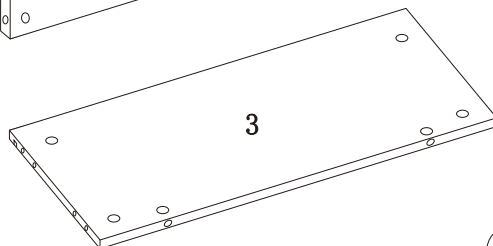
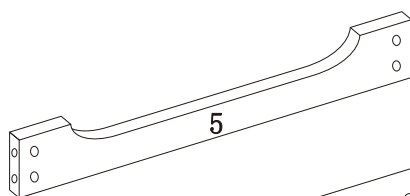


Step 6

P₂

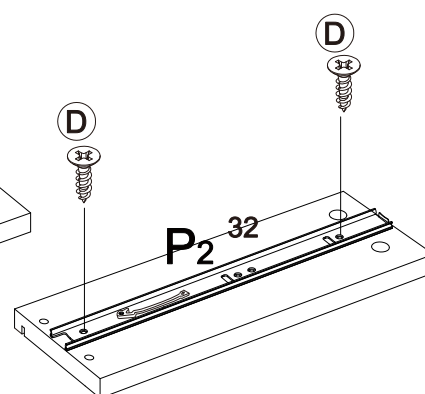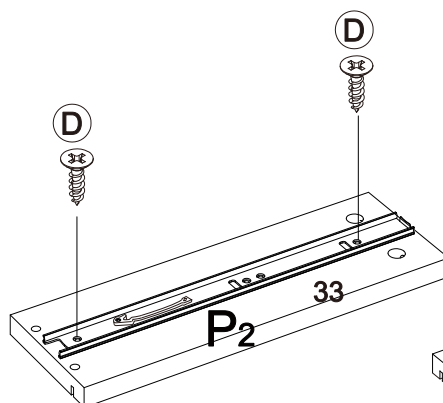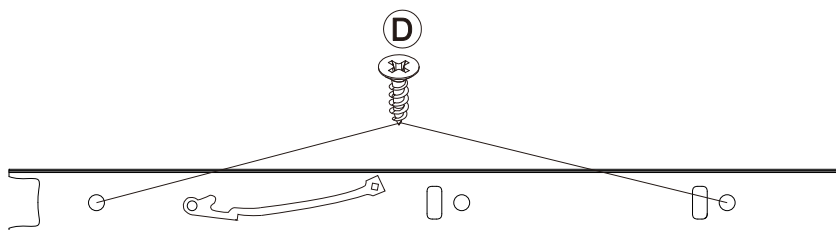


Step 7

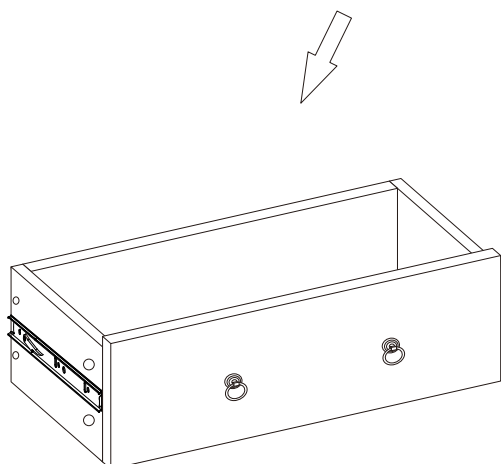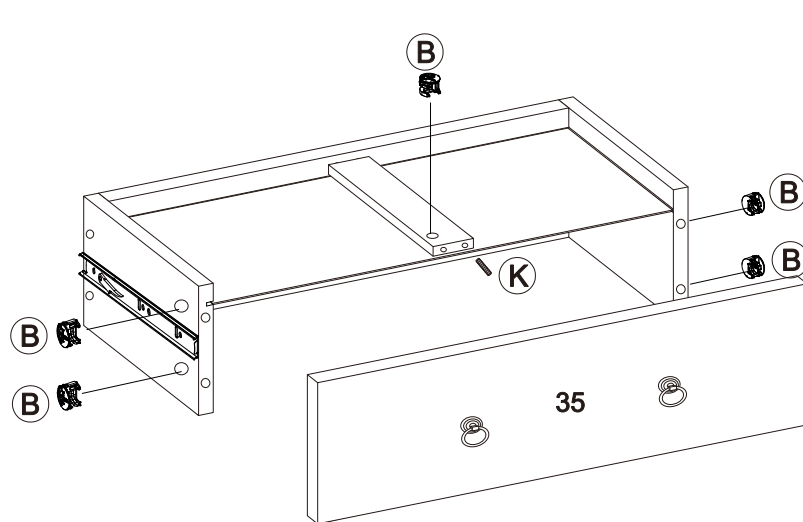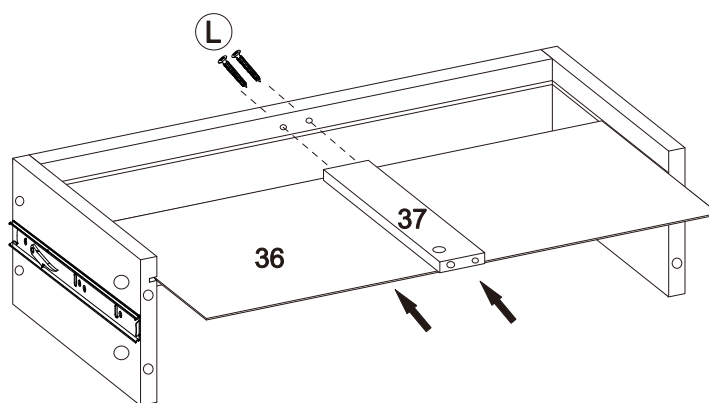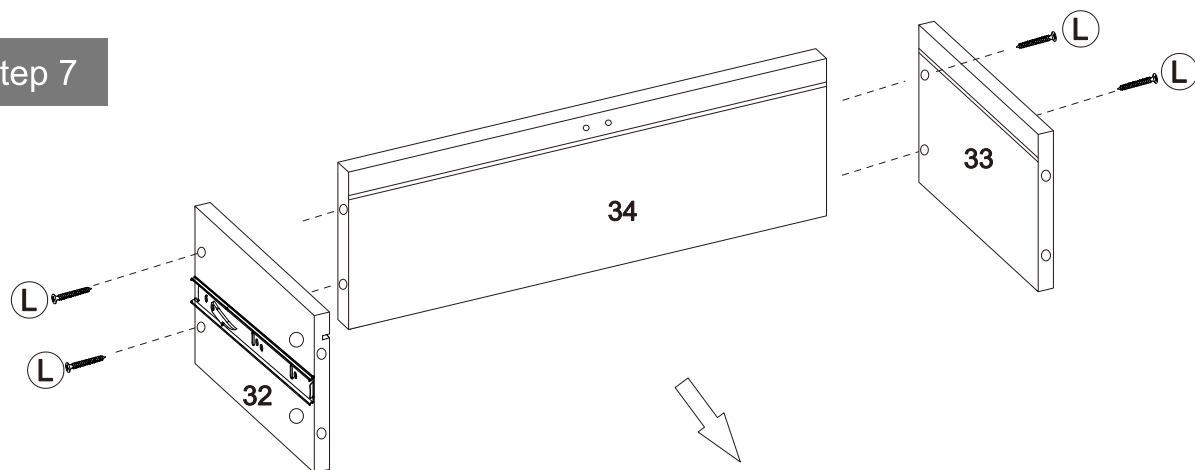

(B)		x5
(K)		x1
(L)	 Ø4x30mm	x6


Step 8

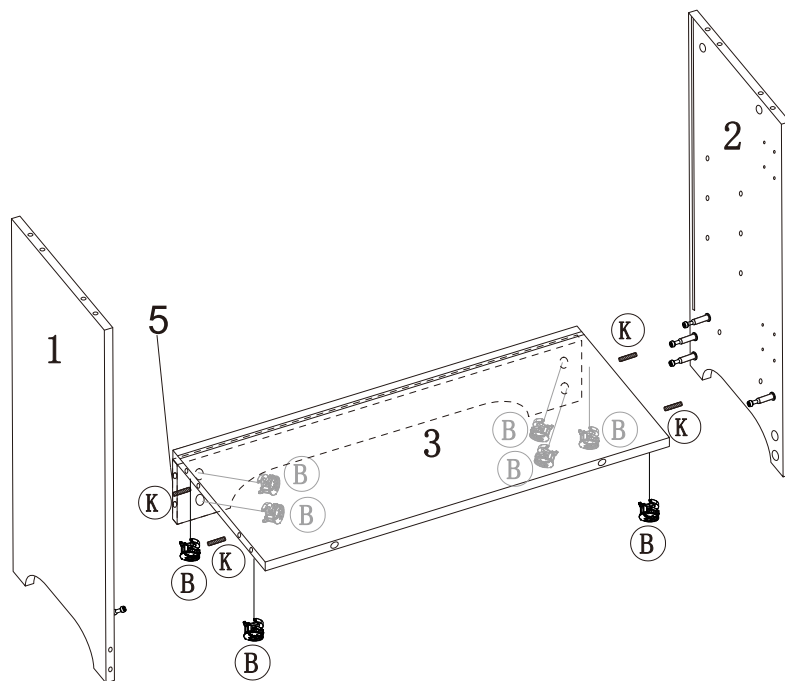

(B)  x8


(K)  x4


Step 9

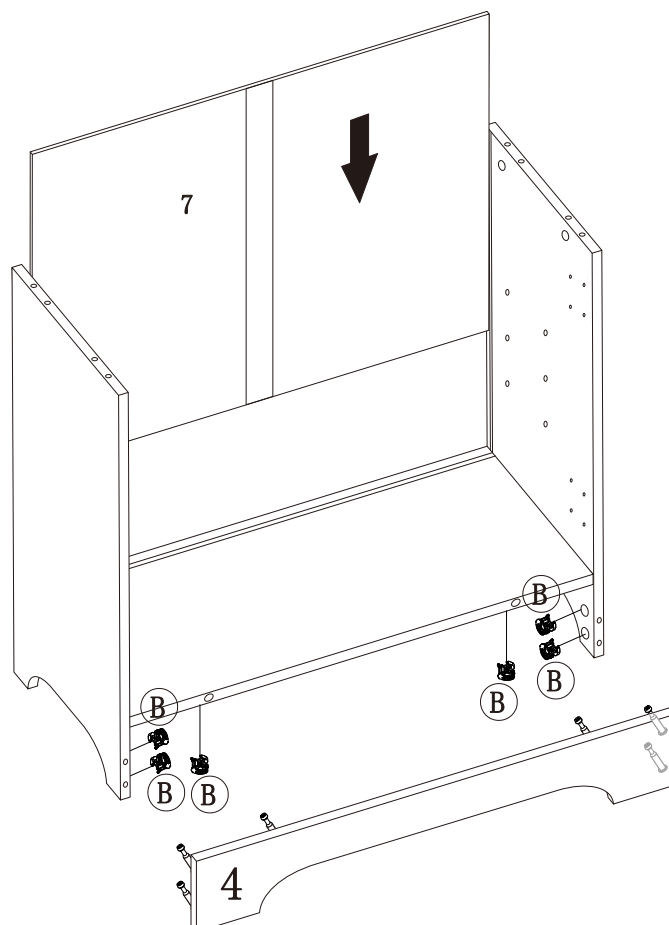


(B)  x6


Step 10

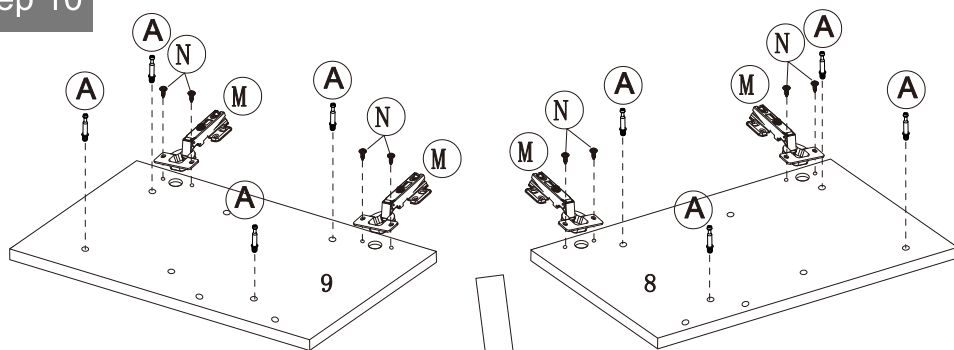





(A)		x8
(B)		x8
(K)		x4
(M)		x4
(N)		x8
$\varnothing 4 \times 14 \text{ mm}$		

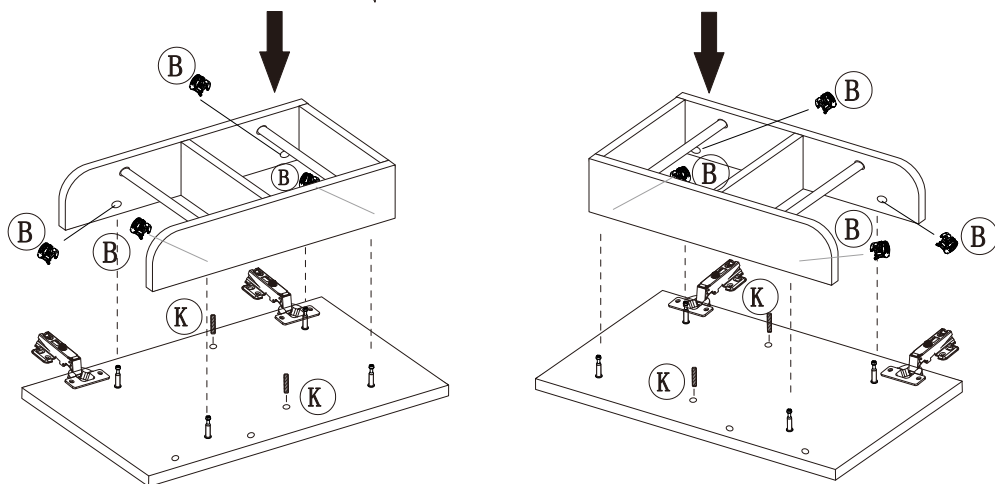






Step 11


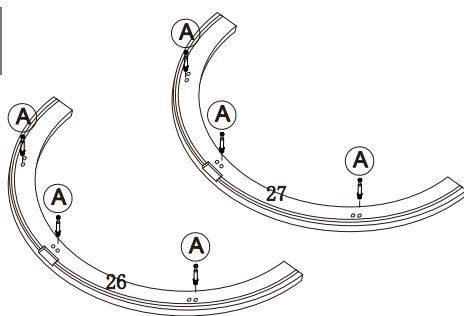


(A)		x10
(D)		x2
$\varnothing 3 \times 12 \text{ mm}$		
(M)		x4
(N)		x8
$\varnothing 4 \times 14 \text{ mm}$		
(U)		x1

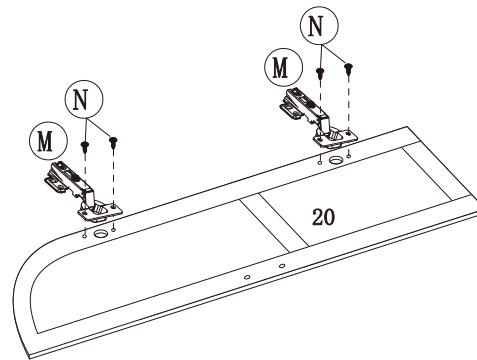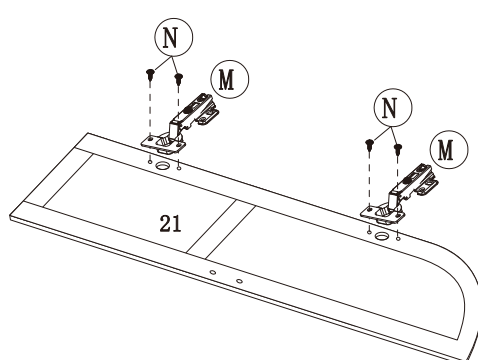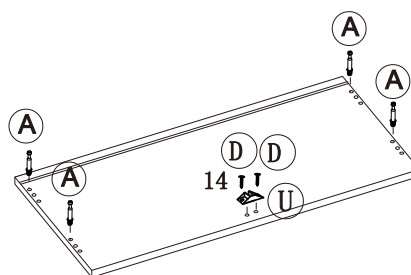


Step 12

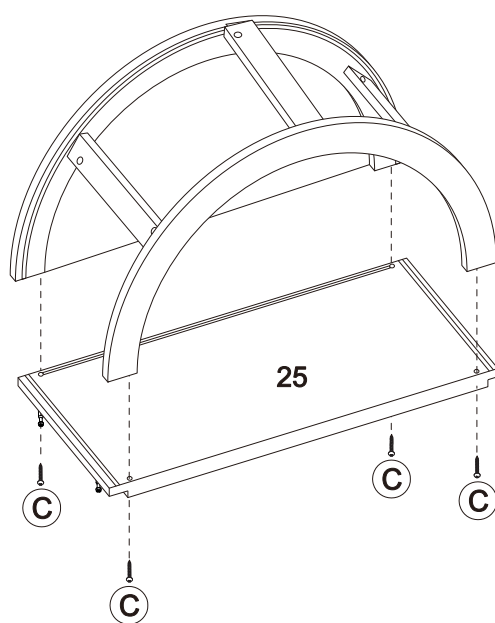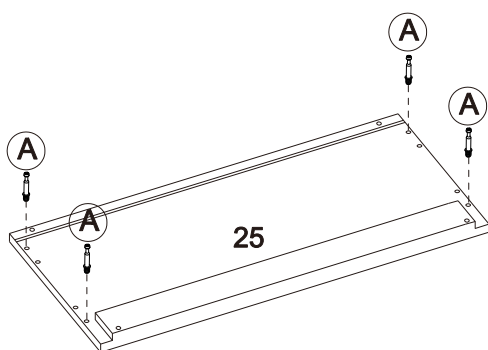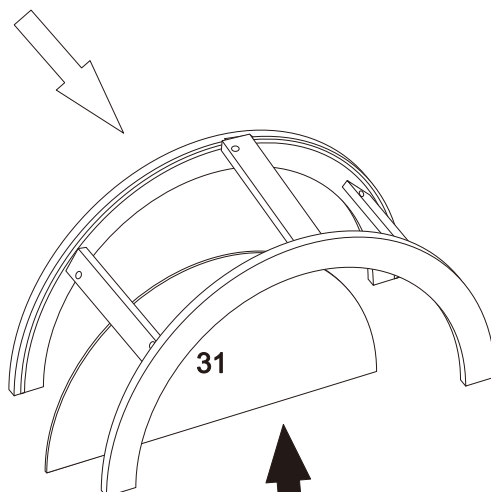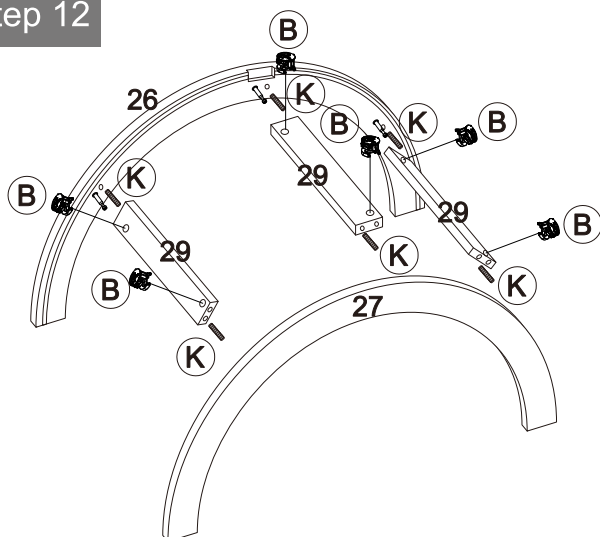


(A)  x4
(C)  x4 Ø5x40mm
(B)  x6
(K)  x6


Step 13

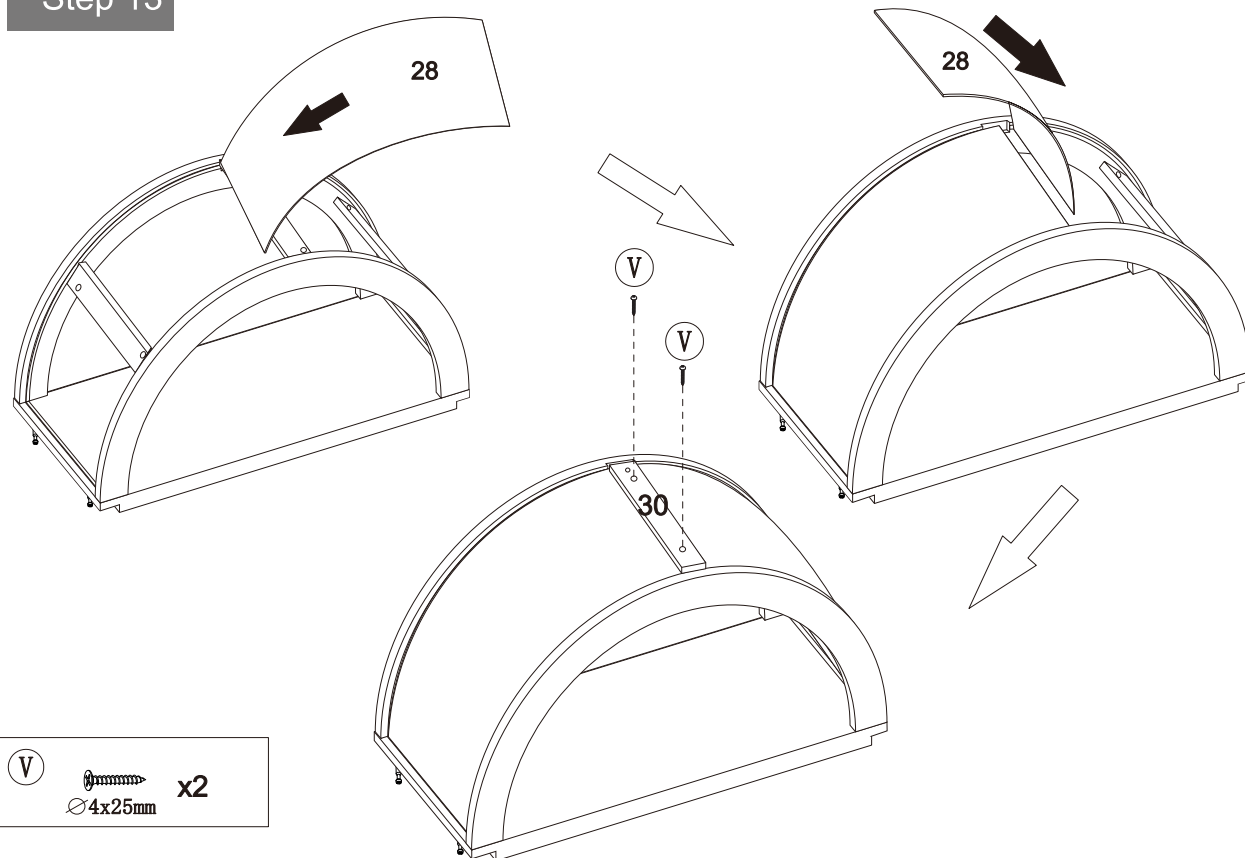

Step 14

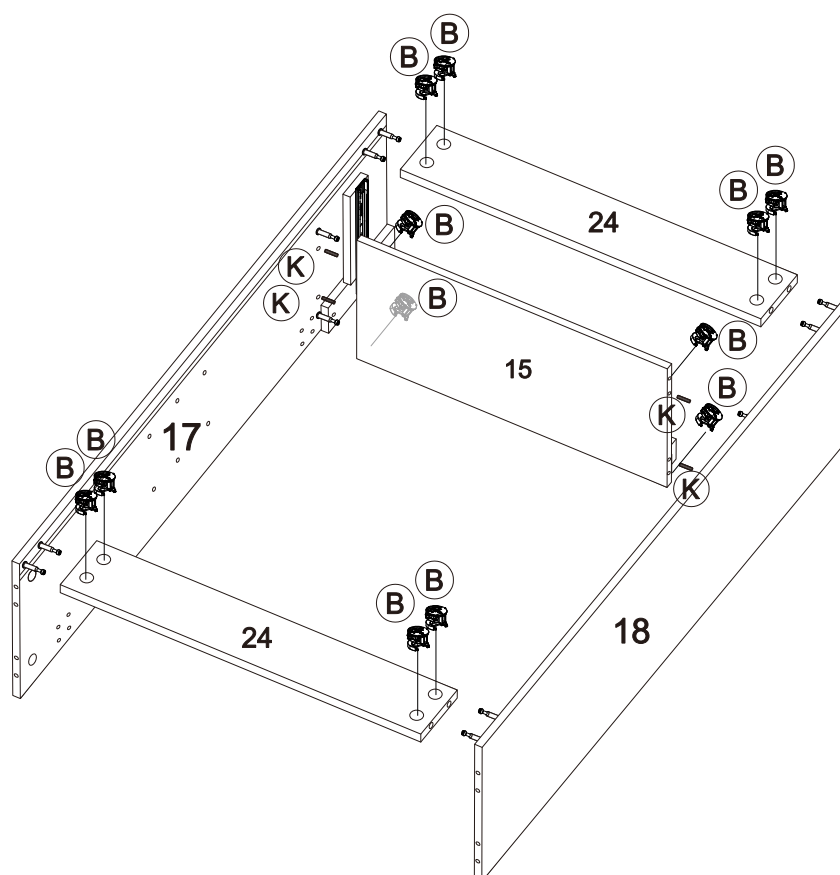


Step 15

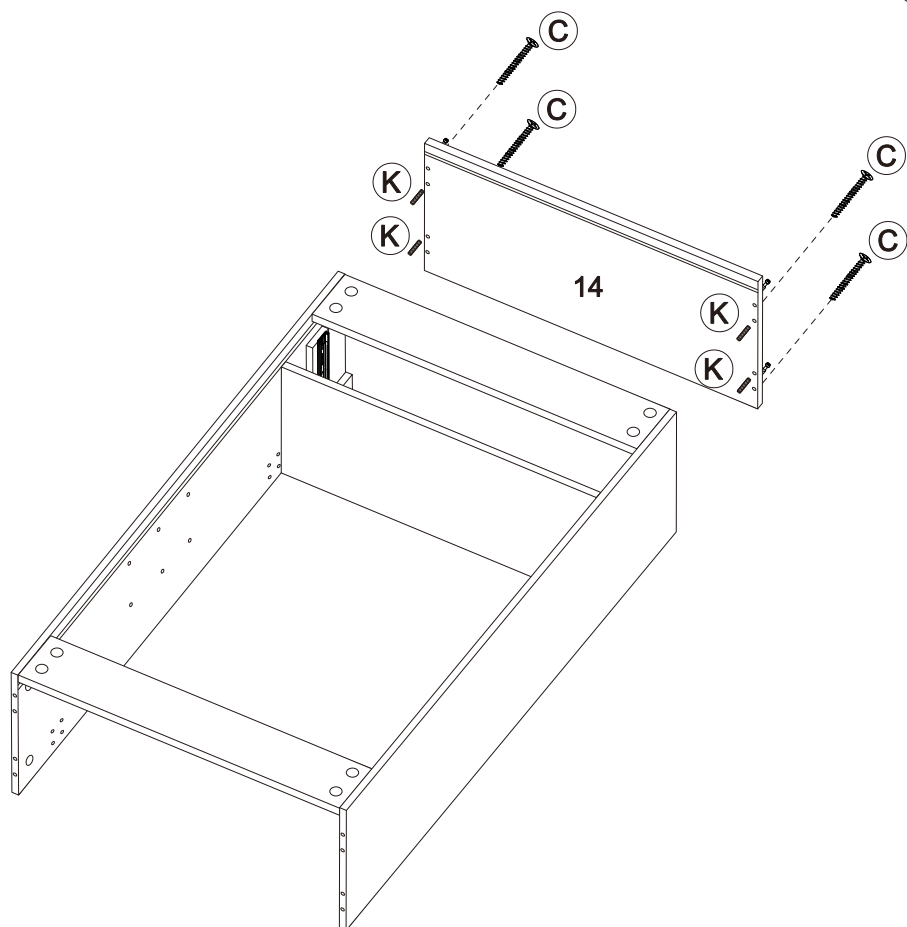


(C)  x4
Ø5x40mm

(K)  x4

Step 16

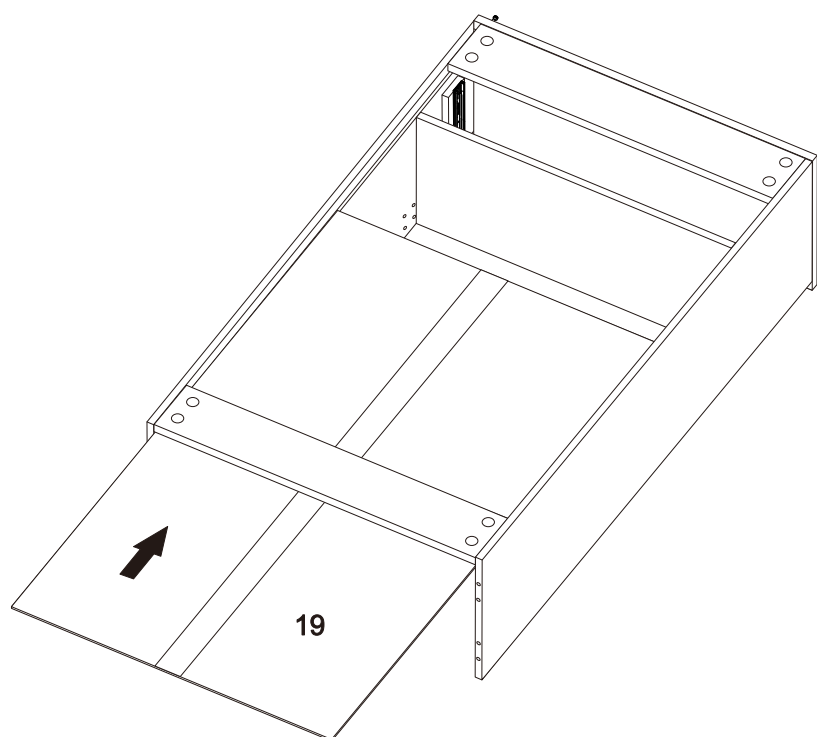


Step 17

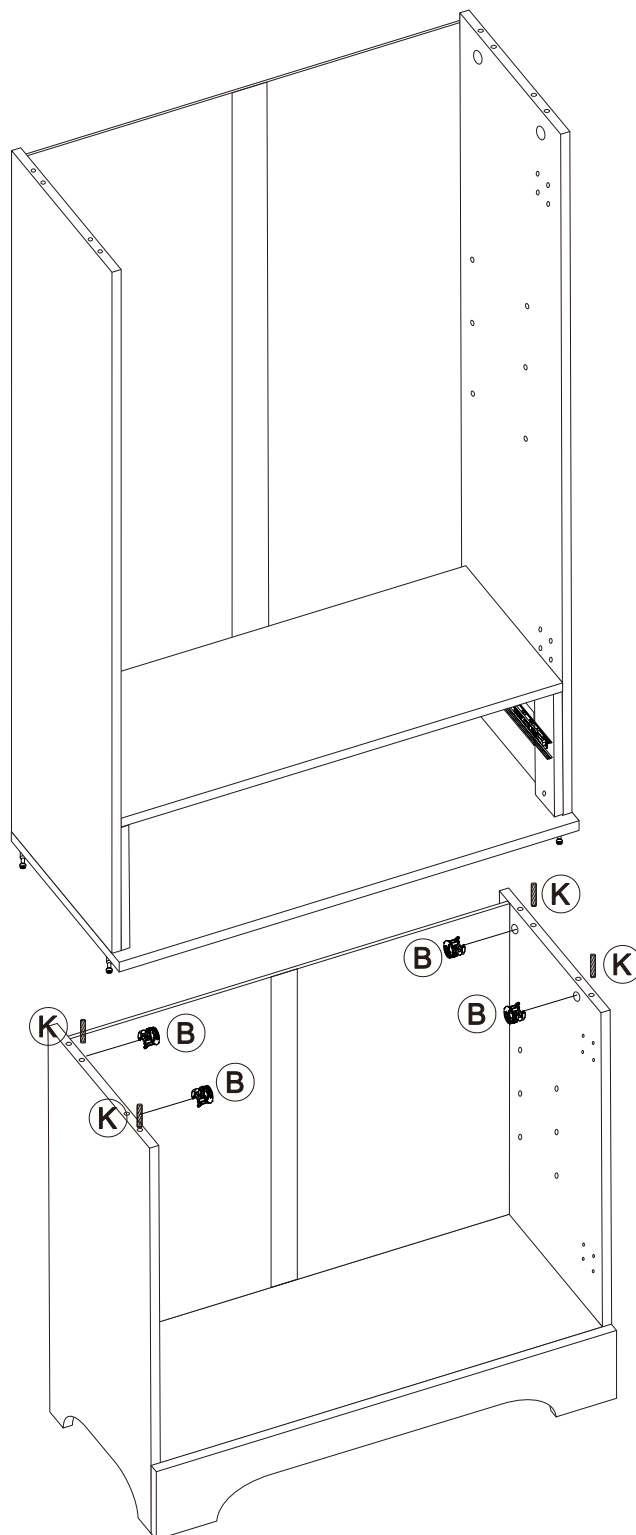








B		x4
K		x4

Step 18

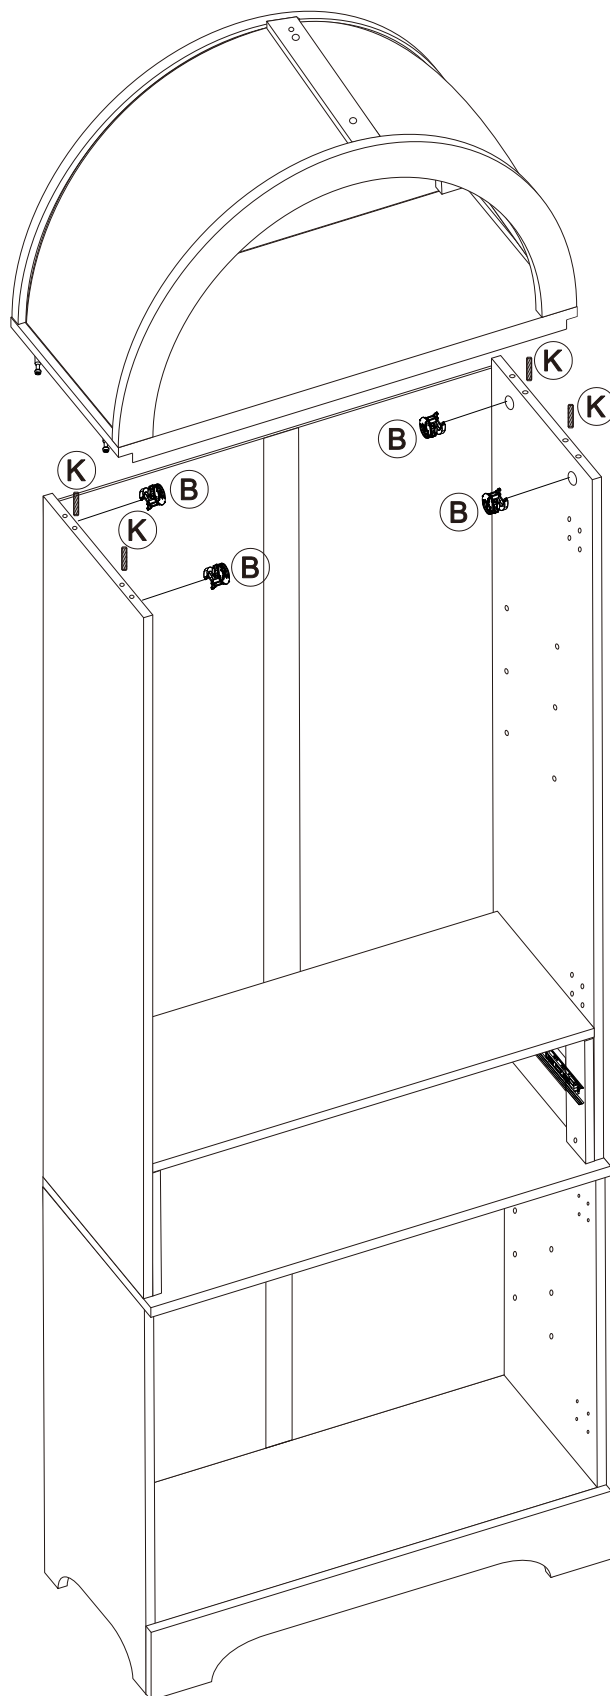

B		x4
K		x4

Step 19

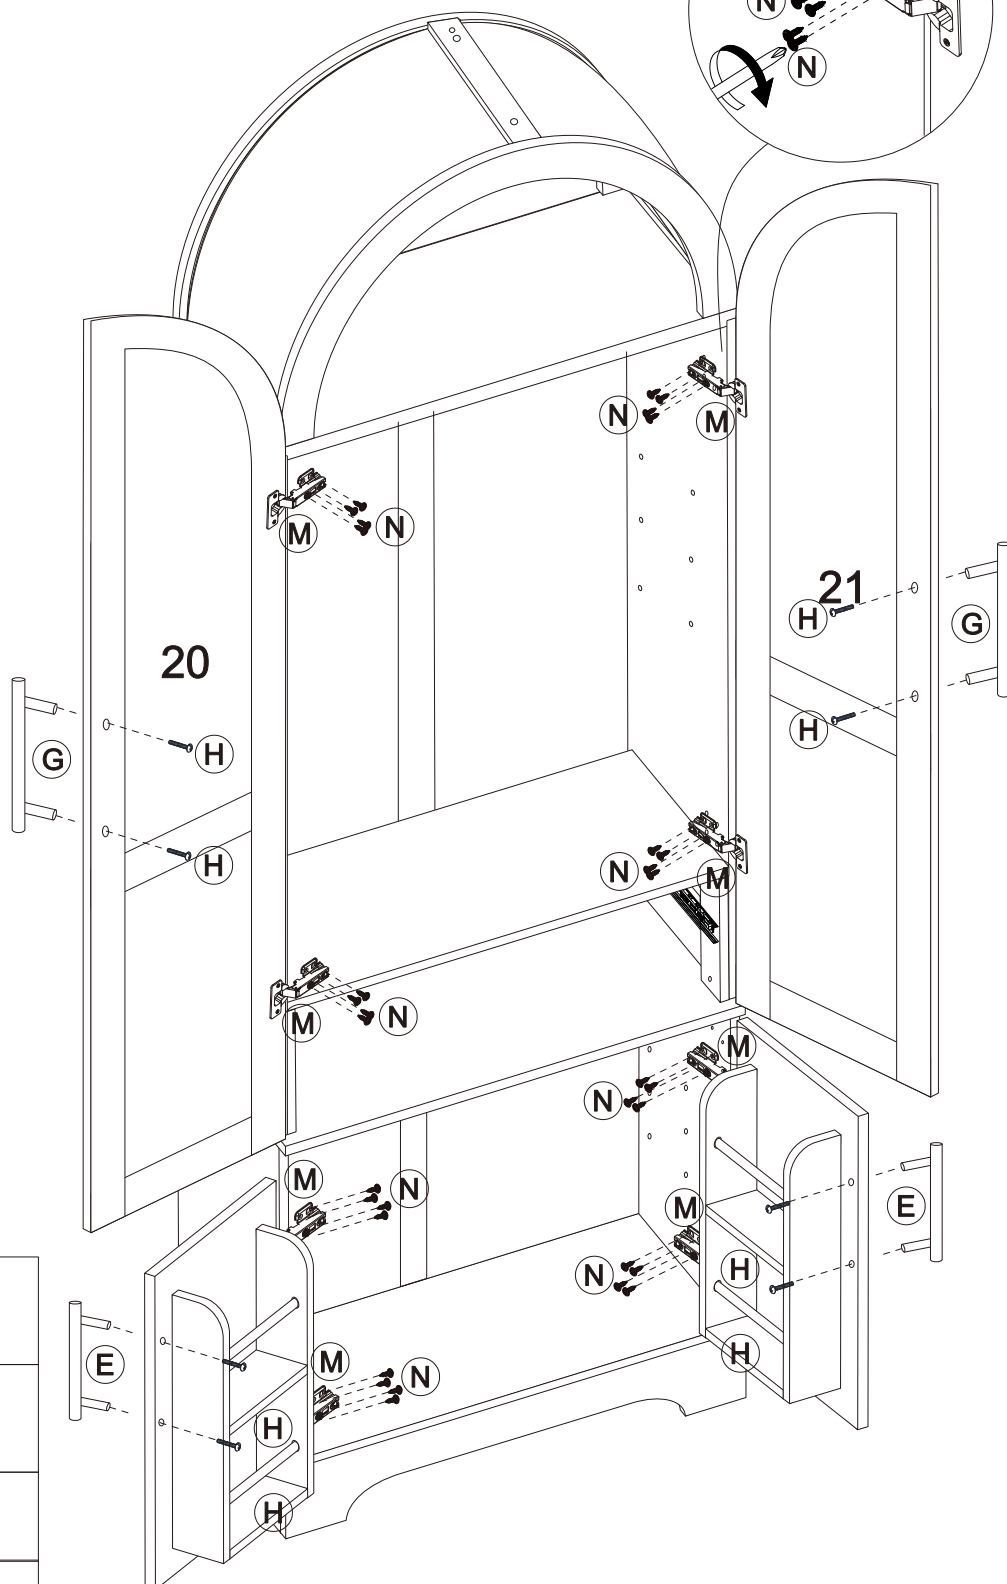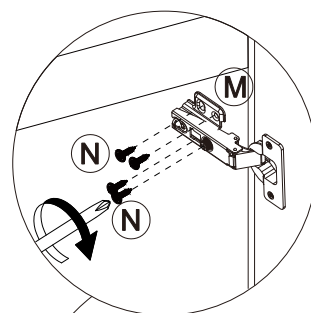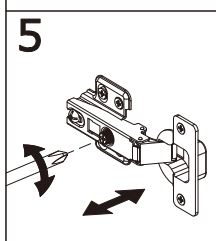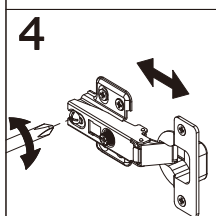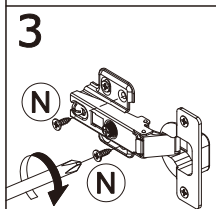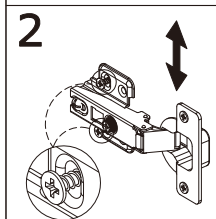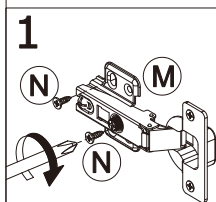





E  x2

G  x2


H  $\varnothing 4 \times 25 \text{ mm}$ x8

N  $\varnothing 4 \times 14 \text{ mm}$ x32

Step 20

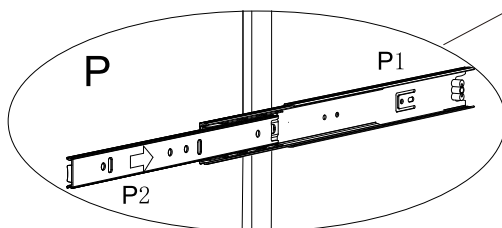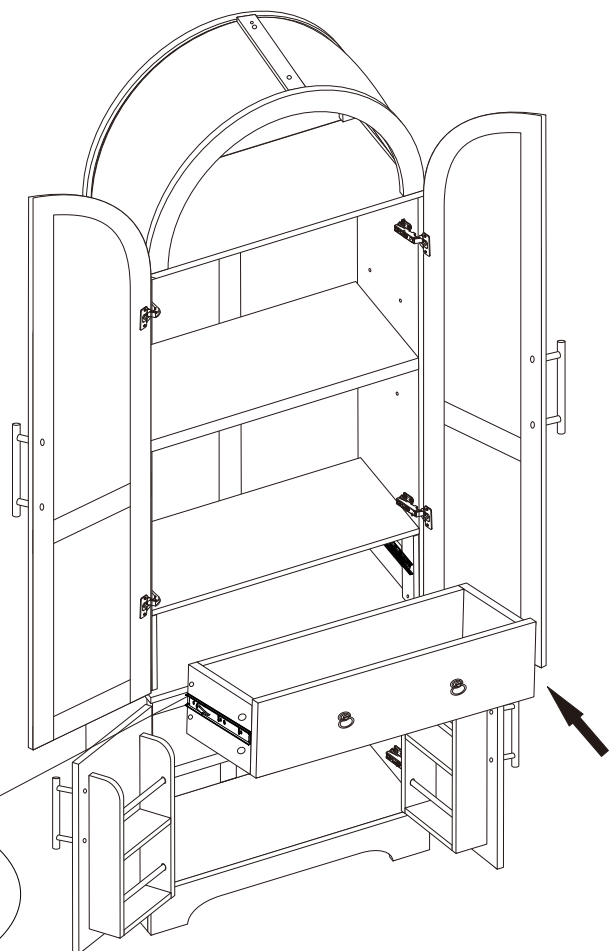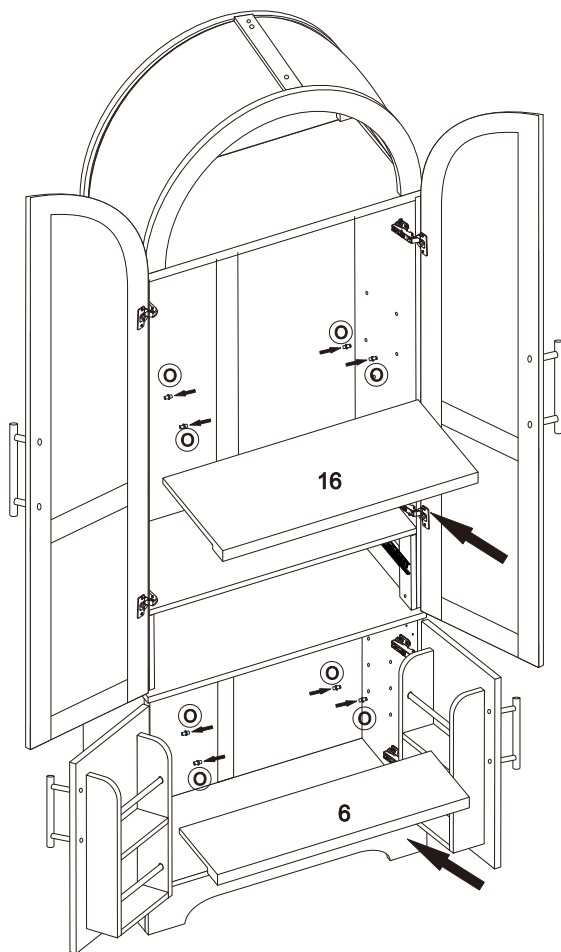

Step 21

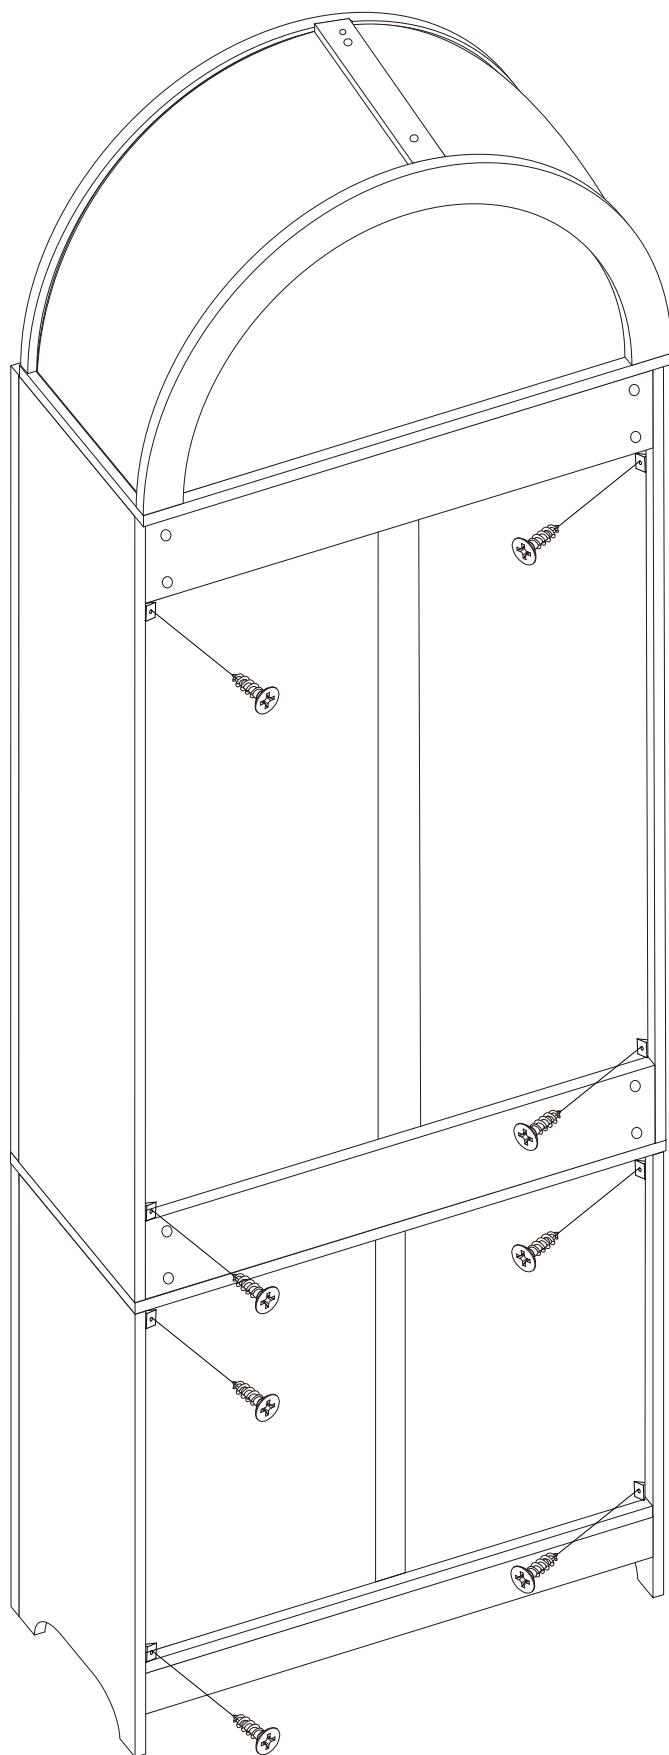

I  x8

J  x8
Ø3x16mm

Step 22

