


STEP 2

Attach **Wooden Slats** onto **Side Rails** by using **(B)**, tighten it up by using a Crosshead Screw Driver. Go on to complete the assembly.

ASSEMBLY INSTRUCTION

TWIN BED (990 x 1905)MM

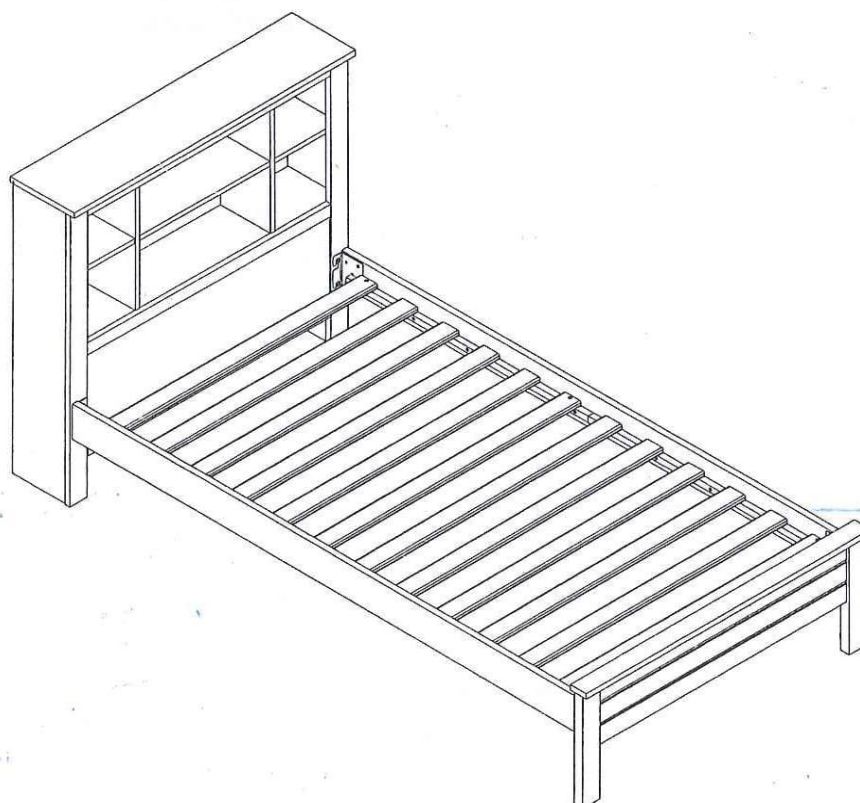


HARDWARE LIST


A  JCBB BOLT (M8 x 20MM)	B  CSK C/B SCREW (M4 x 32MM)	C  ALLEN KEY (M5 x 60MM)
--	--	--

Tool Required : Crosshead Screw Driver


PARTS LIST

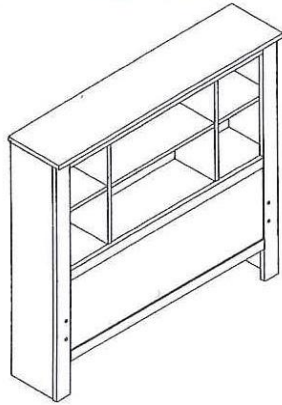

HEADBOARD
1 PC / SET
(CARTON 1 OF 3)

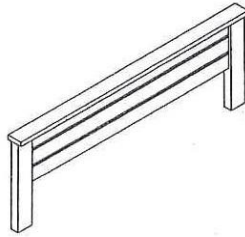


FOOTBOARD
1 PC / SET
(CARTON 2 OF 3)

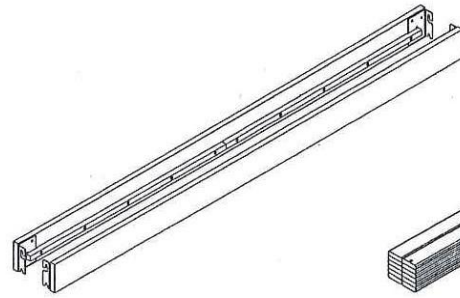

SIDE RAIL
2 PCS / SET
(CARTON 3 OF 3)



WOODEN SLATS
12 PCS / SET
(CARTON 1 OF 3)

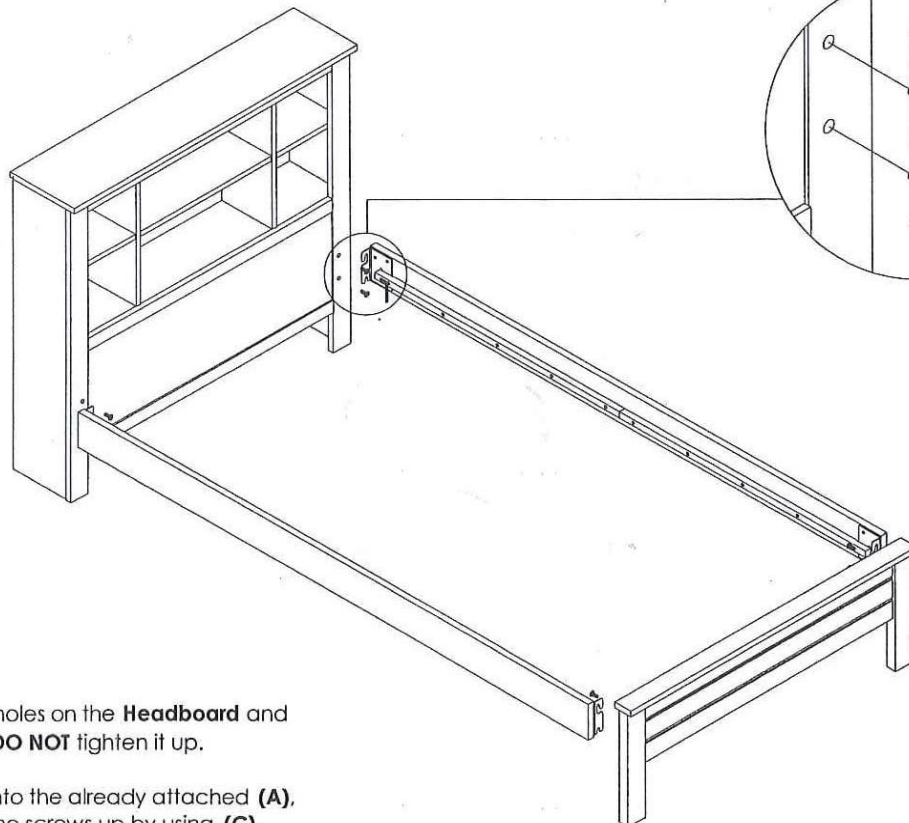

STEP 1

Attach **(A)** into holes on the **Headboard** and **Footboard**, but **DO NOT** tighten it up.

Slot **Side Rails** onto the already attached **(A)**, and tighten all the screws up by using **(C)**.