















Product Installation Manual

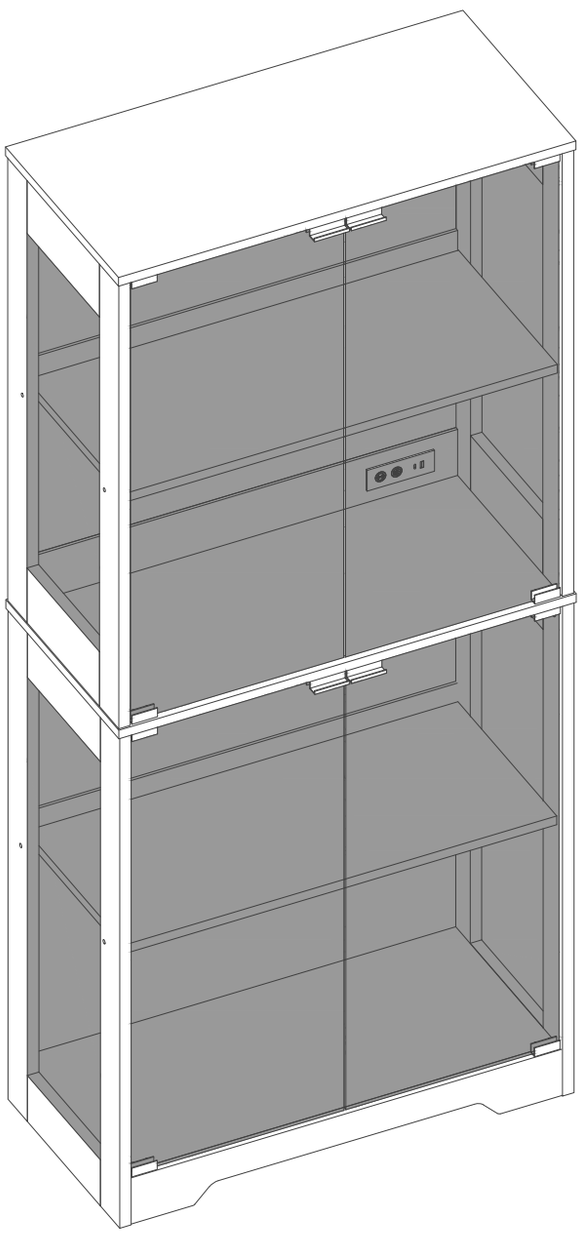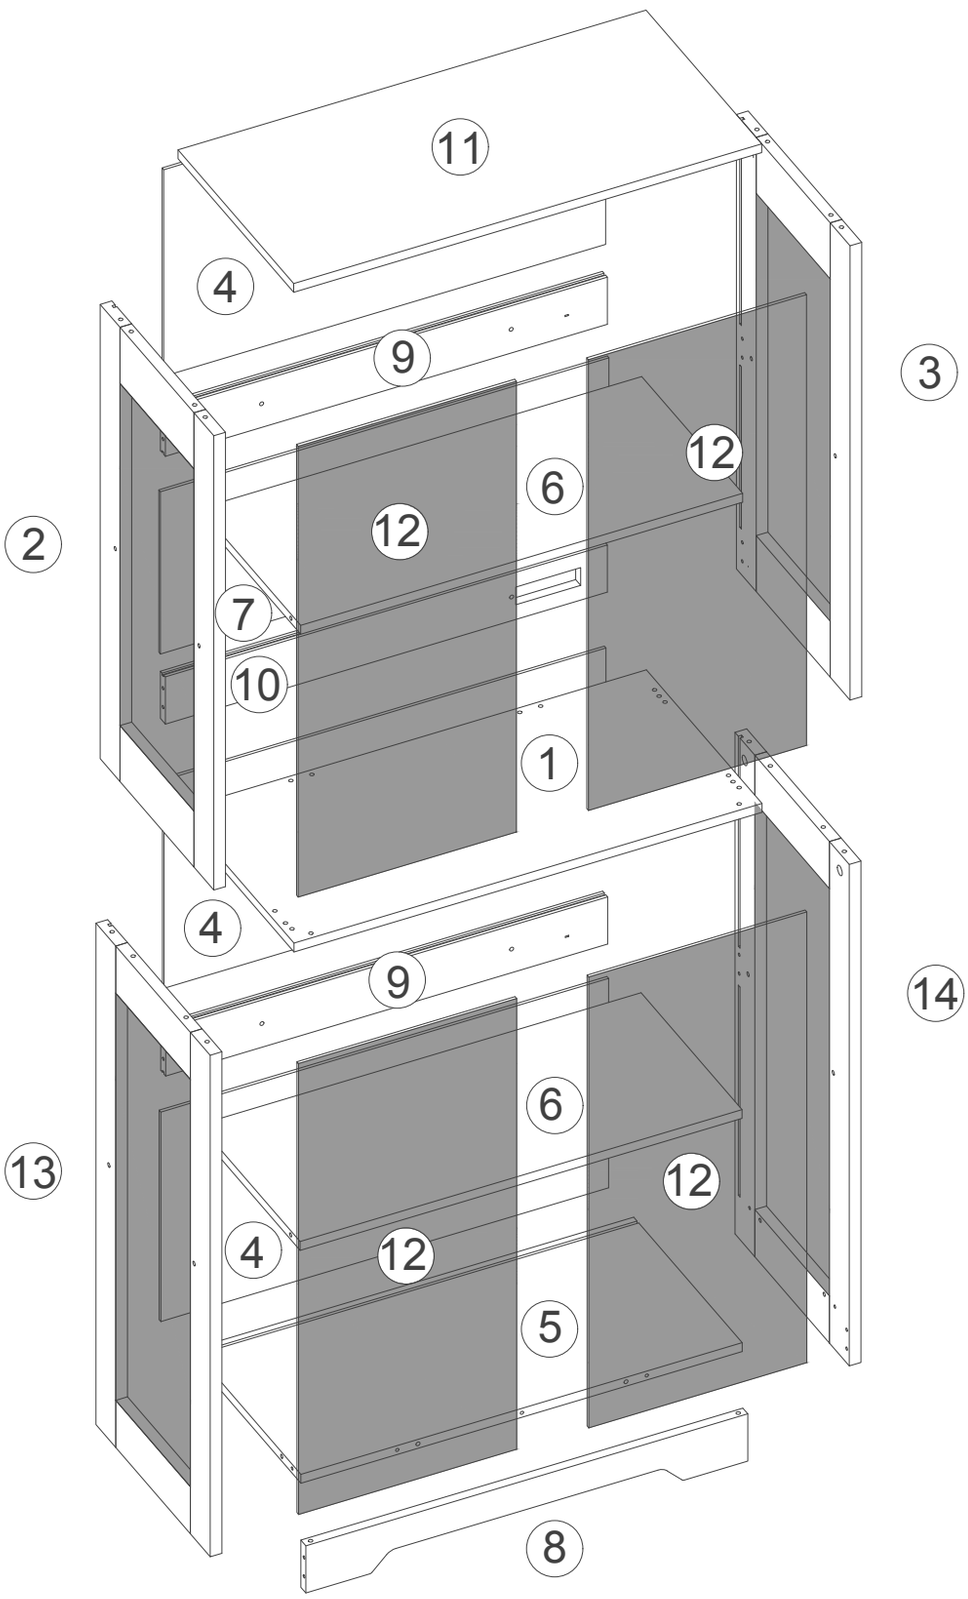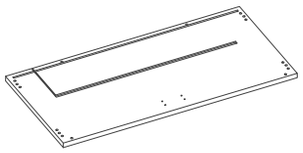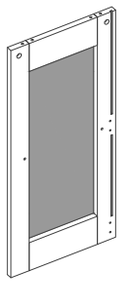
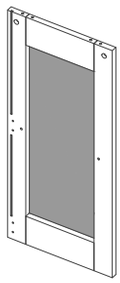
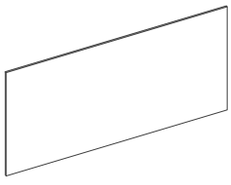
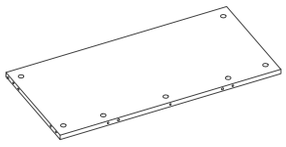
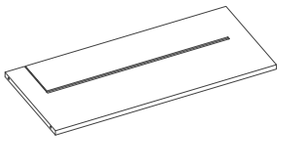
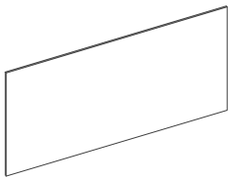
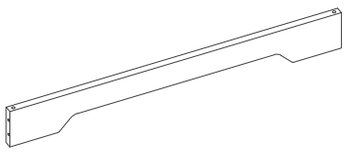
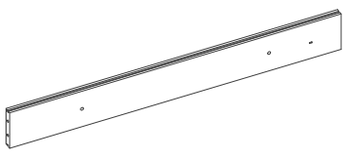
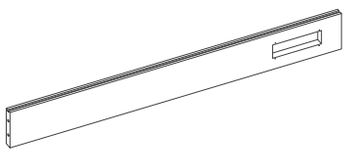
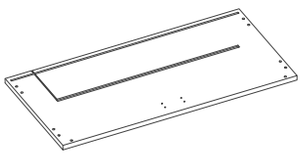
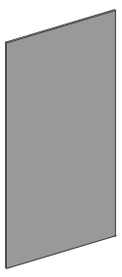





11
4
9
3
12
6
12
2
7
10
1
4
9
14
6
13
12
4
12
5
8


Parts List

1 x1 	2 x1 	3 x1 
4 x3  690*355*4MM	5 x1 	6 x2 
7 x1  690*275*4MM	8 x1 	9 x2 
10 x1 	11 x1 	12 x4 
13 x1 	14 x1 	

Parts List

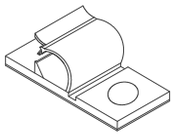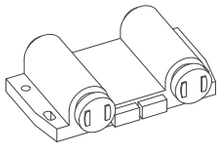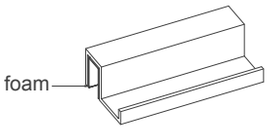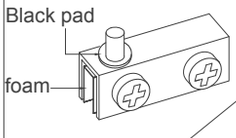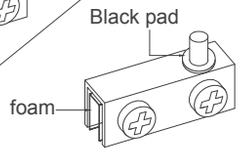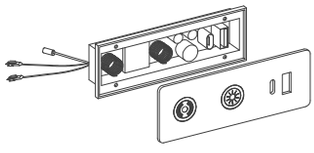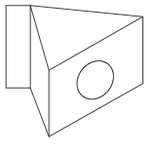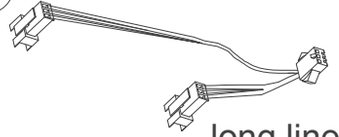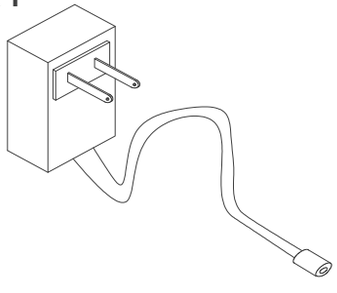A x25+4  M6*35=29PCS	B x25+4  Ø15*11=29PCS	C x1 
D x20+3  M7*38=23PCS	E x25+4  M6*30=29PCS	F x36+6  M3*16=42PCS
G x2 	H x4  	I x2   R x2
J x1 	K x12+2 	L x18+4 
M x2  x2  x2  x2  x2 (4x45mm) (3.5x14mm)	N  long line x1  short-term x1	O x1 


Step1

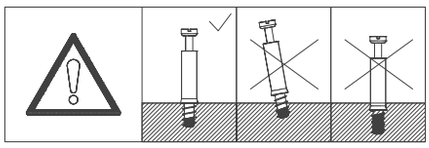

Ⓐ x12



M6*35

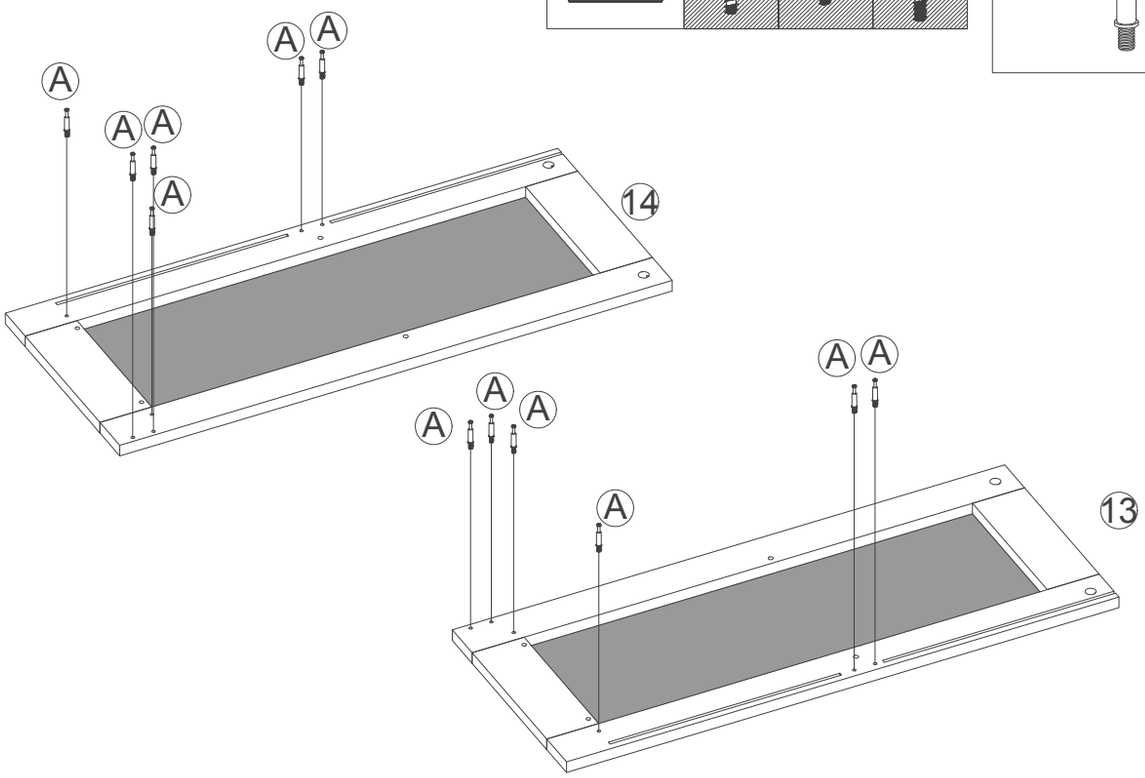

Step2

Ⓓ x4




M7*38

Ⓔ x4





M6*30

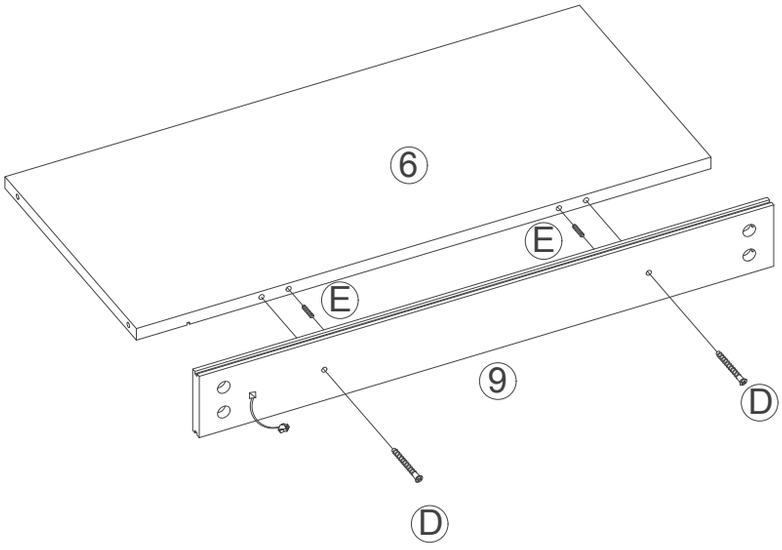


x2

Step3

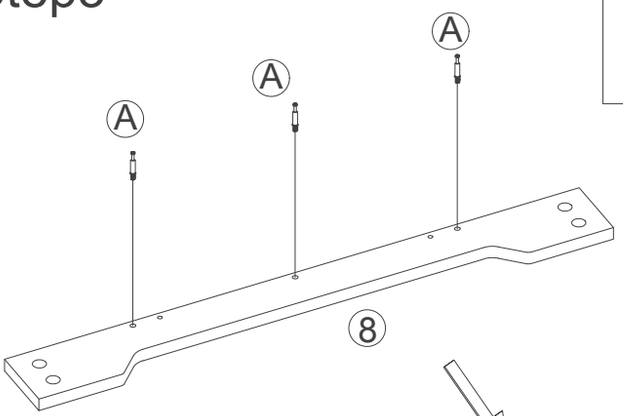

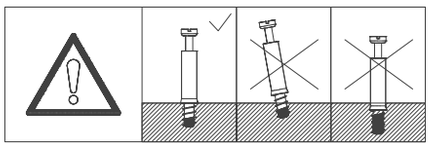

A x3



M6*35

B x3




Ø15*11

E x6



M6*30

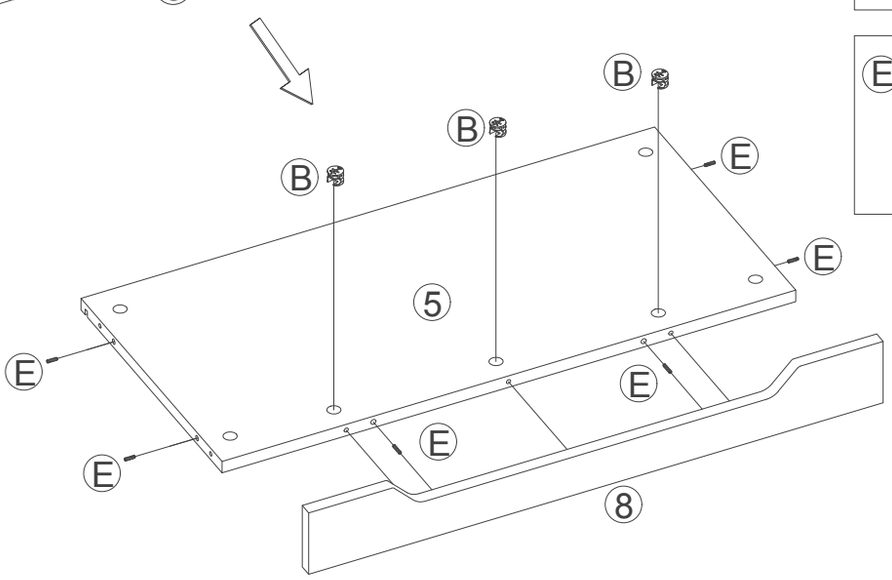

Step4

B x6





Ø15*11

D x2




M7*38

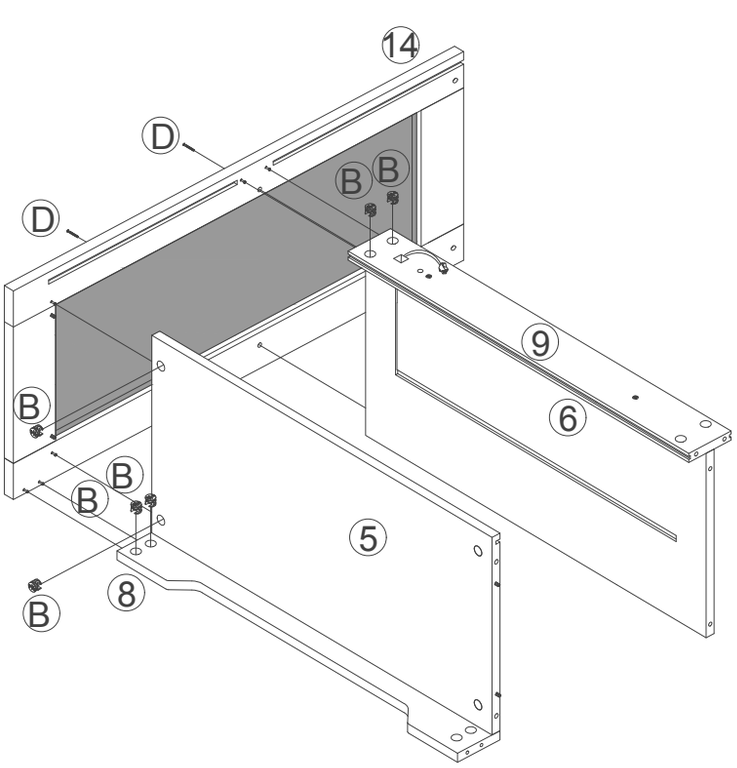


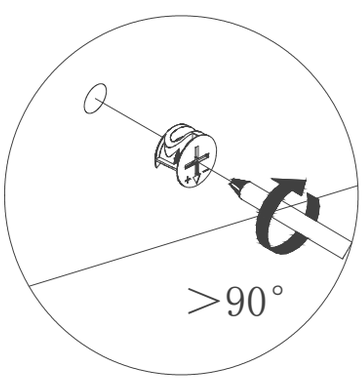

Step5

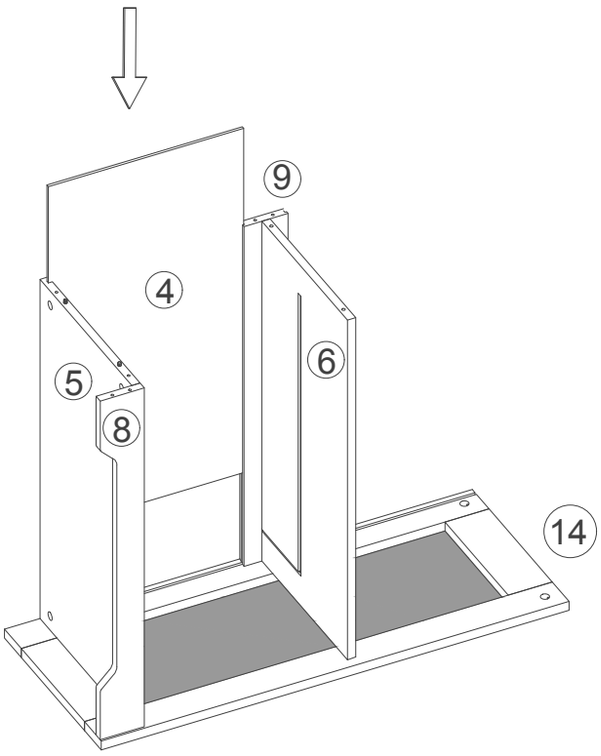

Step6

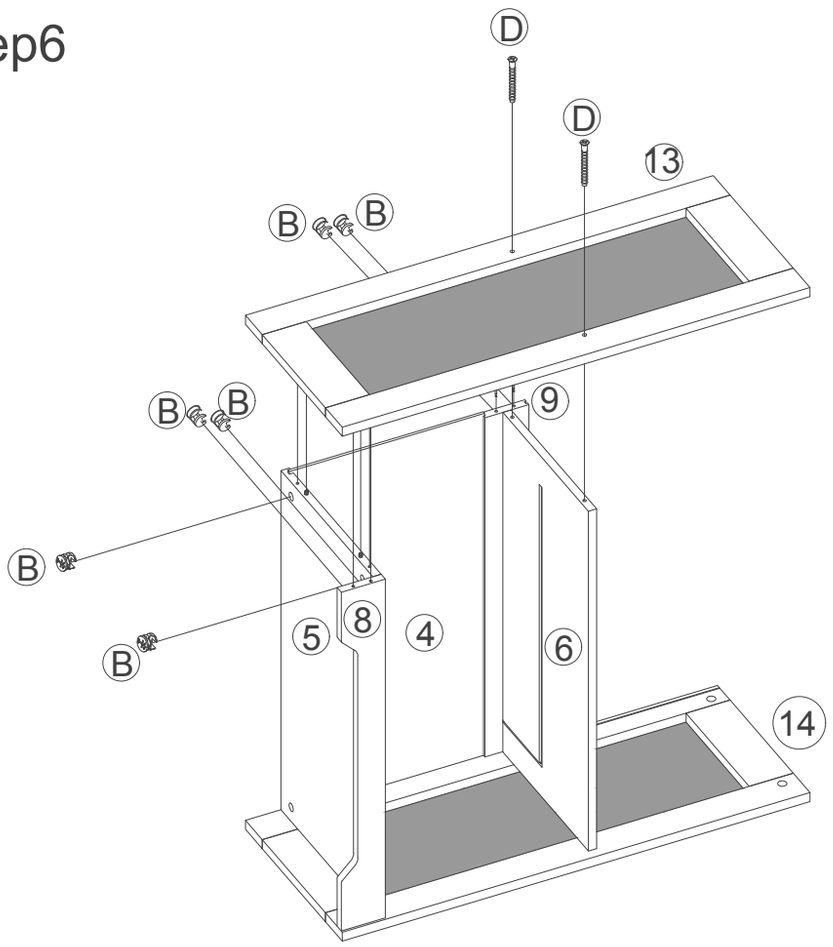

B x6




Ø15*11

D x2



M7*38

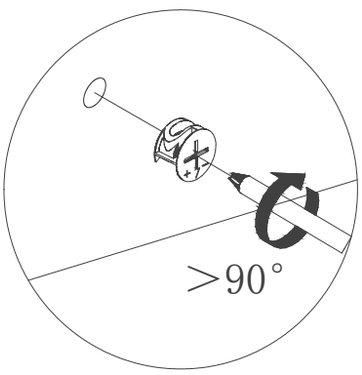


Step7


Ⓔ x4



M6*30

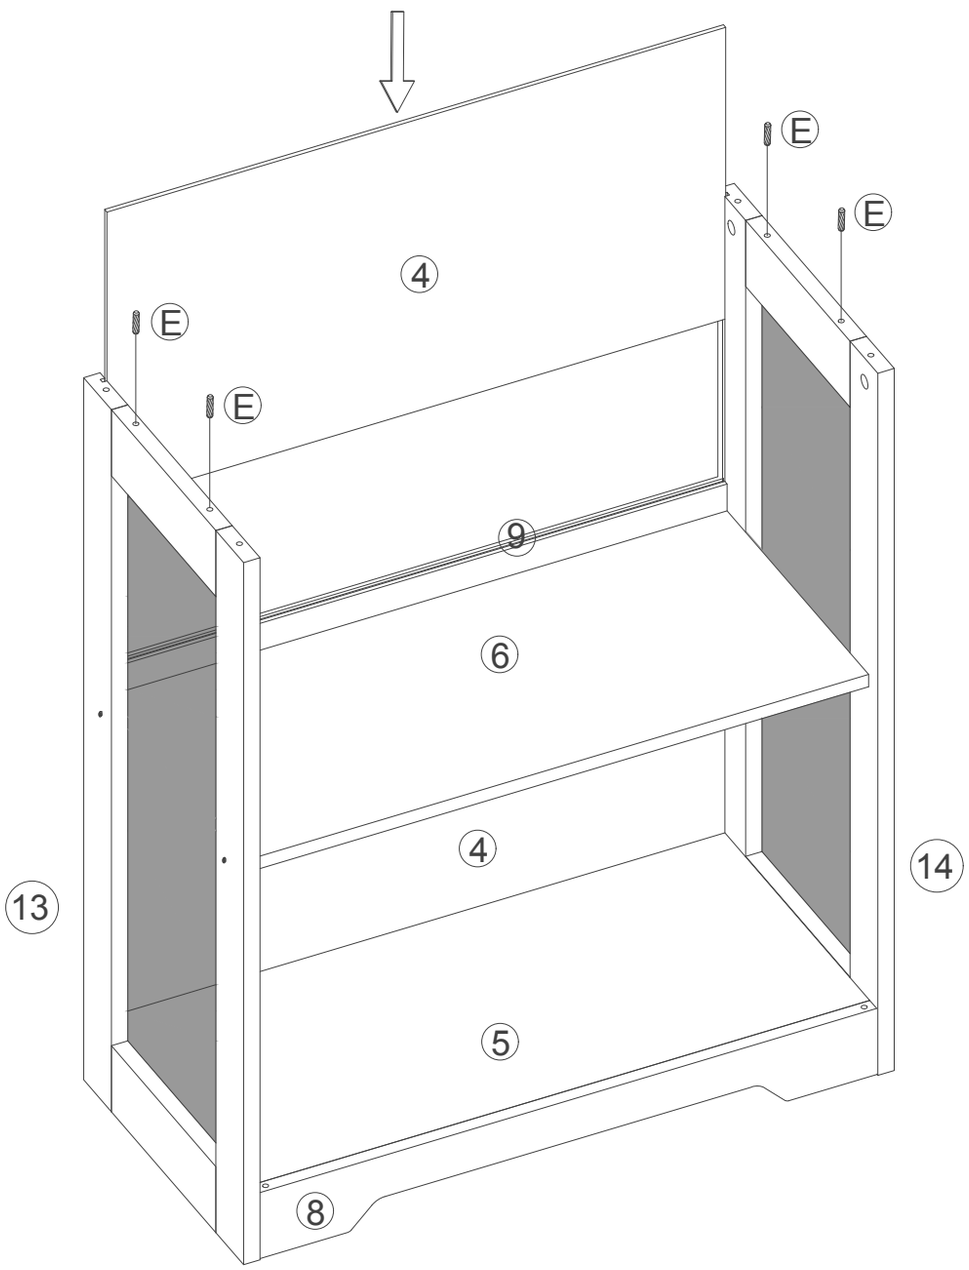


Step8

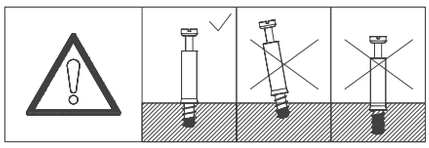


Ⓐ x8



M6*35

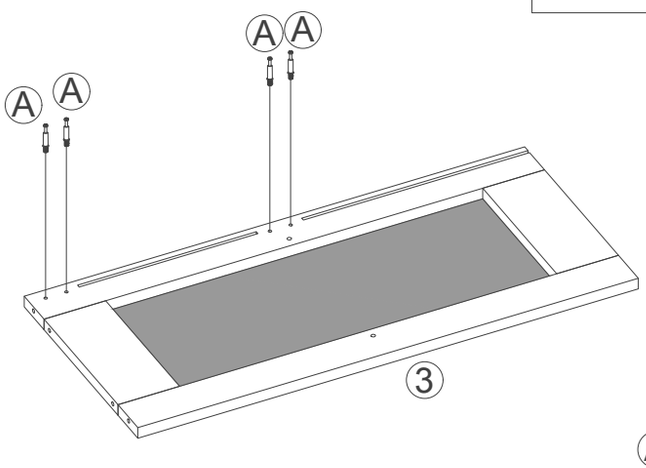

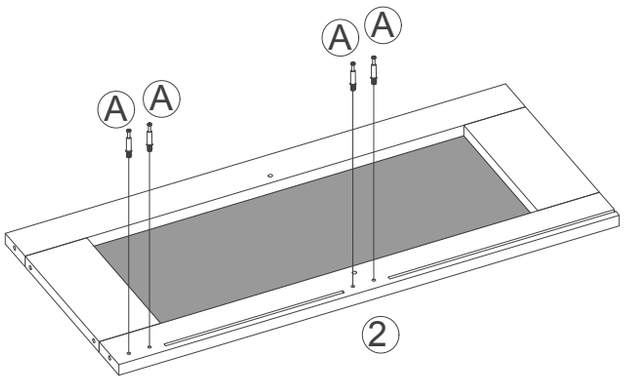


Step9

Ⓑ x4





Ø15*11

Ⓓ x2




M7*38

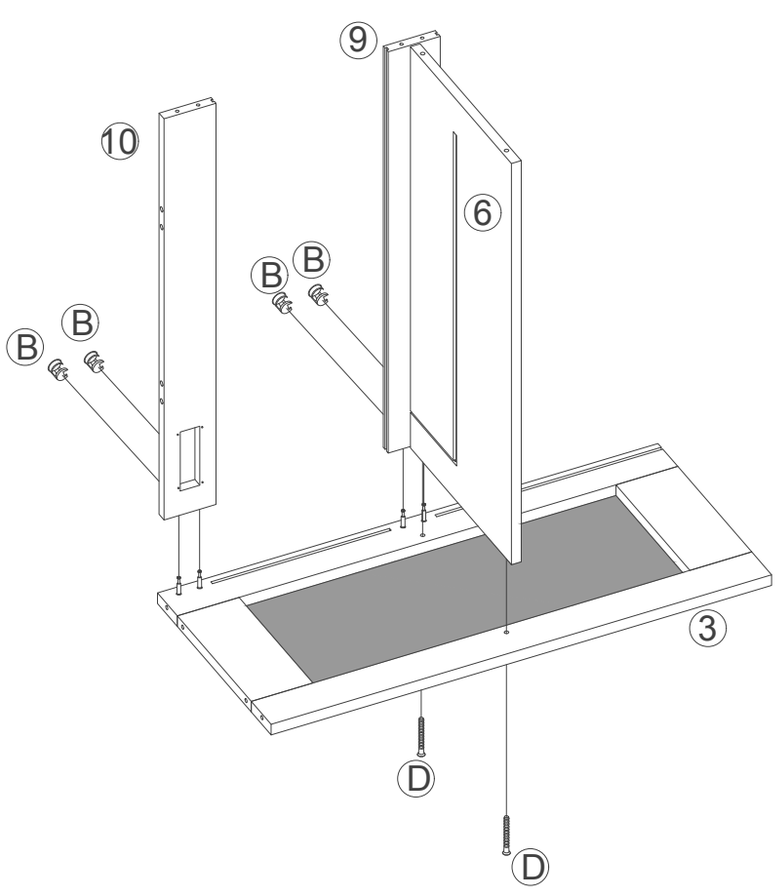


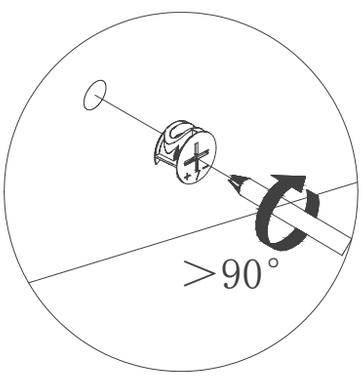

Step10

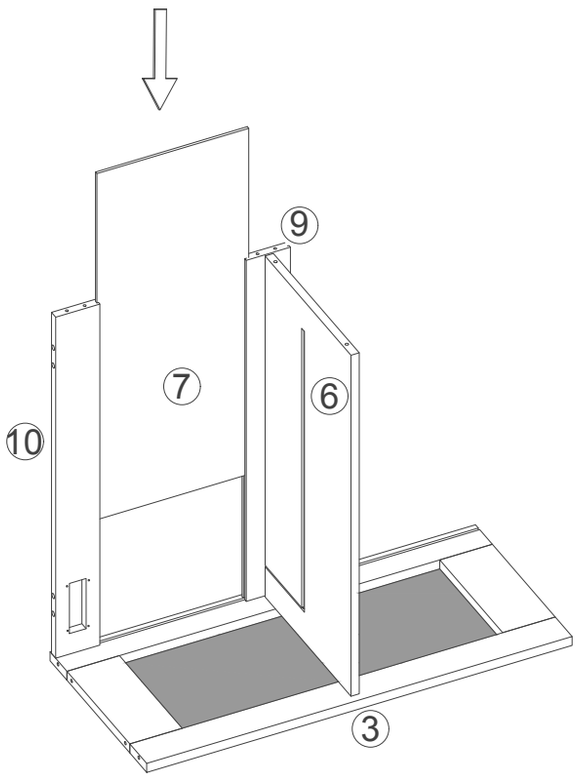

Step11

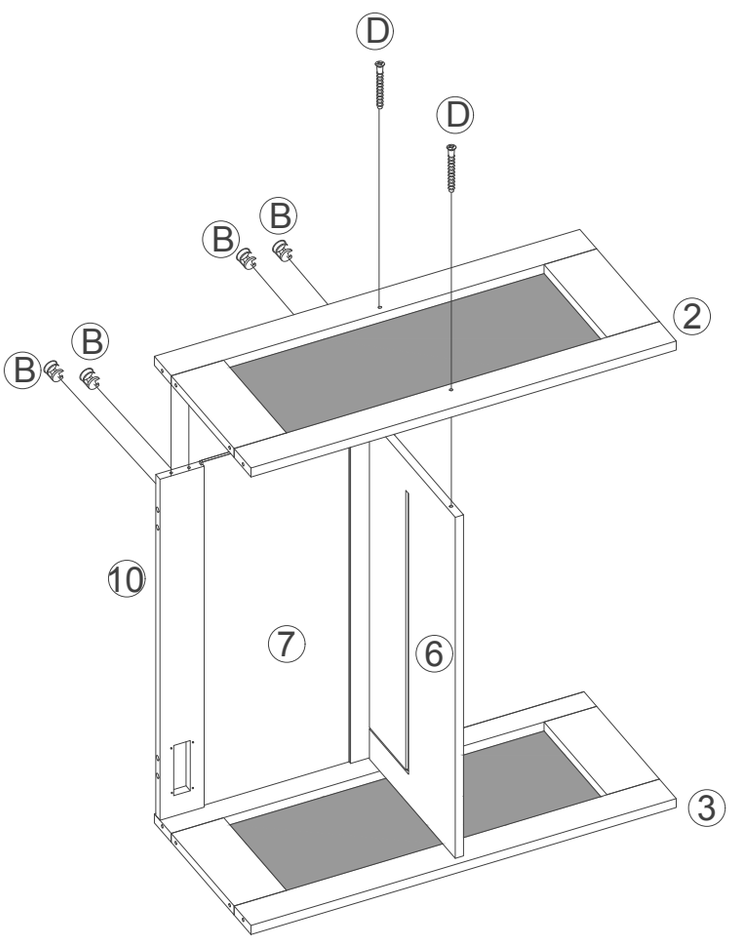

B x4




Ø15*11

D x2



M7*38

Step12

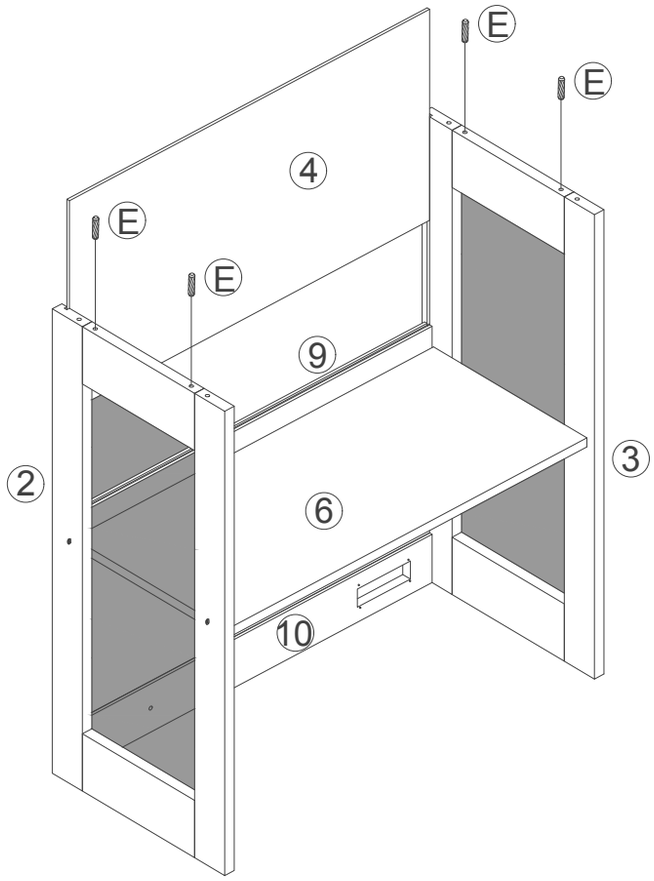

E x4



M6*30


Step13


F x4




M3*16


G x1



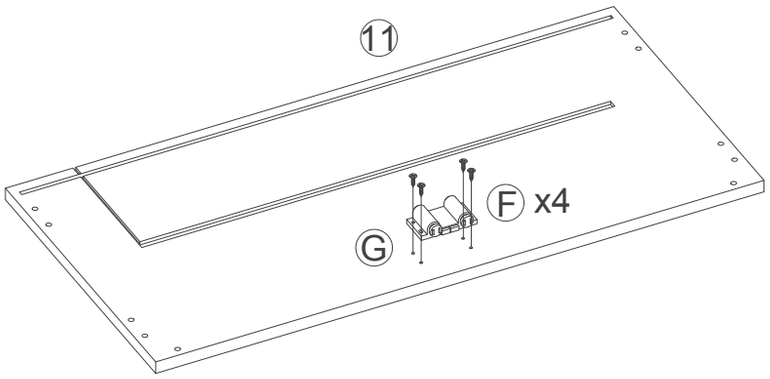



Step14

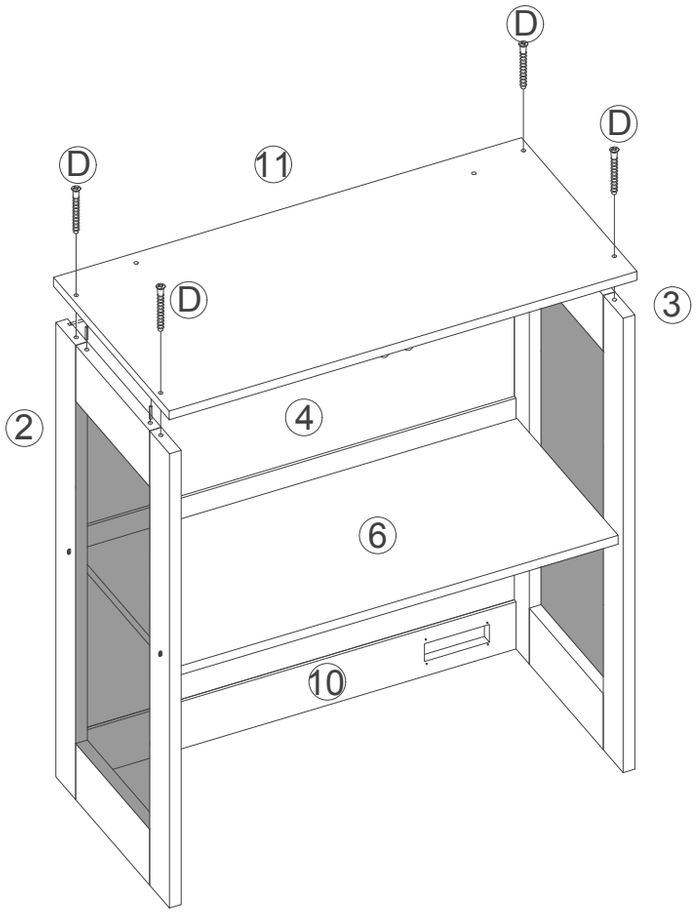


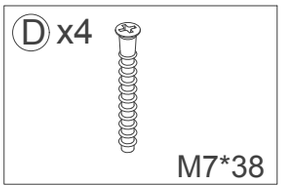



Step15

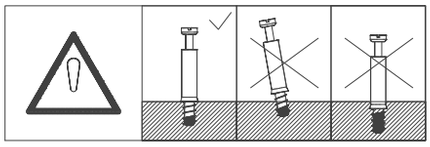


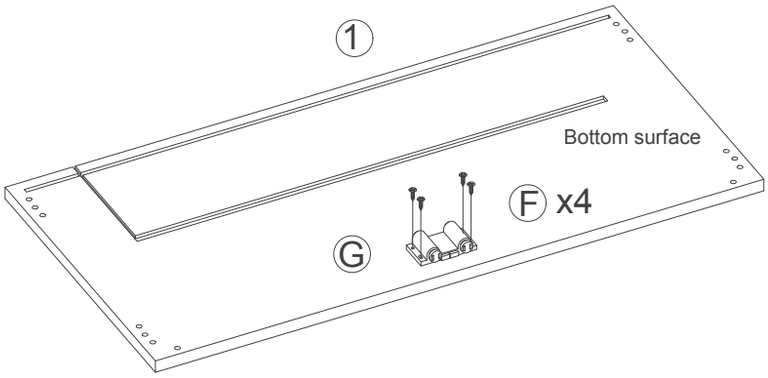

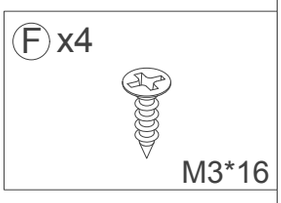


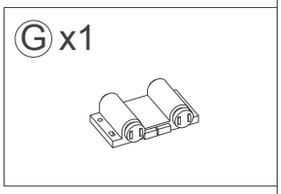


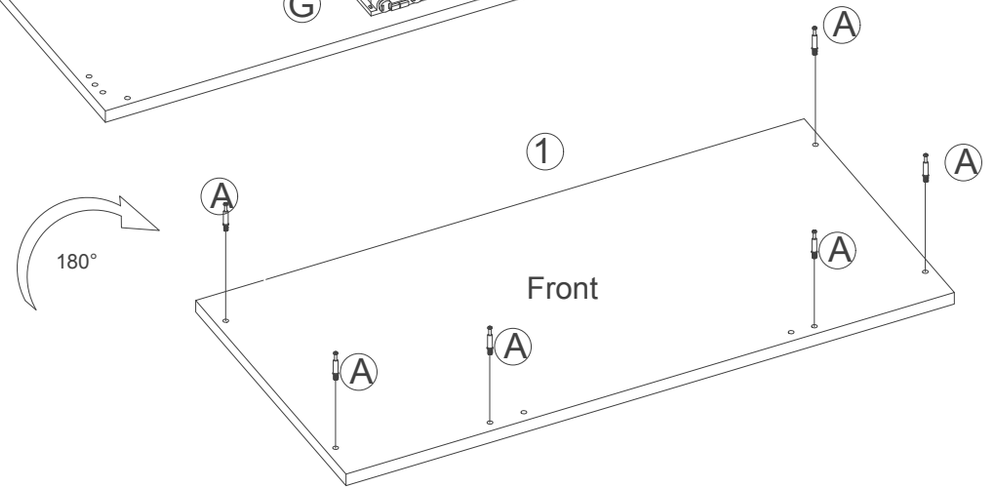

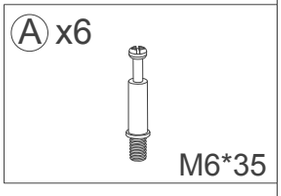



Step16

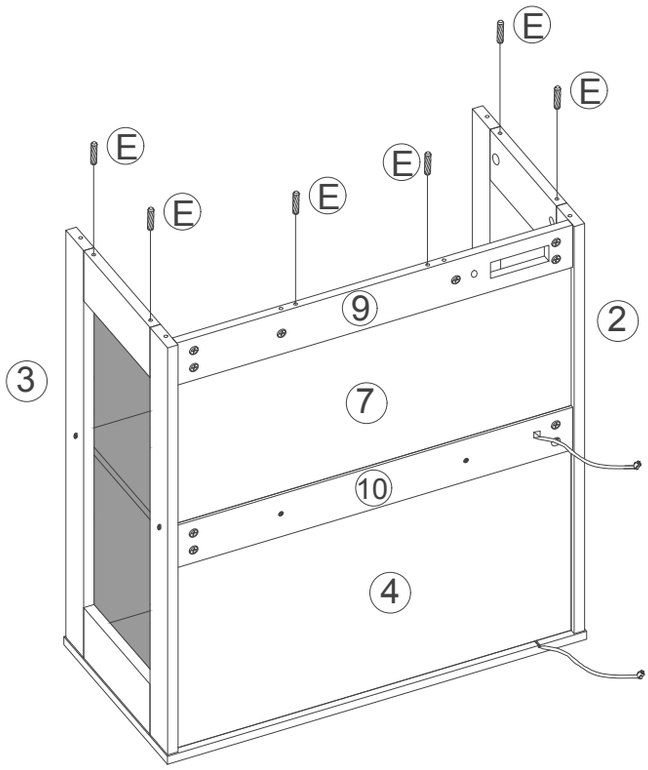


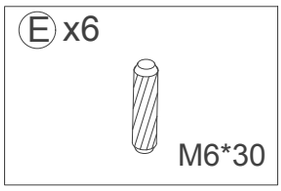


Step17

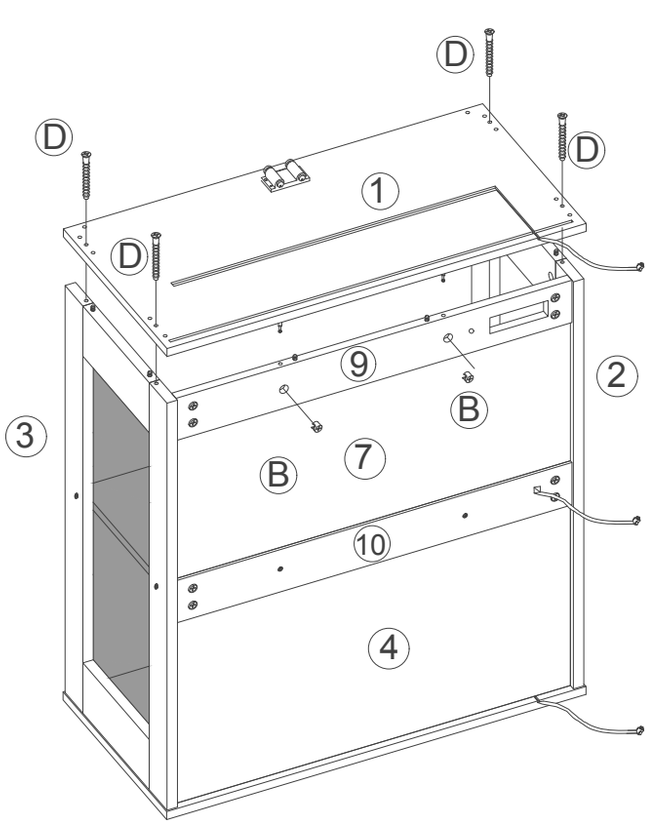


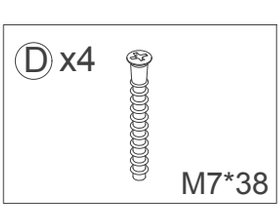


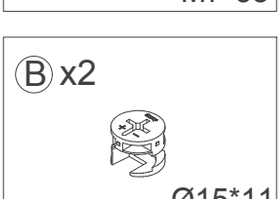


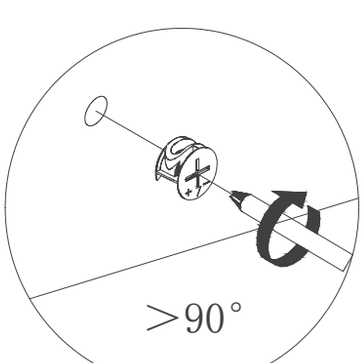


Step18

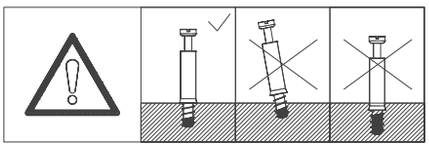


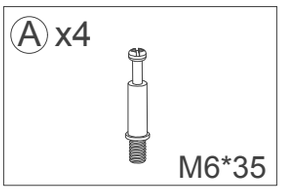

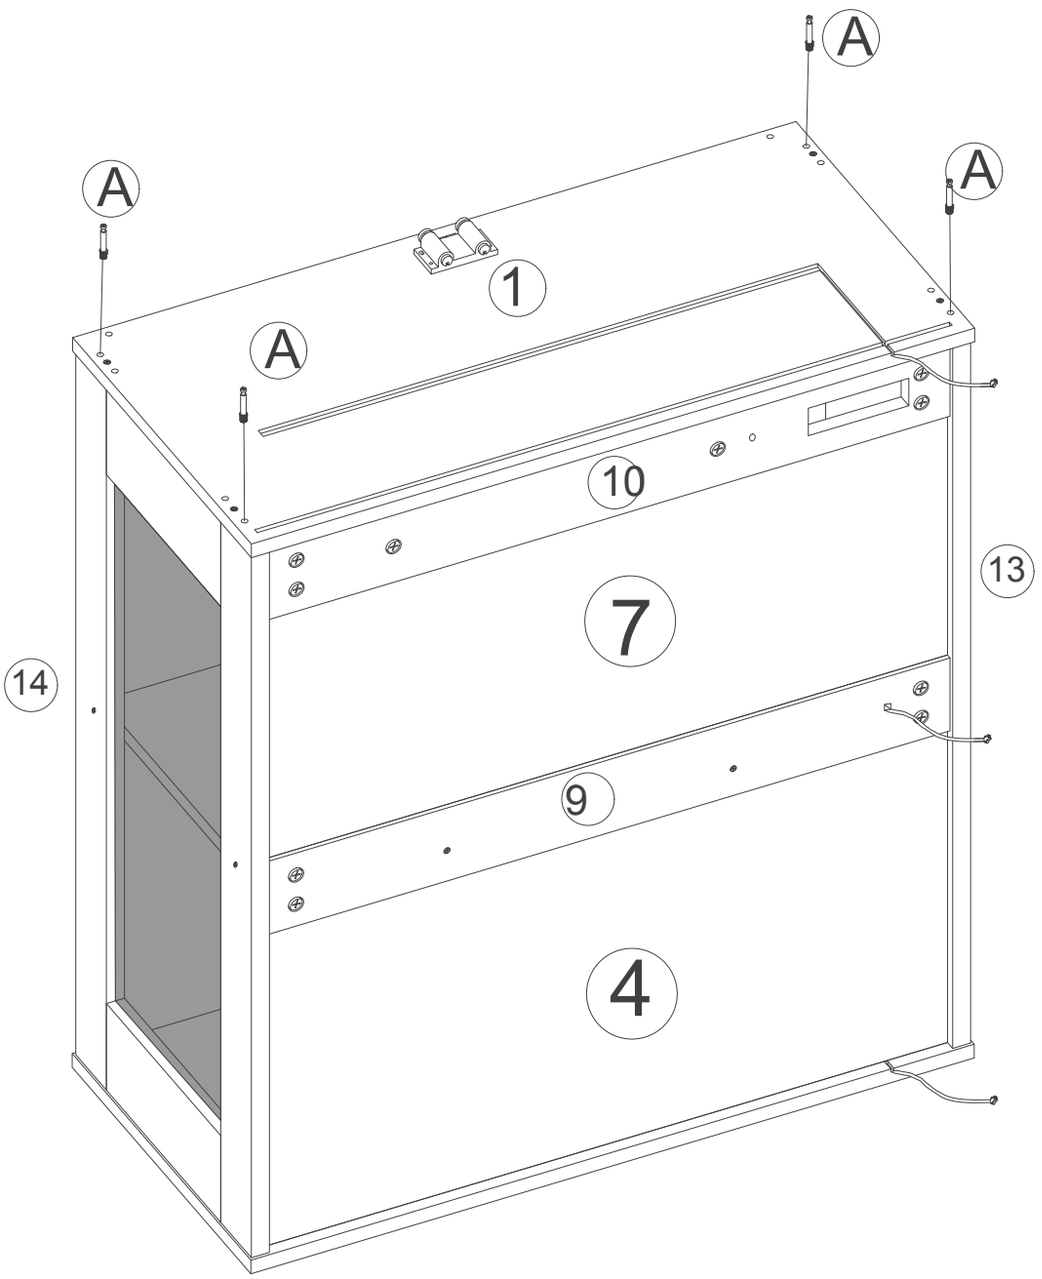

Step19

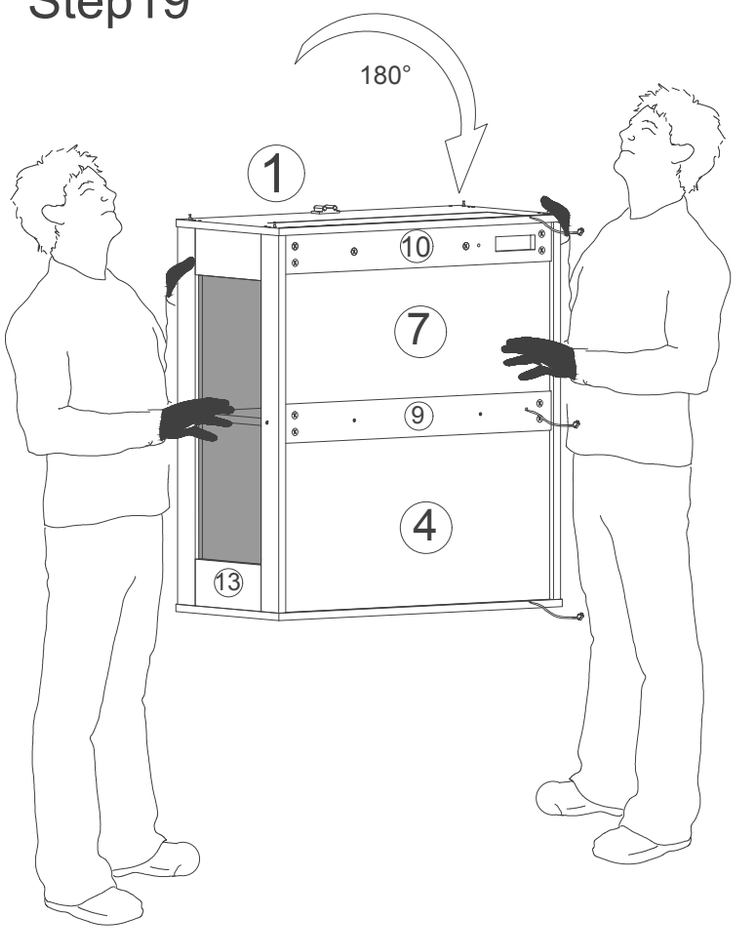

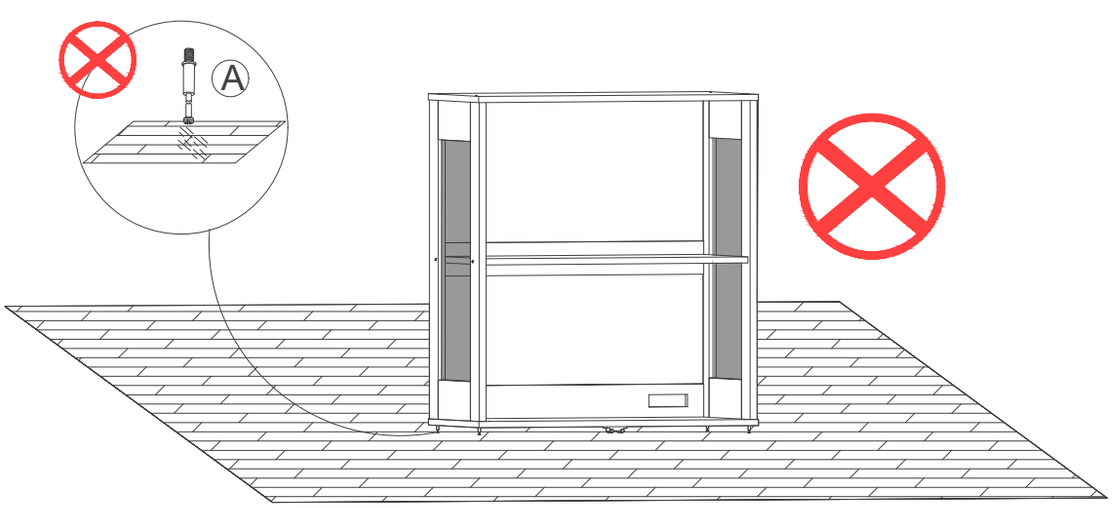


Note: Do not place the cabinet on the ground to prevent damage to the A accessories and ① board, as well as scratching the floor

Step20

Ⓑ x4



Ø15*11

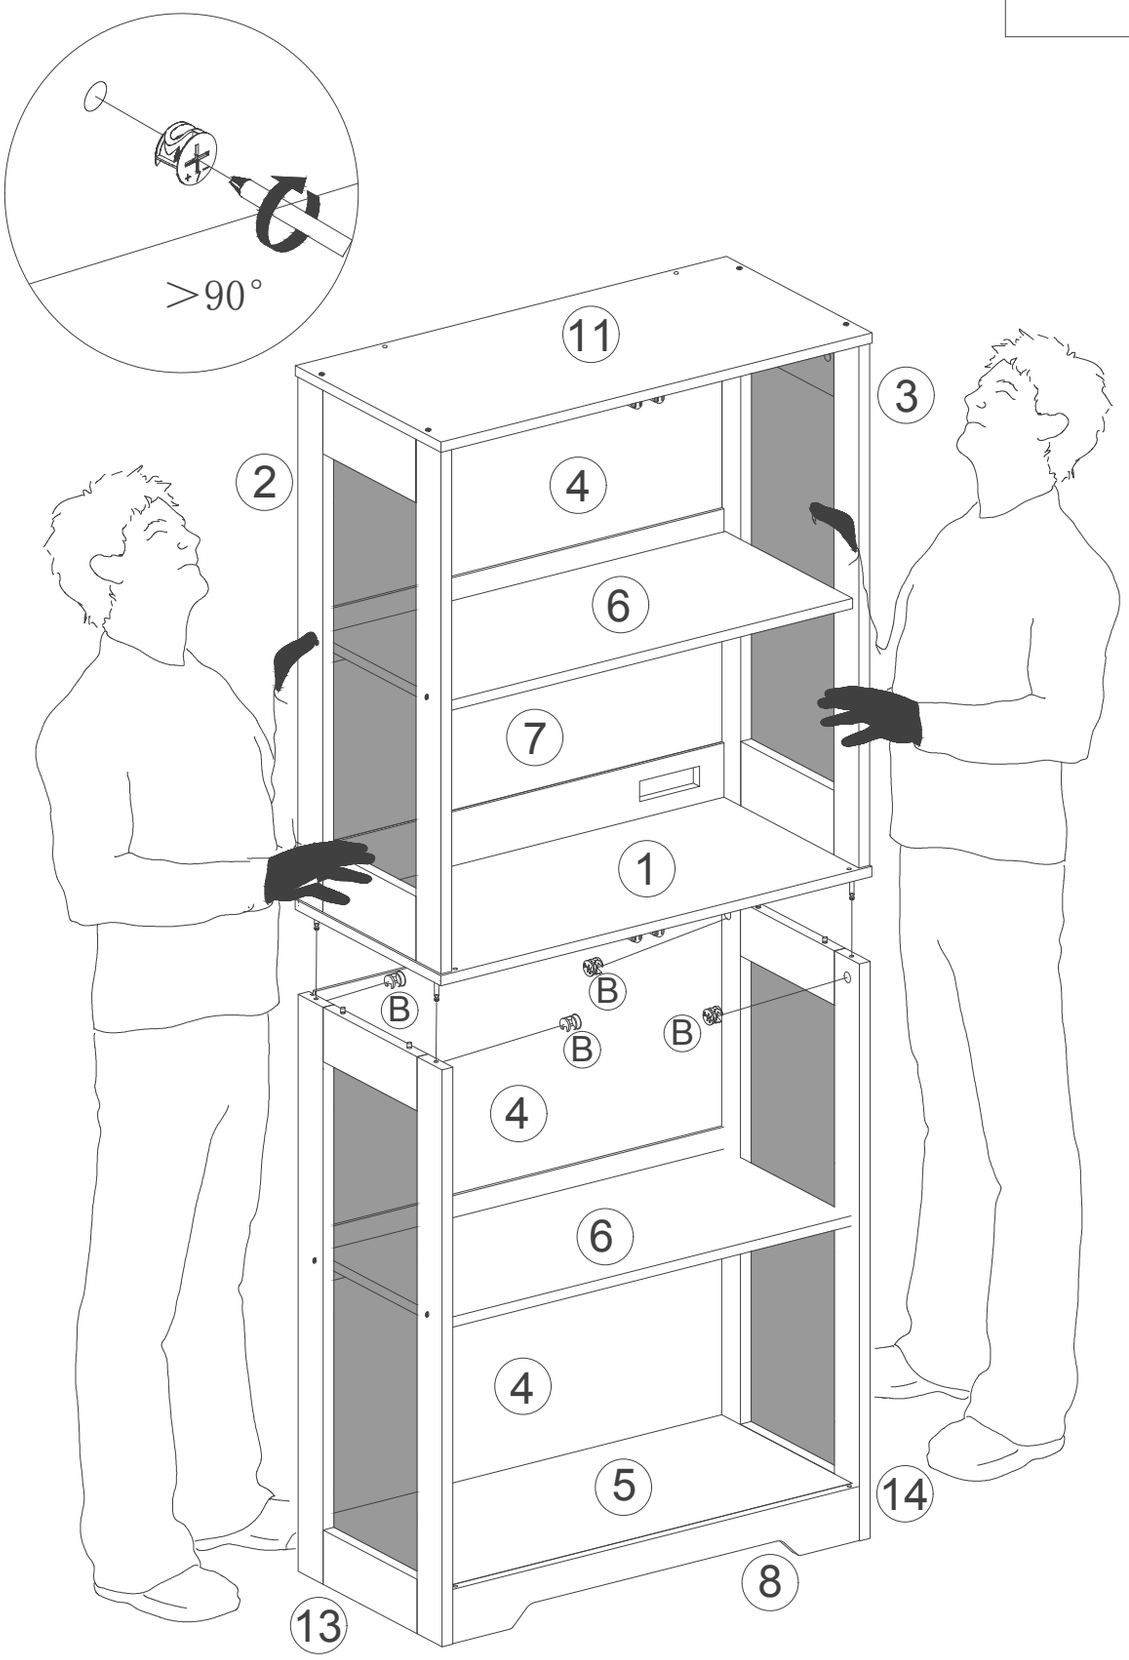


Step 21


Ⓕ x4





M3*16


Ⓙ x1




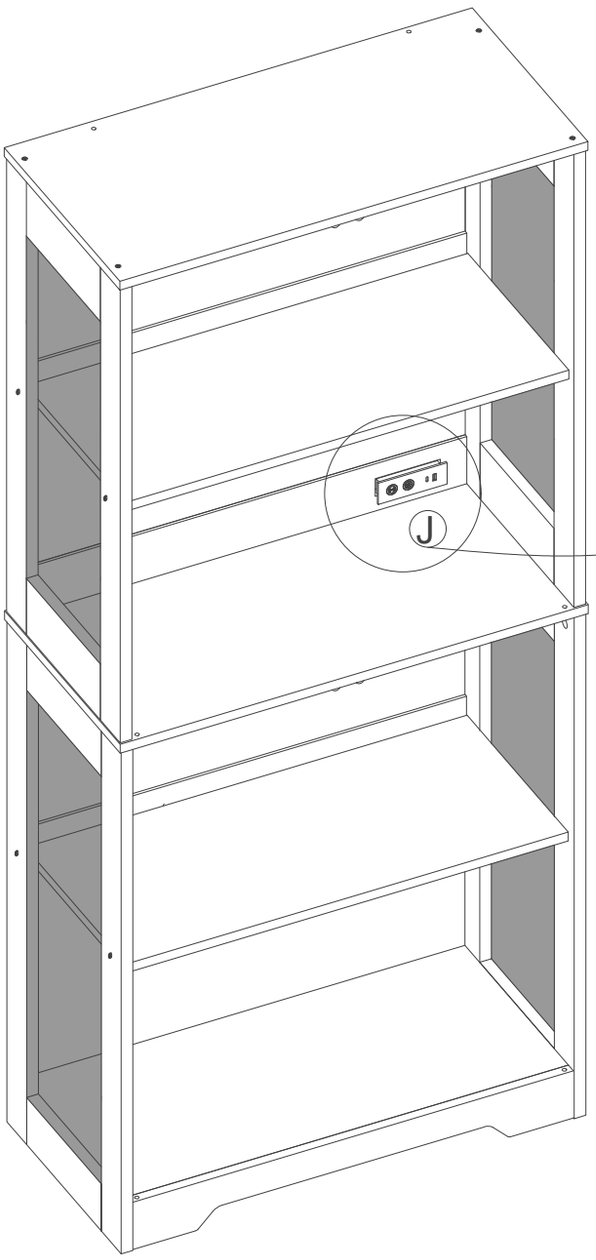

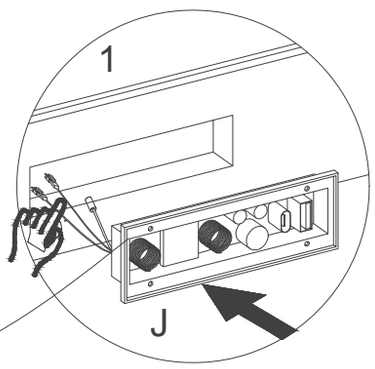


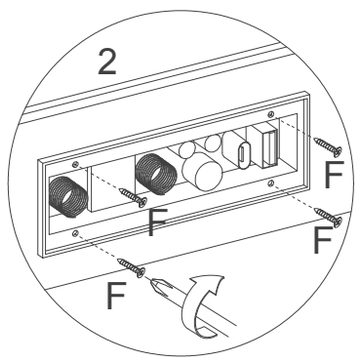


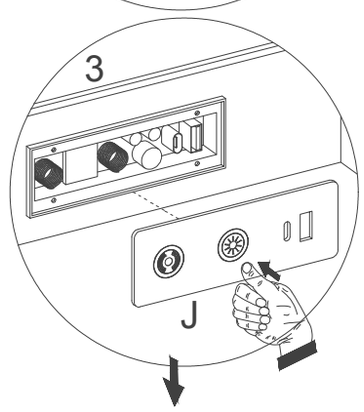


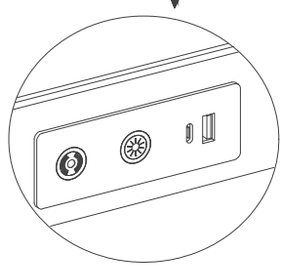

Step22

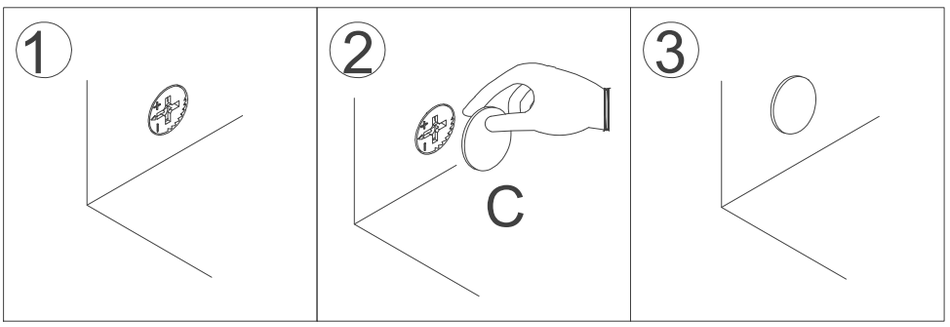

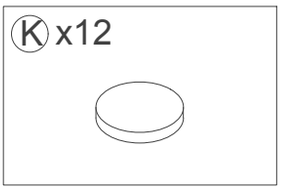

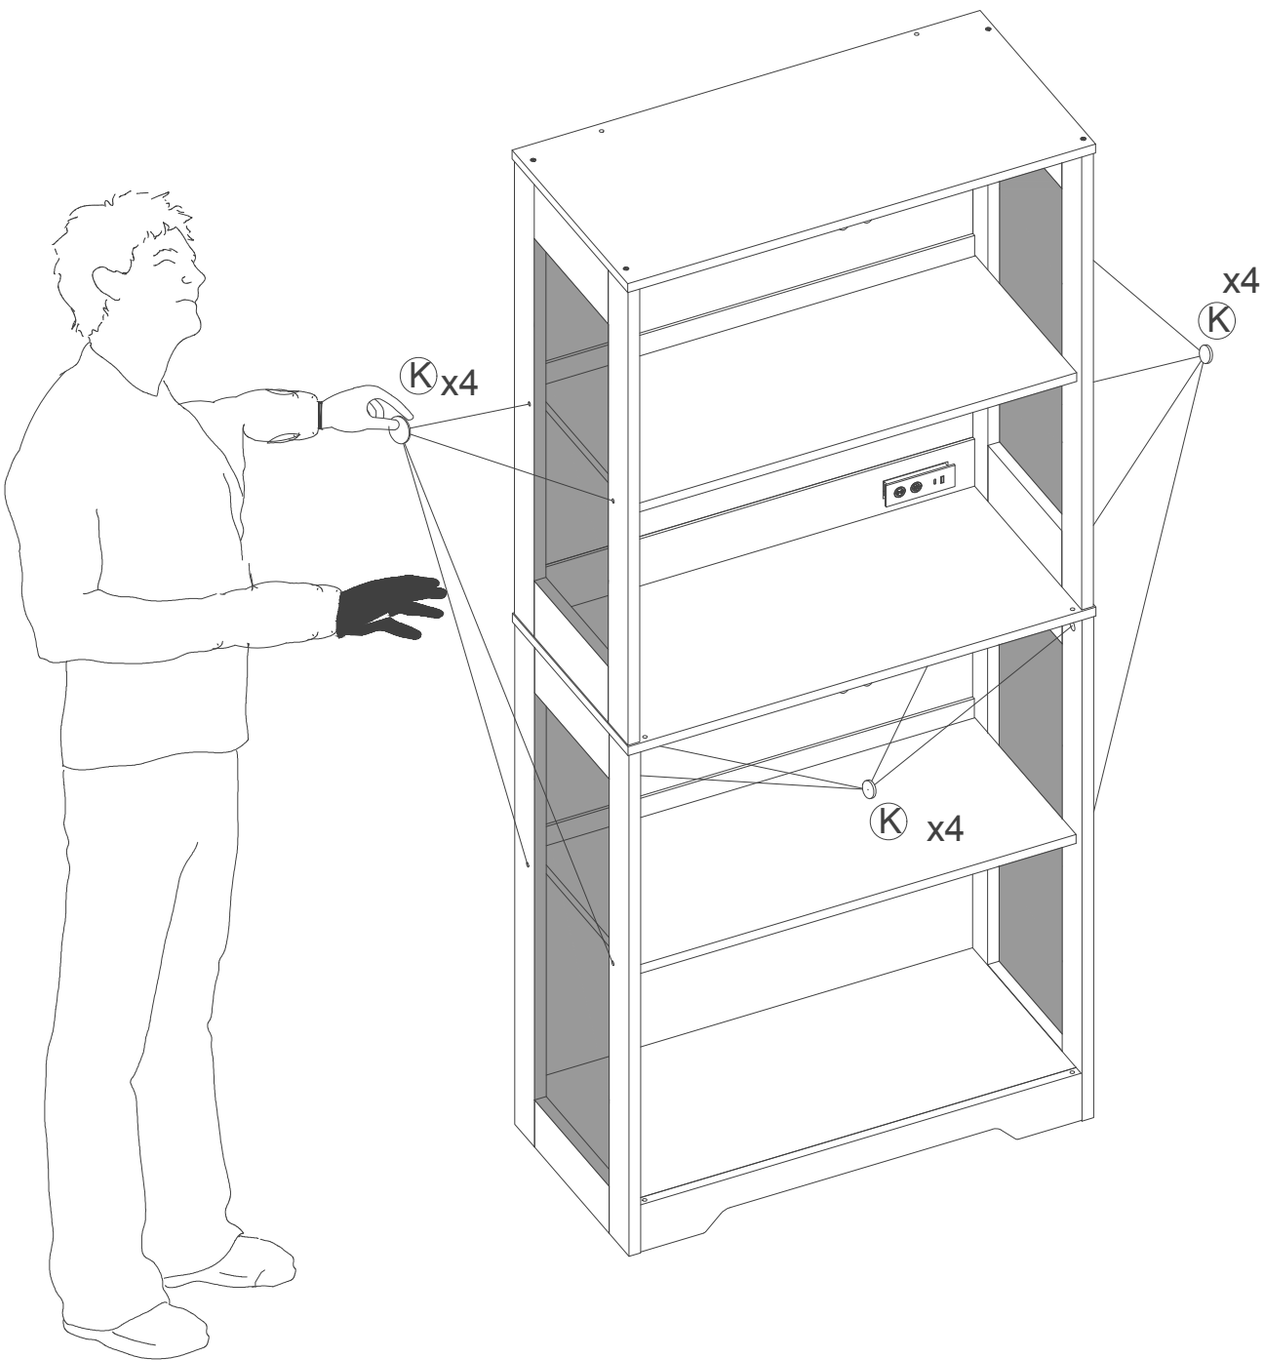


Step23

Use accessory M to secure
the anti-slip component to the 11th board.

Ⓜx2

x2

x2
(3.5x14mm)

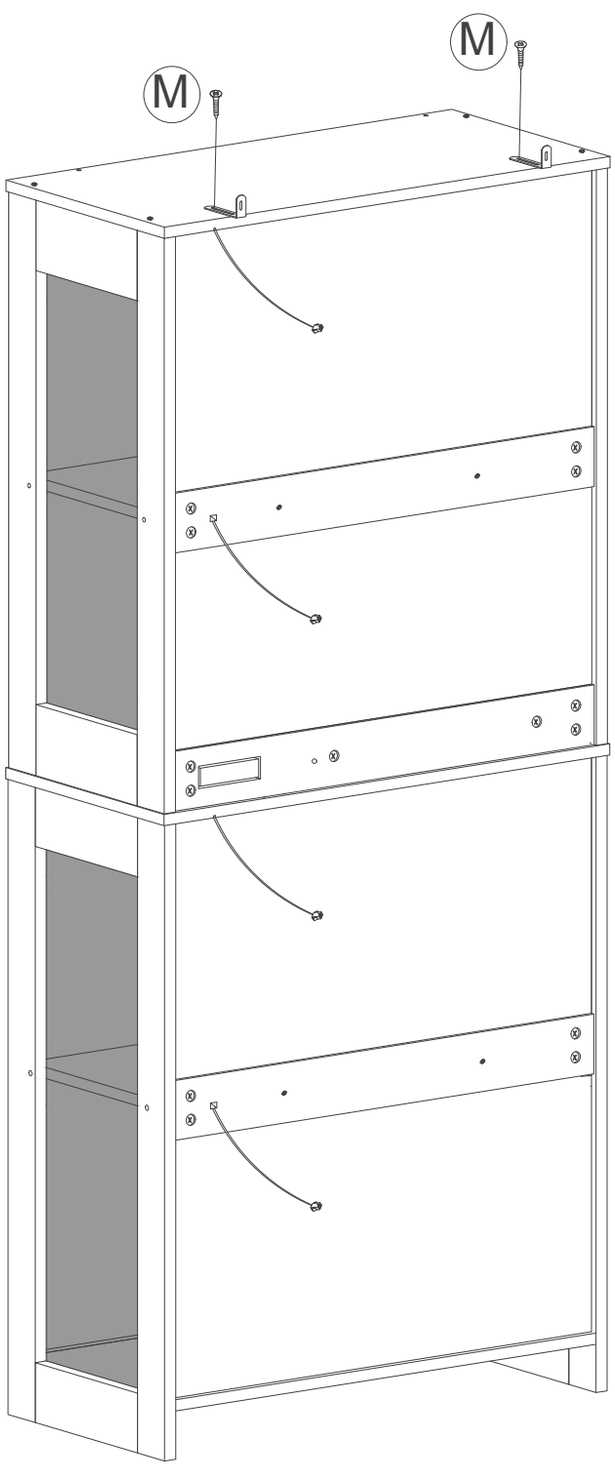

Step24


Ⓛ x18




Ⓕ x18+4




M3*16

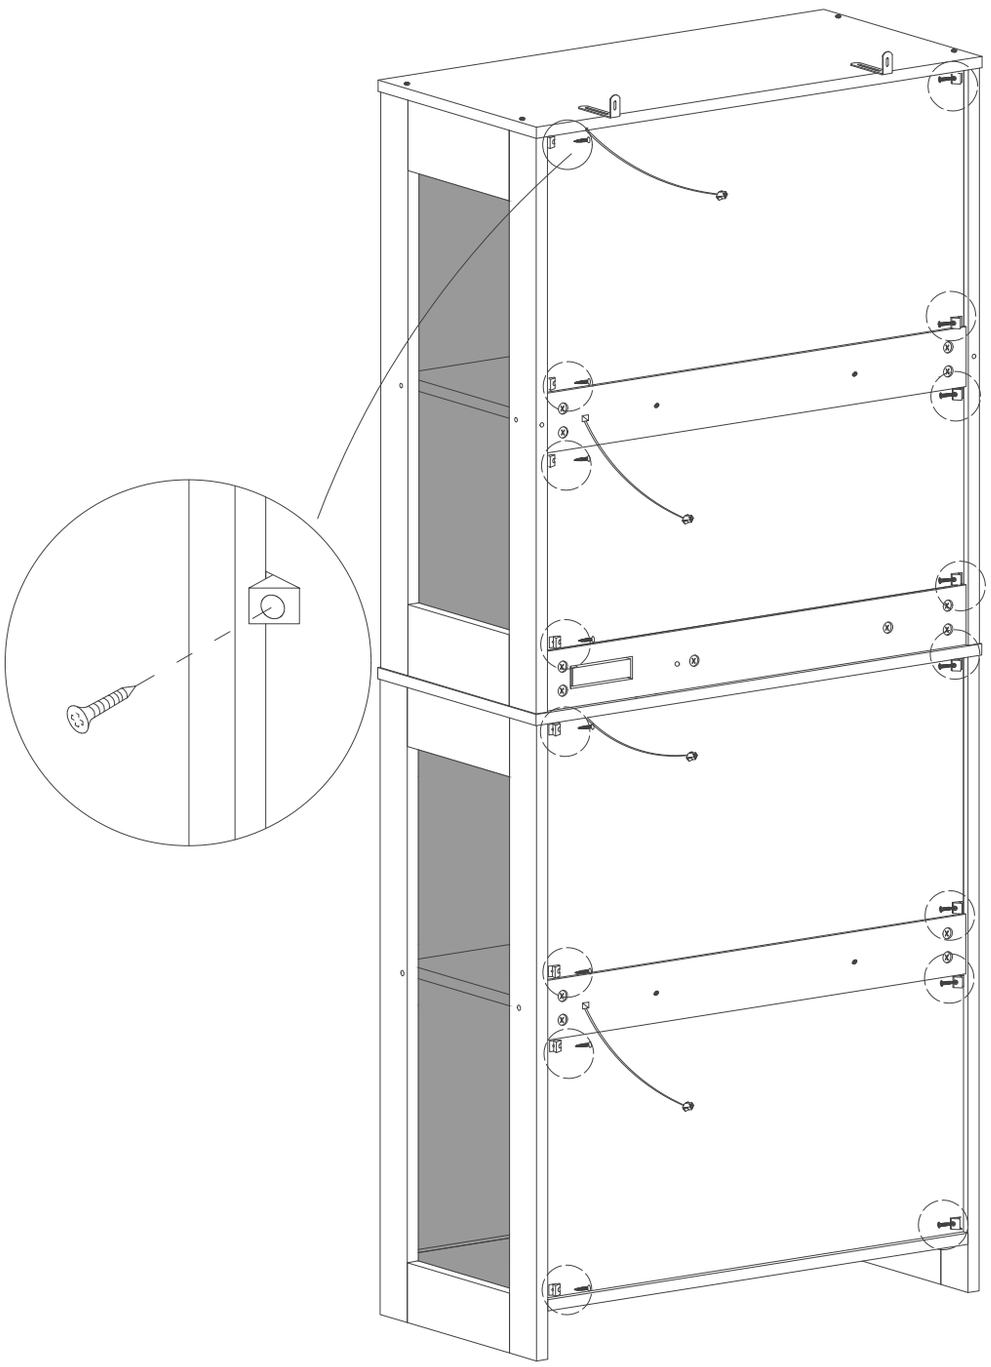

Step25

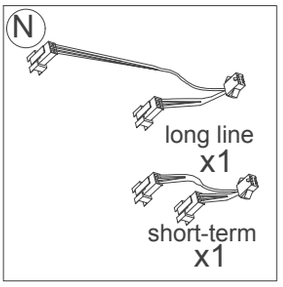
N
long line
x1
short-term
x1

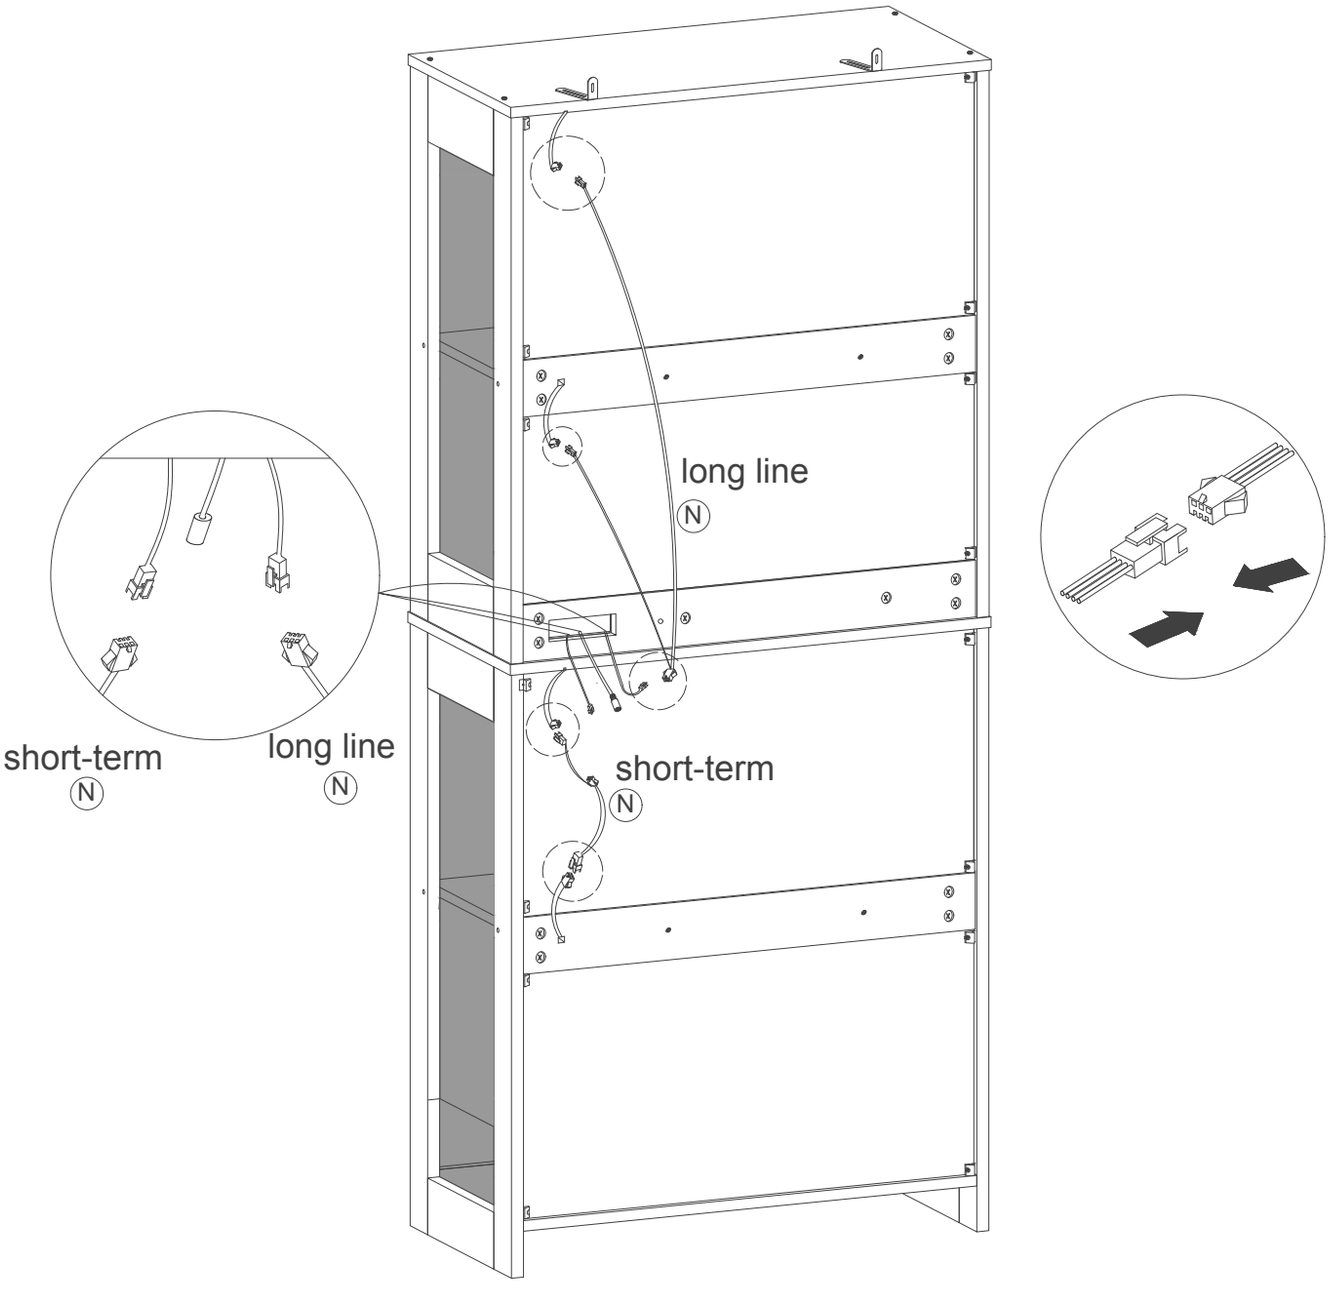
long line
N
short-term
N
short-term
N
long line
N

Step26


Ⓒ x1



Ⓕ x1



M3*16

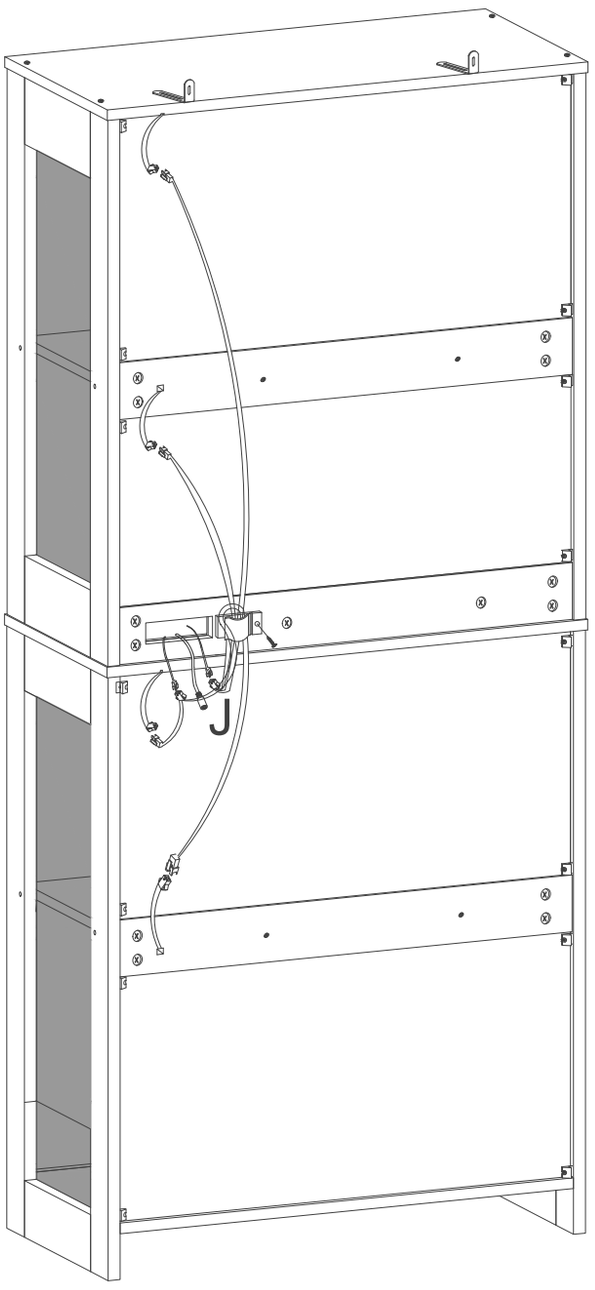


Step27

Ⓜ x2

x2

Droll two holes in the wall at the marked position for installing the anti-tip device.

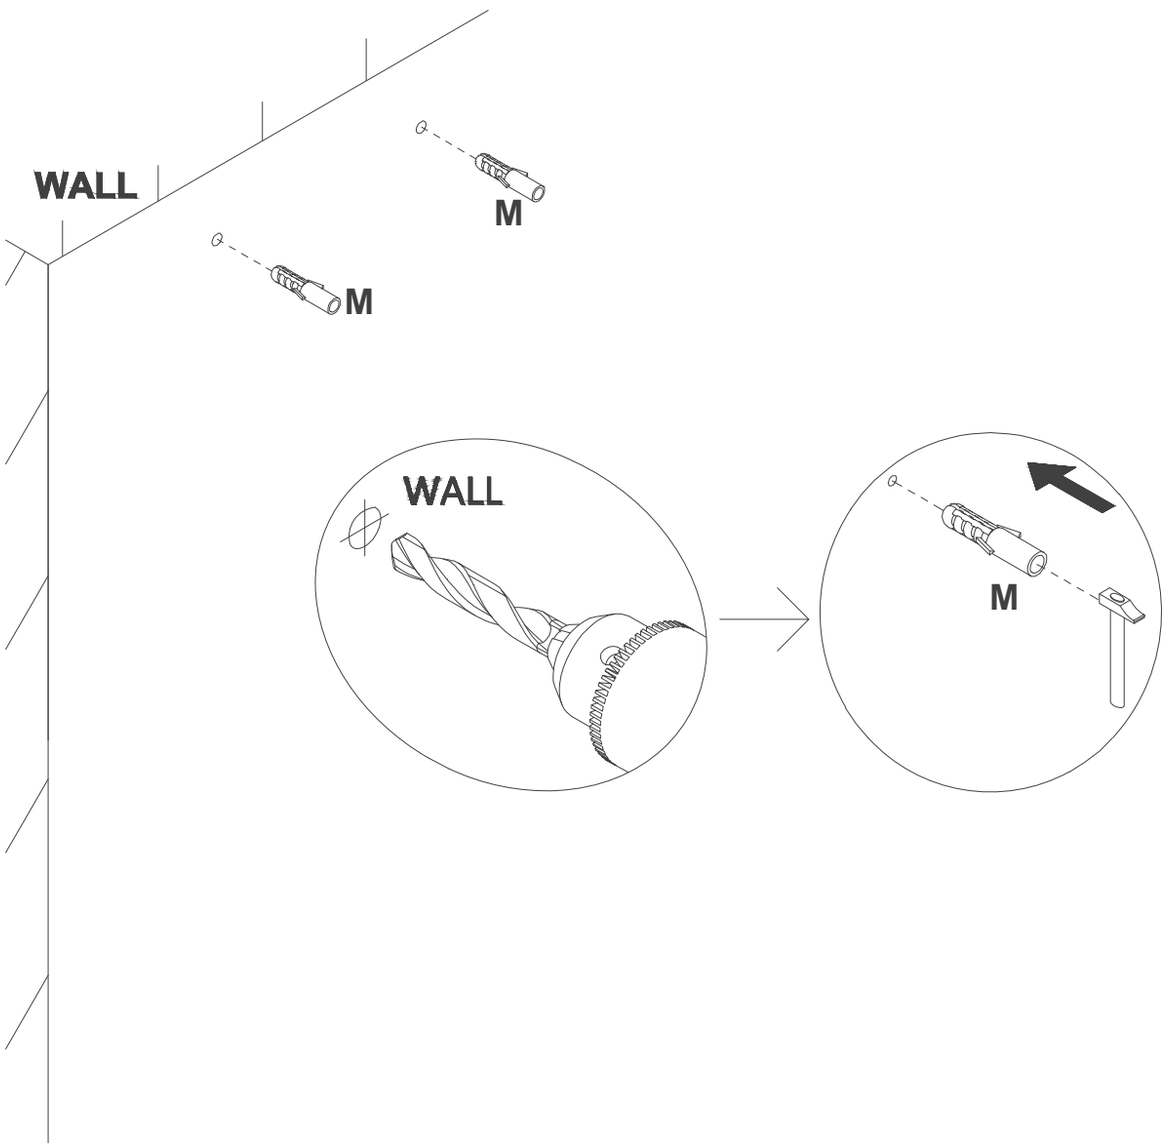


Step28

Ⓜ x2

(4x45mm) x2


Place the dresser in the desired position,
then use screw M to anchor it securely to the wall.


Drill holes into the wall. First, secure the metal fittings to the cabinet. Finally, install the cabinet onto the surface.

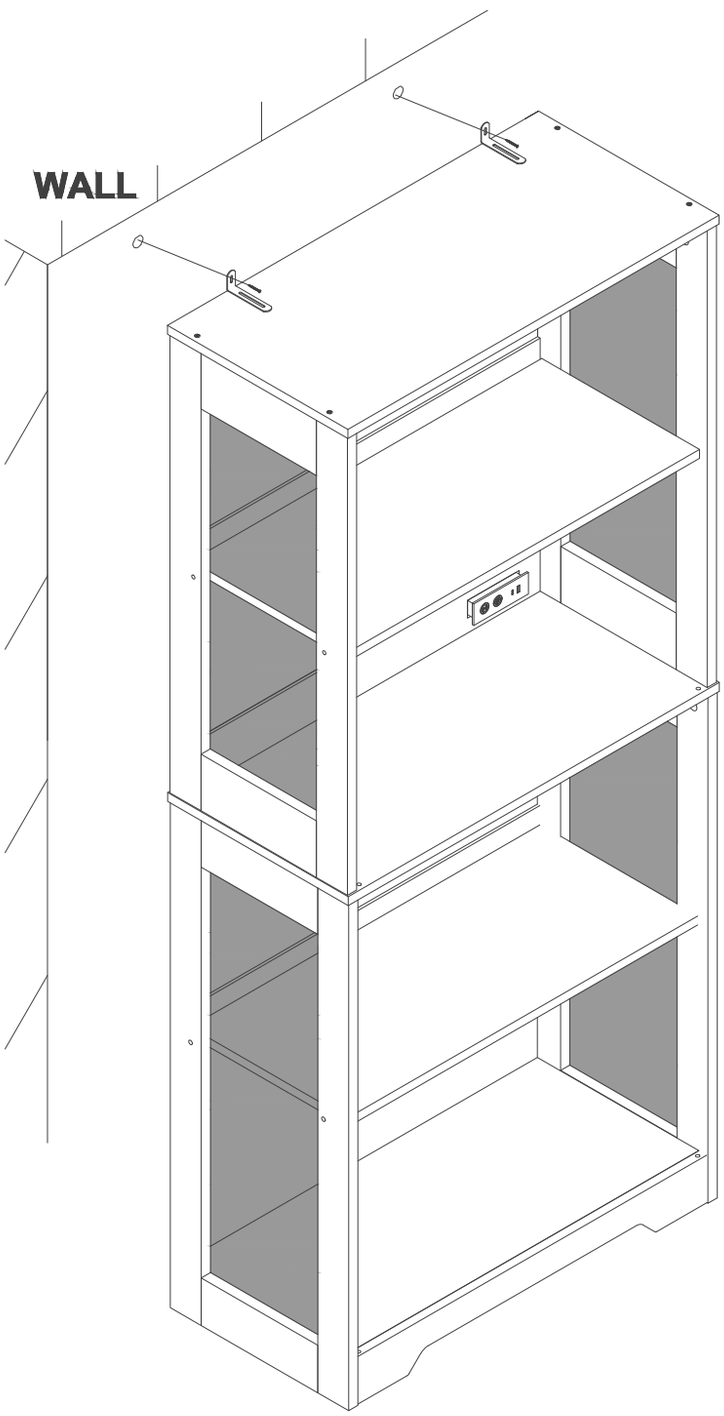

Step29

right side

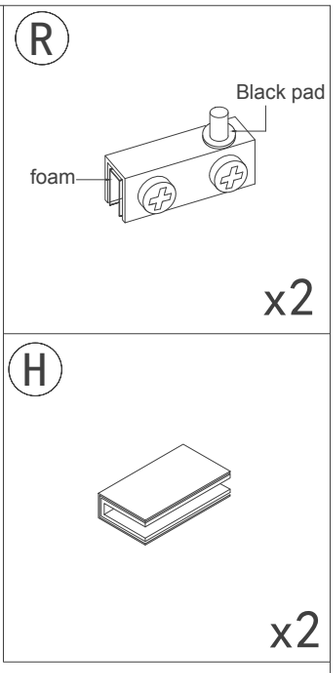

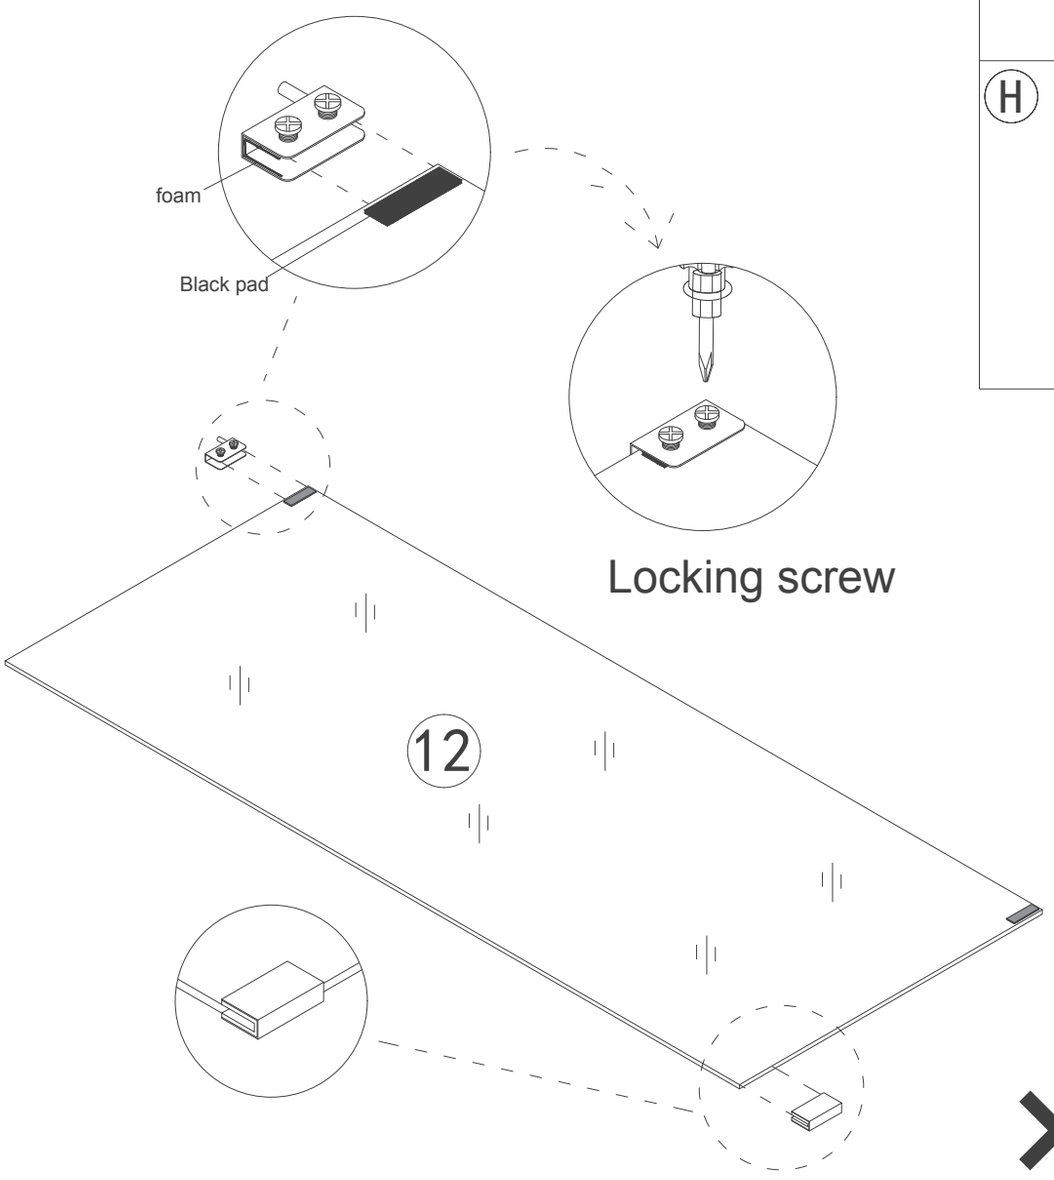

×2


Pay attention to the direction of the door hinge, rotate the screws to compress the black gasket, and do not place it in the opposite direction

Place the black gasket on the side where the screws are installed

Step30


left side

I

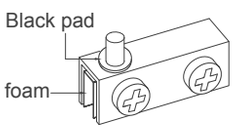



x2

H




x2

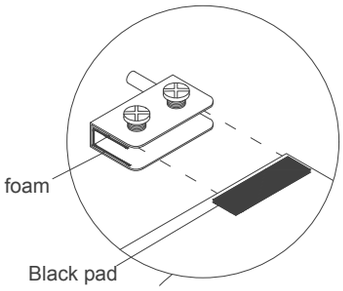

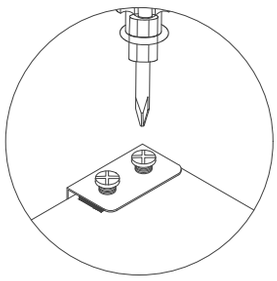

Locking screw

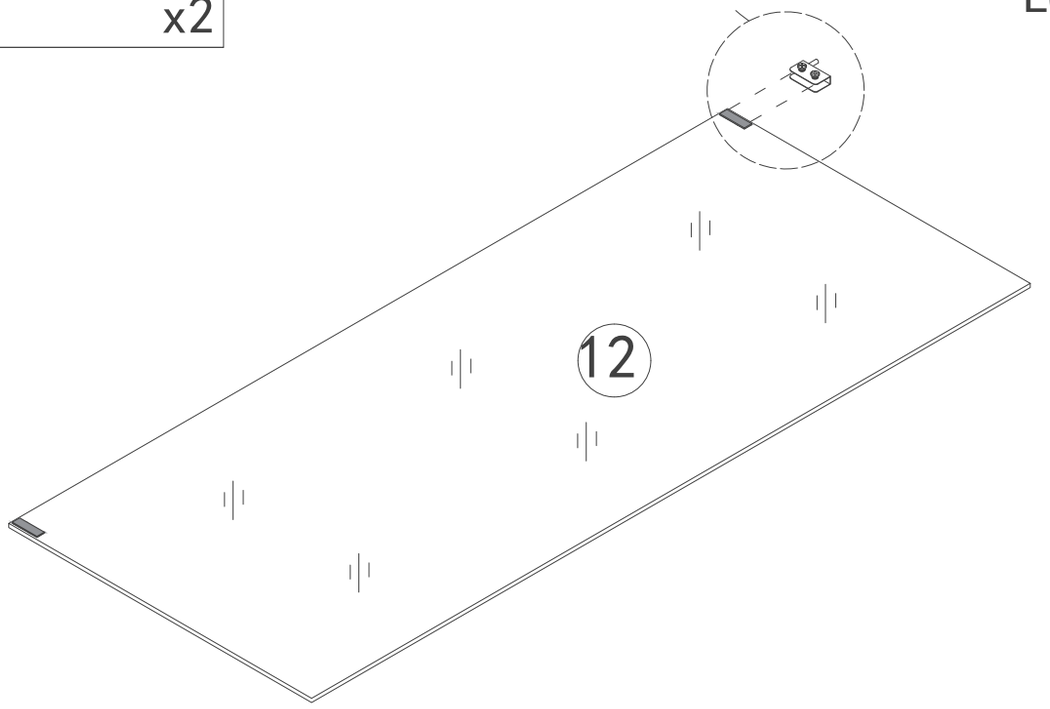


×2

Pay attention to the direction of the door hinge, rotate the screws to compress the black gasket, and do not place it in the opposite direction

Place the black gasket on the side where the screws are installed


Step31

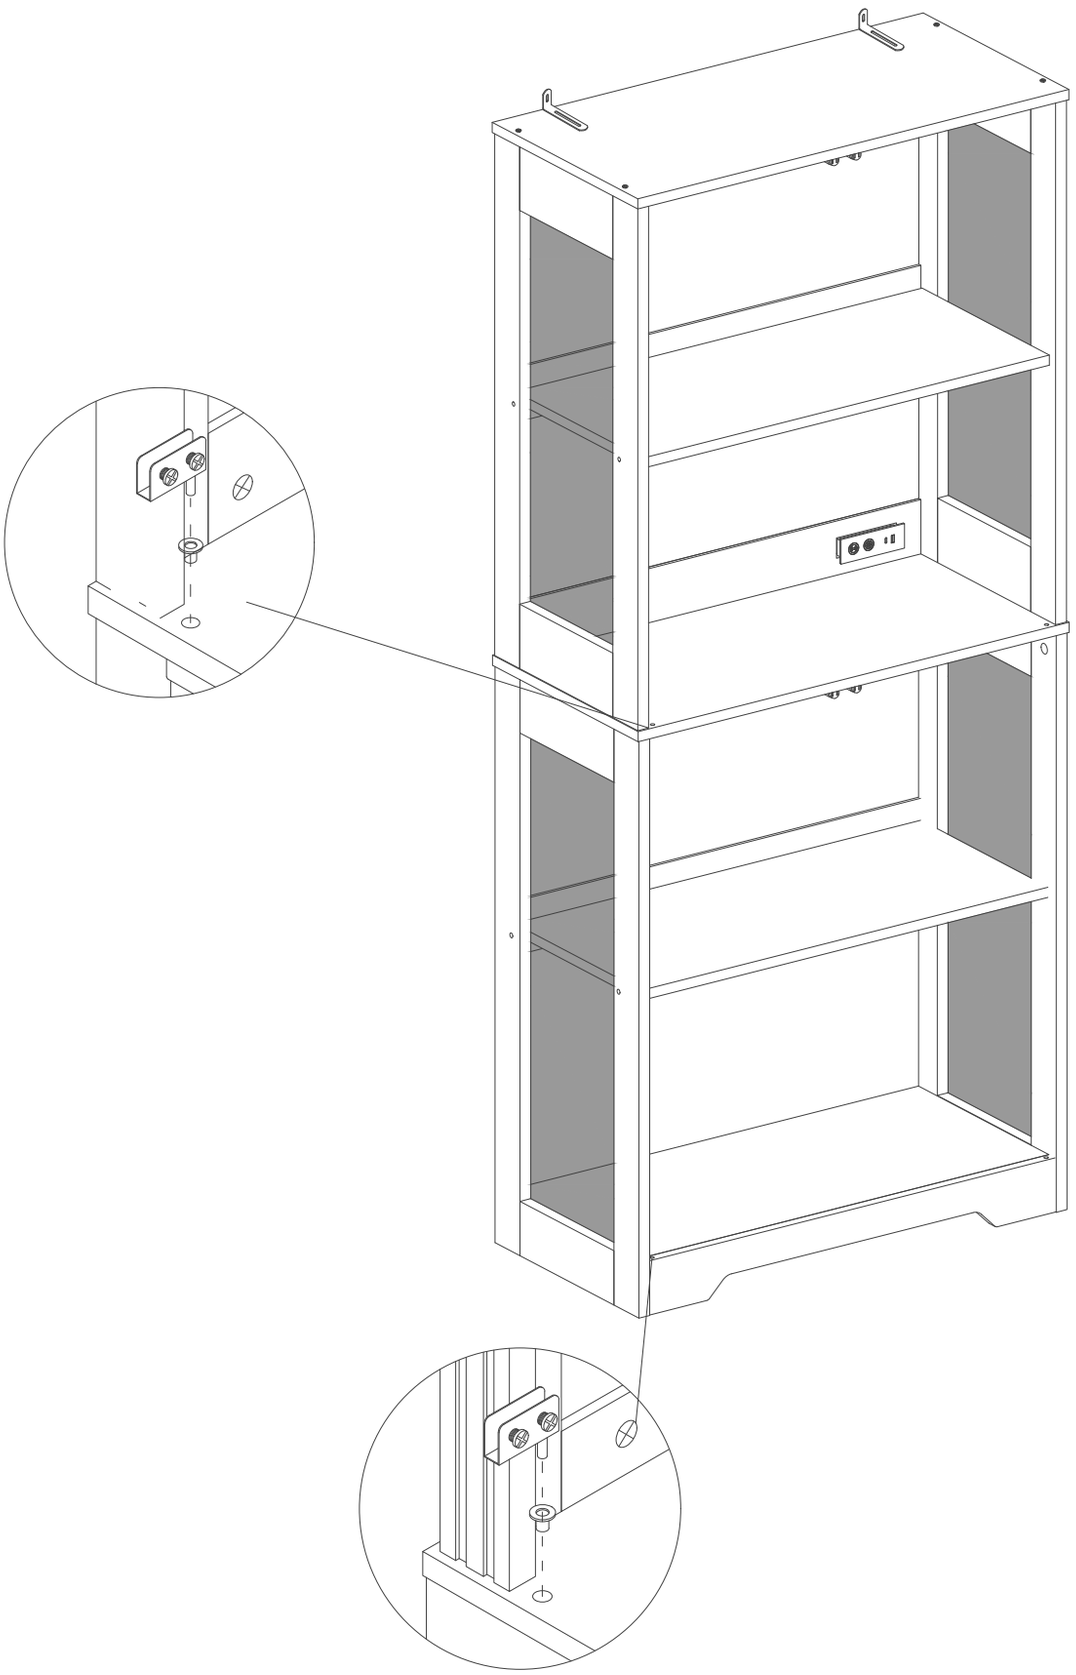


Step32

Pay attention to the direction of
the door hinge during installation


When installing a glass door, it is recommended to have two people install it to avoid the glass door colliding or hitting oneself.

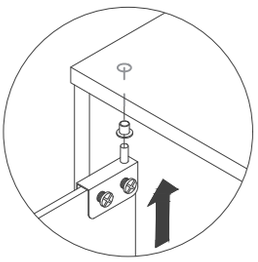

first

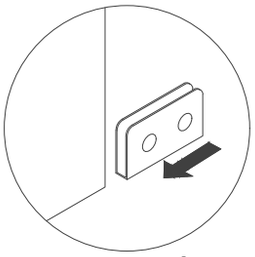


second

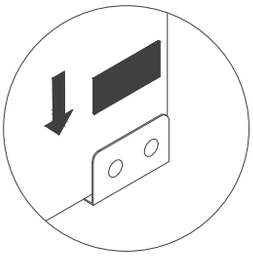


third

After installing the glass door, place the black gasket on the side where the screws are installed

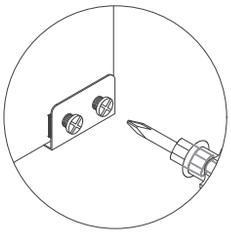


four

Locking screw

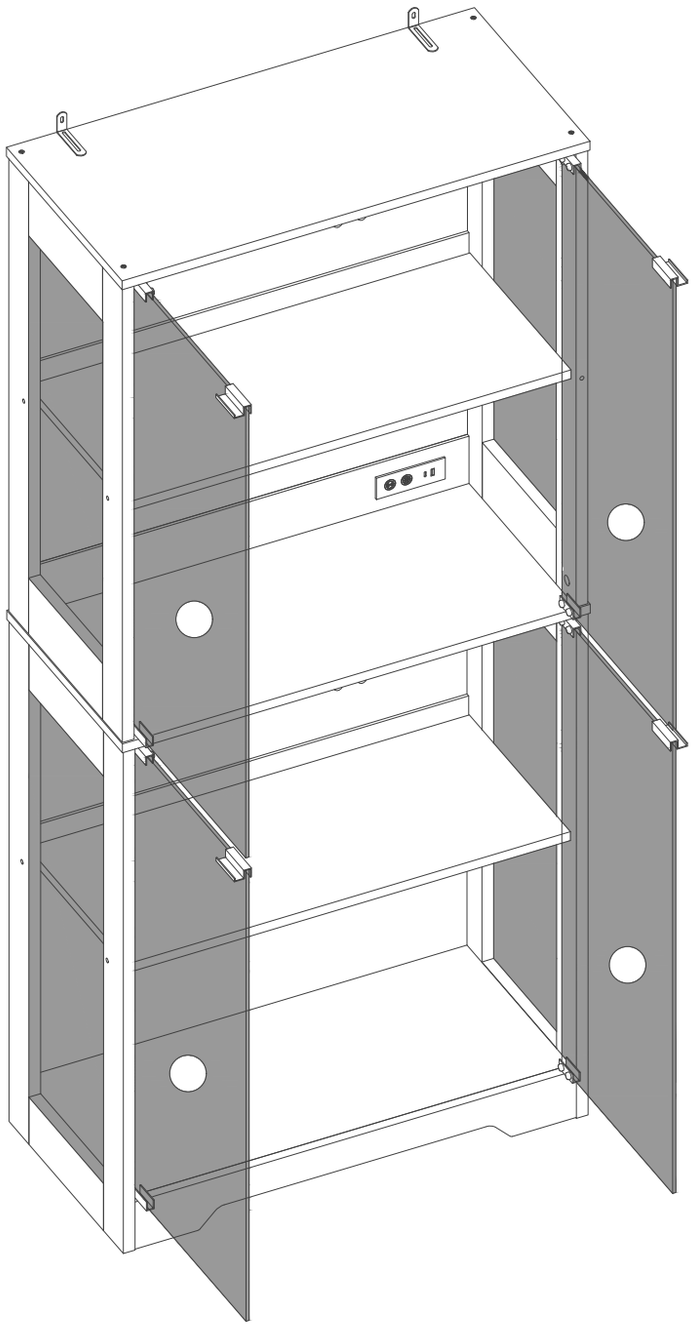



Step33

Open the glass door

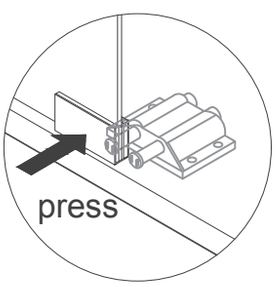

Close the glass door

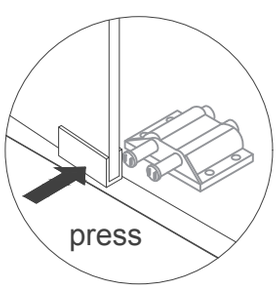

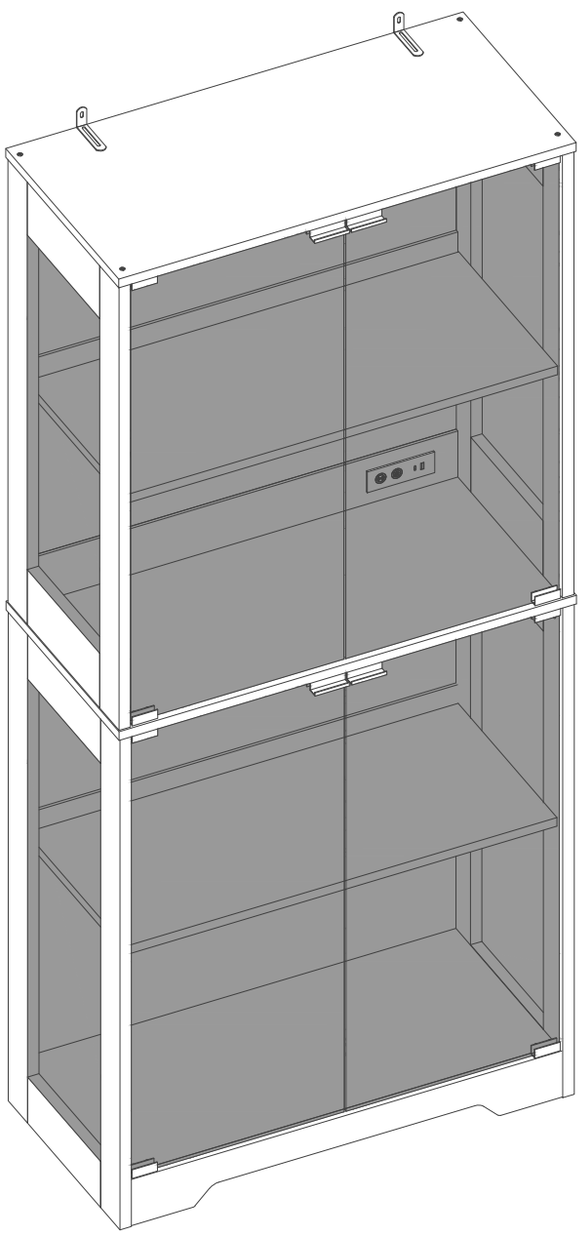

Step34

