


ASSEMBLY INSTRUCTION

BATHROOM VANITY

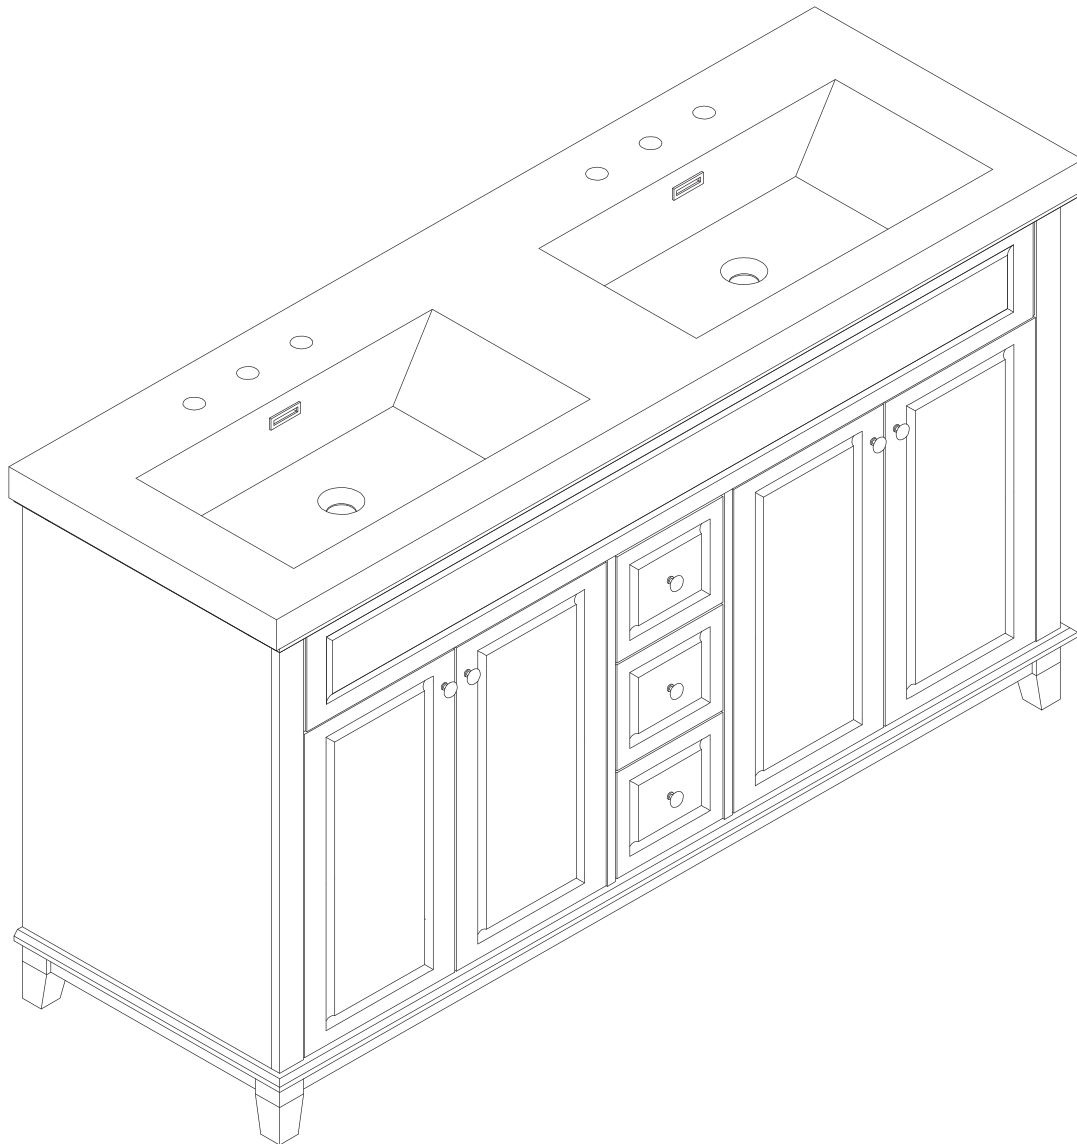

⚠ WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.





Before Installation

Important-Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

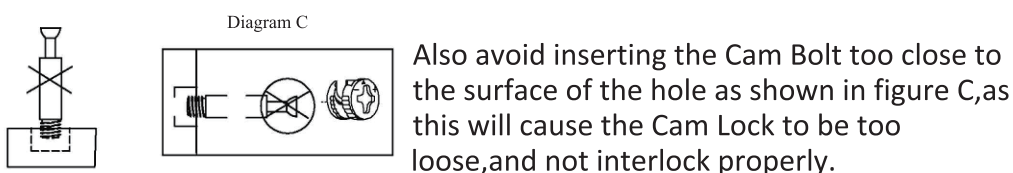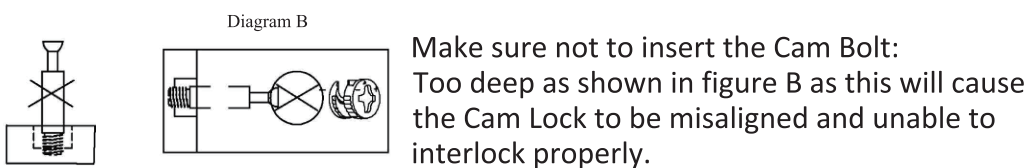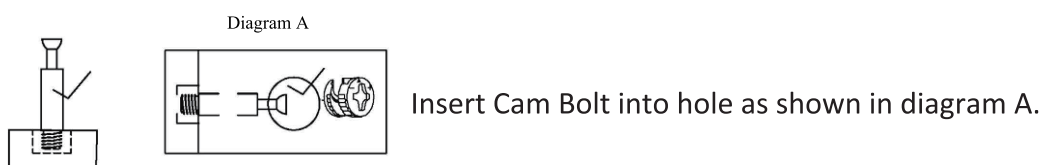


Connect the panels together.

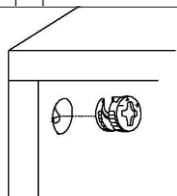


ARROW SIGN




Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

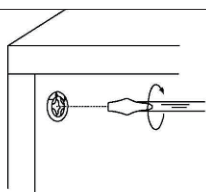


To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.

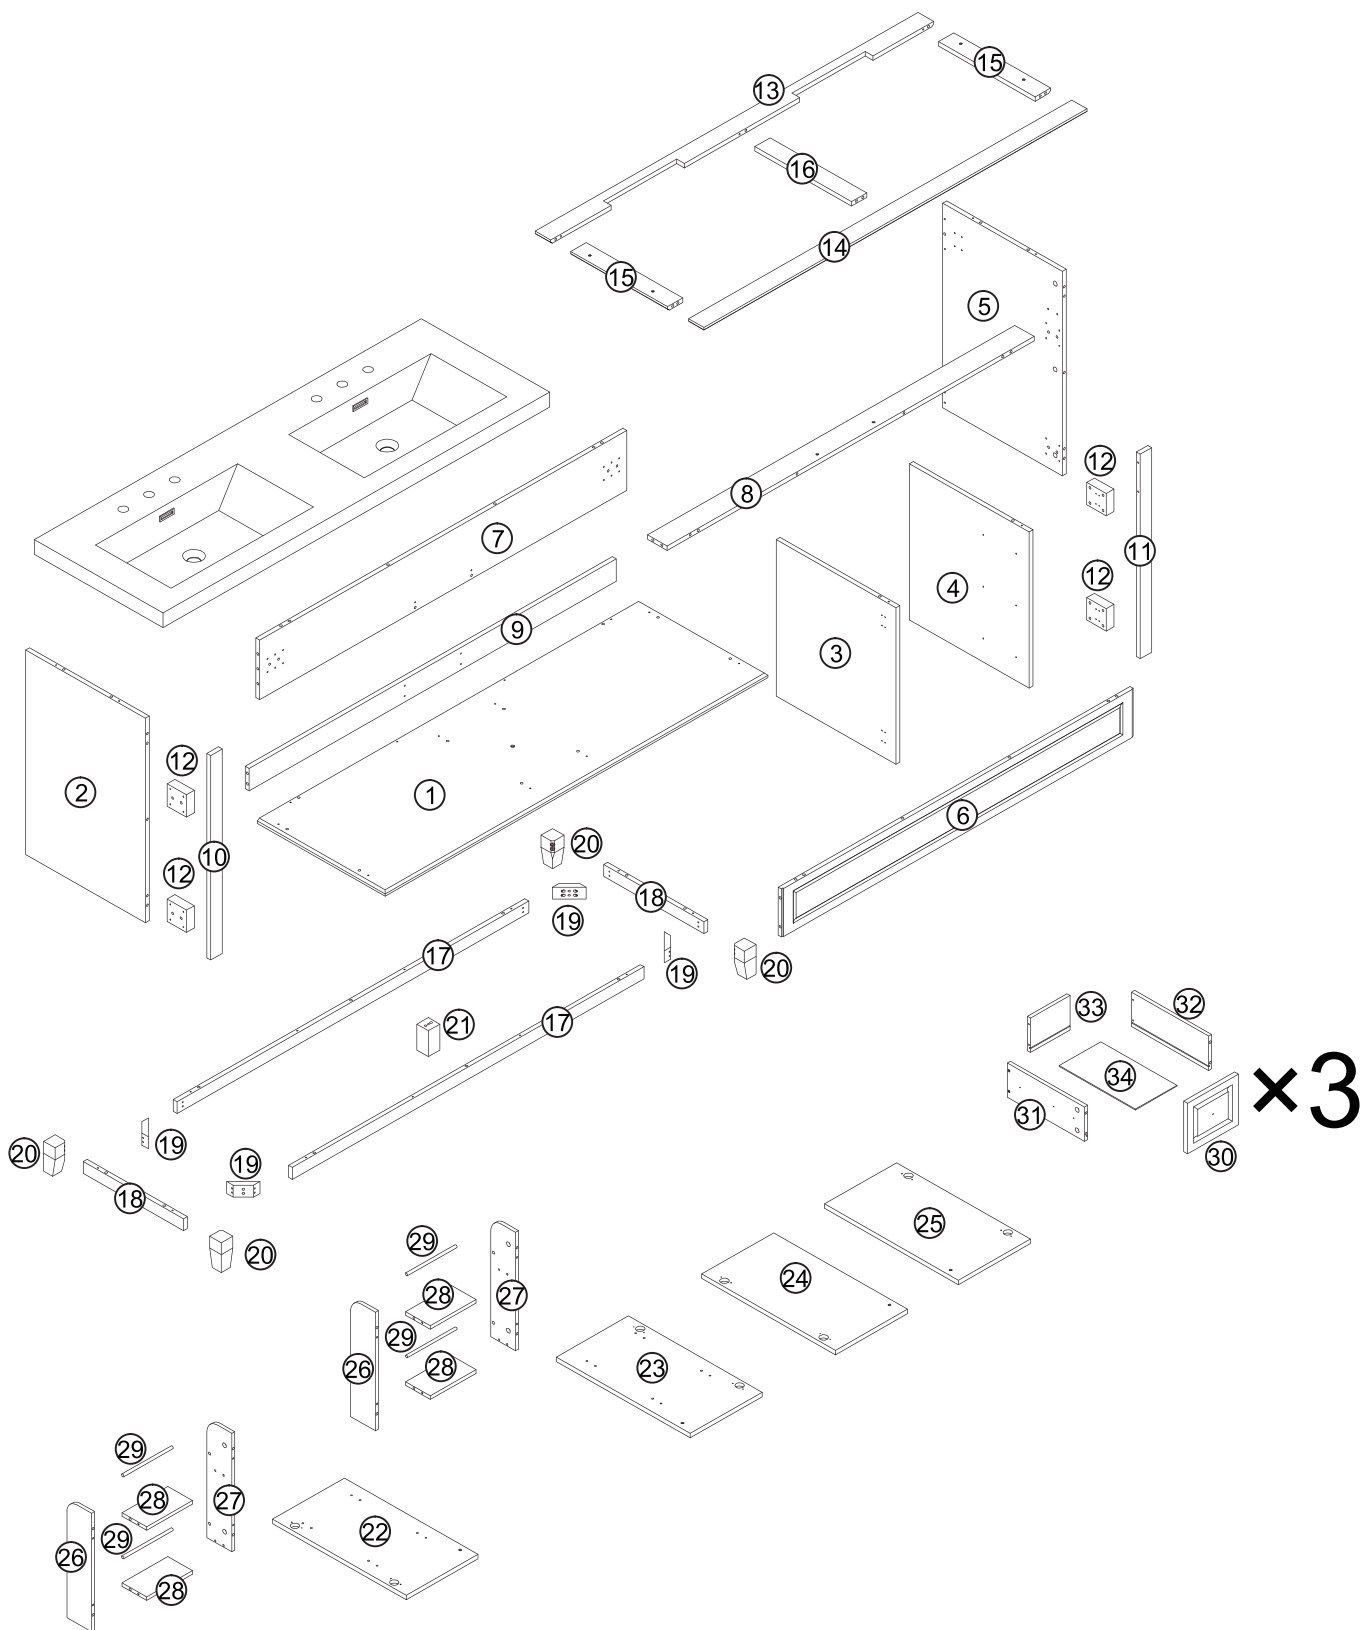


N759P425432

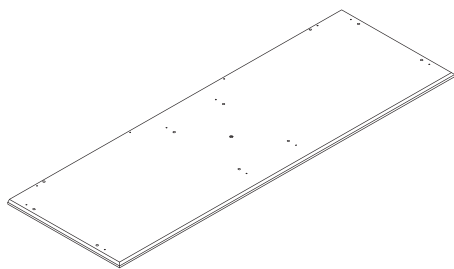


① × 1

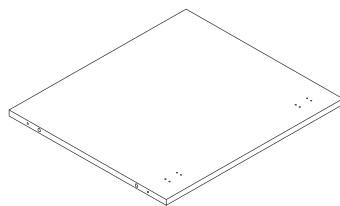


③ × 1

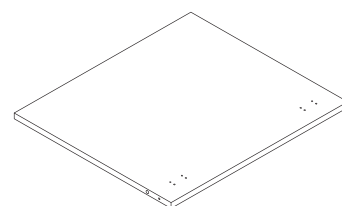


④ × 1

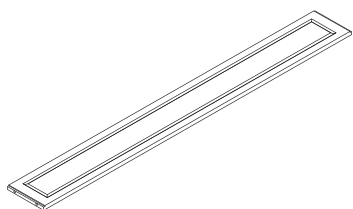


⑥ × 1

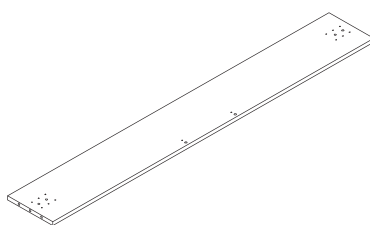


⑦ × 1

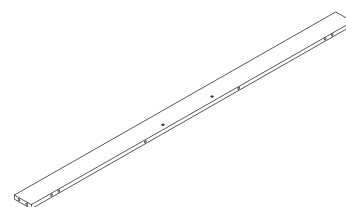


⑧ × 1

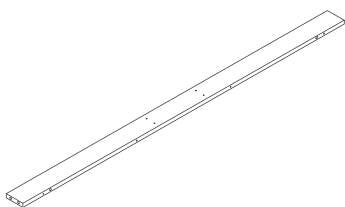


⑨ × 1

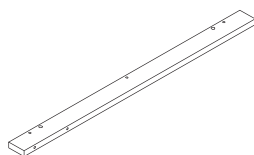


⑩ × 1

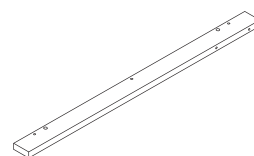


⑪ × 1

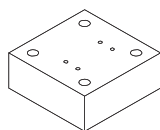

⑫ × 4

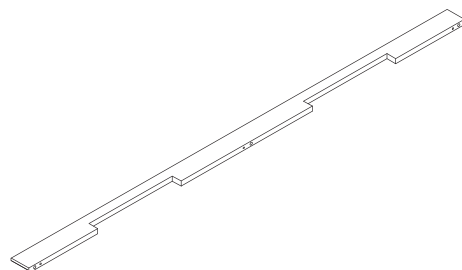


⑬ × 1

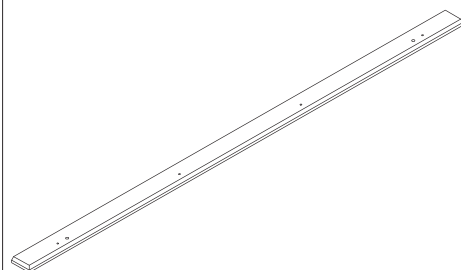


⑭ × 1


N759P425432

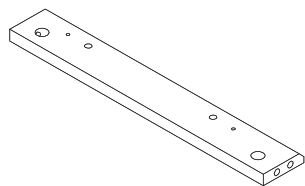


⑮ × 2

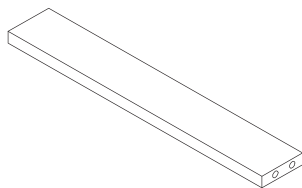


⑯ × 1

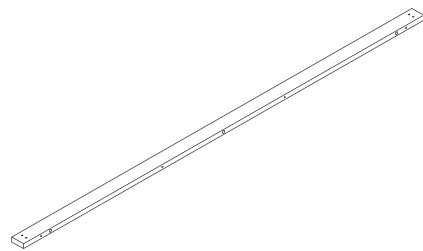


⑰ × 2

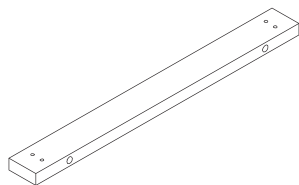


⑱ × 2




⑲ × 4

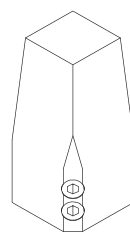


⑳ × 4

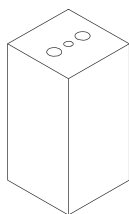


㉑ × 1

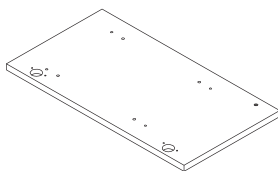


㉒ × 1

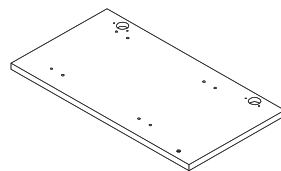


㉓ × 1

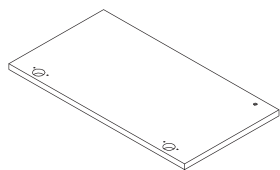

㉔ × 1










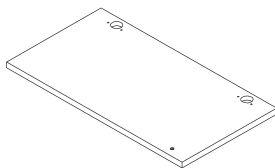


㉕ × 1









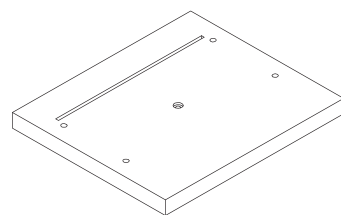



㉖ × 3

N759P425431

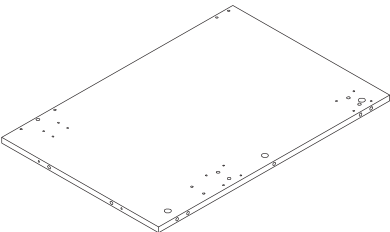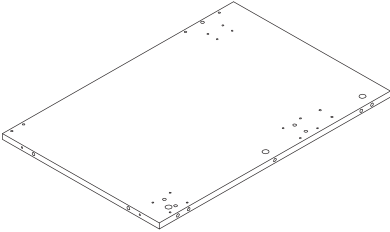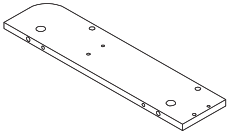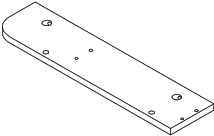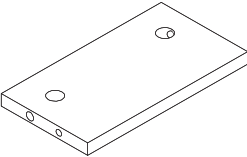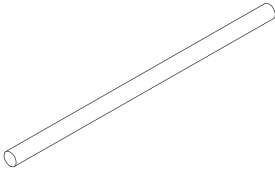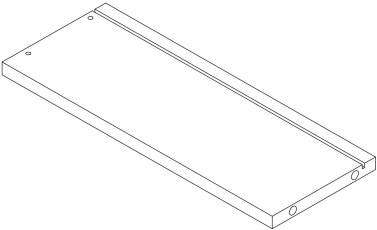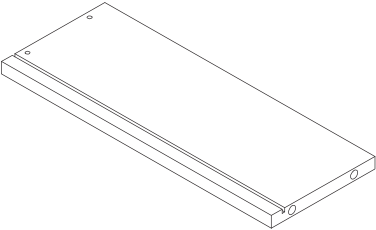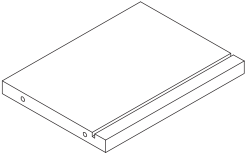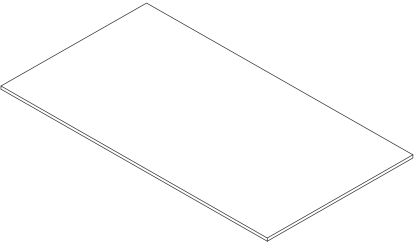
		
② × 1	⑤ × 1	②⑥ × 2
		
②⑦ × 2	②⑧ × 4	②⑨ × 4
		
③① × 3	③② × 3	③③ × 3
		
③④ × 3		

N759P425431

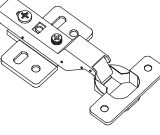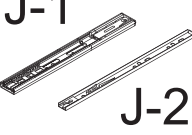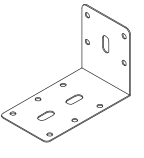
					
M6×35mm A × 68	Φ15×10mm B × 68	Φ6×30mm C × 16	M3×12mm D × 82	M3.5×12mm E × 20	M4×25mm F × 16
					
M4×35mm G × 52	Φ8×30mm H × 56	I × 8	J × 6	K × 4	M4×16mm L × 7
					
M × 7	N × 2	O × 1	M6×60mm P × 4	Q × 2	M4×45mm R × 12
					
M7×50mm S × 1	T × 8	U × 8	M6×40mm V × 8	M4 W × 1	

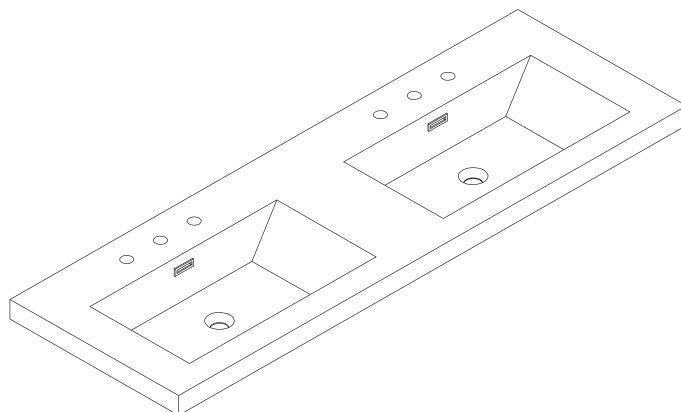


Step 1

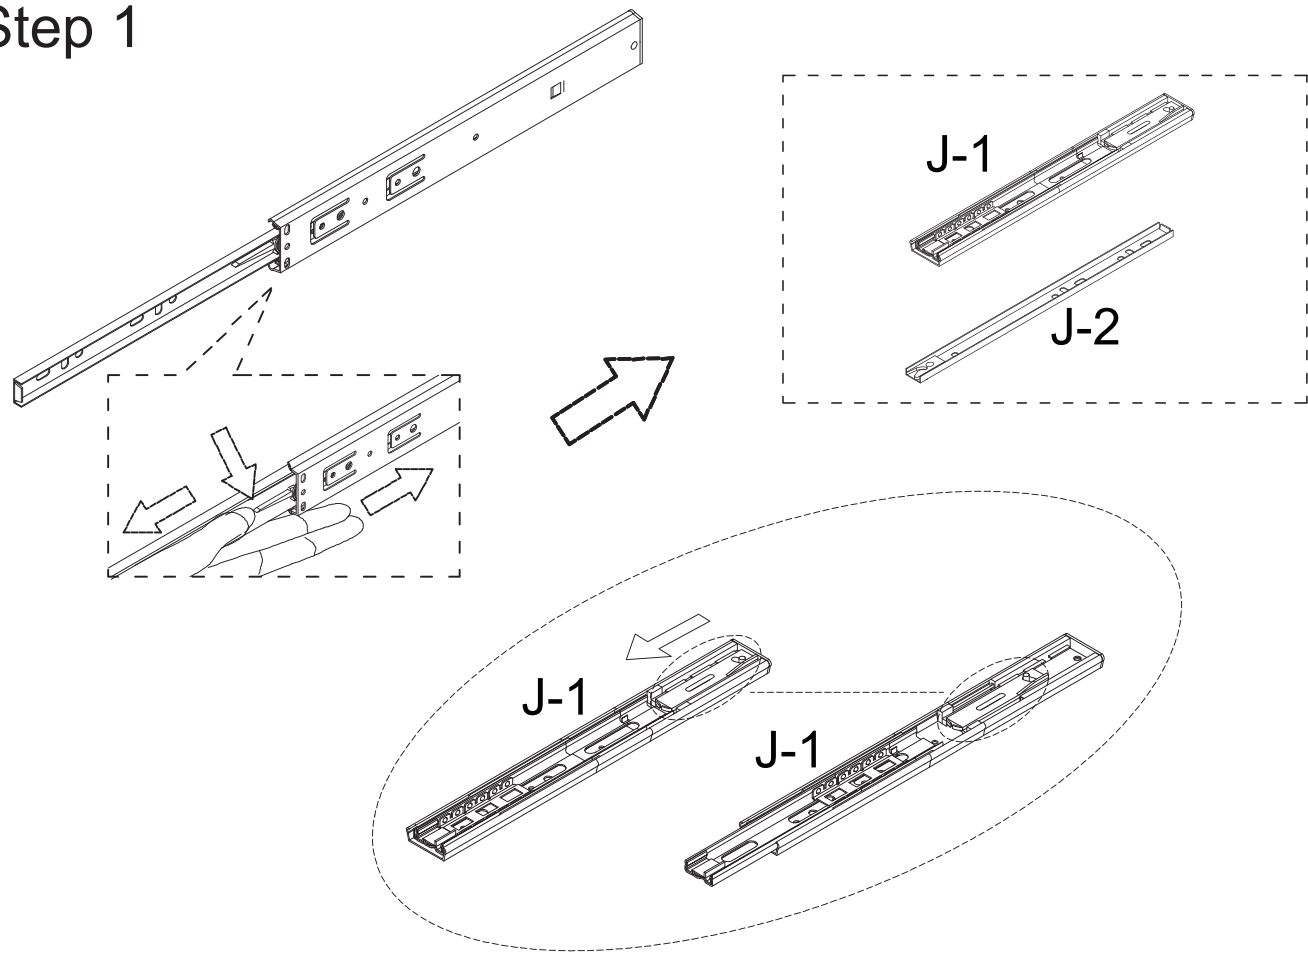





Step 2

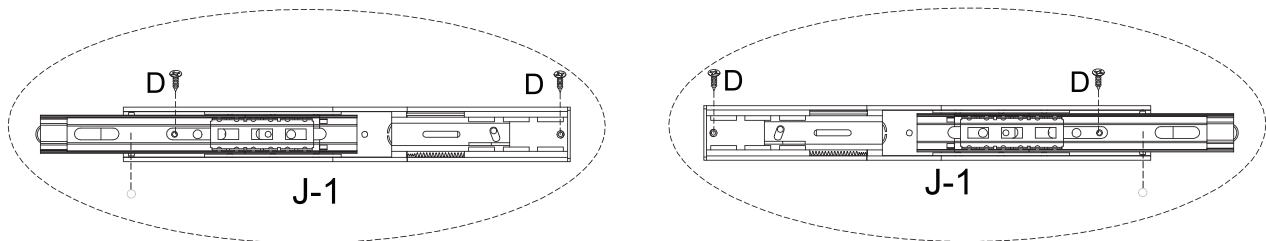




J-1 × 3

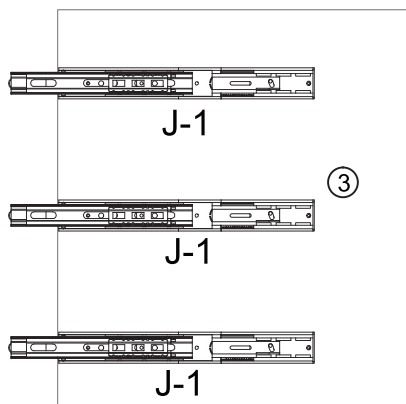





J-1 × 3

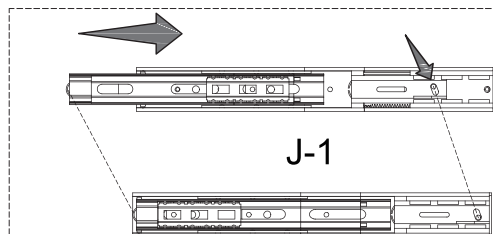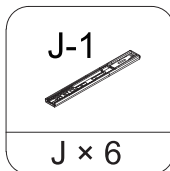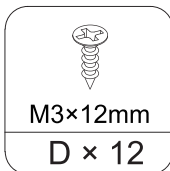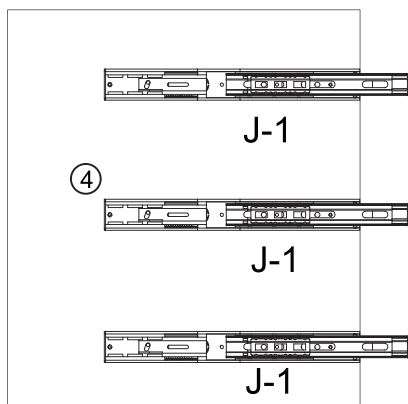


Step 3

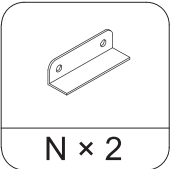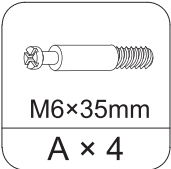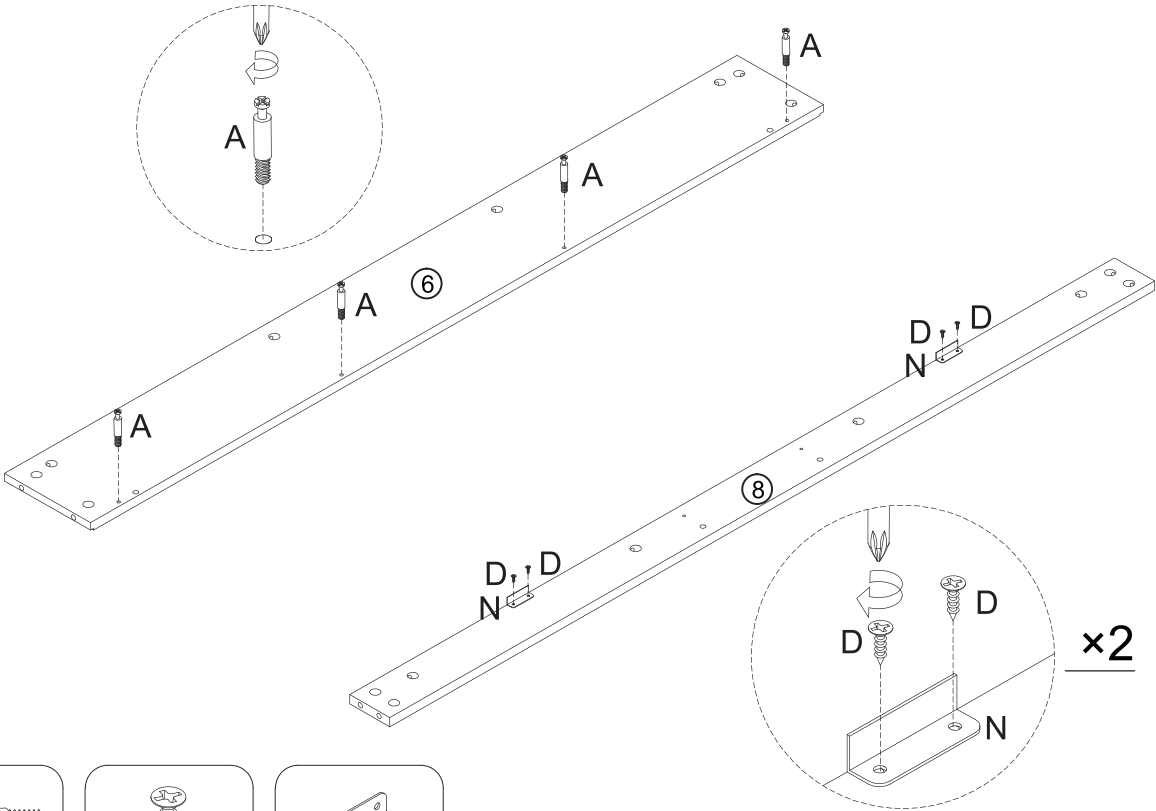


Step 4

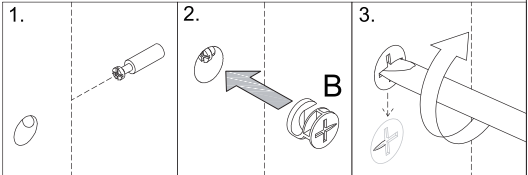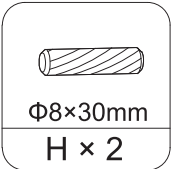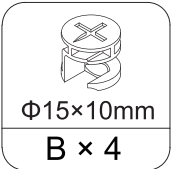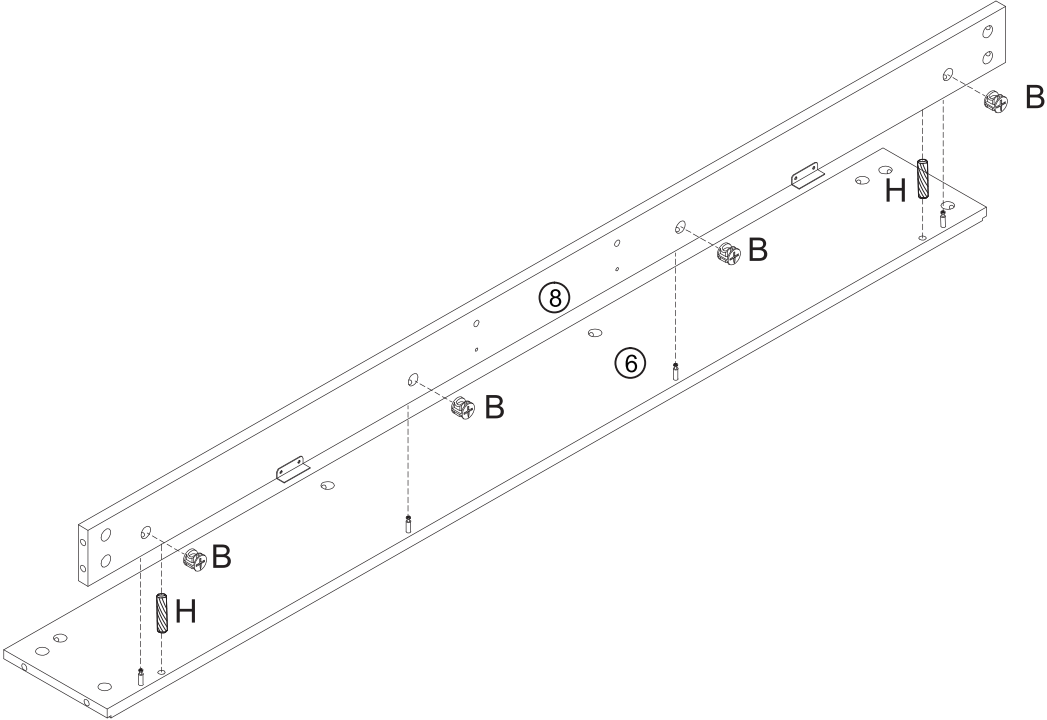




Step 5

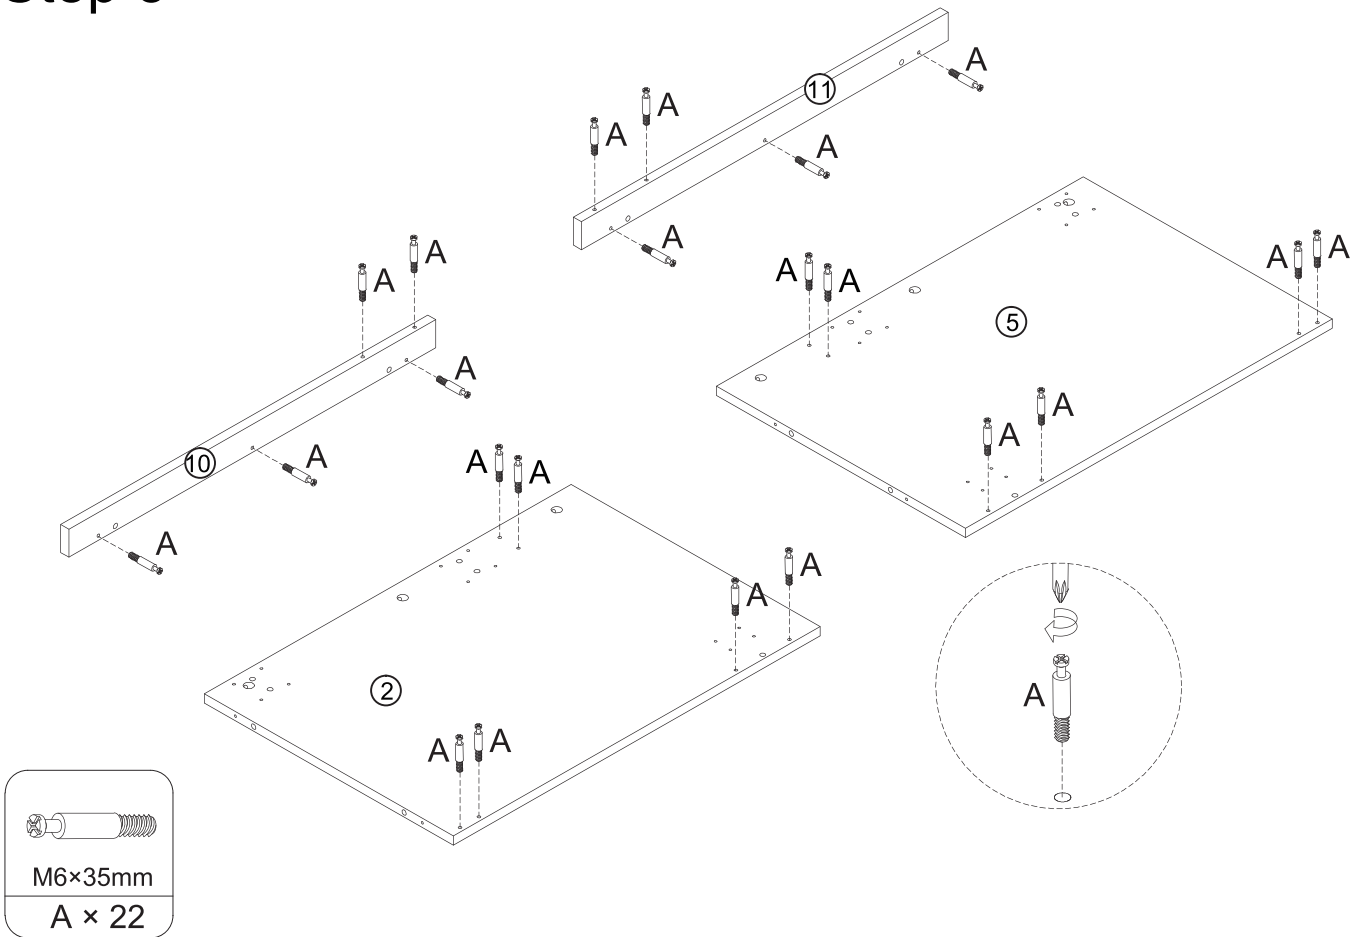




Step 6

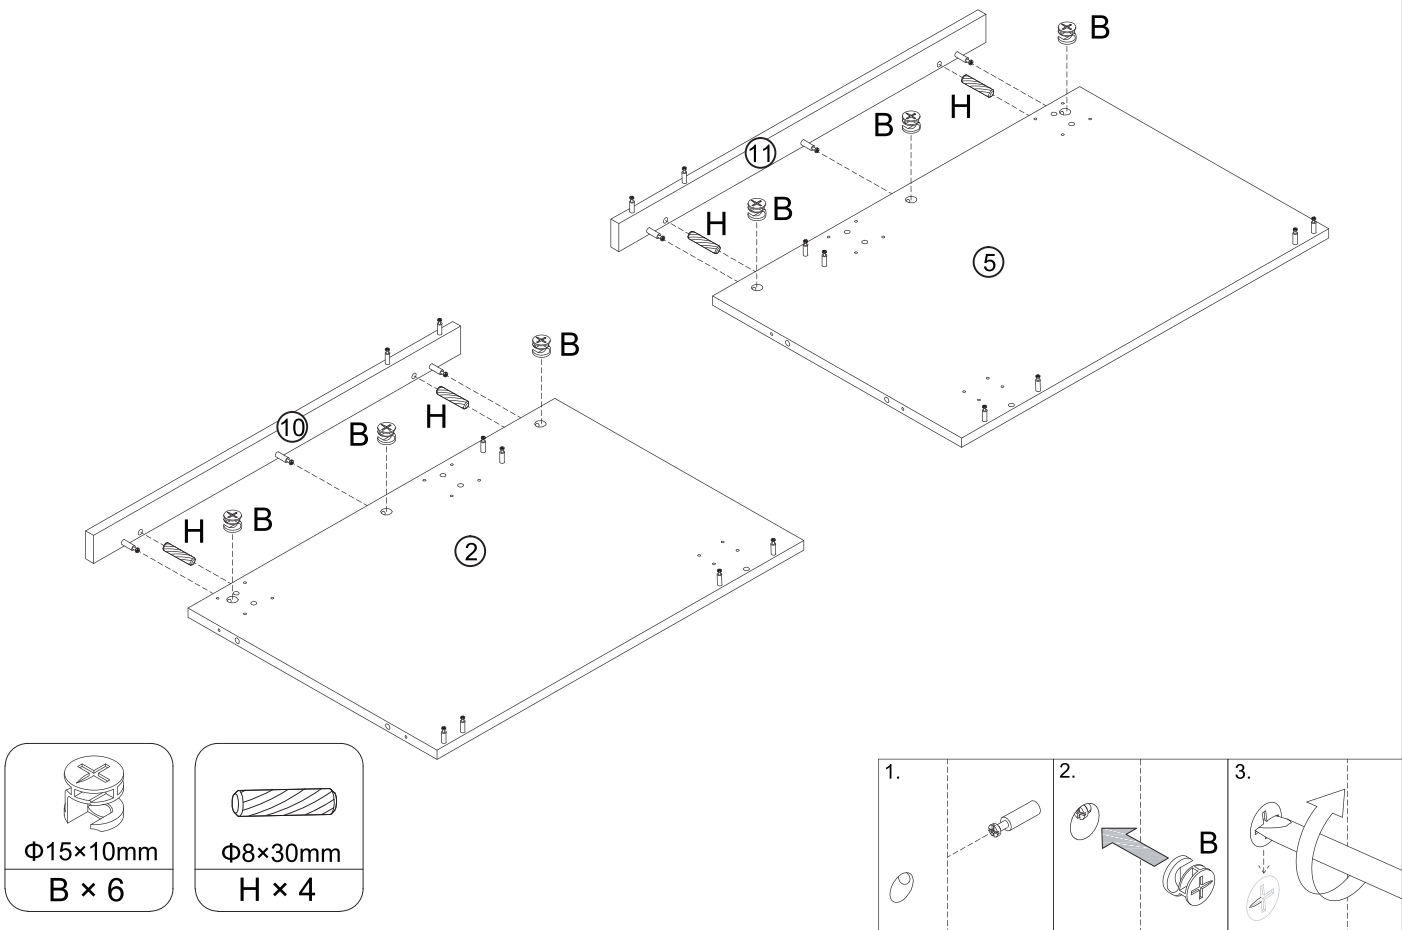


Step 7

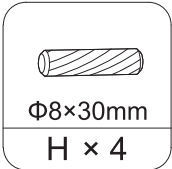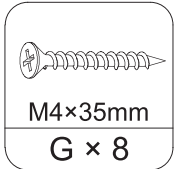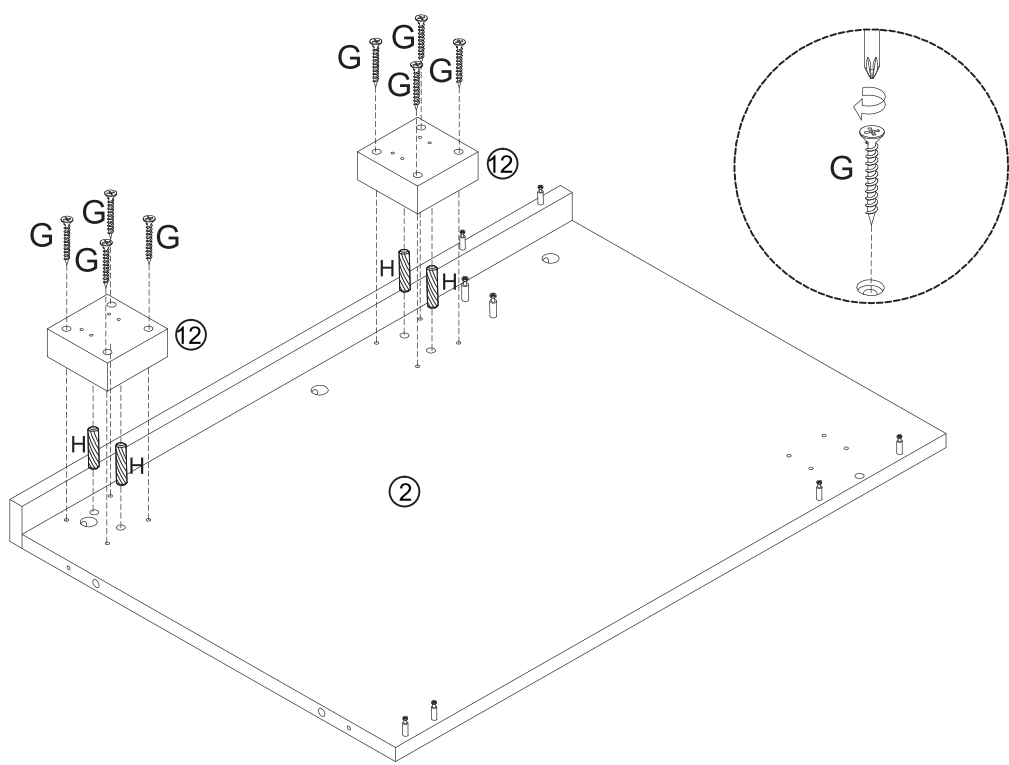

Step 8

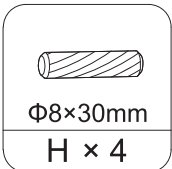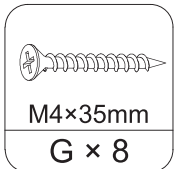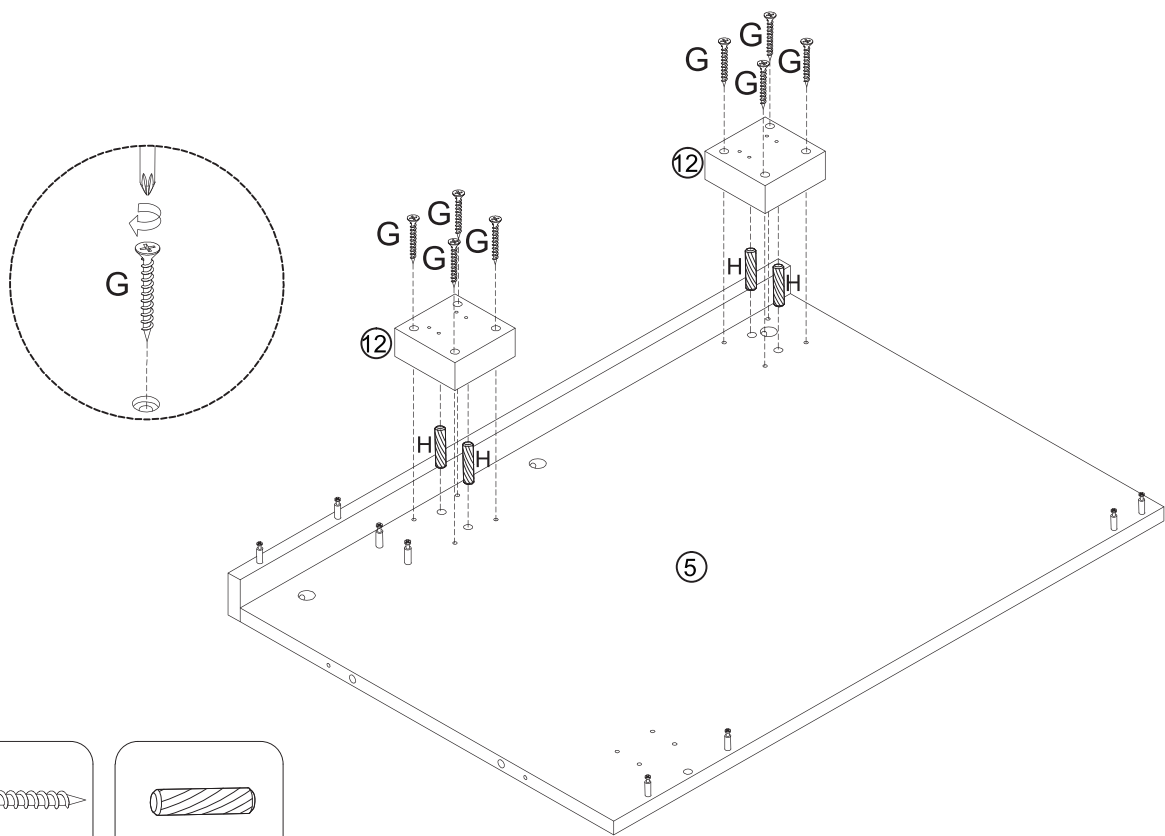

Step 9

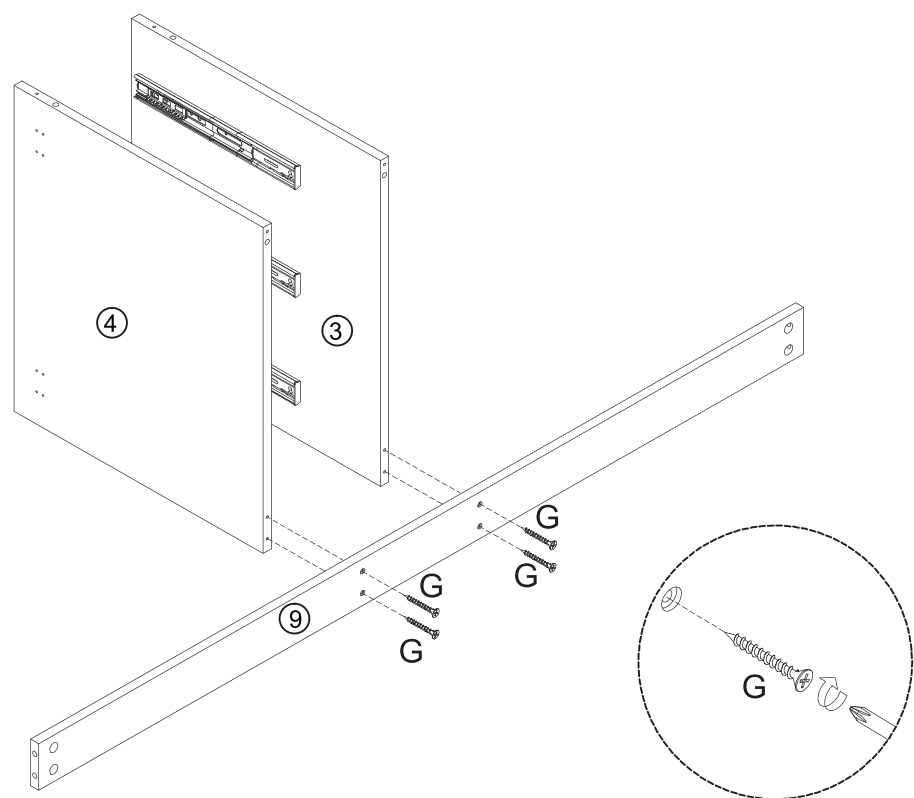




M4×35mm

G × 4

Step 10

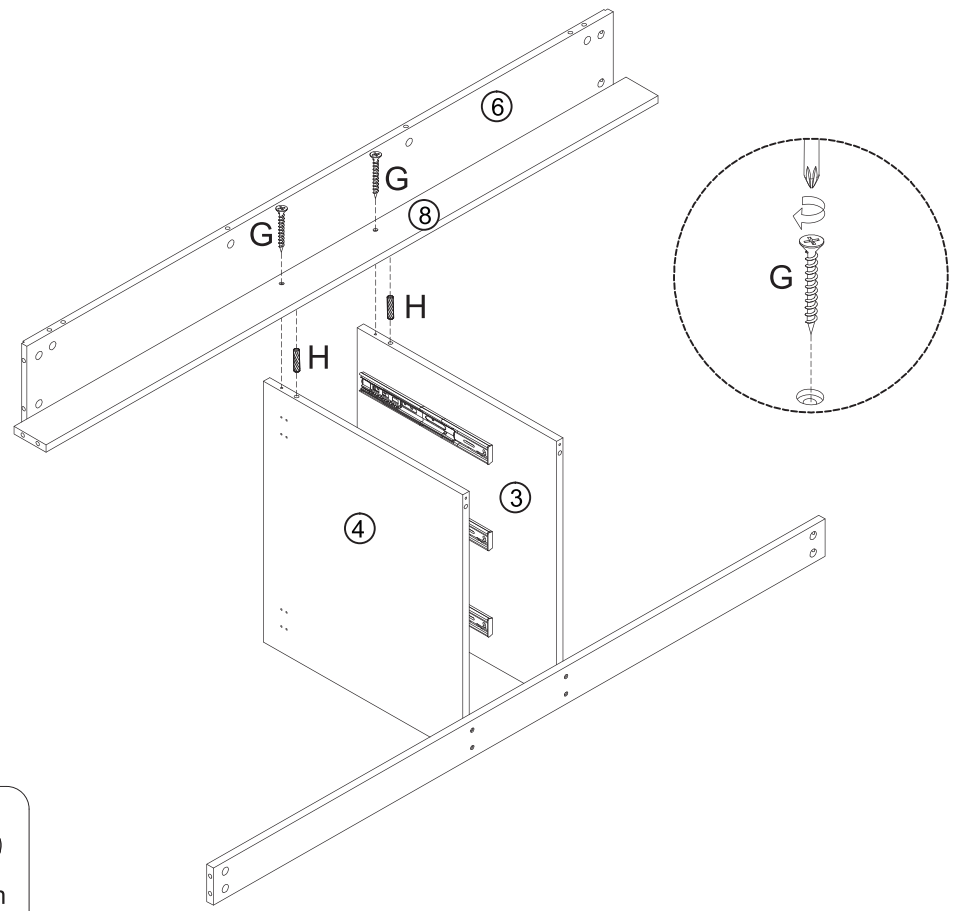



M4×35mm




G × 2







Φ8×30mm

H × 2


Step 11

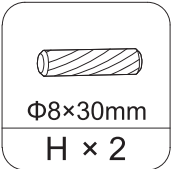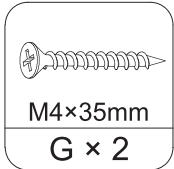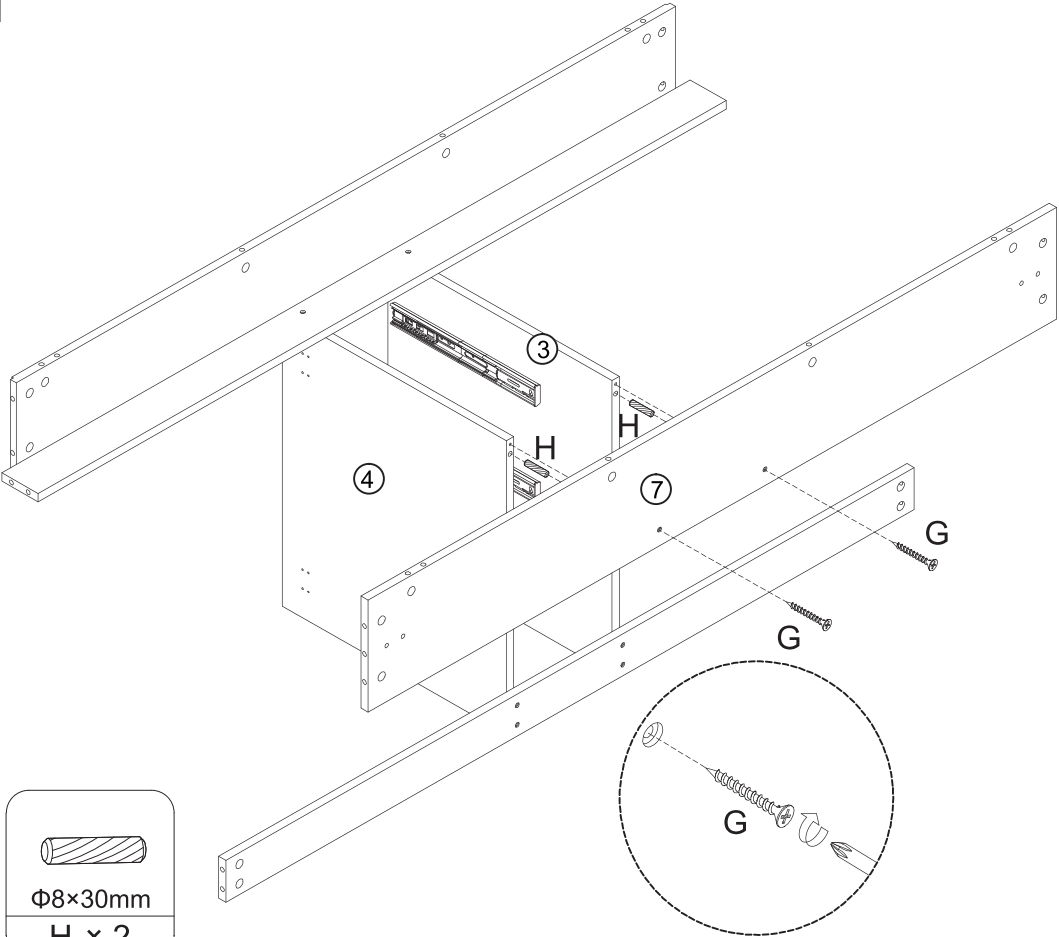


Step 12

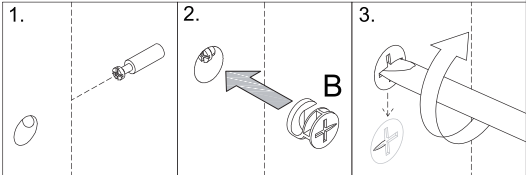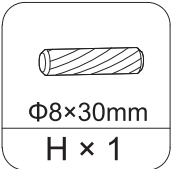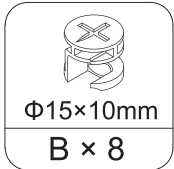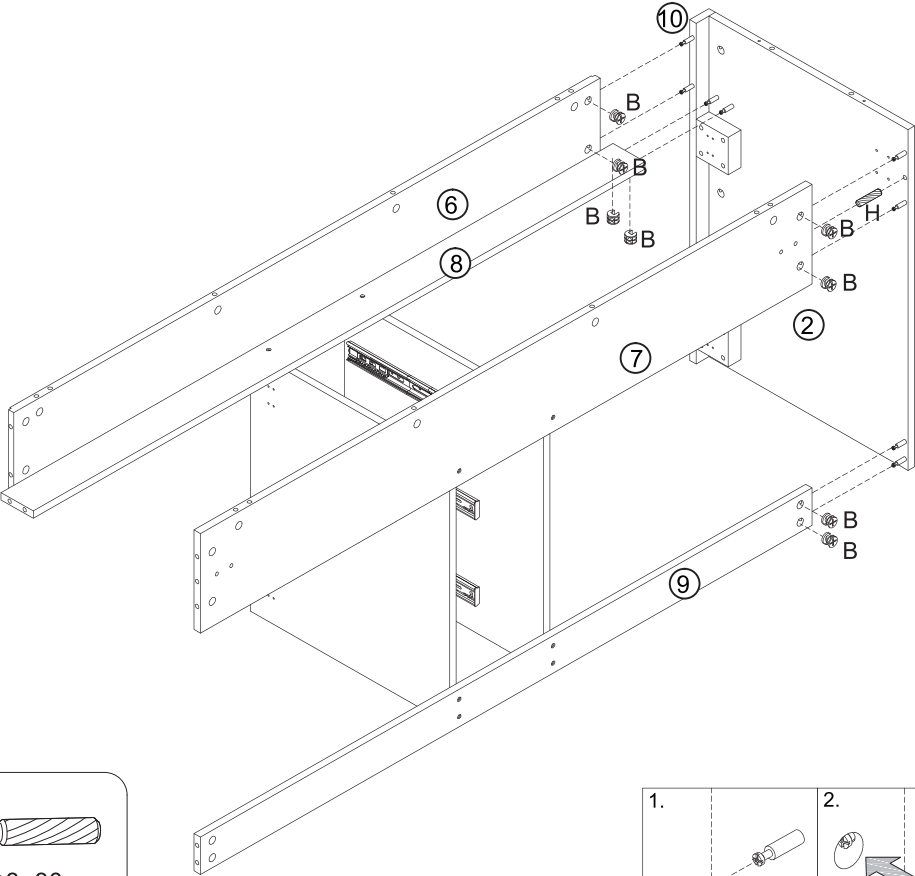



Step 13

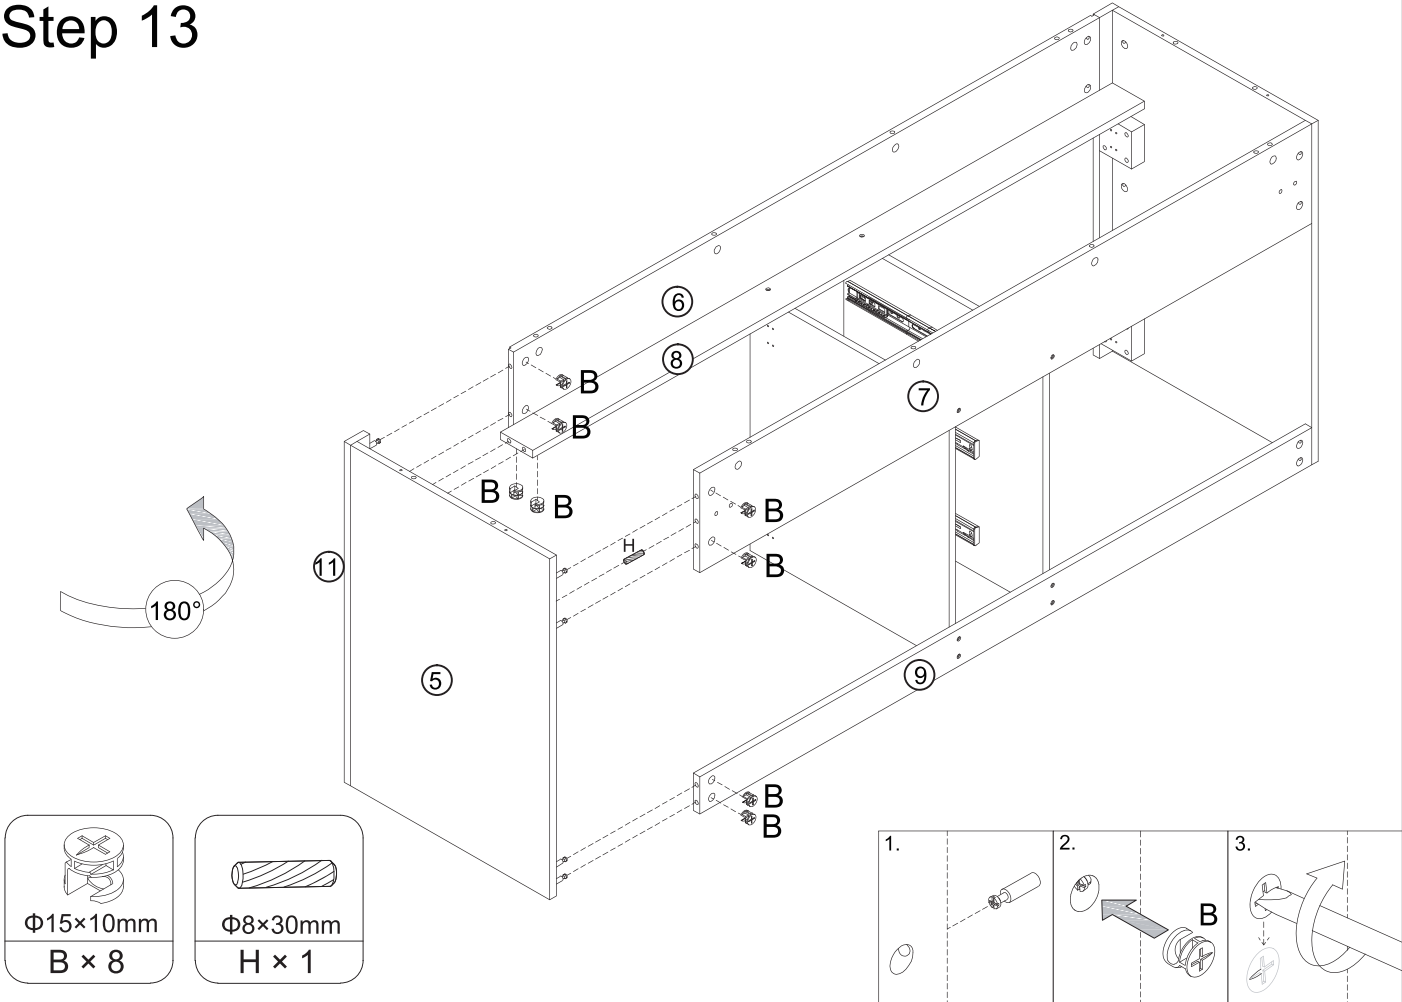





Step 14

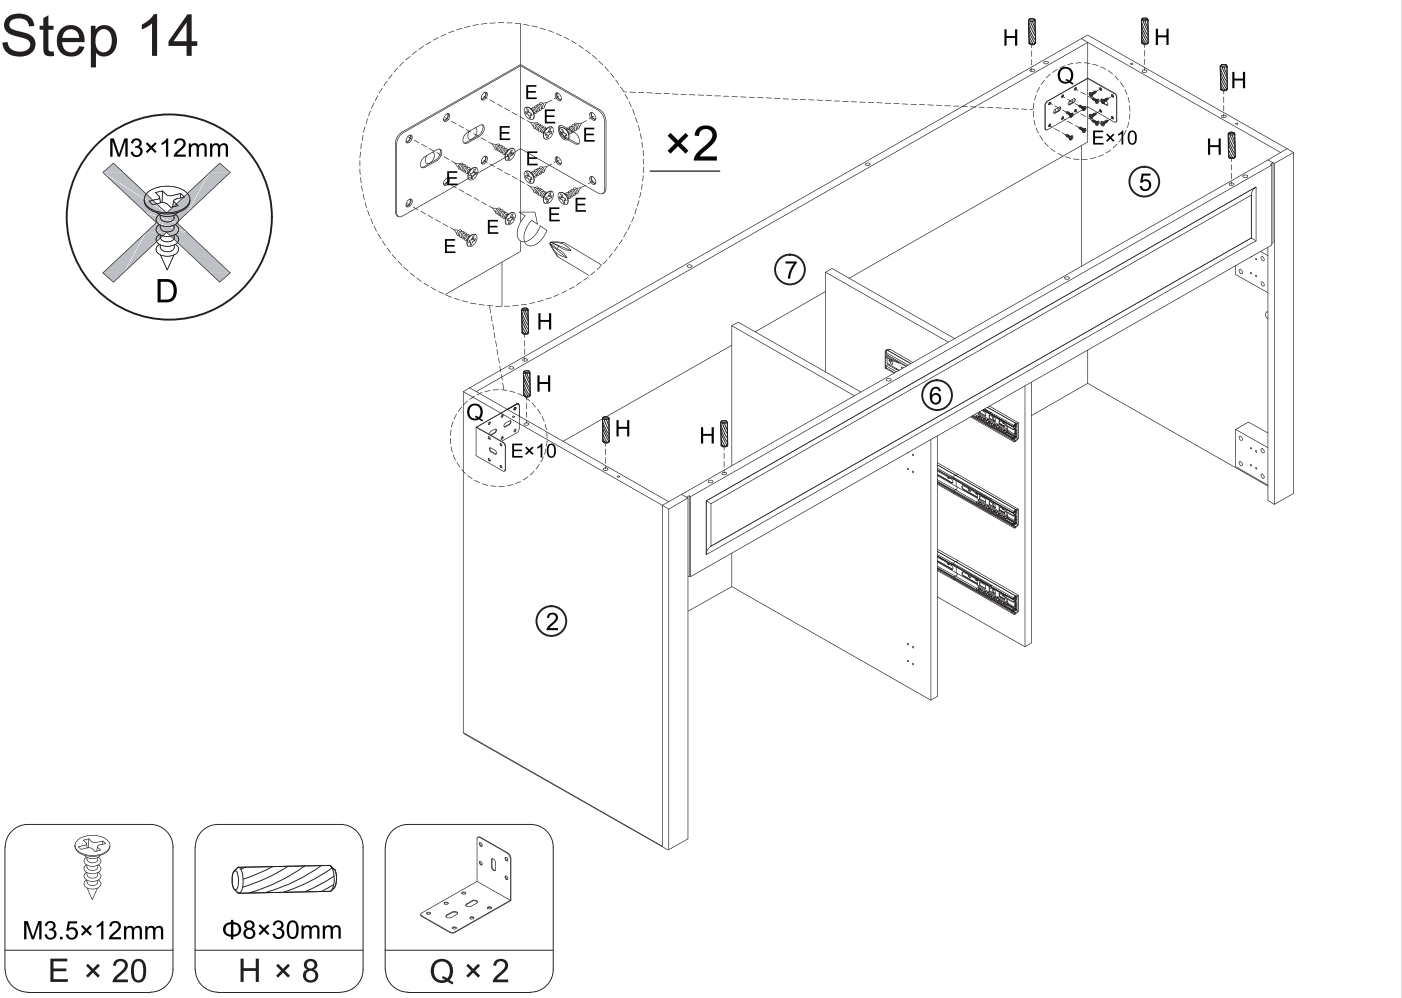


Step 15

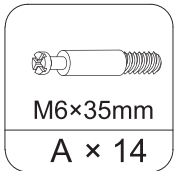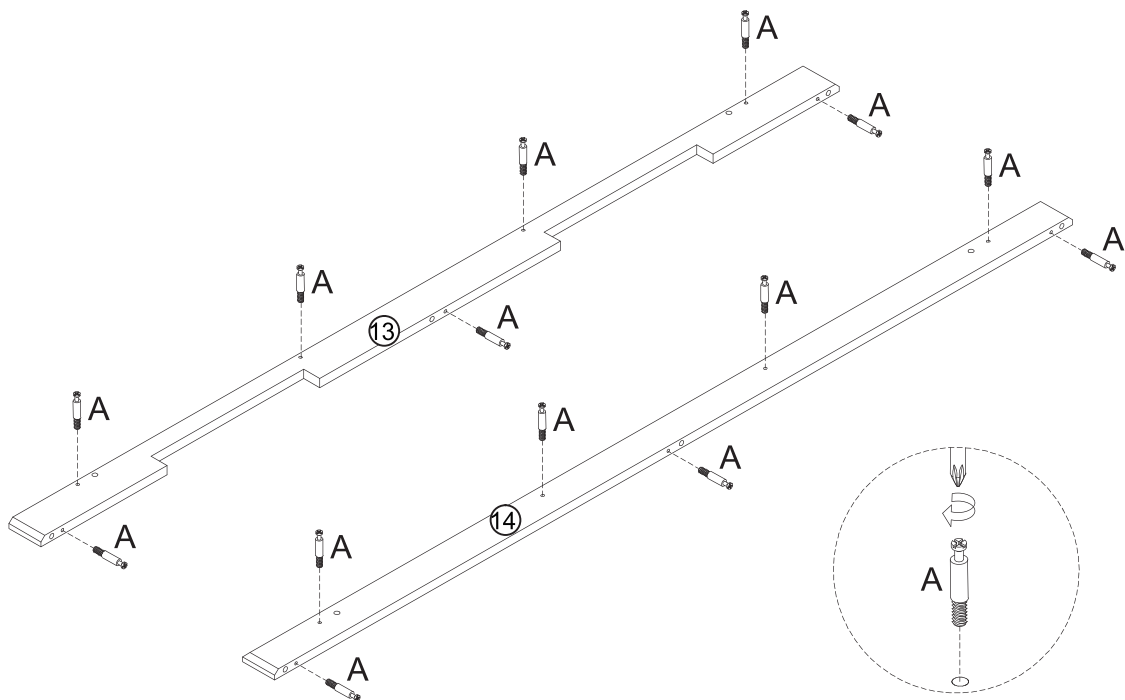


Step 16

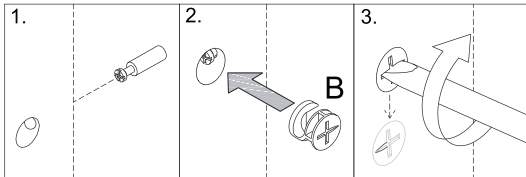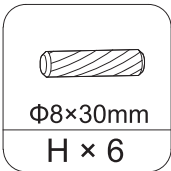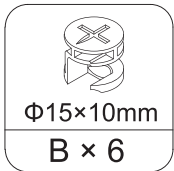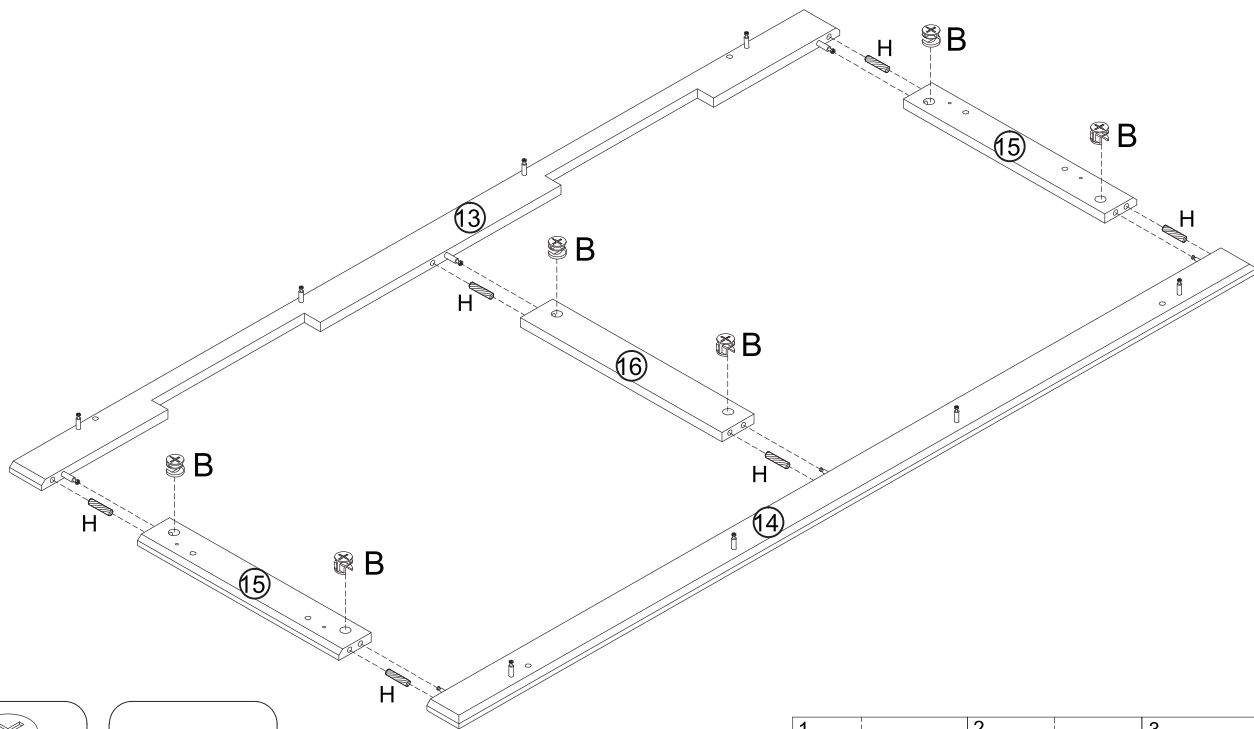



Step 17

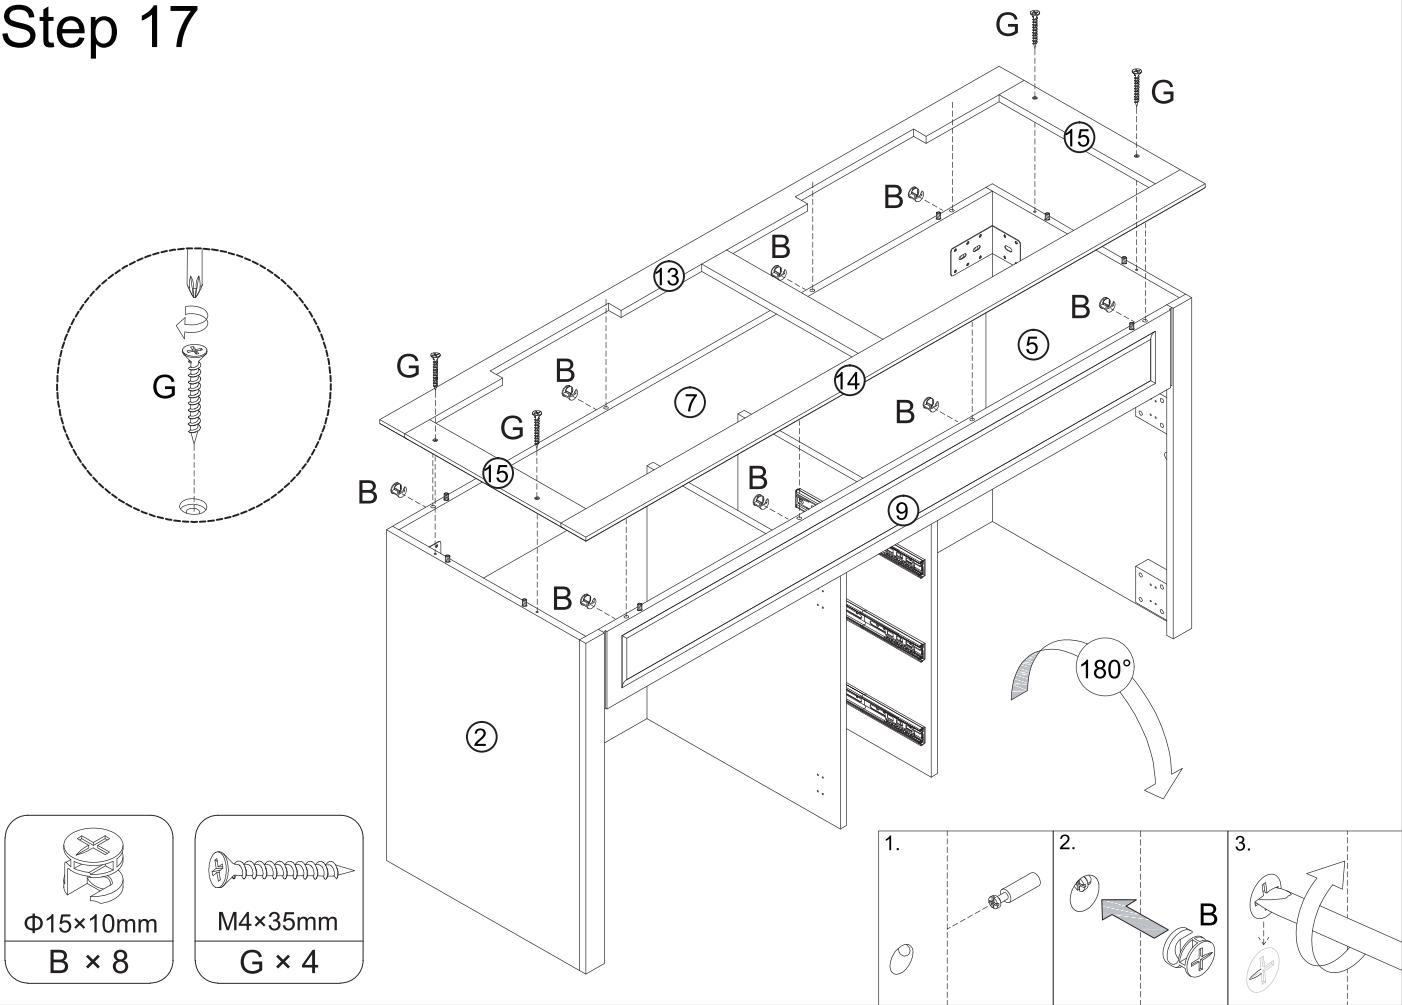




Step 18

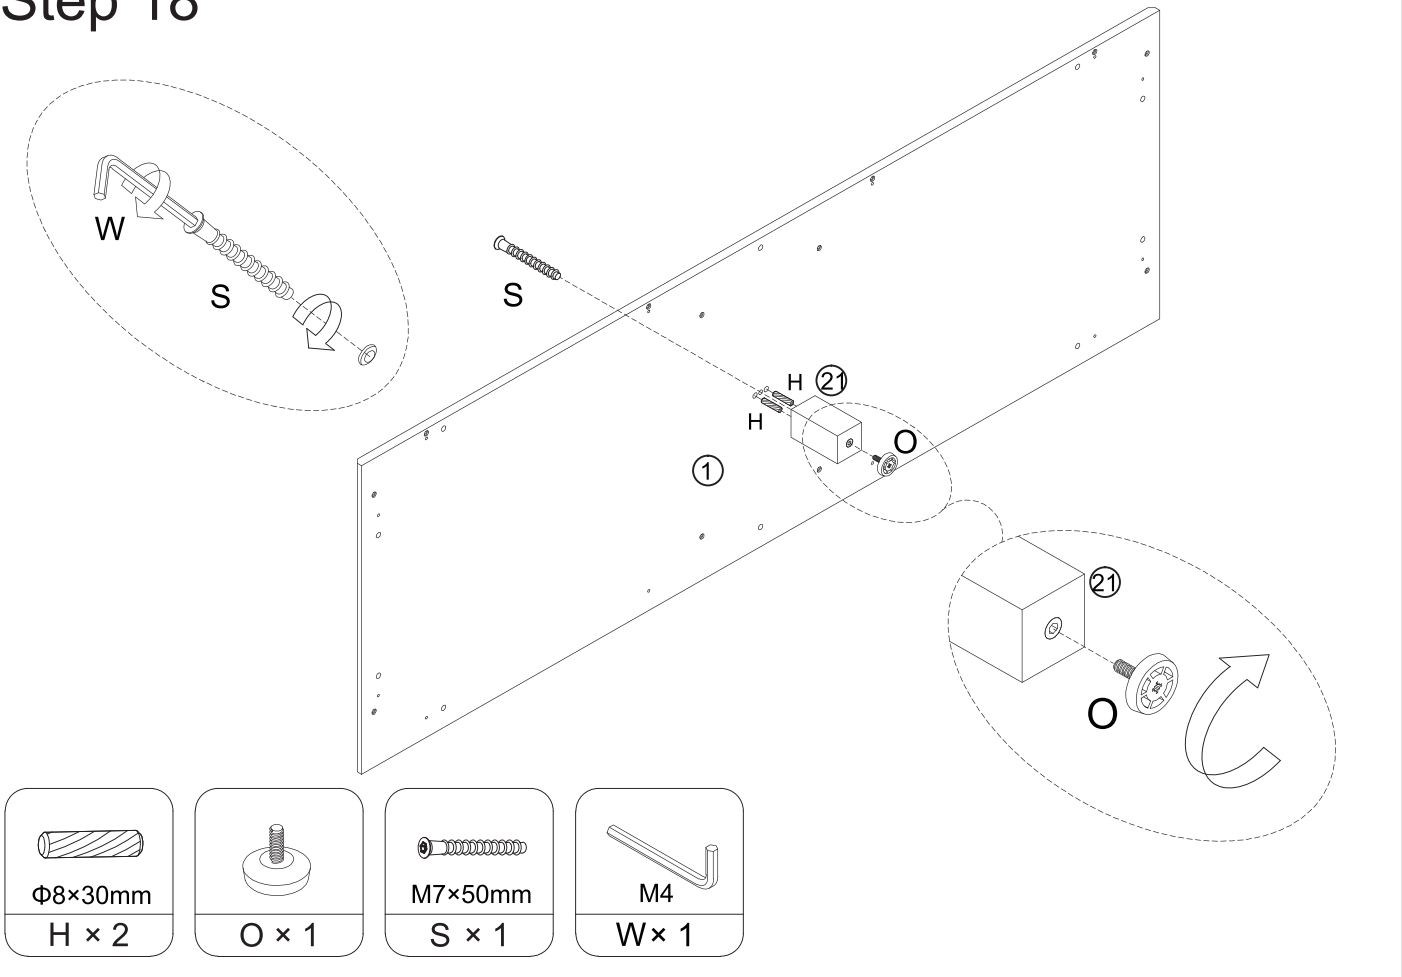



Step 19

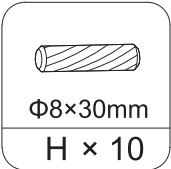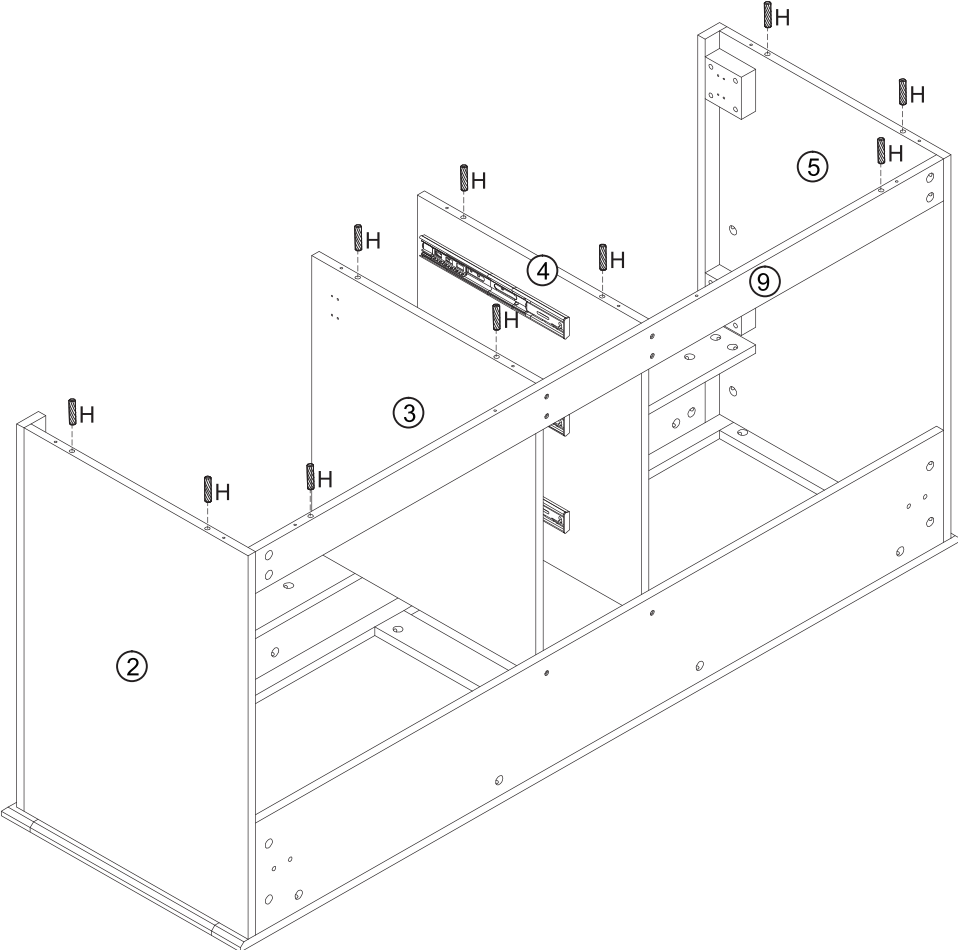



Step 20

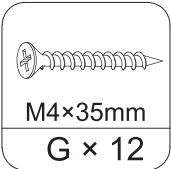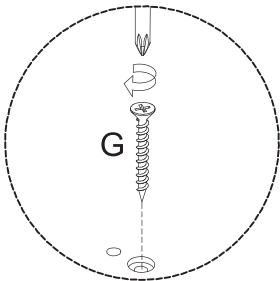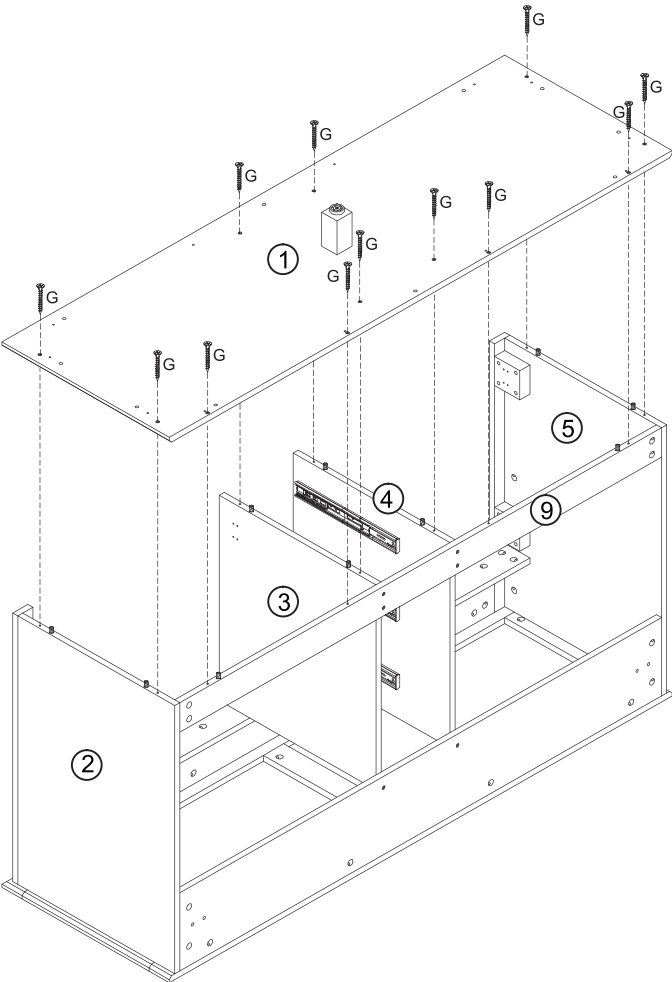



Step 21

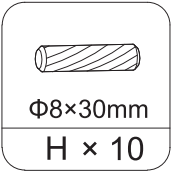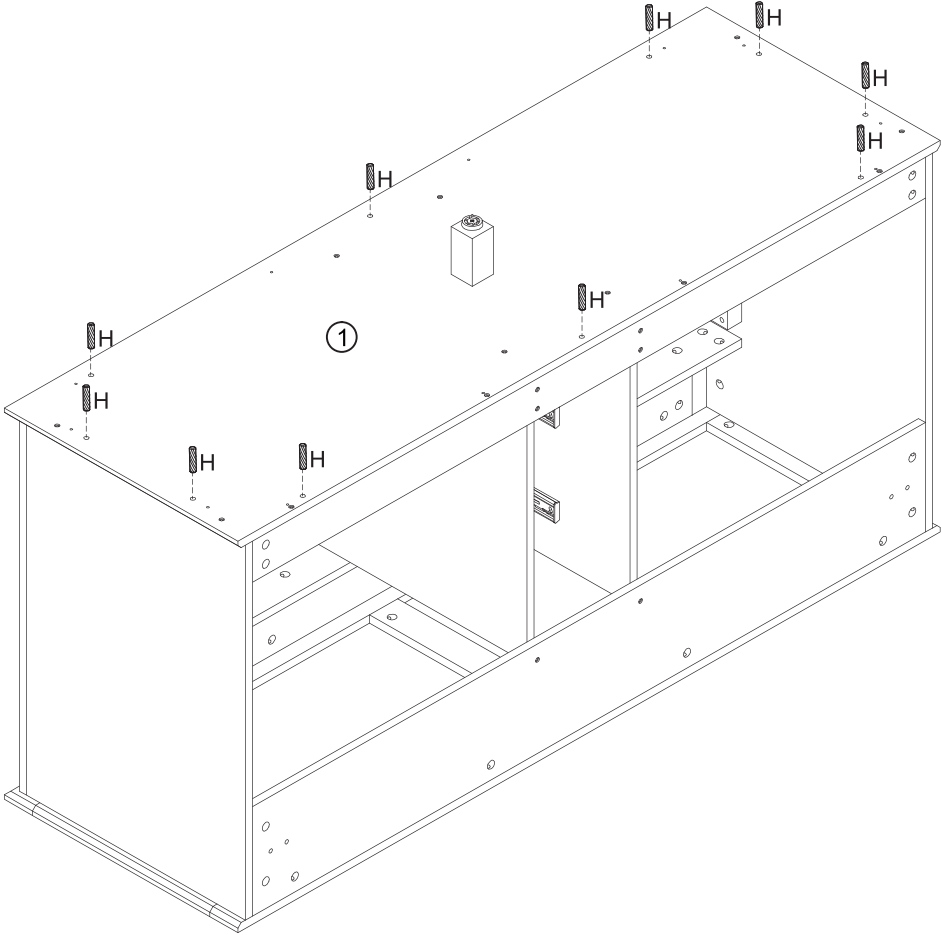



Step 22

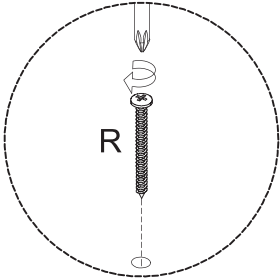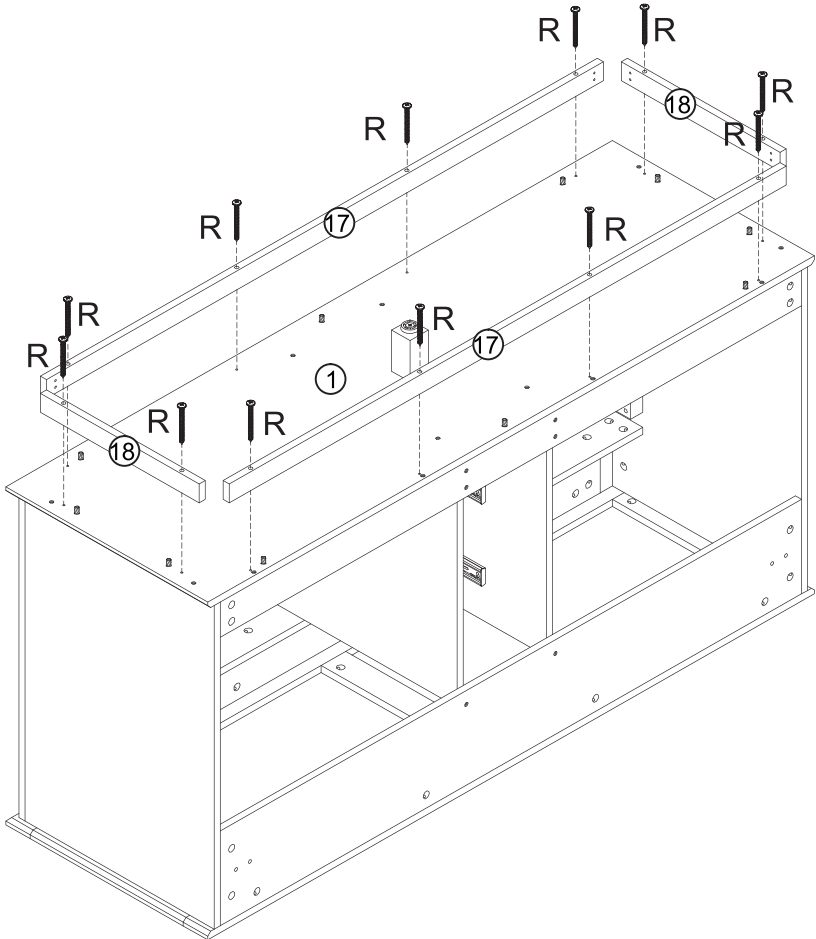


Step 23

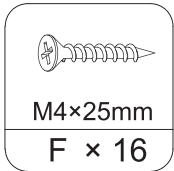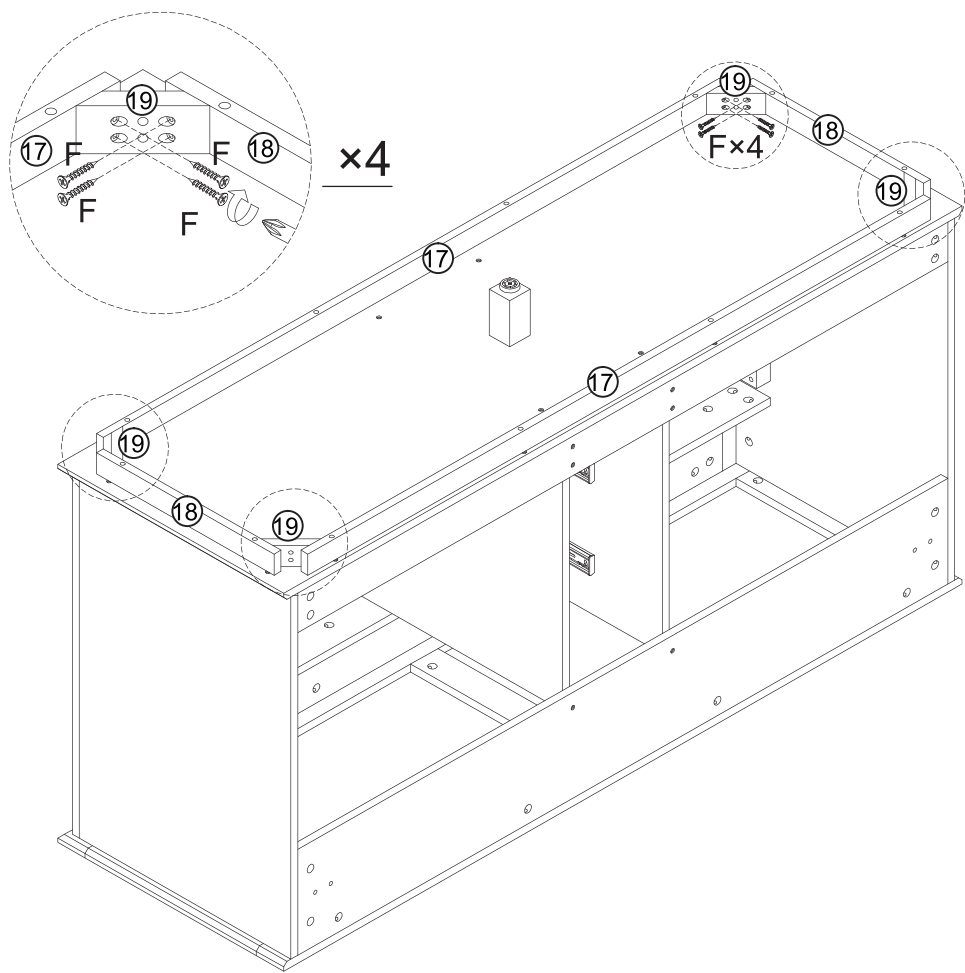


Step 24

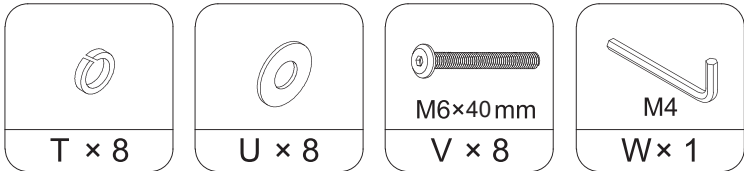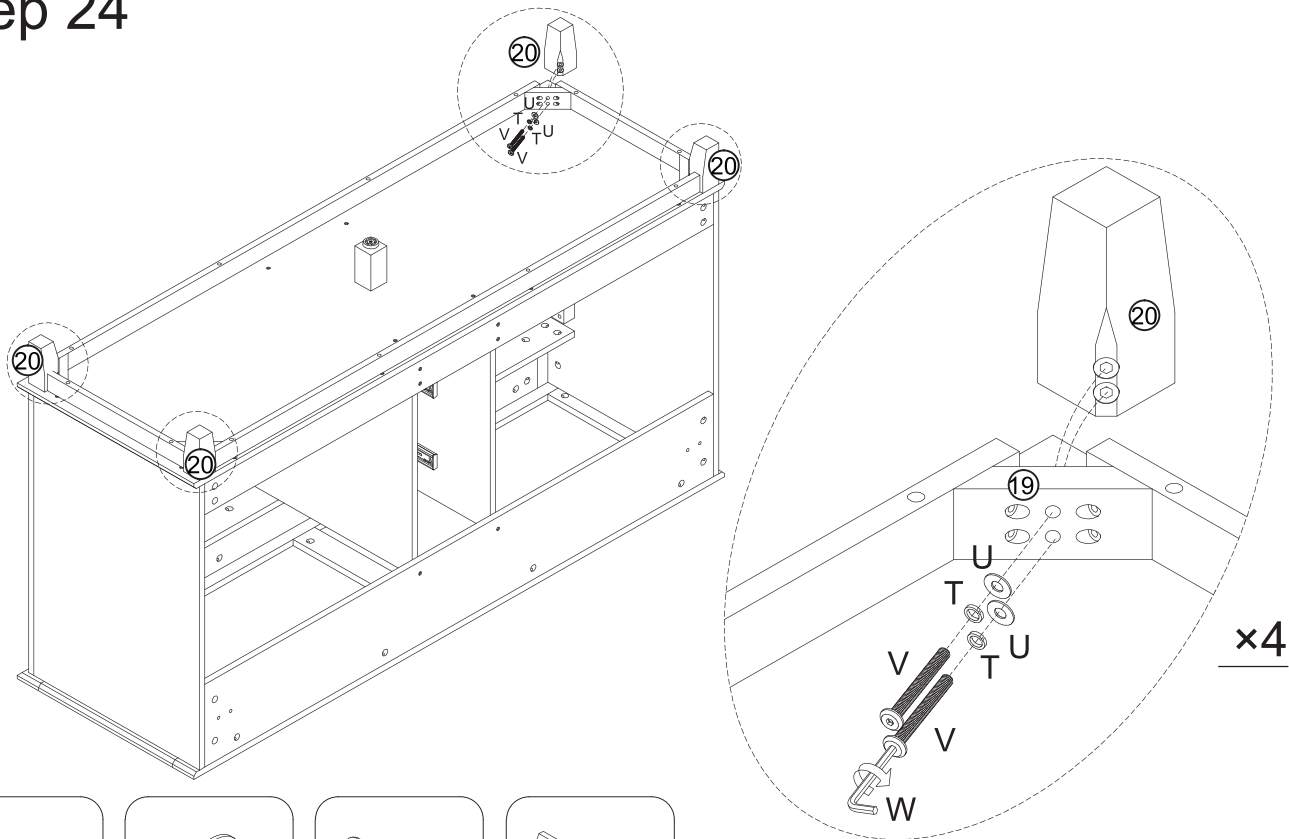






Step 25

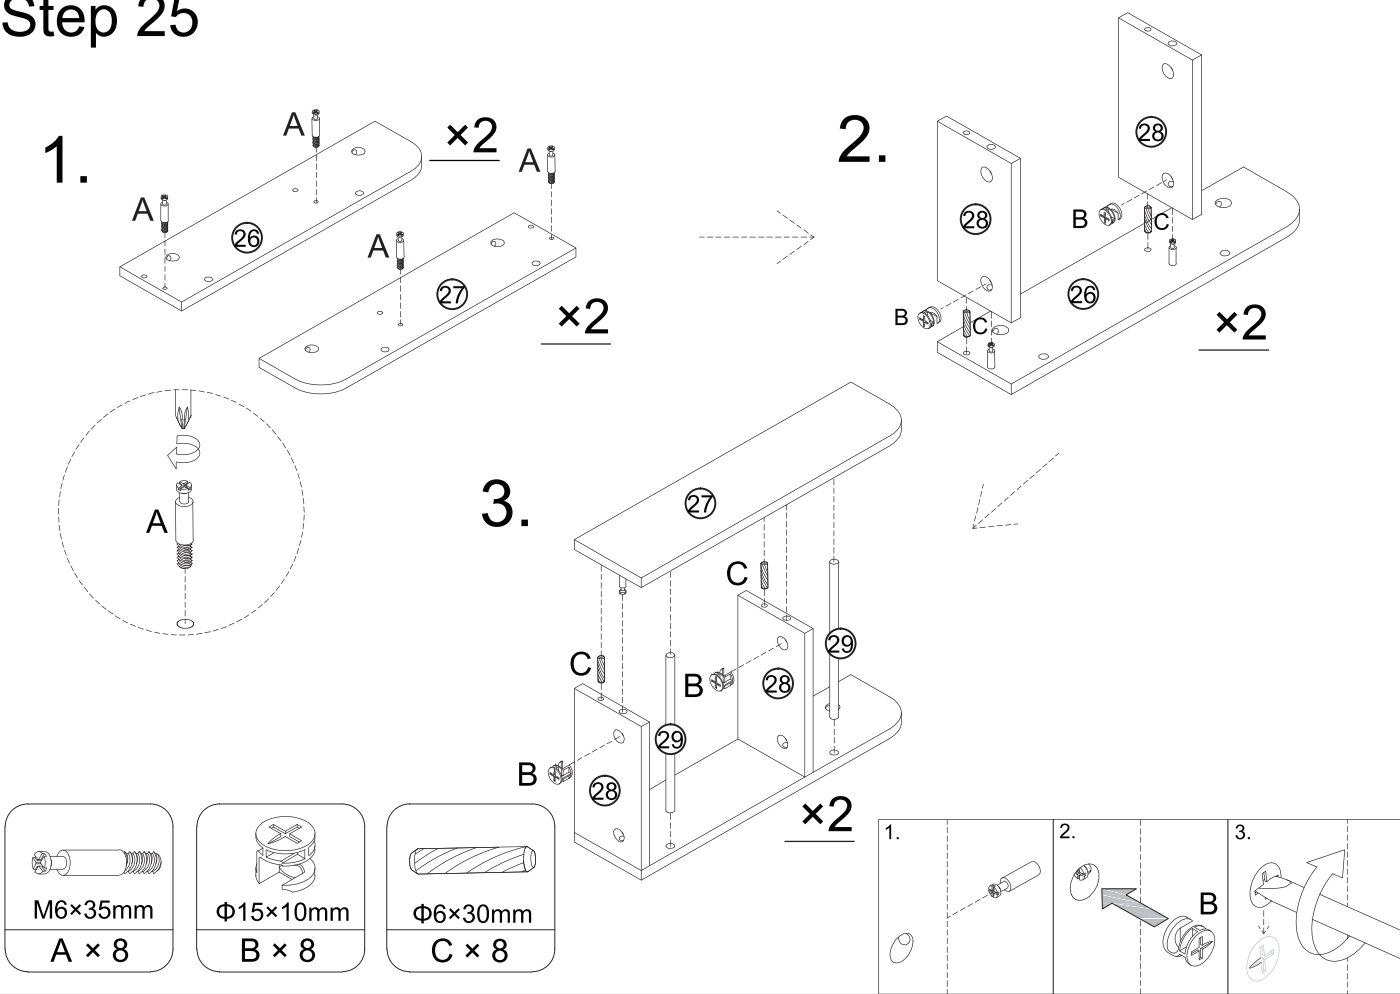






Step 26

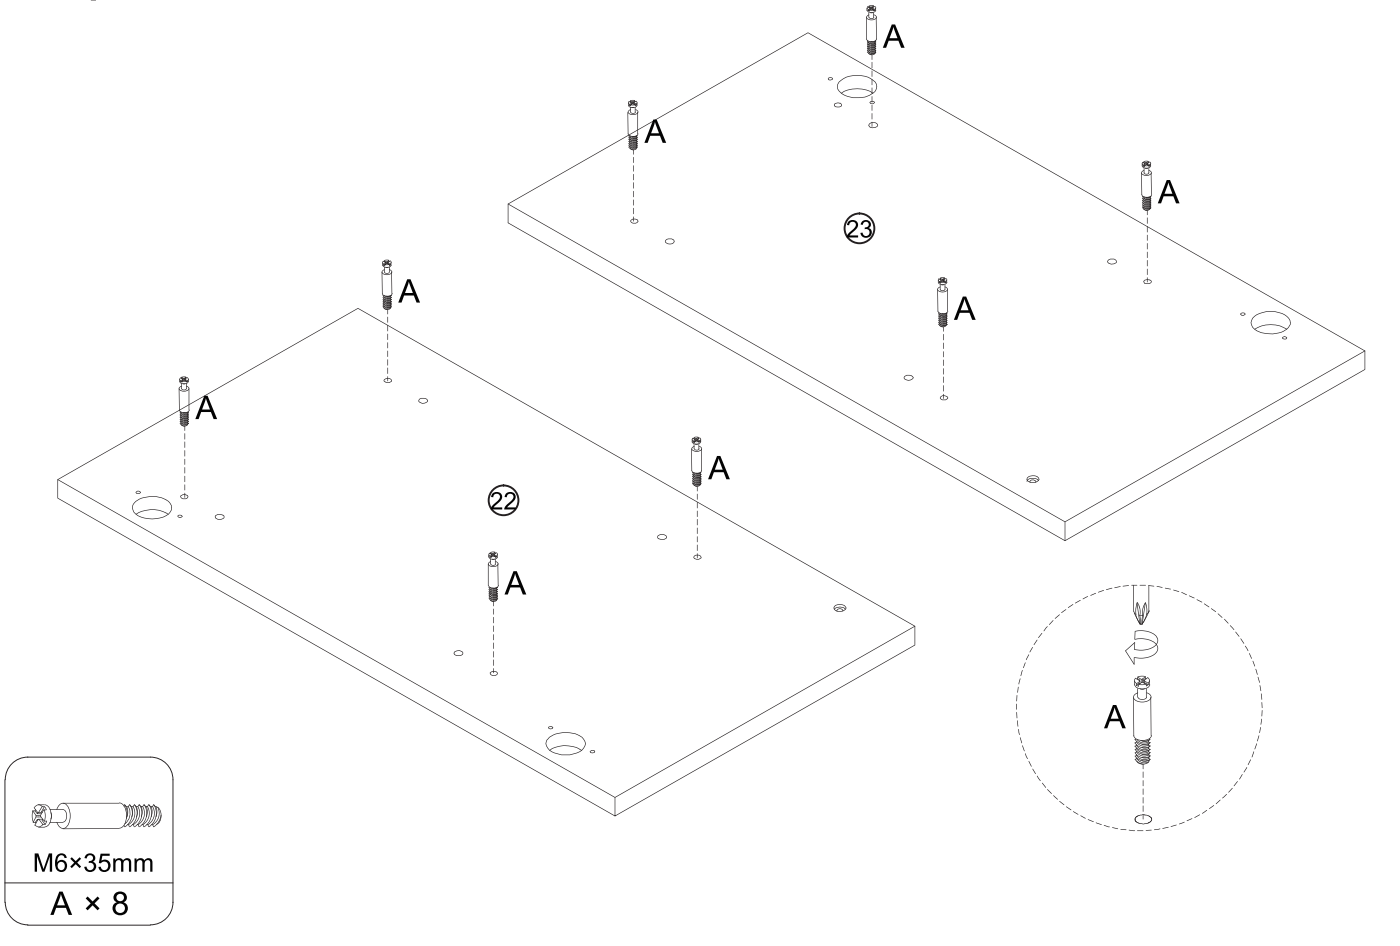


Step 27

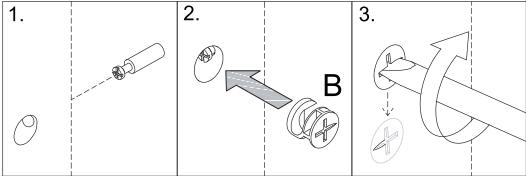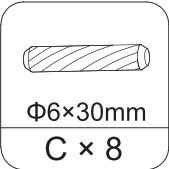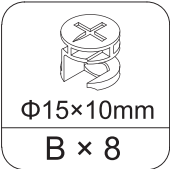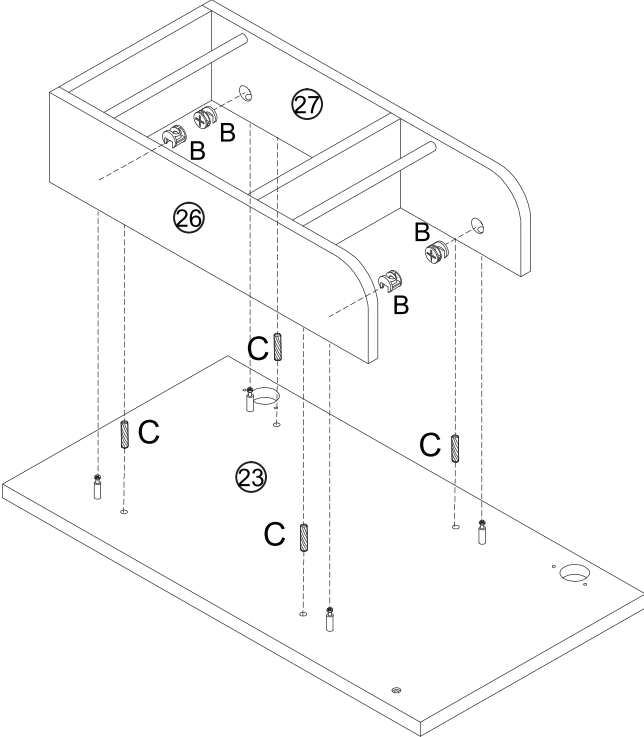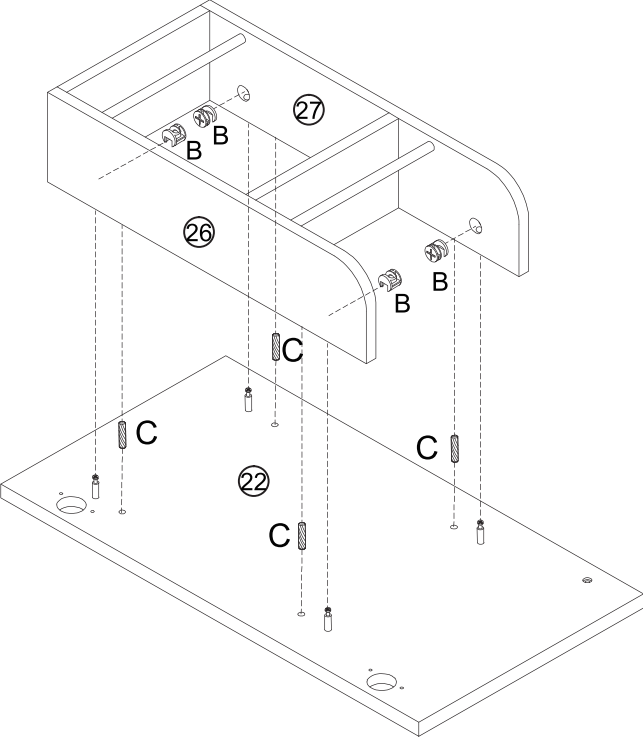


Step 28

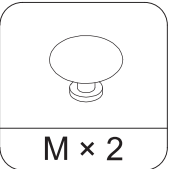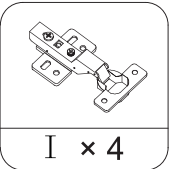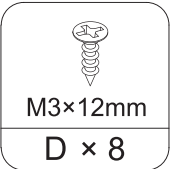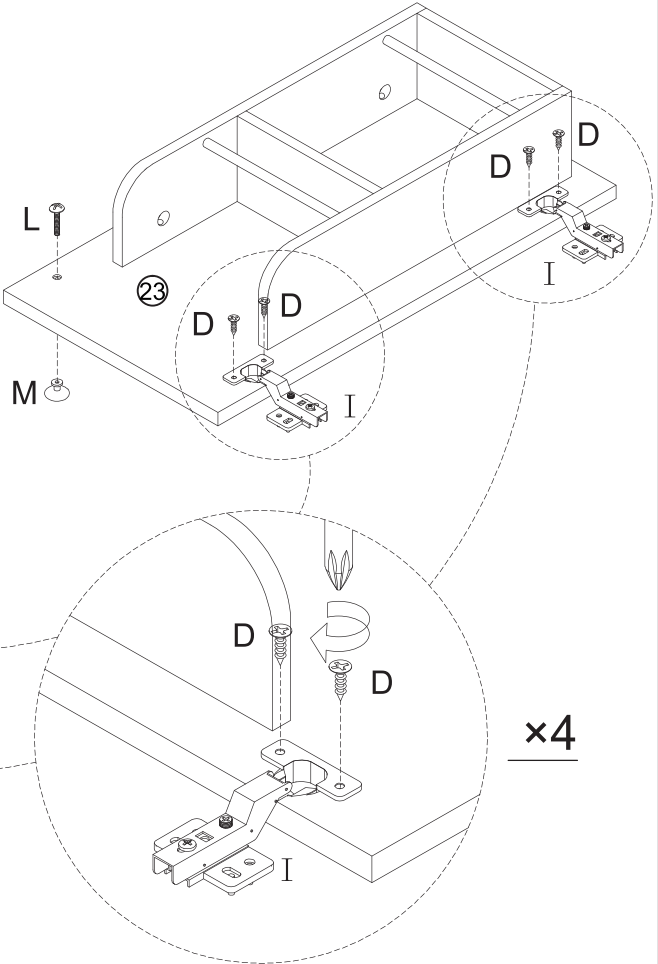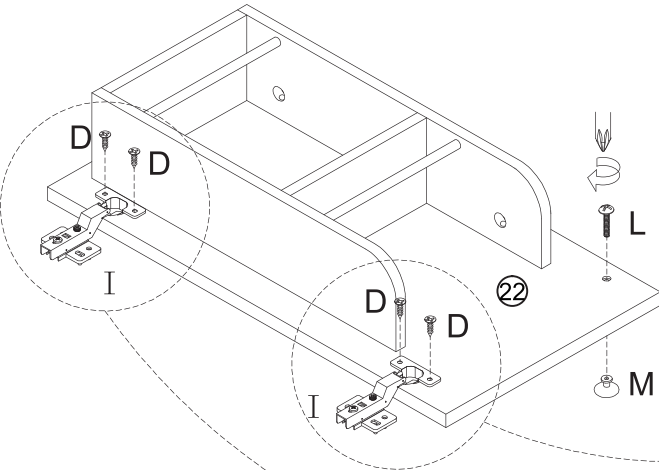


Step 29

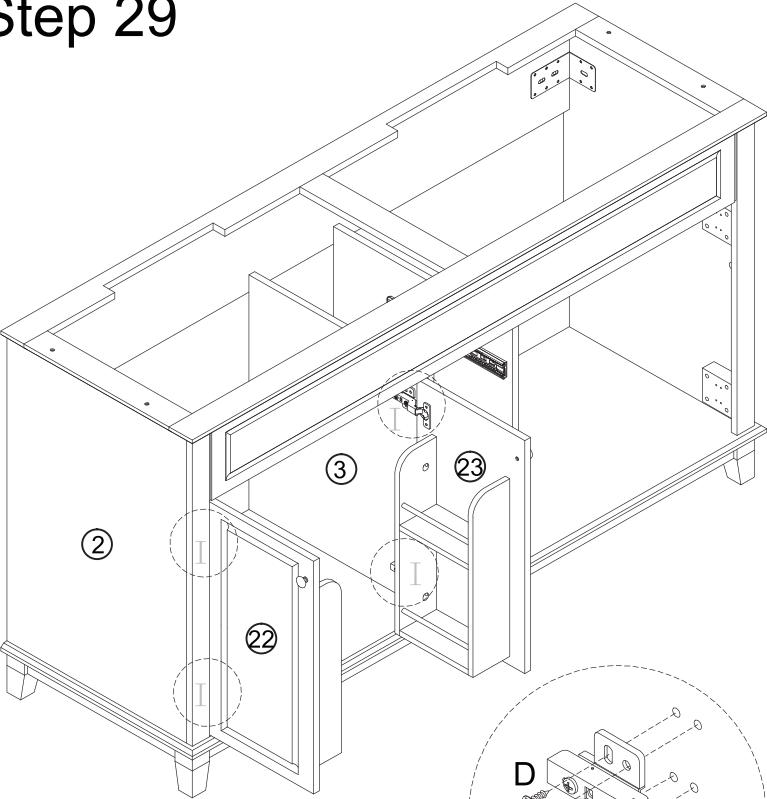


SETTING S DOORS

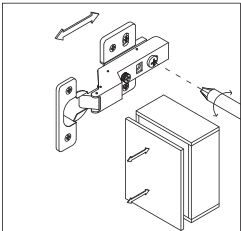


If the hinge holes are not aligned, you can try adjusting the front and rear hinges.

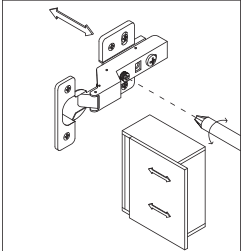

If the door gap is large, you can adjust the hinges left and right


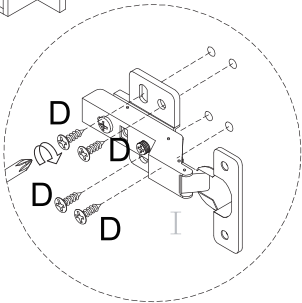


×4

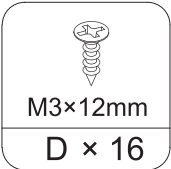


M3×12mm
D × 16


Step 30

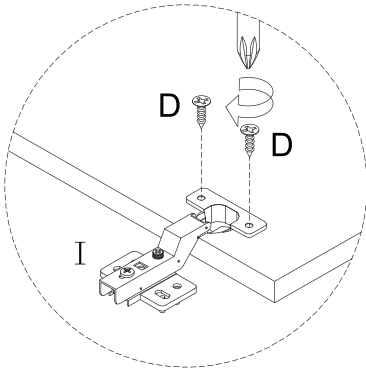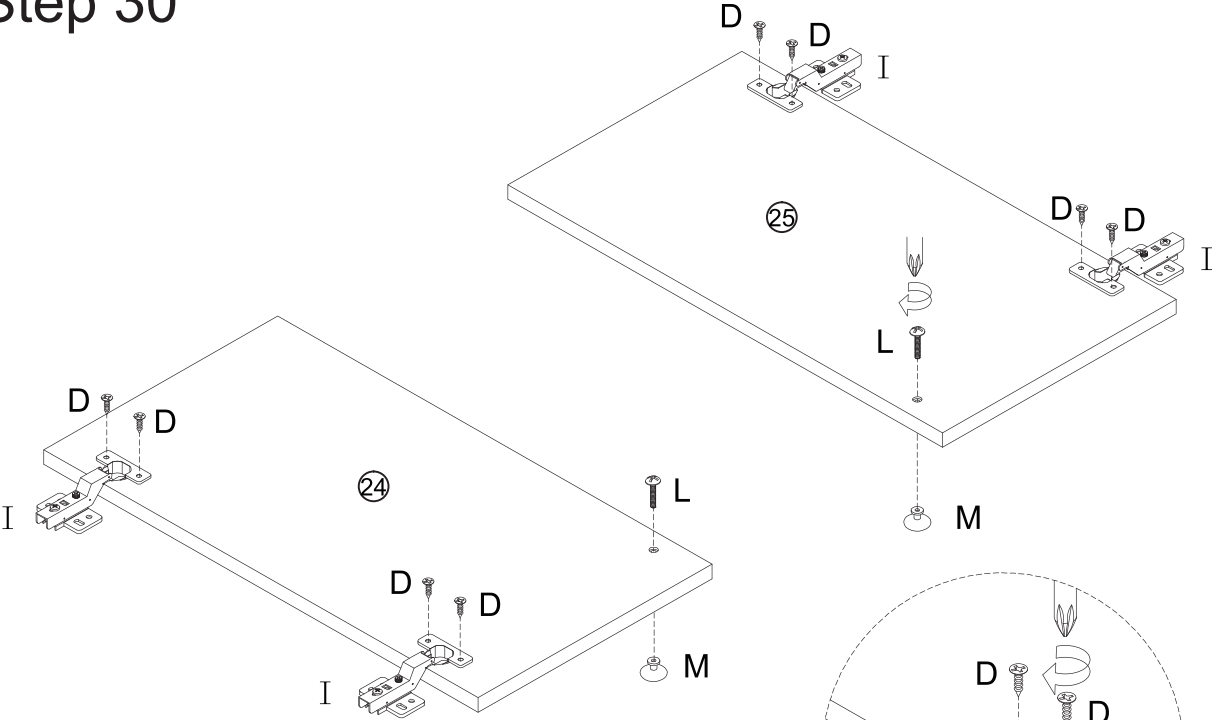

×4

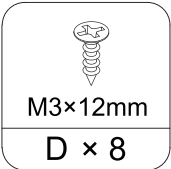


M3×12mm
D × 8

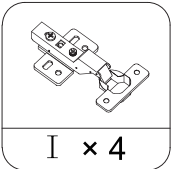

I × 4




M4×16mm
L × 2

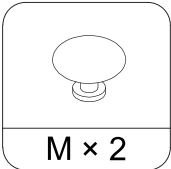


M × 2


Step 31

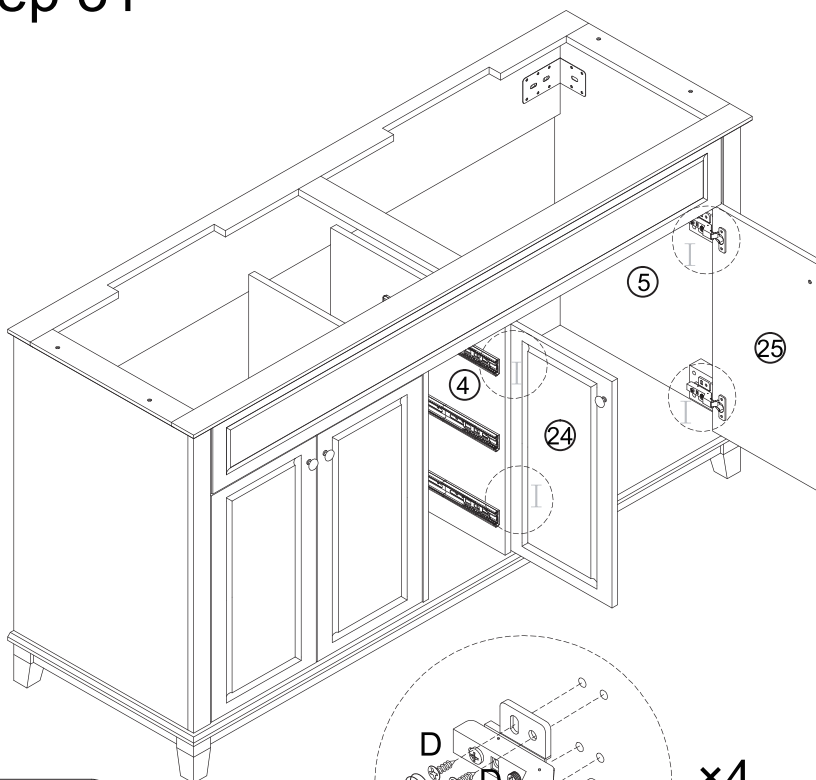


SETTING S DOORS

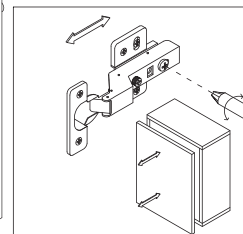


If the hinge holes are not aligned, you can try adjusting the front and rear hinges.

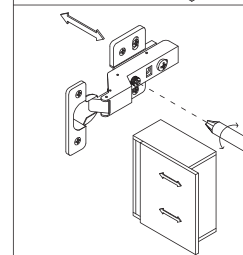


If the door gap is large, you can adjust the hinges left and right

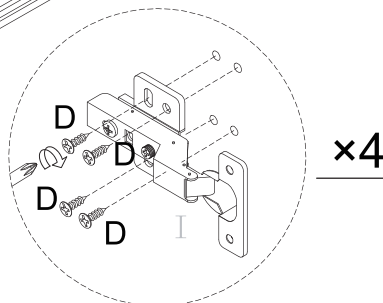


×4

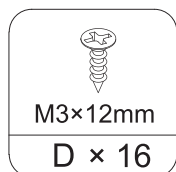





Step 32

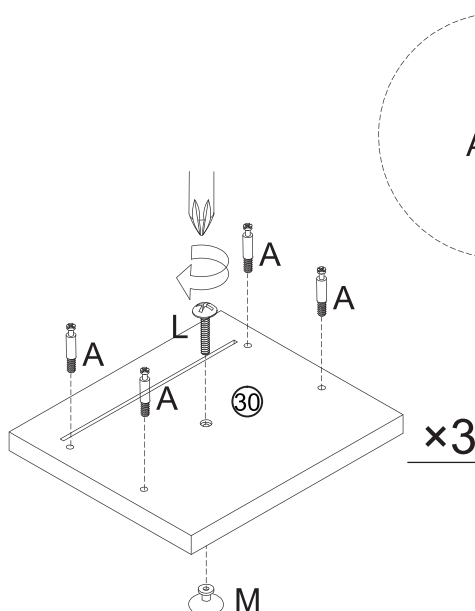




×3

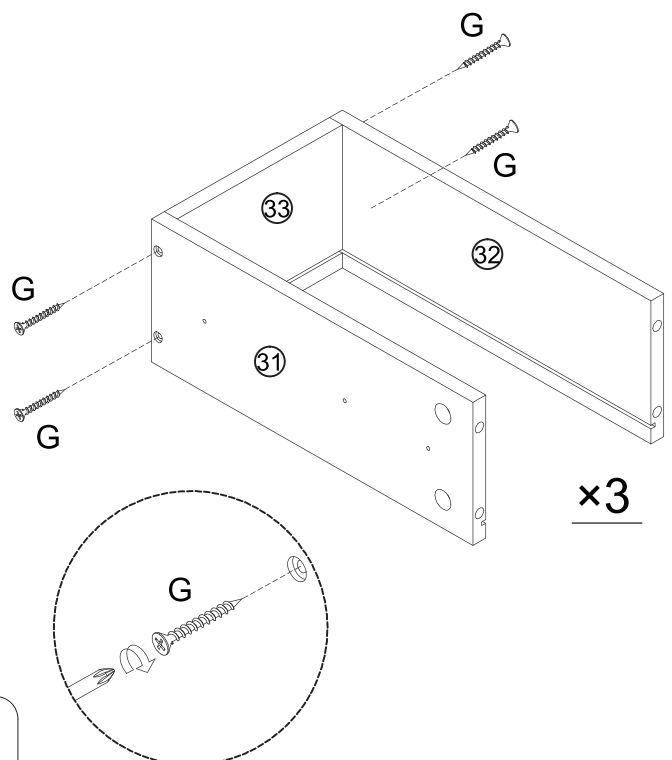



×3

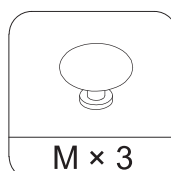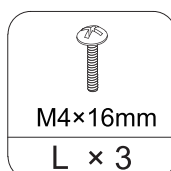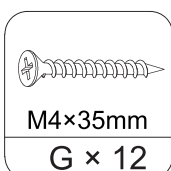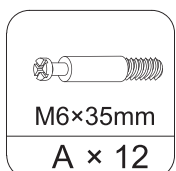


Step 33

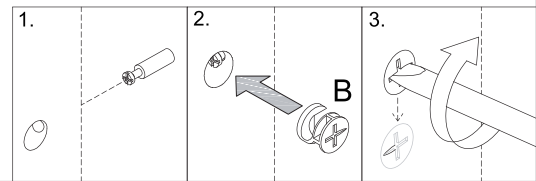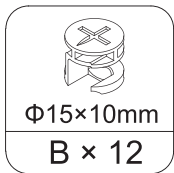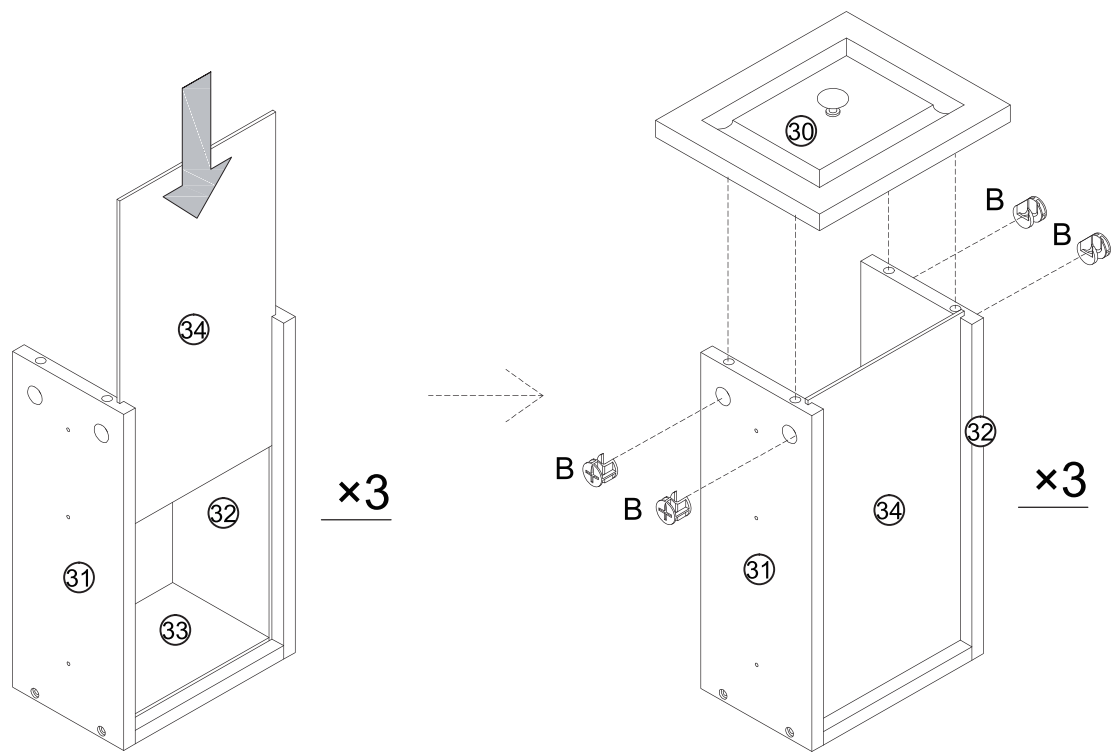



Step 34

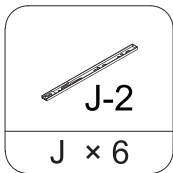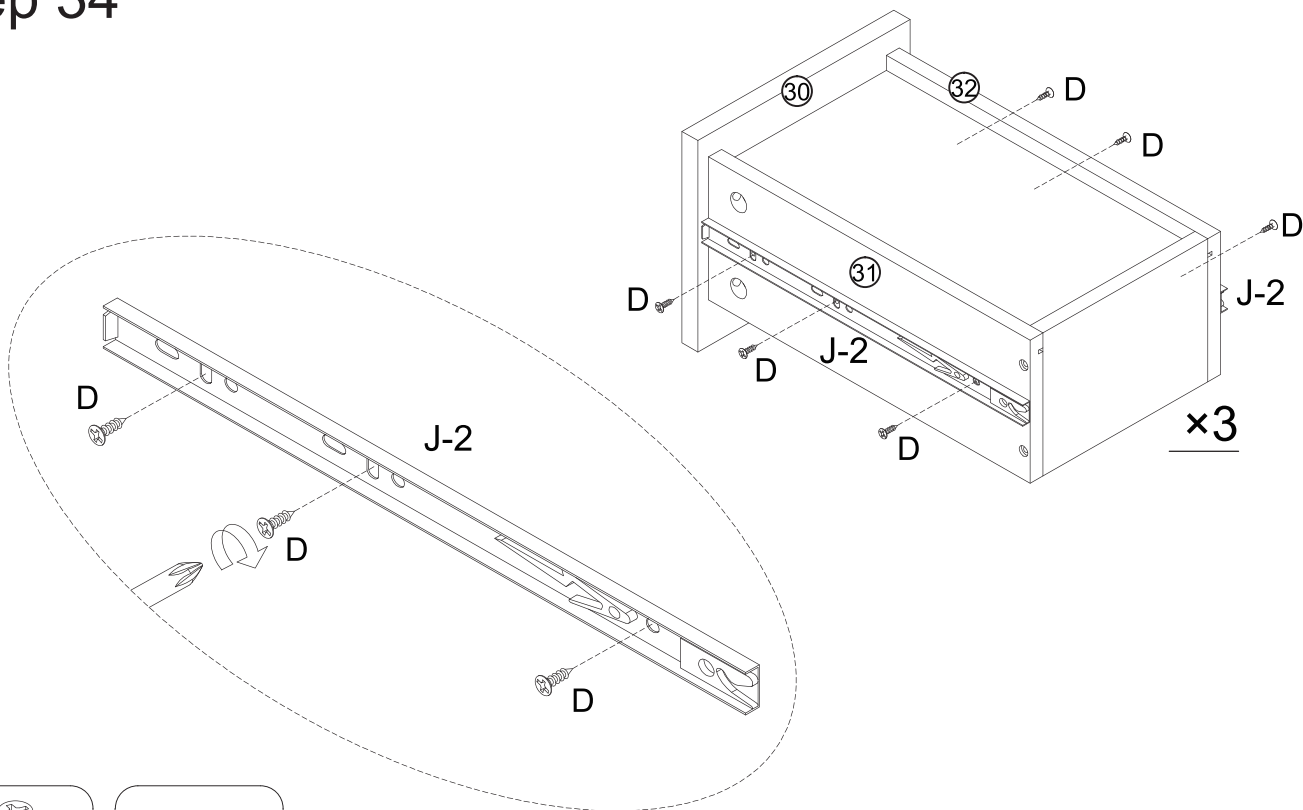



Step 35

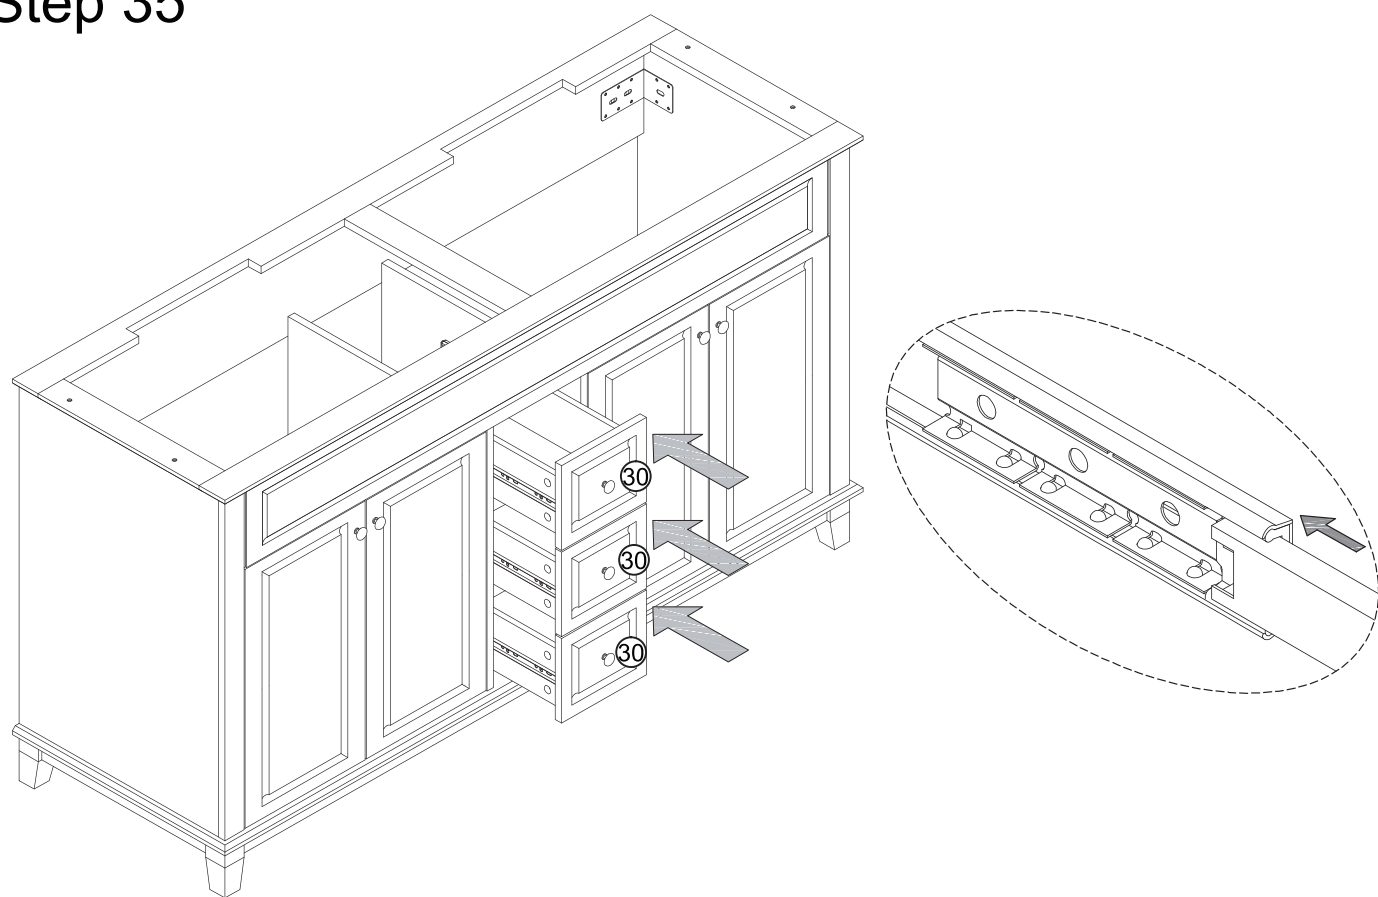



Step 36

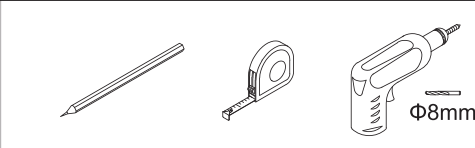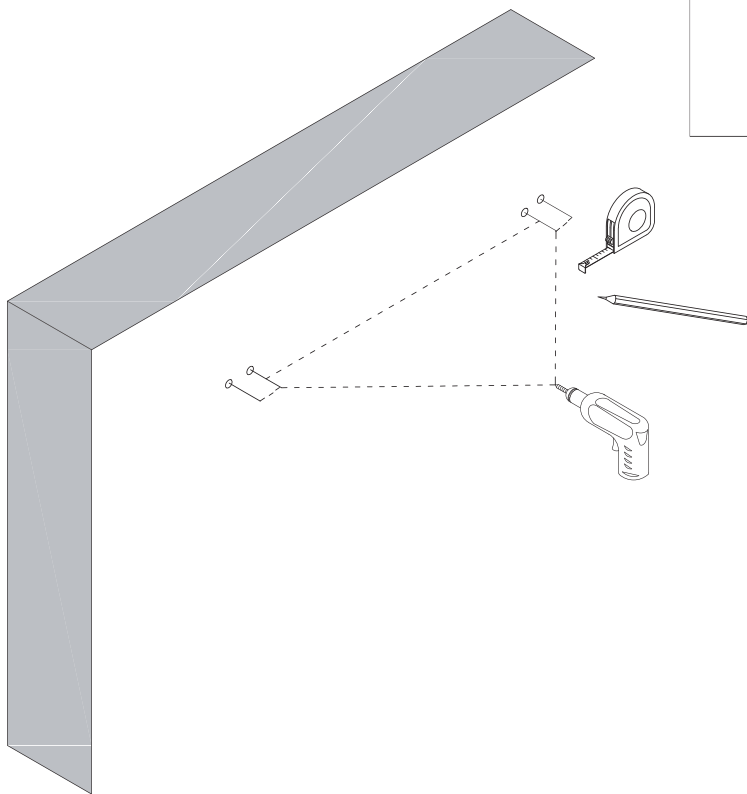


Step 37

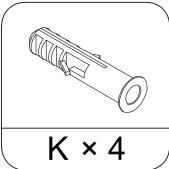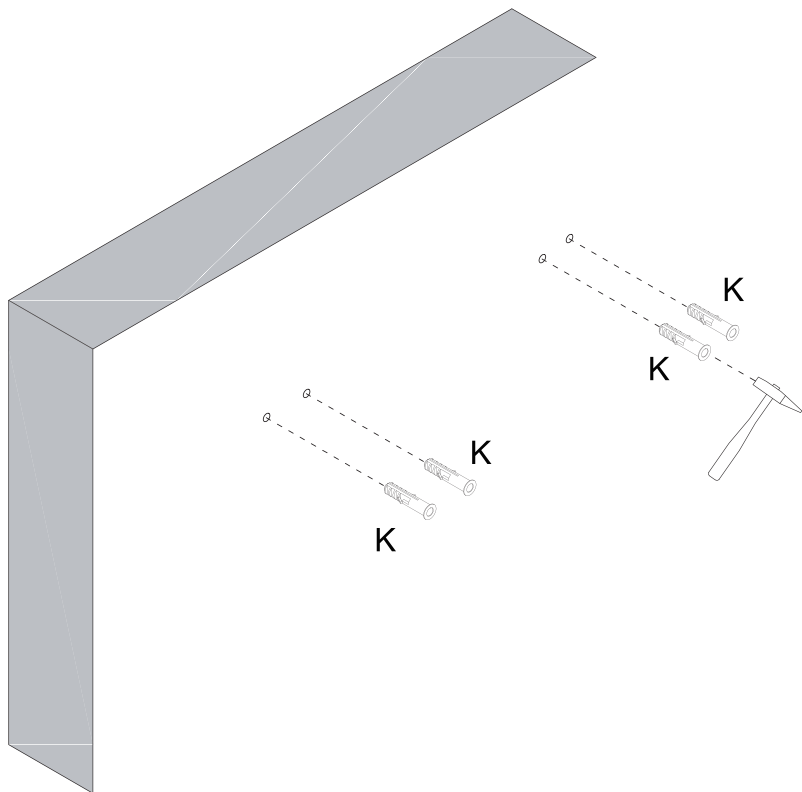

Step 38

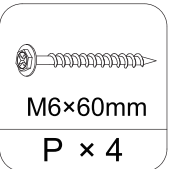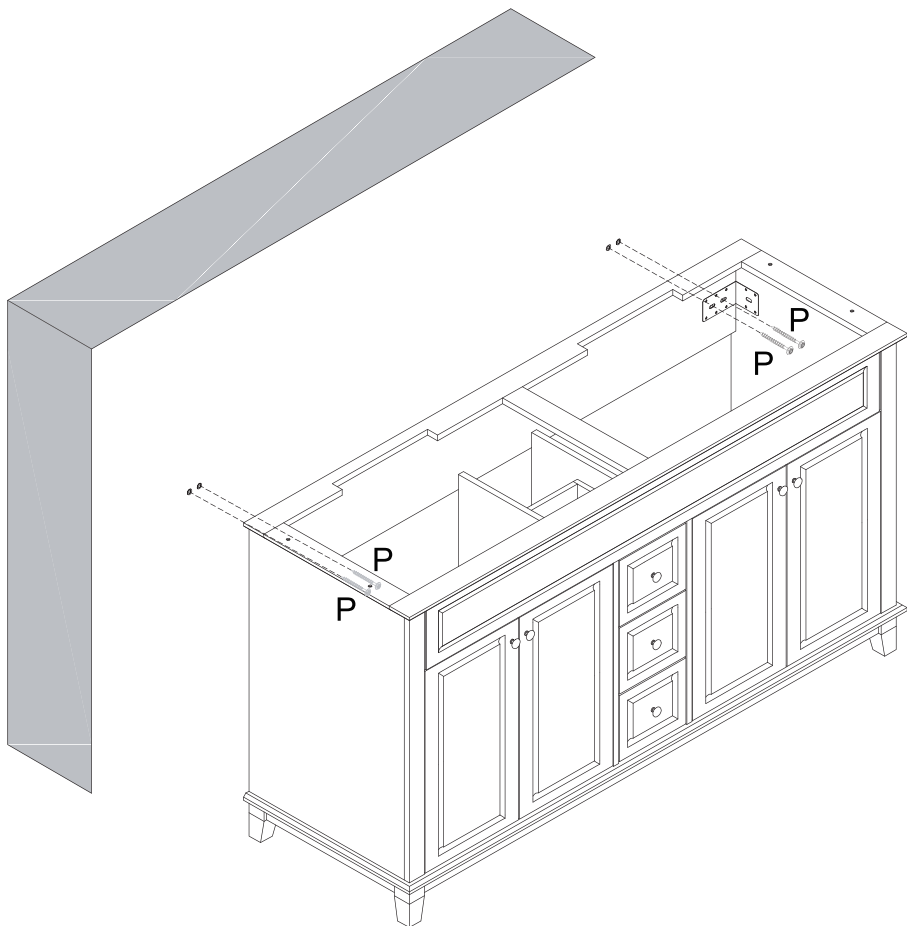

Step 39

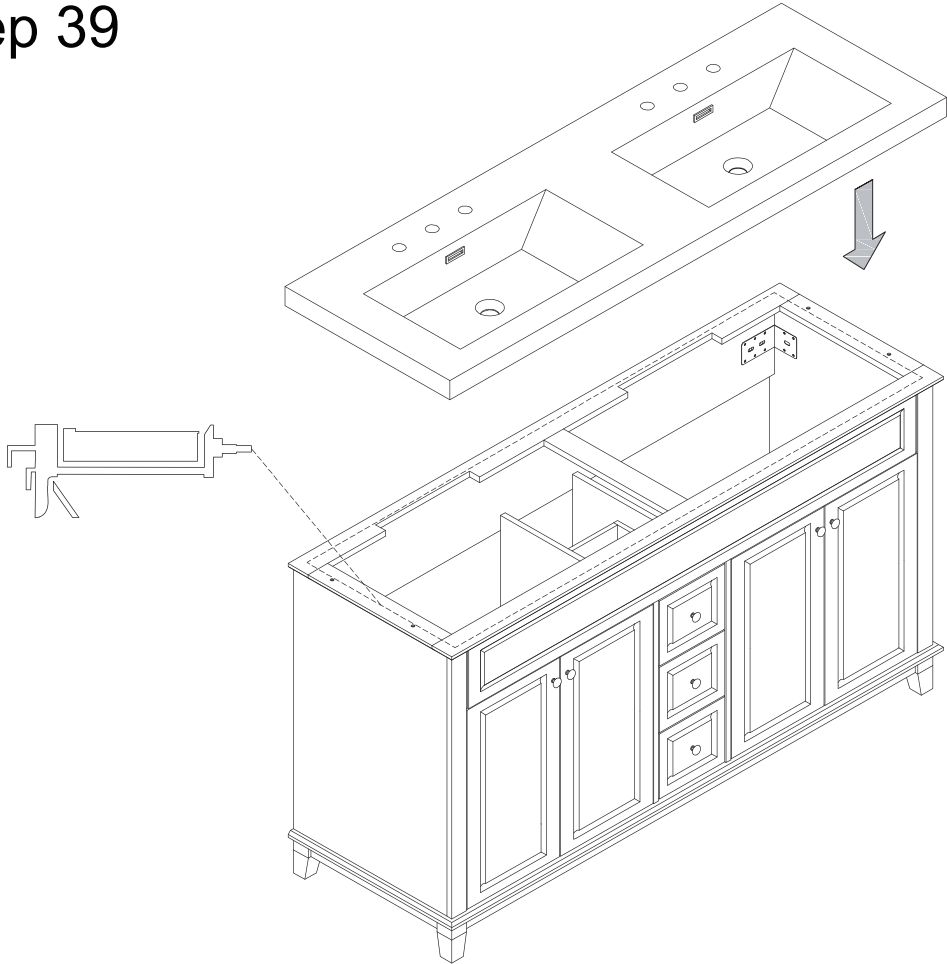

Step 40

