

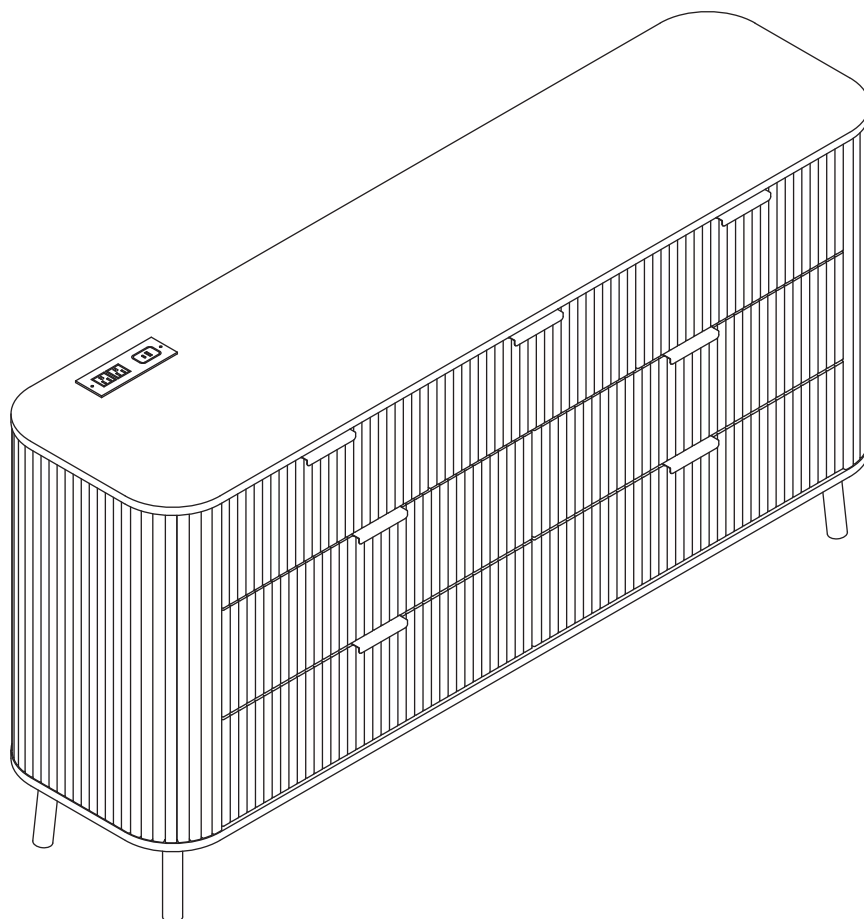
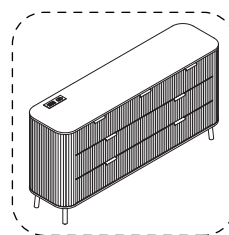
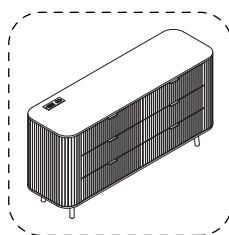


ASSEMBLING INSTRUCTION

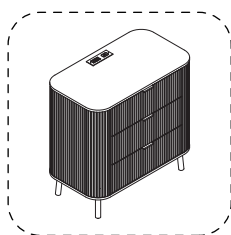

Furniture Set

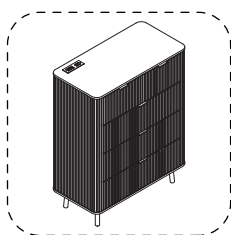

Warm Tips: If you experience any issues with damaged or missing parts, or notice a quality defect, we kindly ask you to share the part number along with photos of the issue. Once we have reviewed and confirmed the details, we will provide appropriate solutions, including arranging a replacement. We sincerely appreciate your understanding and patience! This instruction booklet contains important safety information. please read and keep for future reference.

TIPS BEFORE YOU START


1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the unit is assembled on a soft surface such as carpet or blanket to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools, as power tools can strip threads if over tightened.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.


CARE AND MAINTENANCE OF YOUR FURNITURE











- ☑ Please periodically check all fittings and re-tighten as necessary.
- ☑ From time to time check that there are no loose screws on this unit.
- ☑ To clean glass, please use glass cleaner.
- ☑ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☑ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☑ When moving this furniture item, The unit must be team lifted, not dragged or pushed
Failure to do so could cause instability, product collapse, and/or serious injury.












ASSEMBLY REQUIREMENTS










- ☑ Equipment: phillips head screwdriver.
- ☑ 2 x adults required.
- ☑ 2m x 2m assembly space required.
- ☑ 1.5 hour assembly time approx.

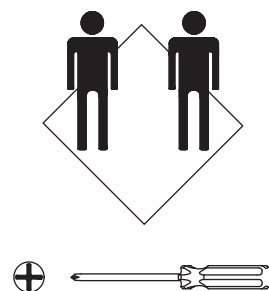

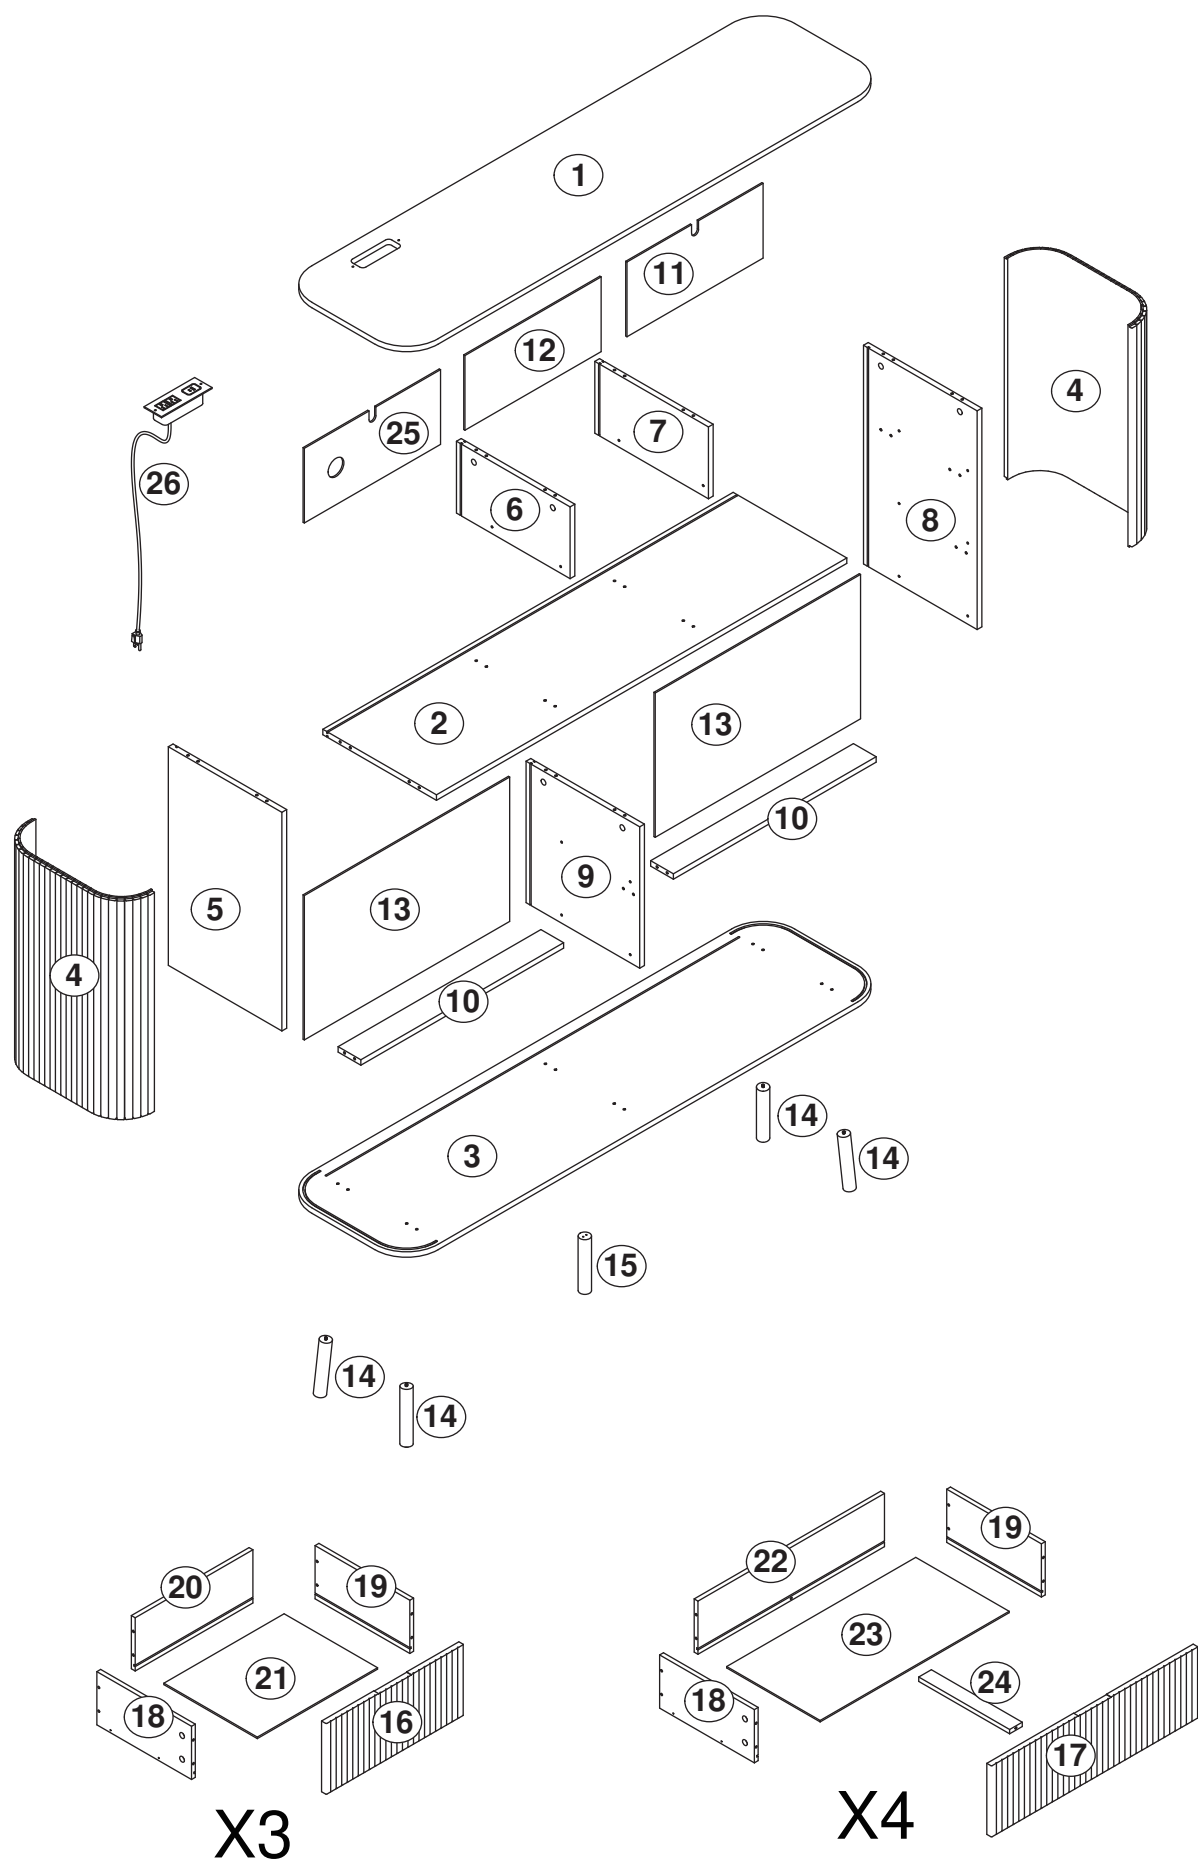


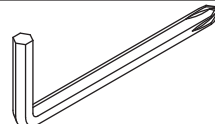A		50	O		2
B		50	P		2
C		28	Q		1
D	 M4*40mm	12	R		50
E	 M4*30mm	34			
F		20			
G	 M3*14mm	22			
H	 M4*14mm	26			
I		4			
J		1			
K		1	CL		7
L	 M3*10mm	14	CR		7
M		7	DL		7
N	 M3*12mm	56	DR		7
P.4/18					

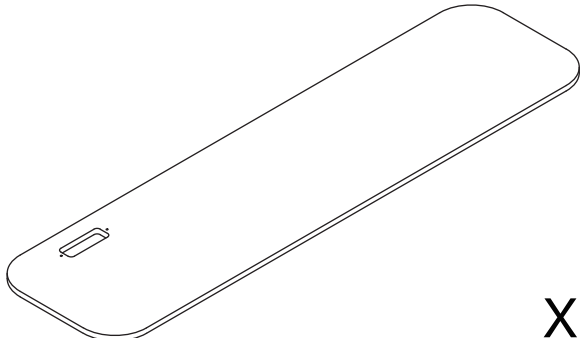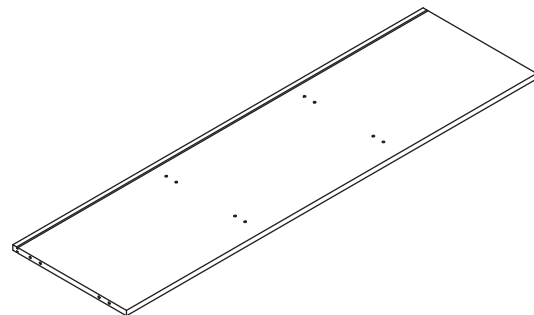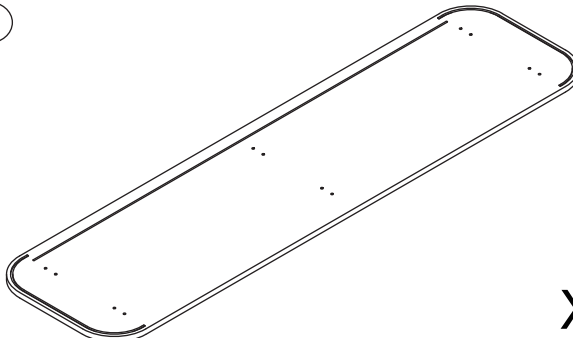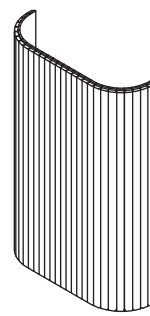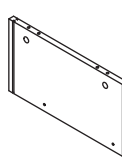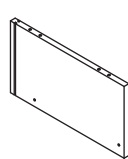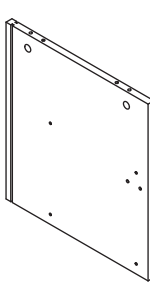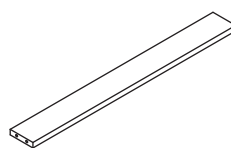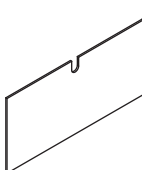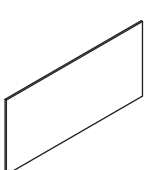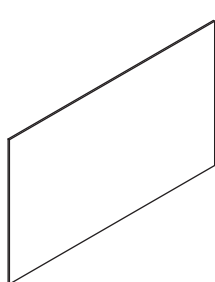
①  X1	②  X1	
③  X1	④  X2	
⑤  X1	⑥  X1	⑦  X1
⑧  X1	⑨  X1	⑩  X2
⑪  X1	⑫  X1	⑬  X2
P.5/18		

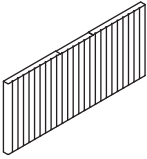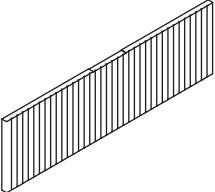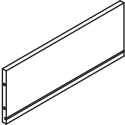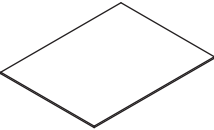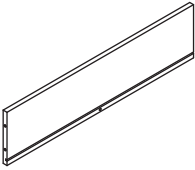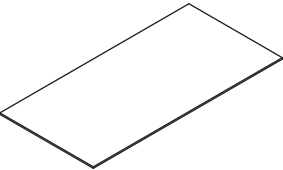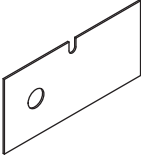⑭  X4	⑮  X1	⑯  X3
⑰  X4	⑱  X7	⑲  X7
⑳  X3	㉑  X3	㉒  X4
㉓  X4	㉔  X4	㉕  X1
㉖  X1		


Step:1

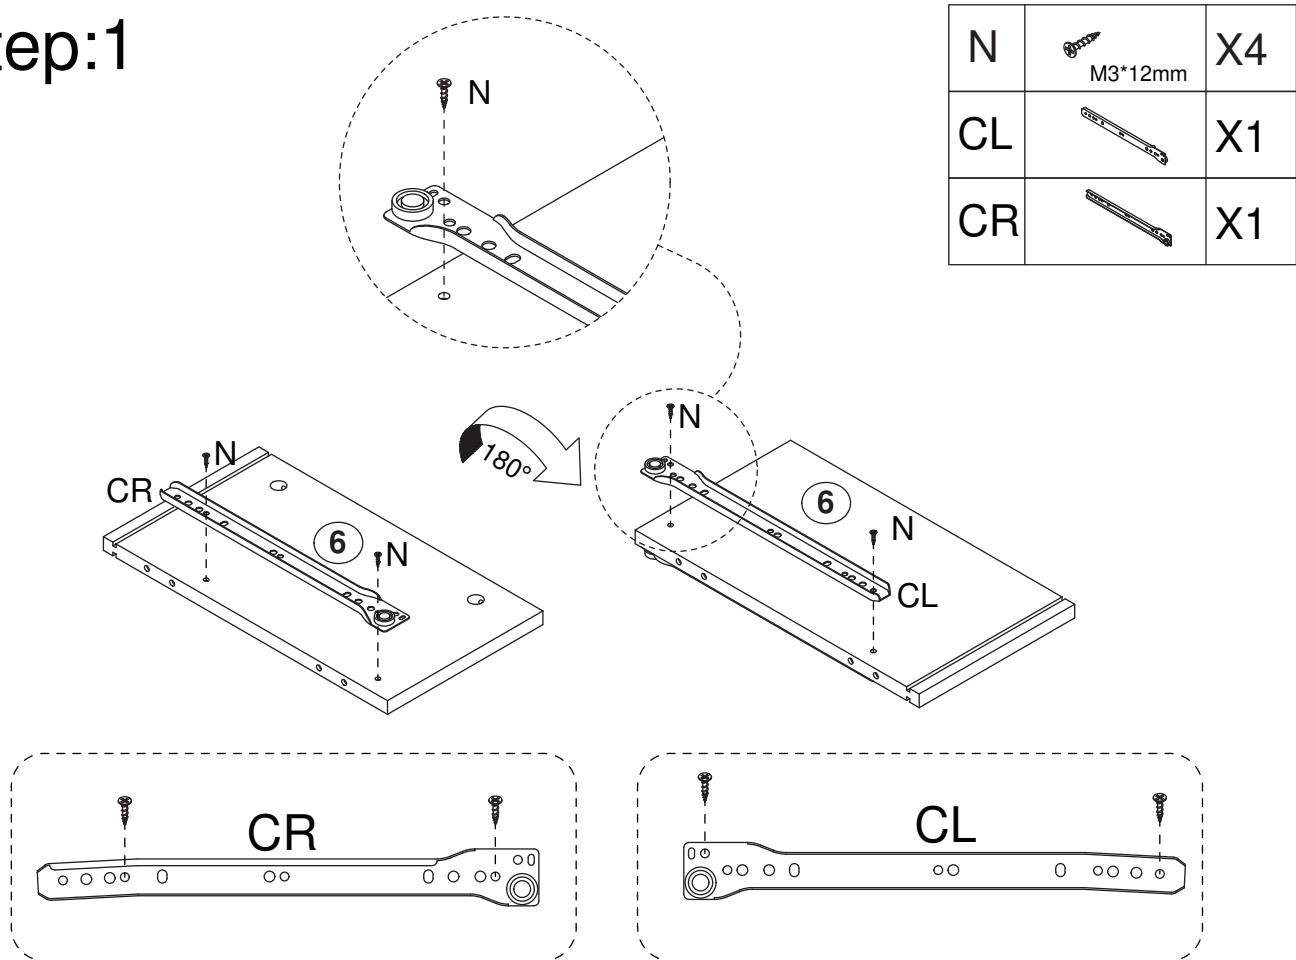



Step:2

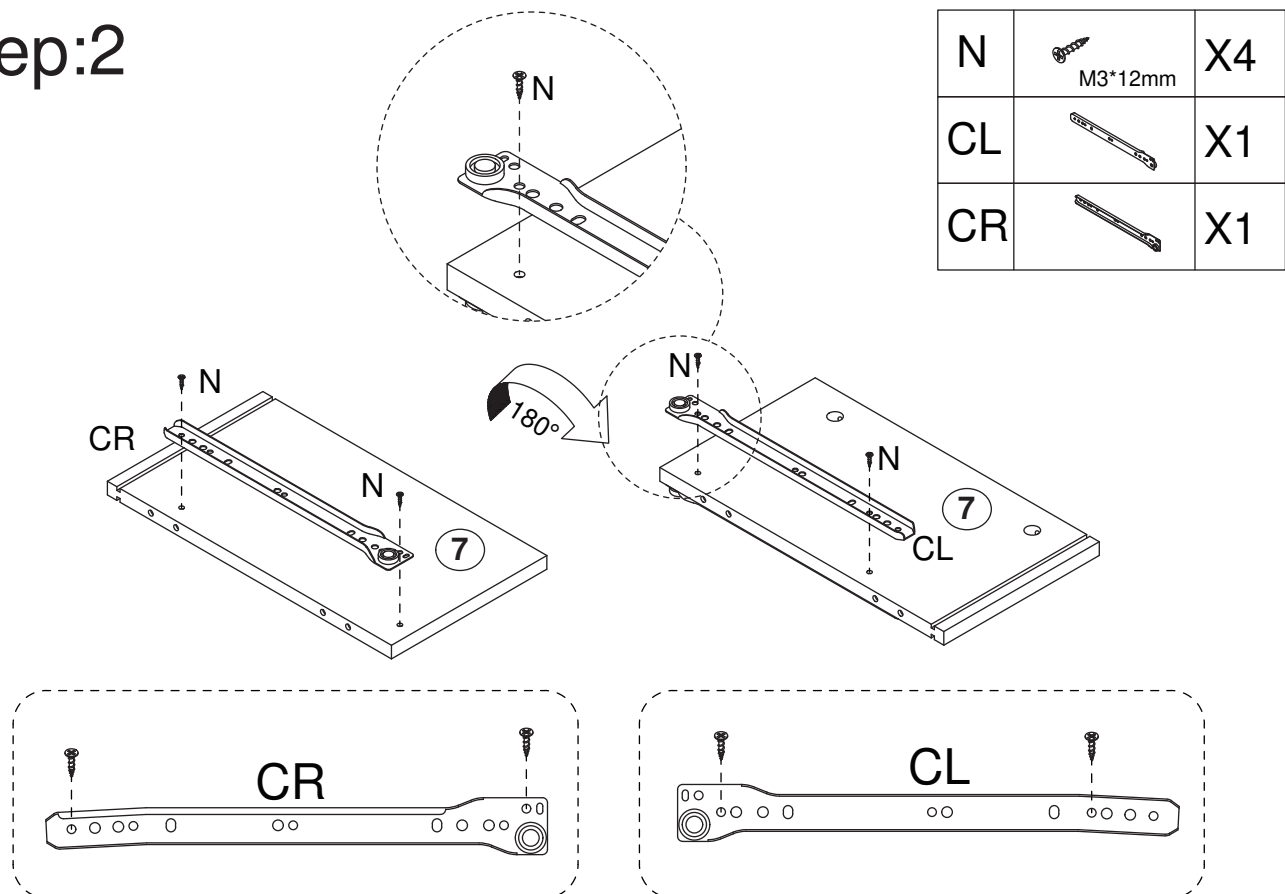



Step:3

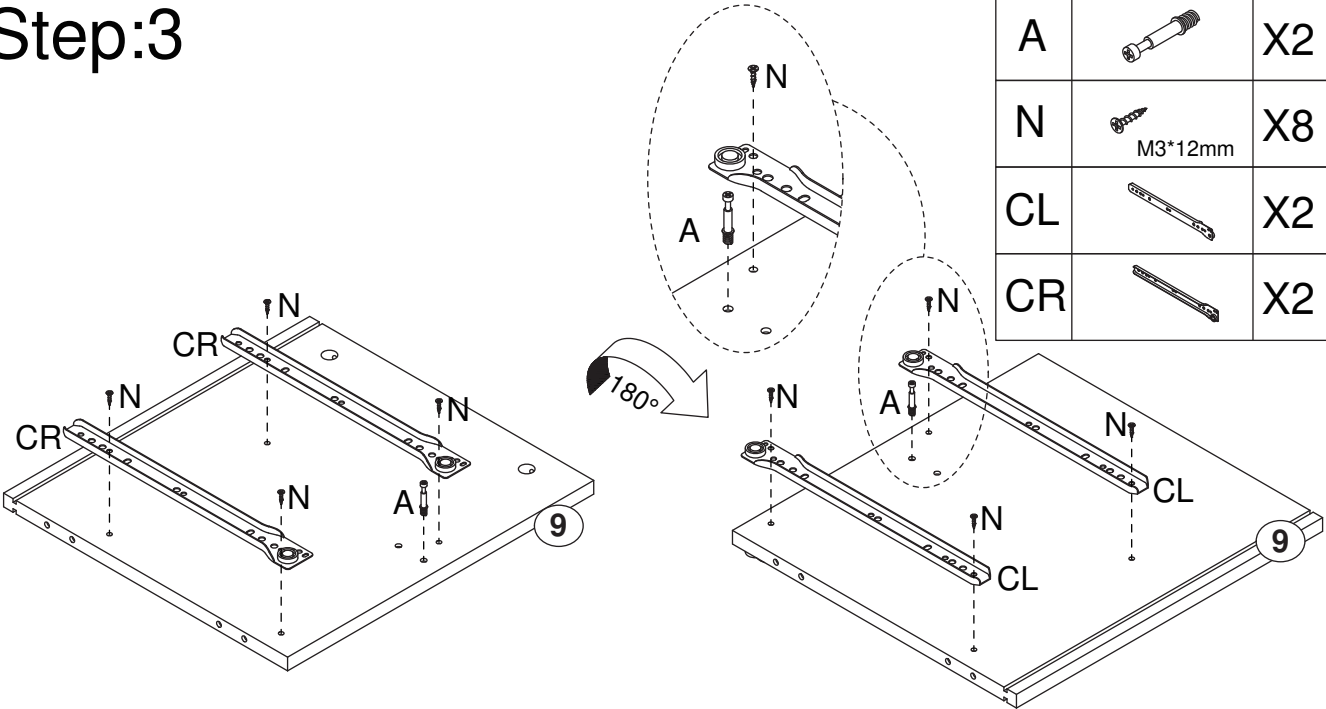


A		X2
N	 M3*12mm	X8
CL		X2
CR		X2

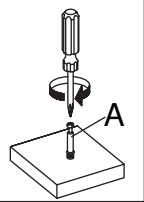


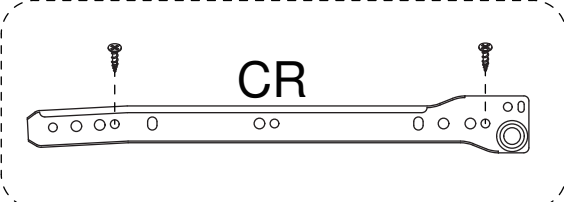


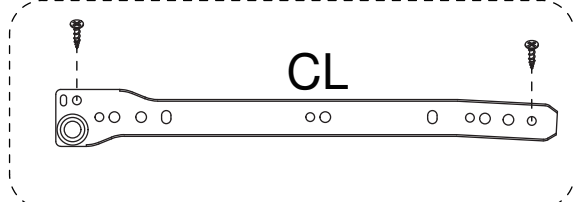


Step:4

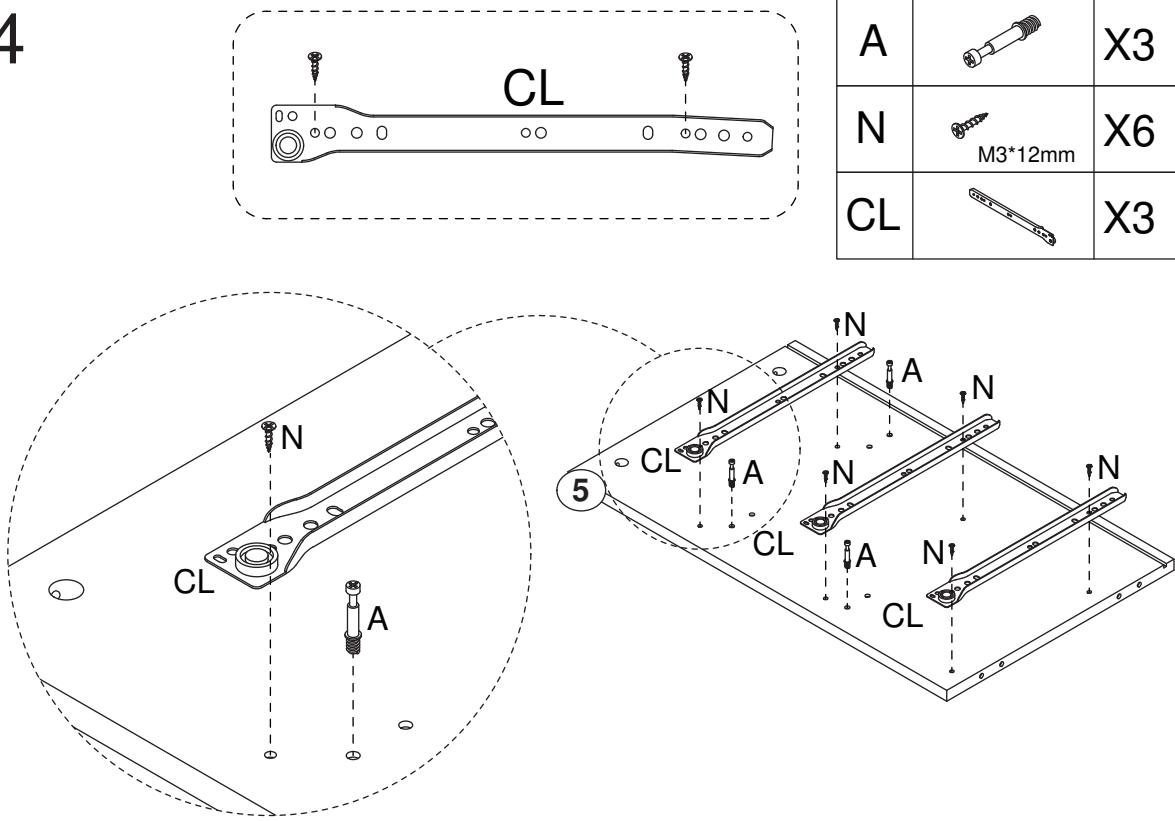



A		X3
N	 M3*12mm	X6
CL		X3

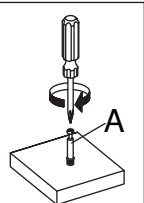


Step:5

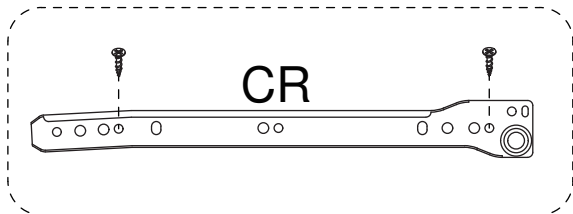


A		X3
N	 M3*12mm	X6
CR		X3

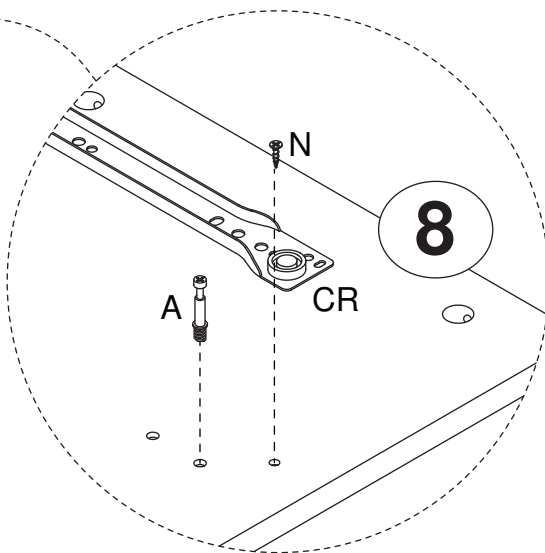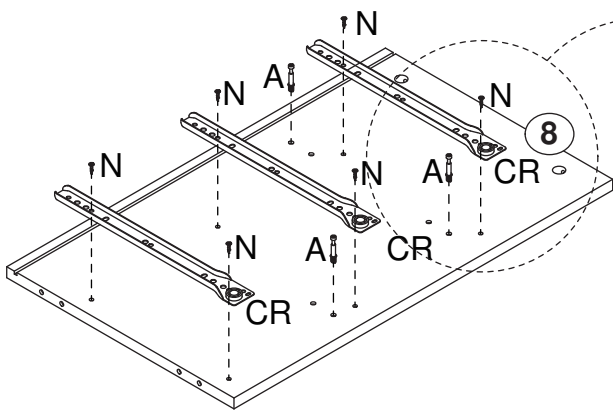

Step:6


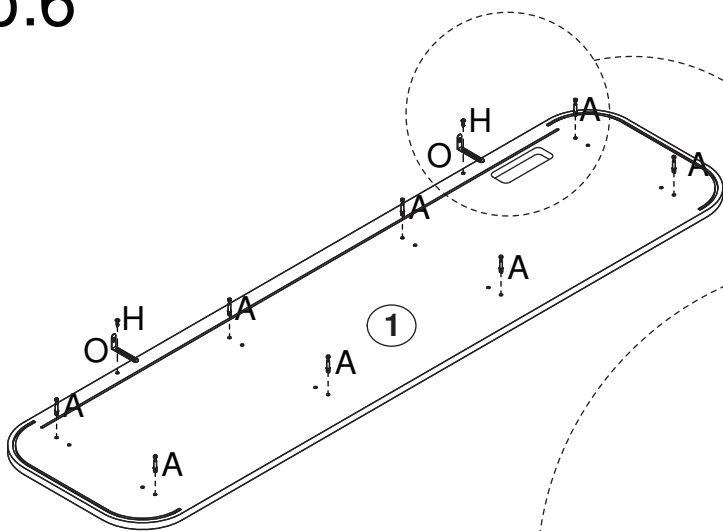


A		X8
H	 M4*14mm	X2
O		X2

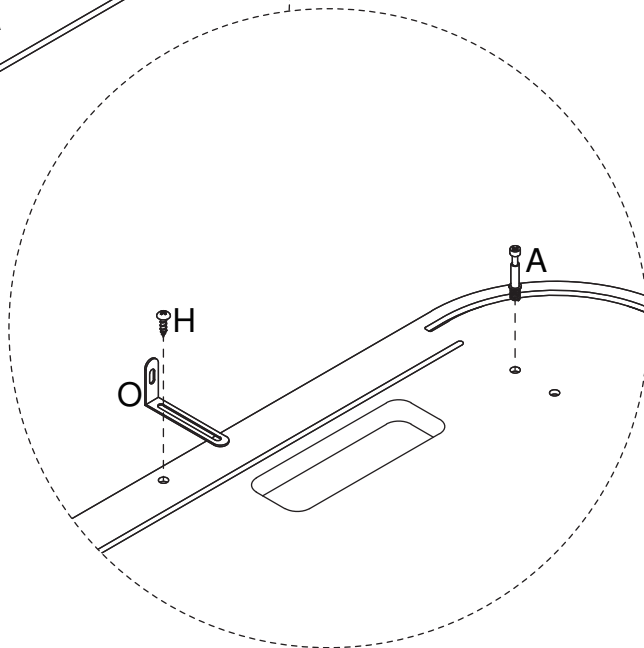



Step:7

A		X2
---	---	----

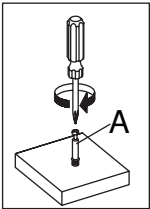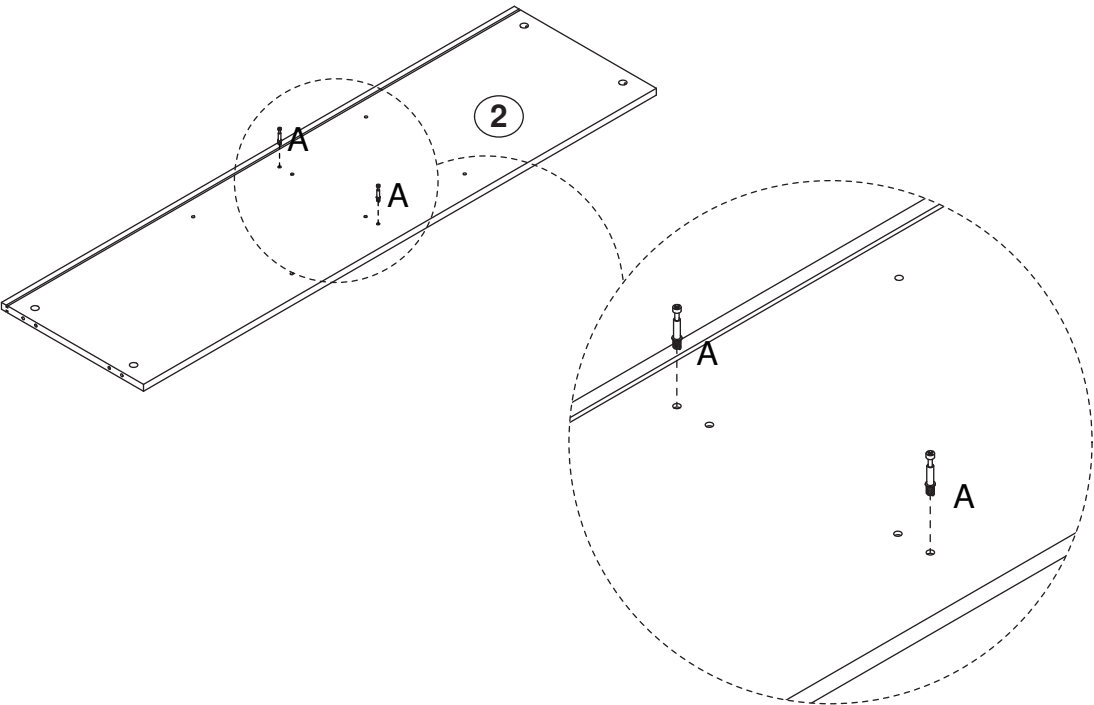


Step:8


B		X2
C		X6
D	 M4*40mm	X4
R		X2

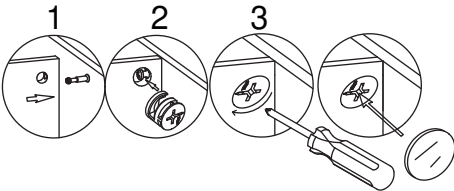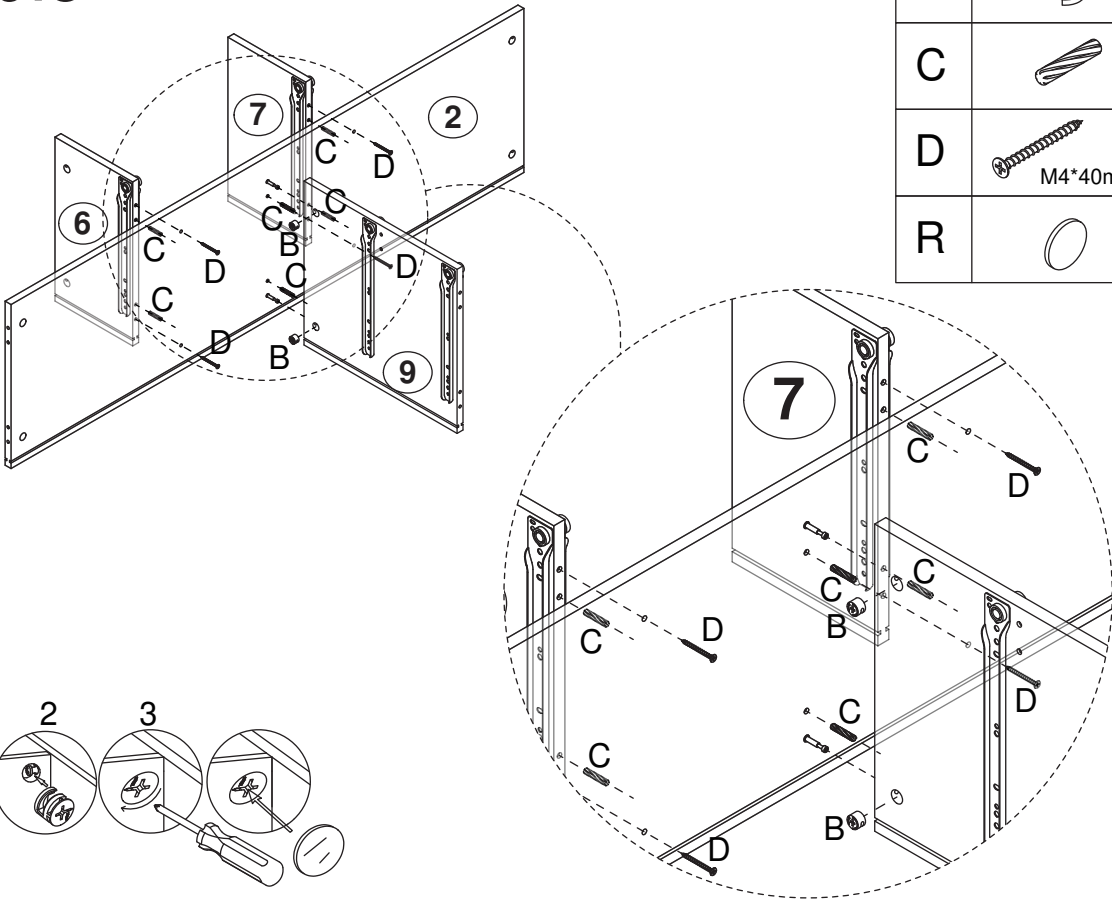


Step:9

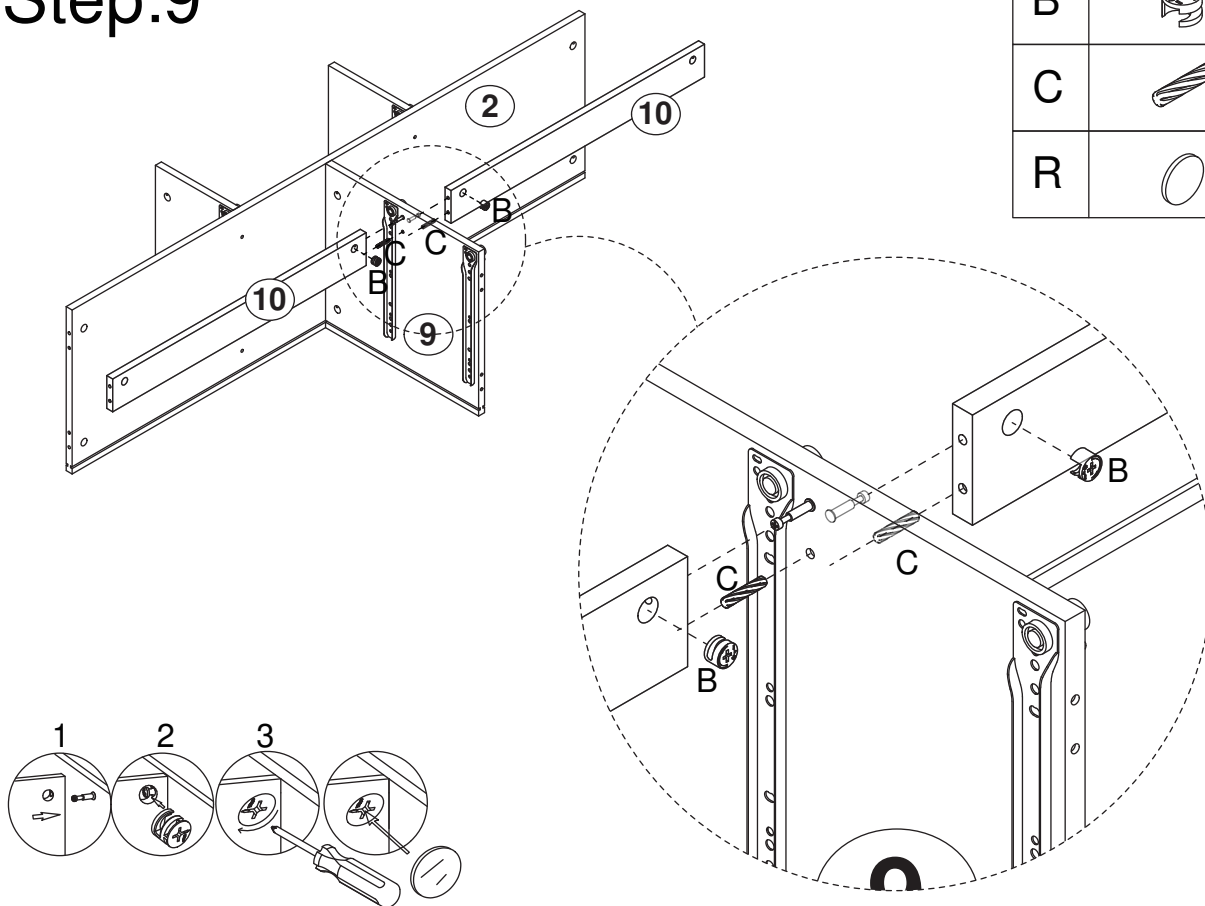

Step:10



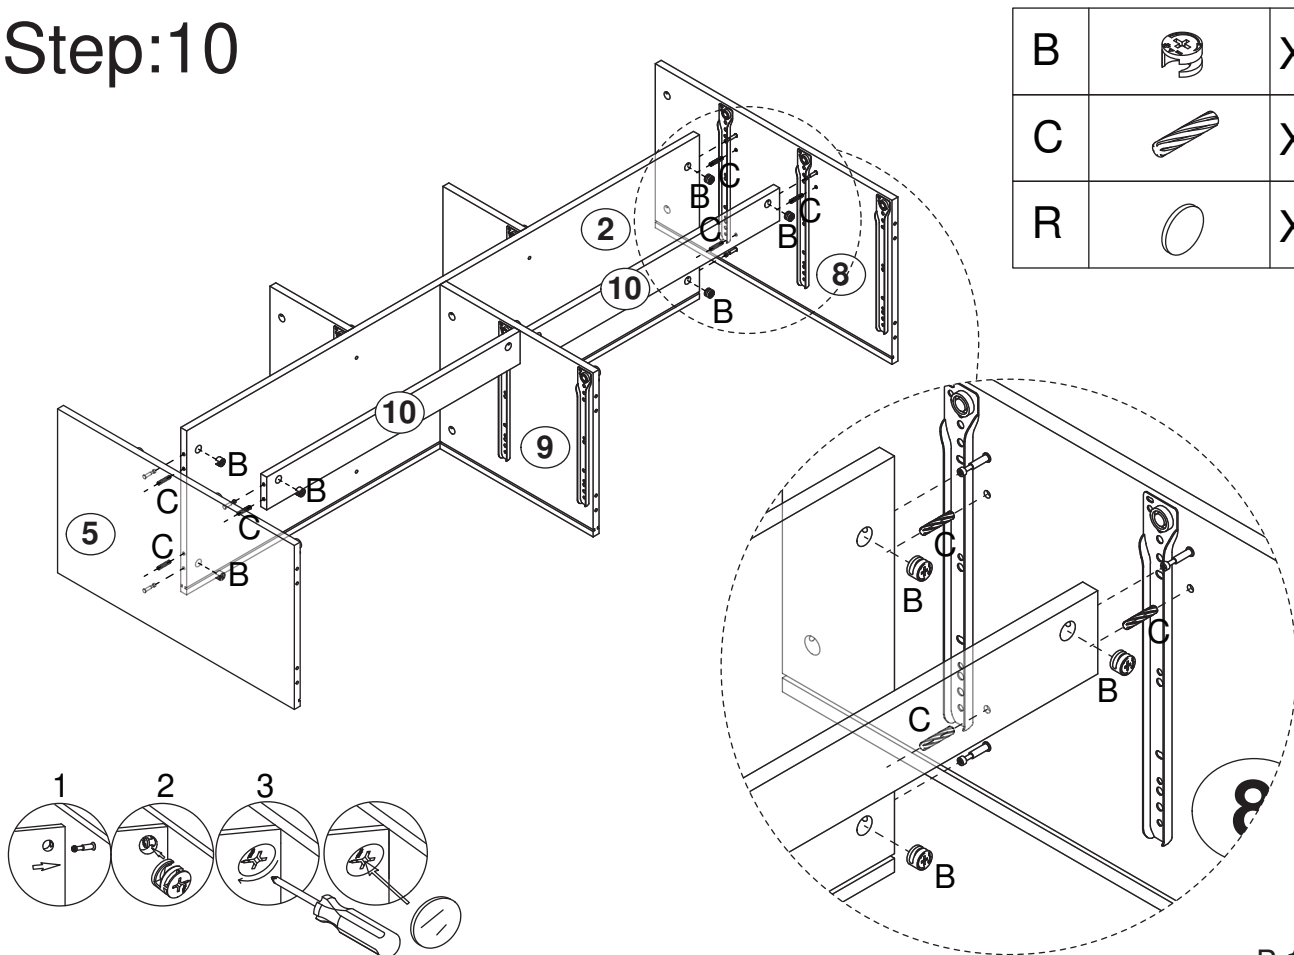


Step:11

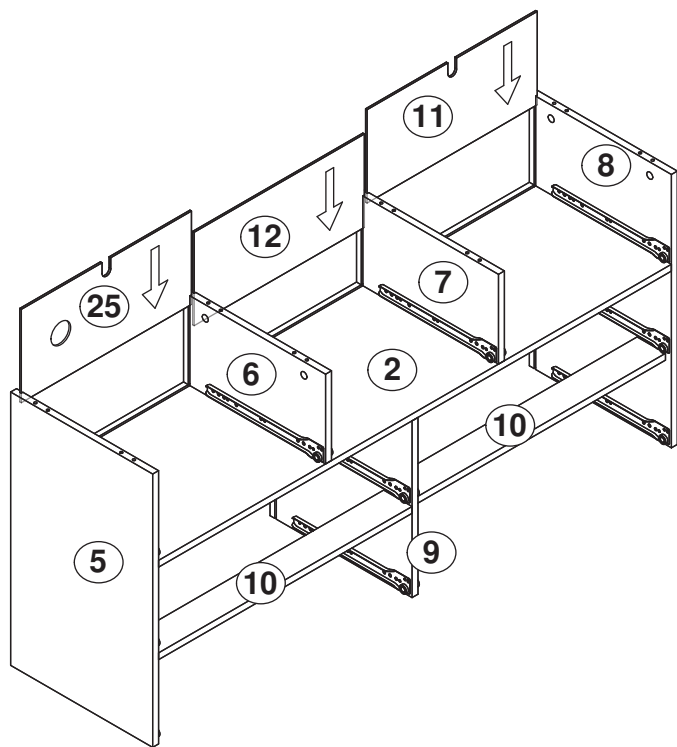


Step:12

B		X8
C		X8
R		X8

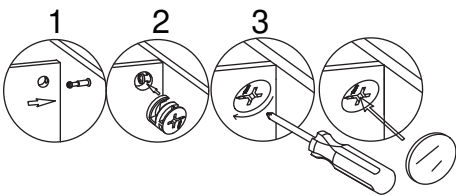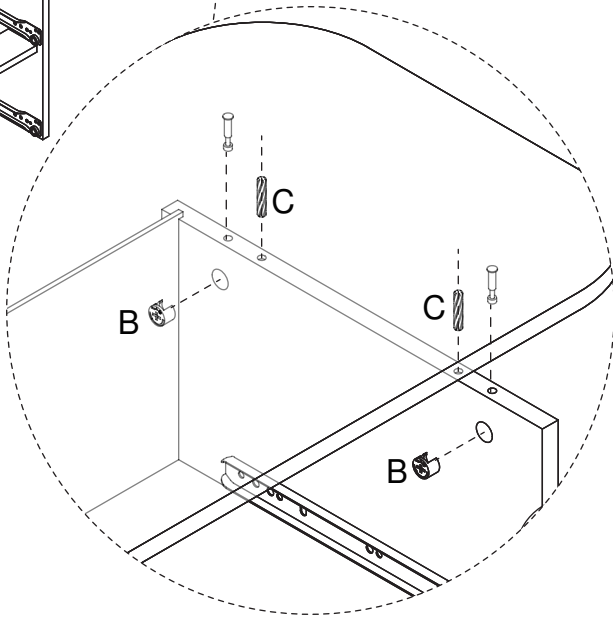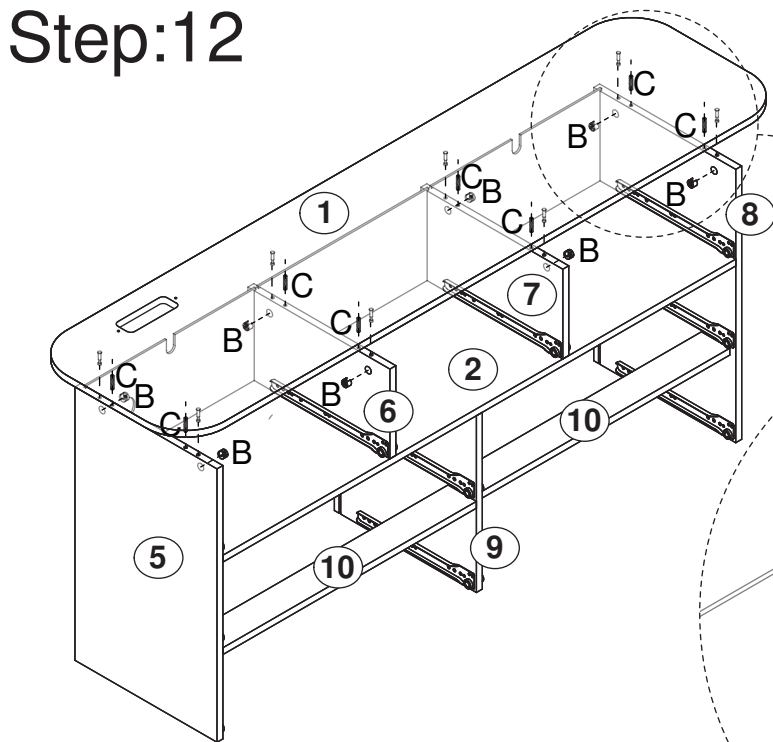


Step:13

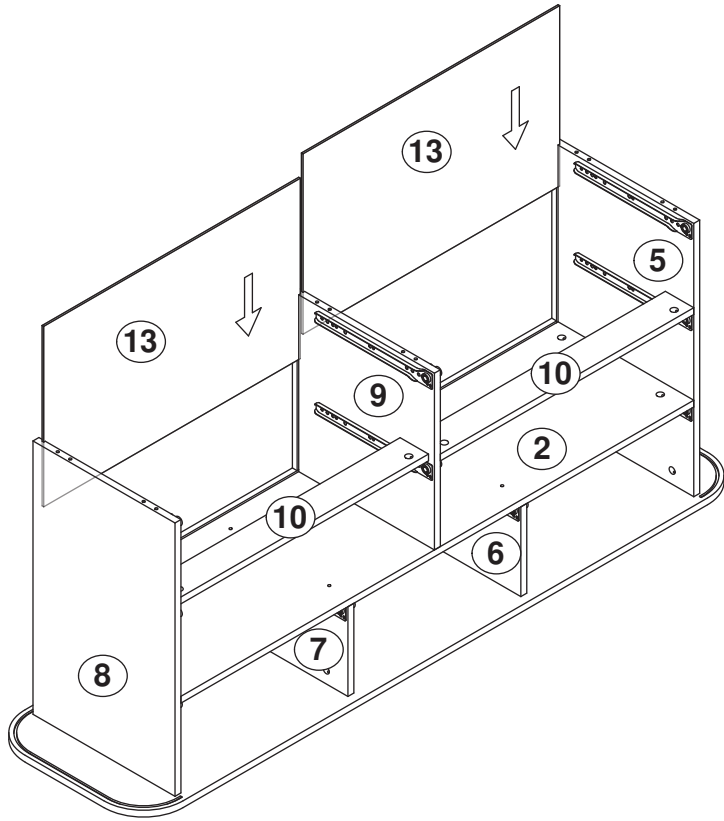


Step:14

C		X6
D	 M4*40mm	X6

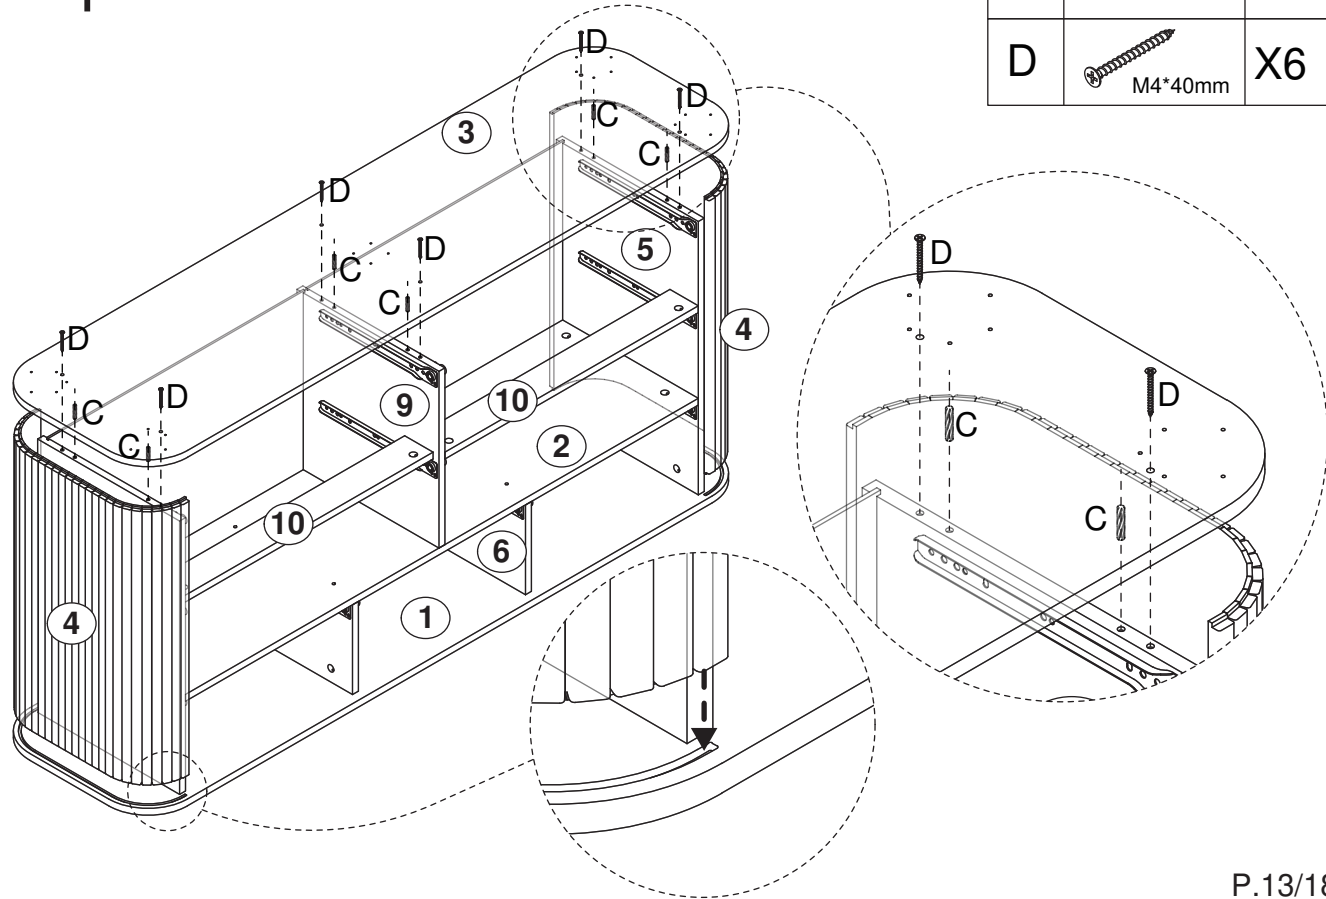


Step:15

H	 M4*14mm	X20
I		X4

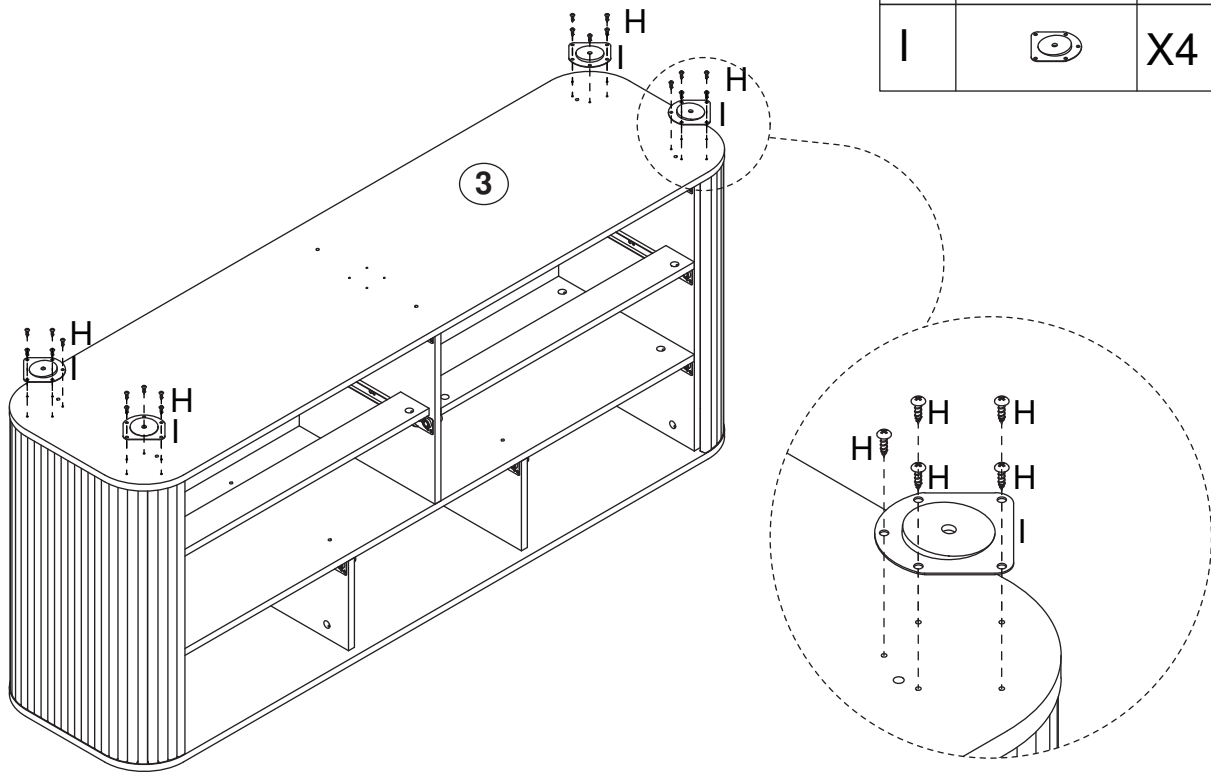


Step:16

E	 M4*30mm	X2
H	 M4*14mm	X4
J		X1
K		X1

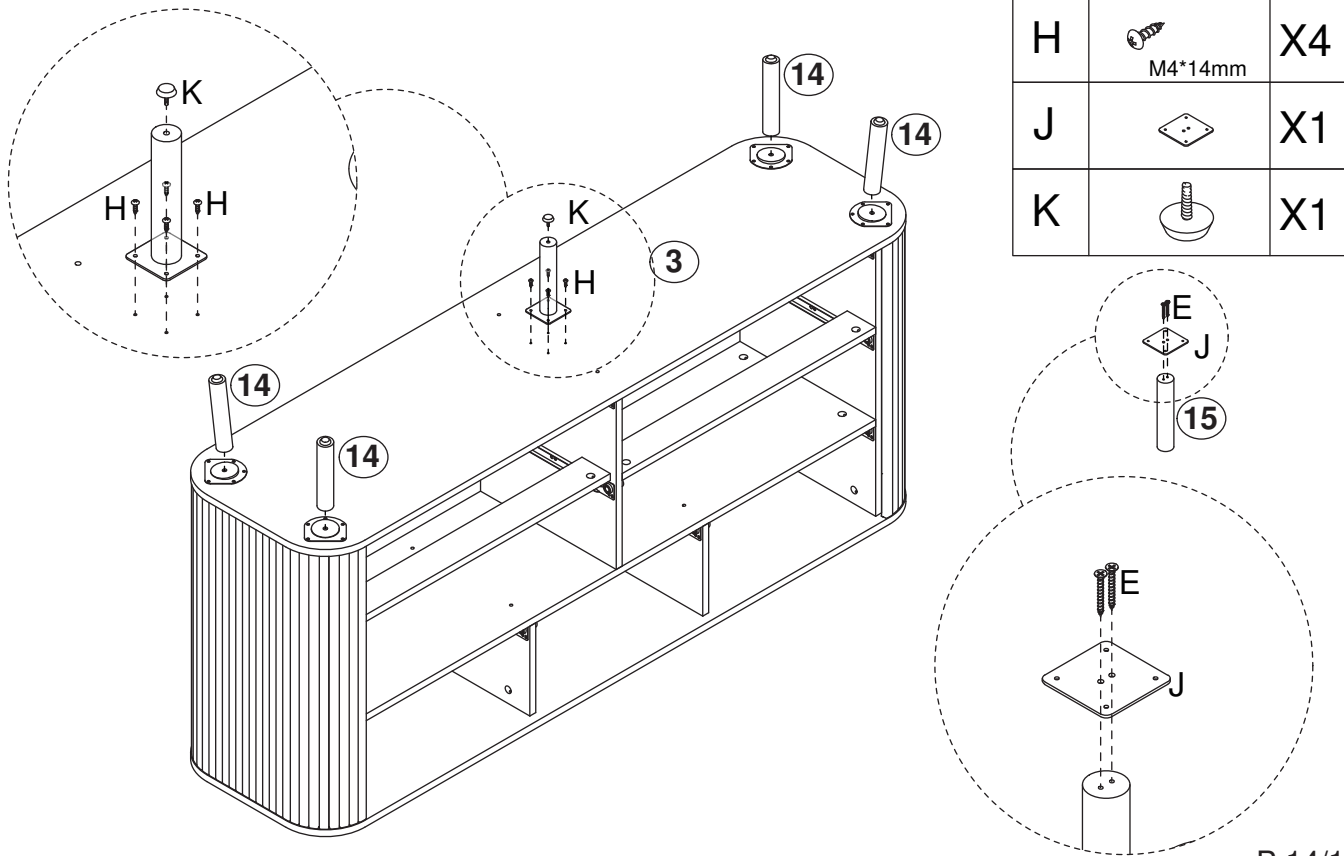


Step:17

G	 M3*14mm	X2
---	---	----

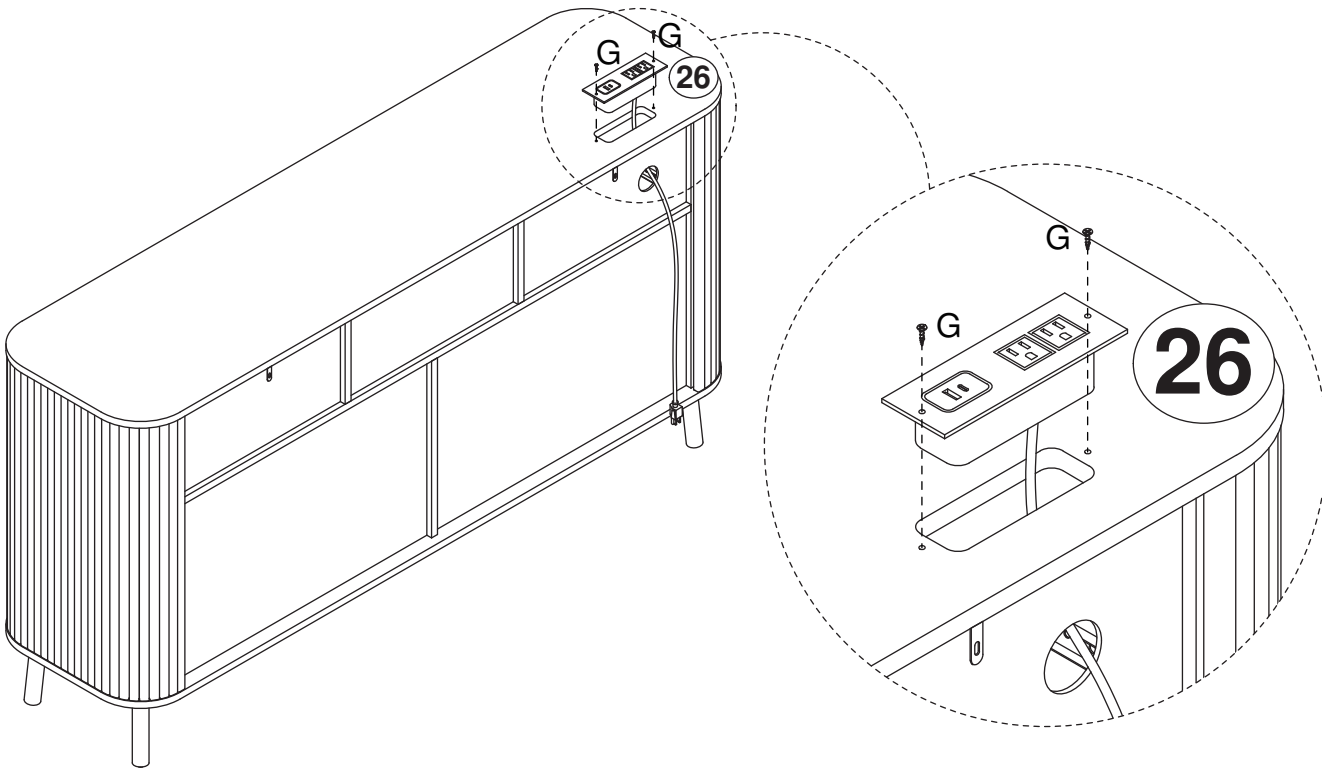


Step:18


F		X20
G	 M3*14mm	X20

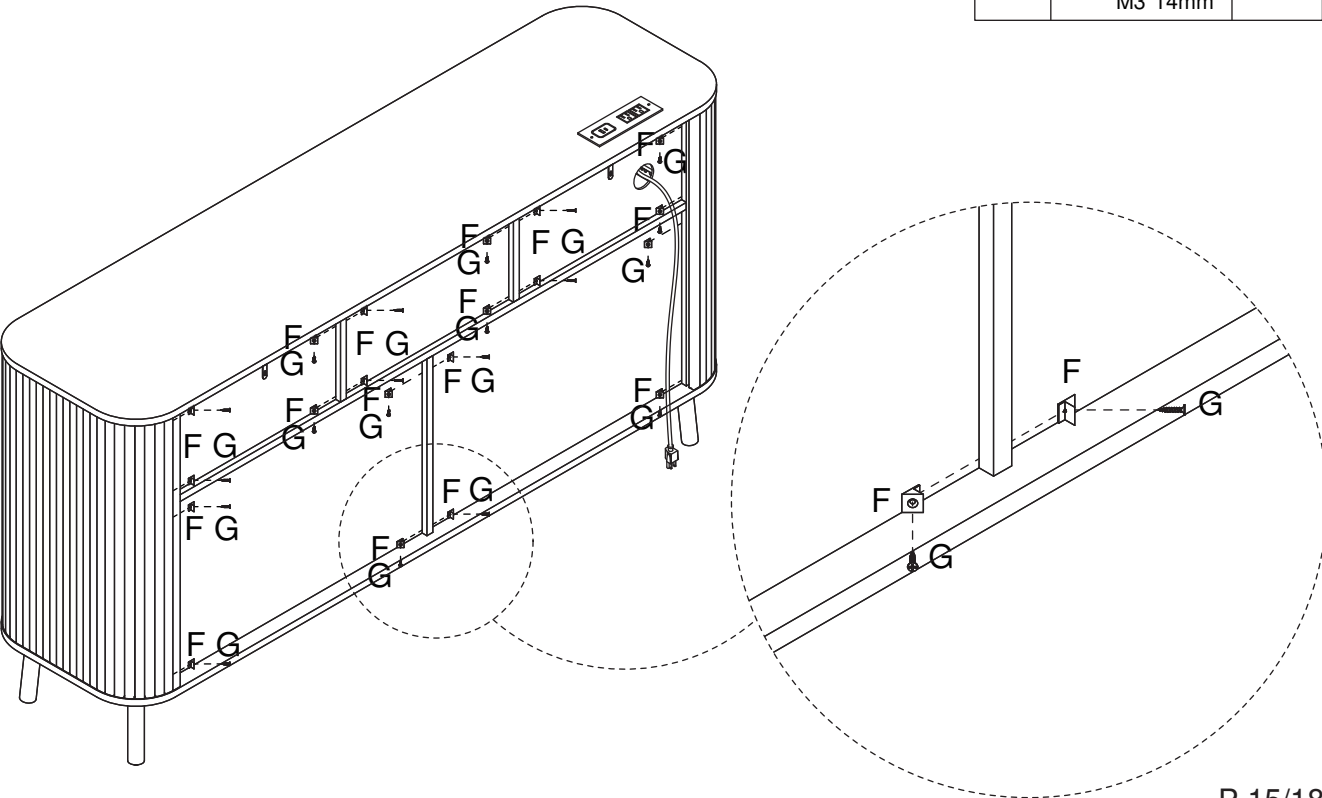


Step:19

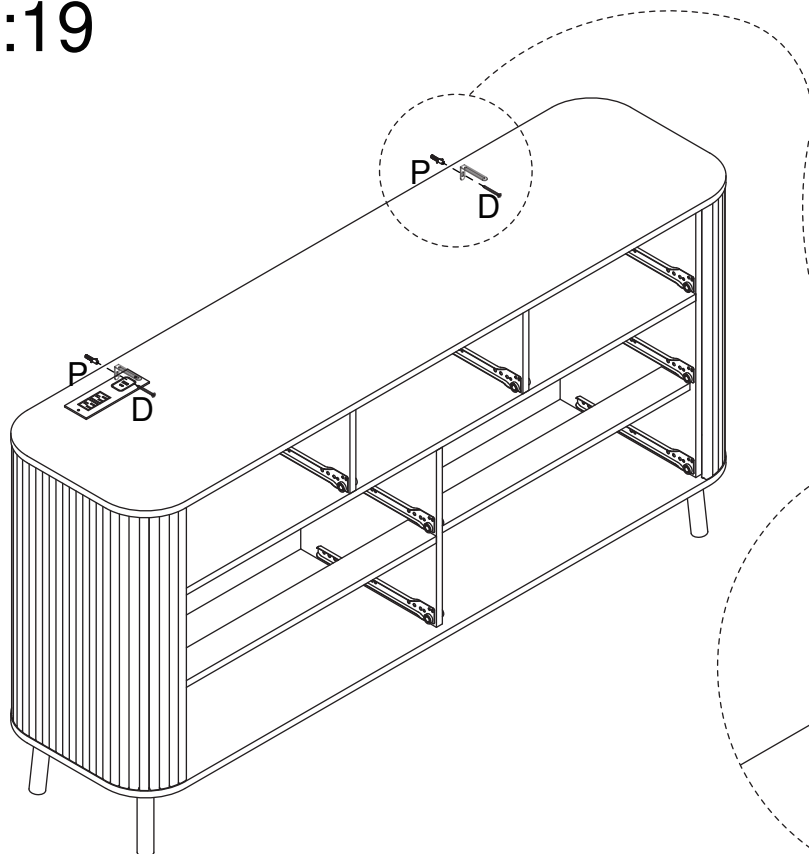





D	 M4*40mm	X2
P		X2

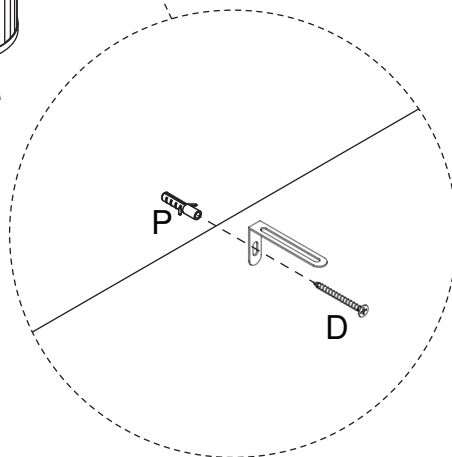



Step:20

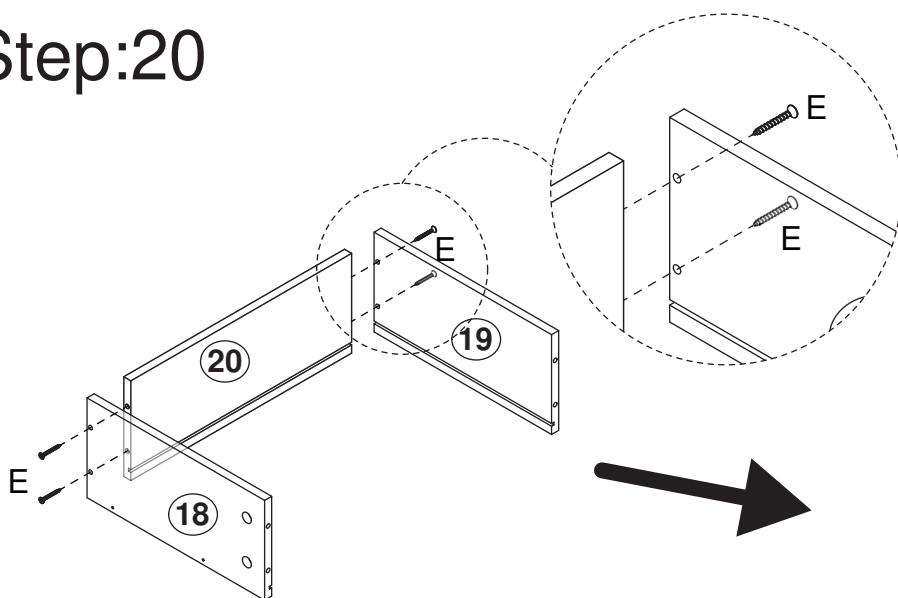



A		X12
E	 M4*30mm	X12
L	 M3*10mm	X6
M		X3

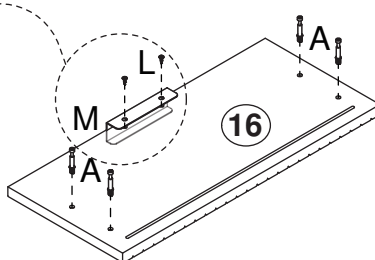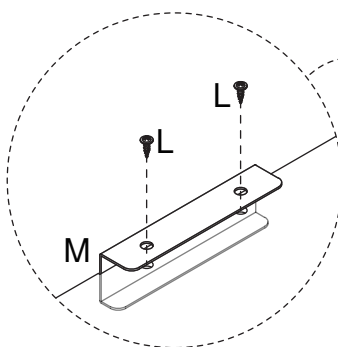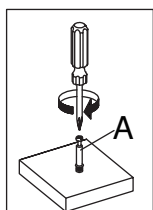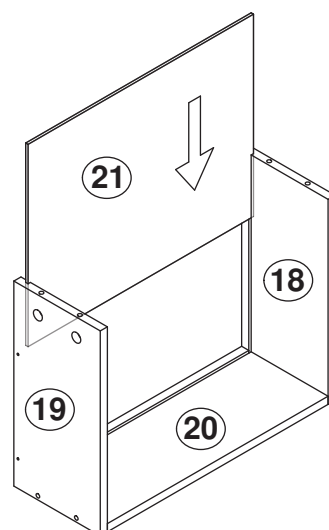


Step:21

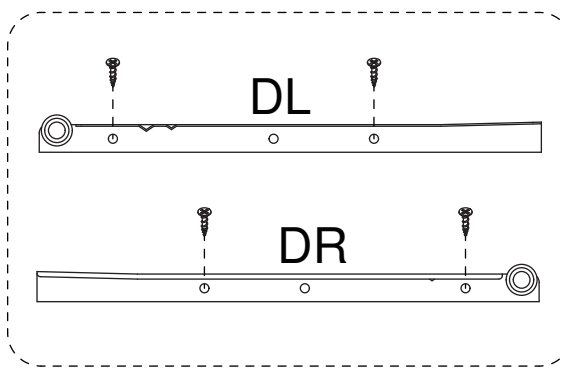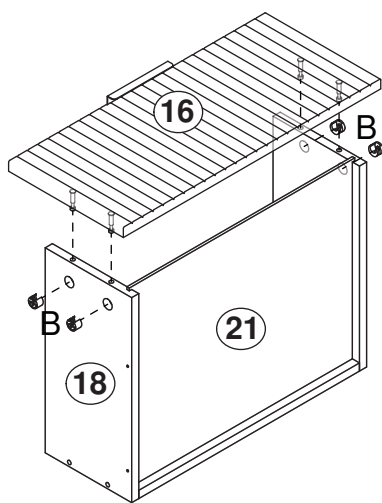




B		X12
N	 M3*12mm	X12
R		X12
DL		X3
DR		X3

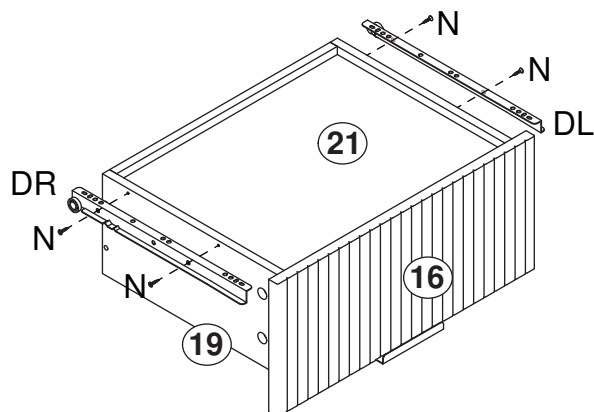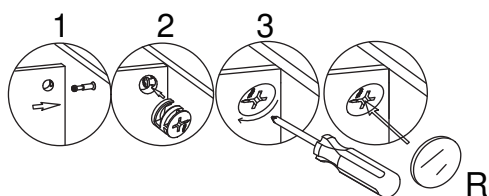



Step:22

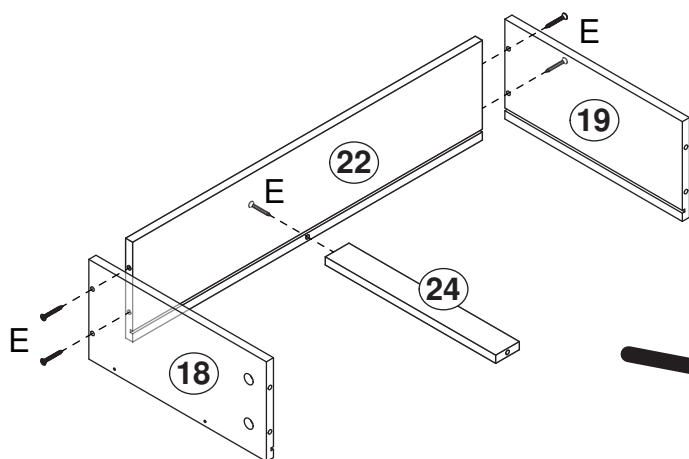


A		X20
E	 M4*30mm	X20
L	 M3*10mm	X8
M		X4

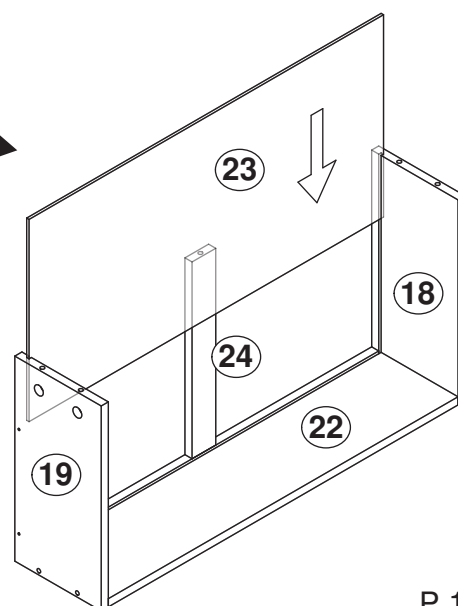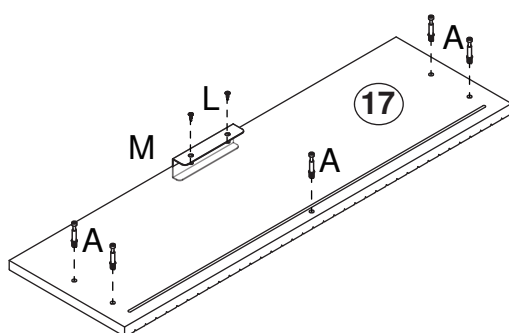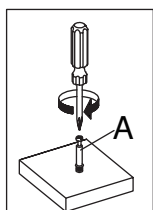

Step:23

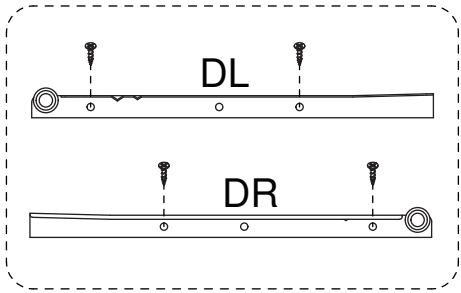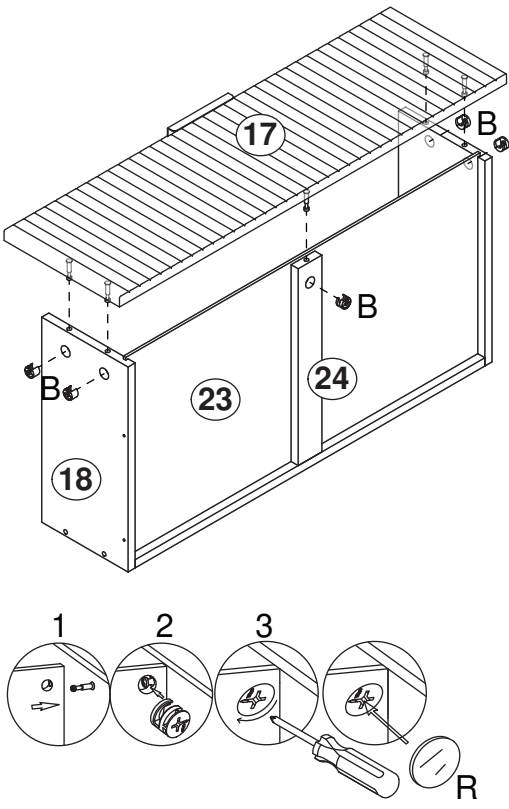

B		X20
N	 M3*12mm	X16
R		X20
DL		X4
DR		X4

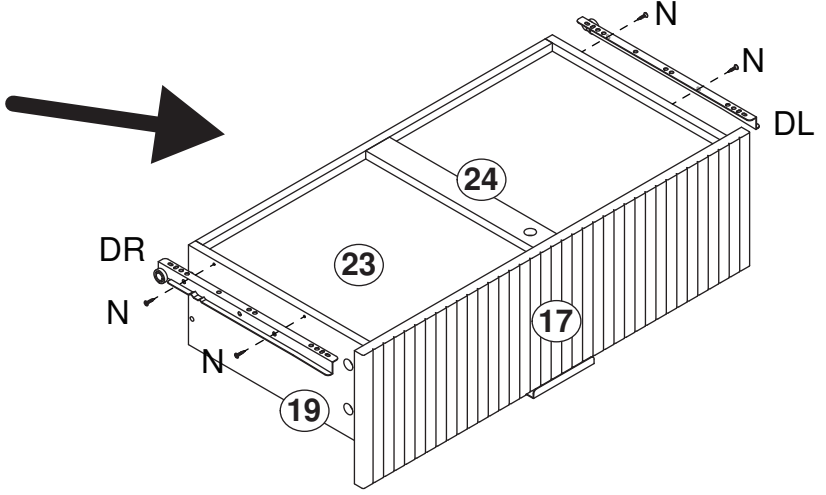

Step:24

