

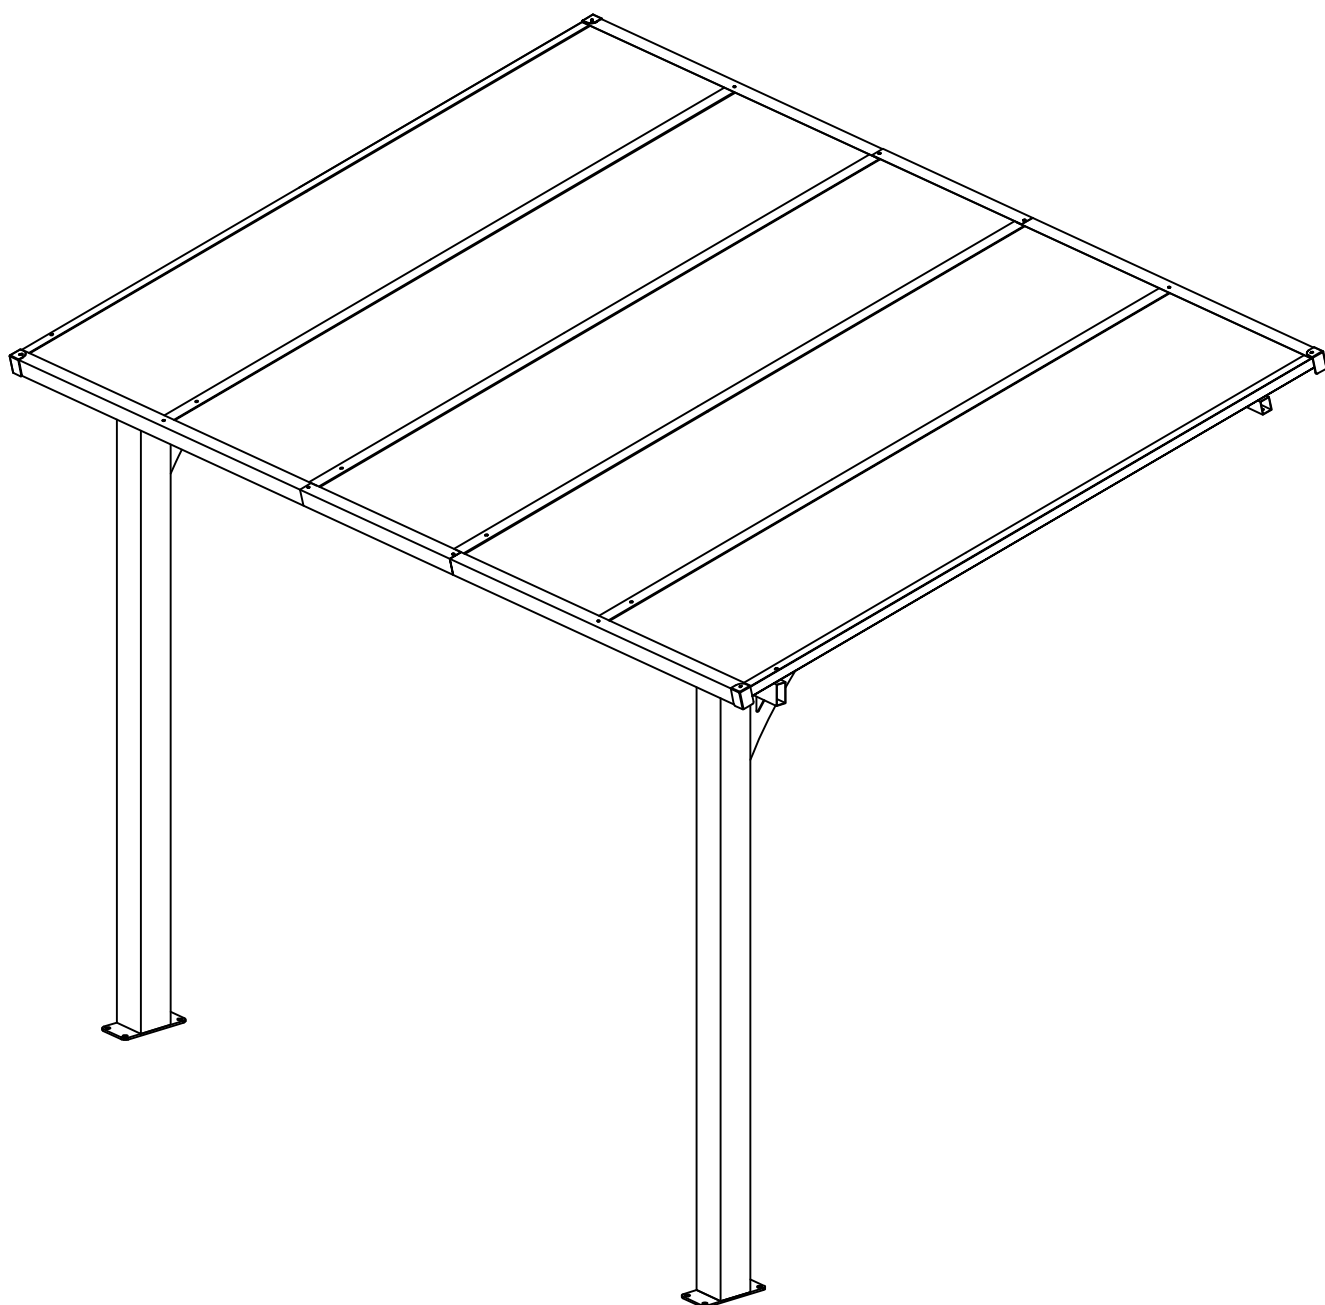









ERX-XB0508

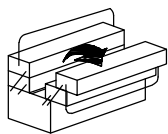





No	Picture	Qty
A		x2
B		x2
C		x1
C1		x1
D		x2
E		x2
F		x1
F0		x1
G		x4
J		x2

No	Picture	Qty
J1		x2
MT		x1
M1		x2
M2		x2
M3		x2
M4		x1
M5		x1
M6		x2
M7		x10
P		x10


No	Picture	Qty
R		x4
T1	 Ø 12×30	x8
T2	 M6*12	x34
T3	 M6*30	x4
T4	 M6*45	x10
T5	 M6*55	x10
T6	 M6	x8
T7	 M4*12	x12
T8	 M4*6	x20
T9		x8
		x1


[illegible]

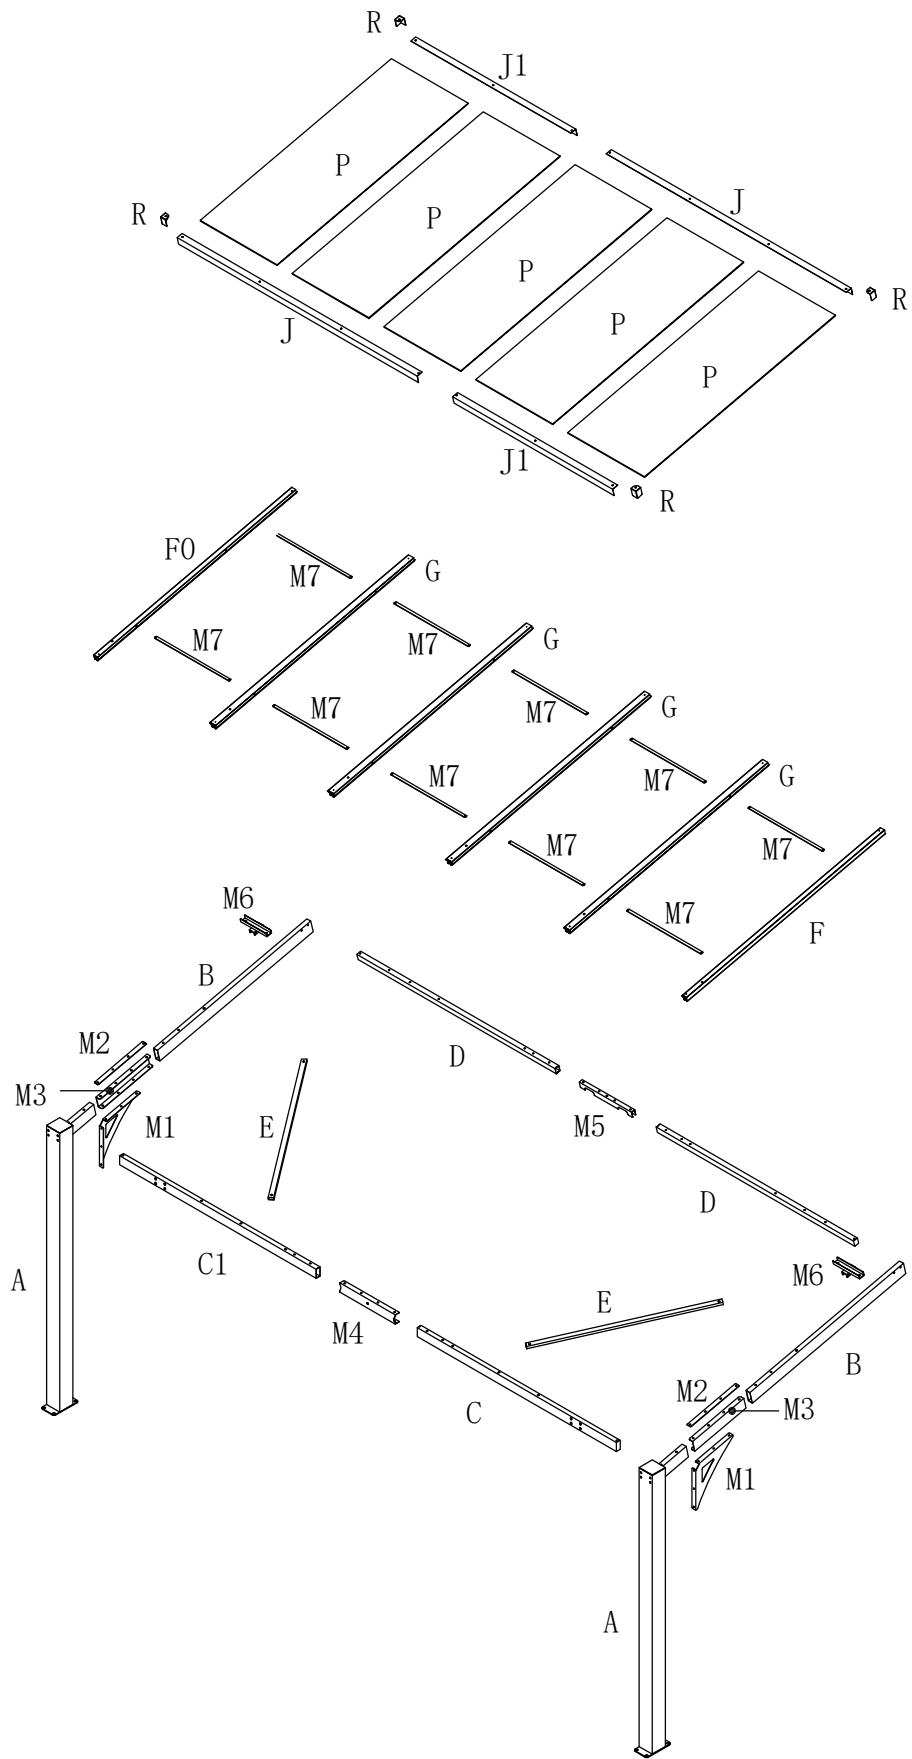


C		x1
C1		x1
M4		x1
T2	 M6*12	x8


STEP 1

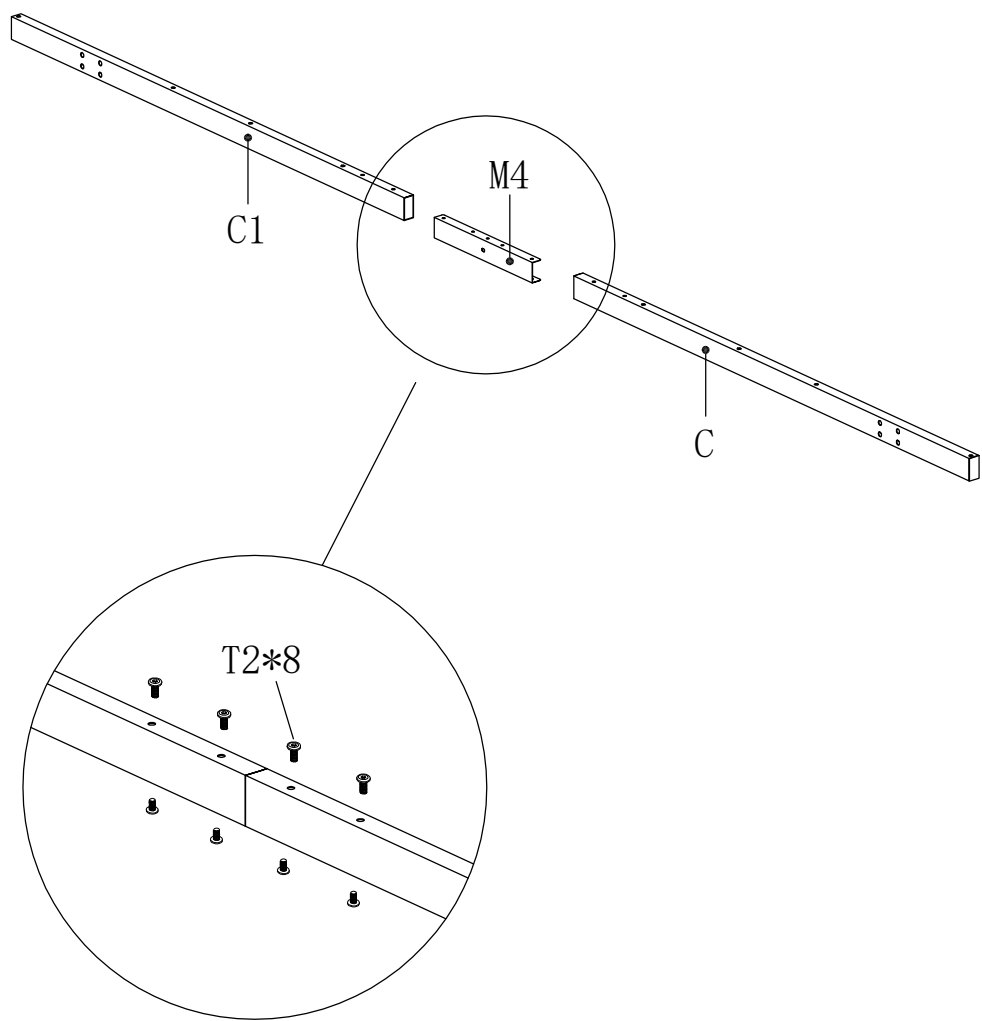


A		x2
T1	 Ø 12×30	x8

STEP 2


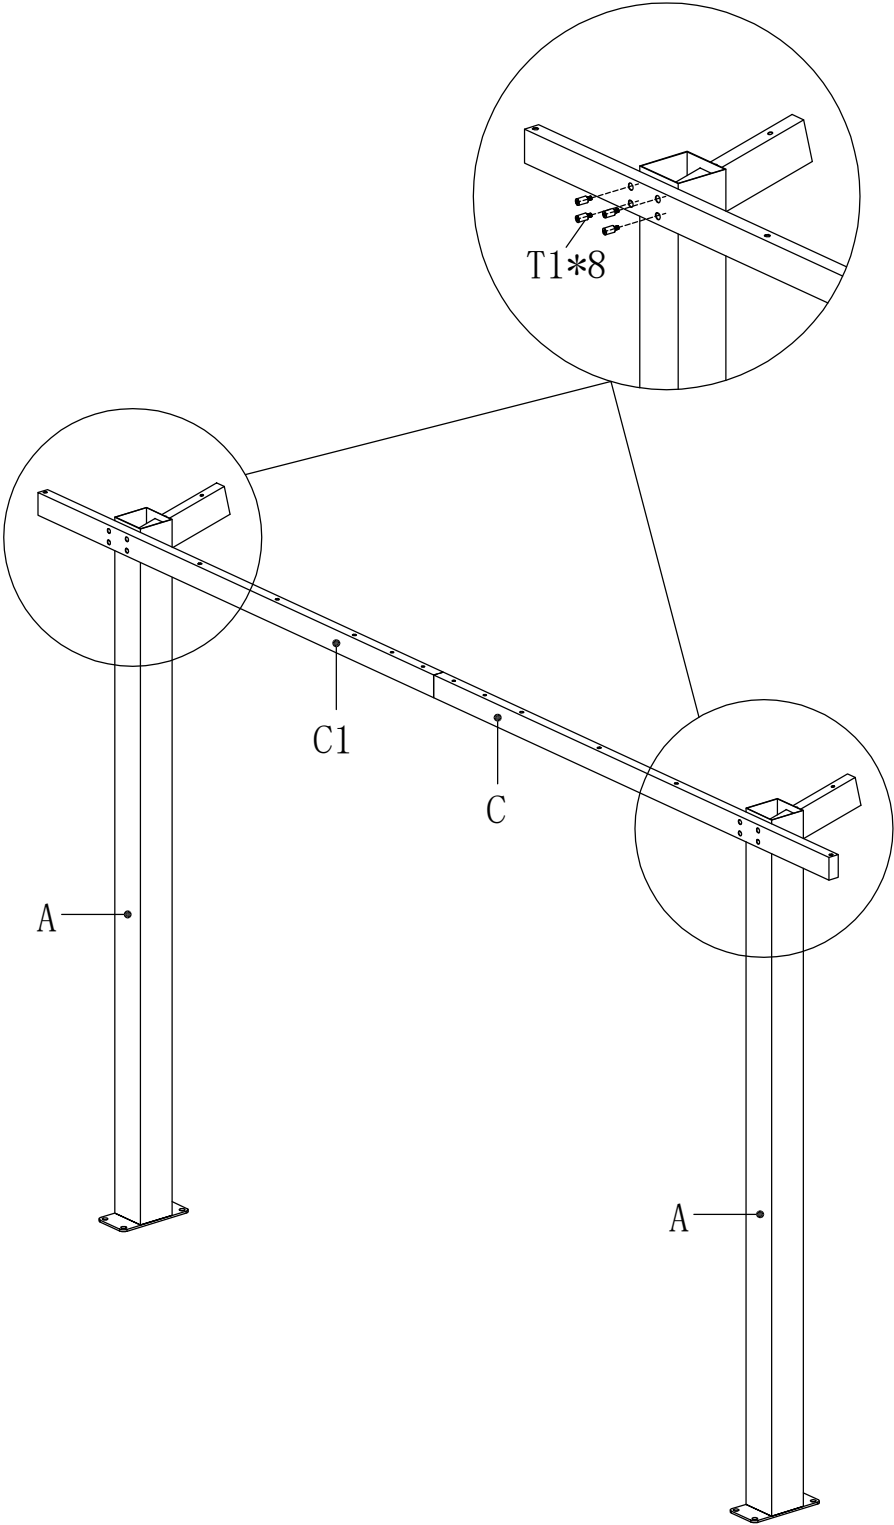


T9		x8
----	---	----


STEP 3

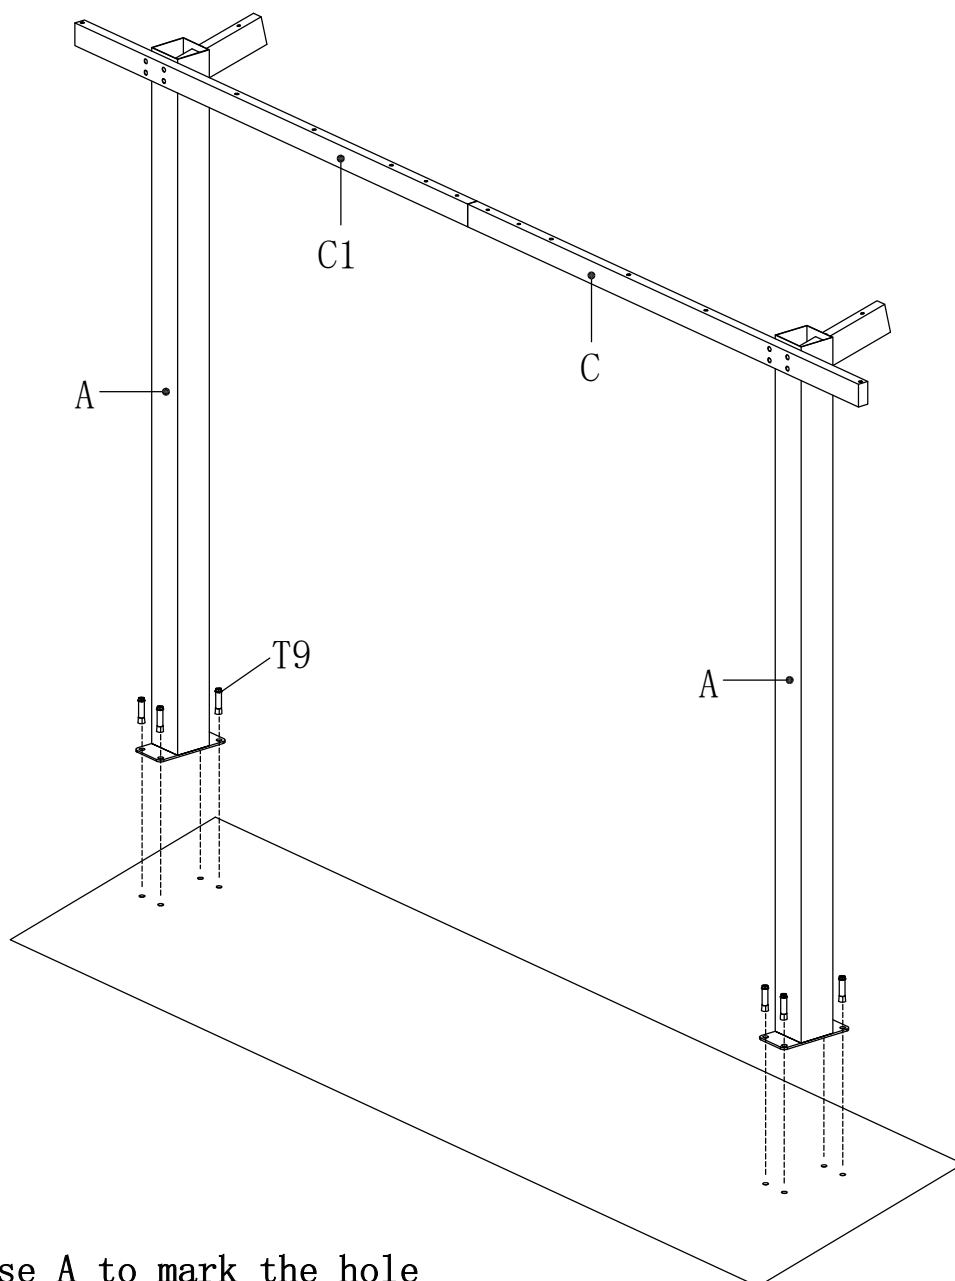


First, use A to mark the hole positions on the high-hardness concrete floor, then move A away to drill; otherwise, there will be interference duri.

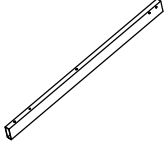
B		x2
M2		x2
M3		x2
T2	 M6*12	x8

STEP 4

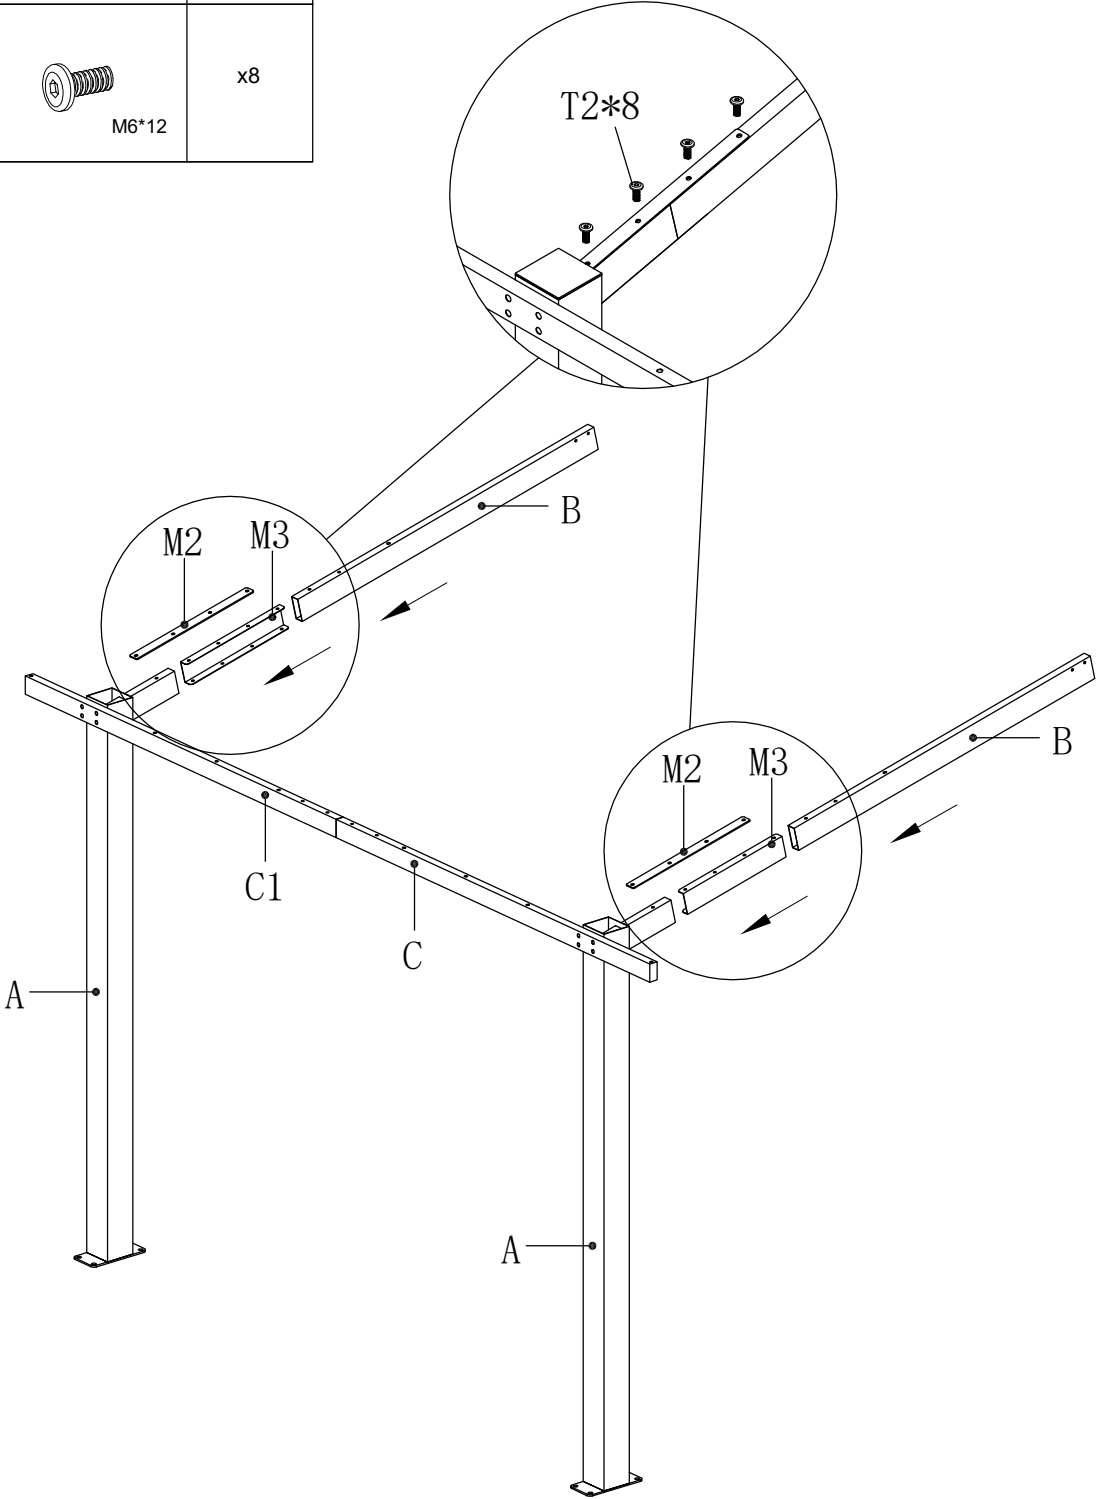


M1		x2
T2	 M6*12	x14



STEP 5

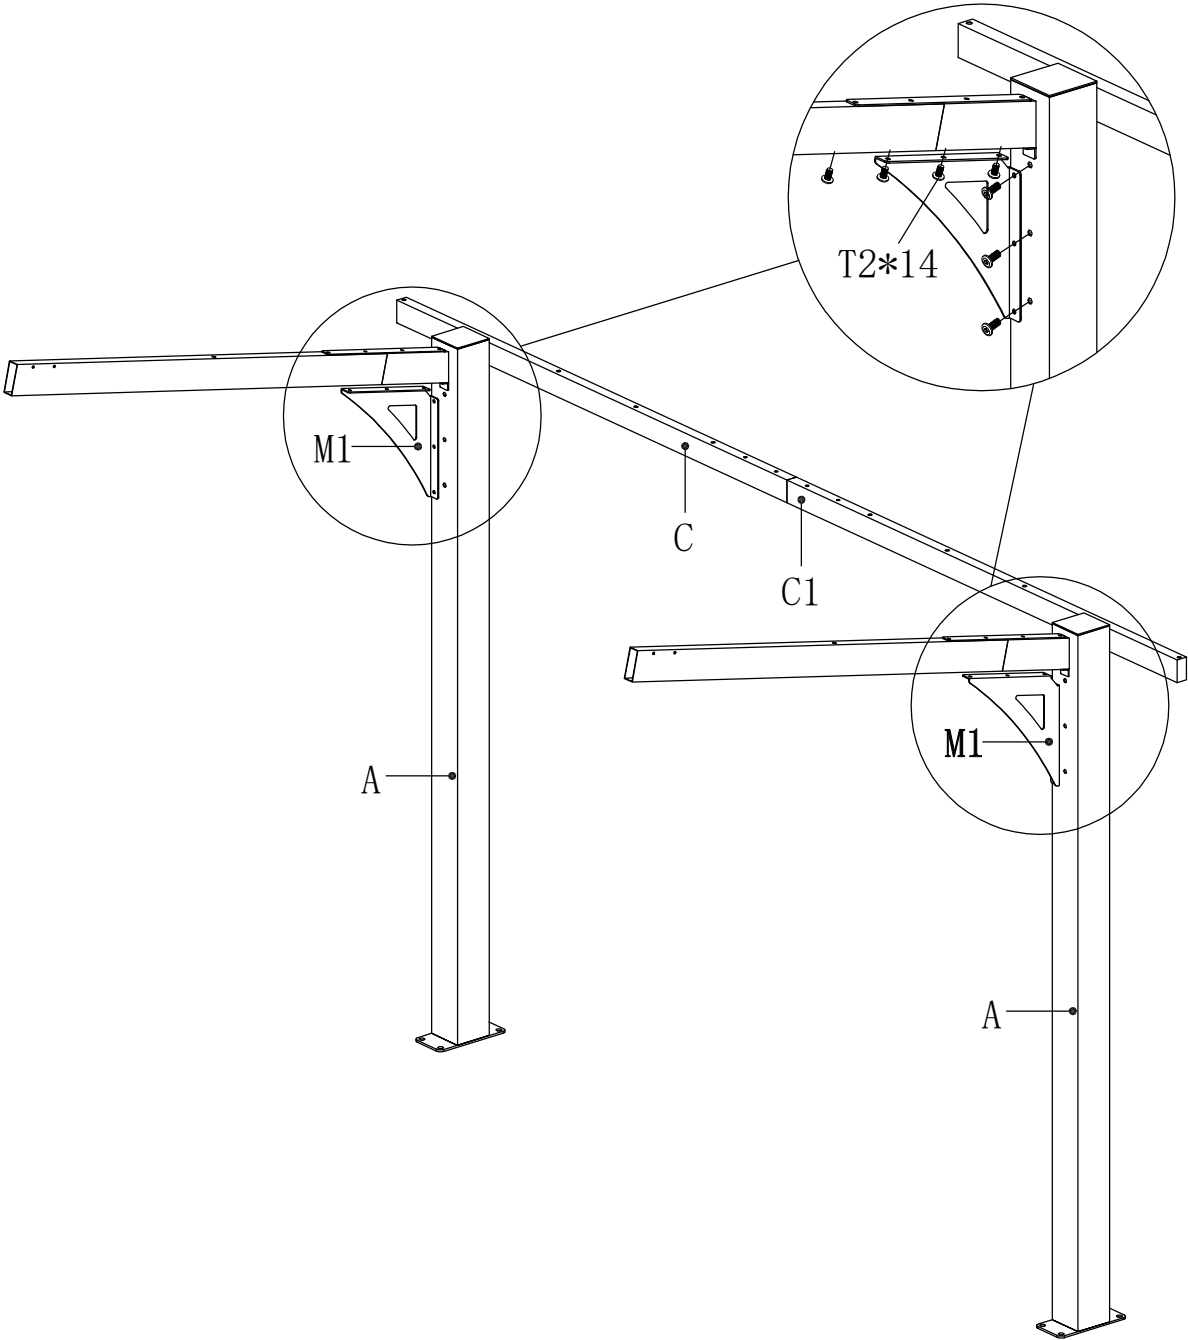


E		x2
T3	 M6*30	x4



STEP 6

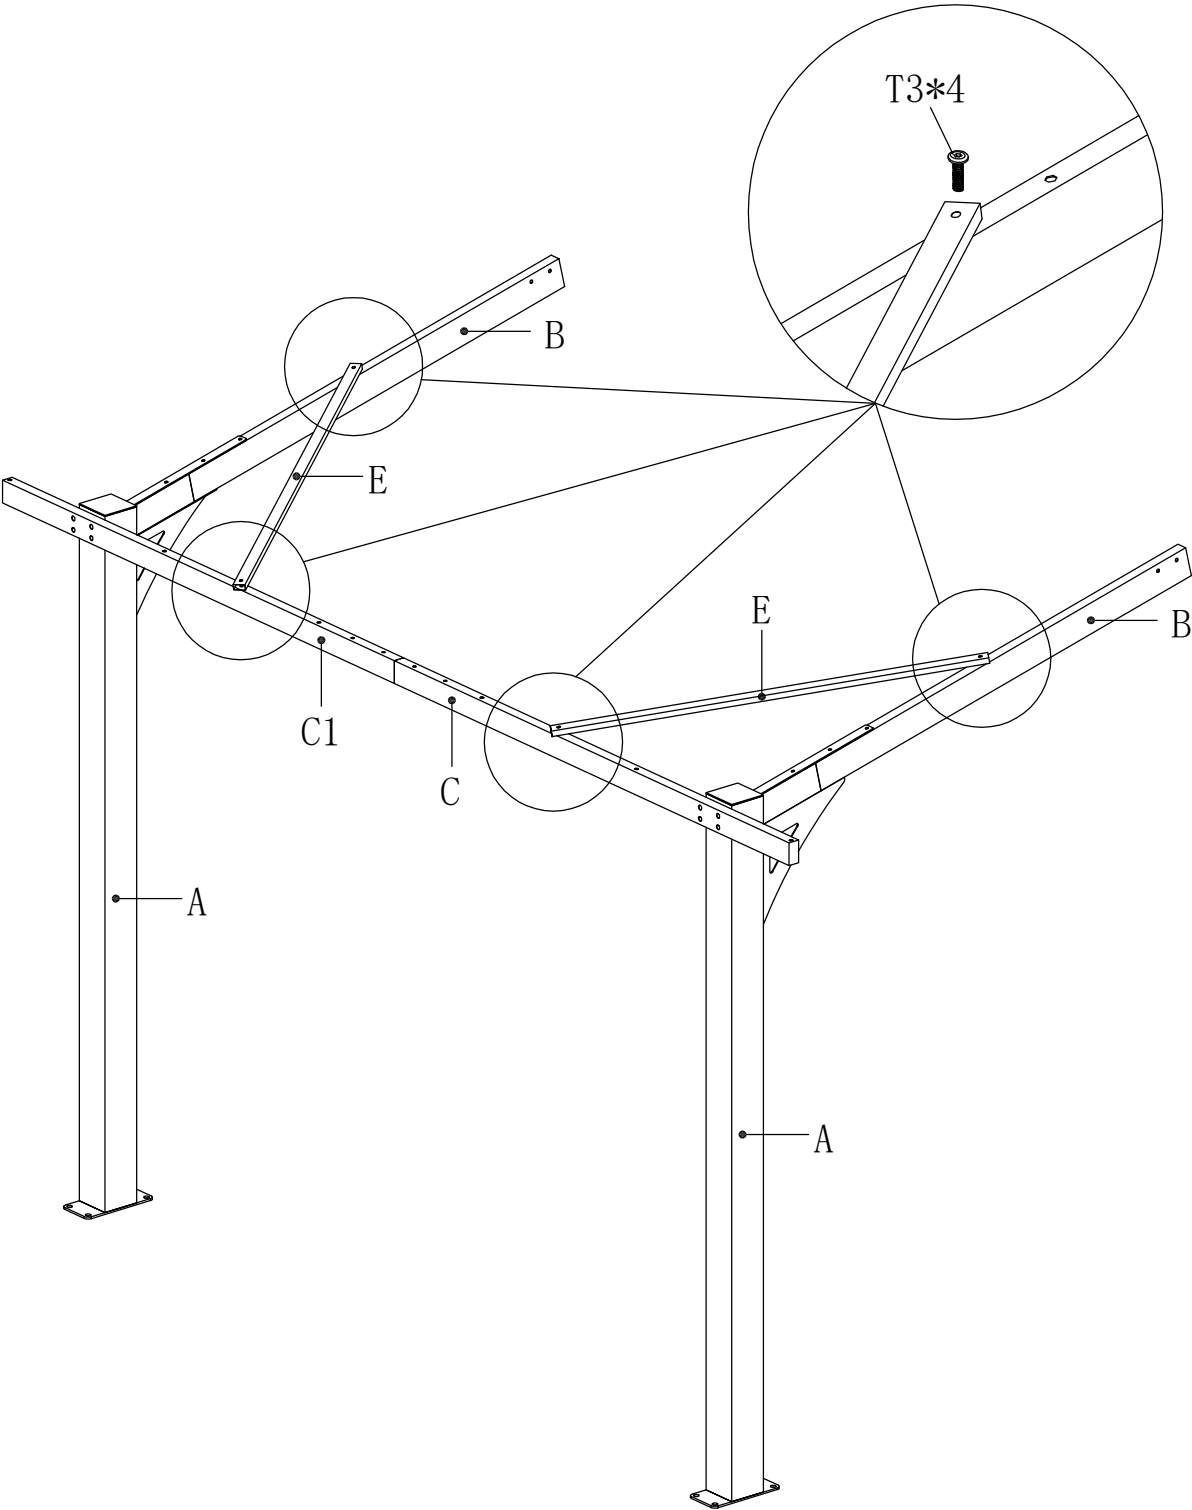


M6		x2
T4	 M6*45	x4
T6	 M6	x4

STEP 7

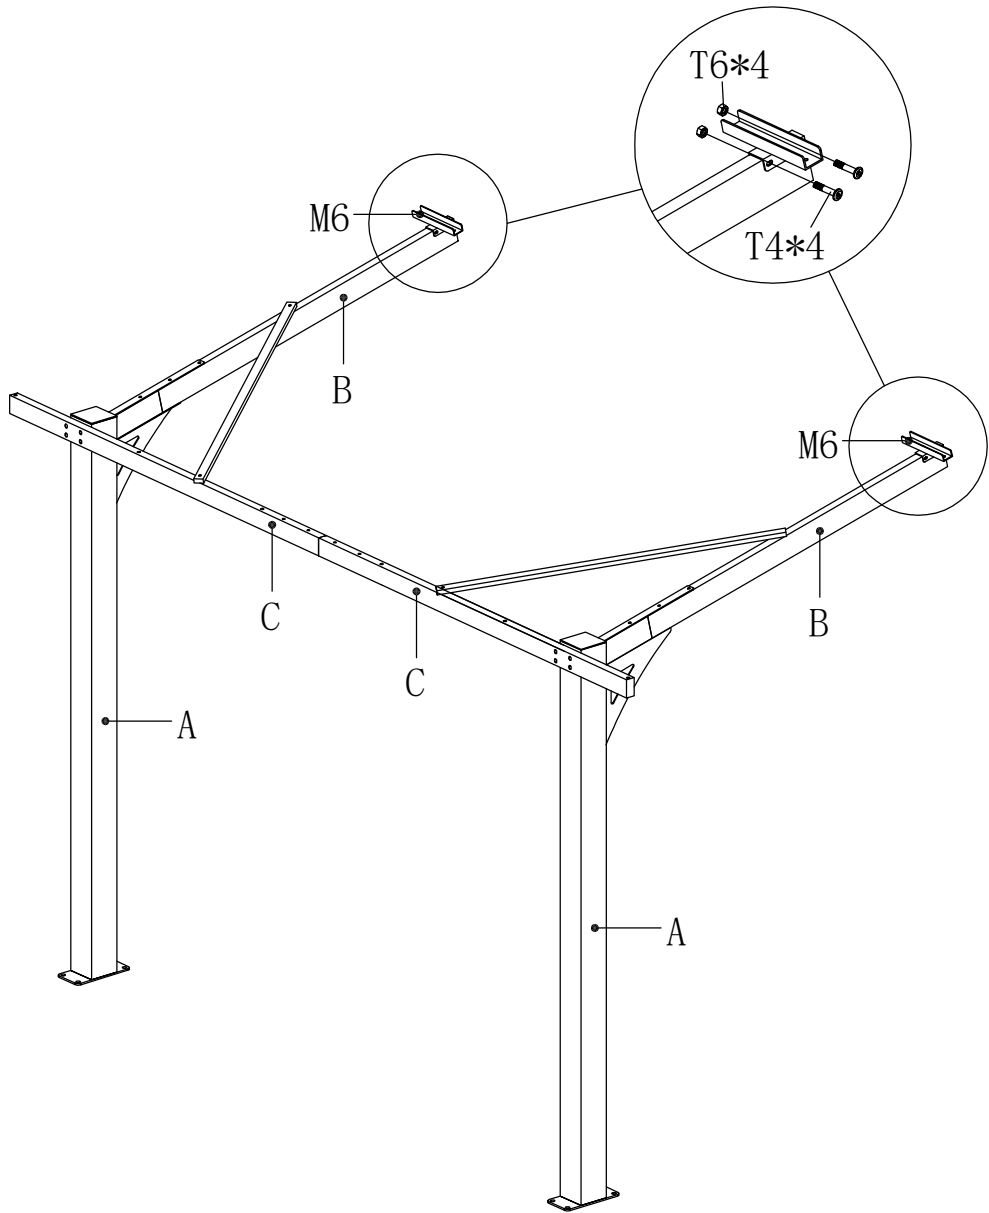


D		x2
M5		x1
T2	 M6*12	x4

STEP 8

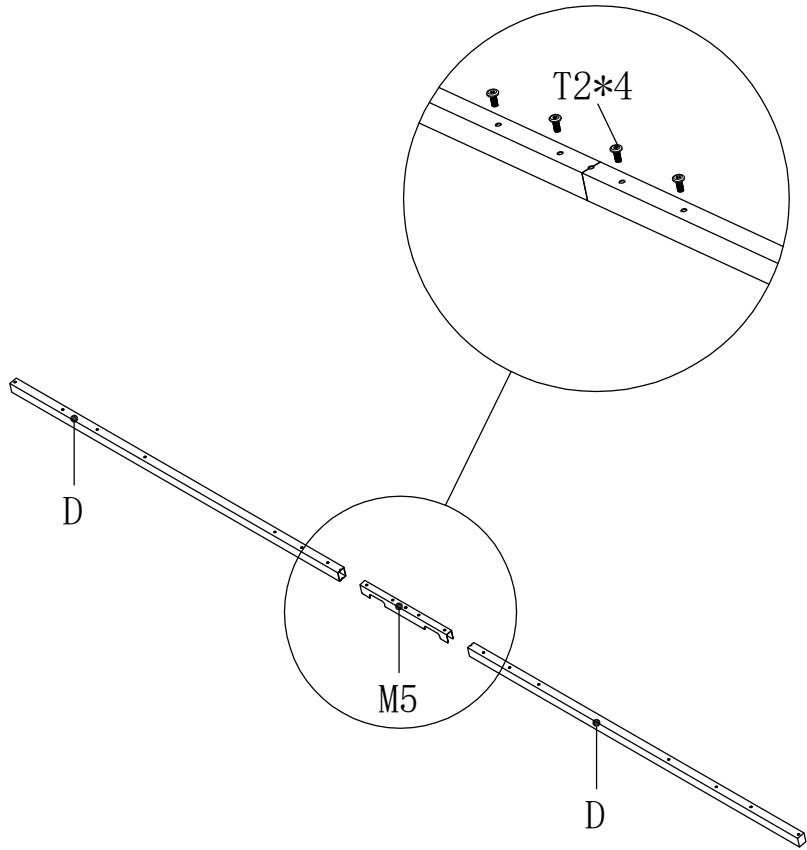


T5	 M6*55	x4
T6	 M6	x4

STEP 9


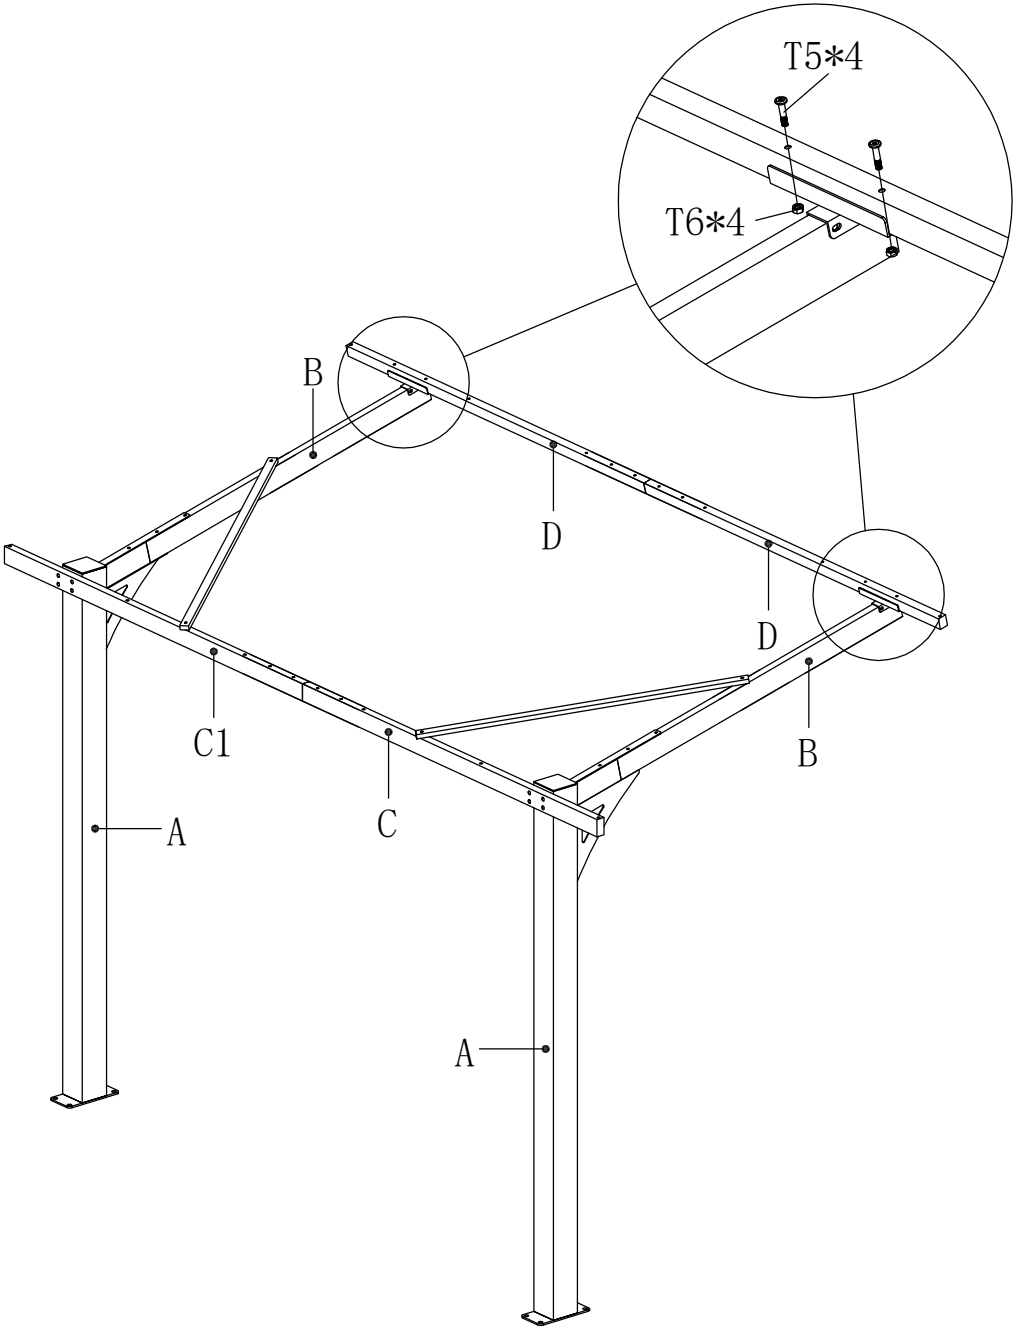



F		x1
F0		x1
MT		x1

STEP 10

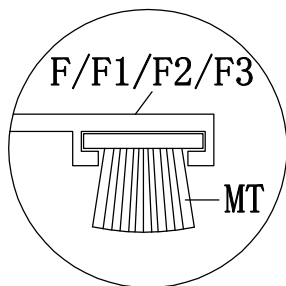


MT is used for waterproofing, in order to make P more compact, the part with fluff is placed downwards, inserted into the groove, and the length is the same as the assembly length of F and F0, and trimmed after positioning.

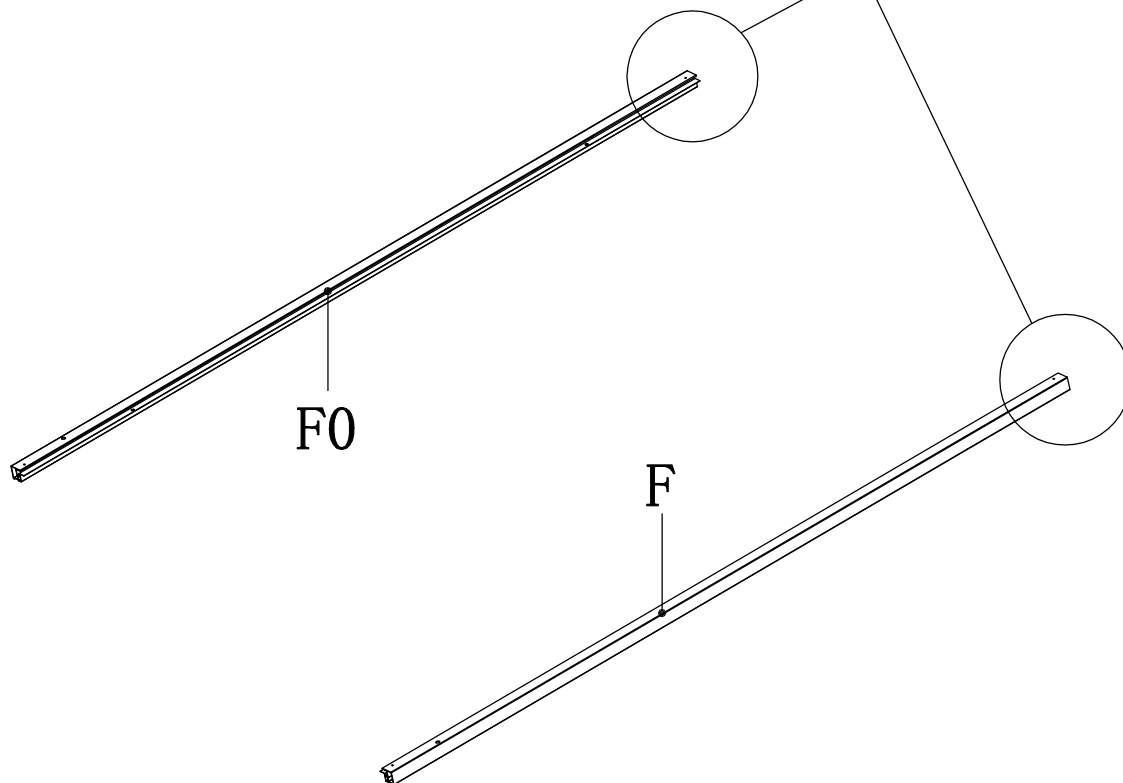
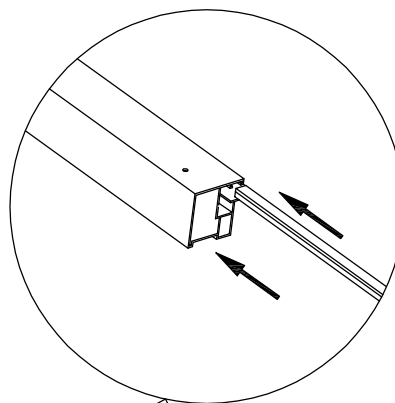


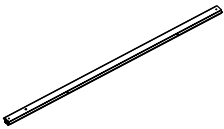G		x4
MT		x1

STEP 11

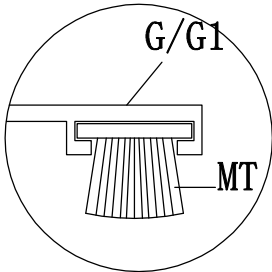


MT is used for waterproofing, in order to make P more compact, the part with fluff is placed downwards, inserted into the groove, and the length is the same as the assembly length of G/G1, and trimmed after positioning.

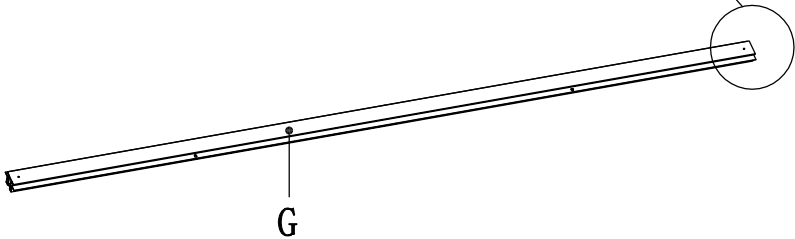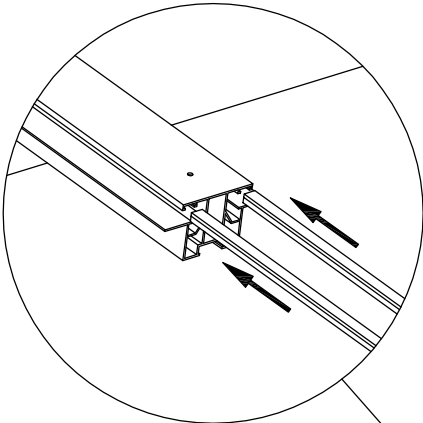


X4

T4	 M6*45	x6
T5	 M6*55	x6

STEP 12

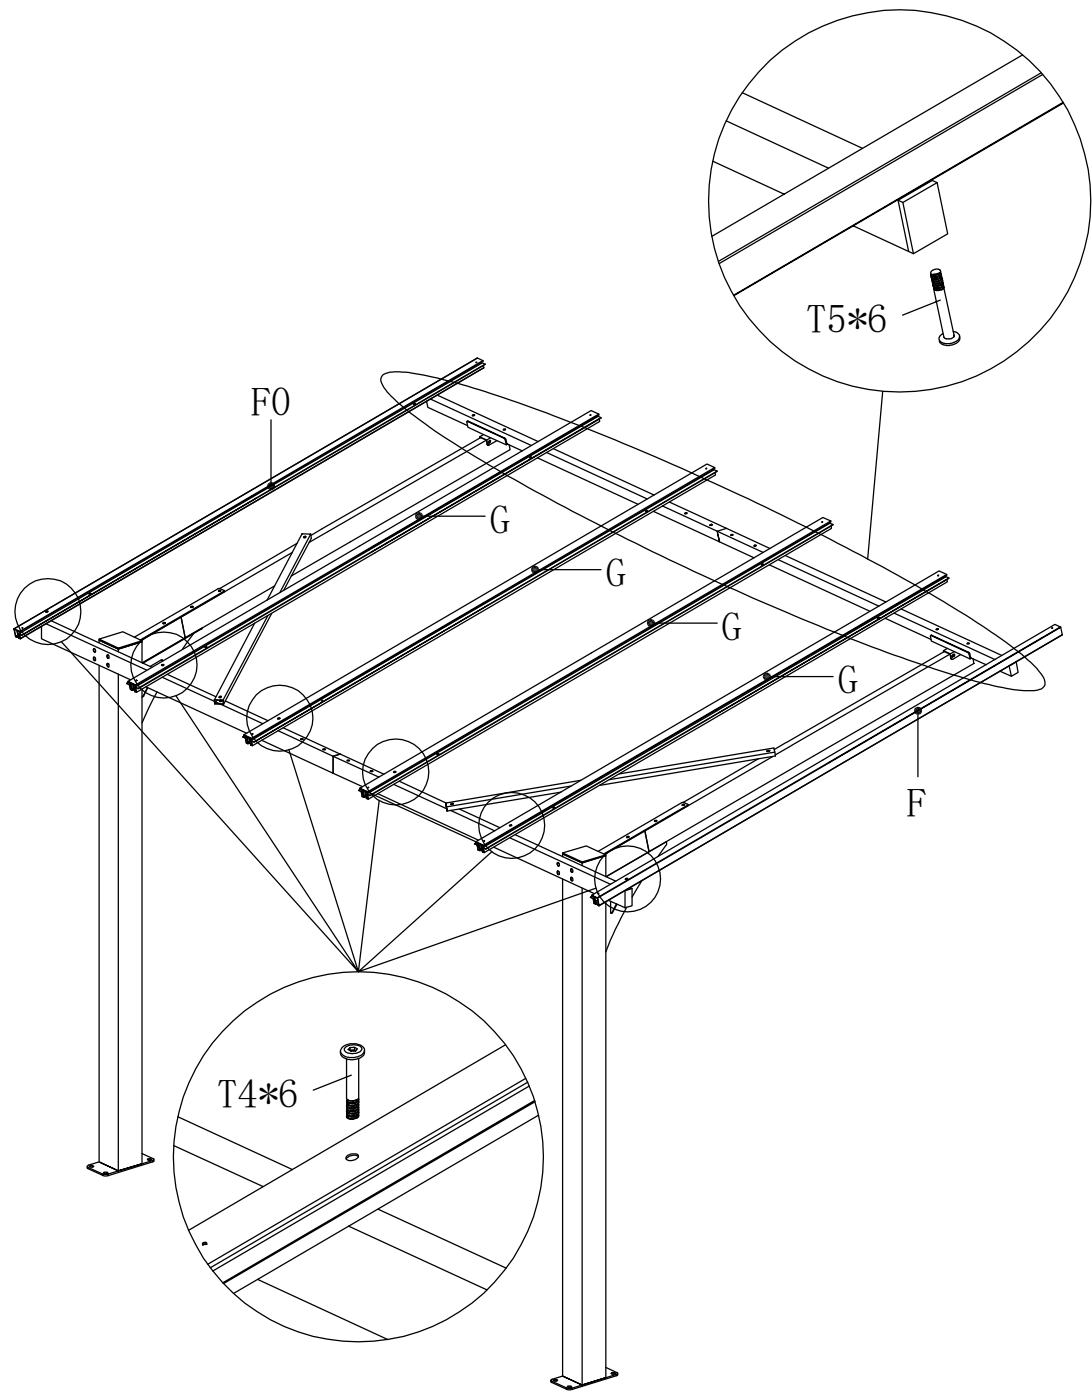





P

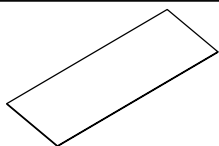


x5

STEP 13

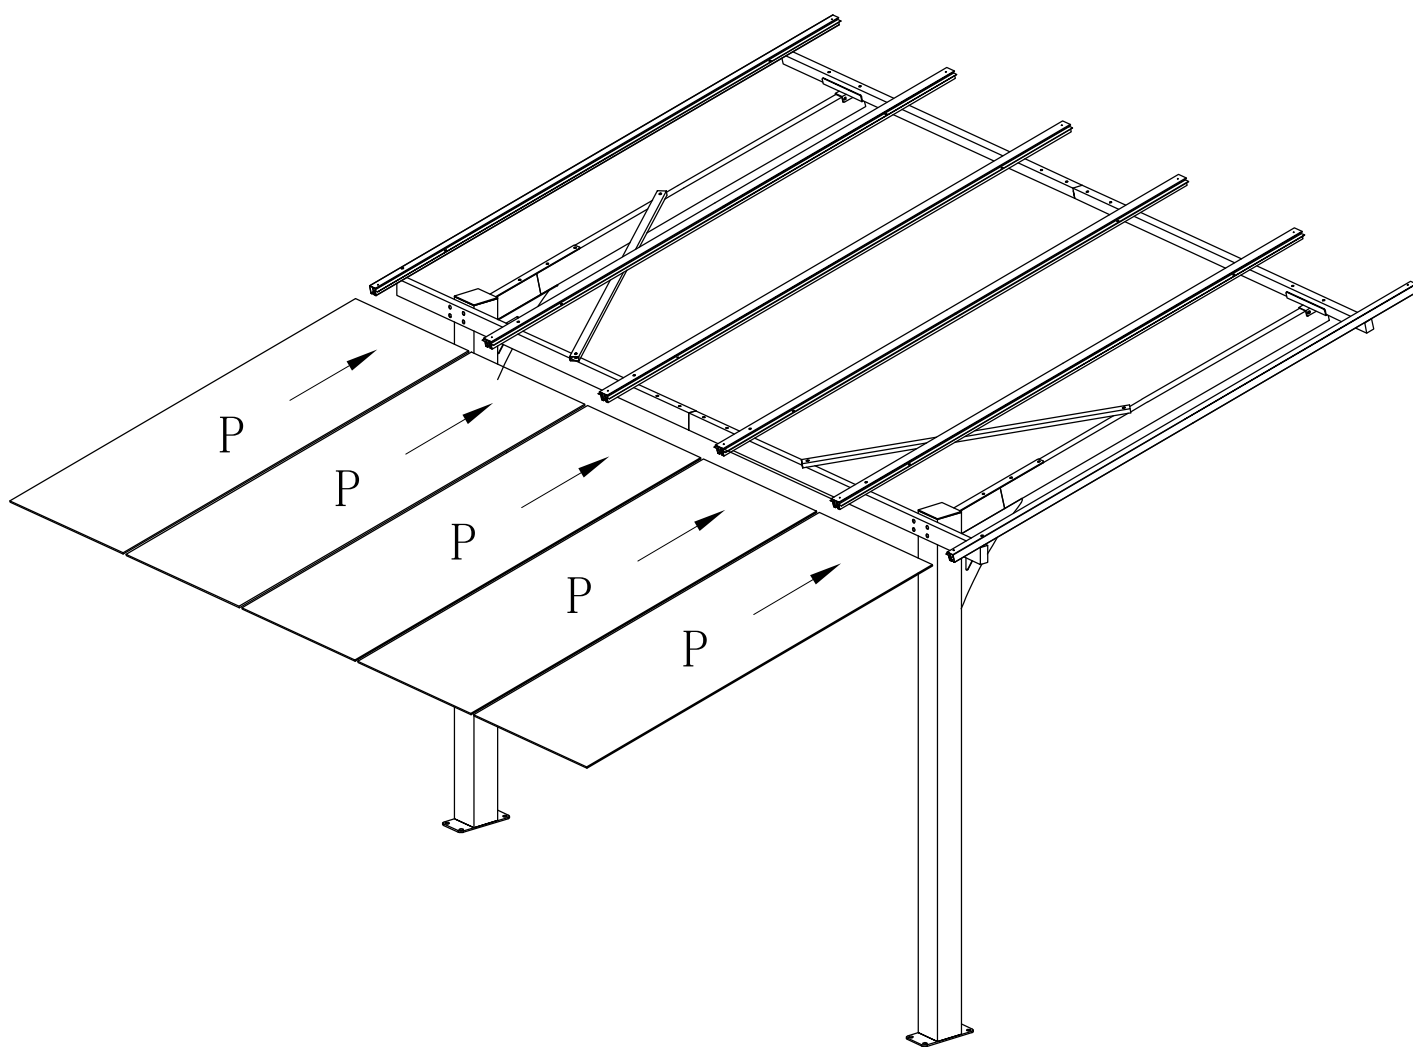


J		x2
J1		x2
R		x4
T7	 M4 x 12	x12

STEP 14

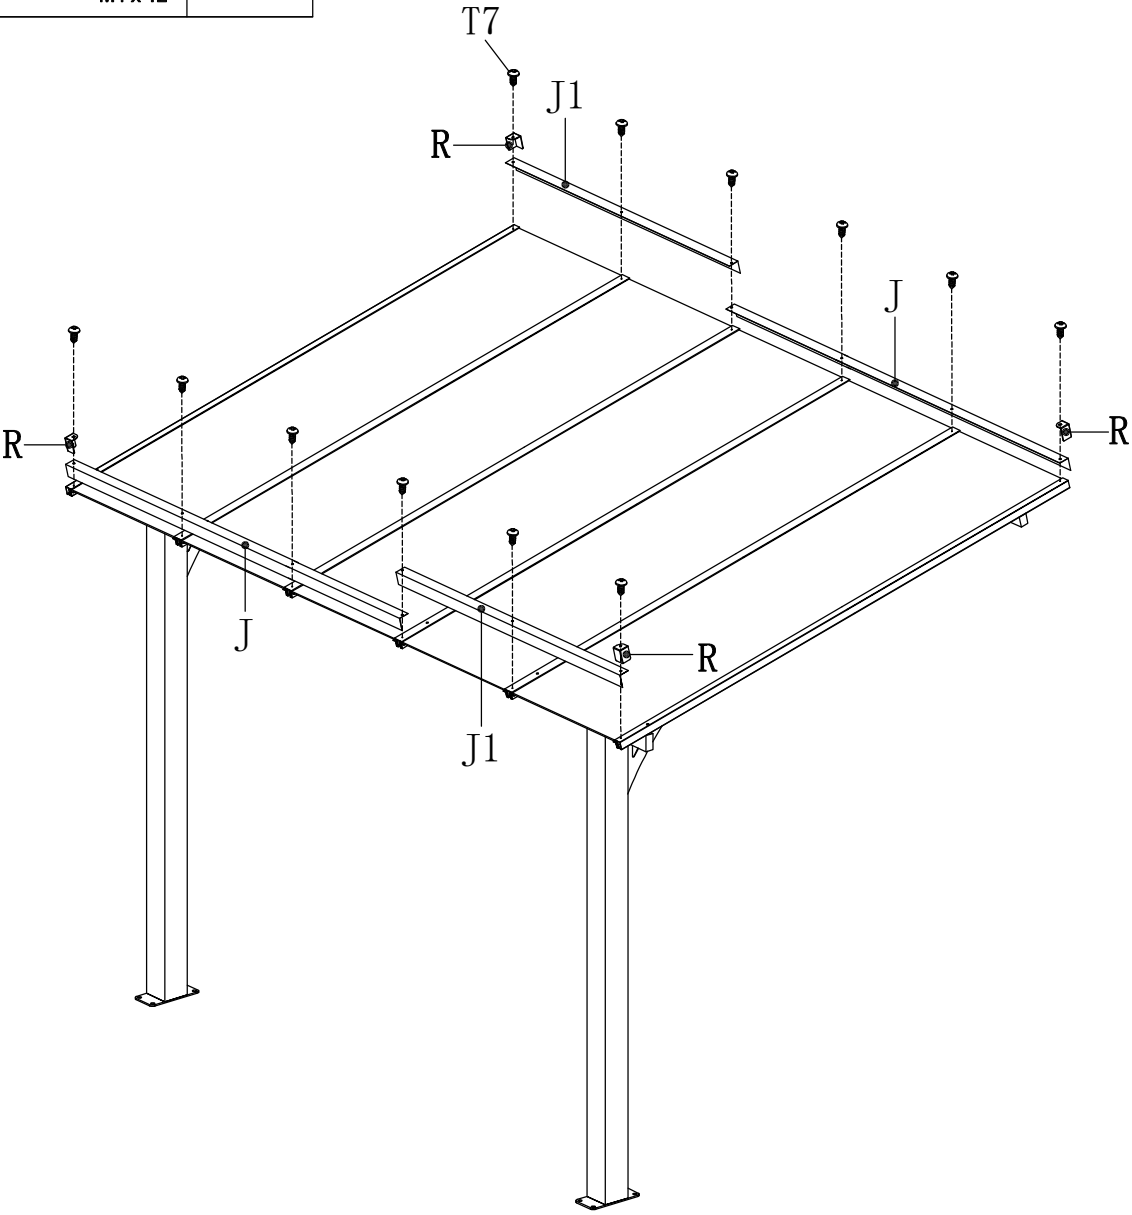

M7		x10
T8	 M4 * 6	x20

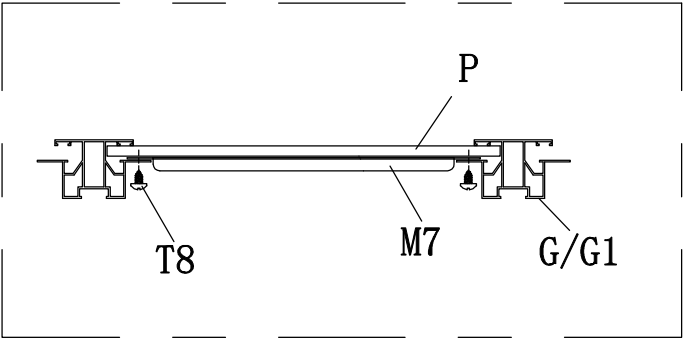

STEP 15

