



BED FRAME

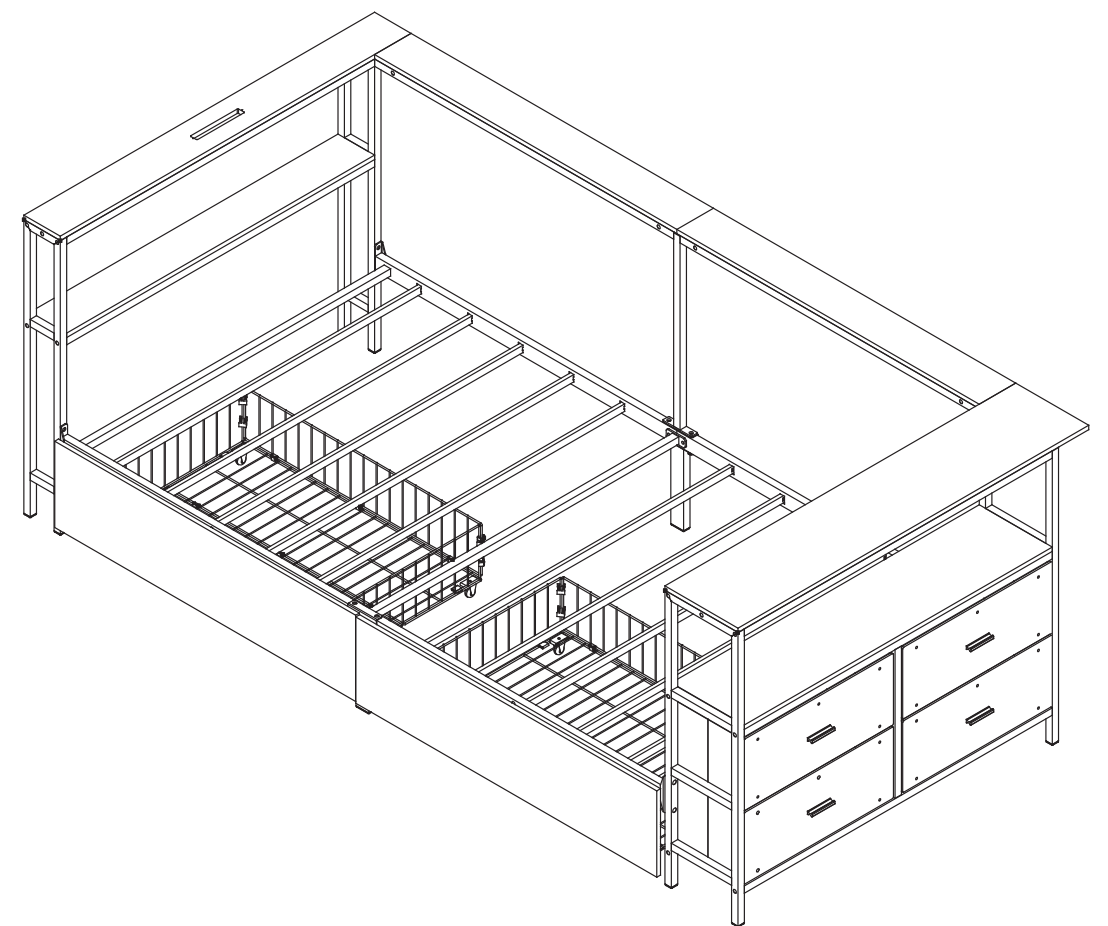

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction







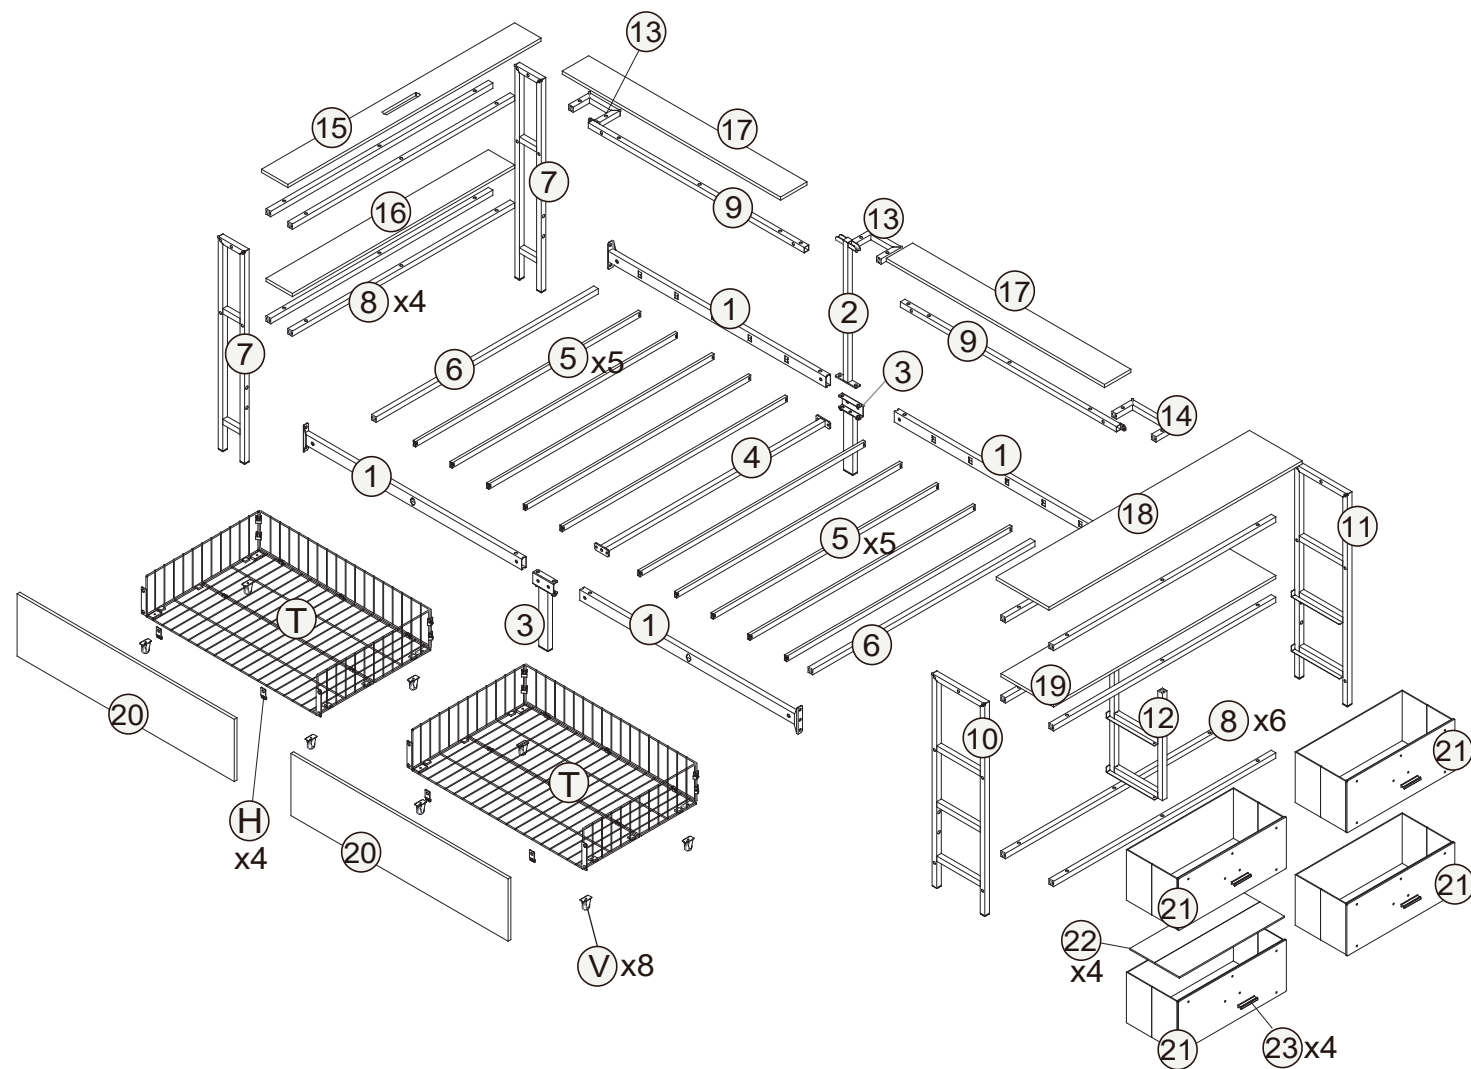










B636-F/Q/K

Important Note

HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

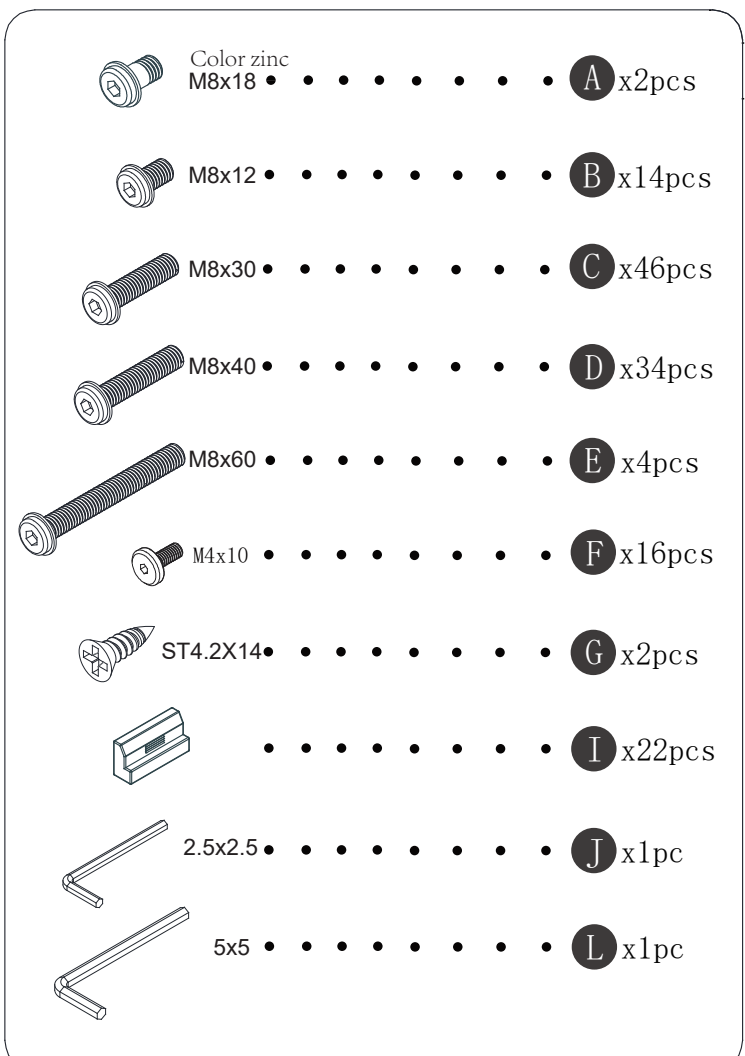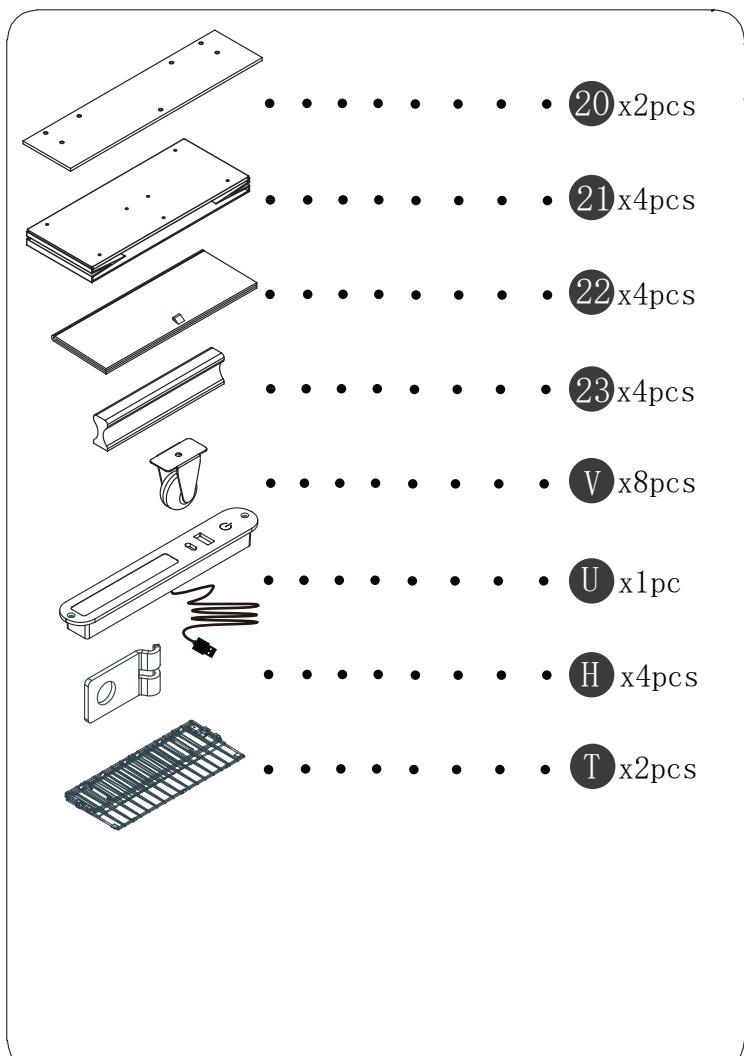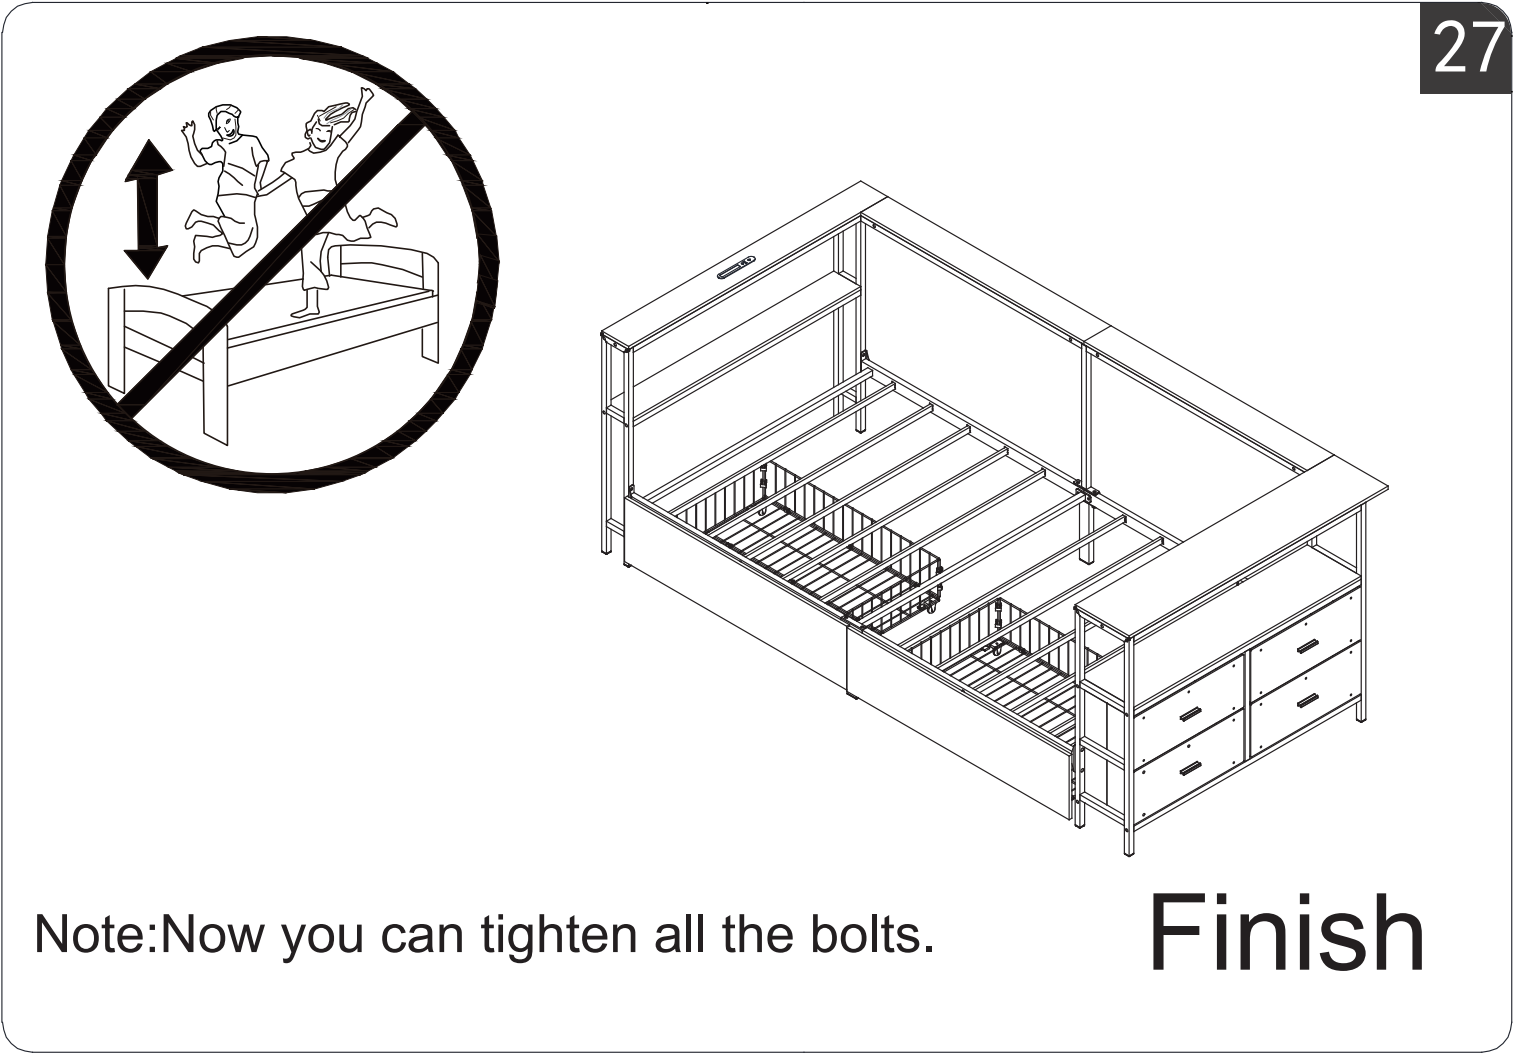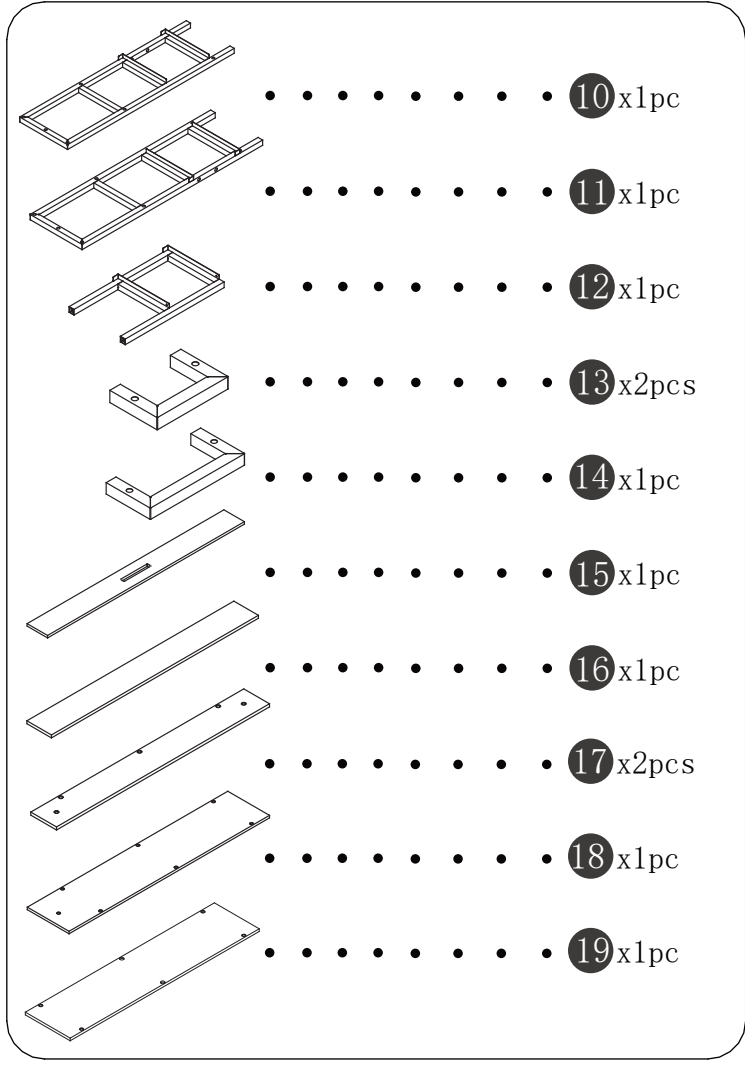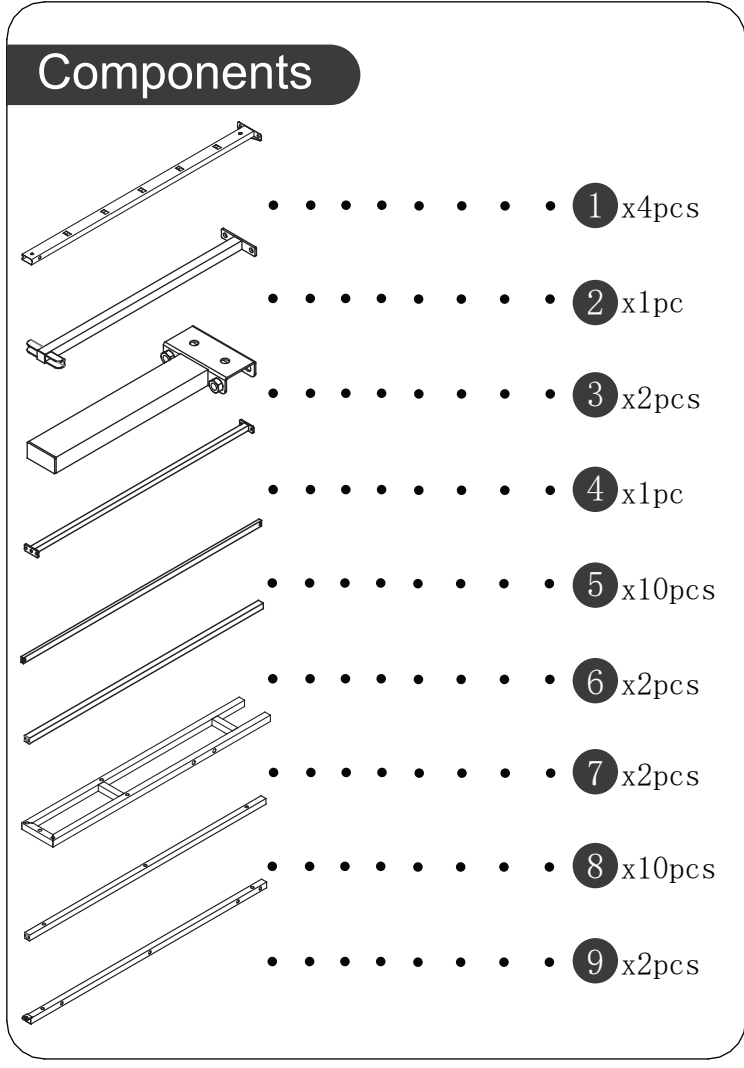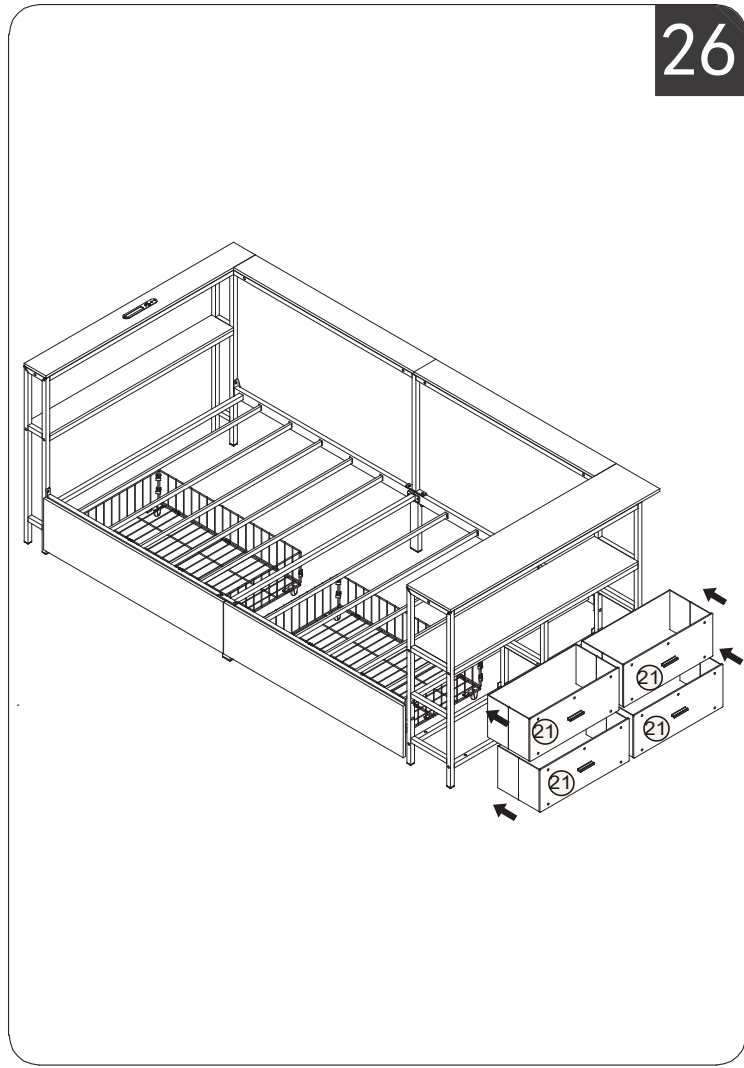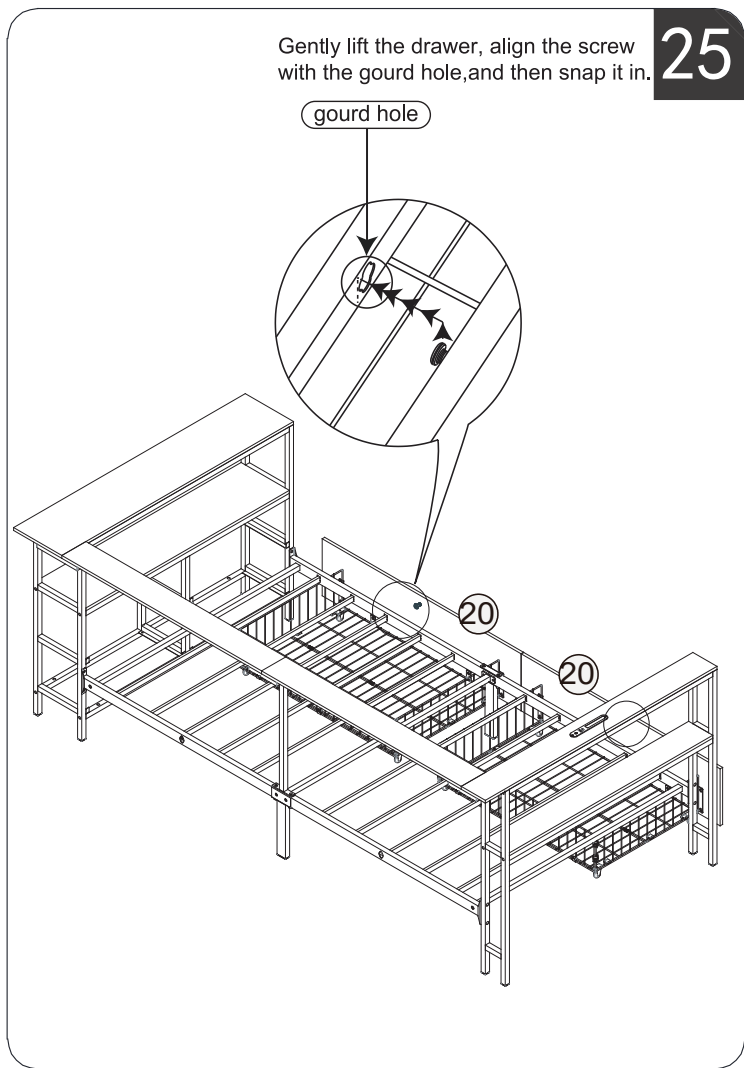

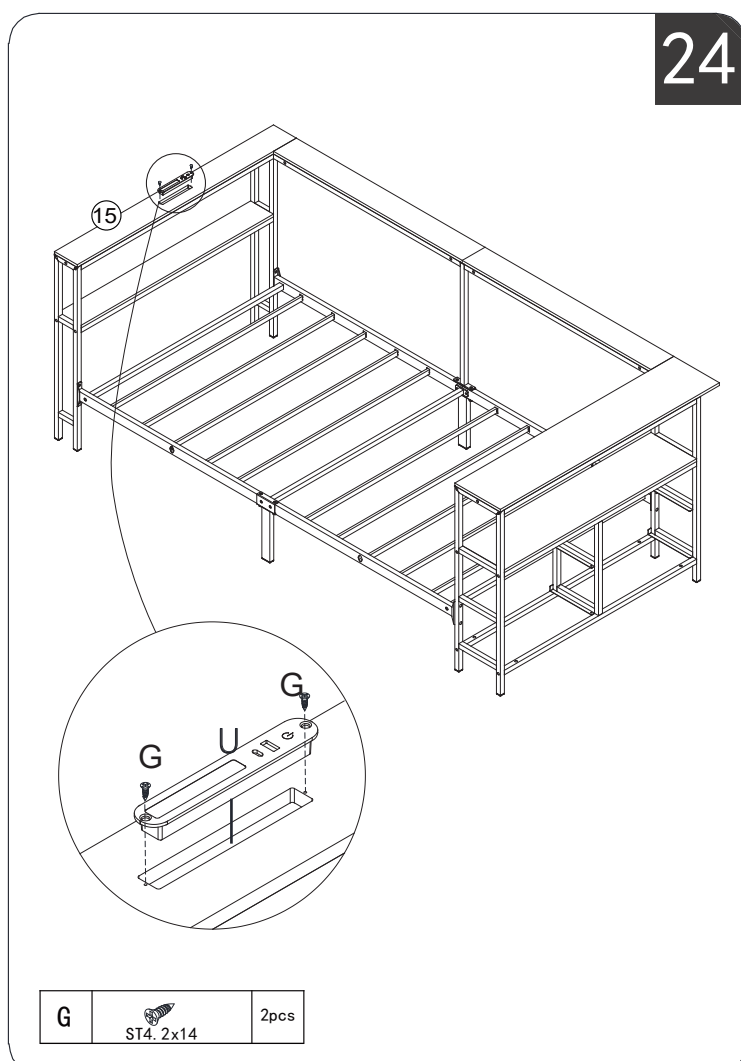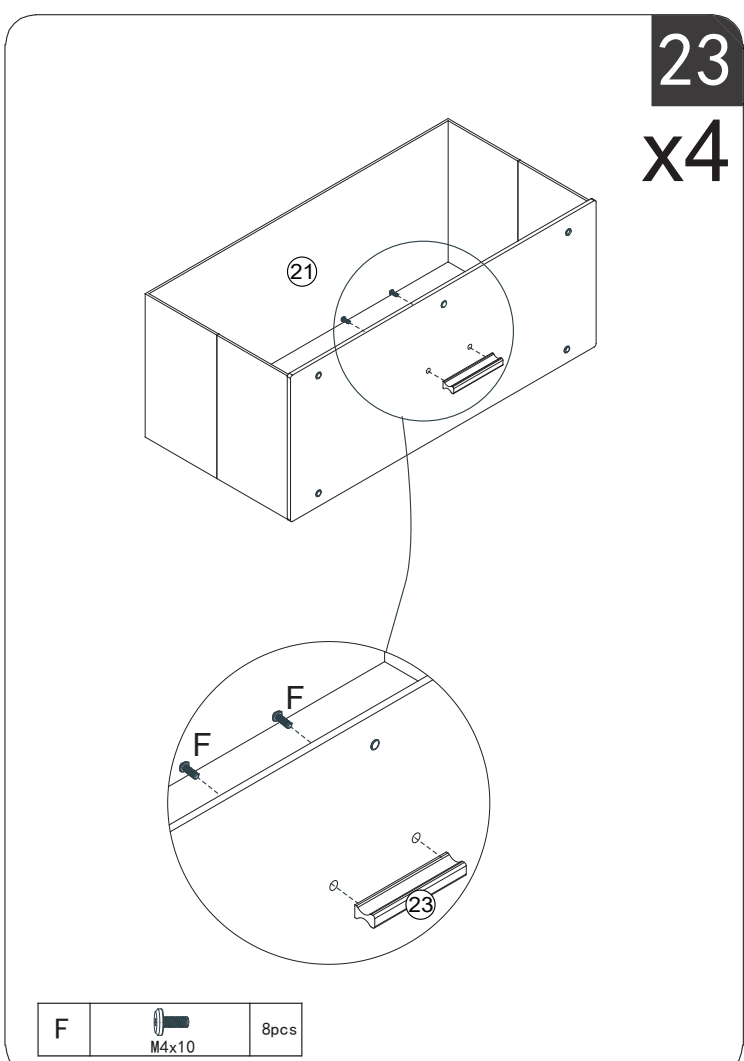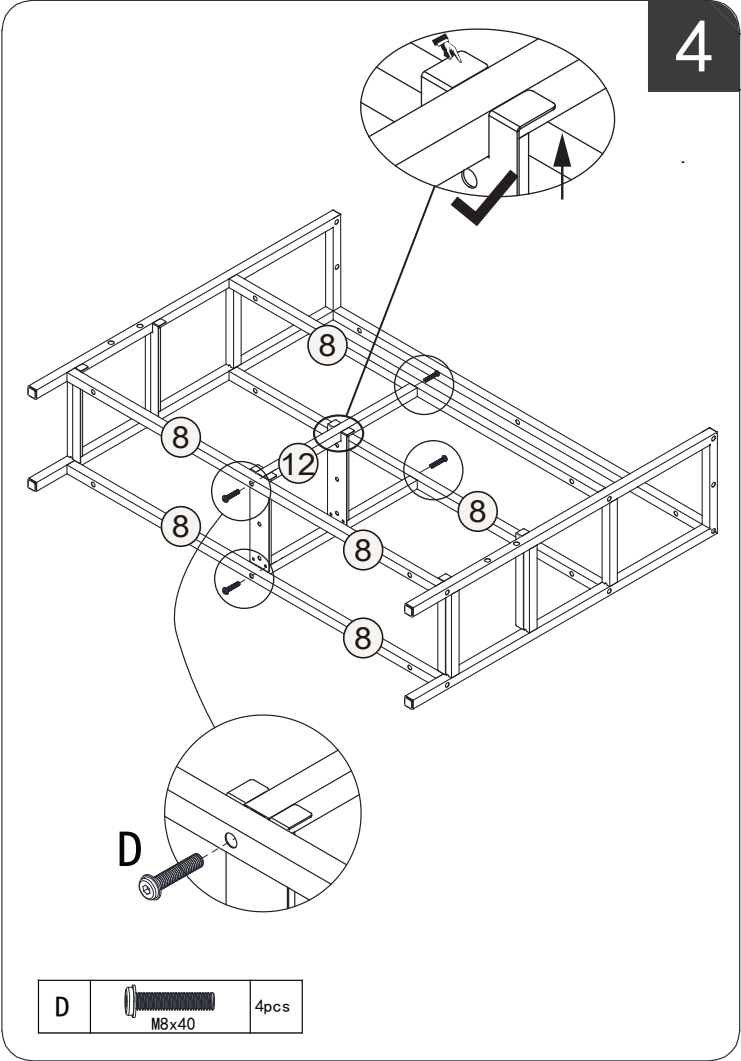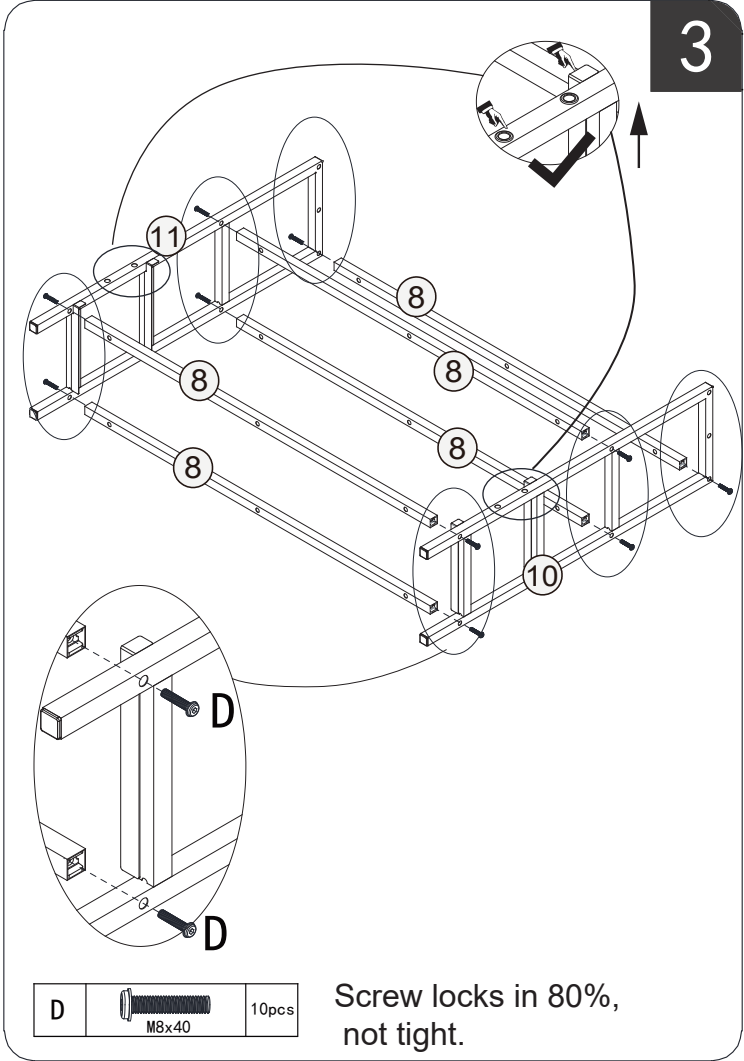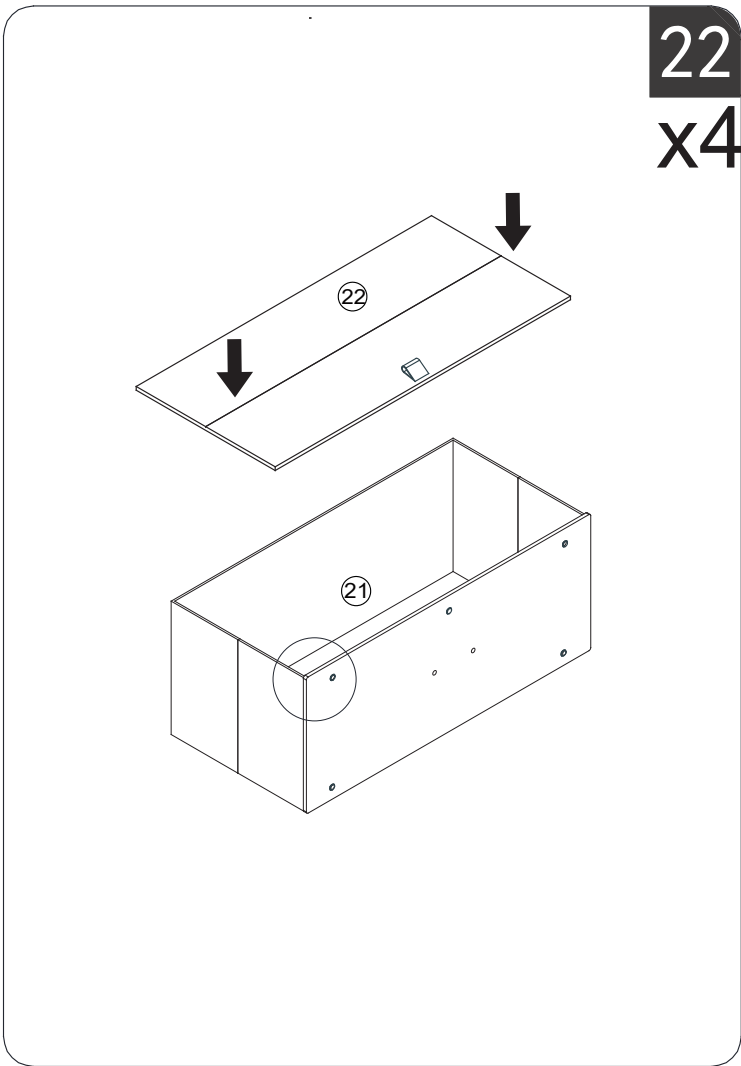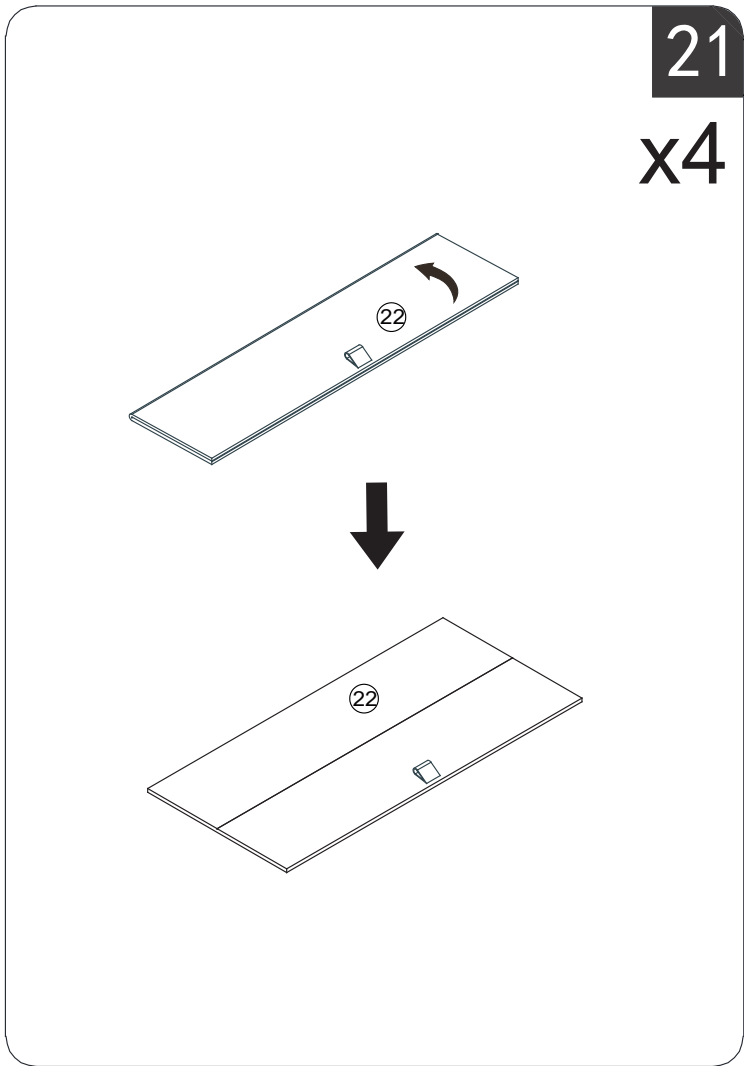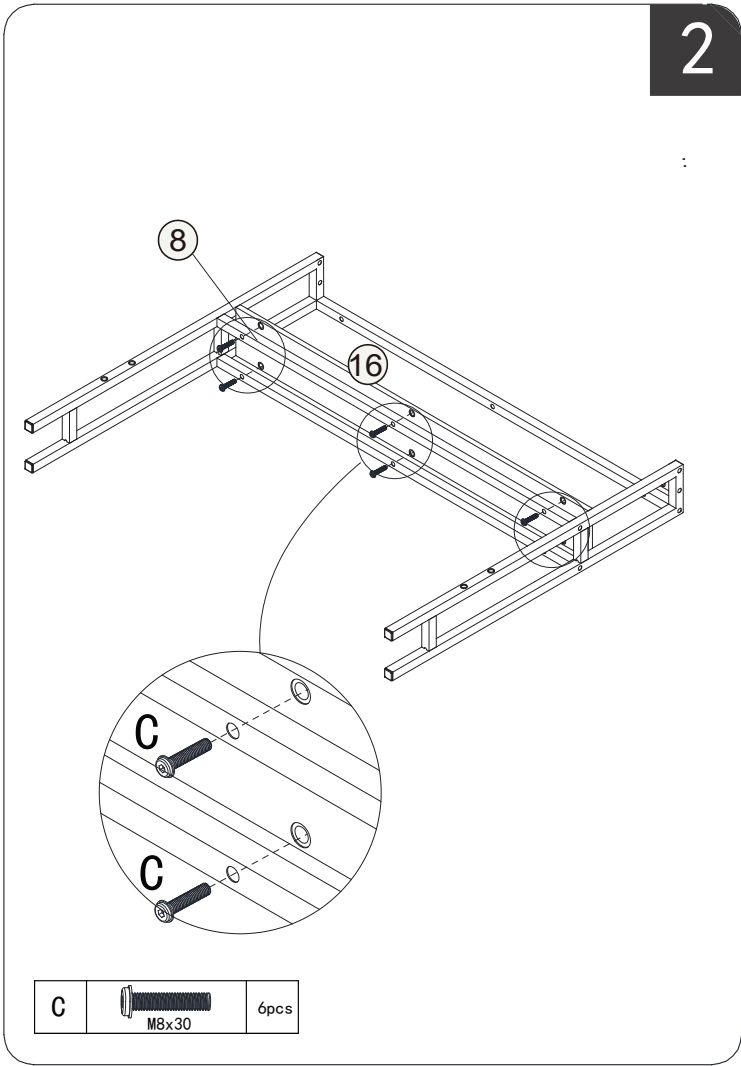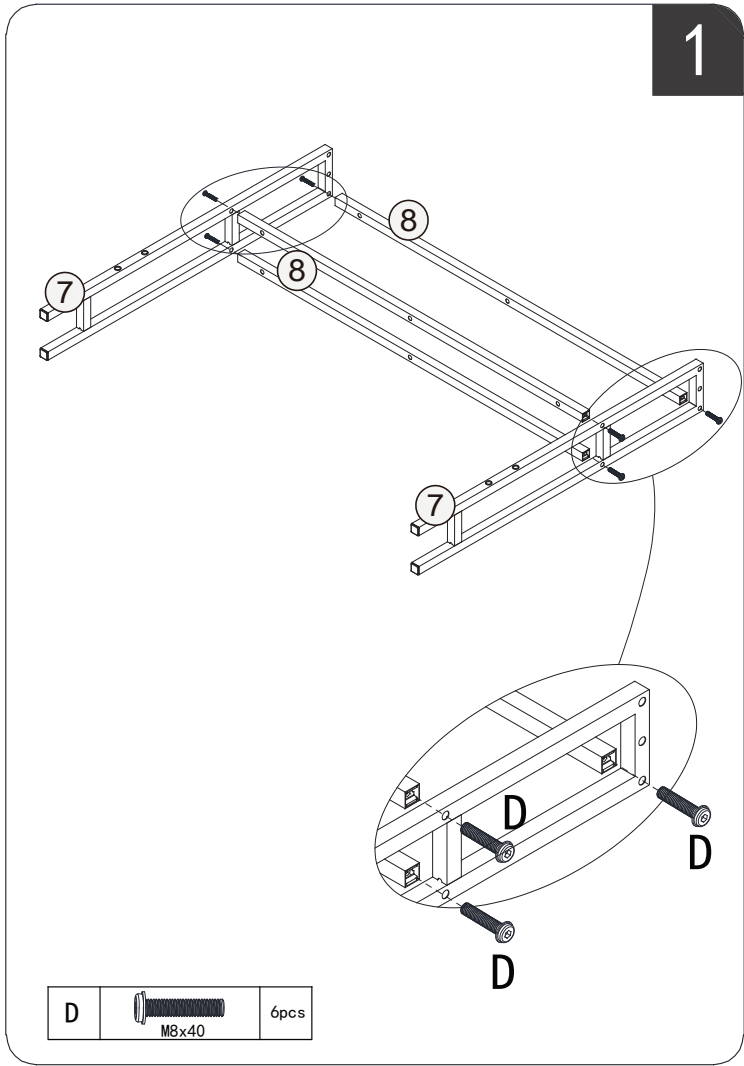

17

x2

B

M8x12

8pcs

18

x2

A

M8x18

2pcs

color zinc

B

M8x12

4pcs

5

C

M8x30

4pcs

6

E

M8x60

4pcs

19

x2

F

M4x10

8pcs

20

x4

7

B

M8x12

2pcs

8

C

M8x30

4pcs

D

M8x40

2pcs

