
EXPLODED VIEW

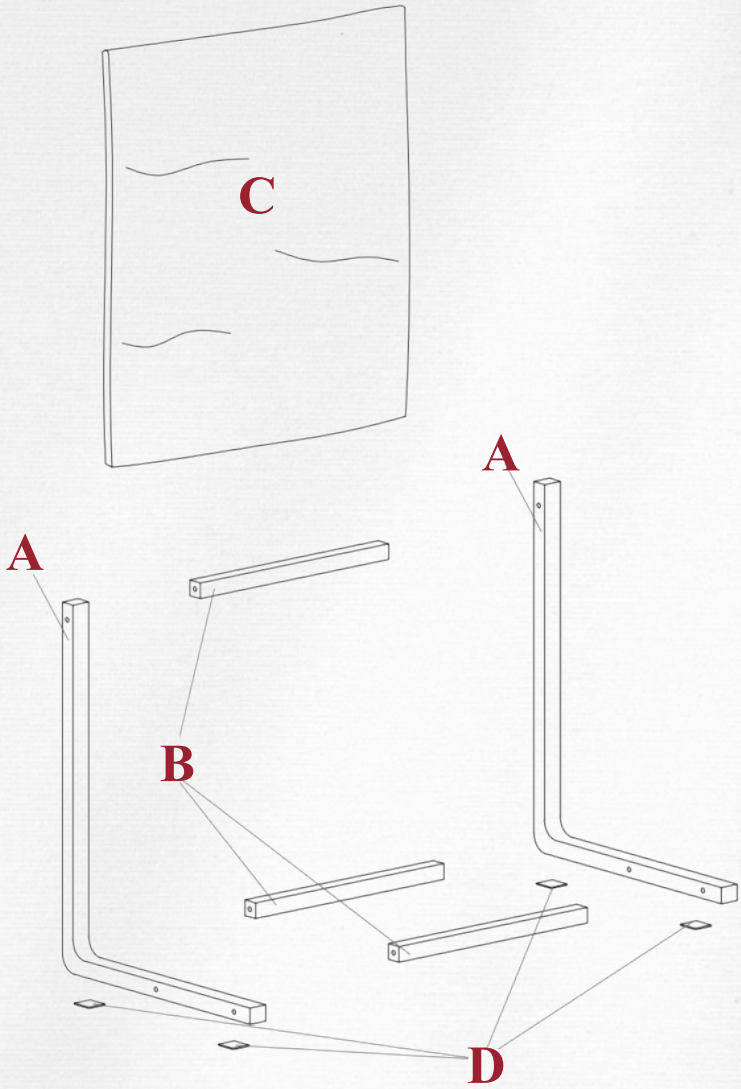

PARTS

A*2



Metal frame

B*3



Metal tube

C*1



Fabric cover

D*4



Foot pads

HARDWARE

①*6



Bolts


②*1



Allen key


STEP1

Connect two metal frames (A) with the metal tubes (B) as shown, use the allen wrench (2) provided to tighten all the bolts (1) on both sides, please make sure the bolts are fully tightened before next step. Stick the foot pads (D) on the corners of the metal frames (A) as shown.

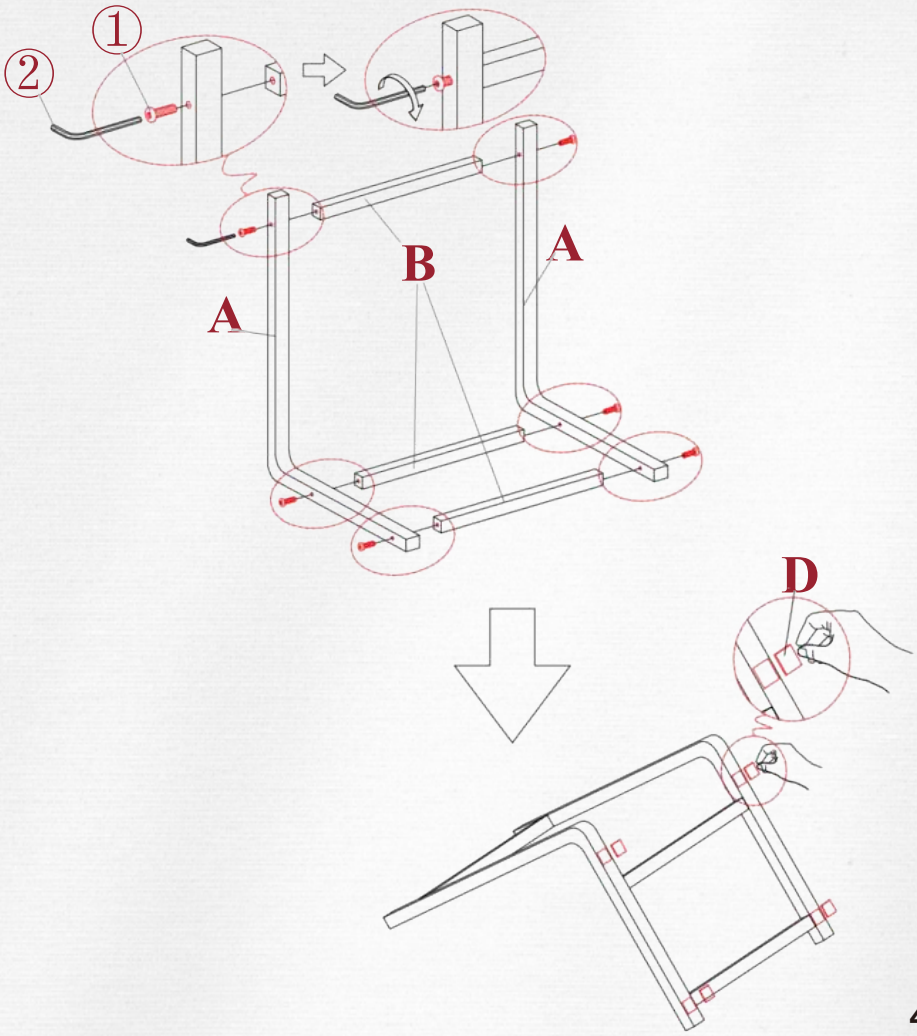

STEP2

Put on the fabric cover (C) to the metal frame as shown.

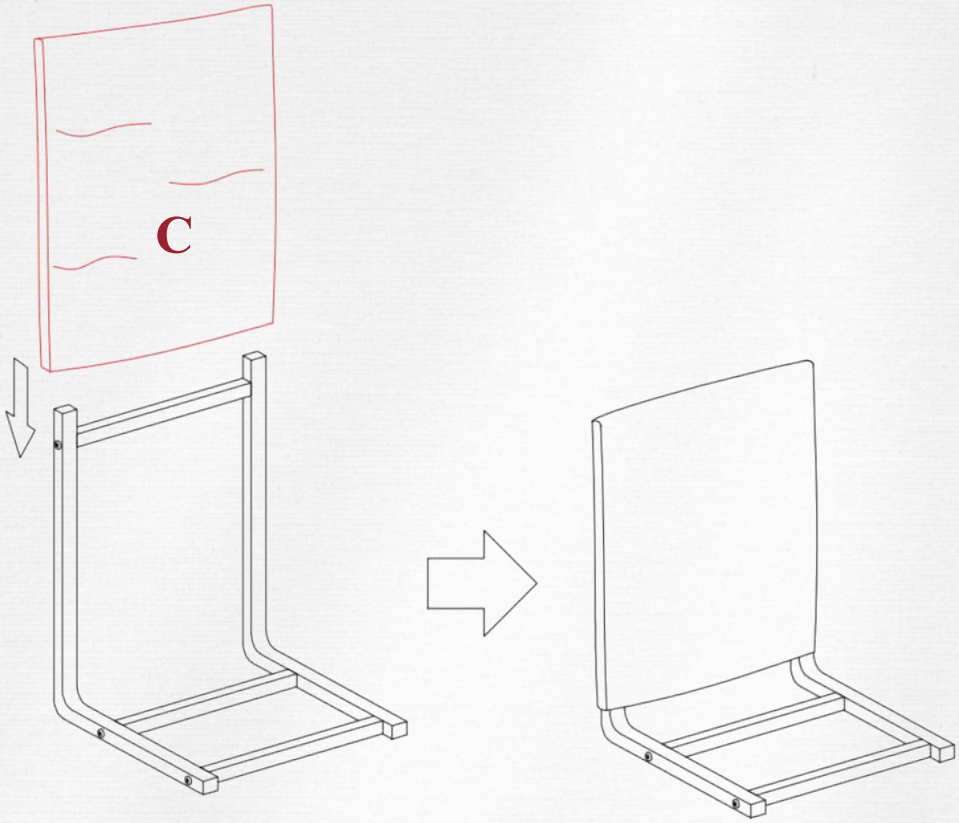

STEP3

Place the metal frame behind the armless chair/side chair as shown, this metal frame is for supporting use.

