


Assembly Instructions

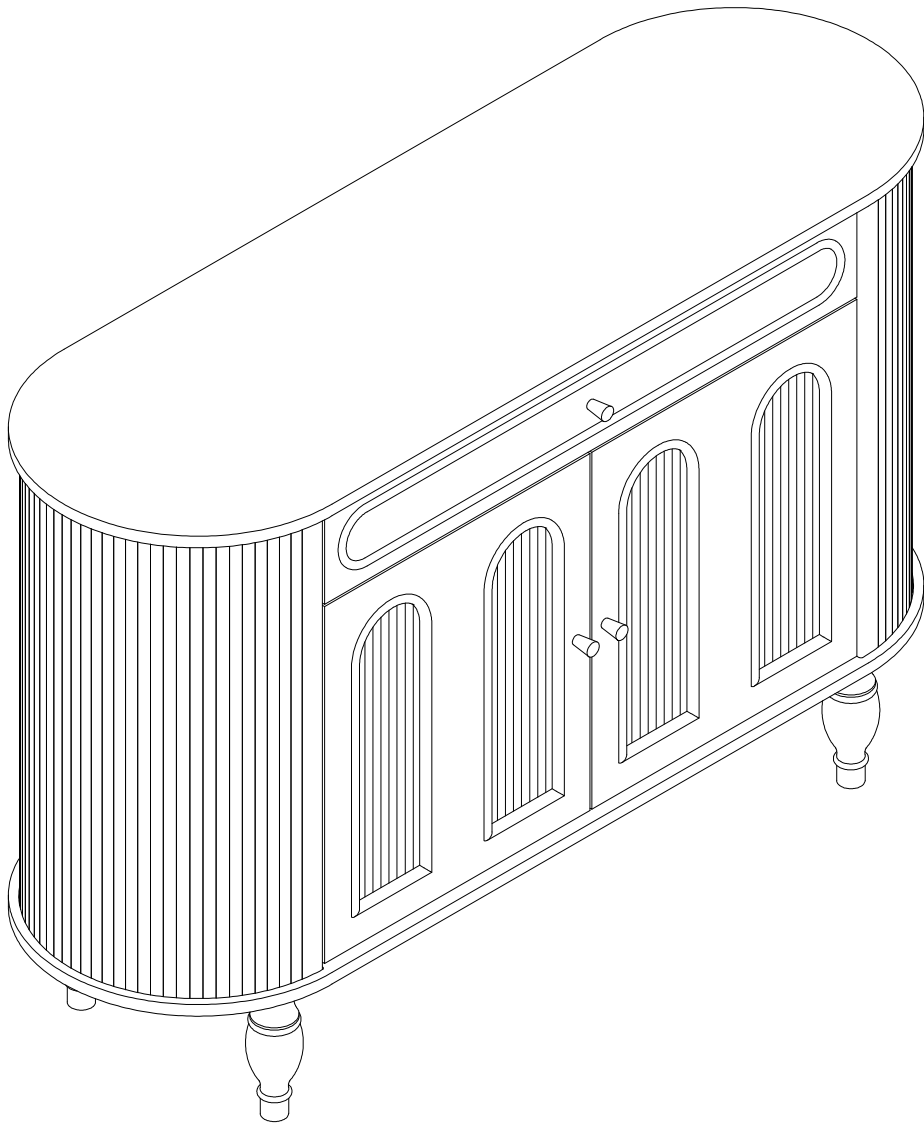


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

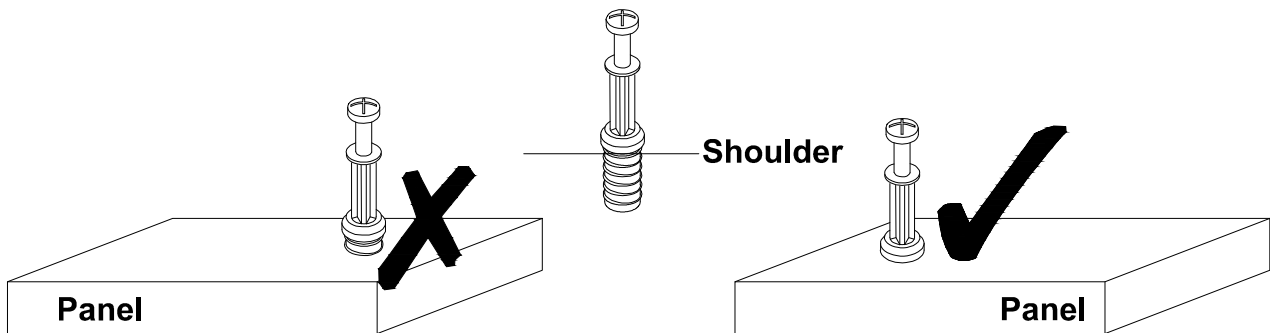

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

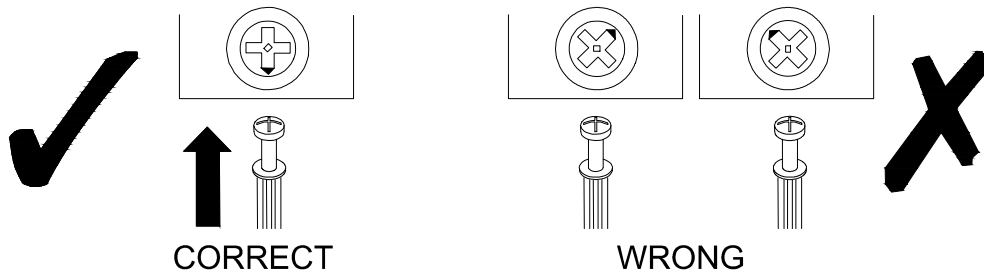

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

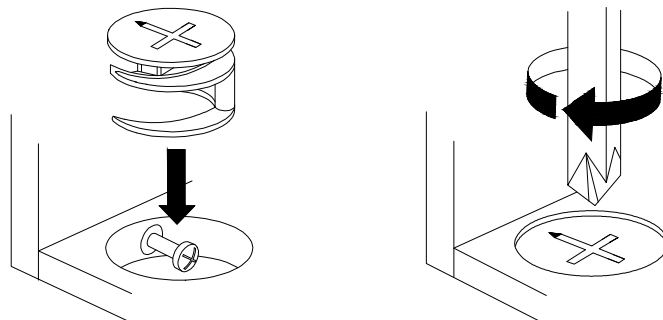


Turn cam lock clockwise to tighten.

Before Assembly


Tips Before Your Start

How to separate the drawer slider:

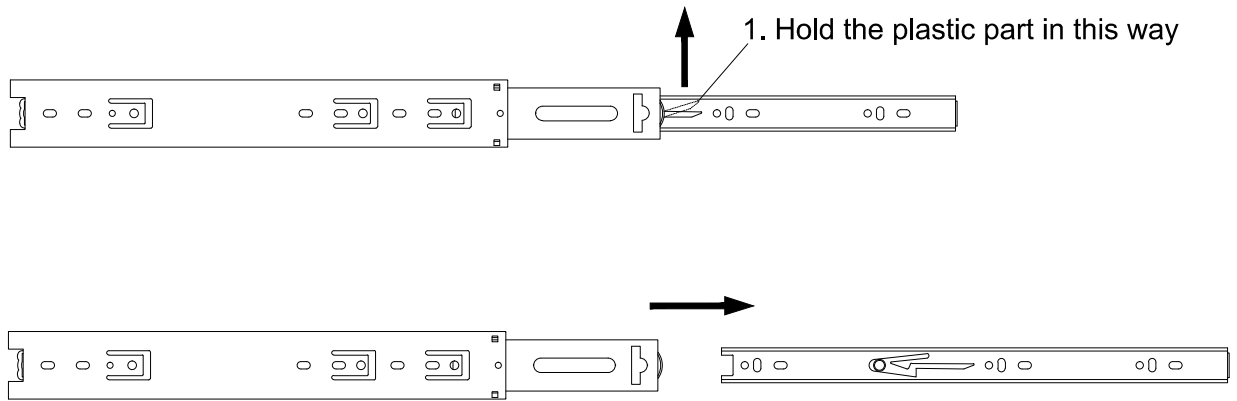


2. Pull out the inner slider for drawer box fixing

Drawer Front Alignment

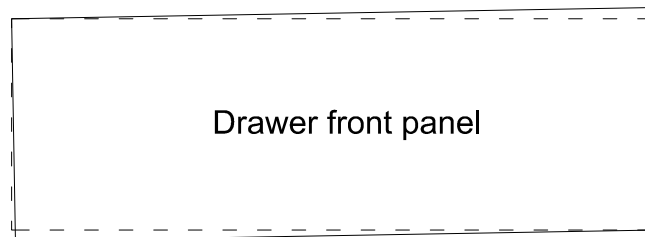










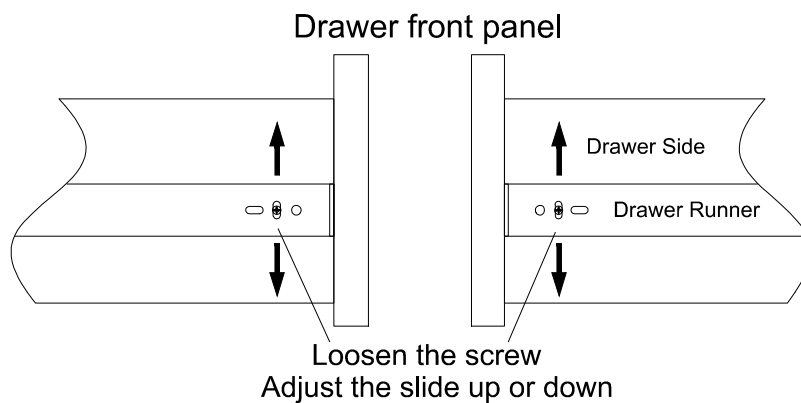








If the drawer front panel is NOT level after being assembled, then...

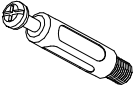


Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.

Part List

<p>No. A Quantity:28 Pcs Cam Lock Dowel 8*28mm</p> 	<p>No. B Quantity:28 Pcs Cam Ø15</p> 	<p>No. C Quantity:28 Pcs Sticker Ø20</p> 	<p>No. D Quantity:8 Pcs Dowel 8*30mm</p> 
<p>No. E Quantity:1 Sets Drawer Slider 10"</p> 	<p>No. F Quantity:4 Pcs Screw M4*30mm</p> 	<p>No. G Quantity:32 Pcs Screw M3.5*14mm</p> 	<p>No. H Quantity:3 Pcs Handle Ø20*23mm</p> 
<p>No. I Quantity:4 Pcs Foot Pad Ø20</p> 	<p>No. J Quantity:2 Pcs Screw M6*35mm</p> 	<p>No. K Quantity:2 Pcs Screw M6*55mm</p> 	<p>No. L Quantity:2 Pcs Screw M6*35mm</p> 
<p>No. M Quantity:4 Pcs Screw M6*40mm</p> 	<p>No. N Quantity:1 Pcs Allen Key 4#</p> 	<p>No. O Quantity:3 Pcs Screw M4*20mm</p> 	<p>No. P Quantity:4 Pcs Hinge</p> 
<p>No. Q Quantity:8 Sets Plastic Wedge</p> 	<p>No. R Quantity:1 Sets Anti-falling Parts</p> 		


Product structure

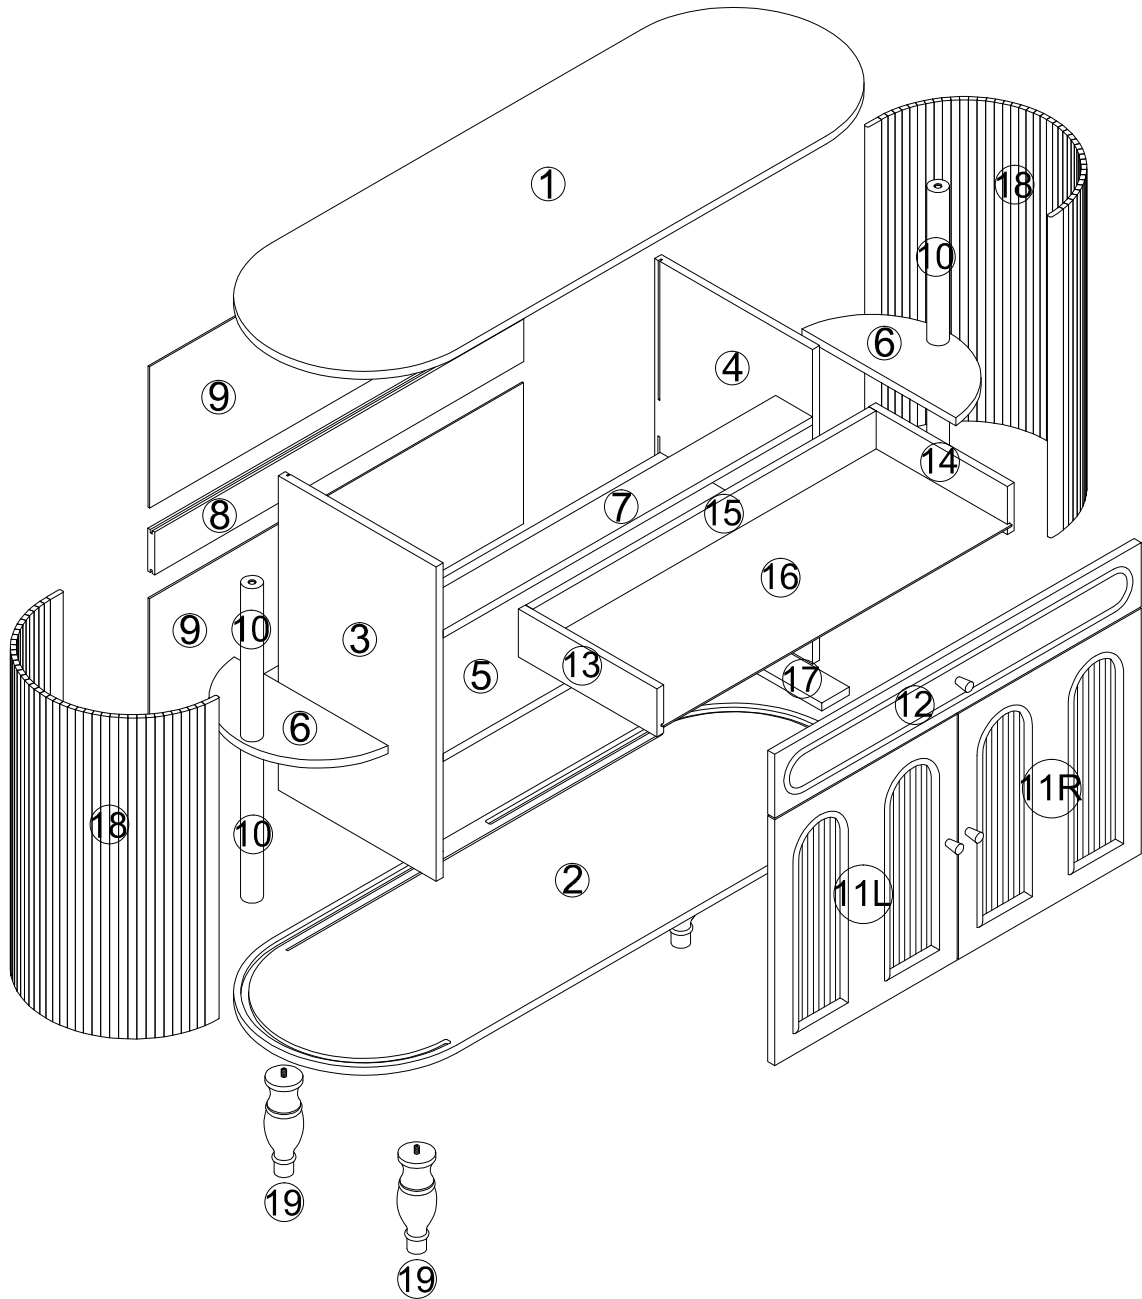

STEP 1




The first screw hole should corresponded with the board location hole

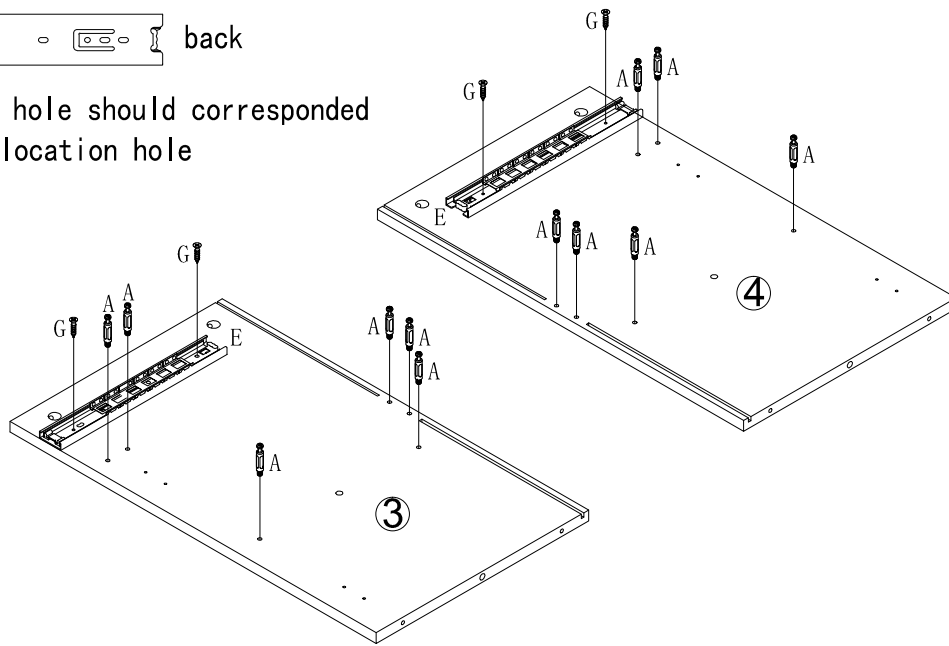

No. A
Quantity: 12 Pcs
8*28 mm




No. E
Quantity: 1 Sets
10"



No. G
Quantity: 4 Pcs
M3.5*14mm




STEP 2

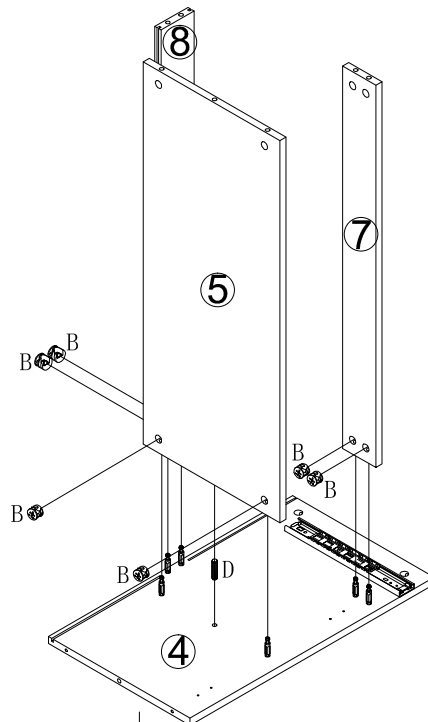


No. B
Quantity: 6 Pcs
Ø15



No. D
Quantity: 1 Pcs
8*30mm




STEP 3

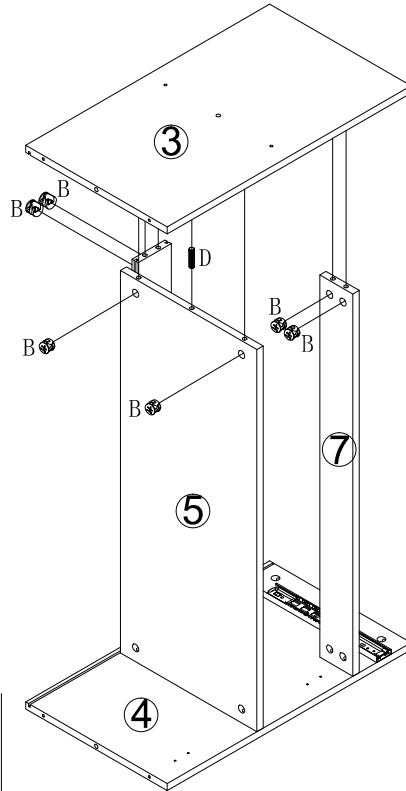


No. B
Quantity: 6 Pcs
Ø15




No. D
Quantity: 1 Pcs
8*30mm



STEP 4

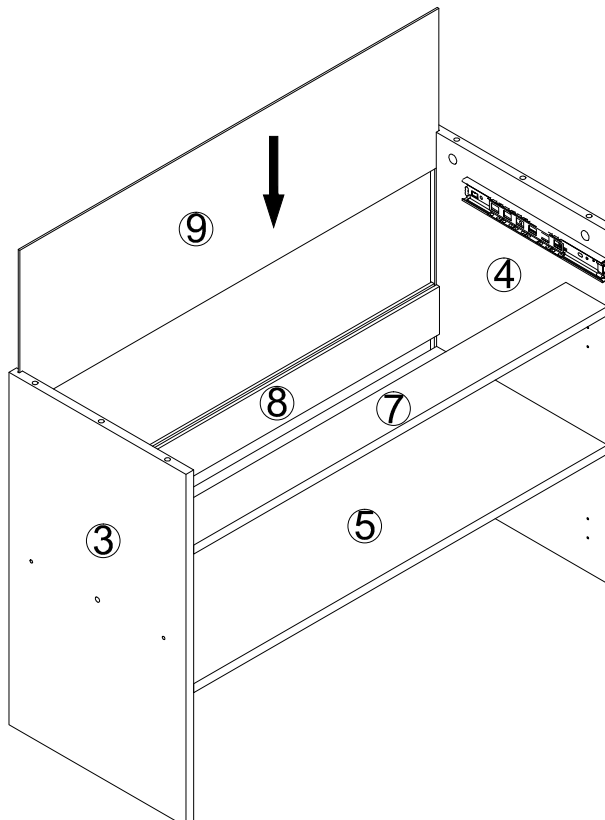

STEP 5

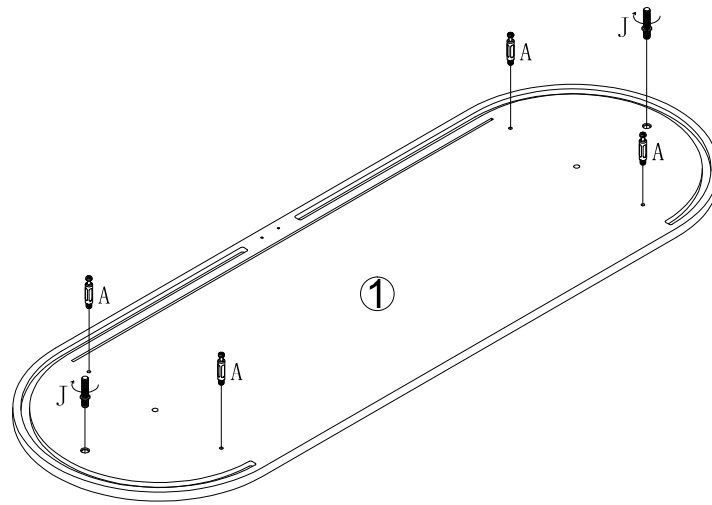


No. A
Quantity: 4 Pcs
8*28 mm



No. J
Quantity: 2 Pcs
M6*35mm




STEP 6

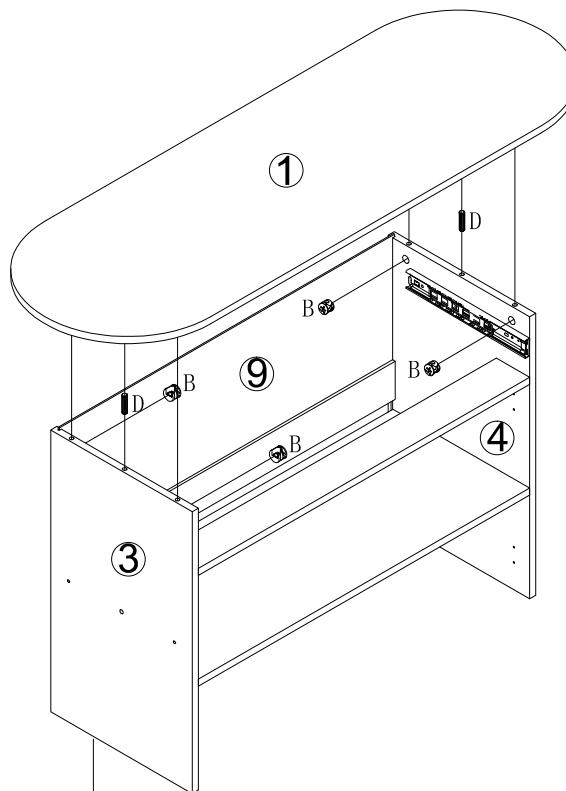


No. B
Quantity: 4 Pcs
Ø15




No. D
Quantity: 2 Pcs
8*30mm



STEP 7

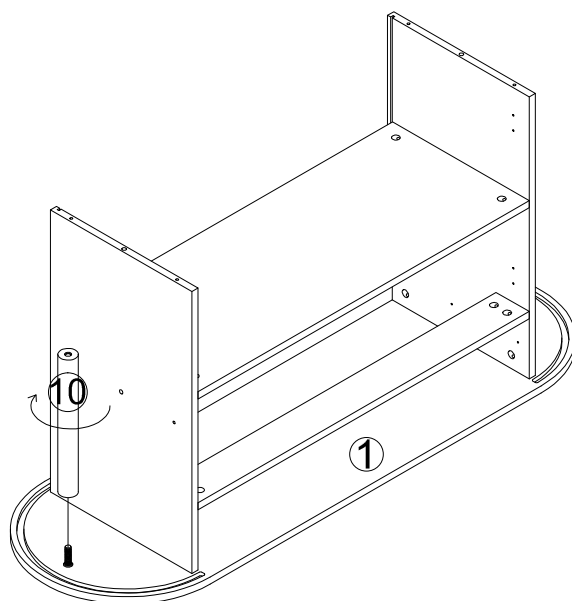


STEP 8

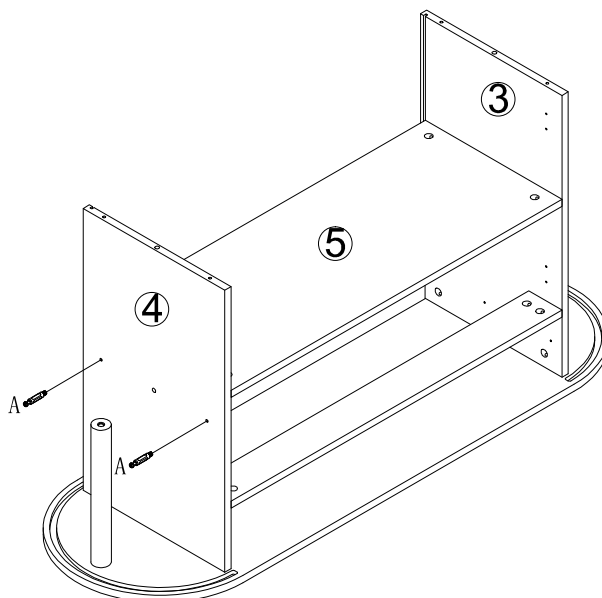

No. A
Quantity: 2 Pcs
8*28 mm




STEP 9

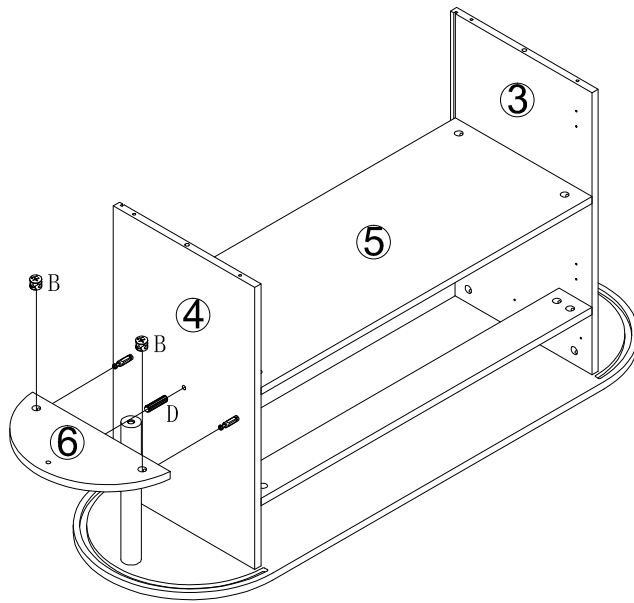


No. B
Quantity: 2 Pcs
Ø15




No. D
Quantity: 1 Pcs
8*30mm




STEP 10

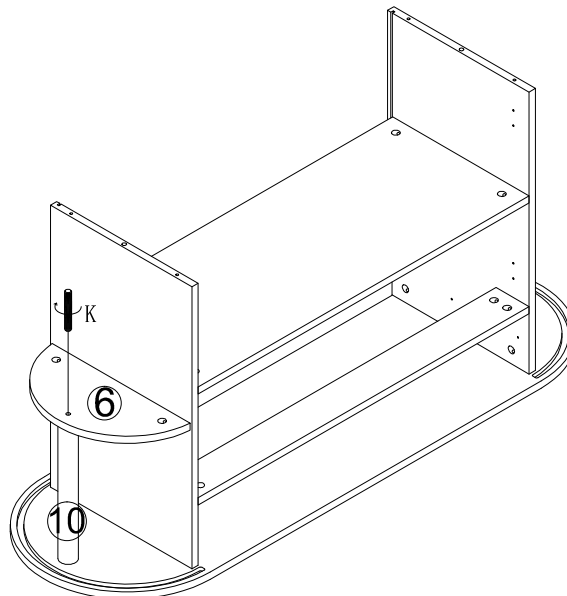


No. K
Quantity: 1 Pcs
M6*55mm




STEP 11

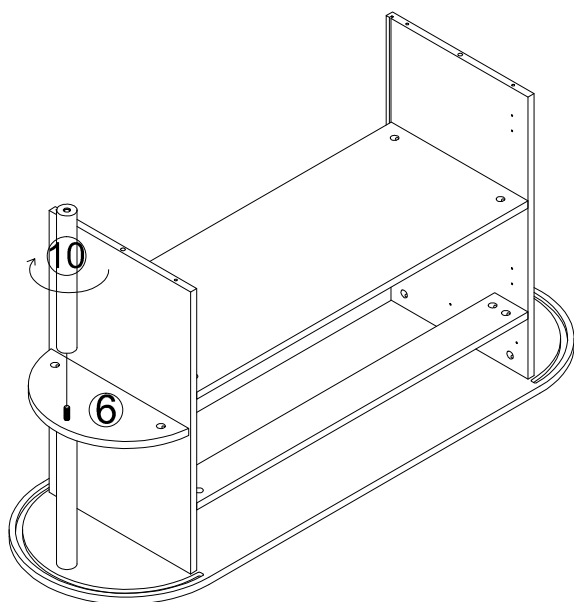

STEP 12

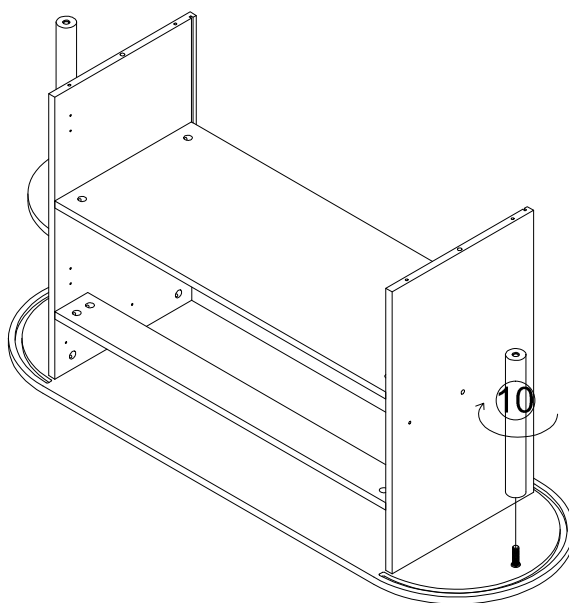


STEP 13

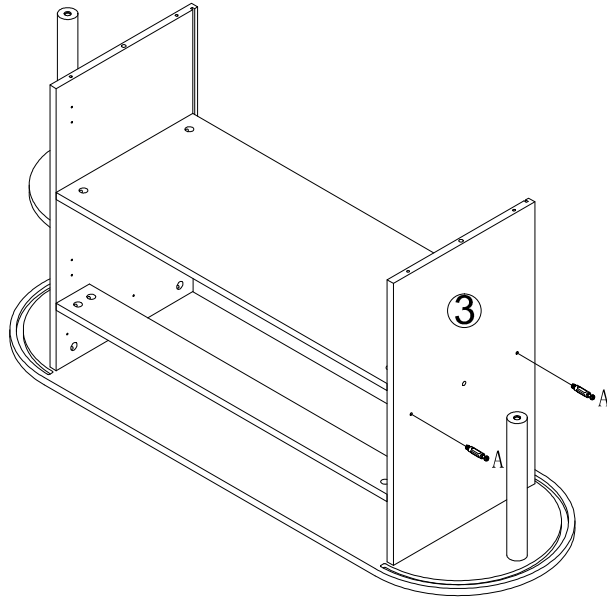

No. A
Quantity: 2 Pcs
8*28 mm




STEP 14

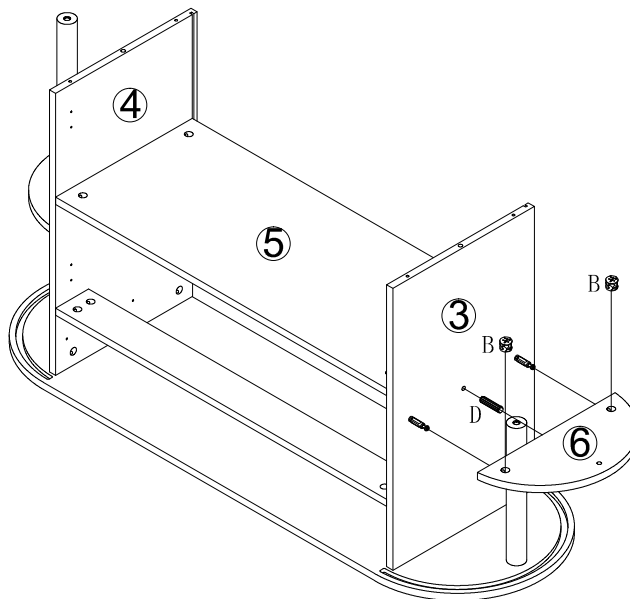


No. B
Quantity: 2 Pcs
Ø15




No. D
Quantity: 1 Pcs
8*30mm




STEP 15

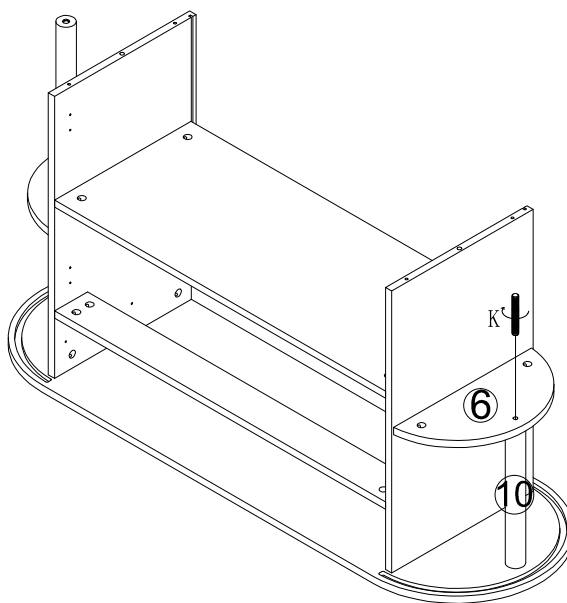


No. K
Quantity: 1 Pcs
M6*55mm



STEP 16

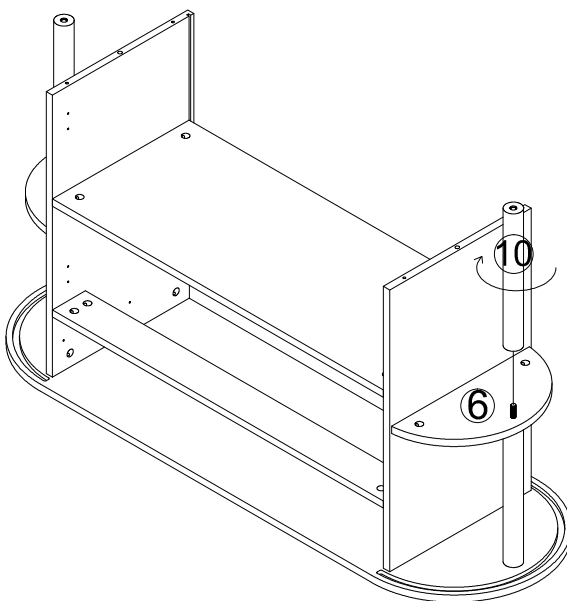


STEP 17

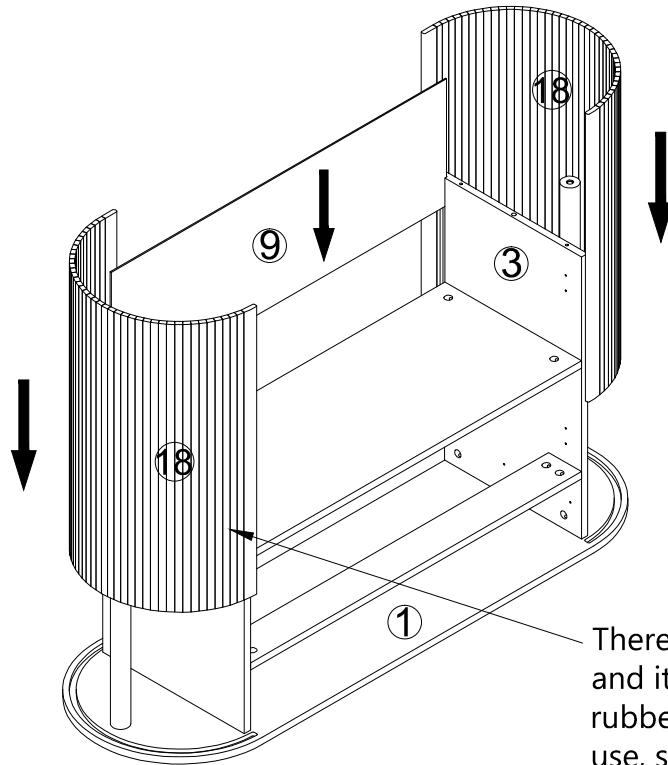


There is wax on the sliding door, and it needs to be pushed and rubbed back and forth before use, so that the wax is evenly attached to the board.

STEP 18

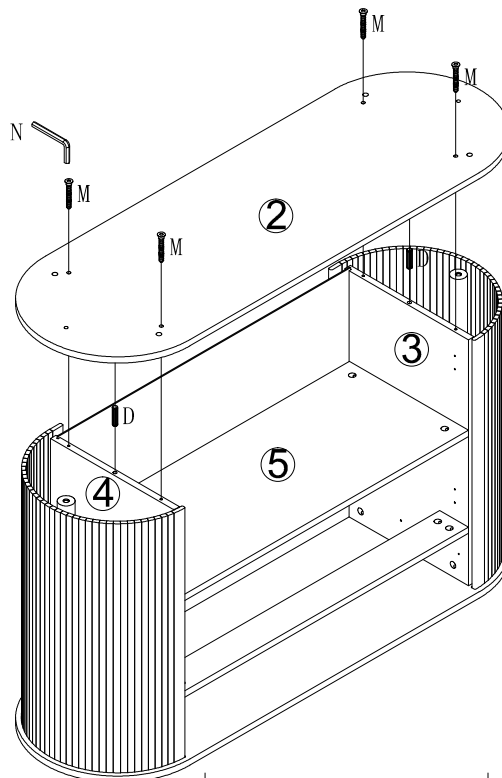

No. D
Quantity: 2 Pcs
8*30mm




No. M
Quantity: 4 Pcs
M6*40mm



No. N
Quantity: 1 Pcs
4#



STEP 19

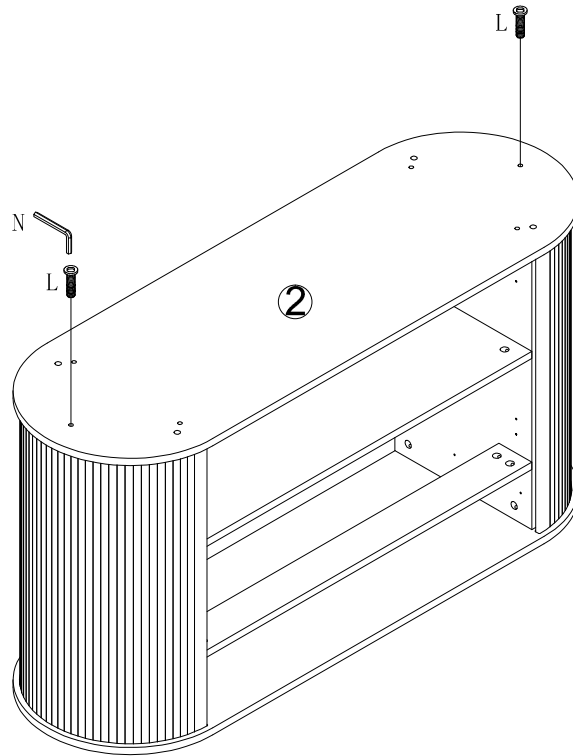


No. L
Quantity: 2 Pcs
M6*35mm




No. N
Quantity: 1 Pcs
4#



STEP 20

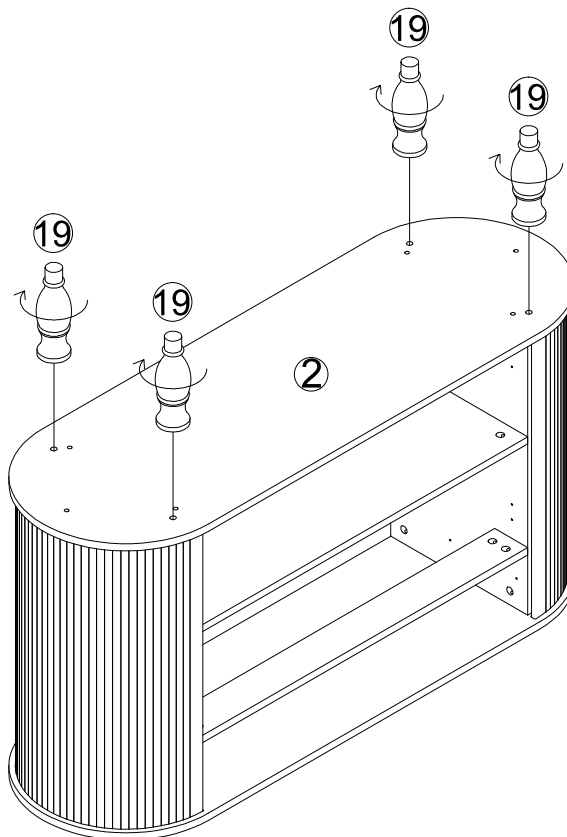


STEP 21

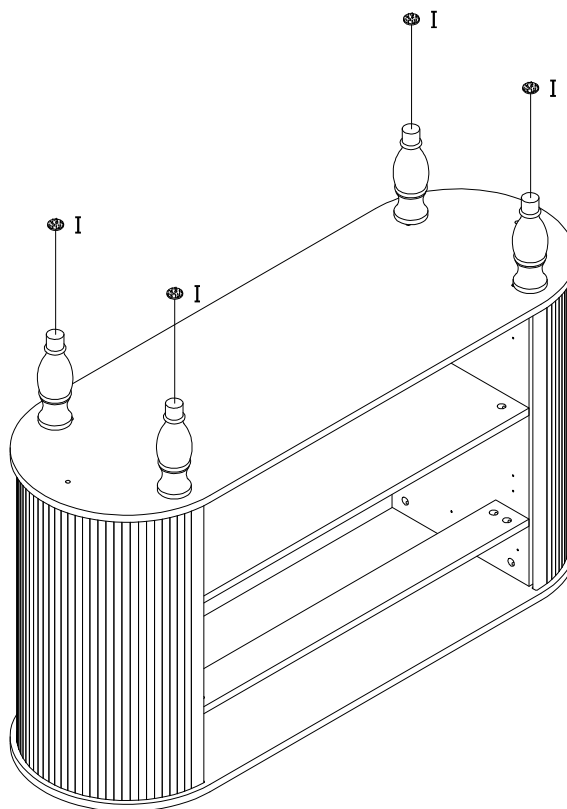

No. I
Quantity: 4 Pcs
Ø20



STEP 22

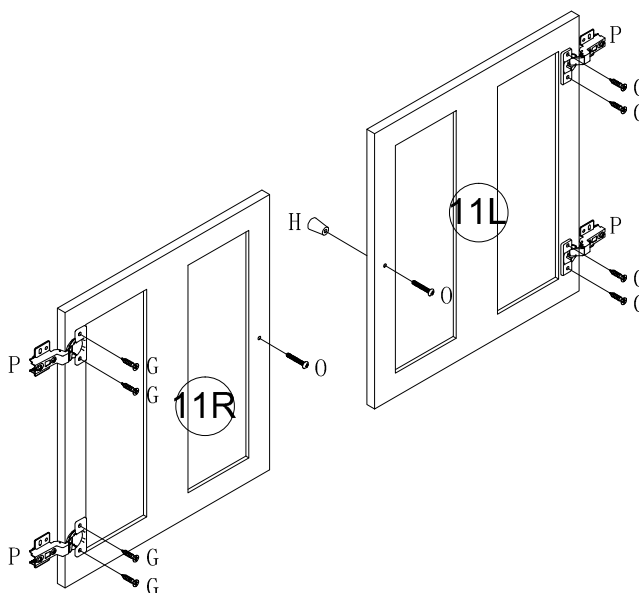

No. G
Quantity: 8 Pcs
M3.5*14mm




No. H
Quantity: 2 Pcs
Ø20*23mm





No. O
Quantity: 2 Pcs
M4*20mm



No. P
Quantity: 4 Pcs




STEP 23

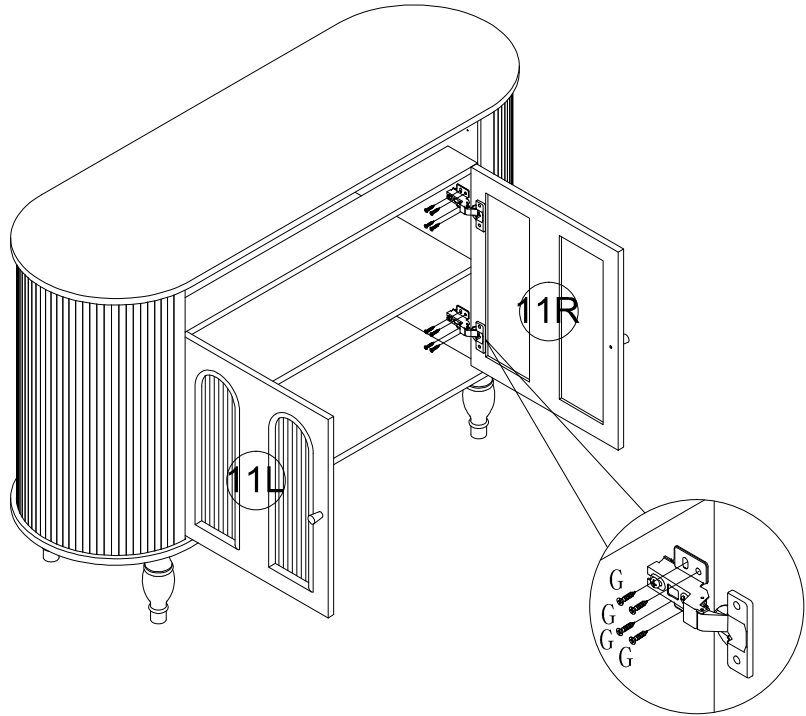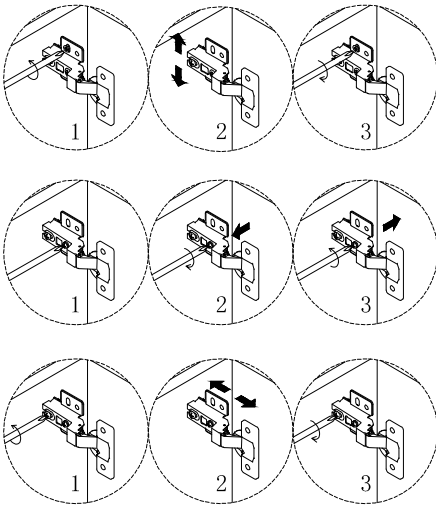

No. G
Quantity: 16 Pcs
M3.5*14mm



STEP 24

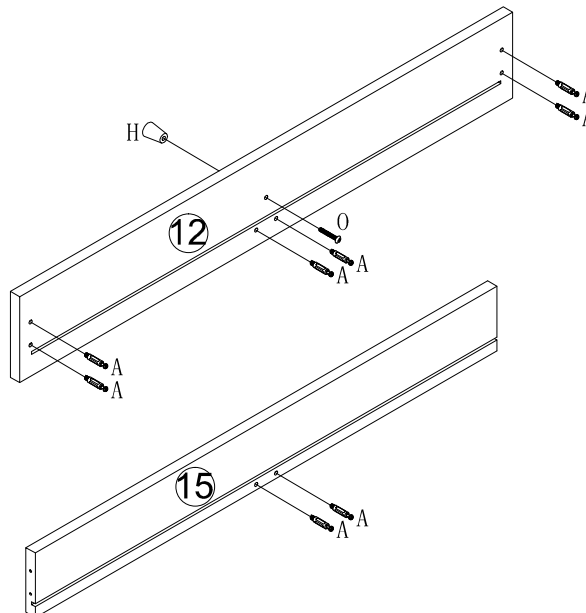

No. A
Quantity: 8 Pcs
8*28 mm




No. H
Quantity: 1 Pcs
Ø20*23mm



No. O
Quantity: 1 Pcs
M4*20mm




STEP 25

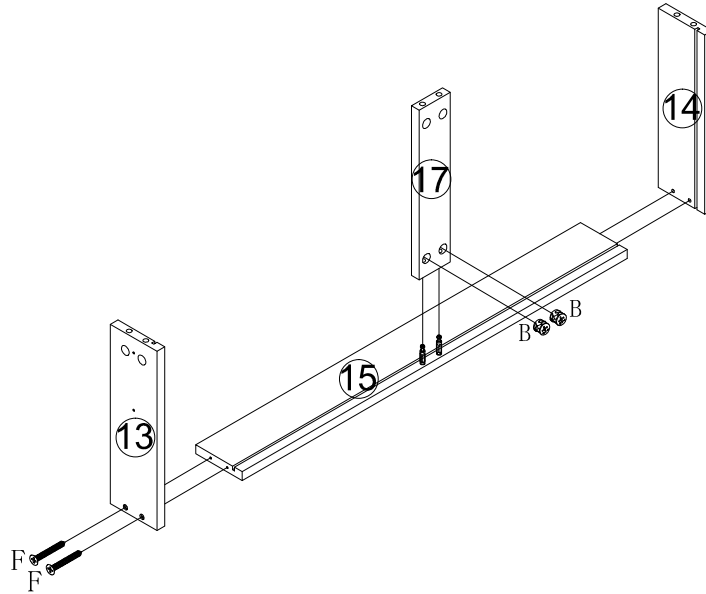


No. B
Quantity: 2 Pcs
Ø15



No. F
Quantity: 4 Pcs
M4*30mm



STEP 26

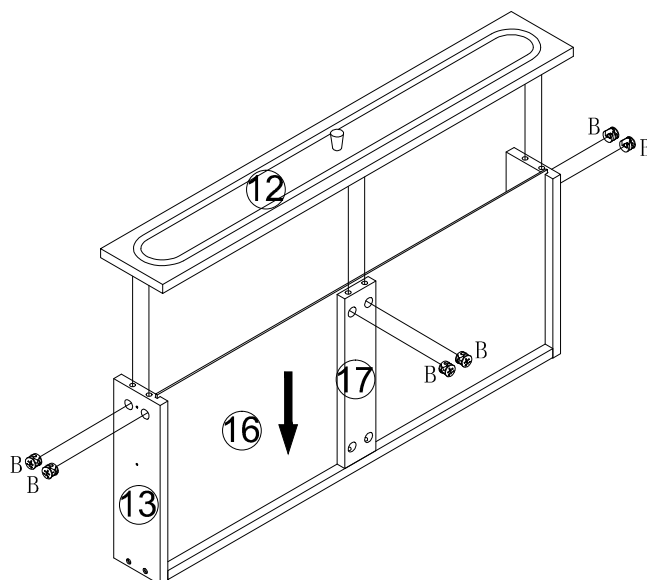


No. B
Quantity: 6 Pcs
Ø15




STEP 27

 back

The first screw hole should corresponded with the board location hole

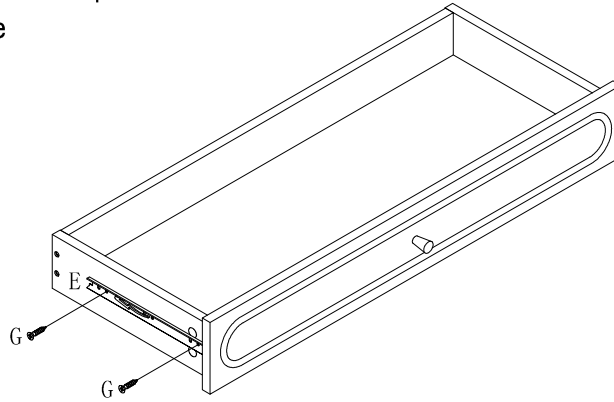


No. E
Quantity: 1 Sets
12"




No. G
Quantity: 4 Pcs
M3.5*14mm




STEP 28

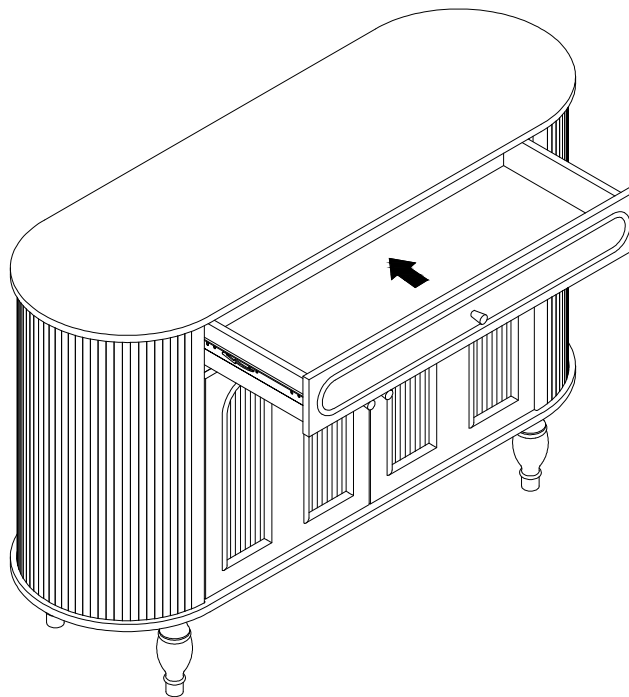


STEP 29

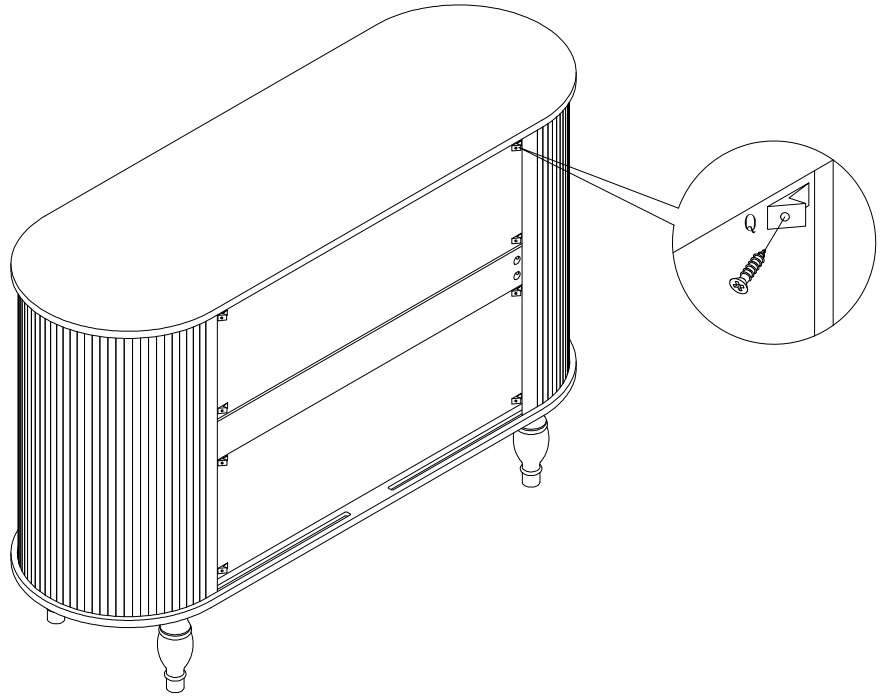






No. Q
Quantity: 8 Sets




STEP 30

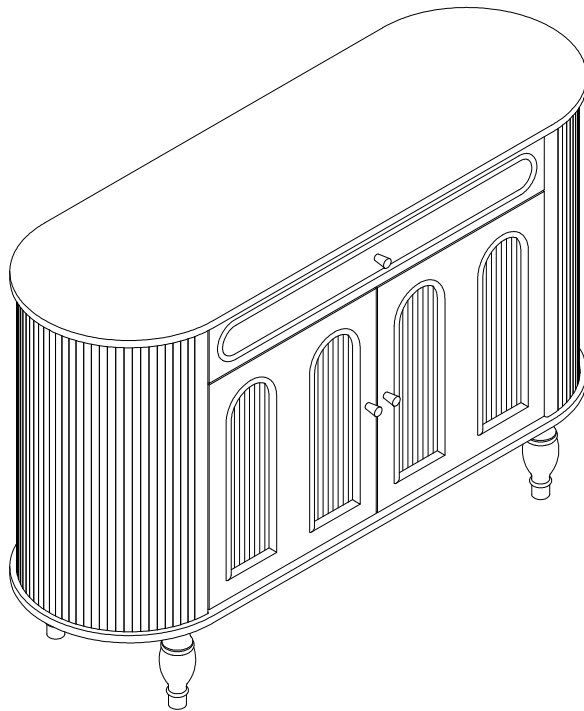

STEP 31

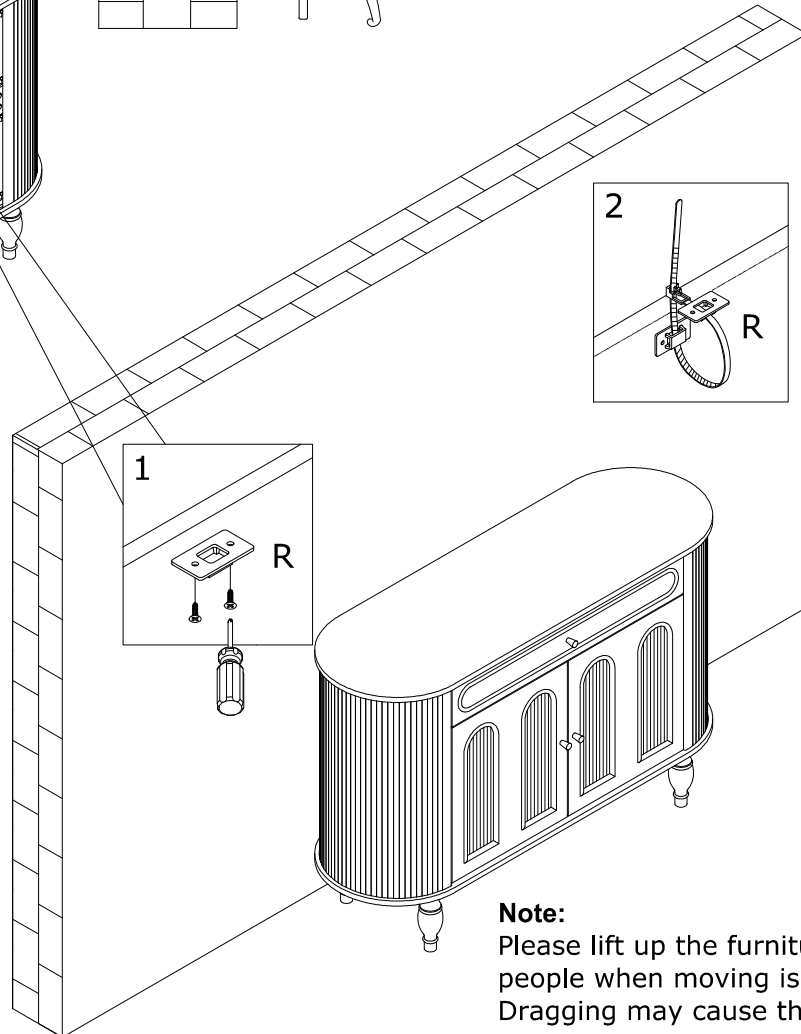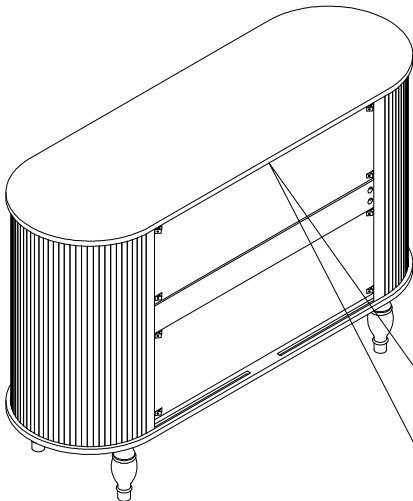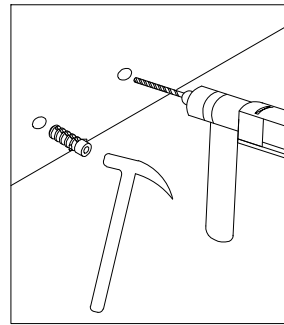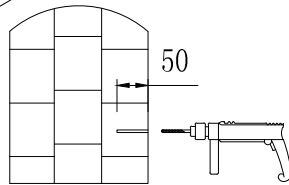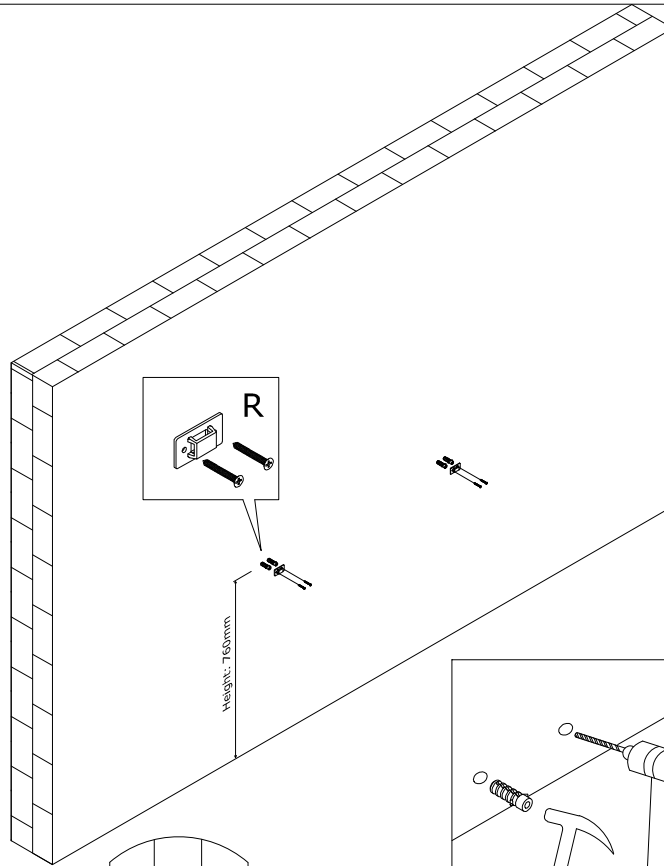

No. R
Quantity: 1 Set



Note:
Please lift up the furniture by two people when moving is needed.
Dragging may cause the legs failure.