
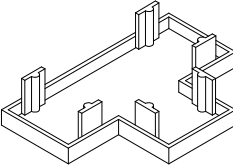
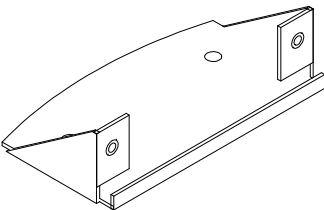
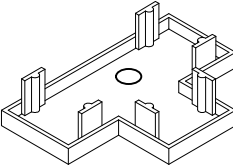

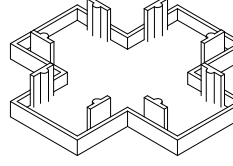

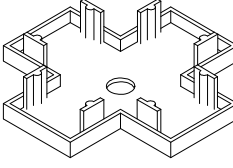
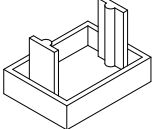
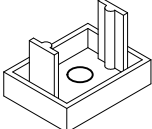
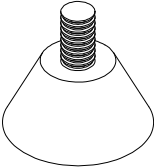
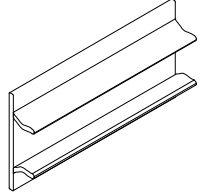
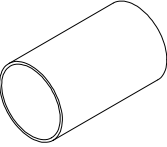



# Installation guide

T-shaped interface		corbel	
T-joint		Self-tapping yarn	
Cross joint		Angle code	
Cross joint foot			
Side joint			
pleurocrus			
Adjustable foot			
Side banding			
Cylindrical tube			

## Step 1

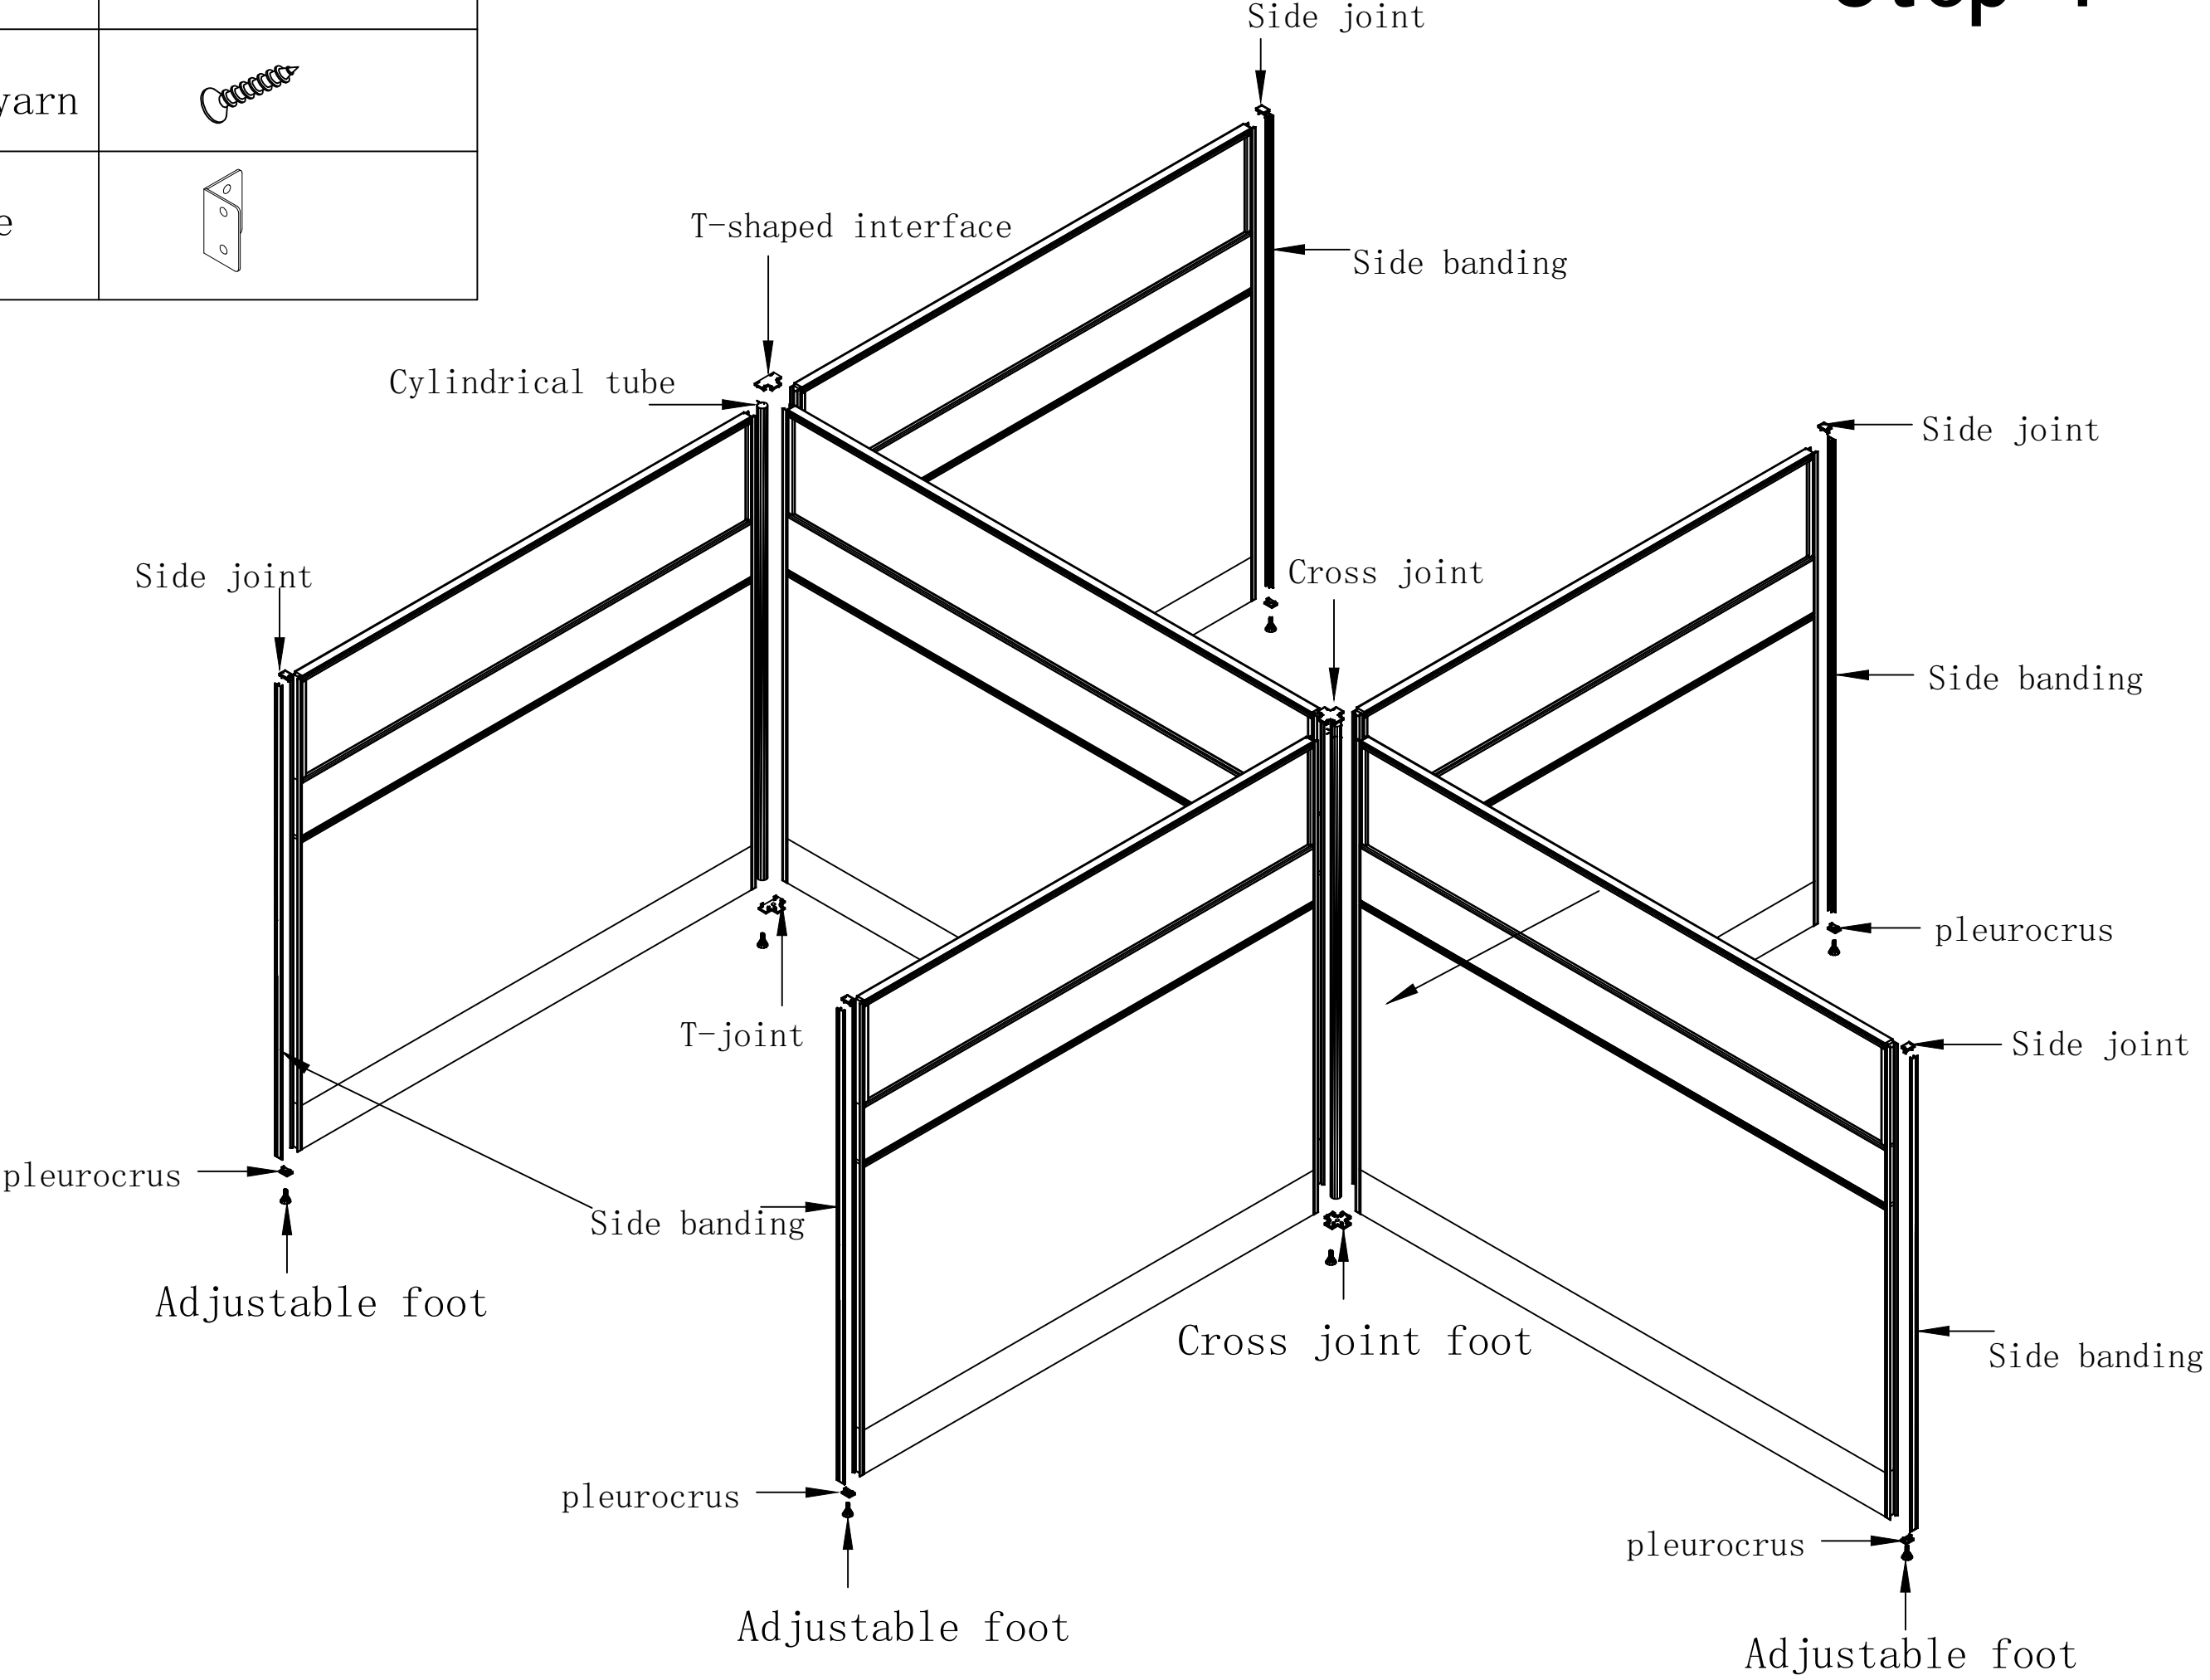


# Step 2

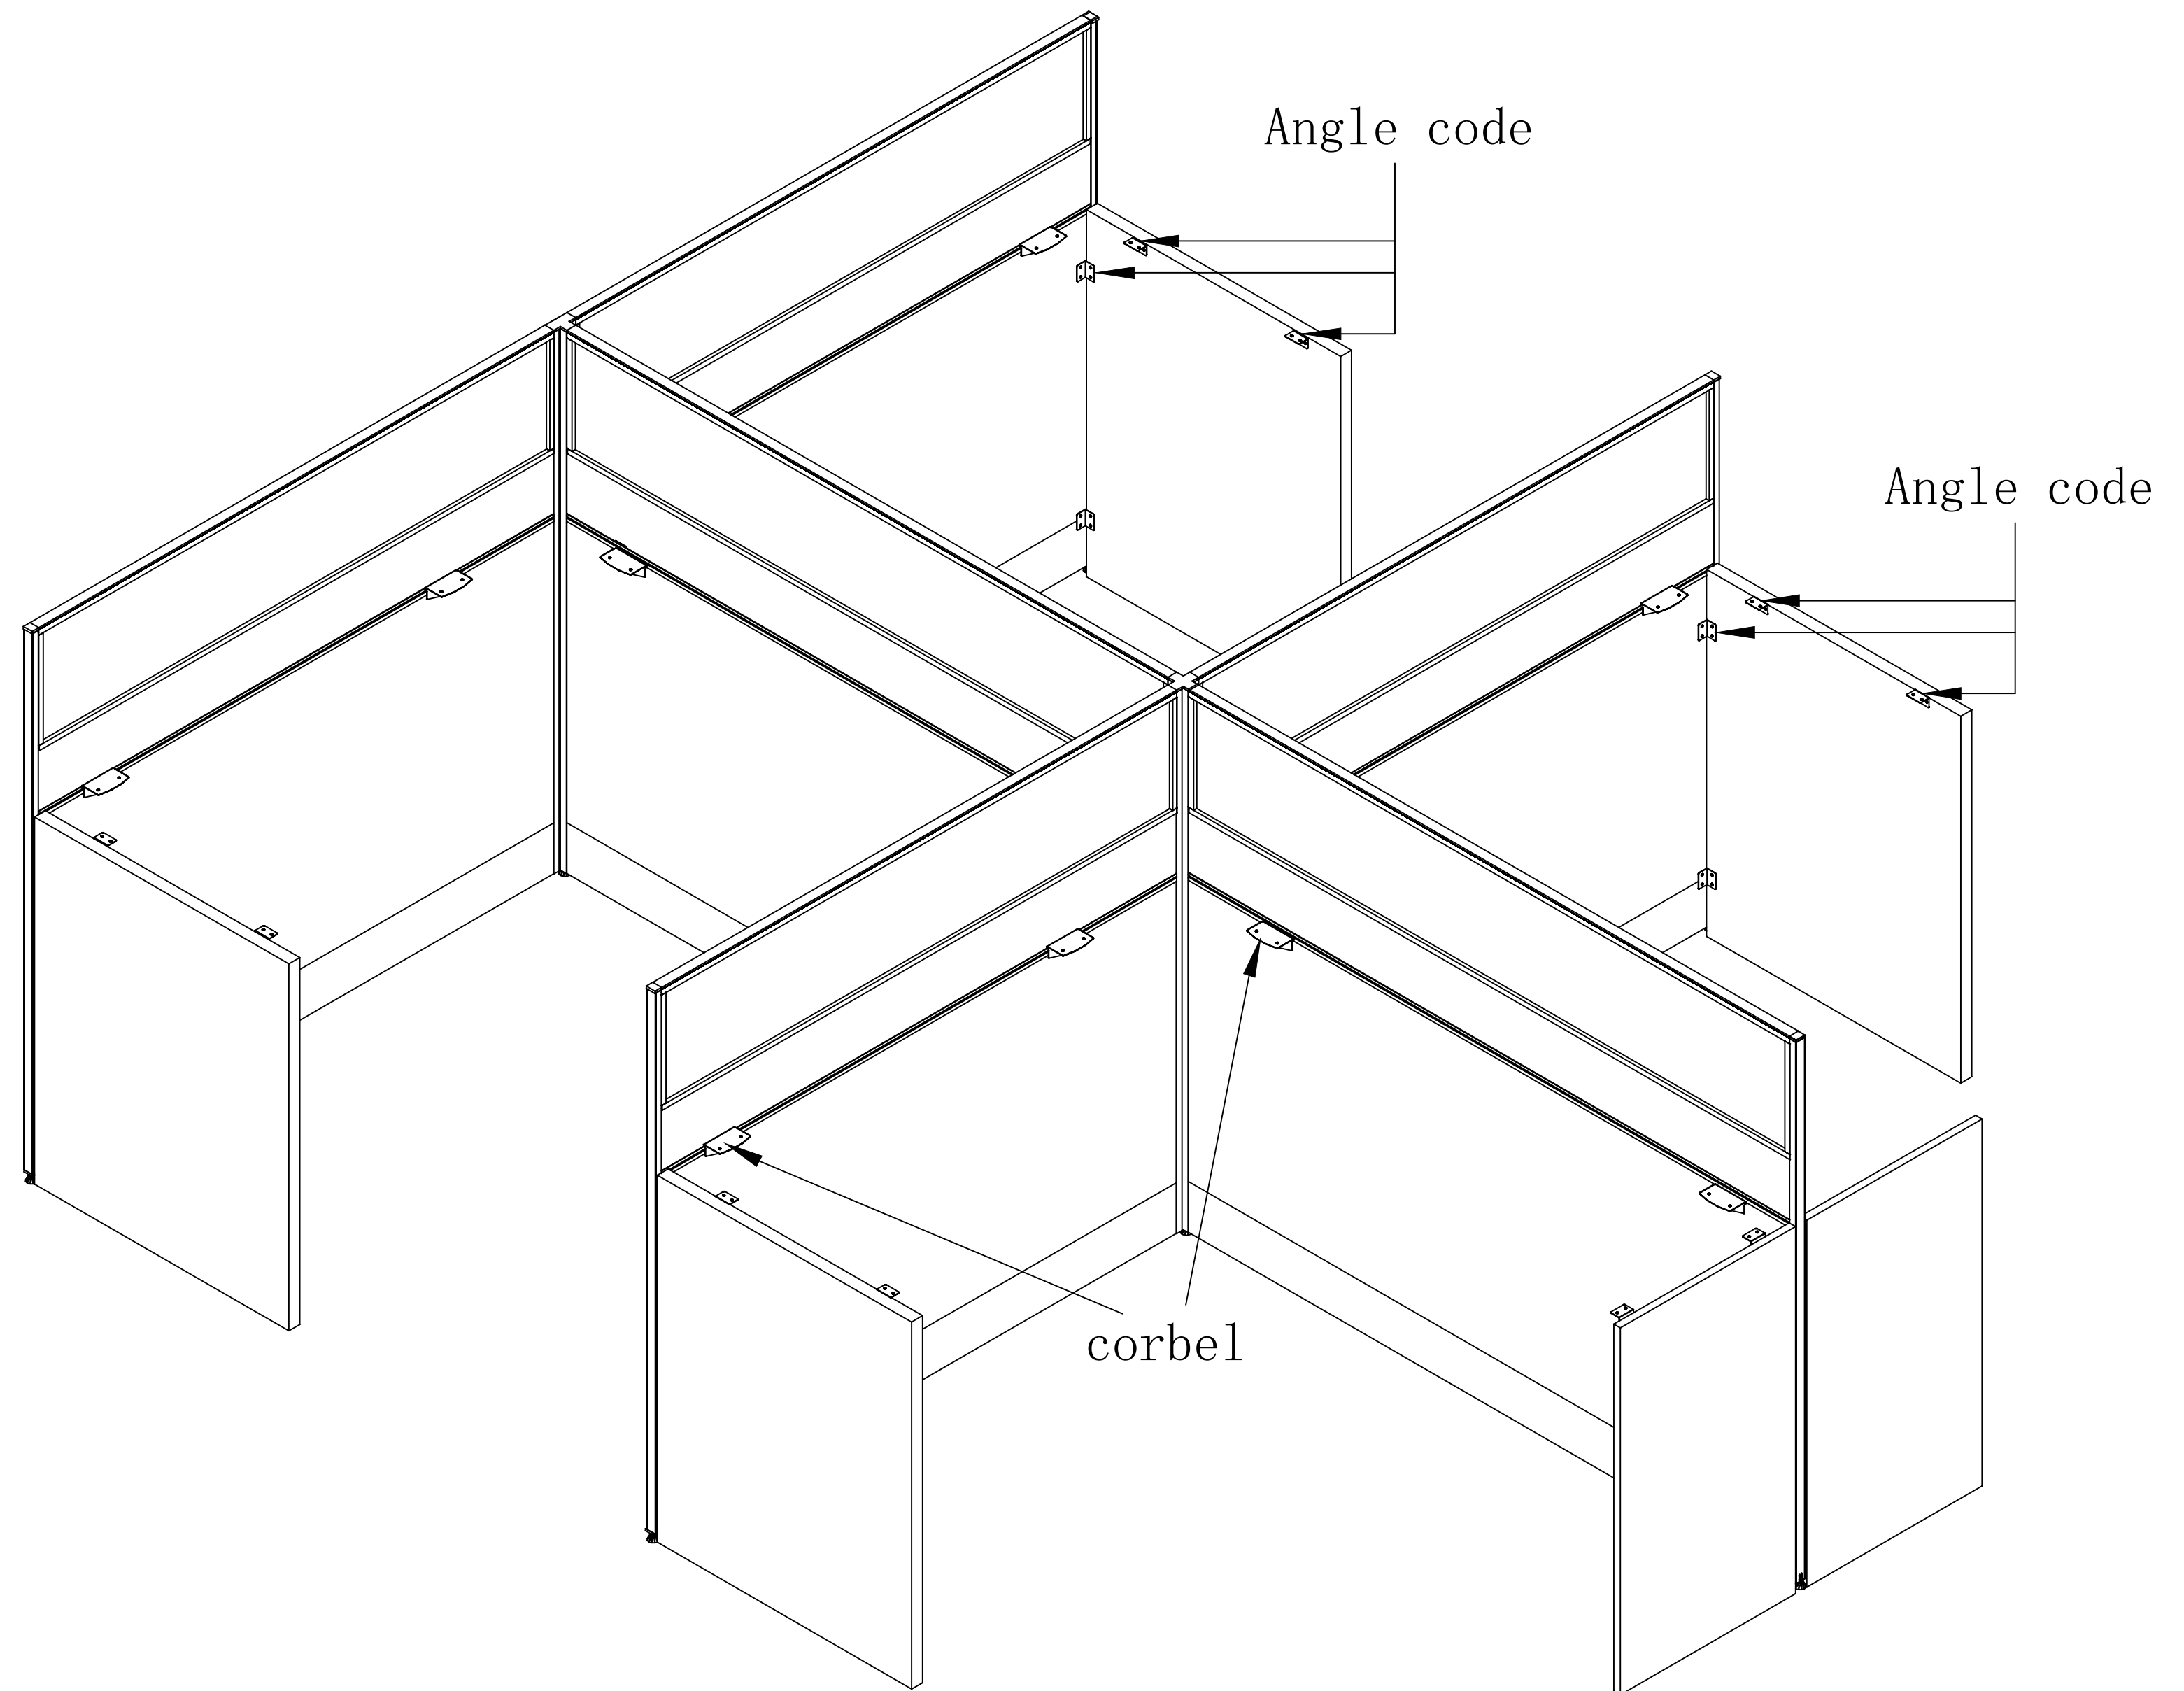

1:  
Corner code fixing table feet on the screen plate.

2:  
The bracket arm is adjusted and fixed on the  
screen plate with self-tapping.

# Step 3

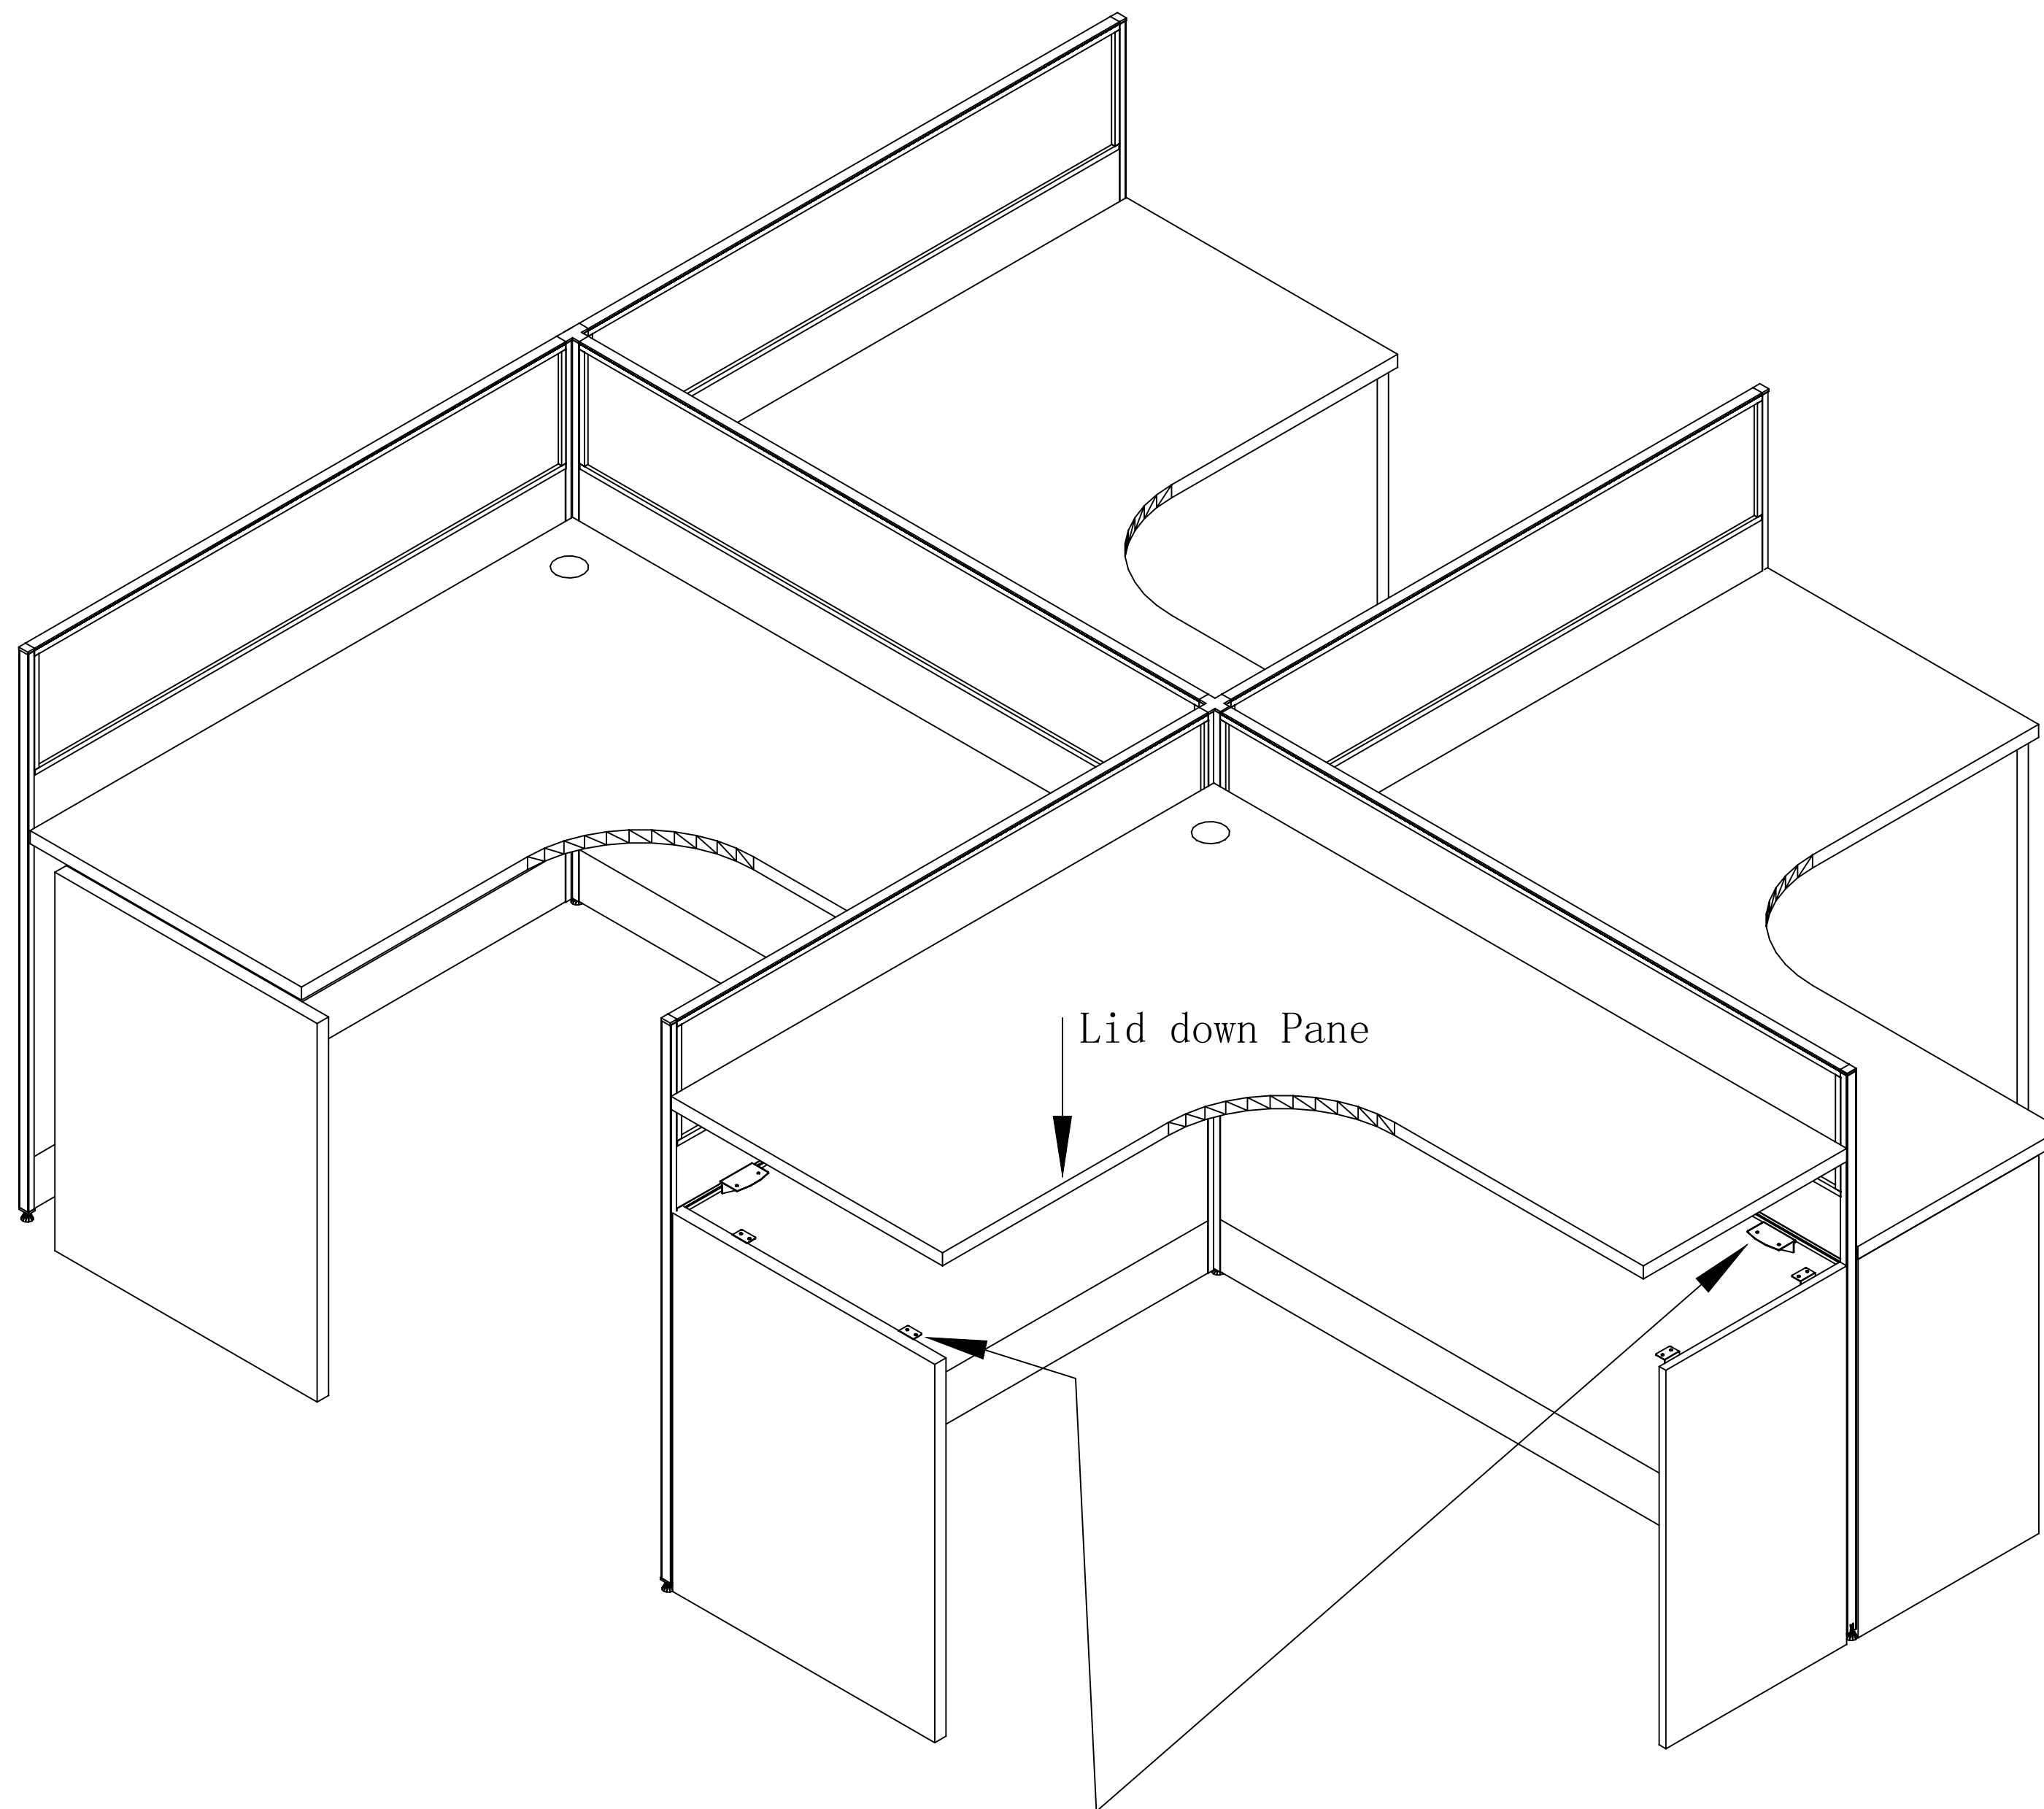

Then cover the table panel and self-tapping screws  
to lock the countertop.