


YB815-760#

Bathroom cabinet

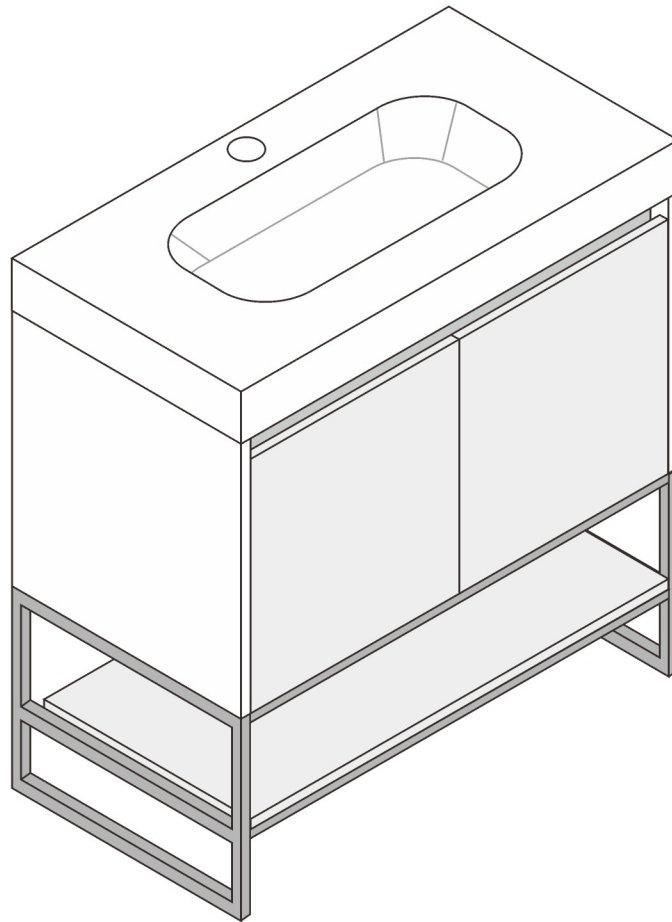


2 Persons


L722*W398*H455MM



Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

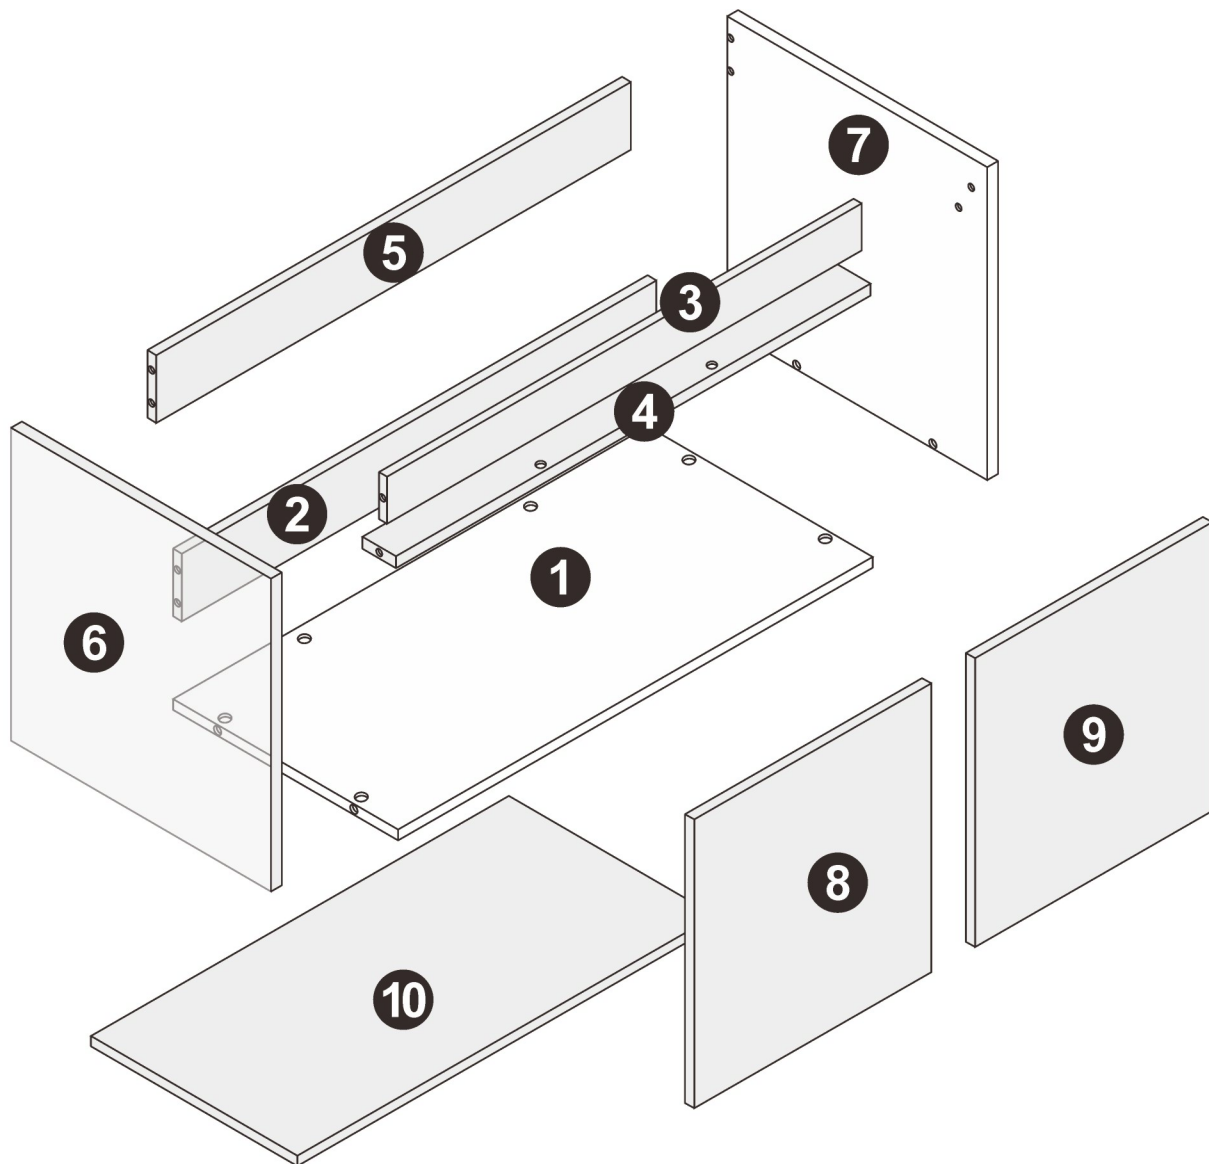





Disassembly and installation of accessories

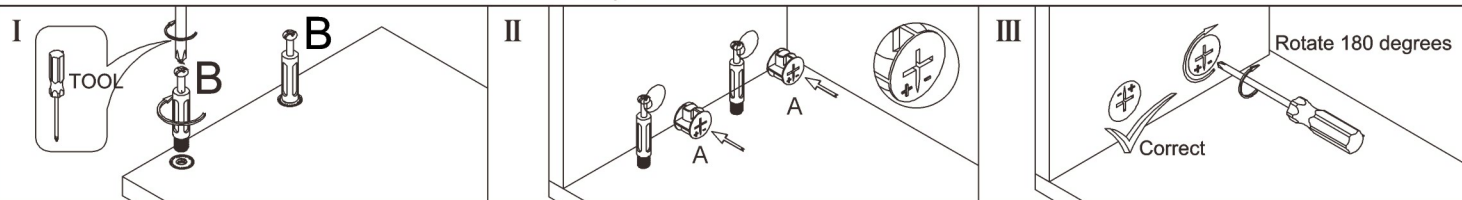

A	20PCS	B	20PCS	C	36PCS	D	16PCS	E	4PCS	F	4PCS	G	4PCS
													
15*10mm		6*28mm		3.5*14mm		6*15mm		Big bend		6mm		Sponge Mat	

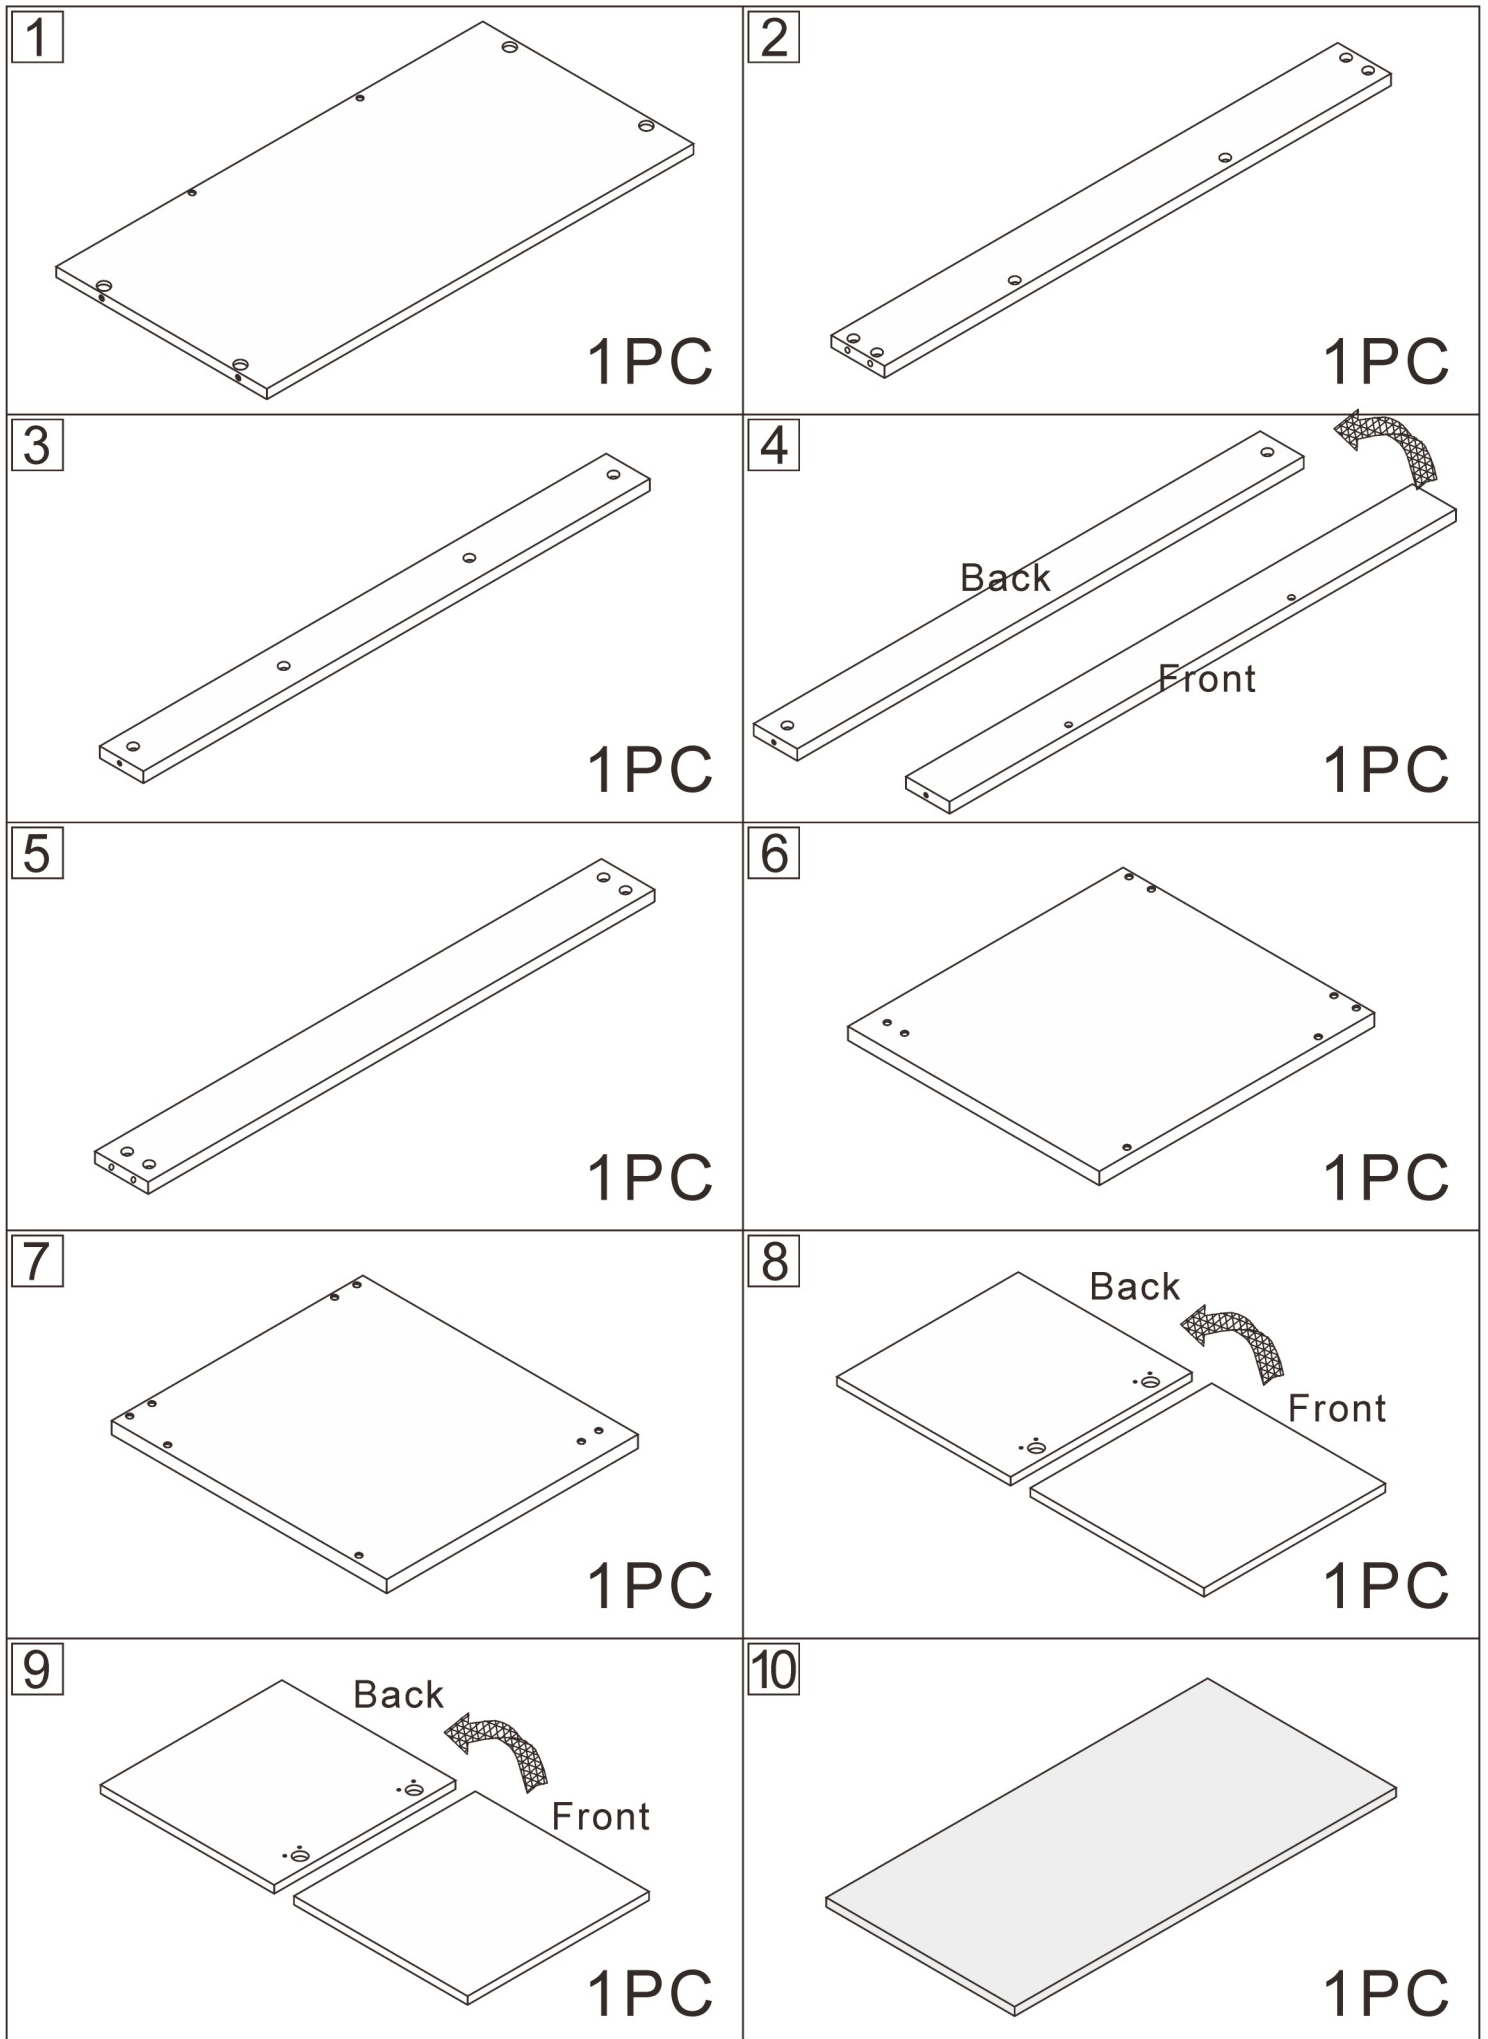


1

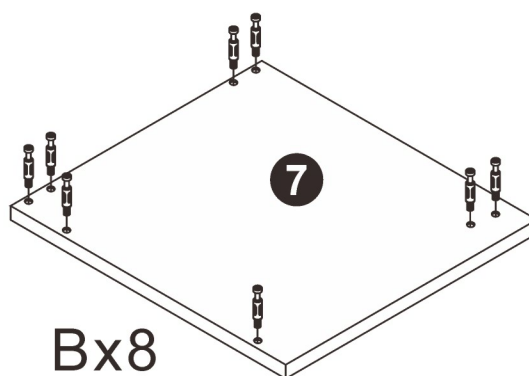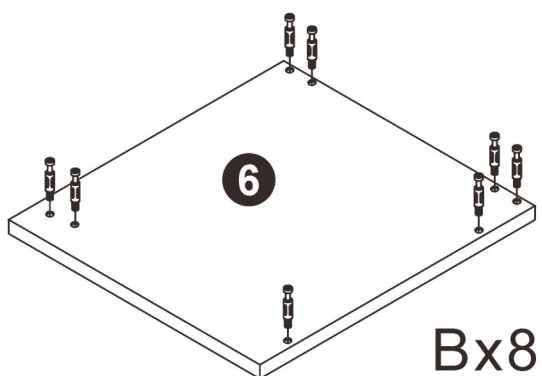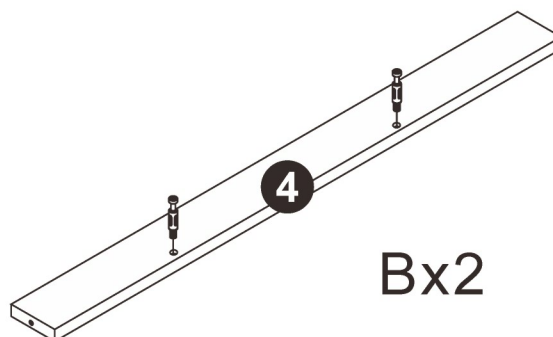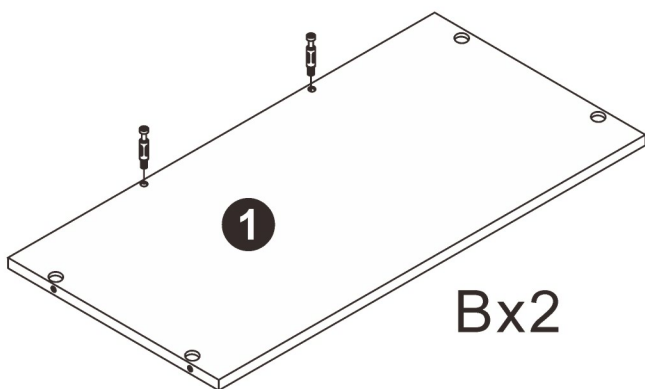


B	20PCS
	
6*28mm	

3

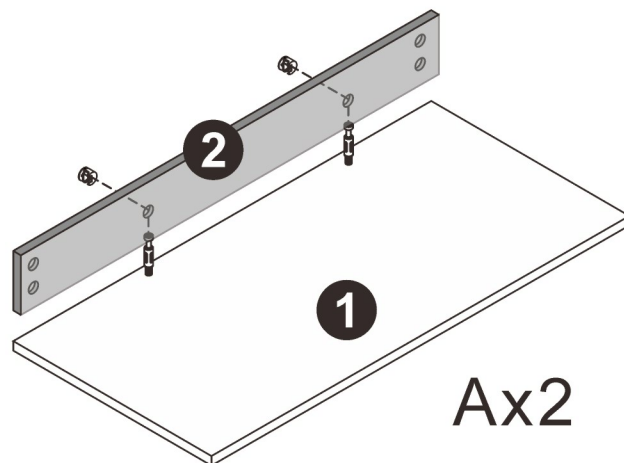


A	2PCS
	
15*10mm	

4

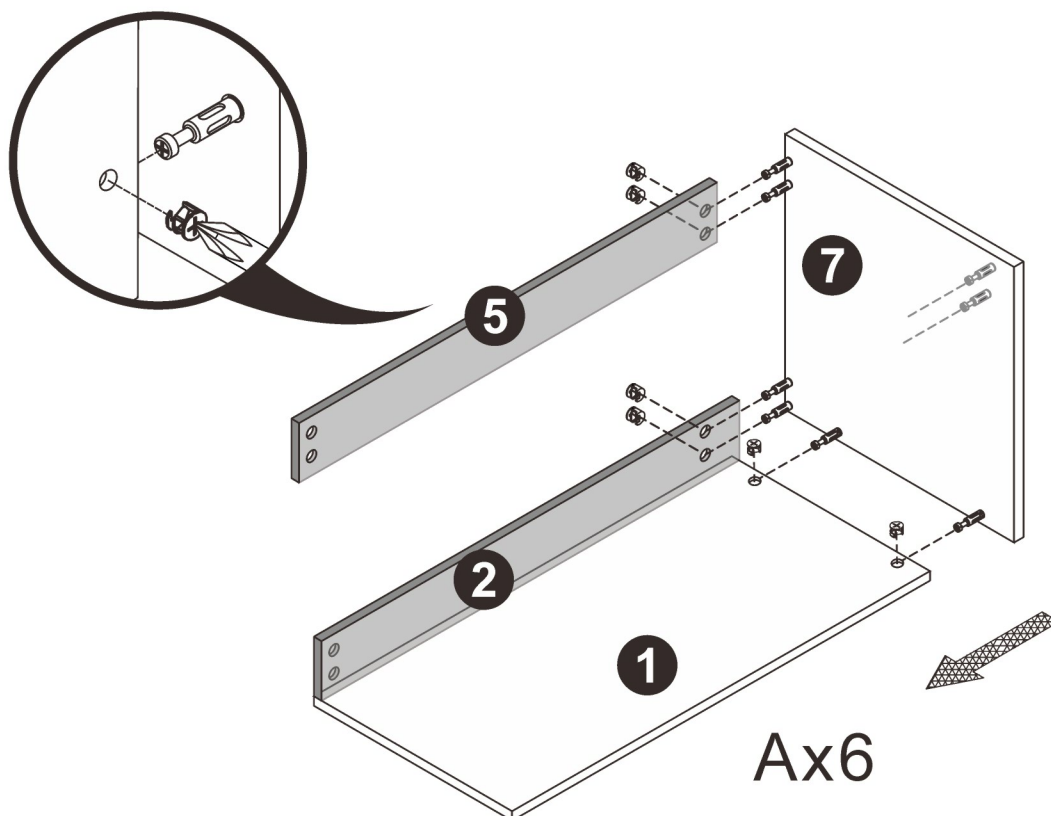

A	6PCS
	
15*10mm	

3

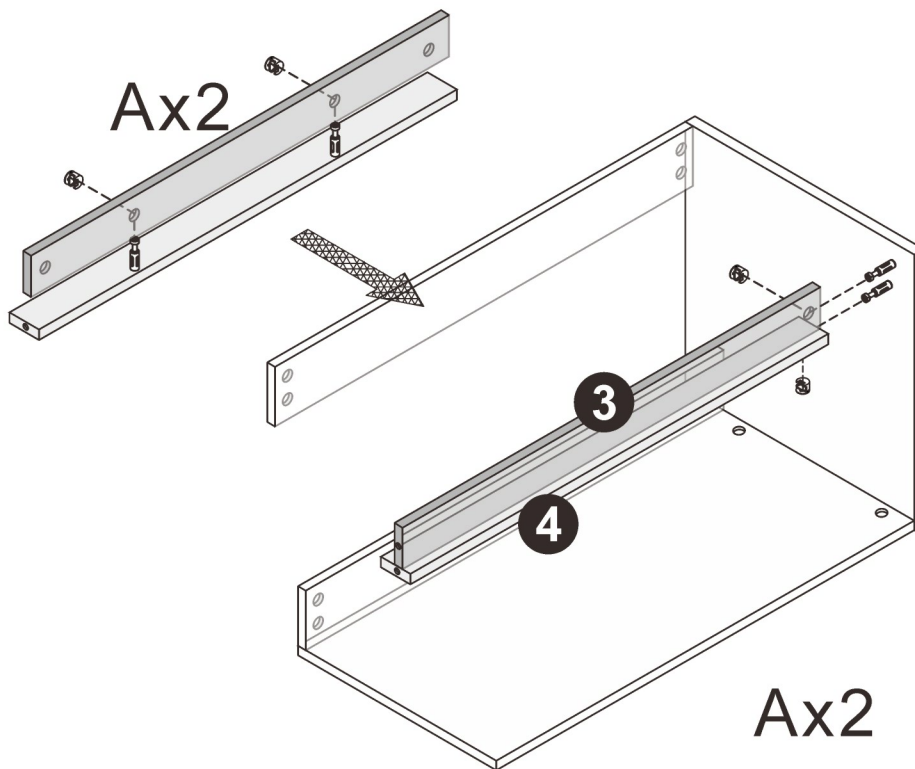


A 4PCS



15*10mm

4

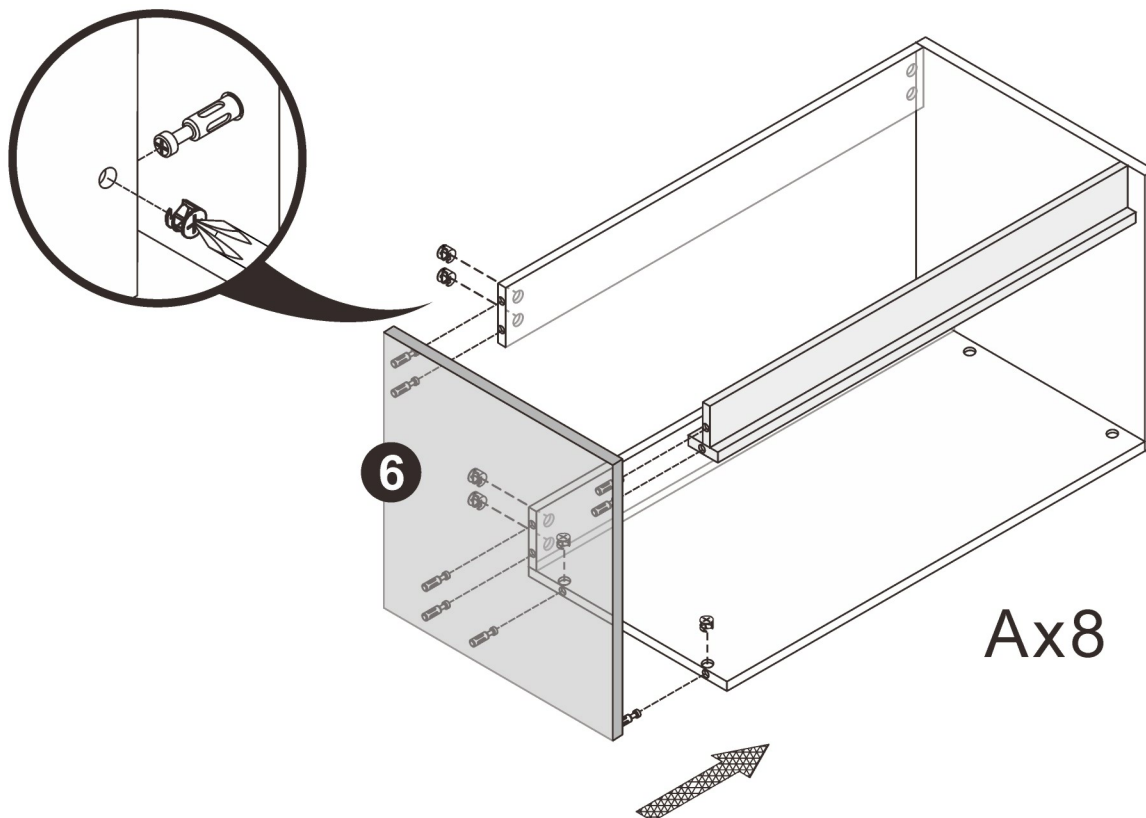


A 8PCS




15*10mm


5

Ex4
Cx4

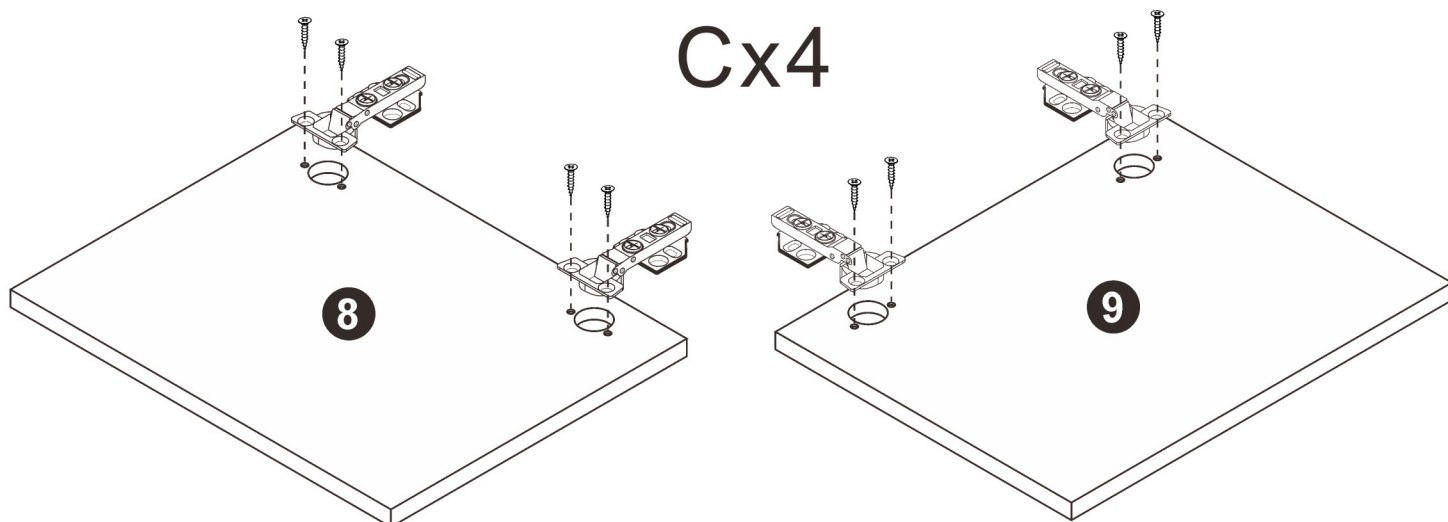

C	8PCS	E	4PCS
			
3.5*14mm		Big bend	

6

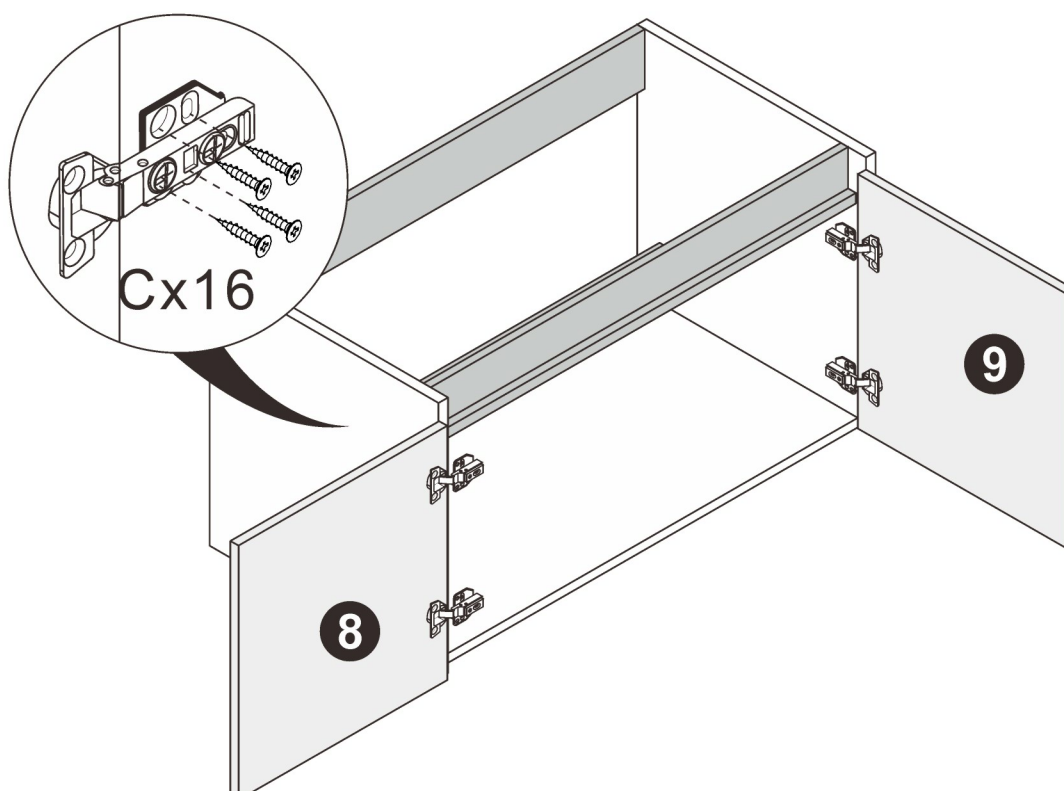



C	16PCS
	
3.5*14mm	

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES





- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

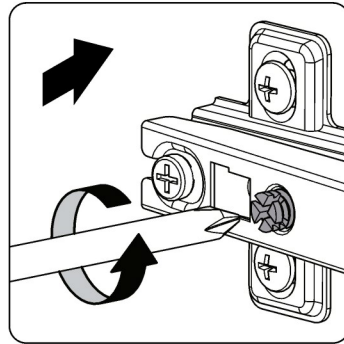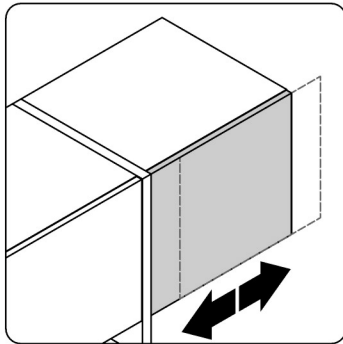





OR

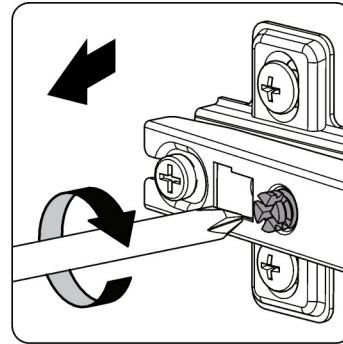


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

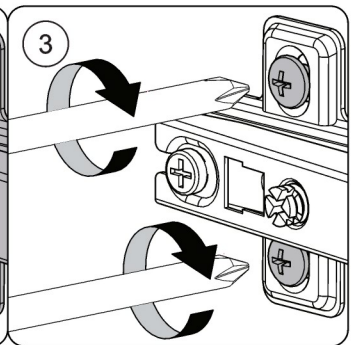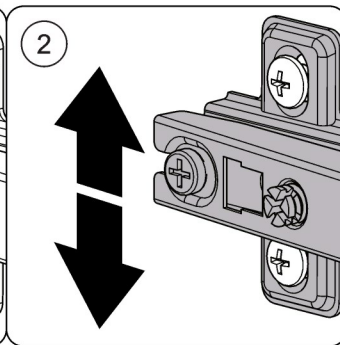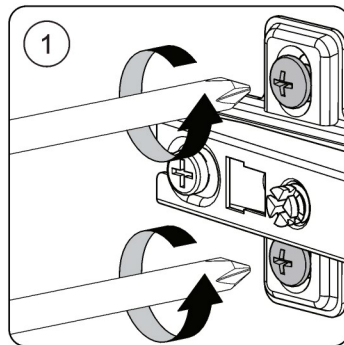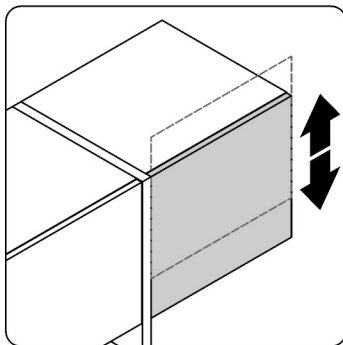


- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

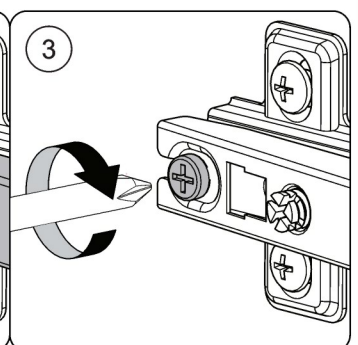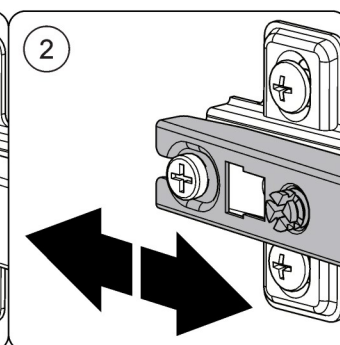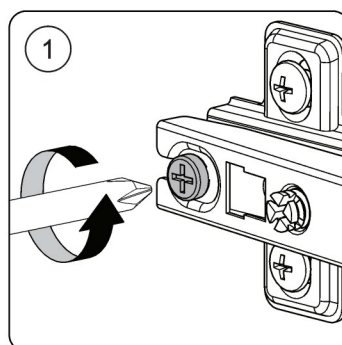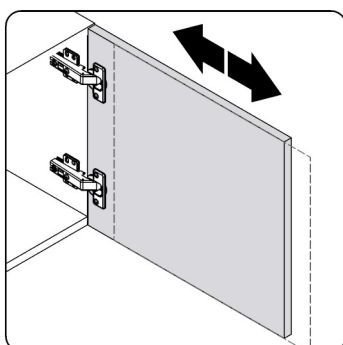


3

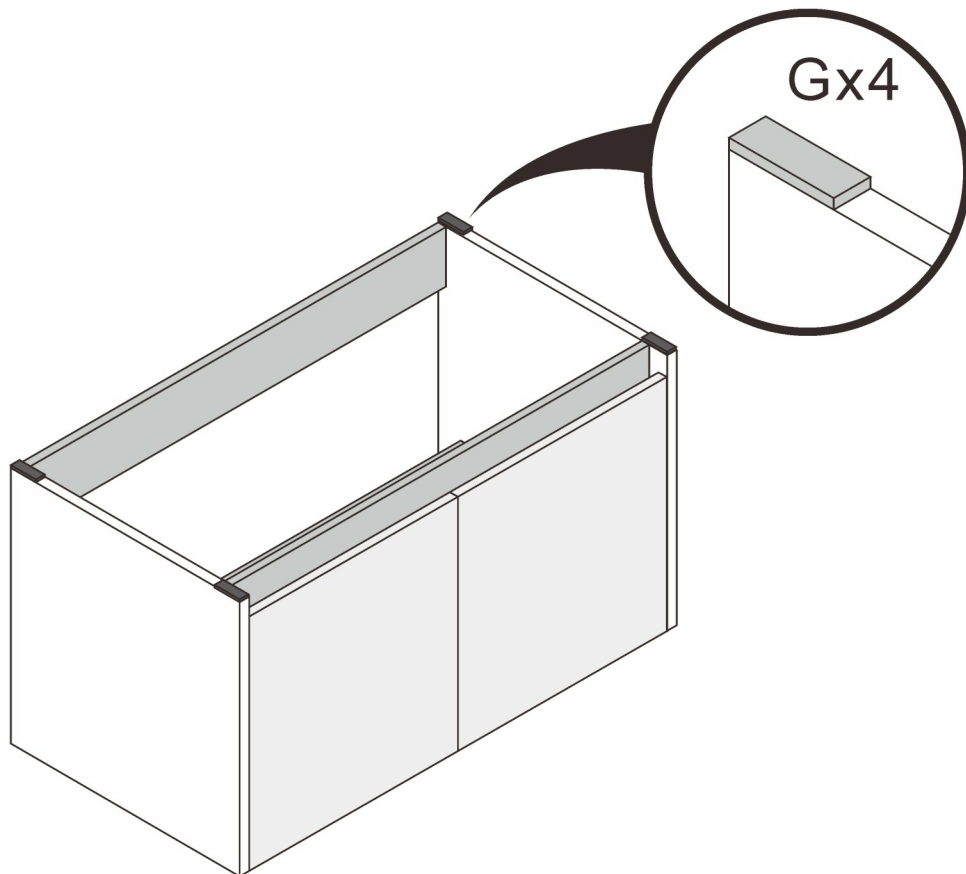


G	4PCS
	
Sponge Mat	

4

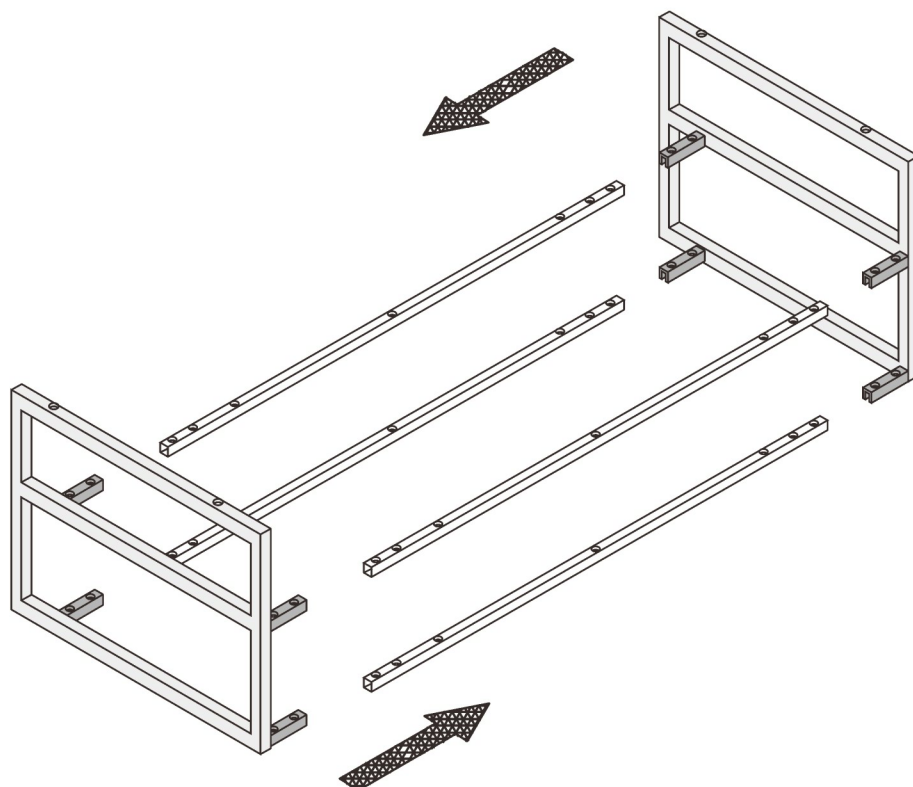


13

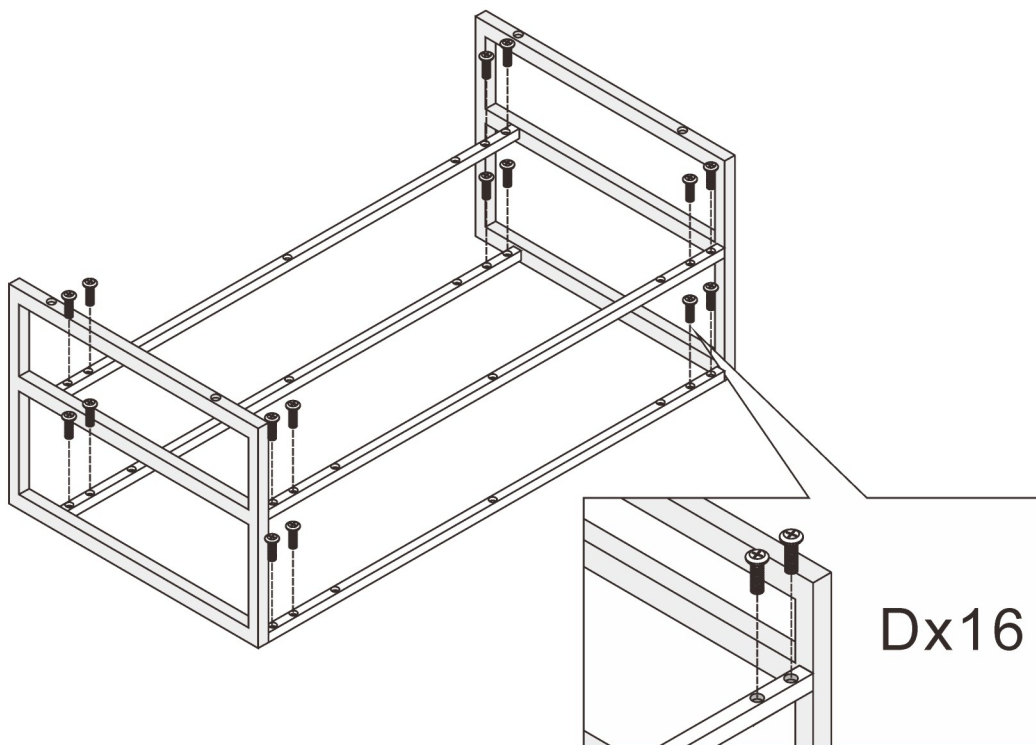


D	16PCS
6*15mm	

14

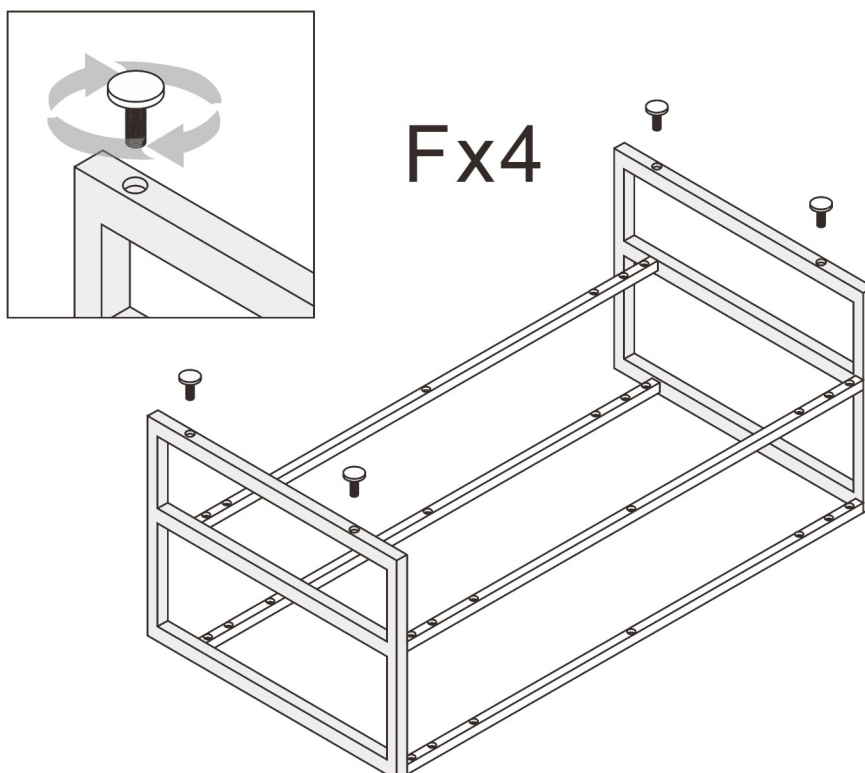


F	4PCS
6mm	

13

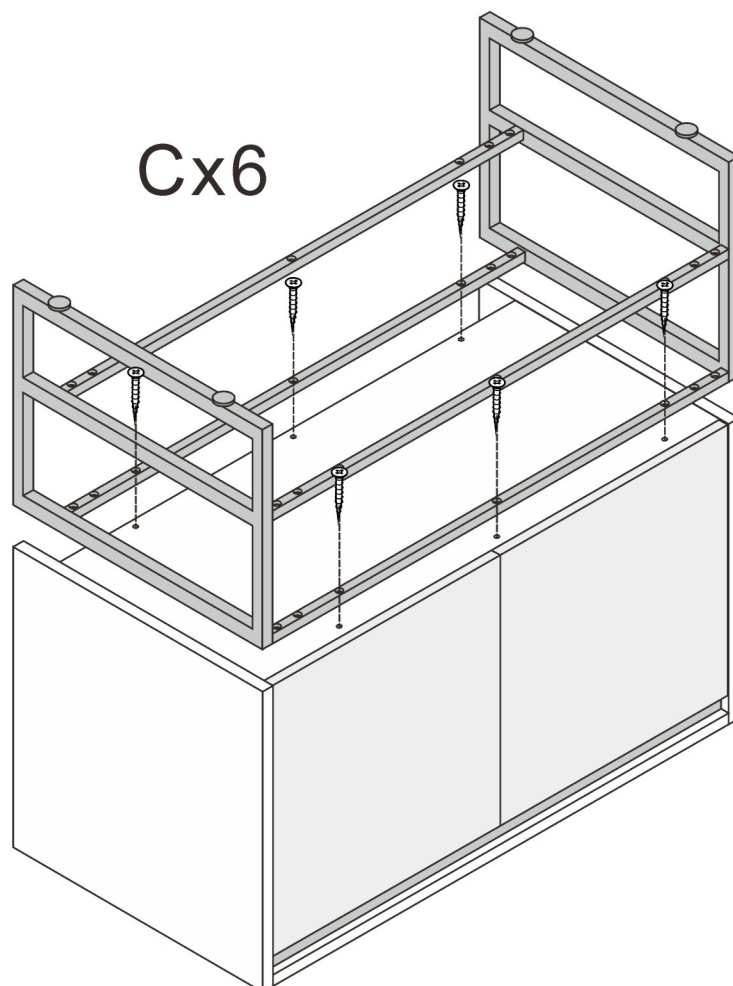


C	6PCS
	
3.5*14mm	

14

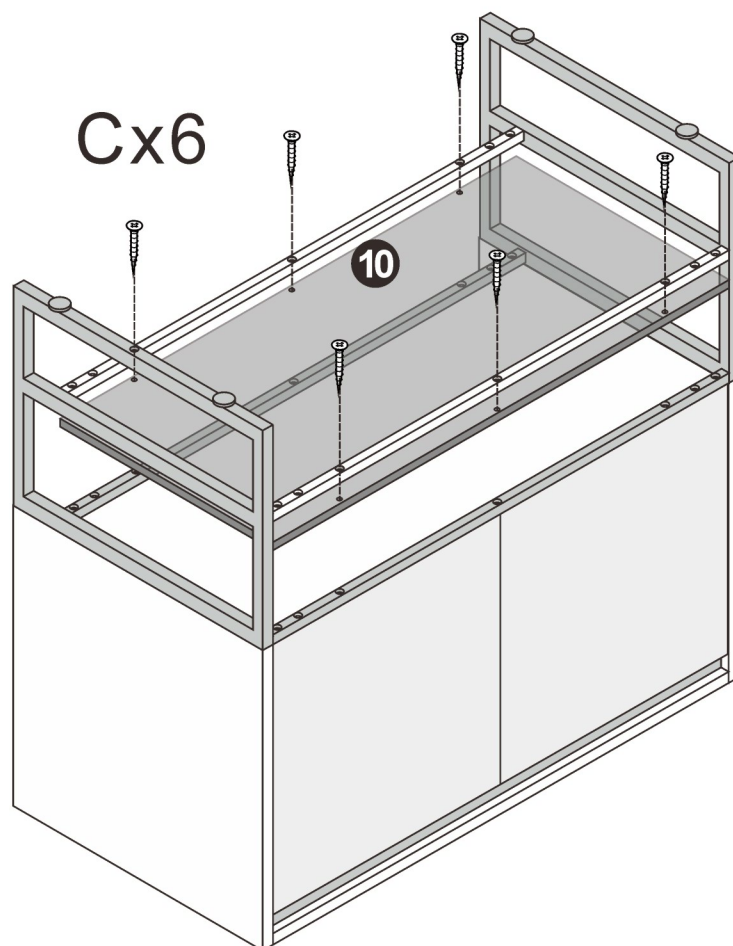

C	6PCS
	
3.5*14mm	

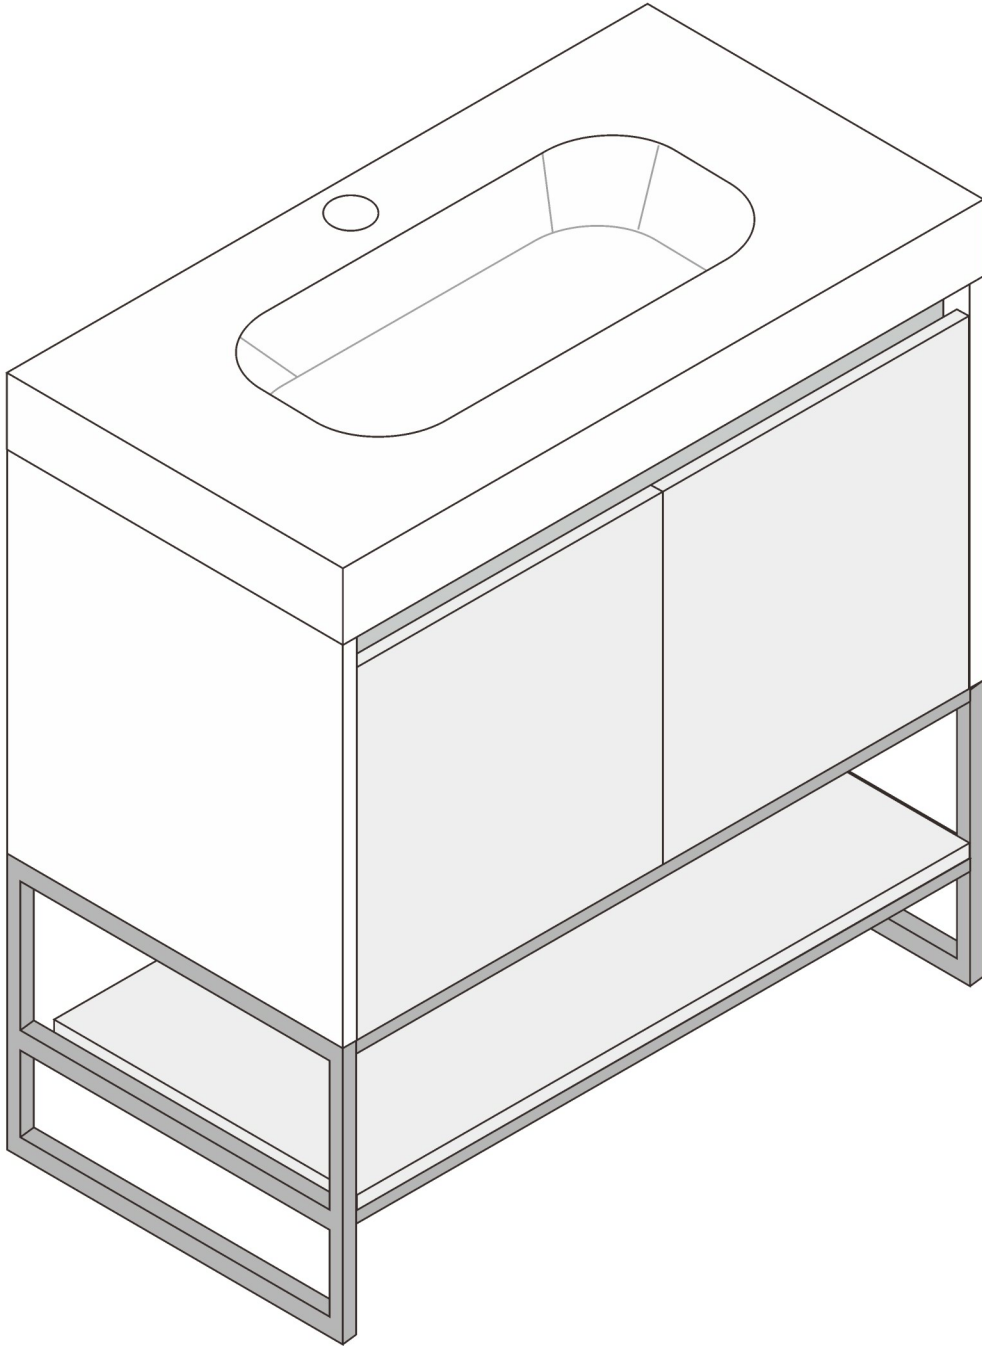

OK