


CHIC TEAK

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**

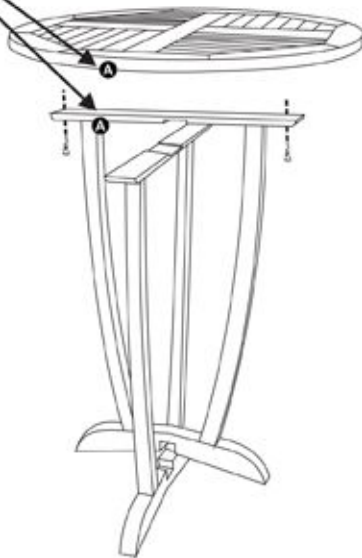

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Code

Hj086

Hardware



Skrup (8 Pcs)

Tool

Total Section

3 Section