
Queen Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	C	D	Е	F	G	I	J	K	R	T
60.127W	*8+309W	® 4 CONTINUE	© womm	O MMNo	9	/	PSMM	1	PE-ROWN	OTHER PS*70MM	900000 96*20MM
8PCS	12PCS	4PCS	12PCS	26CS	4PCS	4PCS	1PC	4PCS	2PCS	8PCS	4PCS

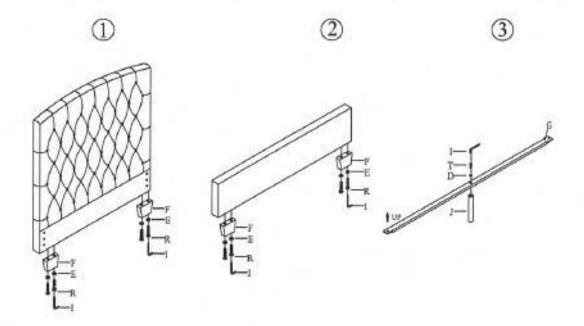

Step#1

Retrieve feet and hardware from HB in zipper. Attach bed feet (F) to the headboard using Wrench (I), Bolt (R) and Washer (E).

Step#2

Attach bed feet (F) to the footboard using Wrench (I), Bolt (R) and Washer (E).

Step#3

Attach steel center support legs (J) to the Metal slat (G) using Wrench (I), Bolt (T) and Washer (D). Center support legs (J) are cable tied to the center support rails during shipment.


CONGRATULATIONS ON YOUR NEW BED PURCHASE

-Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.-

Queen Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	С	D	Е	F	G	I	J	K	R	T
@IIIIIII @6*15MM		@JIIIIIII	© o6MM	Ø		/	φ8MM		@IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	@IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	⊚ IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII
8PCS	12PCS	4PCS	12PCS	26CS	4PCS	4PCS	1PC	4PCS	2PCS	8PCS	4PCS

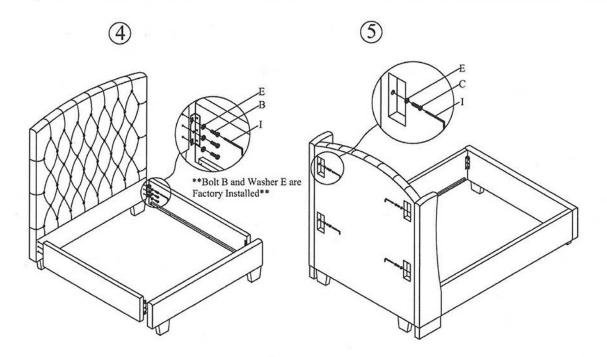

Step#4

Attach side rails to headboard and footboard using Wrench (I), Bolt (B) and Washer (E).

Step#5

Attach wings through HB finger tight, using Bolt (C), Washer (E) and Wrench (I).


CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

Queen Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	С	D	Е	F	G	I	J	K	R	T
@111111111 @6*15MM	@IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	@MMM @8*60MM	О	Ø		/	φ8MM	•	@IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	@IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	@IIIIIII @6*20MM
8PCS	12PCS	4PCS	12PCS	26CS	4PCS	4PCS	1PC	4PCS	2PCS	8PCS	4PCS

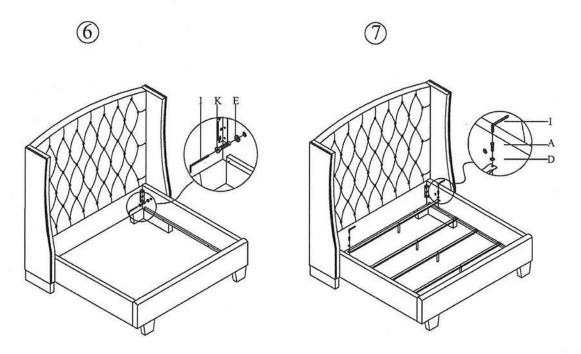

Step#6

Attach wings through side rail finger tight, using Bolt (K), Washer (E) and Wrench (I). Tighten/secure wings(6 bolts) with Allen Wrench until snug.

Step#7

Move/place bed into final position in bedroom.

Attach steel slat support system to full length steel side rail support cleats (flat side facing up). Verify the slats are inserted properly into support cleats and center support legs are perpendicular to the floor for full support.

CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~