


ASSEMBLY INSTRUCTIONS

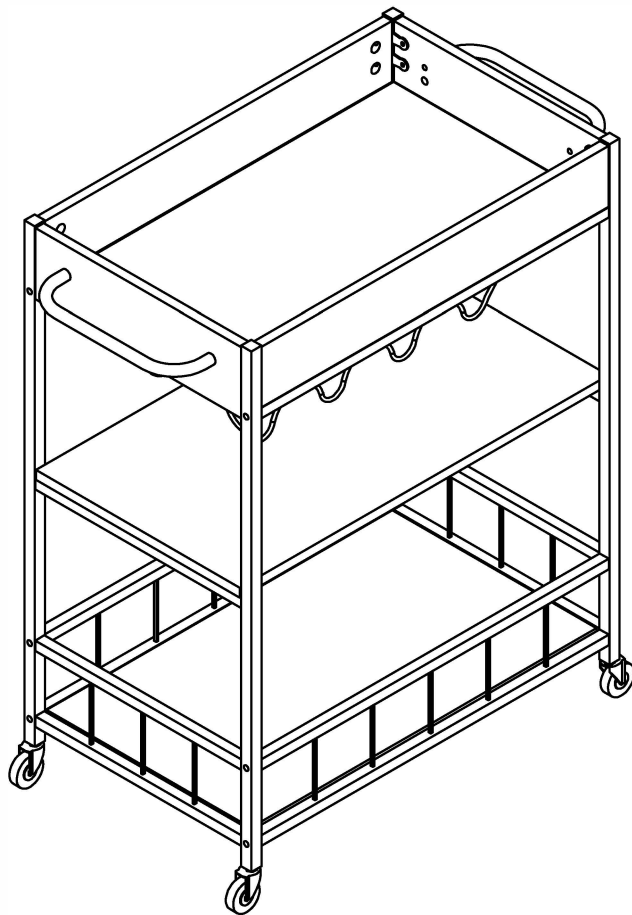


ASSEMBLY INSTRUCTIONS


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.



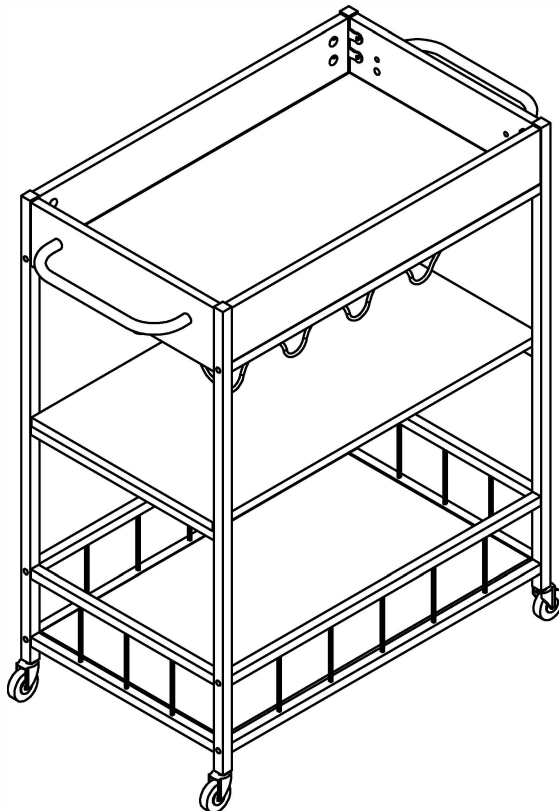







PARTS IDENTIFICATION

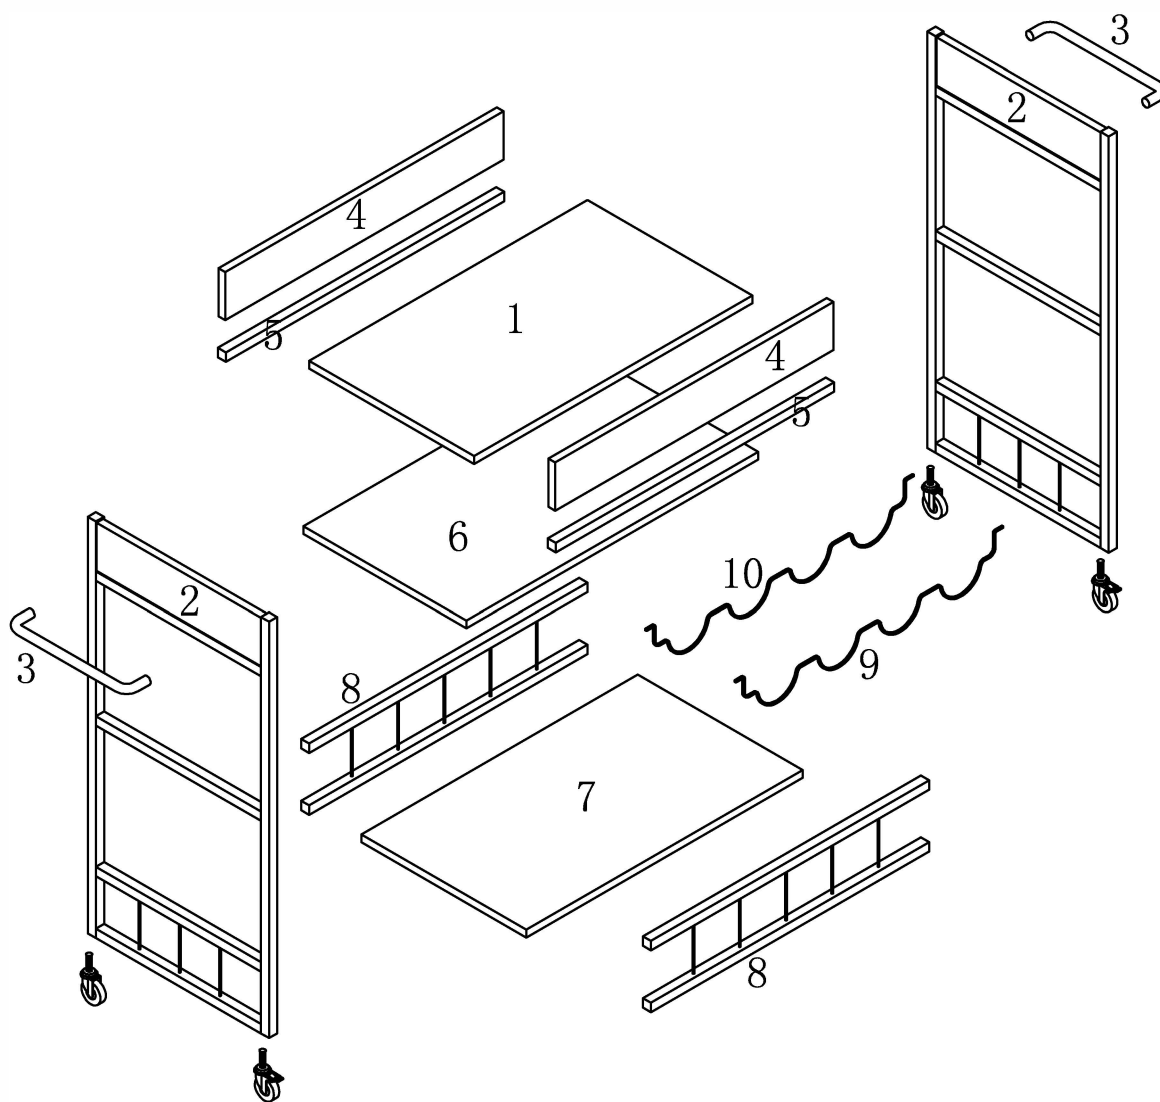


(1)	1pc	(8)	2pcs
(2)	2pcs	(9)	2pcs
(3)	2pcs	(10)	1pc
(4)	2pcs		
(5)	2pcs		
(6)	1pc		
(7)	1pc		

HARDWARE IDENTIFICATION

A		L29	8PCS
B		Φ 15	8PCS
C		Φ 6x30	12PCS
D		Φ 6x25	8PCS
E		Φ 3.5x12	8PCS
F		∅20	8PCS
G		H65	2PCS
H		H65	2PCS
I		M4	1PC
J		Φ 6x12	4PCS

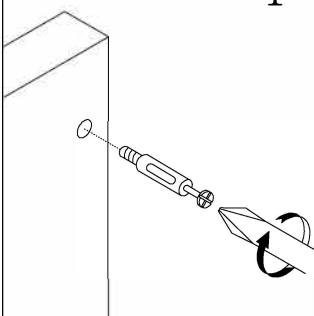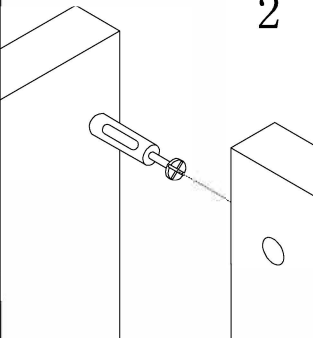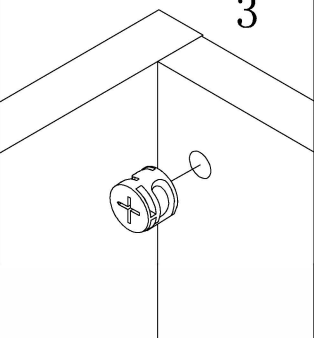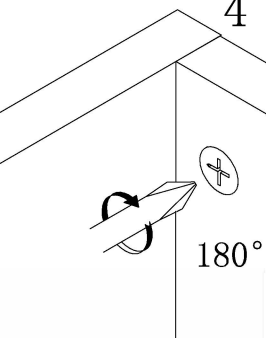
HOW TO				
 Cam Bolt  Cam Lock	1	2	3	4
	 1. Screw Cam Bolt into panel.	 2. Insert Cam Bolt into bolt hole of joining panel.	 3. Insert Cam Lock. arrow facing bolt.	 4. Gently turn Cam Lock clockwise to lock position.

HARDWARE IDENTIFICATION

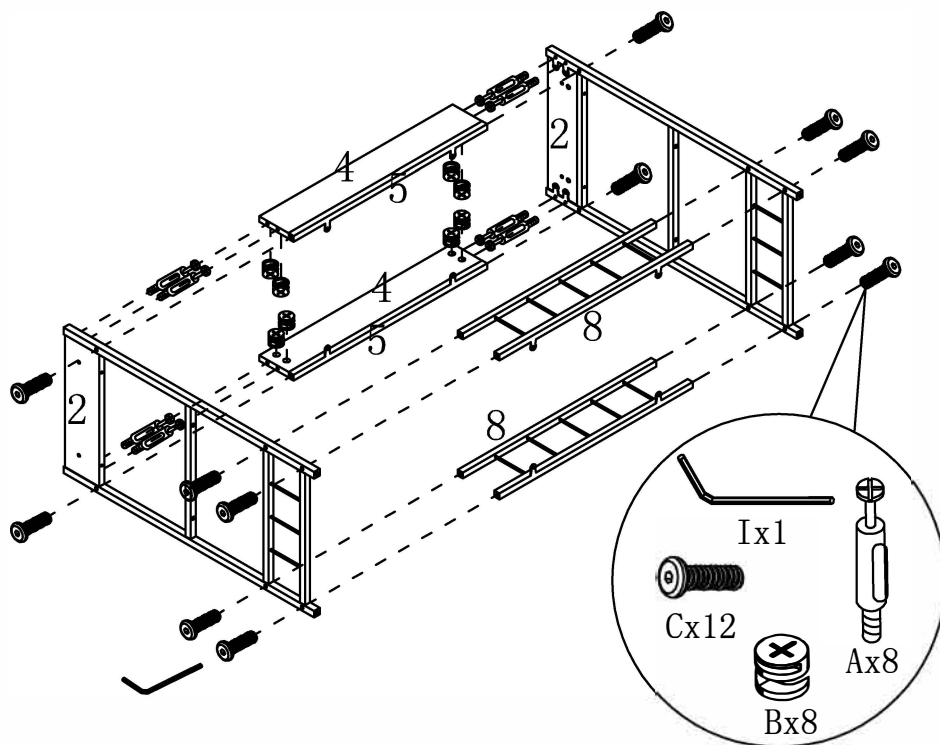


STEP1

STEP2

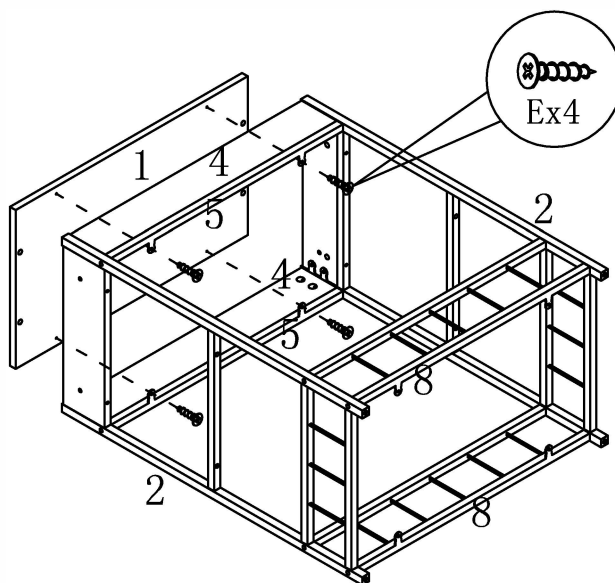


HARDWARE IDENTIFICATION

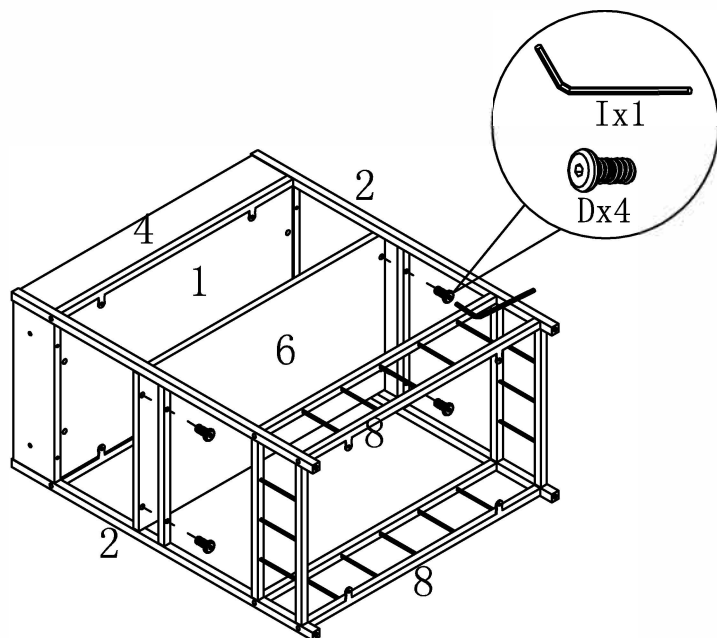


STEP3

STEP4

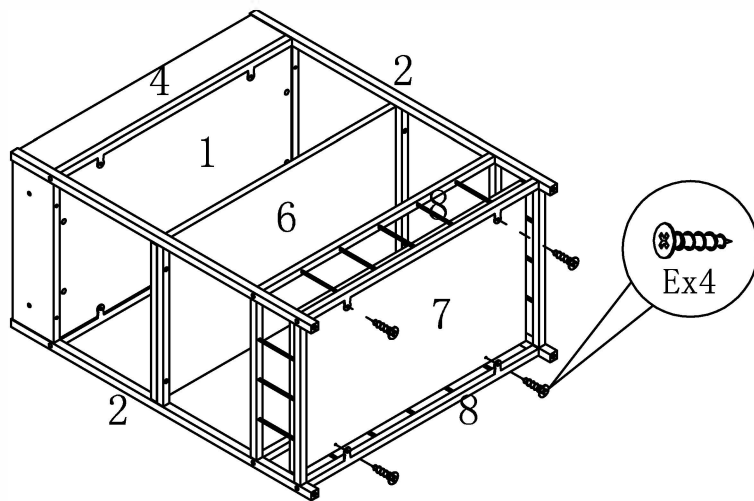

HARDWARE IDENTIFICATION

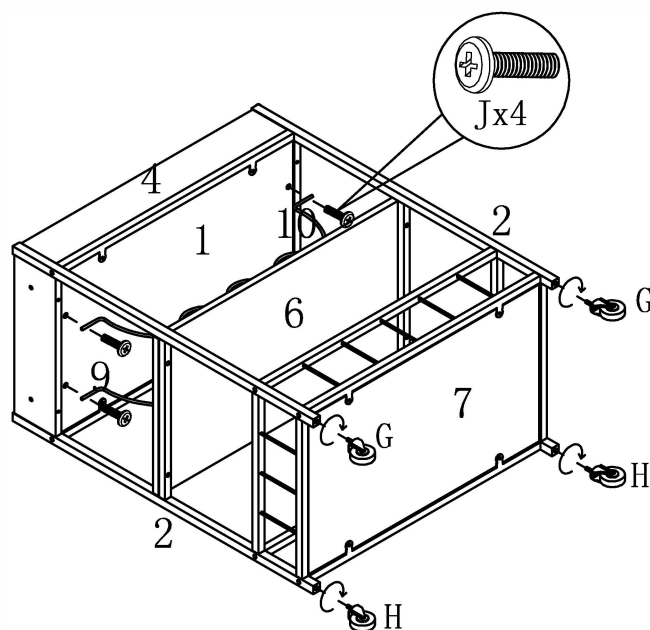

STEP5

STEP6

