


ASSEMBLY INSTRUCTION

Item NO:C8001 ARMCHAIR

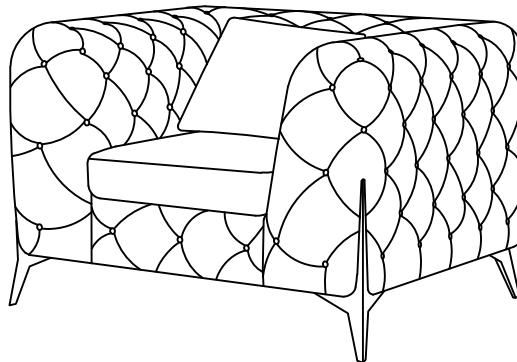



PARTS IDENTIFICATION

A	BACK REST		1PC	H	BATTEN		2PC
B	LEFT ARMREST		1PC	I	BATTEN		2PC
C	RIGHT ARMREST		1PC	J	PILLOW		1PC
D	FRONT PLATE		1PC				
E	SEAT		1PC				
F	CUSHION		1PC				






HARDWARE LIST

NO.	SIZE	DIAGRAM	QTY
1	Bolts M8*40mm		12
2	Bolts M8*70mm		8
3	Flat washer		28
4	Screws		8
5	Allen wrench		1
6	LEG		4


STEP 1

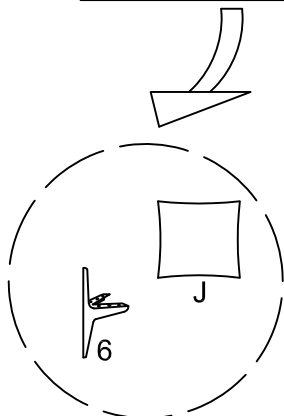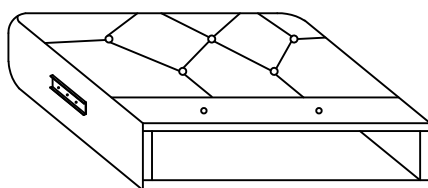


STEP 2

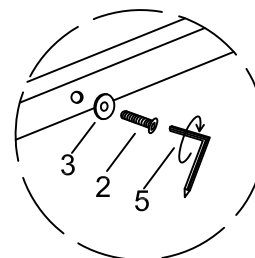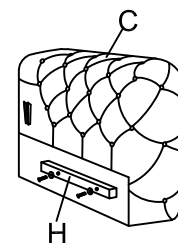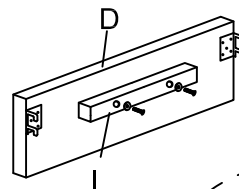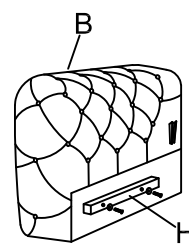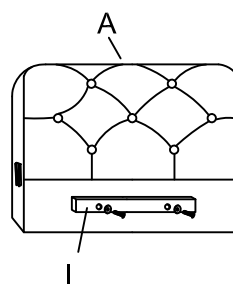

STEP 3

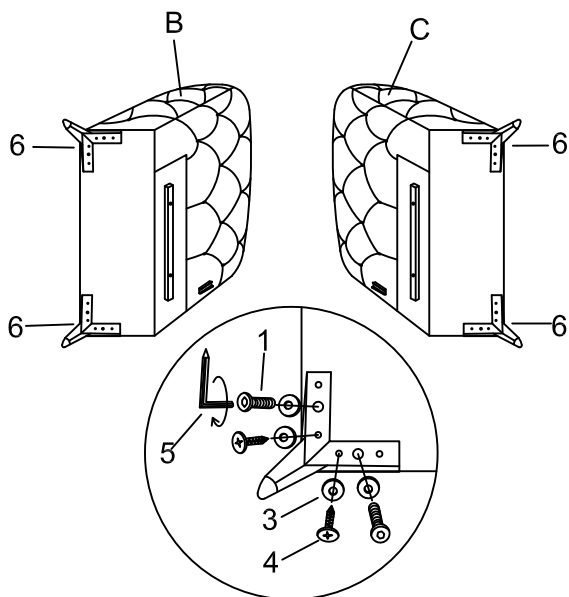


STEP 4

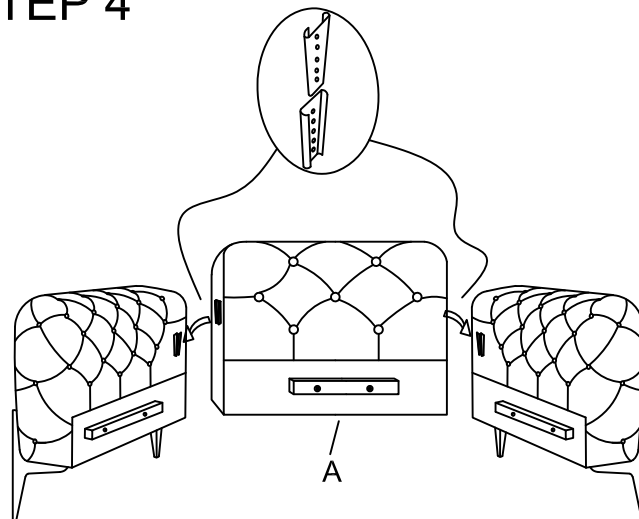


Please firmly insert the backrest and armrest to make them tightly combined

STEP 5

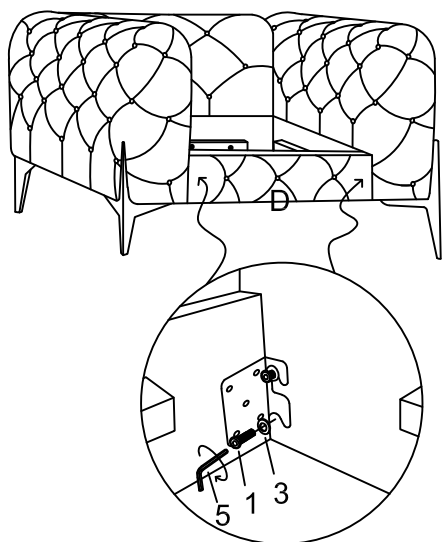

STEP 6

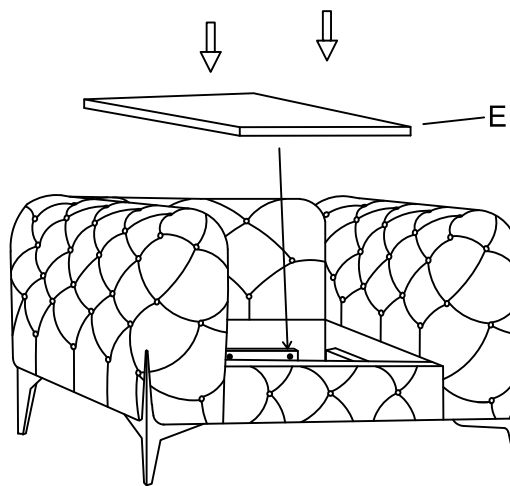

STEP 7

