



ASSEMBLY DIAGRAM


285 Q

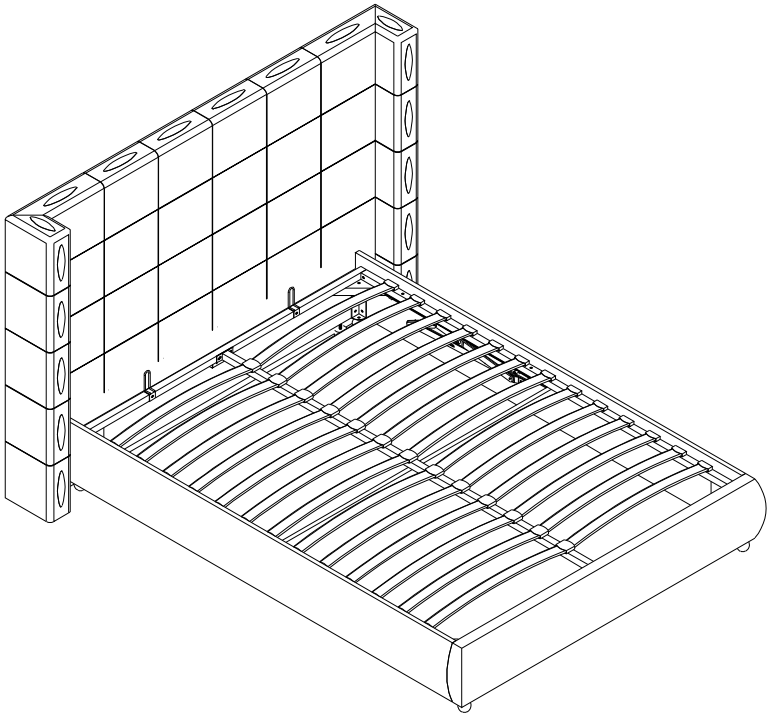

Box 1

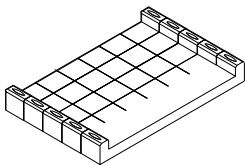


A: 1pc




I#-1:GAS LIFT

I: 2pcs




N: 26pcs

Box 2




B: 1pc

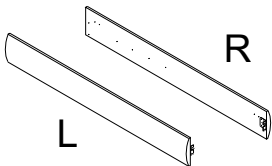

L

C: 2pcs

R




D: 1pc




E: 4pcs




F: 2pcs



G: 4pcs

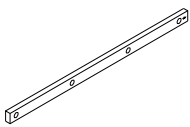

H: 2pcs

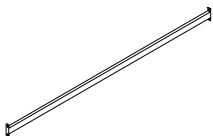


J: 1pc



K: 26pcs




L: 13pcs

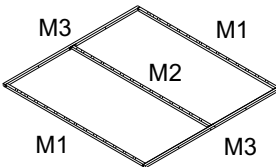

M: 1Set




O: 1pc




P: 2pcs




Q: 2pcs

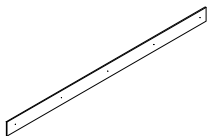

R: 2pcs

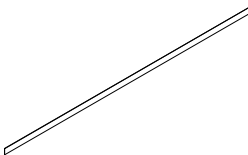
















S: 2pcs




T: 1pc


HARDWARE
LIST

Parts List

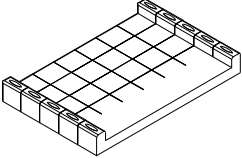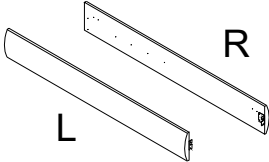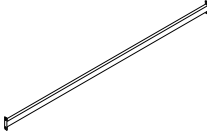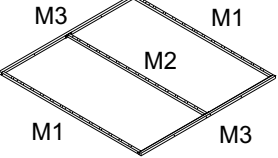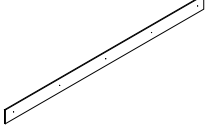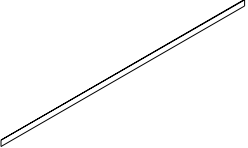
 A: 1pc	 B: 1pc	 C: 2pcs	 D: 1pc
 E: 4pcs	 F: 2pcs	 CORNER BRACKET G: 4pcs	 H: 2pcs
 I#-1: GAS LIFT I: 2pcs	 J: 1pc	 K: 26pcs	 L: 13pcs
 M: 1Set	 N: 26pcs	 O: 1pc	 P: 2pcs
 Q: 2pcs	 R: 2pcs	 S: 2pcs	 T: 1pc

Hardware List

 M8*25mm 1: 12pcs	 M8*45mm 2: 18pcs	 M6*20mm 3: 20pcs	 M6*35mm 4: 8pcs
 M6*50mm 5: 4pcs	 M8 6: 16pcs	 M8 7: 30pcs	 M8 8: 30pcs
 M8 9: 1pc	 M8 10: 1pc	 M6 11: 32pcs	 M6 12: 1pc
 Ø15 13: 6pcs	 14: 10pcs	 8*30mm 15: 10pcs	 16: 1pc

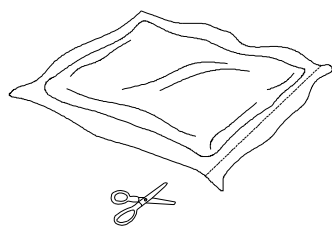

Carefully open the compression bag.

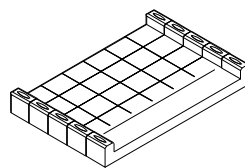



A: 1pc

TIPS:

Wait patiently for the rebound; This is the key! It takes 12-24 hours (or more) for the upholstery to fully regain its full shape and comfort.


During or after recovery, gently pat and knead the surface and edges of the backpack to help evenly distribute the inner padding and eliminate transport indentations. If there are folds, try gently stretching the fabric in different directions to flatten it.


STEP 1

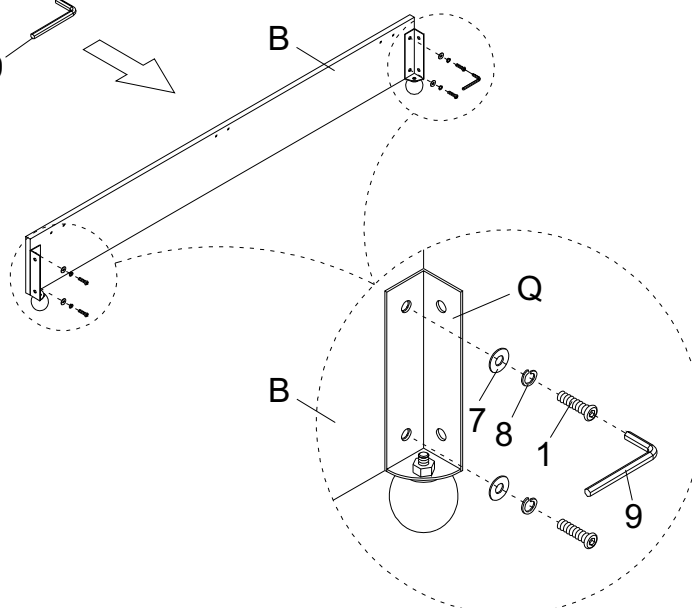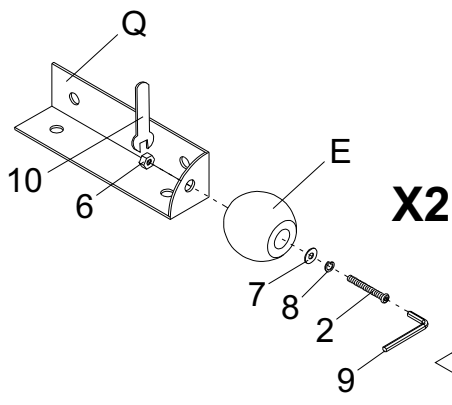


	1 x 4PCS
	2 x 2PCS
	6 x 2PCS
	7 x 6PCS
	8 x 6PCS
	9 x 1PC
	10 x 1PC

STEP 2

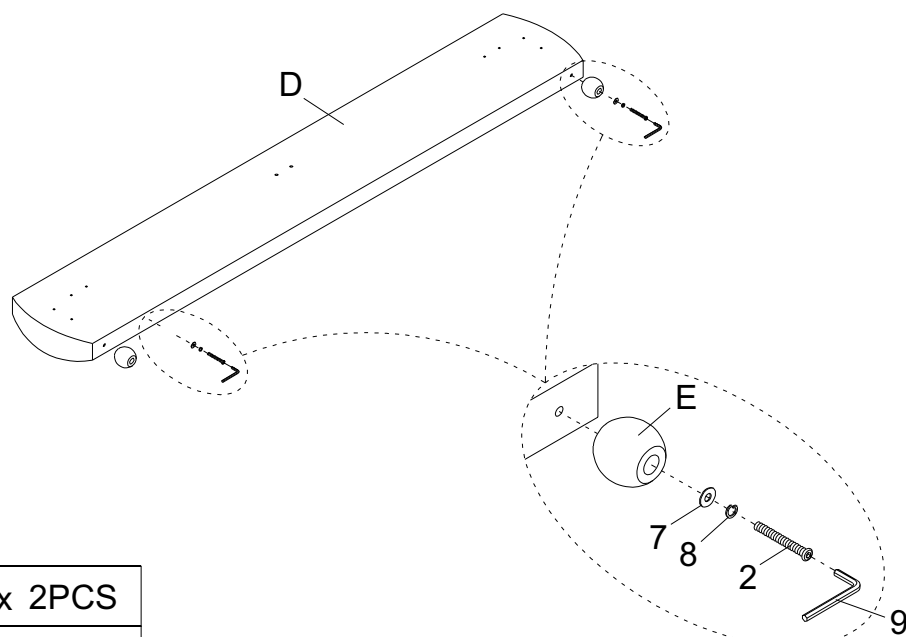


	2 x 2PCS
	7 x 2PCS
	8 x 2PCS
	9 x 1PC

STEP 3

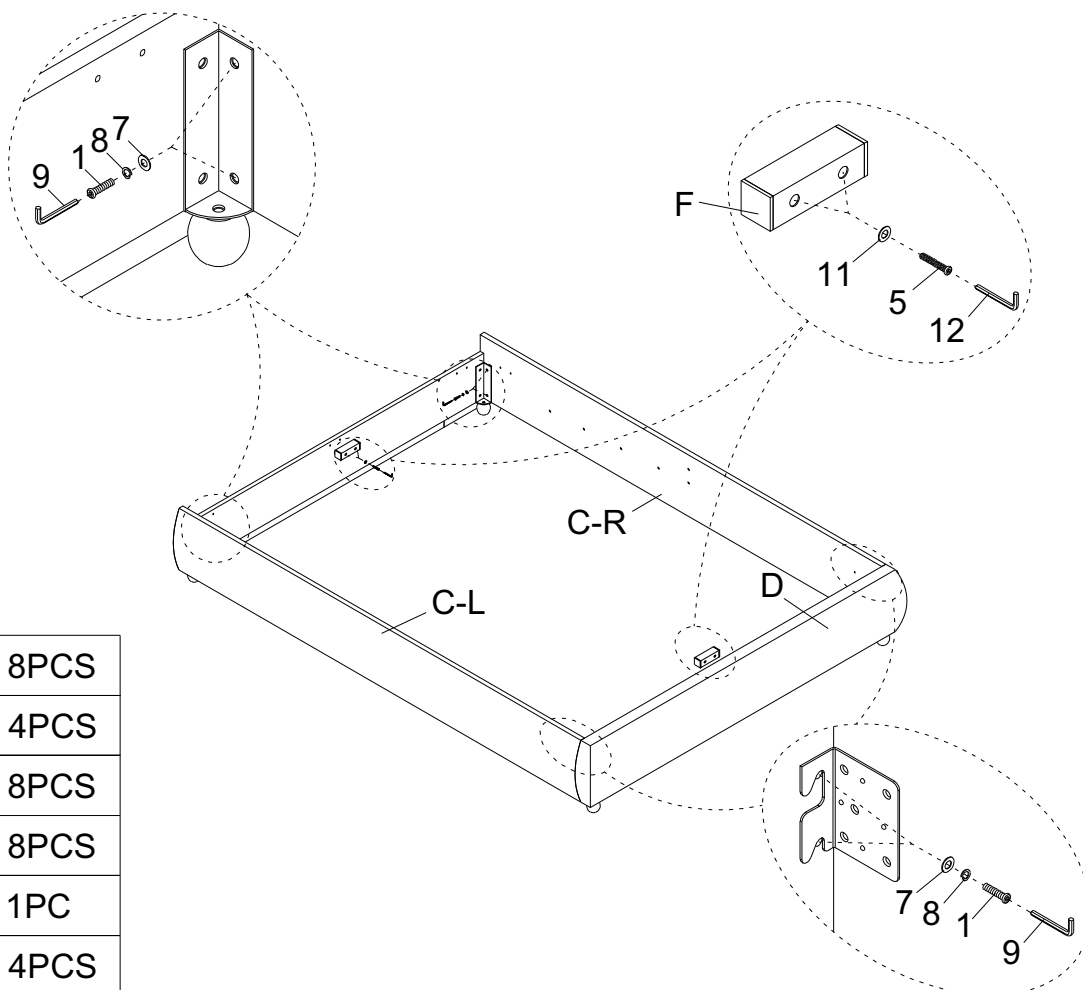

	1 x 8PCS
	5 x 4PCS
	7 x 8PCS
	8 x 8PCS
	9 x 1PC
	11 x 4PCS
	12 x 1PC

STEP 4

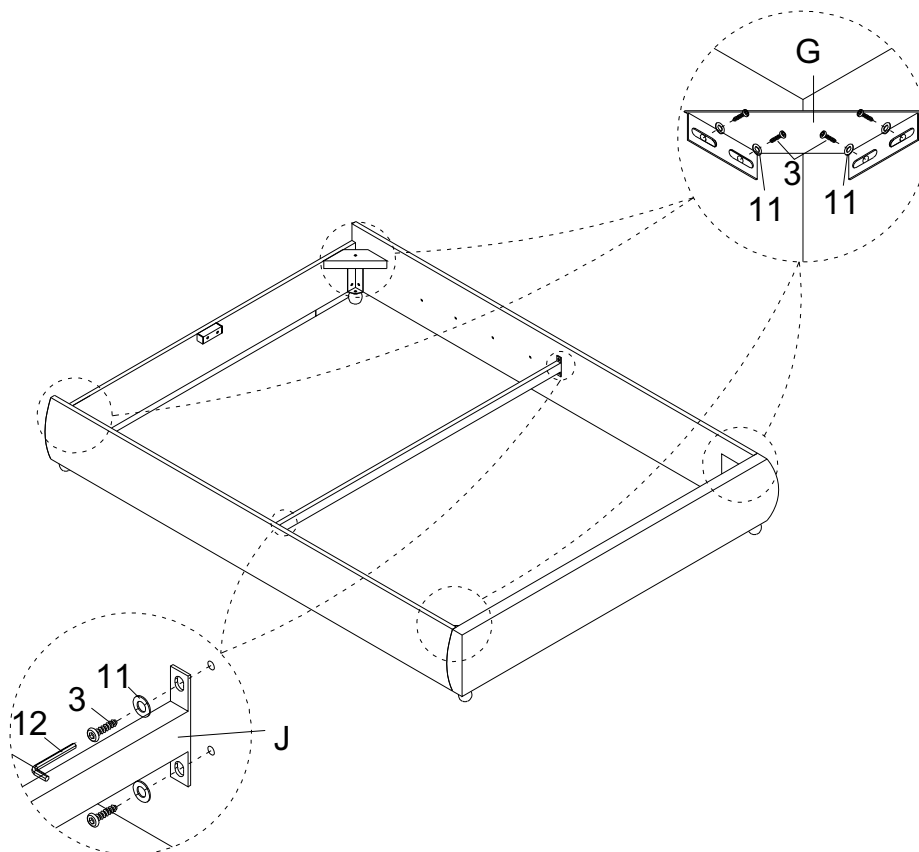

3 x 20PCS




11 x 20PCS




12 x 1PC

STEP 5

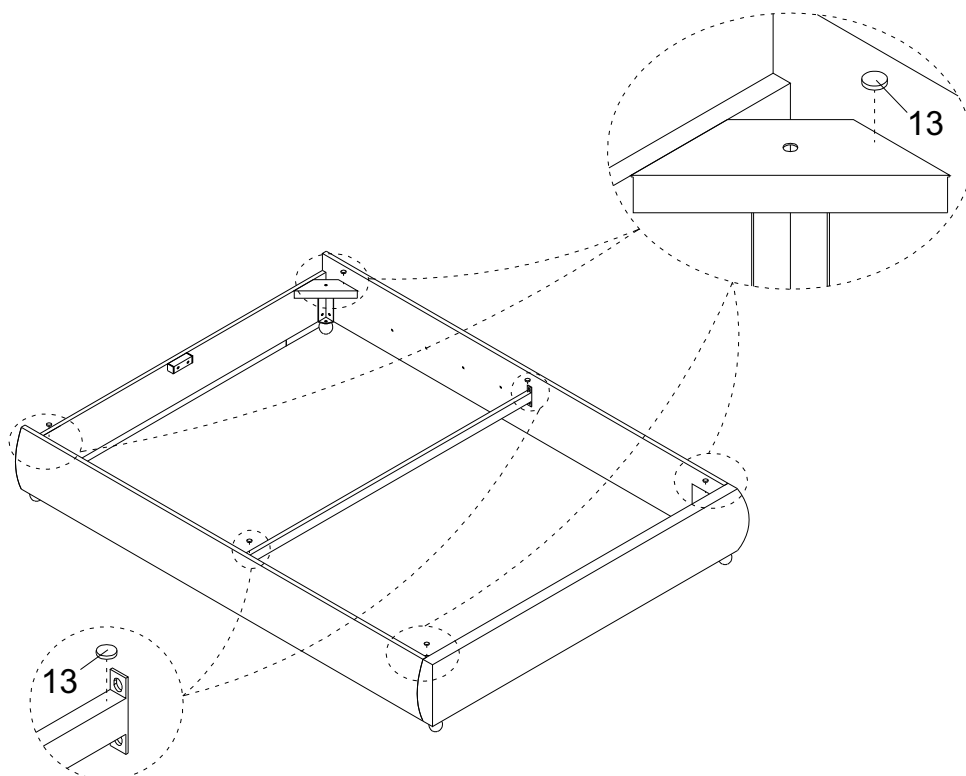

13 x 6PCS

STEP 6

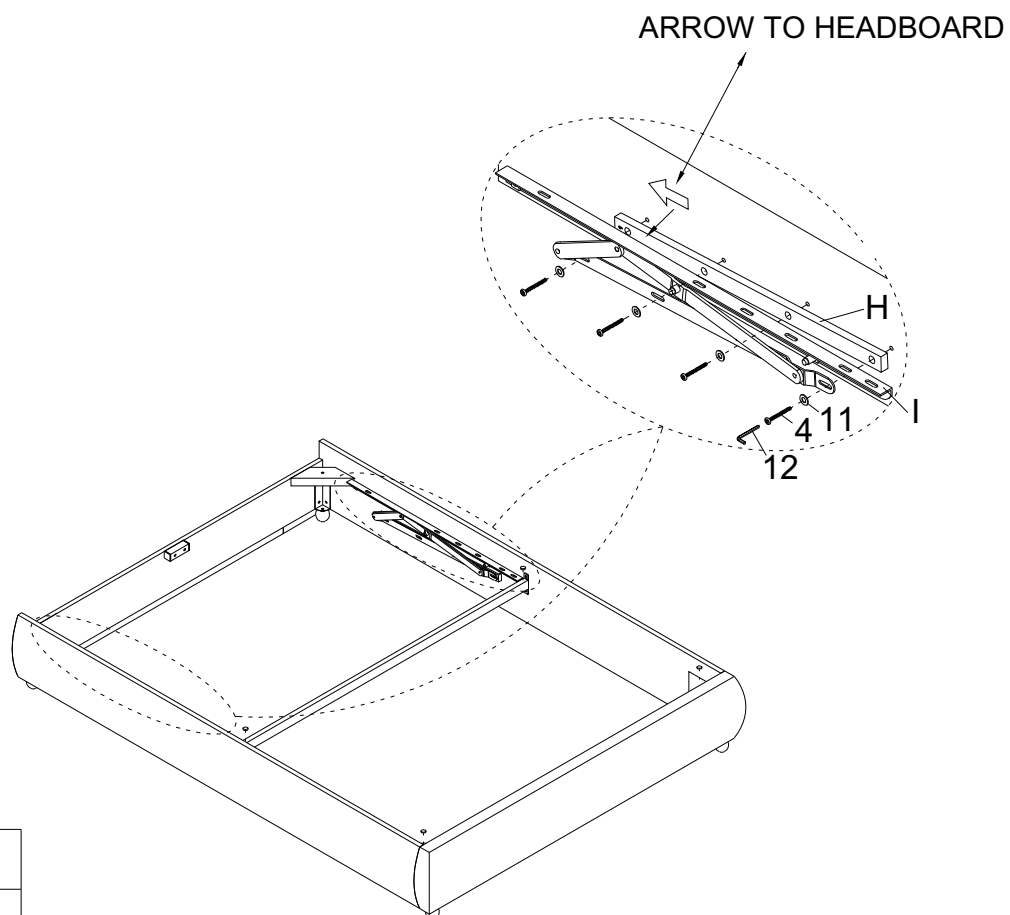


 4 x 8PCS


 11 x 8PCS

 12 x 1PC

STEP 7

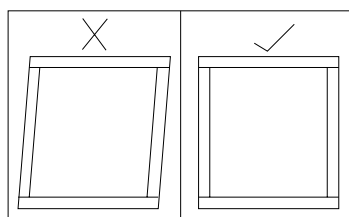

Note: Ensure that Frame assembly sare square.

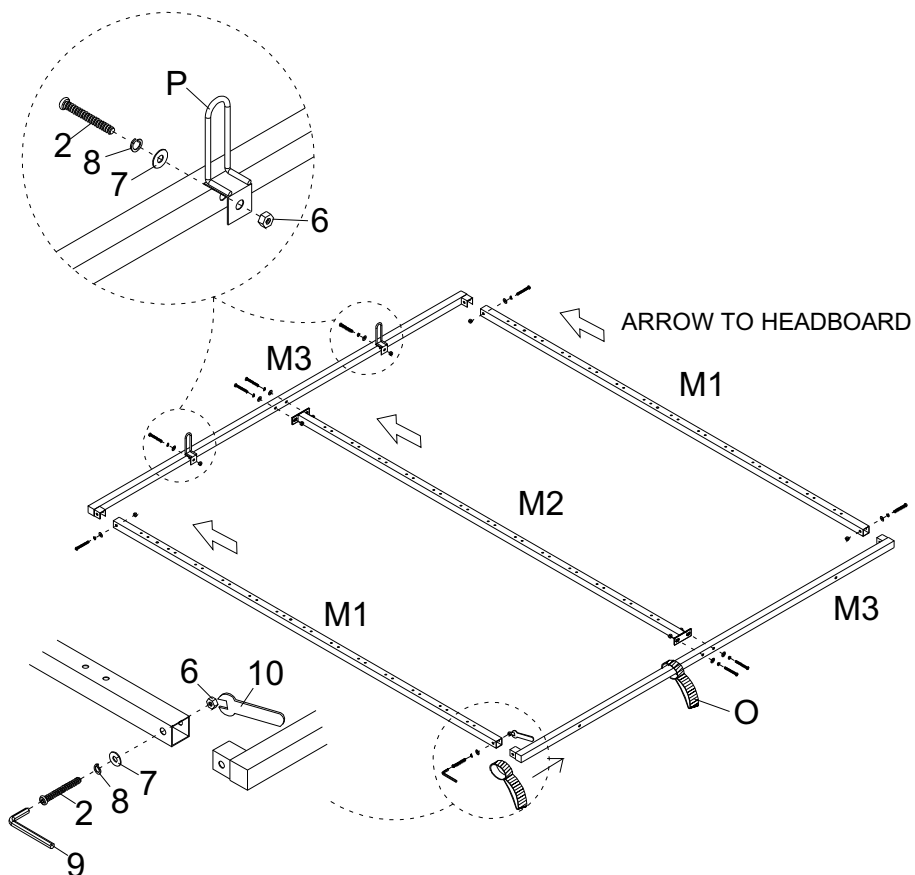

 2: 10PCS

 6: 10PCS


 7: 10PCS

 8: 10PCS

 9: 1PC


 10: 1PC

STEP 8 Walls are flat and solid with intact paint, the surface is clean, free of dust and oil, Proceed directly from step 9.

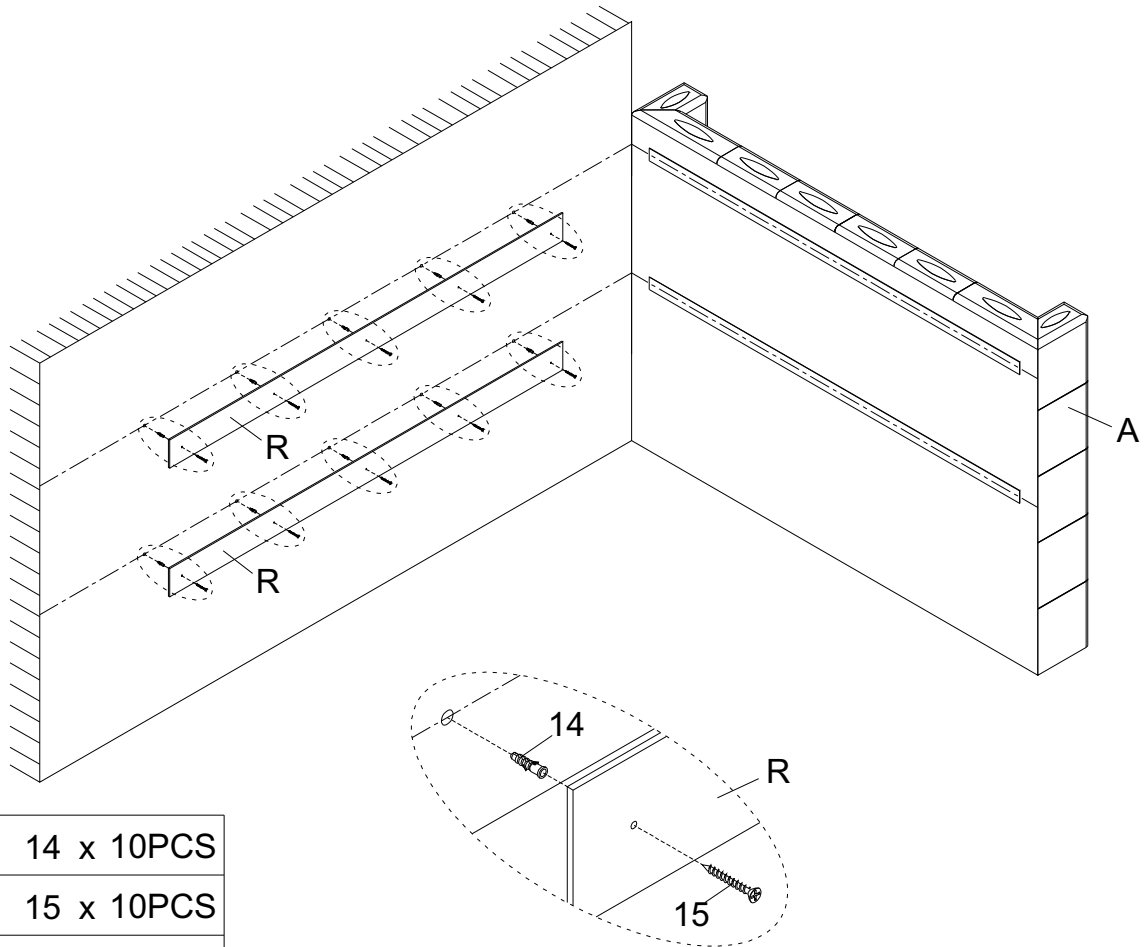


	14 x 10PCS
	15 x 10PCS
	16 x 1PC


STEP 9

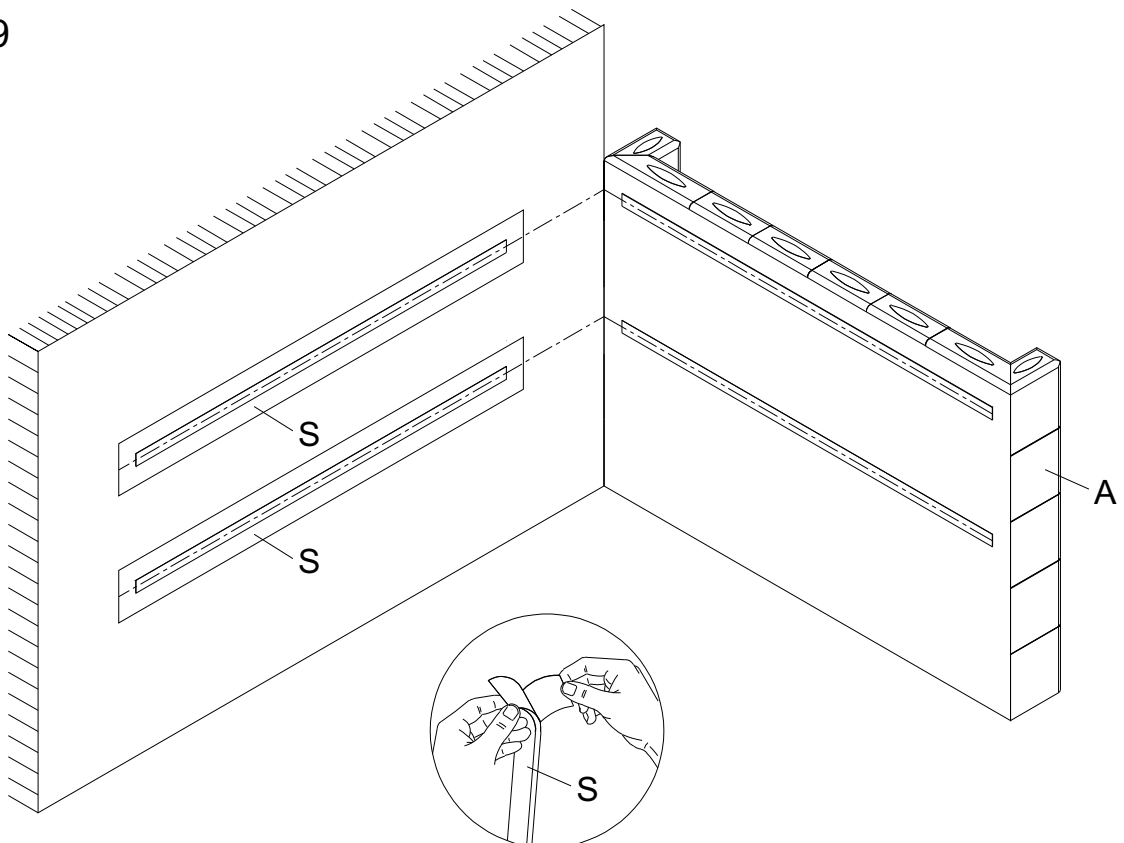

STEP 10

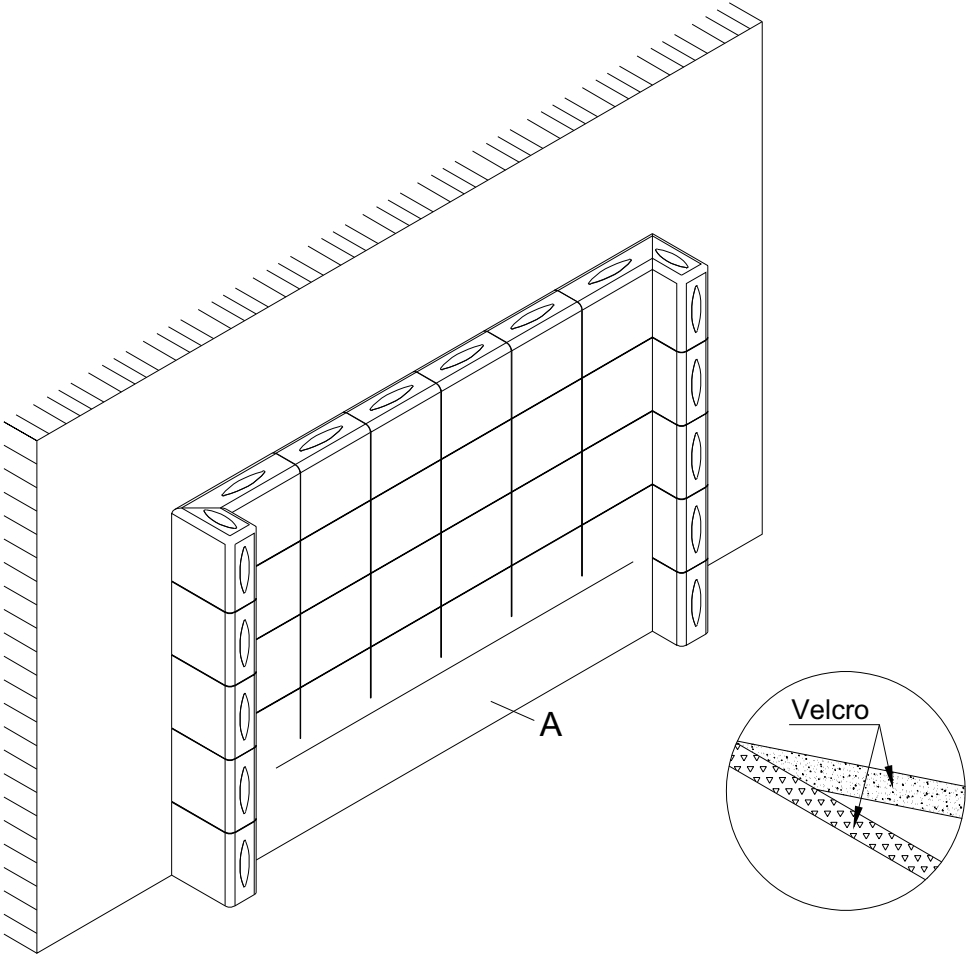

STEP 11

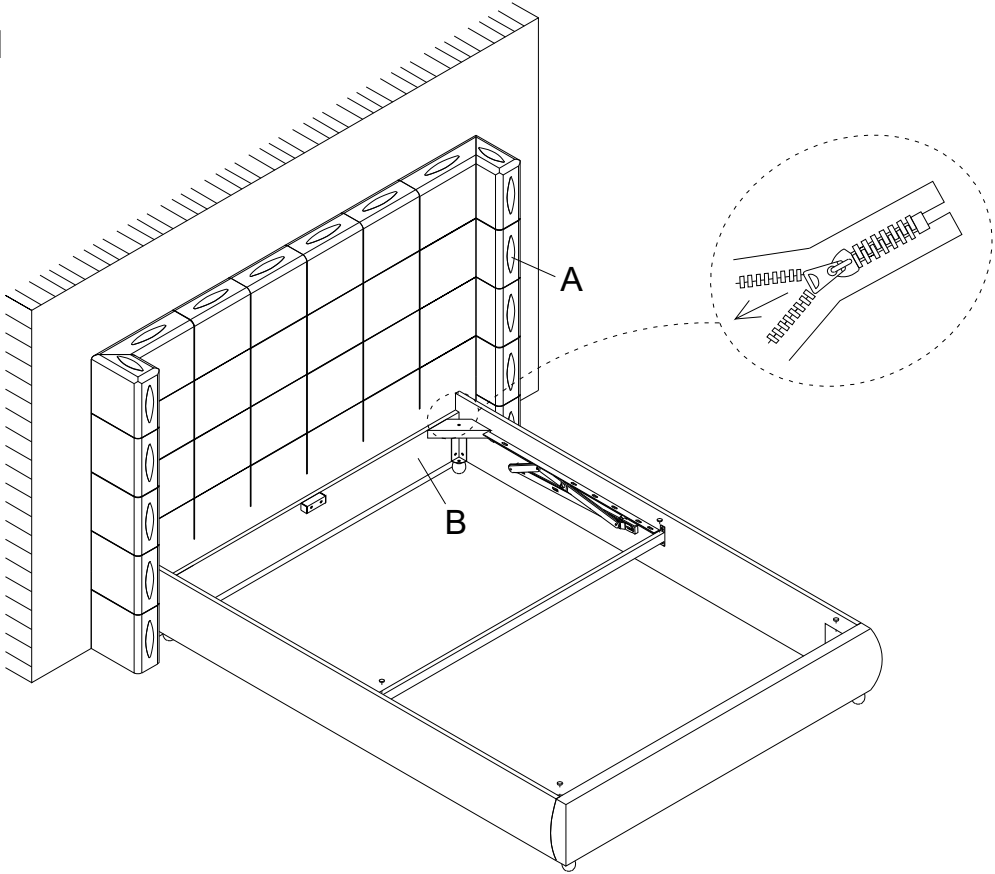


STEP 12


T  1PC

Assembly Instructions

Attach woven fabric
Turn the bed on its side and attach woven fabric (T) to the lower inner part of the bed.

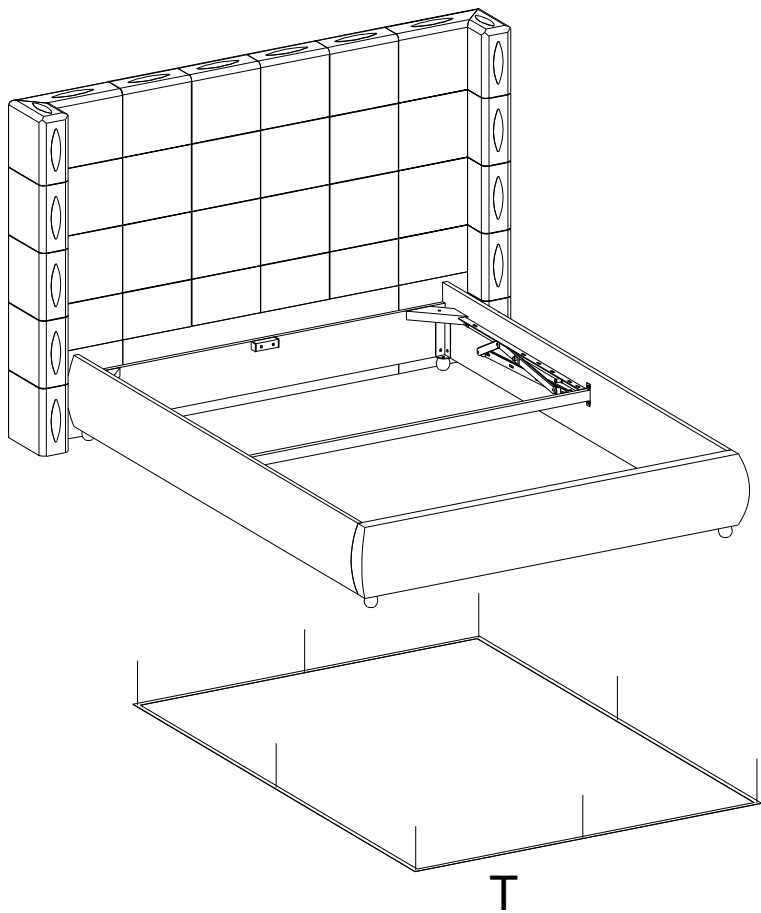


STEP 13

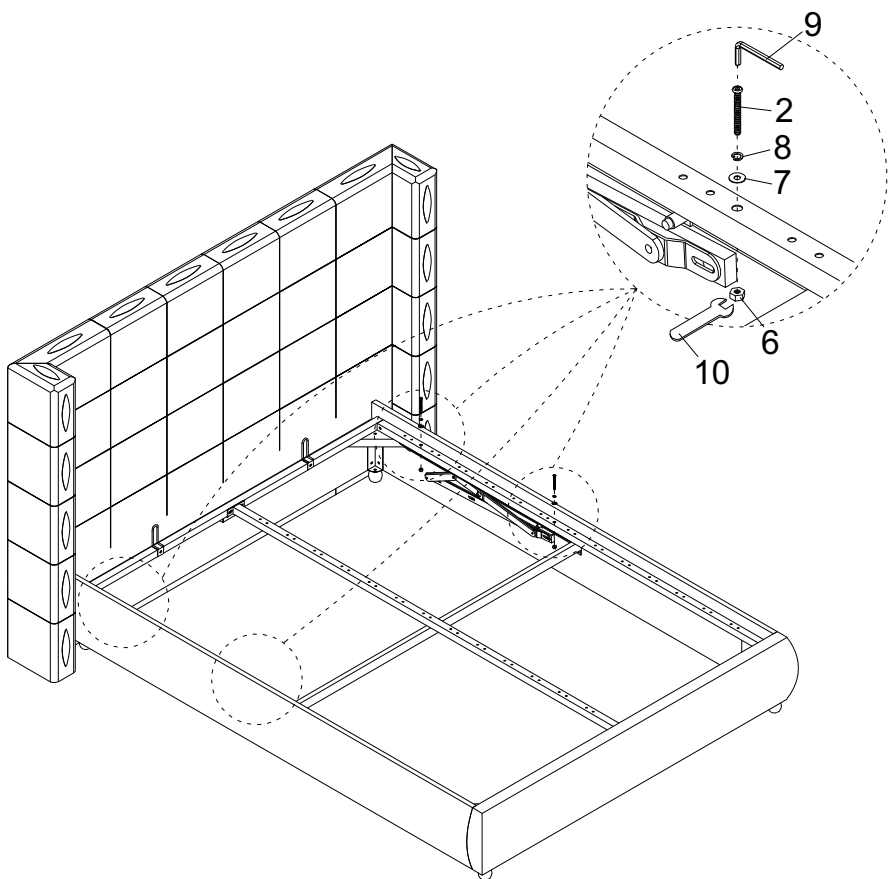

	2: 4PCS
	6: 4PCS
	7: 4PCS
	8: 4PCS
	9: 1PC
	10: 1PC

STEP 14

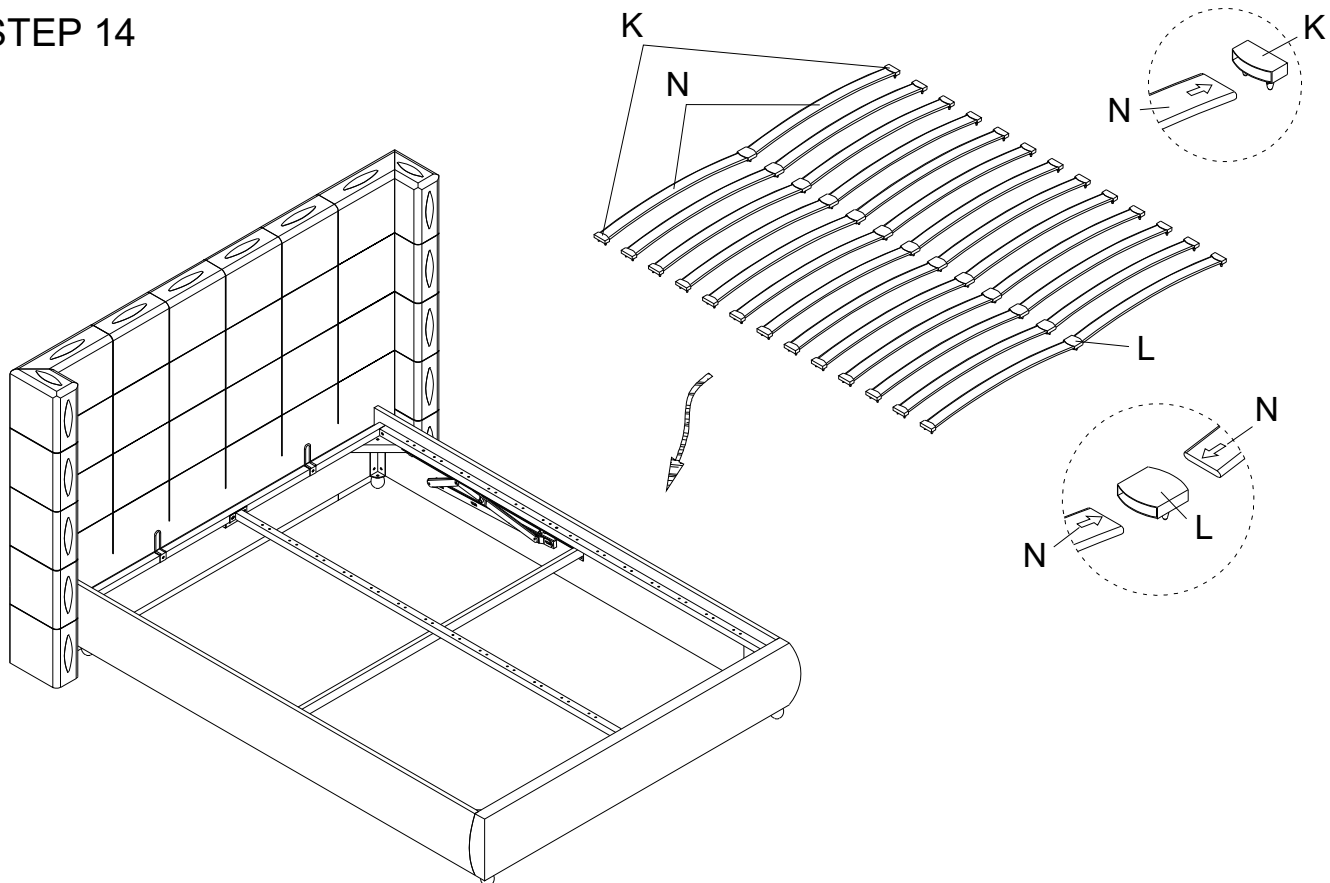

STEP 15

Assembly Instructions

Please ensure the pneumatic arm is the correct orientation. The thinner section should be attached to the side rail, and the thicker part is connected to the slat frame. secure the pneumatic lifting mechanisms on the side rails place by using flange nuts as shown. Do not overtighten the nuts.

