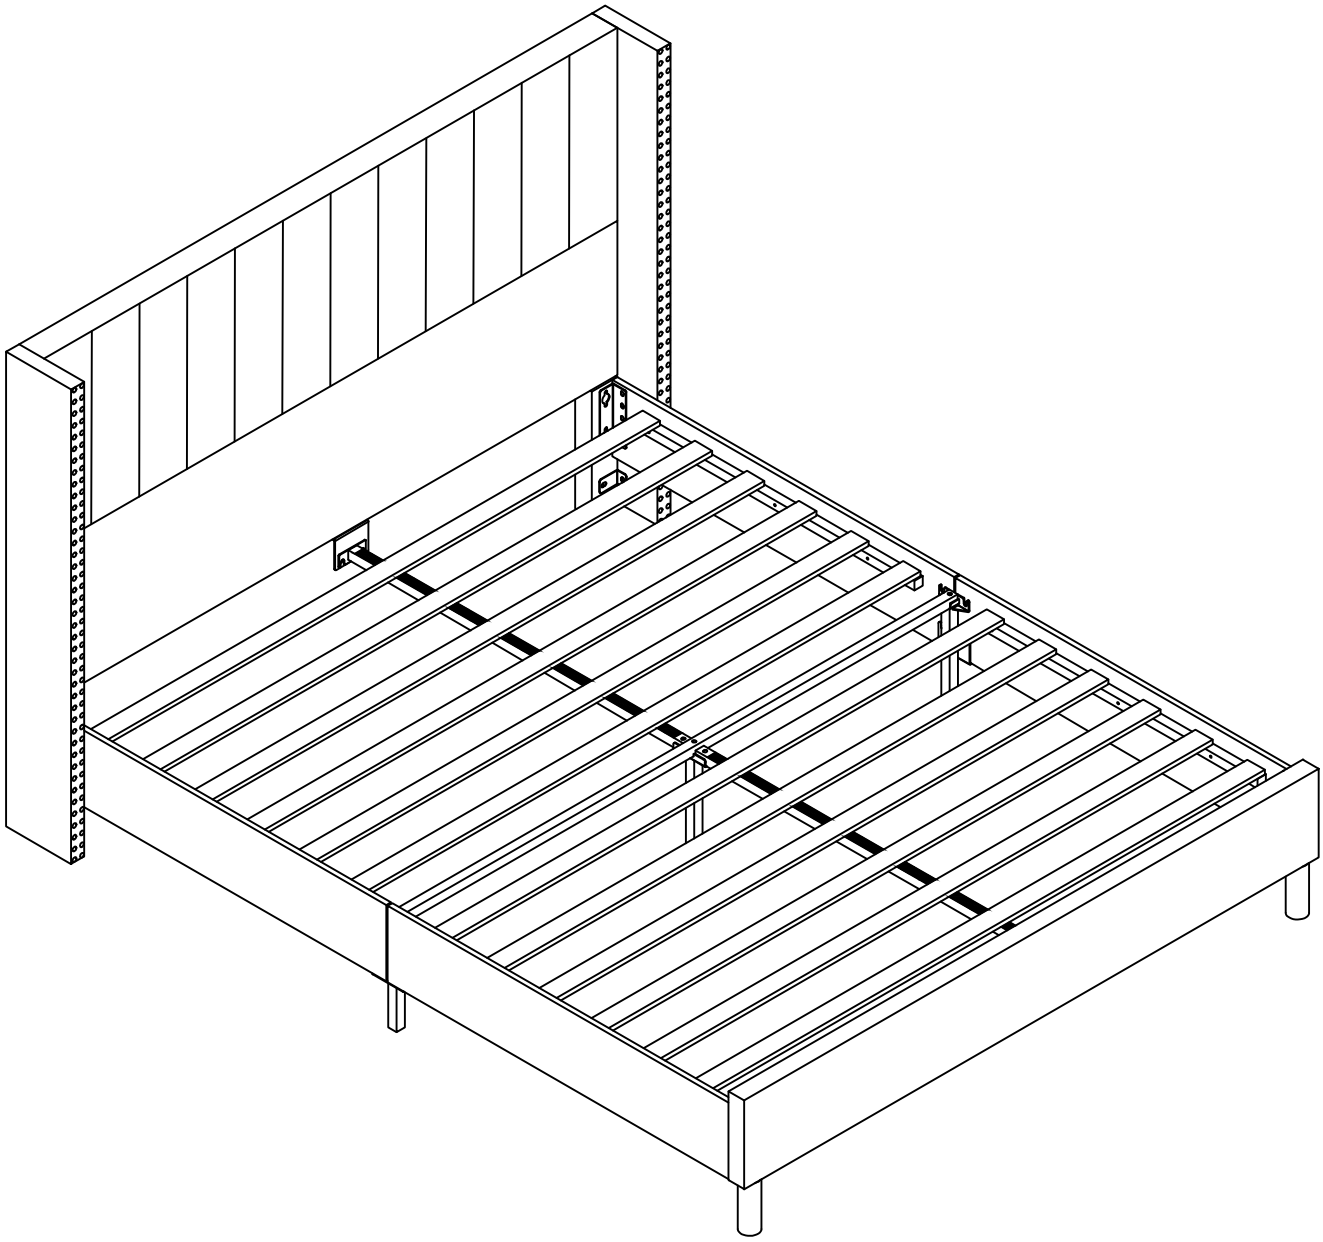
# ASSEMBLY INSTRUCTIONS





BHB029-Q

Dear Customers,
Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

# IMPORTANT

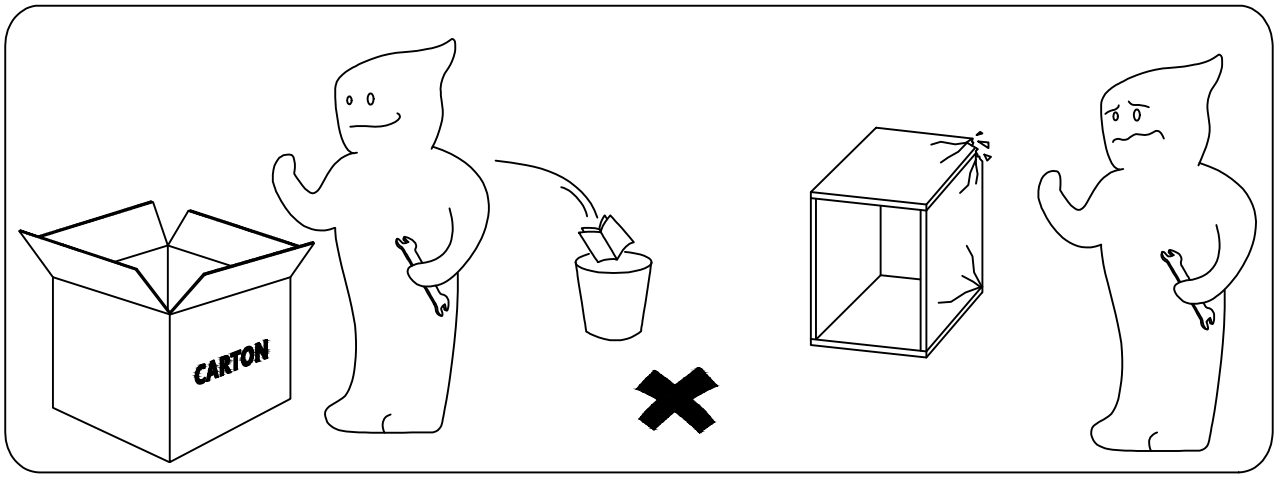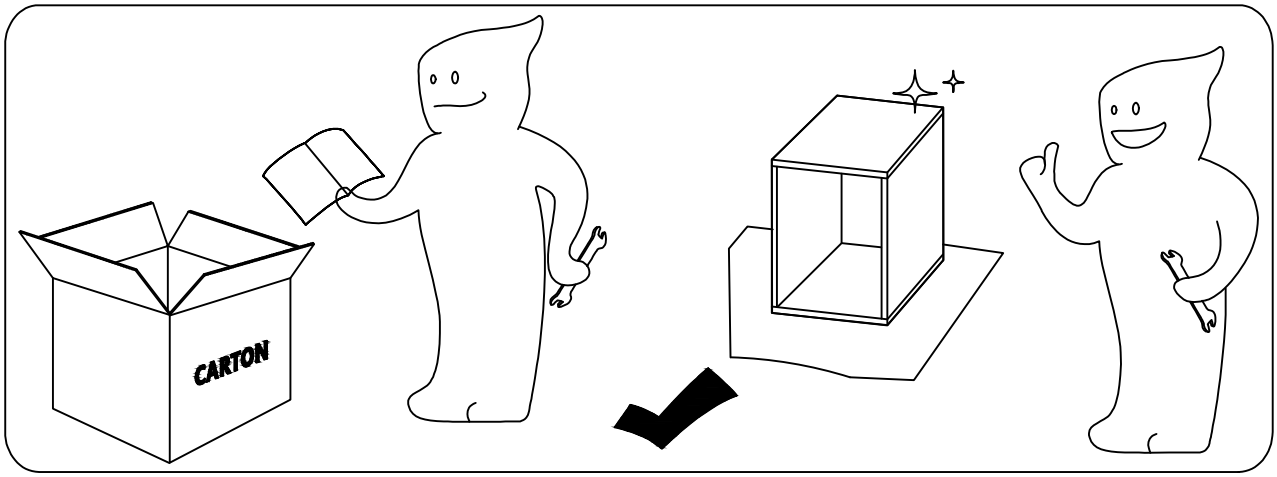Please follow the instruction manuals and use a pad to protect the product during your assembly.





















Note:
1.Should be assembled on flat ground to keep balance.
2.Before completing the installation,do not tighten the screws.









For easier and better assembly, 2 or more adults are required.

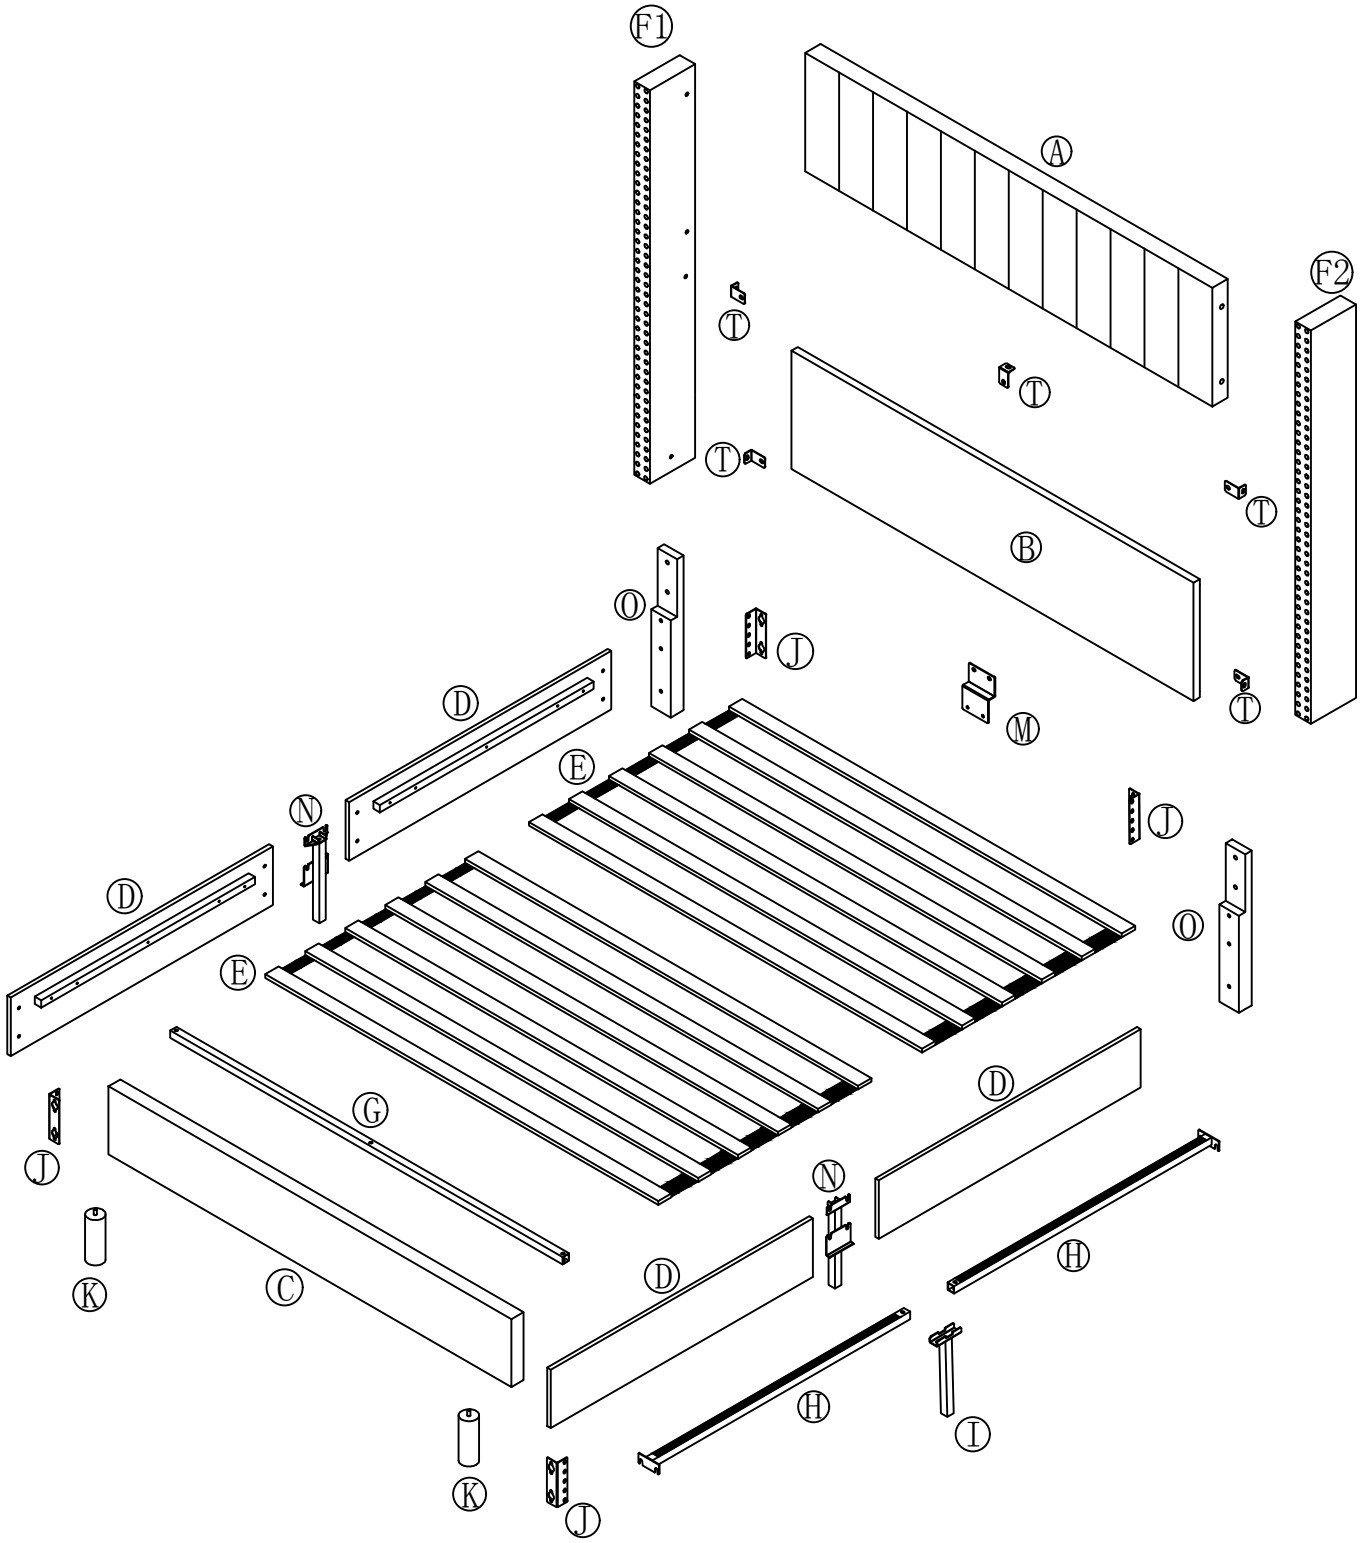
F1
A
F2
T
T
T
T
T
B
O
J
D
M
E
N
J
D
O
E
G
D
J
N
H
K
C
D
H
I
K
J


# Part list
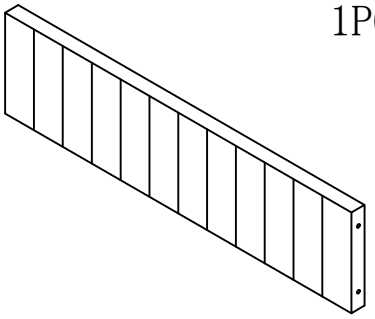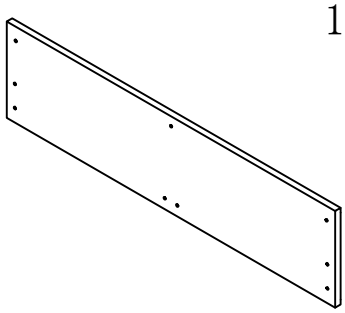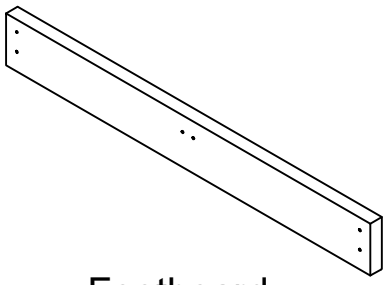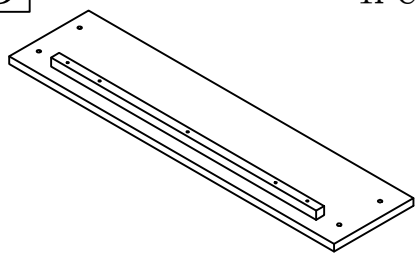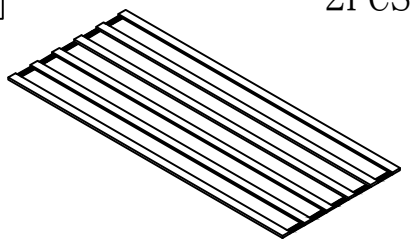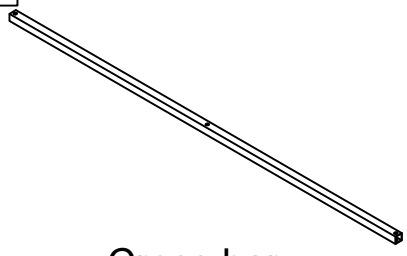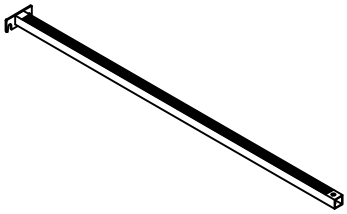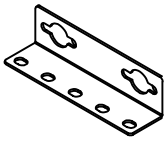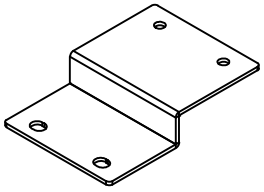
| | | |
|---|---|---|
| A 1PC  Top headboard | B 1PC  Bottom headboard | C 1PC  Footboard |
| D 4PCS  Side rail | E 2PCS  Slat | F1 1PC  Left wing |
| F2 1PC  Right wing | G 1PC  Cross bar | H 2PCS  Middle support bar |
| I 1PC  Support leg | J 4PCS  Connector | K 2PCS  Leg | M 1PC  Connector |
| N 2PCS  Bedside foot | O 2PCS  Headboard foot | T 5PCS  Connector | |

# Hardware list
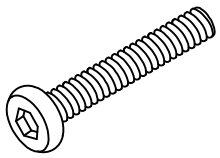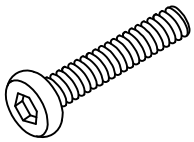
| | | |
|---|---|---|
| X1 9PCS  M8*50 | X2 4PCS  M8*40 | X3 21PCS  M8*25 |
| X4 19PCS  M8*18 | Y 8PCS  Φ22*Φ8.5 | Z 1PC  M8 |


**1**

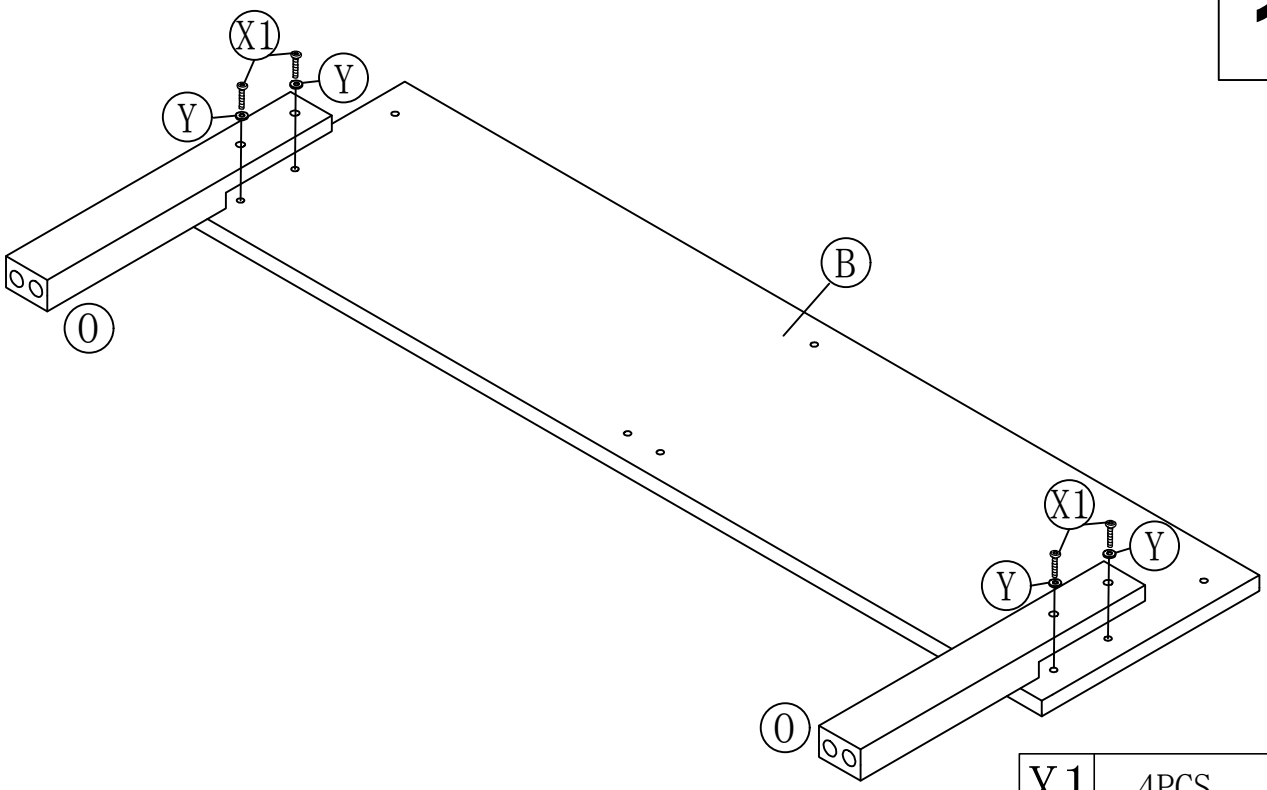


| | | |
|---|---|---|
| X1 | 4PCS | |
| | M8*50mm | |
| Y | | 4PCS |

Back side


**2**

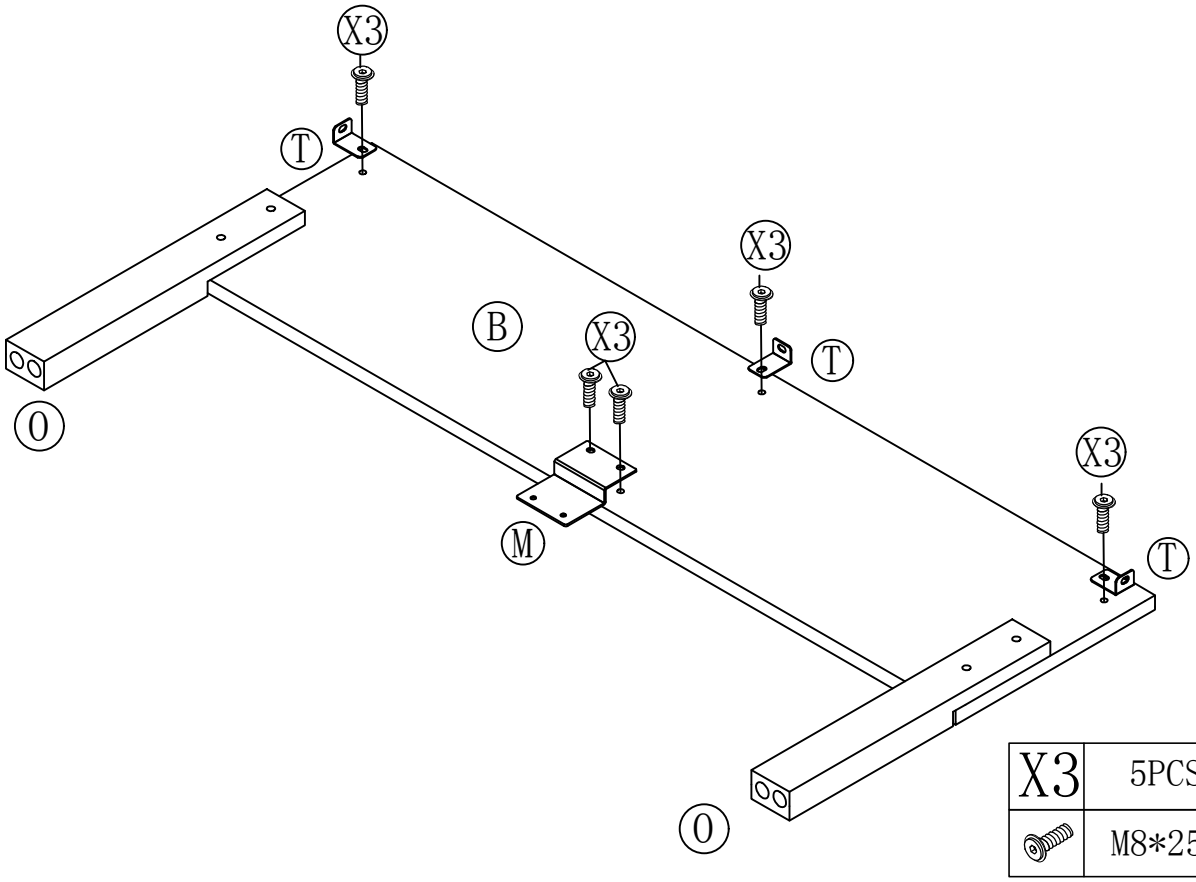


| | | |
|---|---|---|
| X3 | 5PCS | |
| | M8*25mm | |
| T | | 3PCS |

Back side


**3**

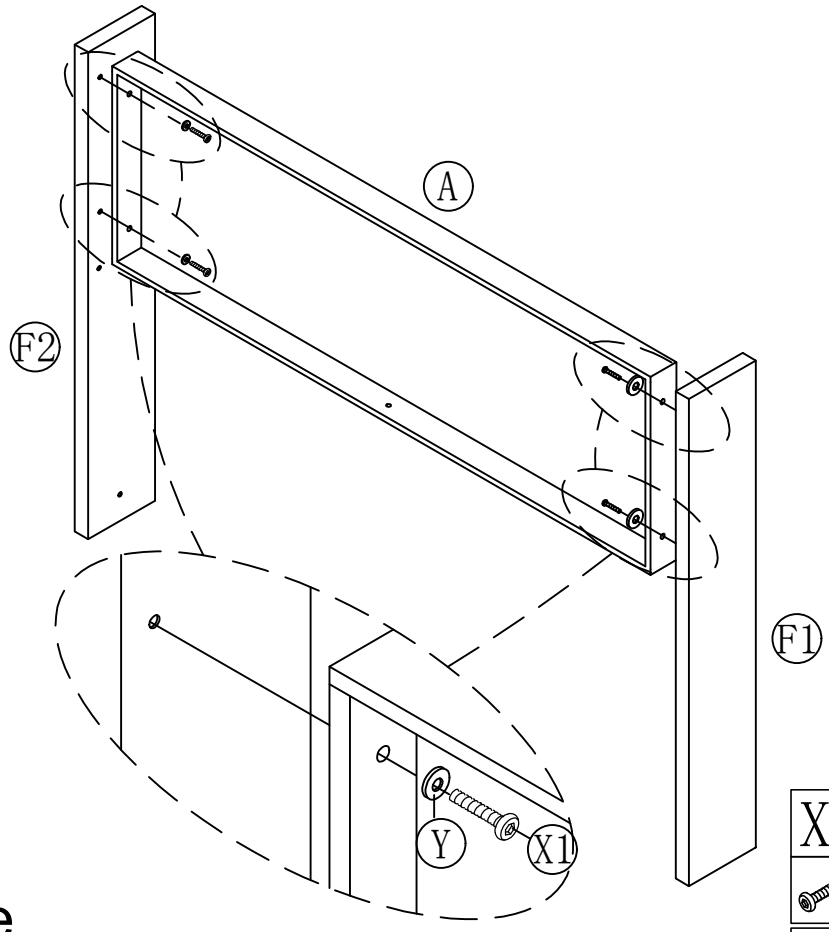


Back side

| | | |
|---|---|---|
| X1 | | 4PCS |
| | | M8*50mm |
| Y | | 4PCS |


**4**

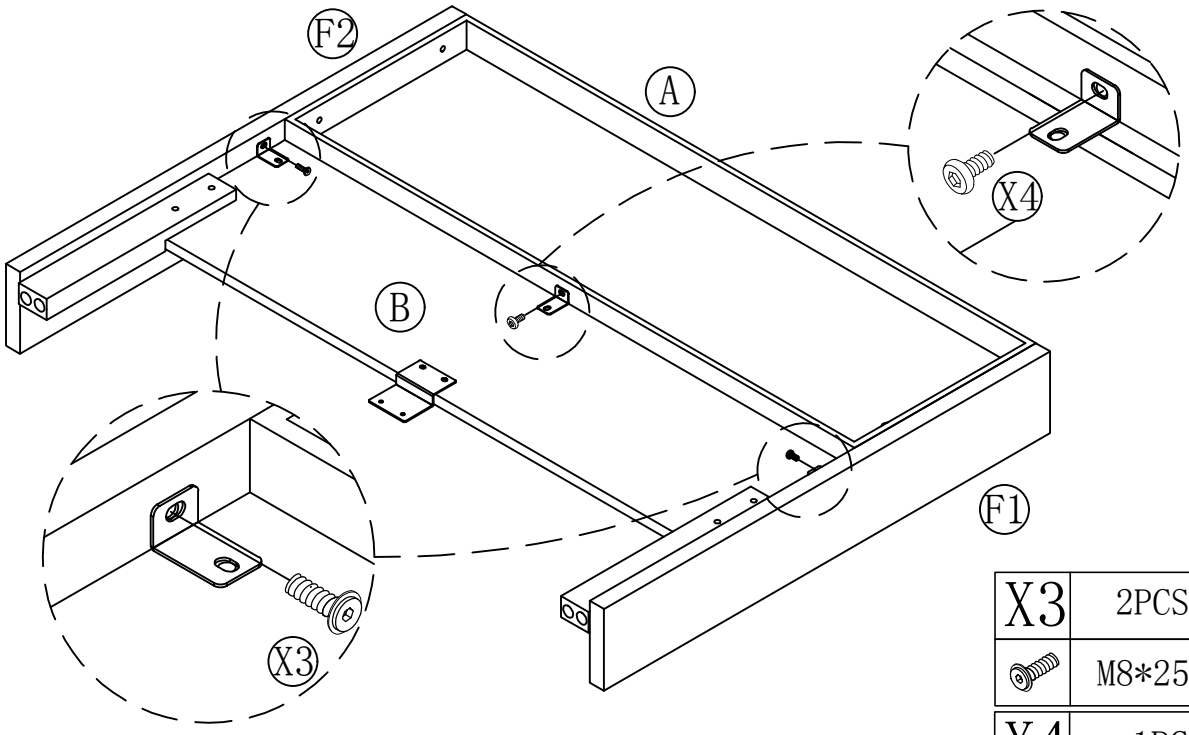


Back side

| | |
|---|---|
| X3 | 2PCS |
| | M8*25mm |
| X4 | 1PC |
| | M8*18mm |


# 5

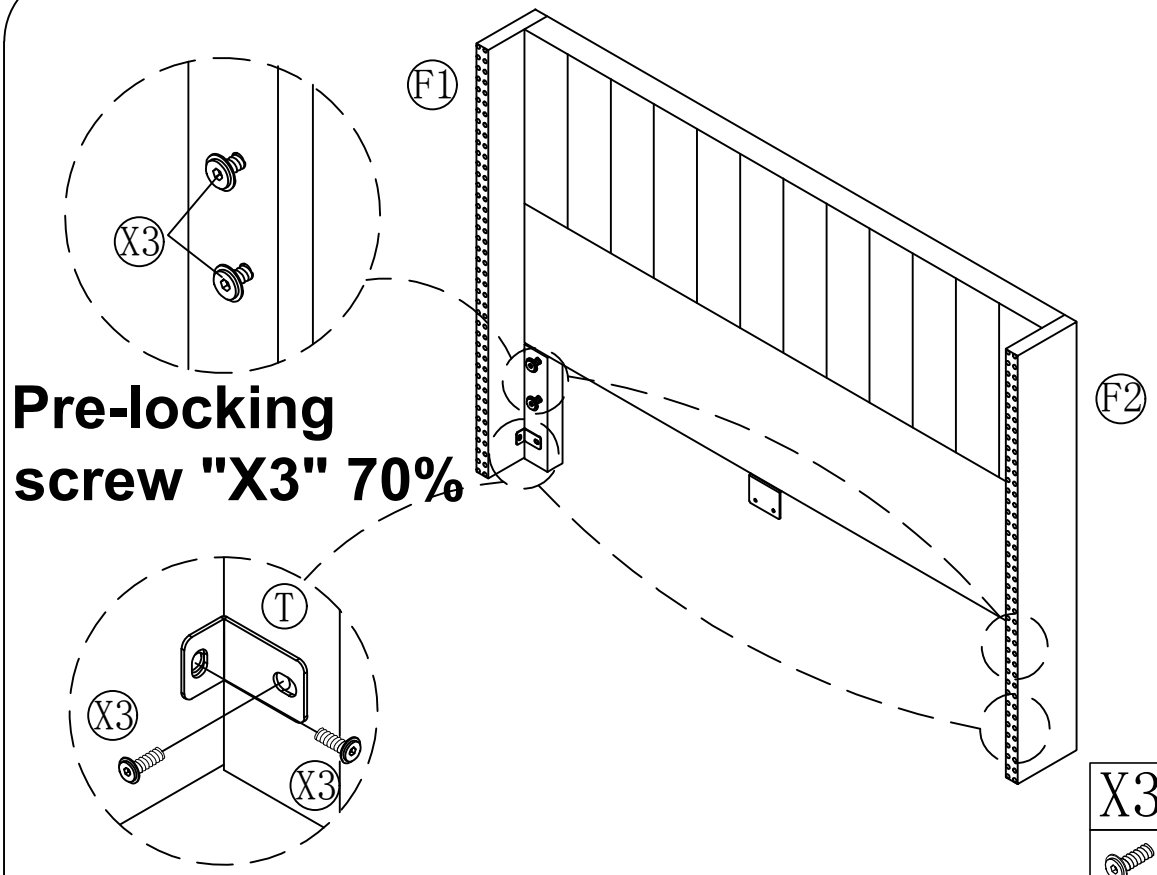


**Pre-locking screw "X3" 70%**

| | | |
|---|---|---|
| X3 | 8PCS | |
| | M8*25mm | |
| T | | 2PCS |

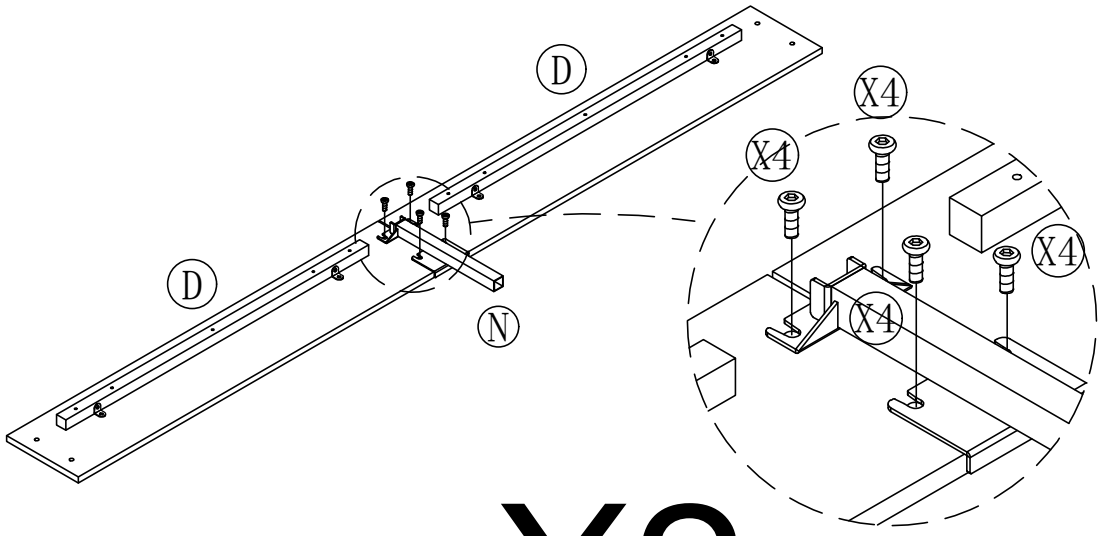
# 6




X2

| | |
|---|---|
| X4 | 8PCS |
| | M8*18mm |


**7**

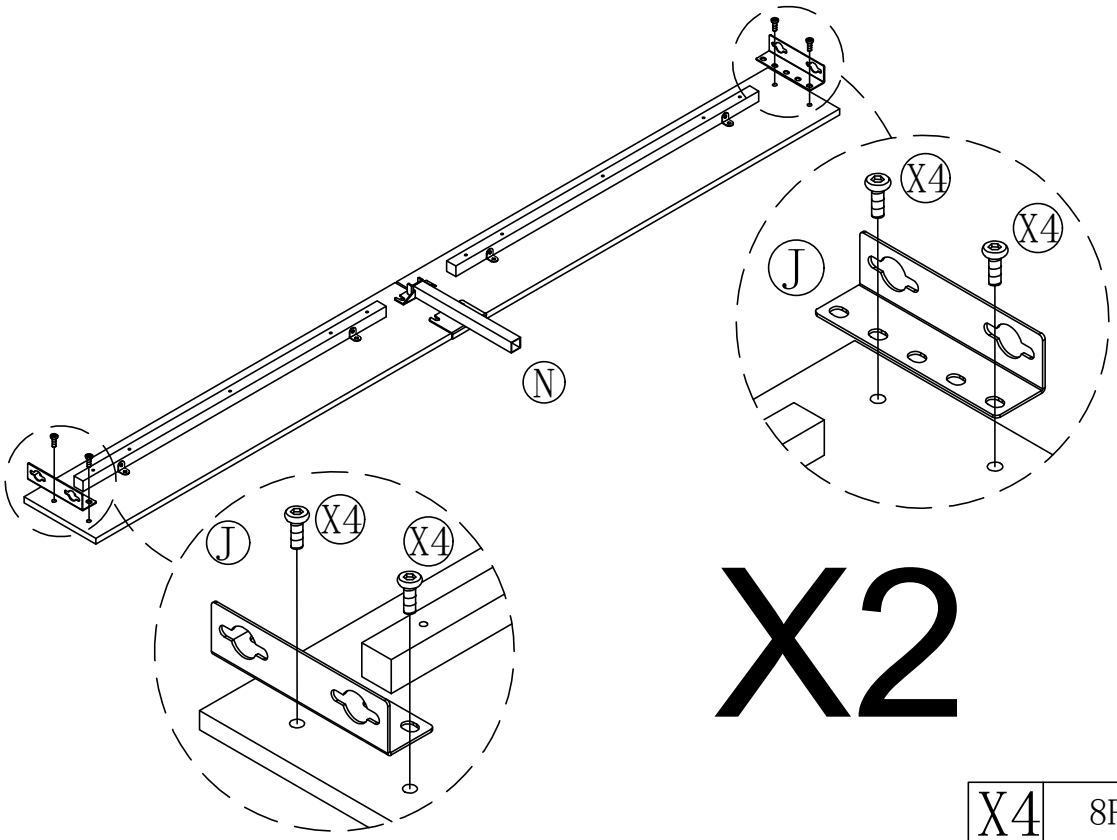


X2

| | |
|---|---|
| X4 | 8PCS |
|  | M8*18mm |


**8**

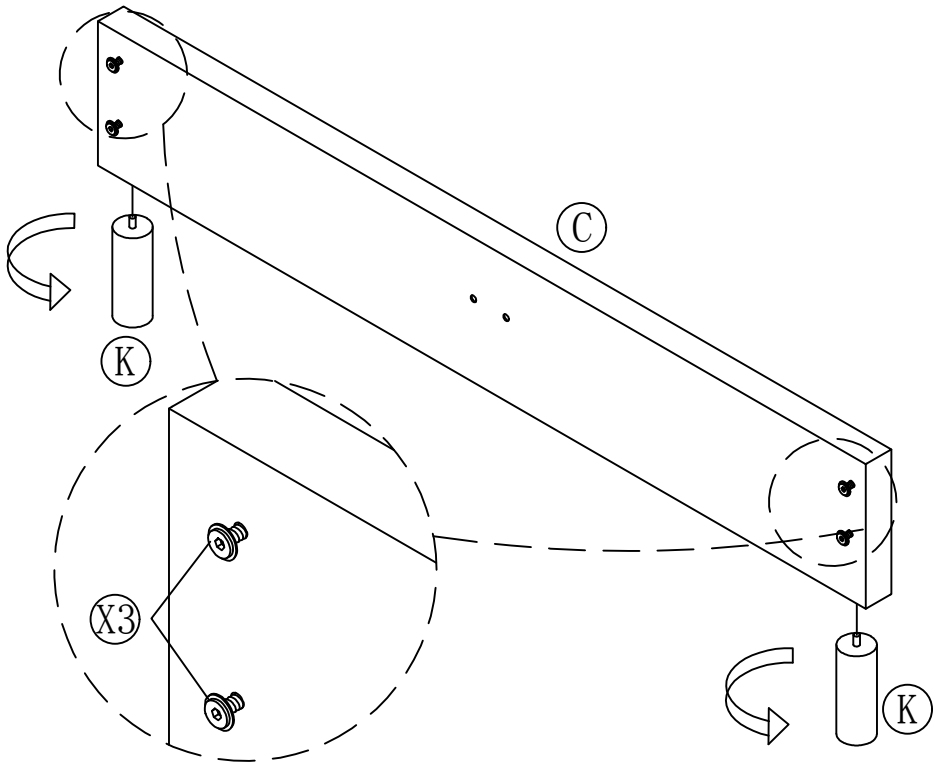



**Pre-locking screw "X3" 70%**

| | |
|---|---|
| X3 | 4PCS |
|  | M8*25mm |

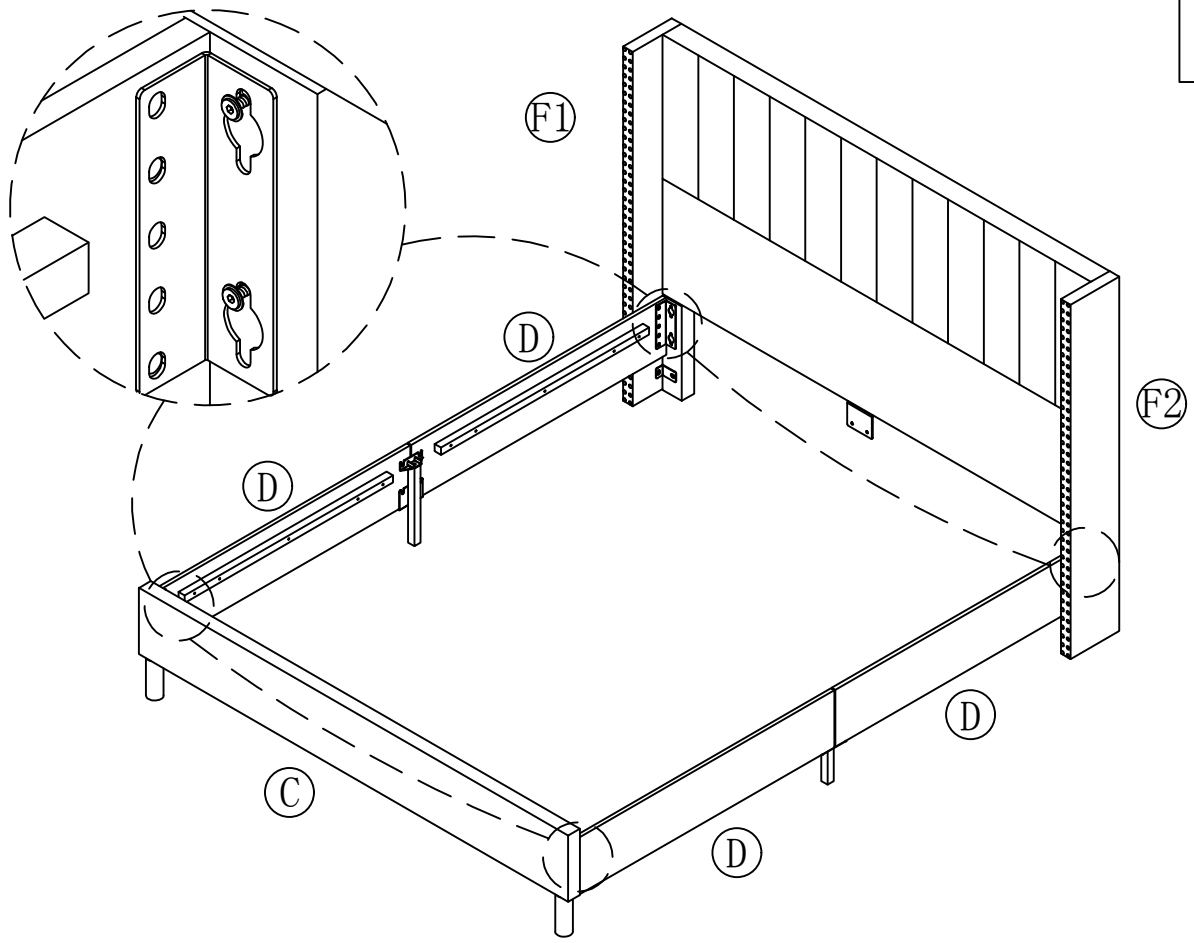**9**





**10**

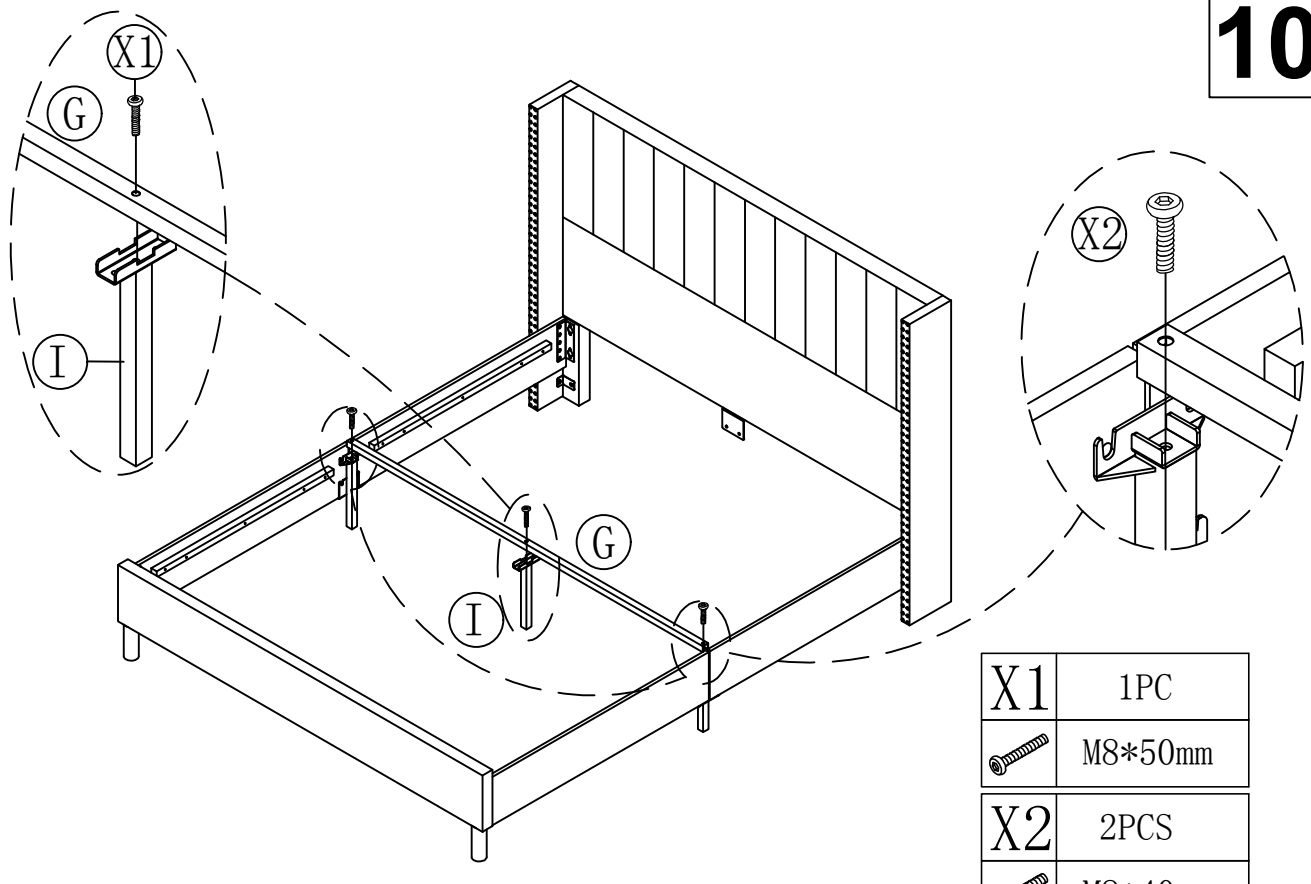



| | |
|---|---|
| X1 | 1PC |
|  | M8*50mm |
| X2 | 2PCS |
|  | M8*40mm |

**11**

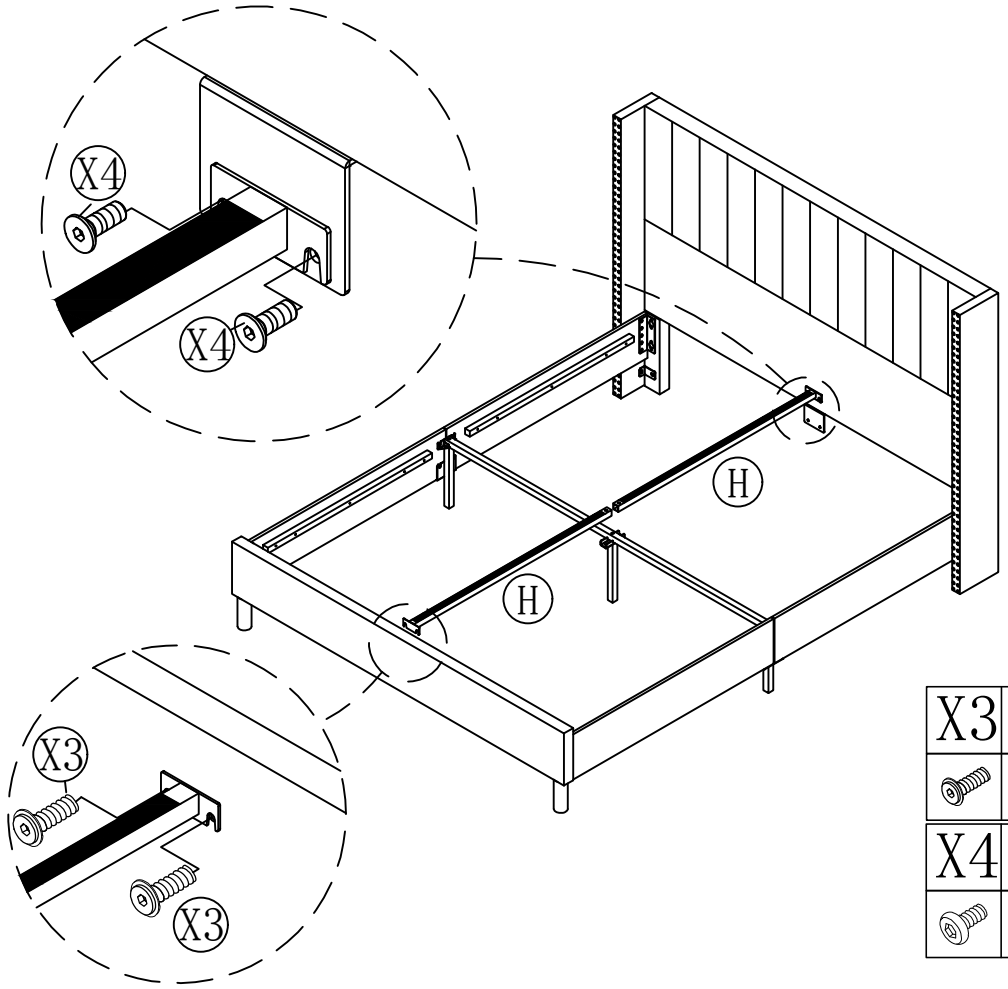



| | |
|---|---|
| X3 | 2PCS |
|  | M8*25mm |
| X4 | 2PCS |
|  | M8*18mm |

**12**

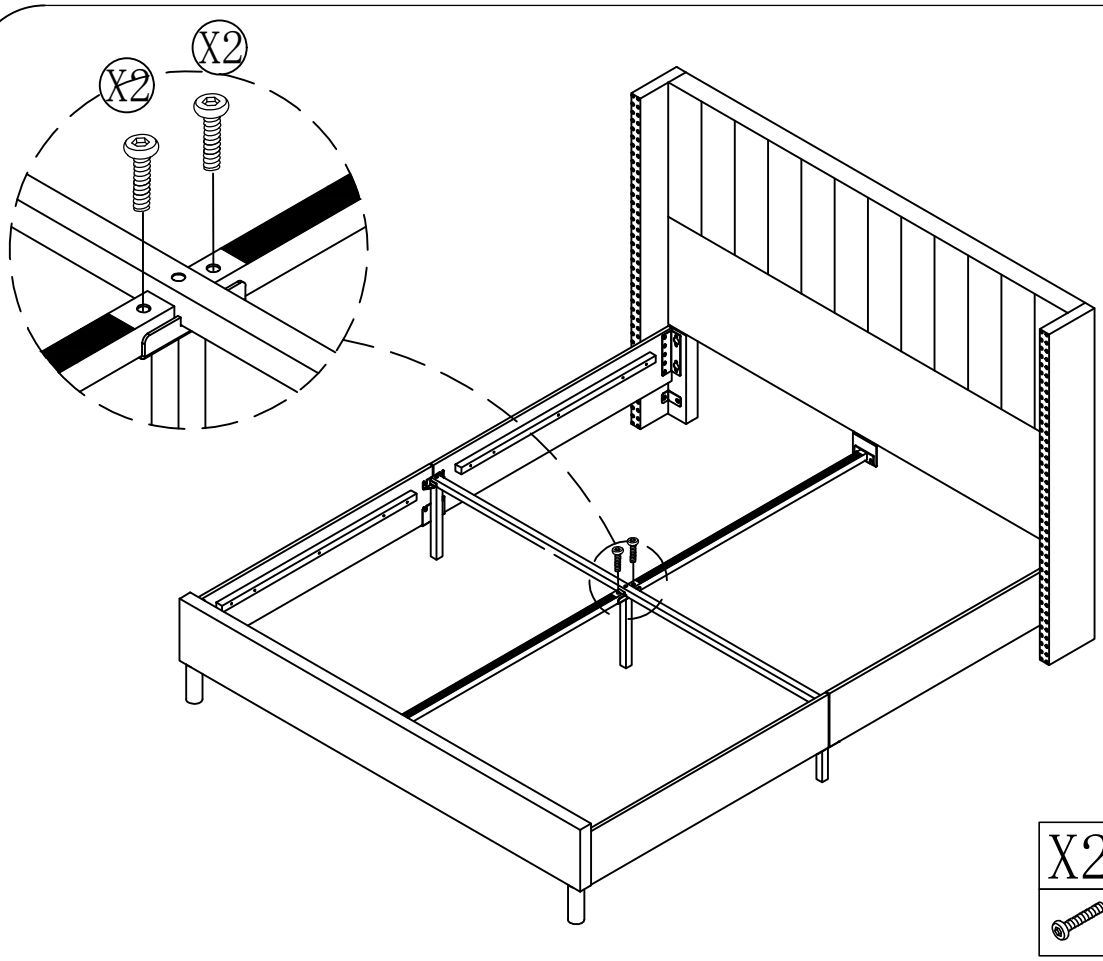


| | |
|---|---|
| X2 | 2PCS |
|  | M8*40mm |

**13**

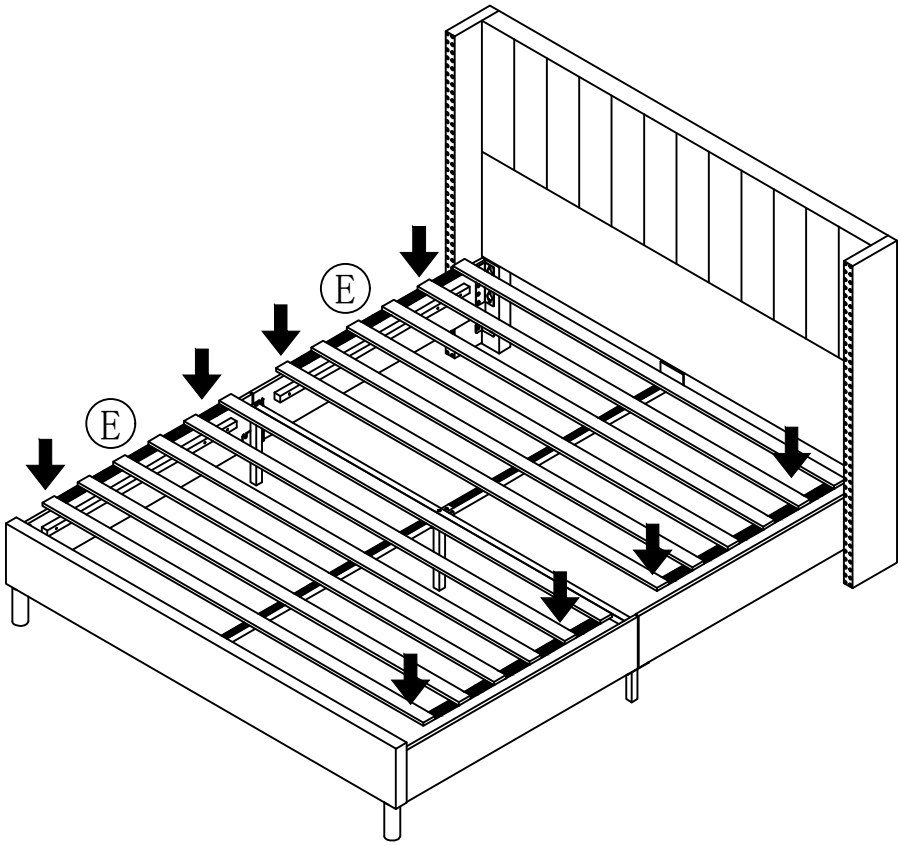


**14**

