


ASSEMBLY INSTRUCTIONS

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

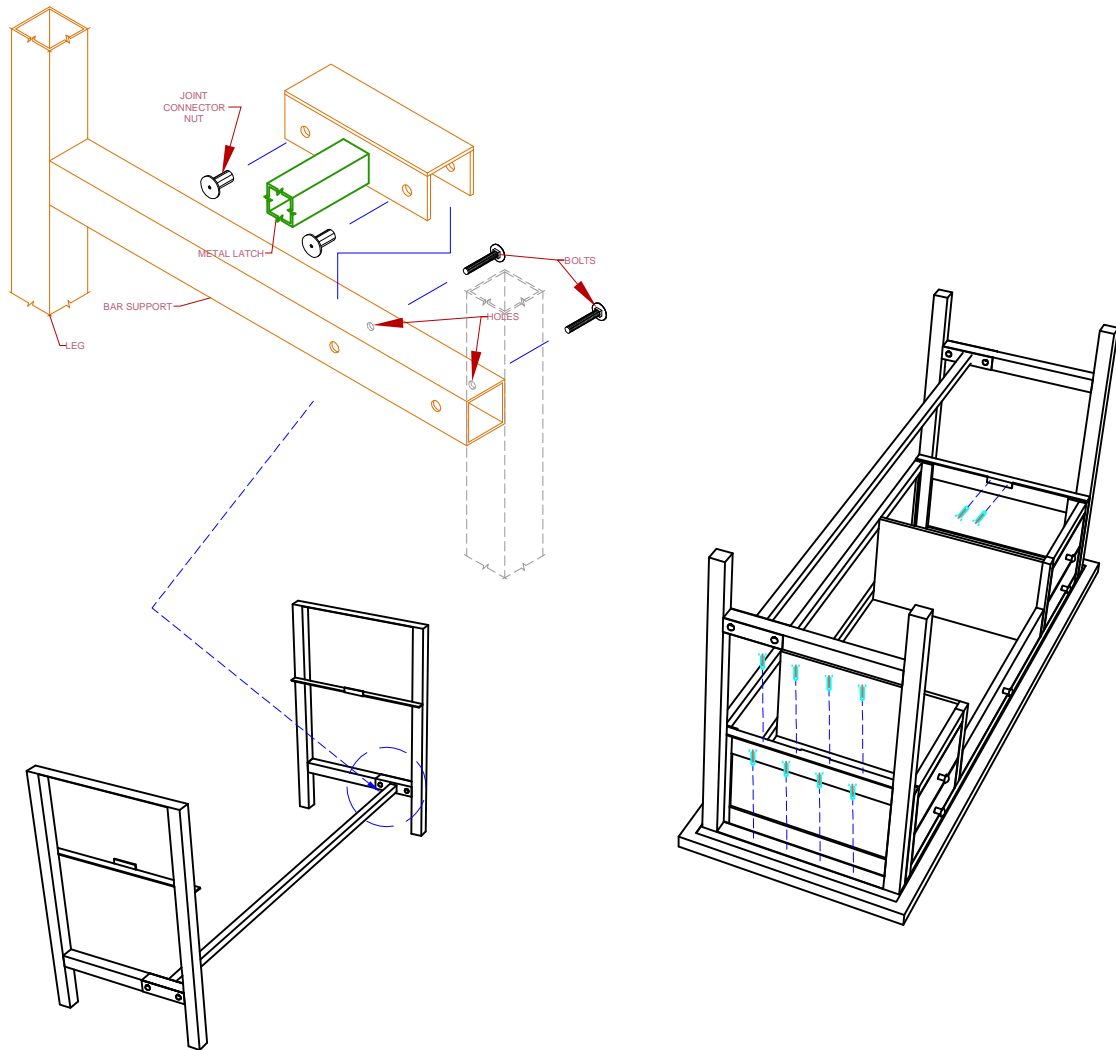

HARDWARE AND ARMED

ITEM EPK	ITEM HRMQ	DESCRIPTION	# PZ
1PIJMA-001	PIJ-MAD-0002	DRYWALL SCREW 6 X $\frac{3}{4}$ "	20
1TUEPU-0001	TUE-PER-0001	JOINT CONNECTOR NUT $\frac{1}{4}$ "	4
1TORUN-0003	TOR-COC-0003	CARRIAGE BOLTS $\frac{1}{4}$ " X 1 $\frac{1}{2}$ "	4

INSTRUCTIONS:

- 1.- USE A FLAT AND CLEAN SURFACE FOR ASSEMBLY.
- 2.- ASSEMBLE THE TRESTLE POST AND INSERT THE BOLTS THROUGH EACH LEG, BUT BE CAREFUL NOT TO SCREW THEM IN TIGHTLY JUST YET.
- 3.- FOR EASY ASSEMBLY, TURN THE DESK UPSIDE DOWN, CENTER THE LEGS AND FIX THEM WITH SCREWS AS SEEN IN THE DIAGRAM.
- 4.- ONCE THE LEGS ARE FIXED, TIGHTEN THE TRESTLE BOLTS.
- 5.- WITH HELP, TURN THE DESK TO ITS UPRIGHT POSITION