


ASSEMBLY INSTRUCTIONS

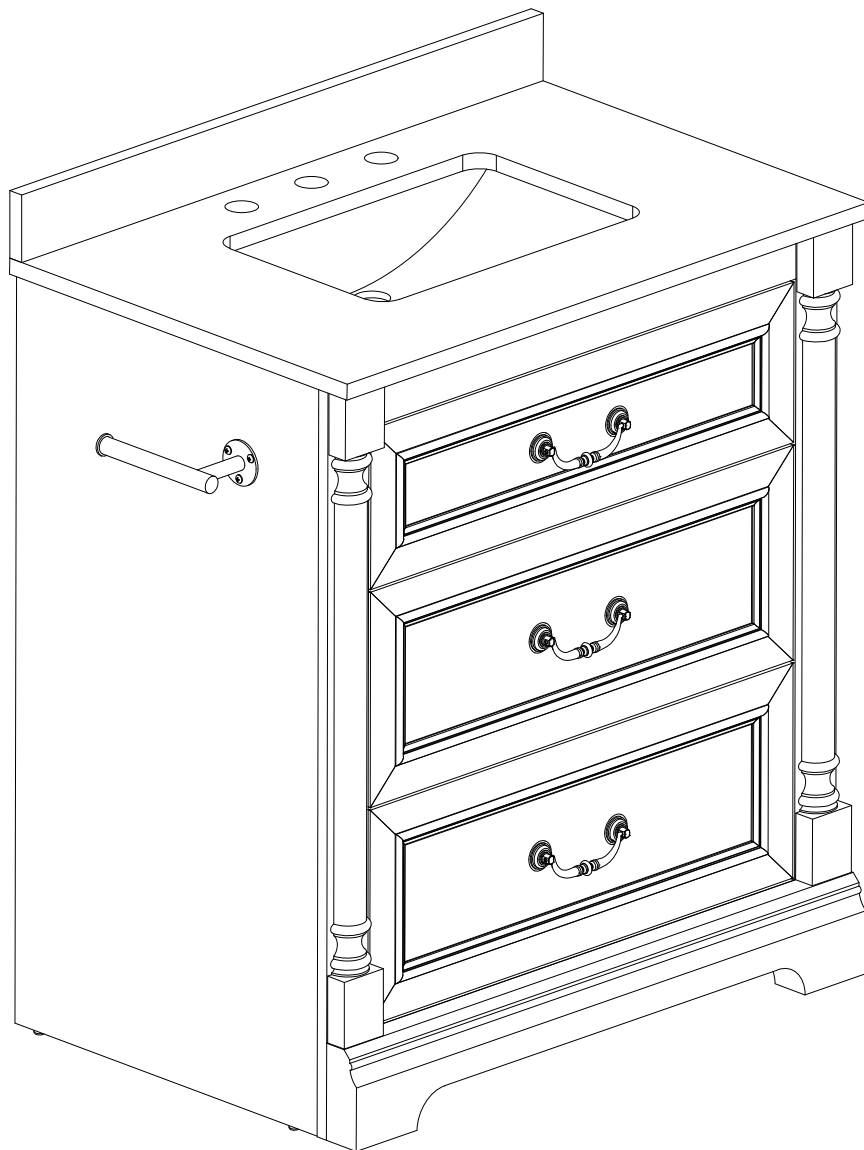



WARNING !

MAXIMUM LOAD
220 lb/ 100kg




Estimated Time for Assembly


60 mins

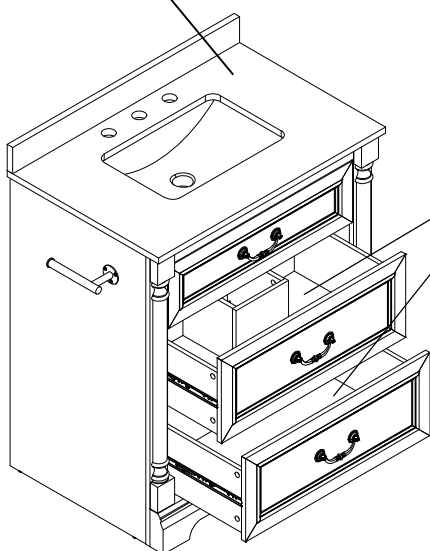

MAXIMUM LOAD
20 lb/ 9.1kg

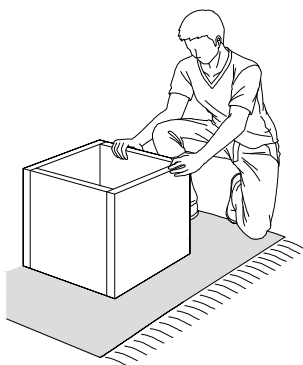

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

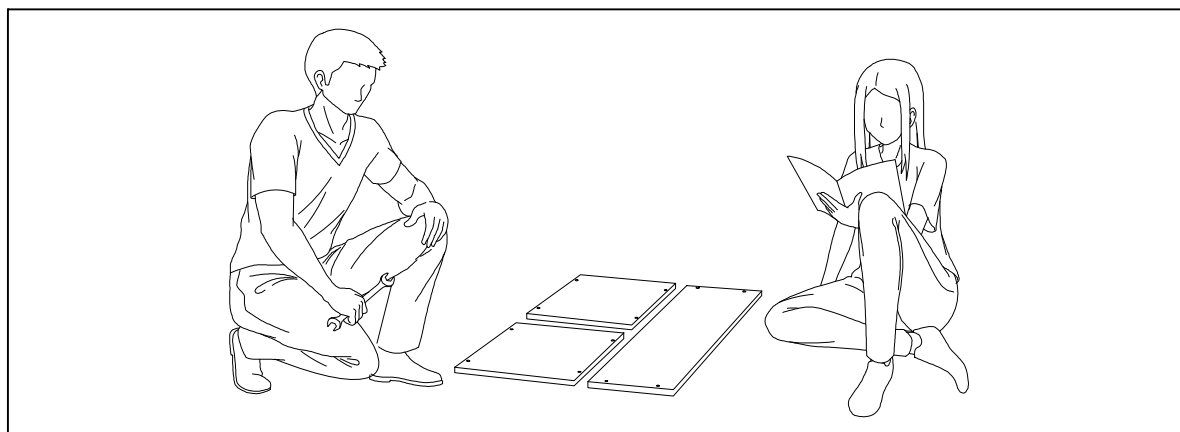


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

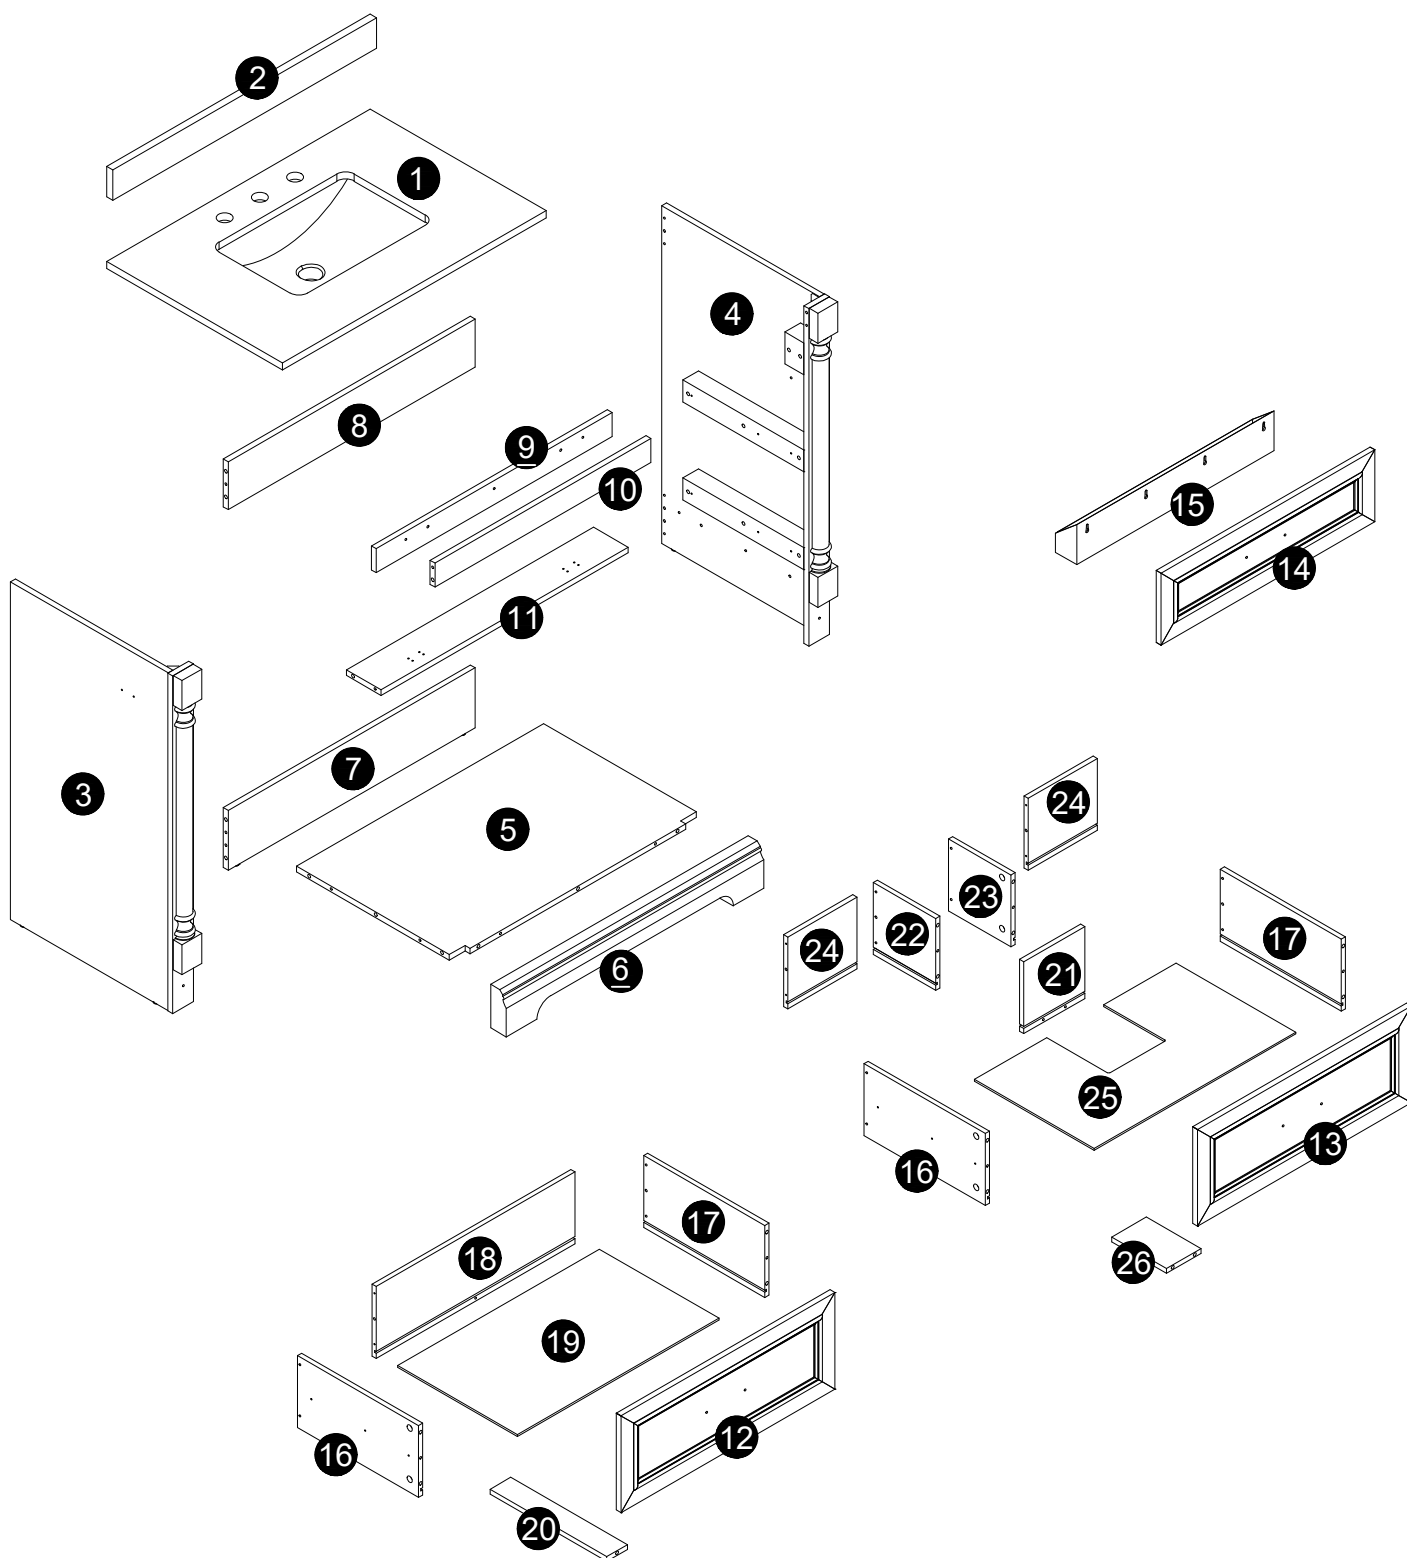


BOARD IDENTIFICATION


Not actual size

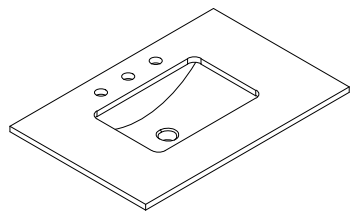


① x1

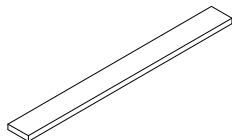


② x1

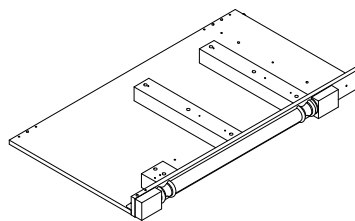


③ x1

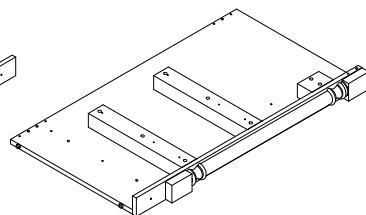


④ x1

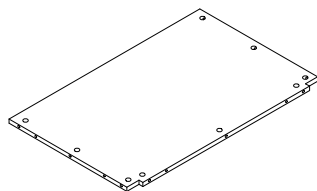


⑤ x1

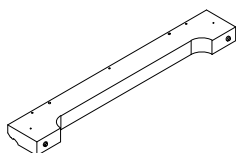


⑥ x1

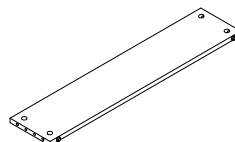


⑦ x1

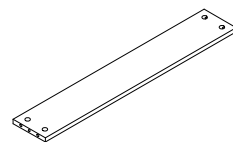


⑧ x1

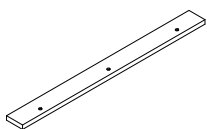


⑨ x1




⑩ x1

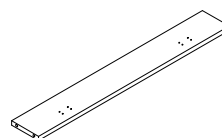


⑪ x1

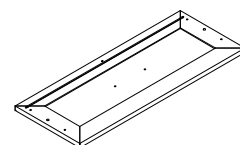


⑫ x1

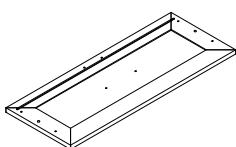


⑬ x1

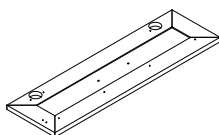

⑭ x1

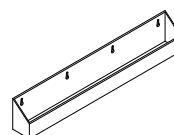


⑮ x1




⑯ x2

BOARD IDENTIFICATION


Not actual size




①⑦ x2

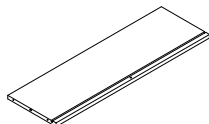


①⑧ x1

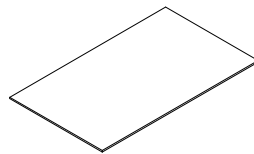


①⑨ x1




②① x1

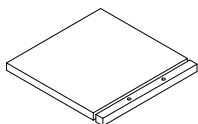


②② x1

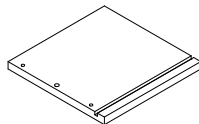


②③ x1

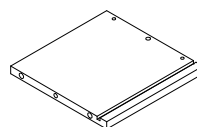


②④ x1

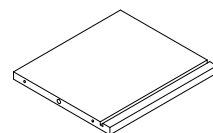

②⑤ x2












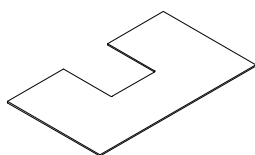


②⑥ x1




②⑦ x1

HARDWARE LIST

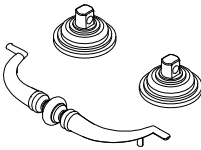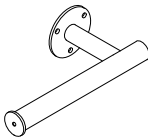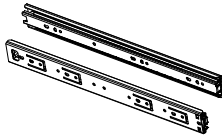			
A	B	C	D
x36+3	x36+3	x28+2	x2
			
E	F	G	H
x5	x12+1	x2	x4
			
I	J	K	L
x1	x3	x6	x1
			
M	N	O	P
x31+3	x2set	x15+1	x2
			
Q	R		
x2	x1		

Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

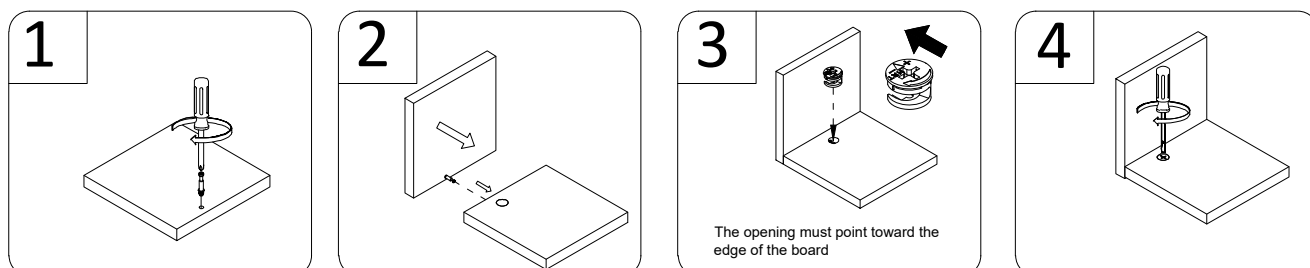


STEP 1

INSTALLATION STEPS




Press the plastic part in the indicated direction to separate drawer runner **N1** and **N2** before assembling.

REMARK:


Please grip the **N1** part while sliding the **N2** part.

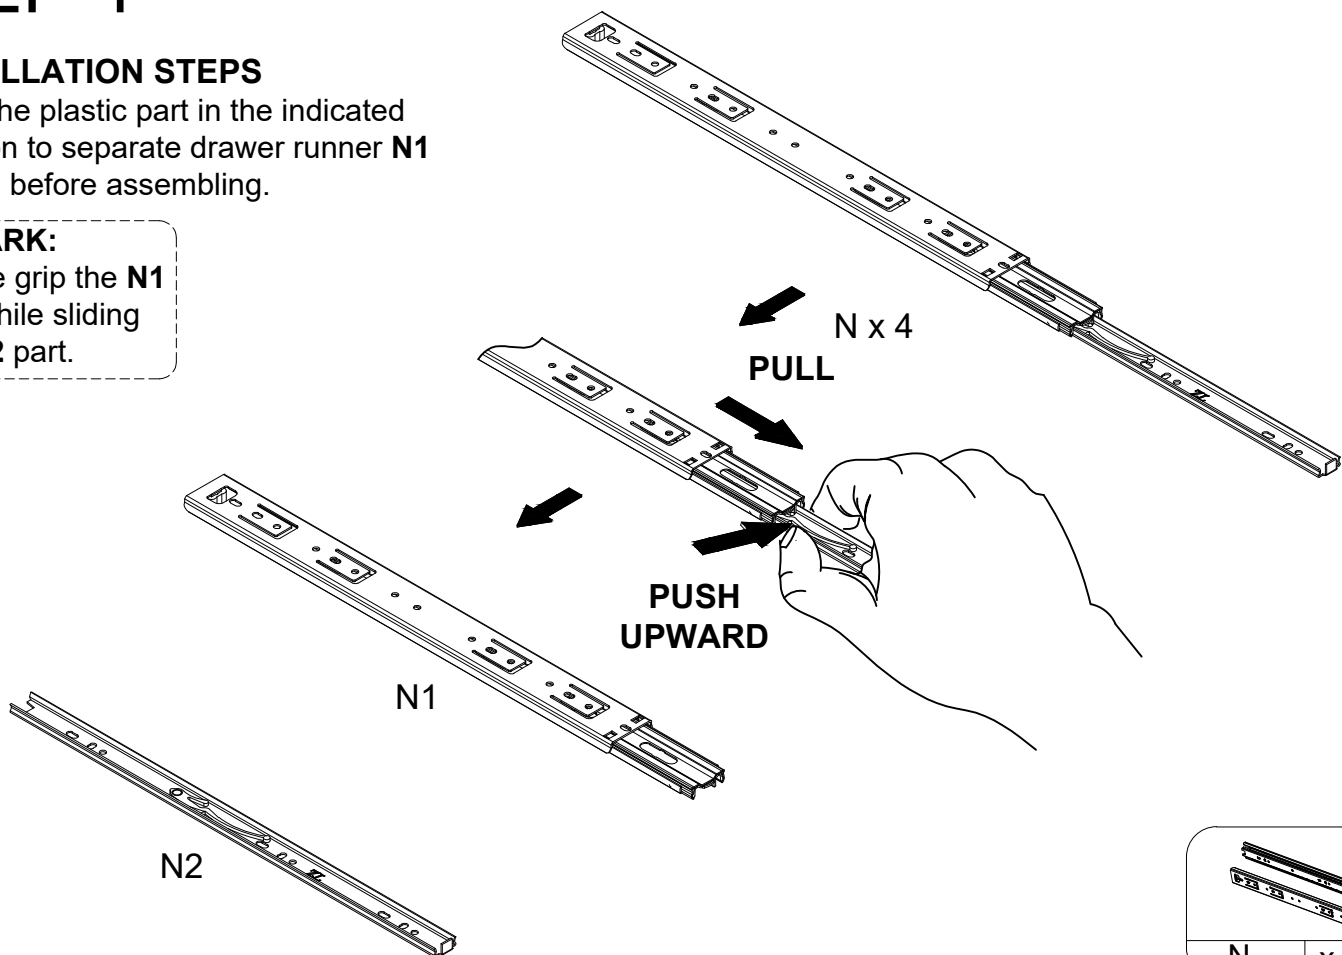


STEP 2

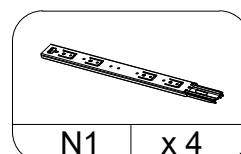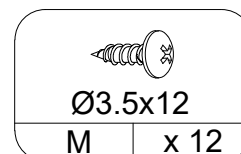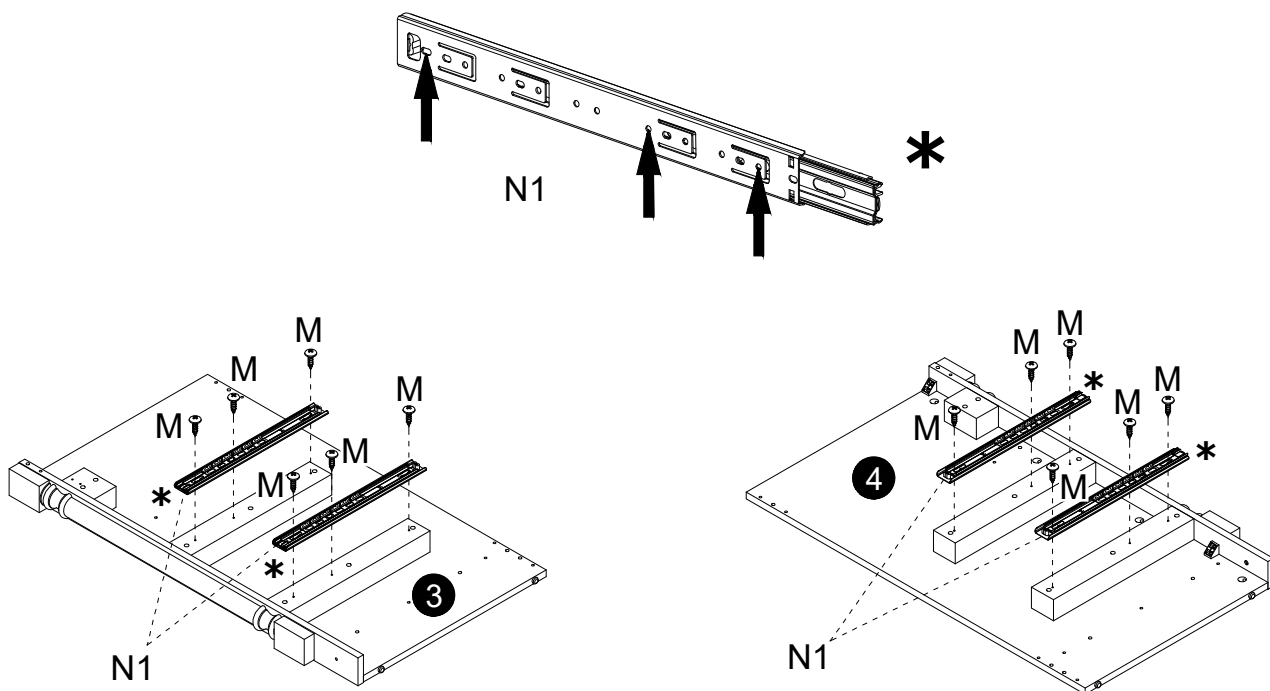






STEP 3

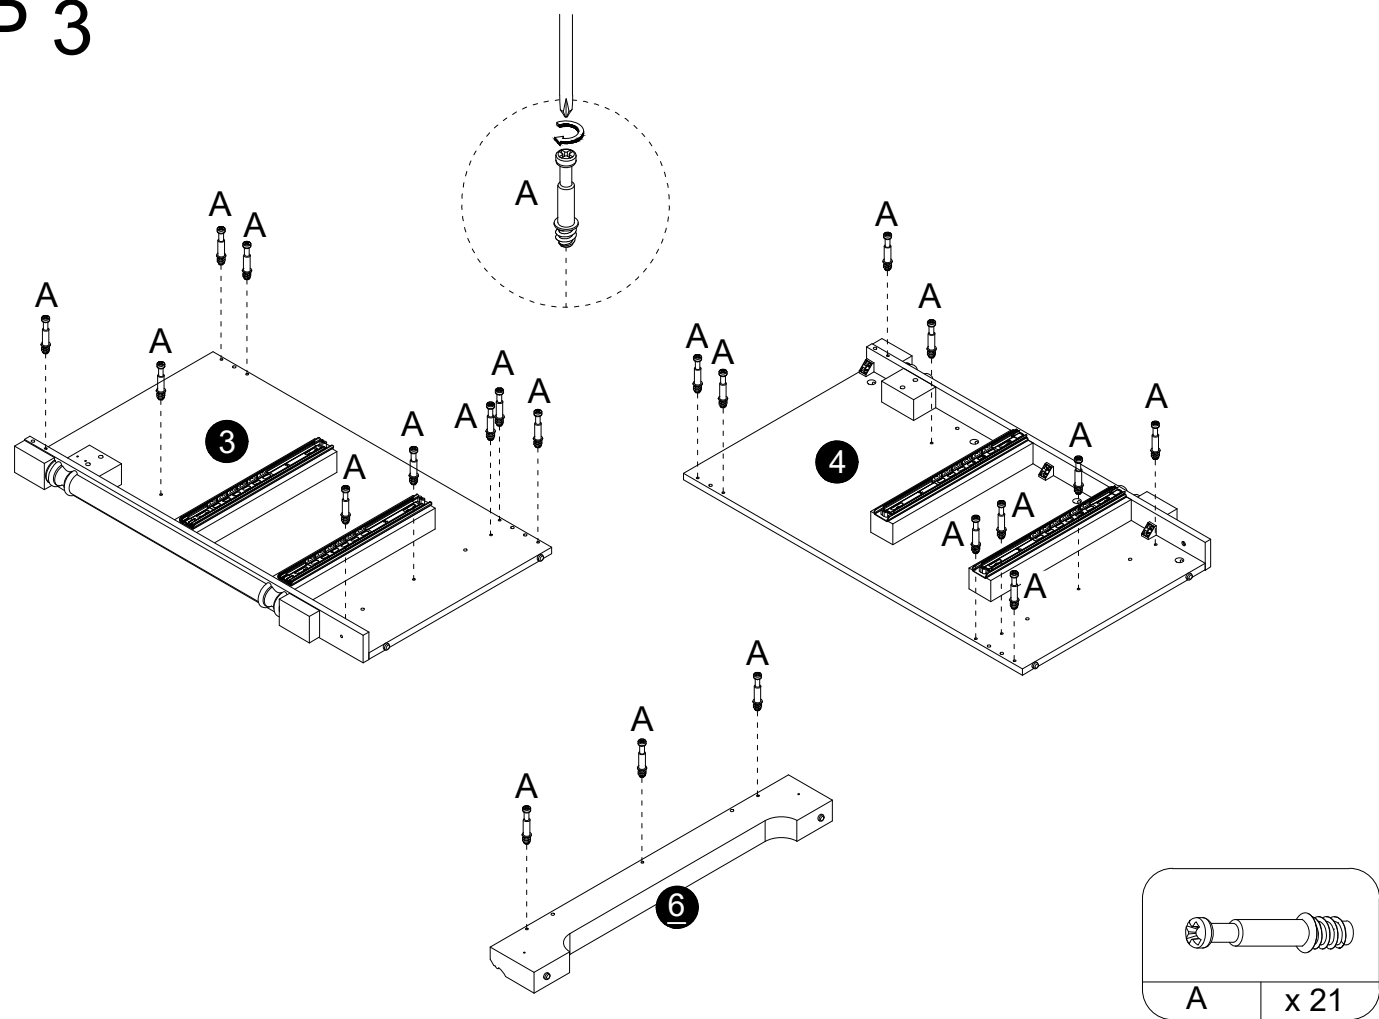






STEP 4

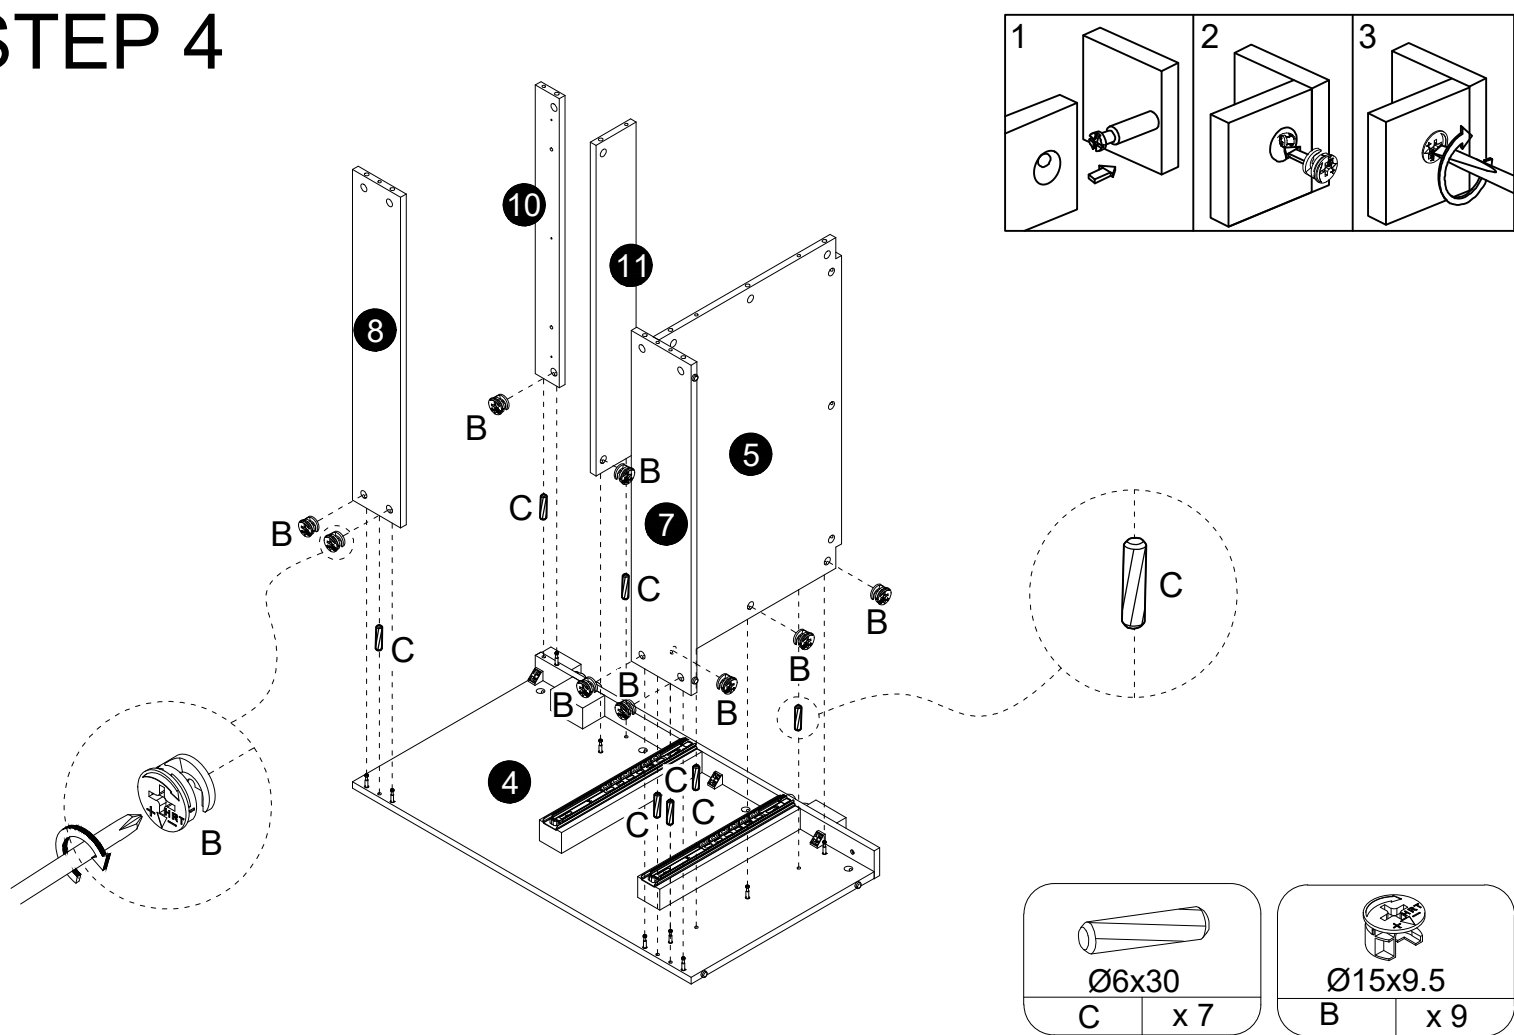


STEP 5

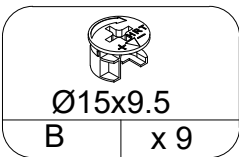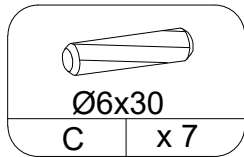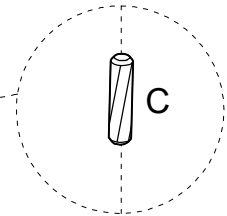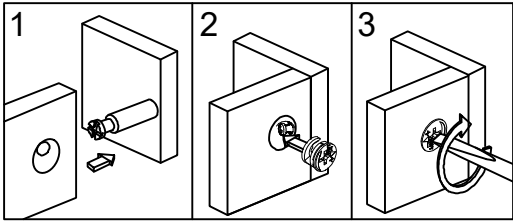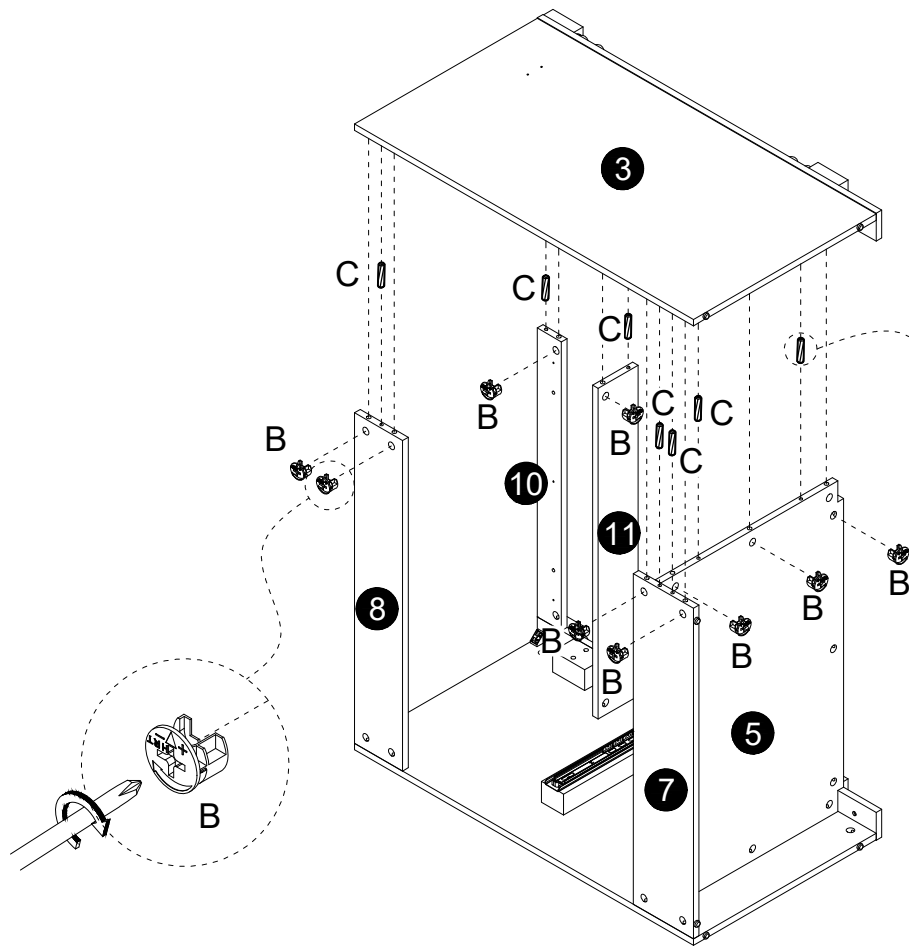


STEP 6

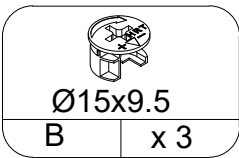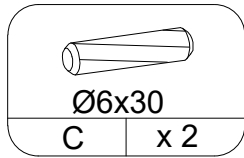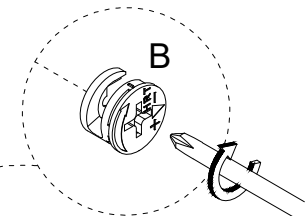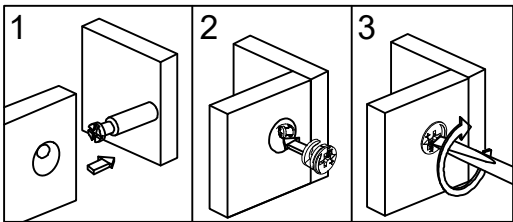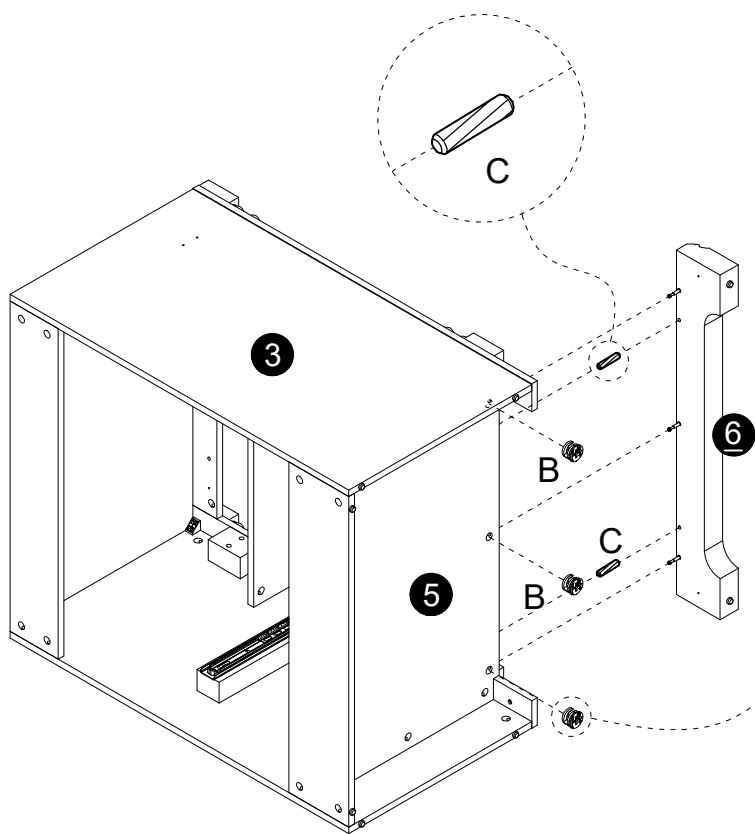


STEP 7

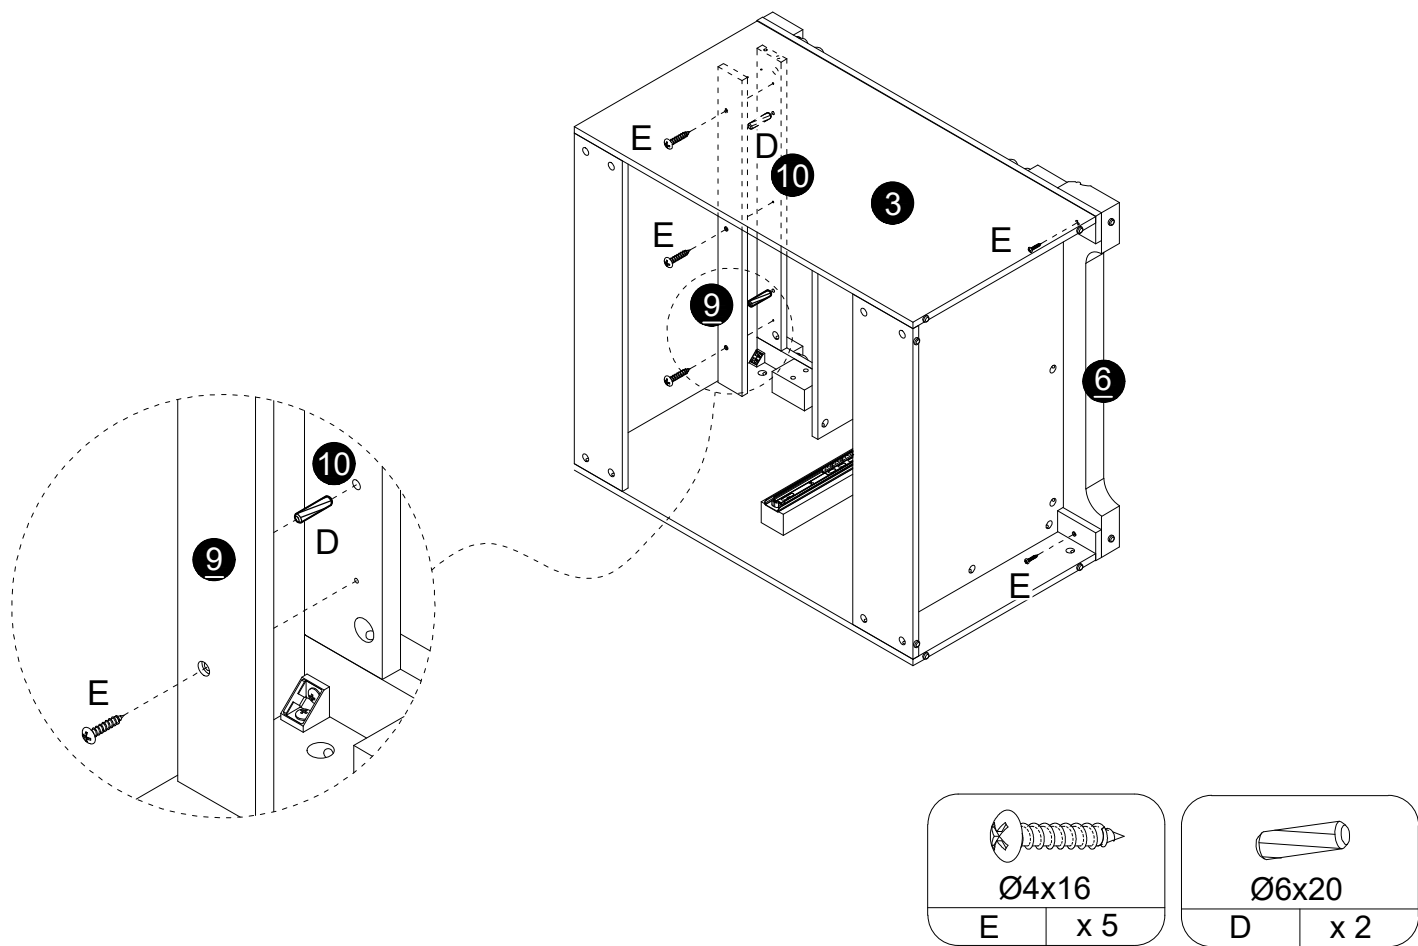


STEP 8

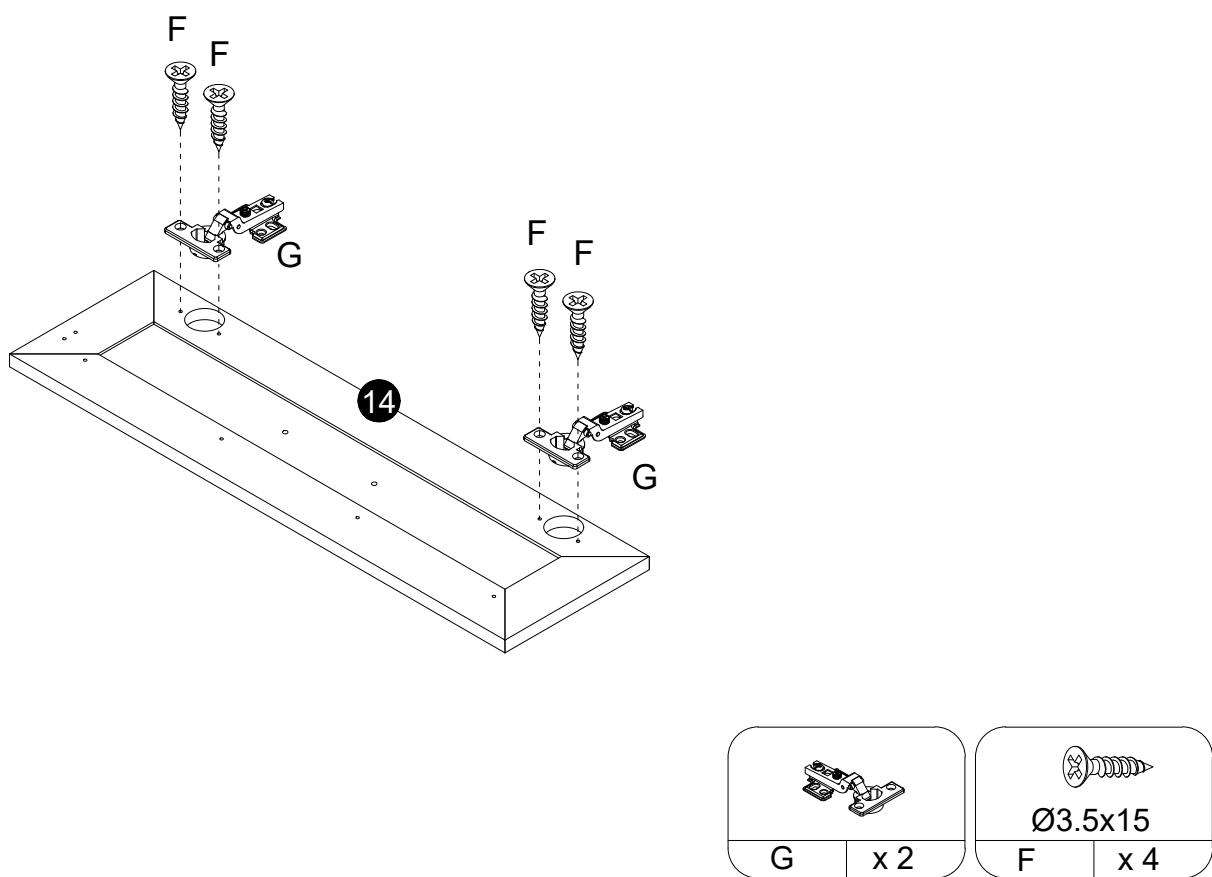


STEP 9

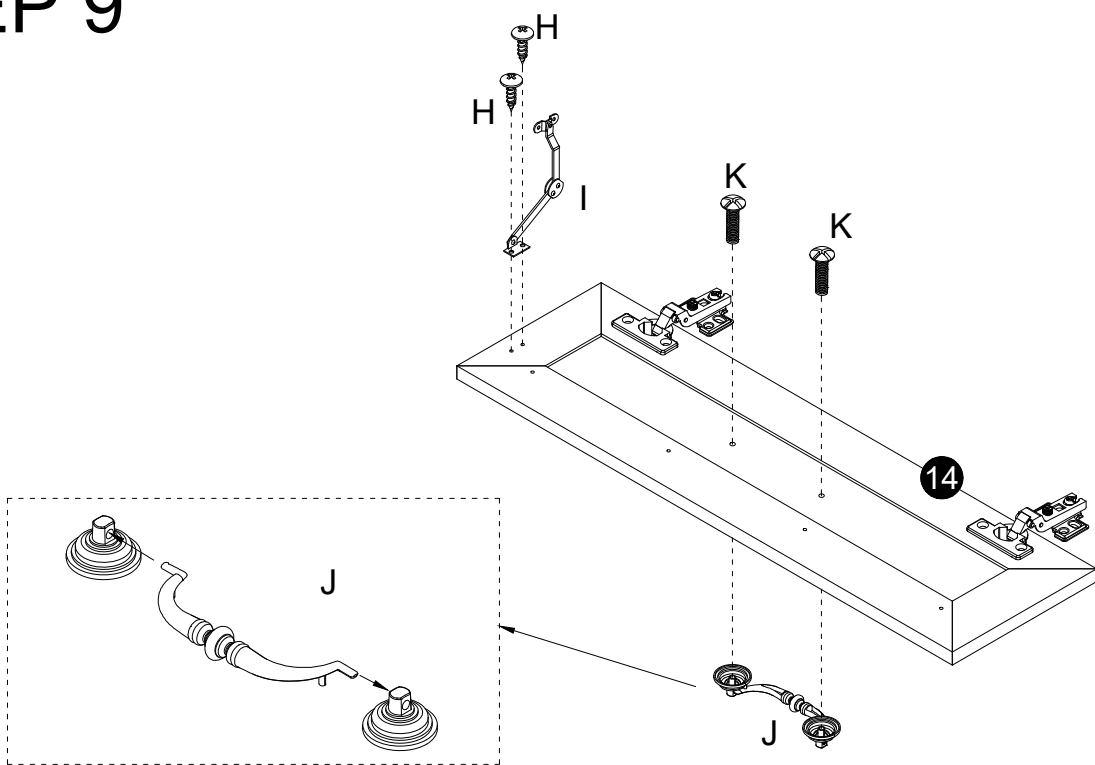


	
M4x12	
K	x 2

	
J	
J	x 1

	
I	
I	x 1



	
Ø3.5x12	
H	x 2

STEP 10


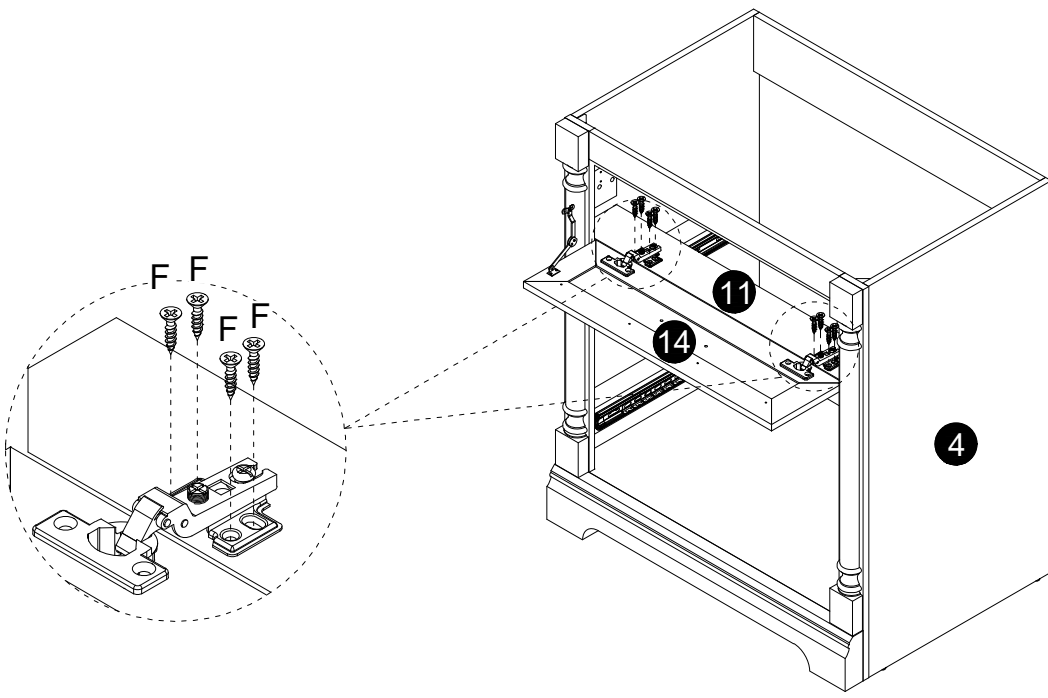


	
Ø3.5x15	
F	x 8




STEP 11

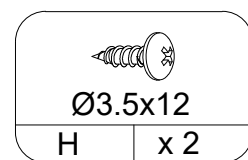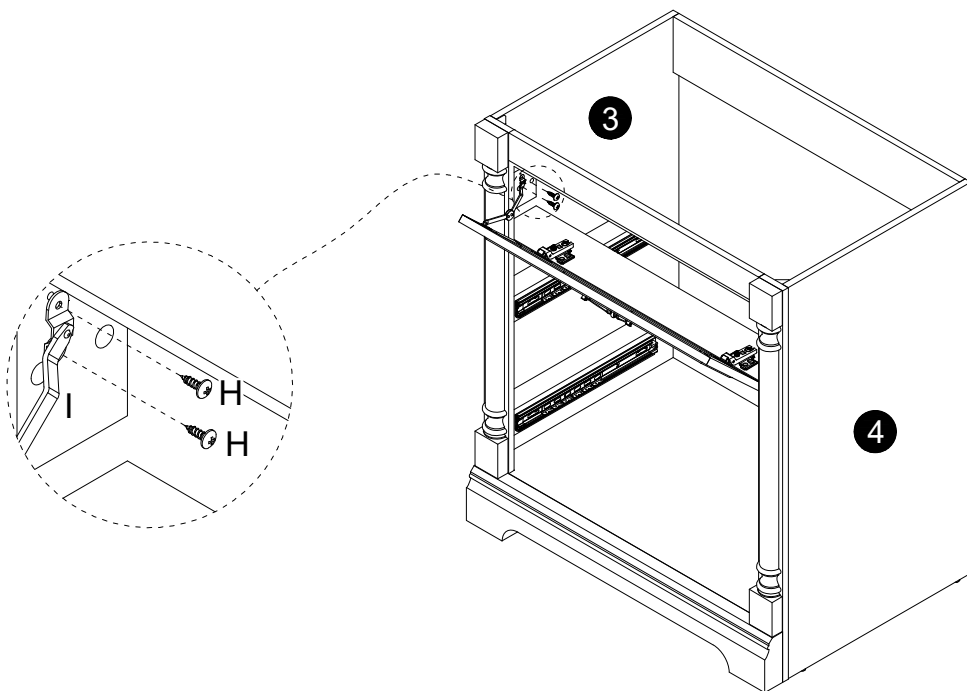




STEP 12

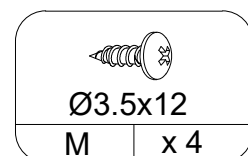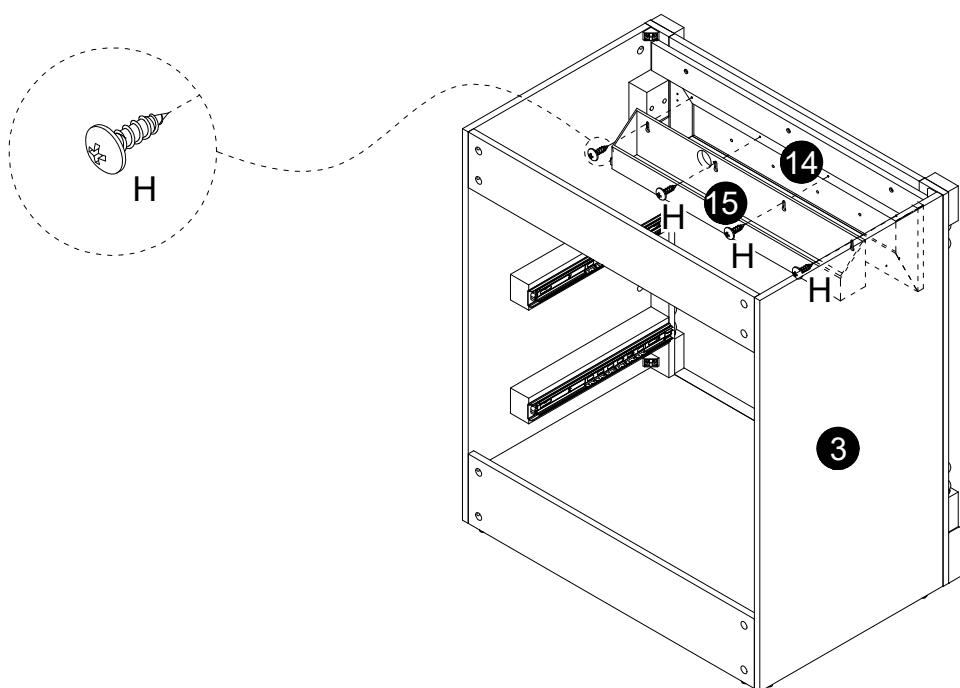


STEP 13

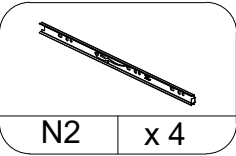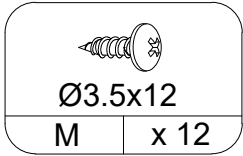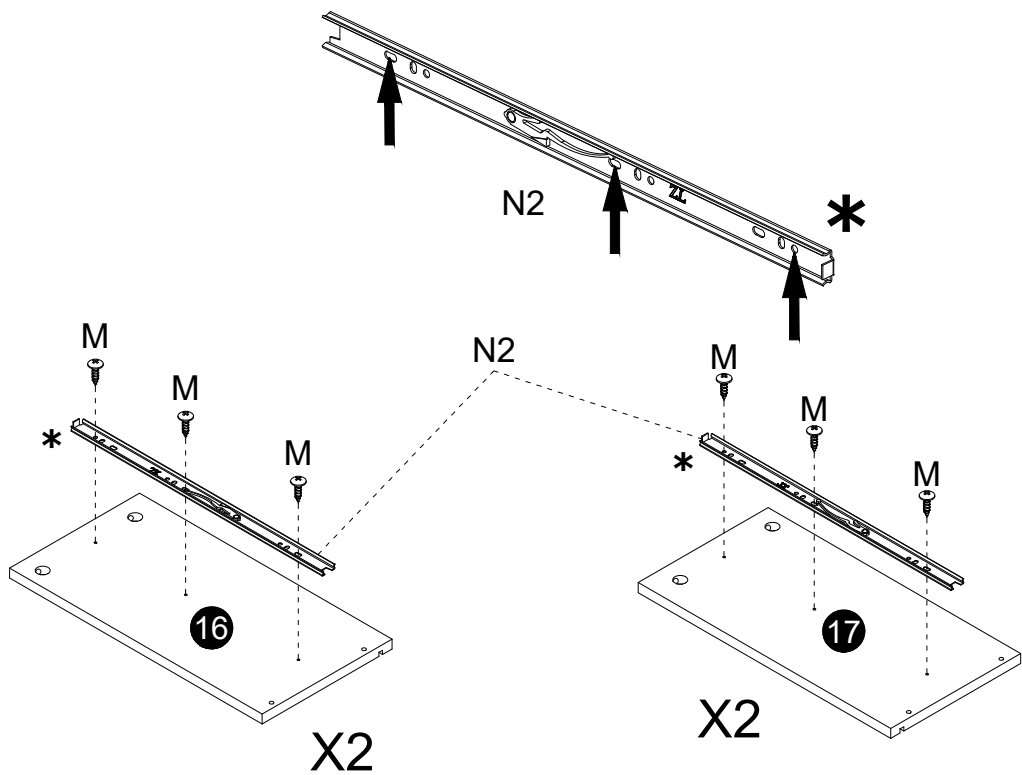



STEP 14

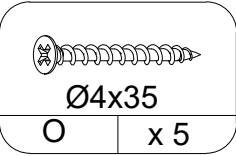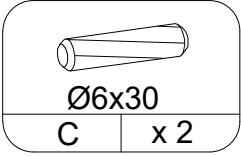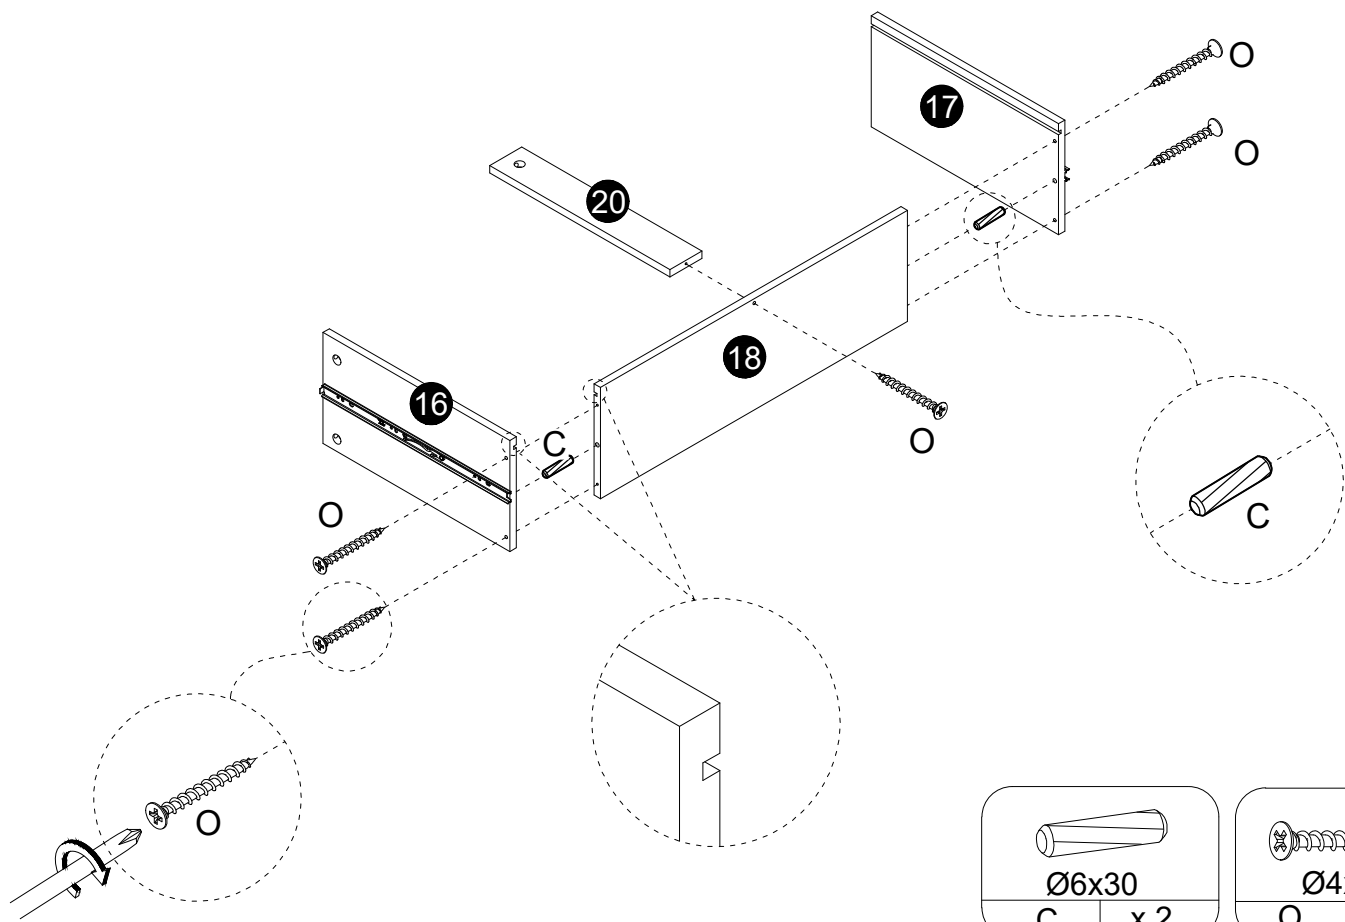

STEP 15

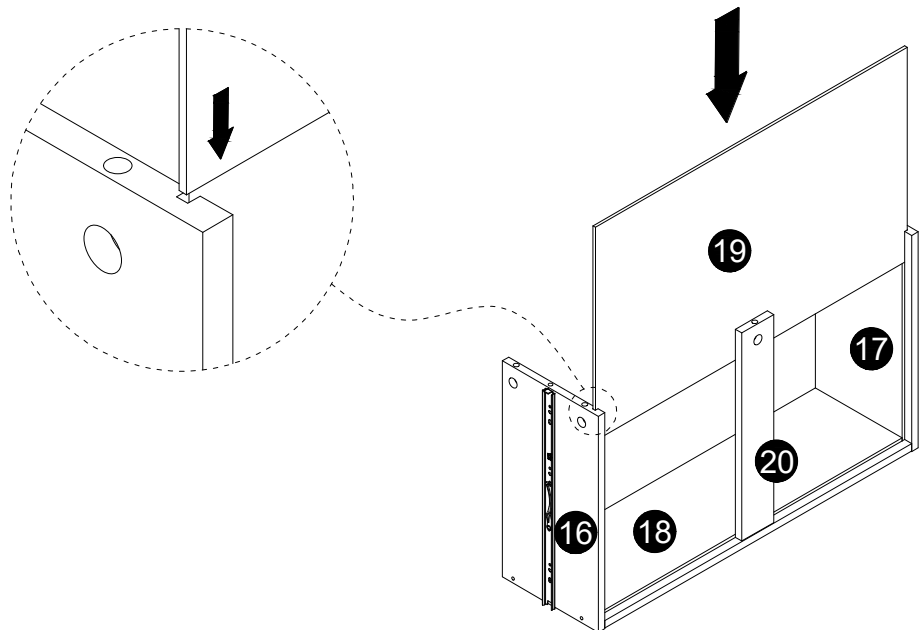


STEP 16

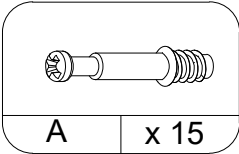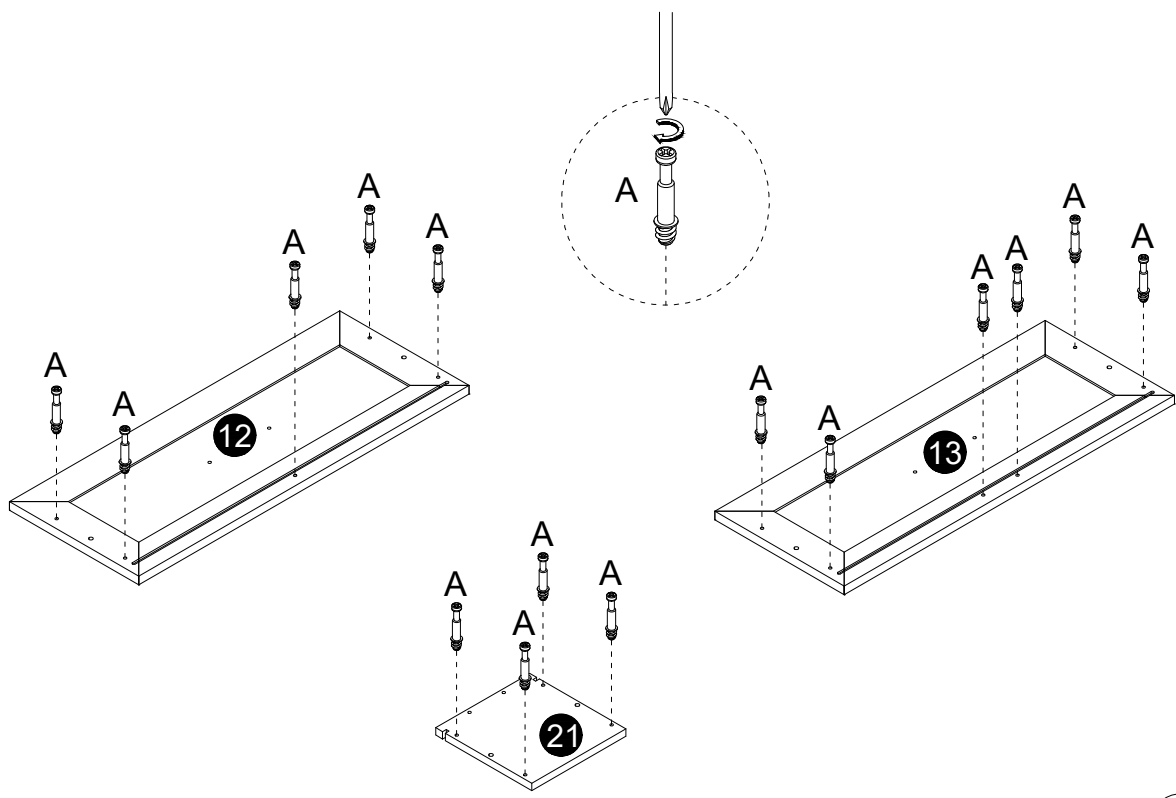


A x 15


STEP 17

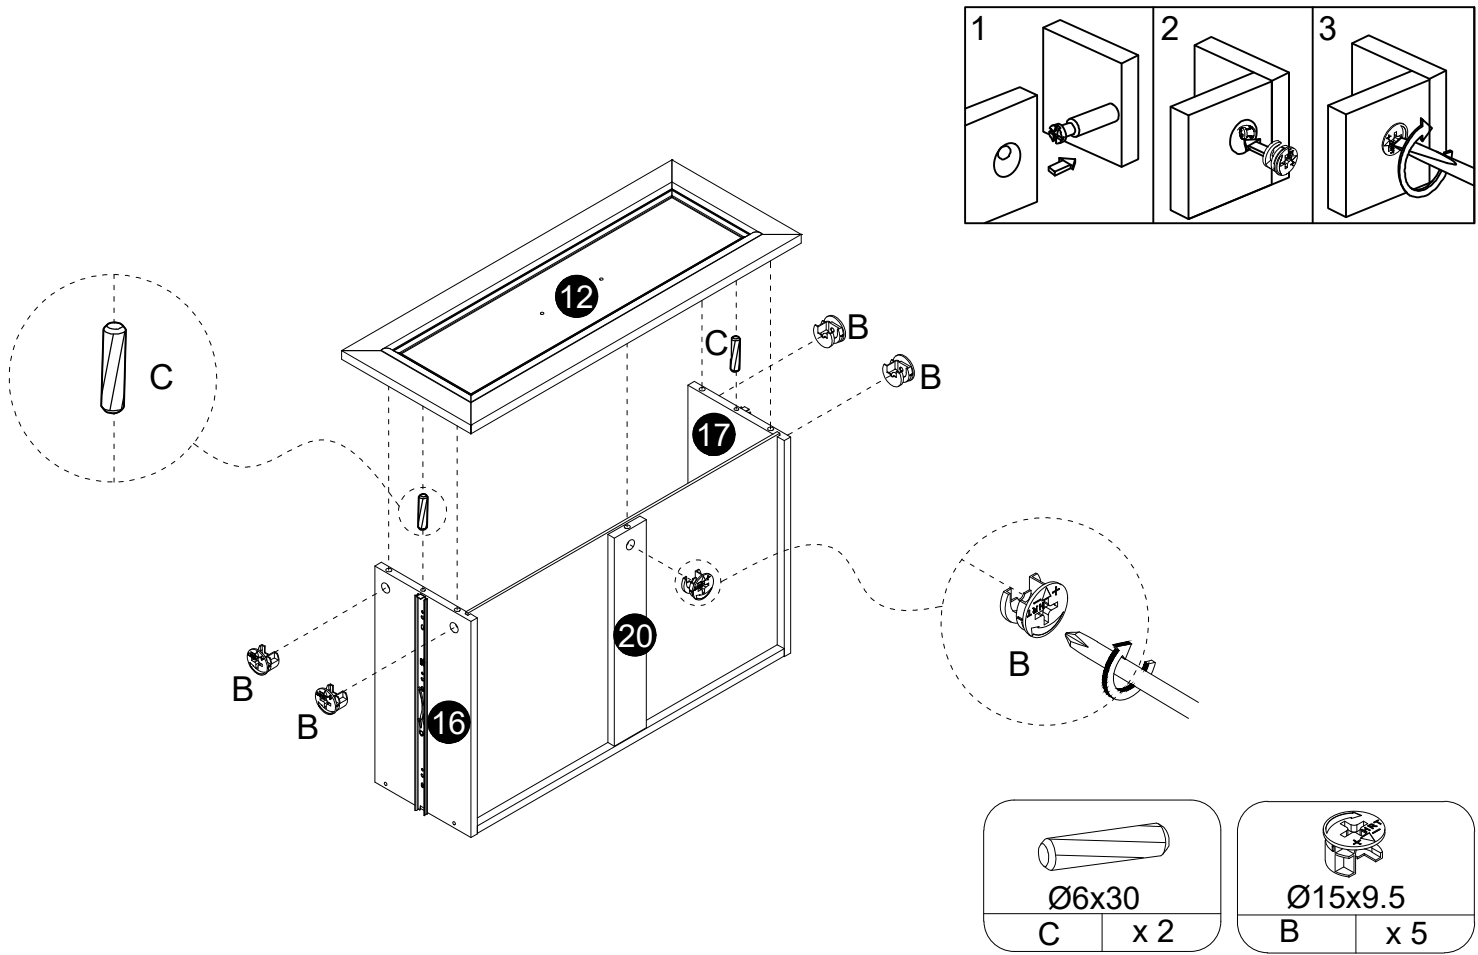


STEP 18

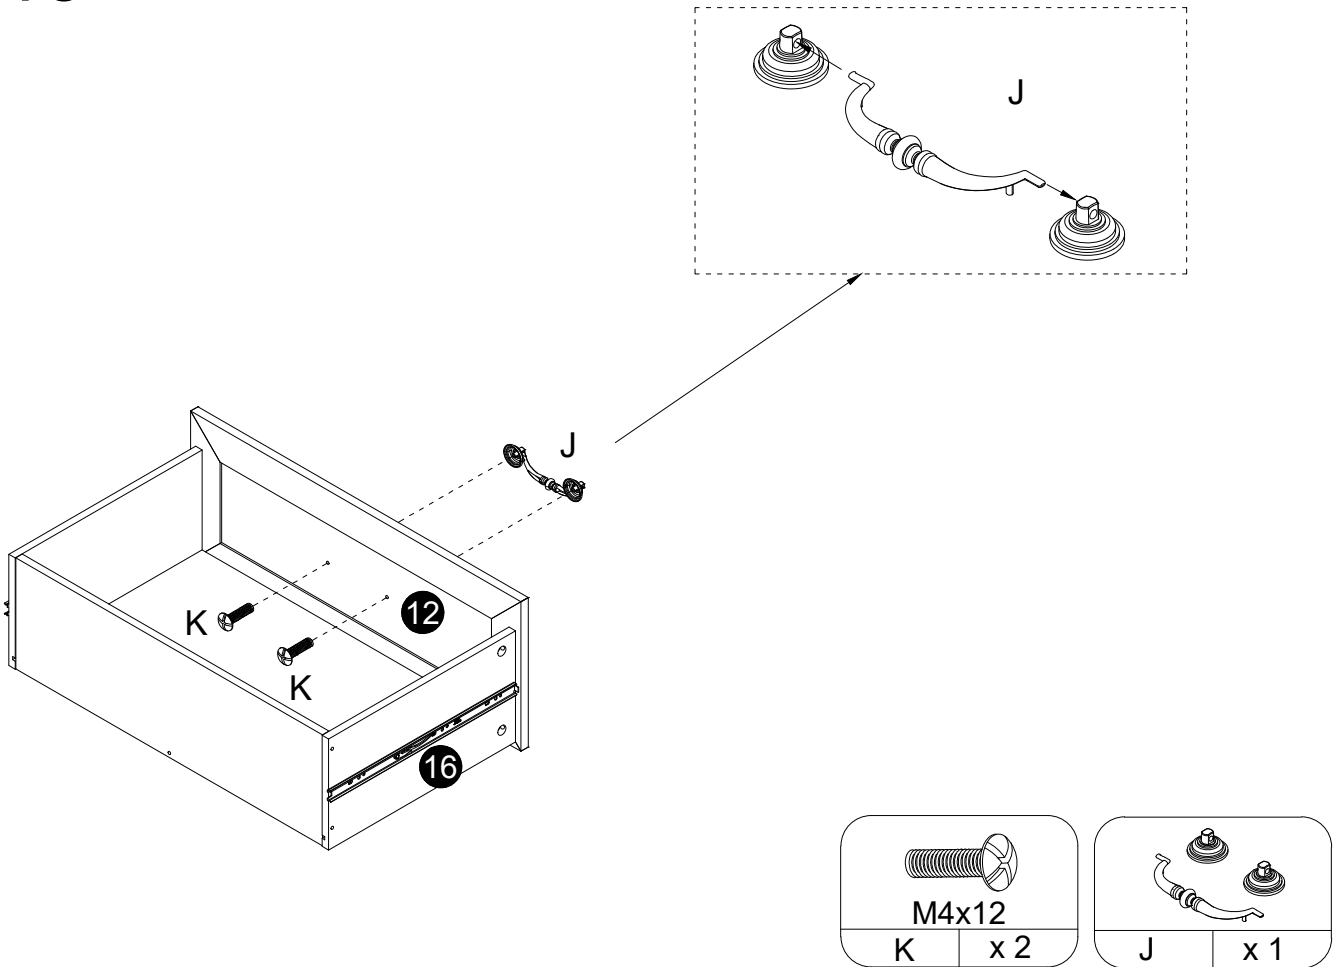


STEP 19

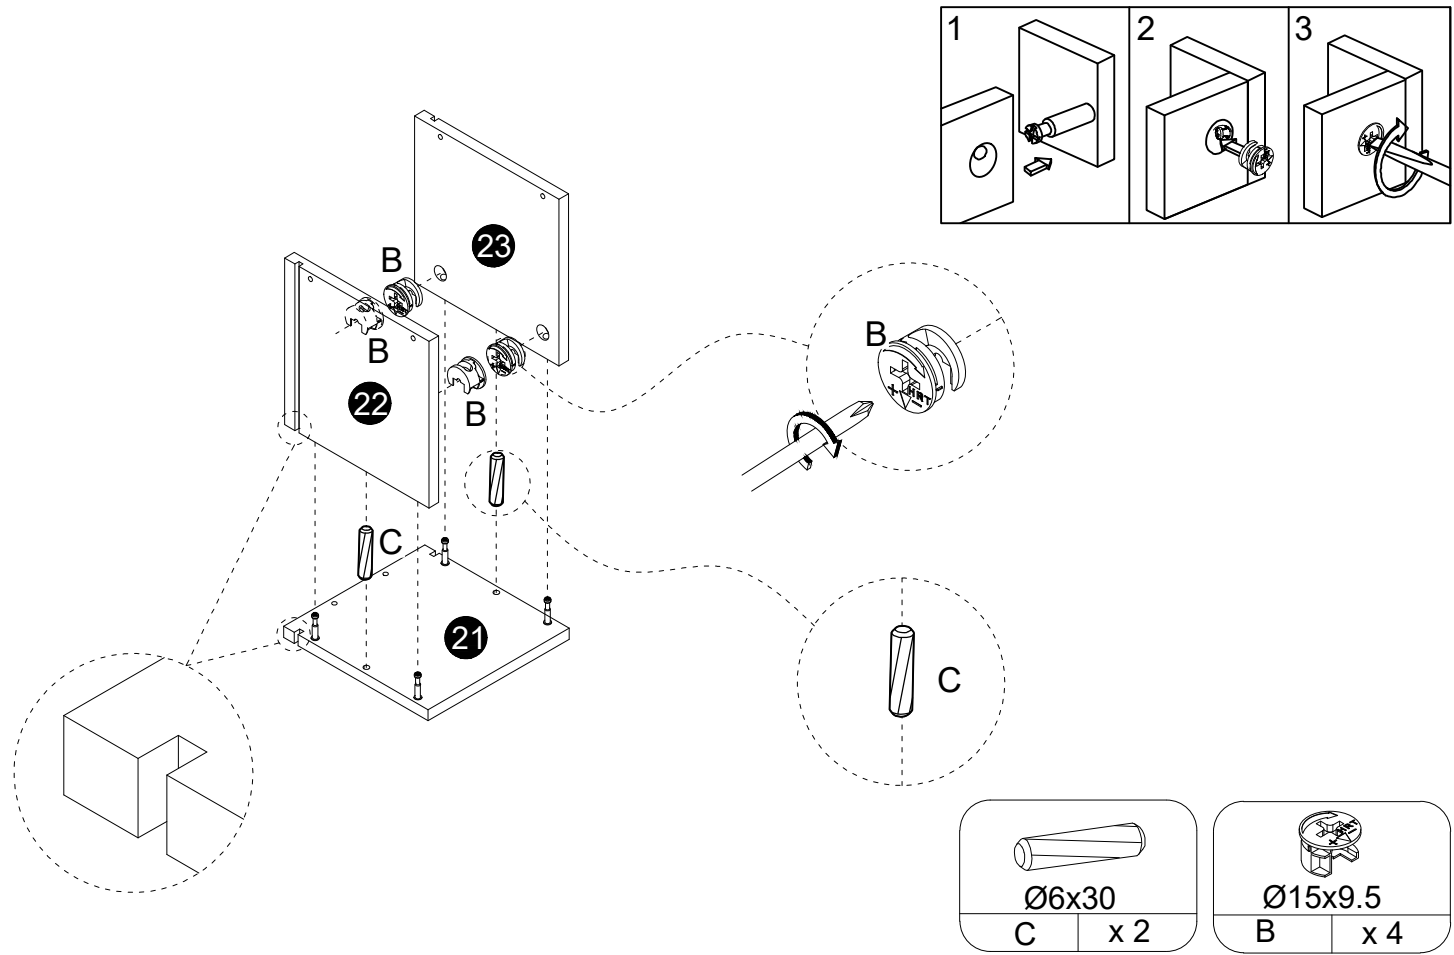


STEP 20

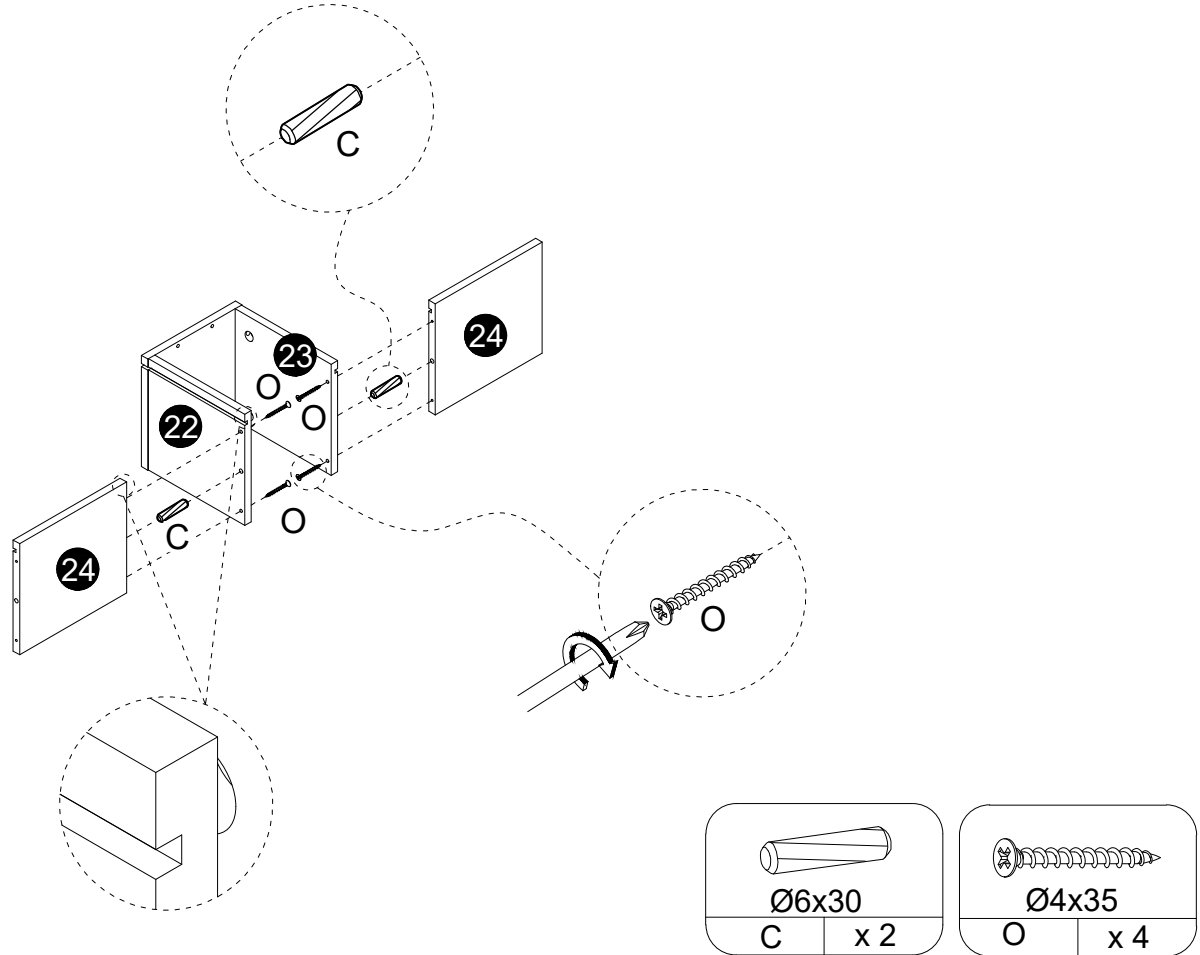


STEP 21

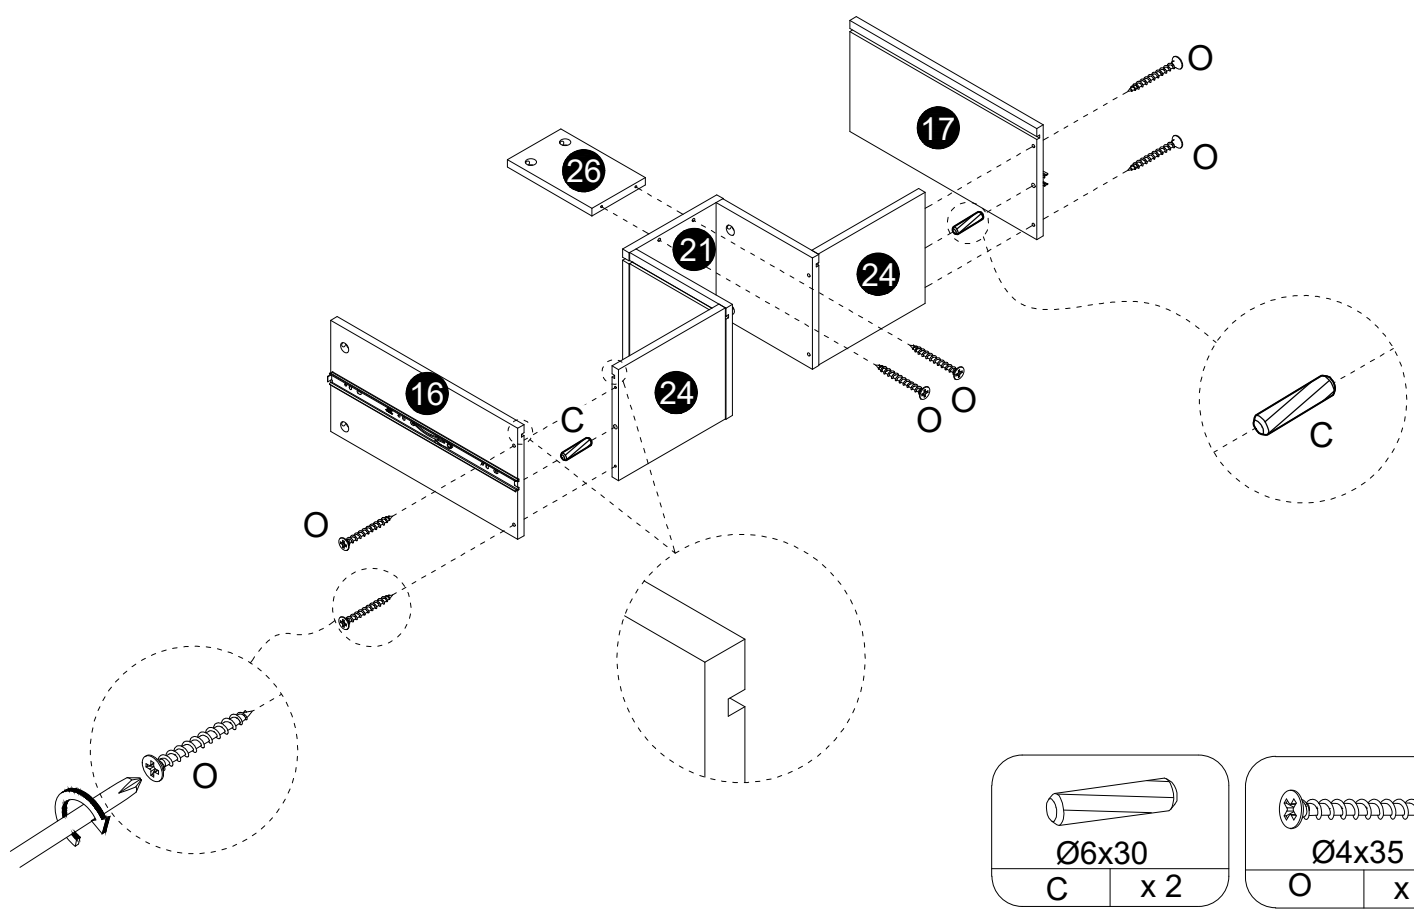


STEP 22

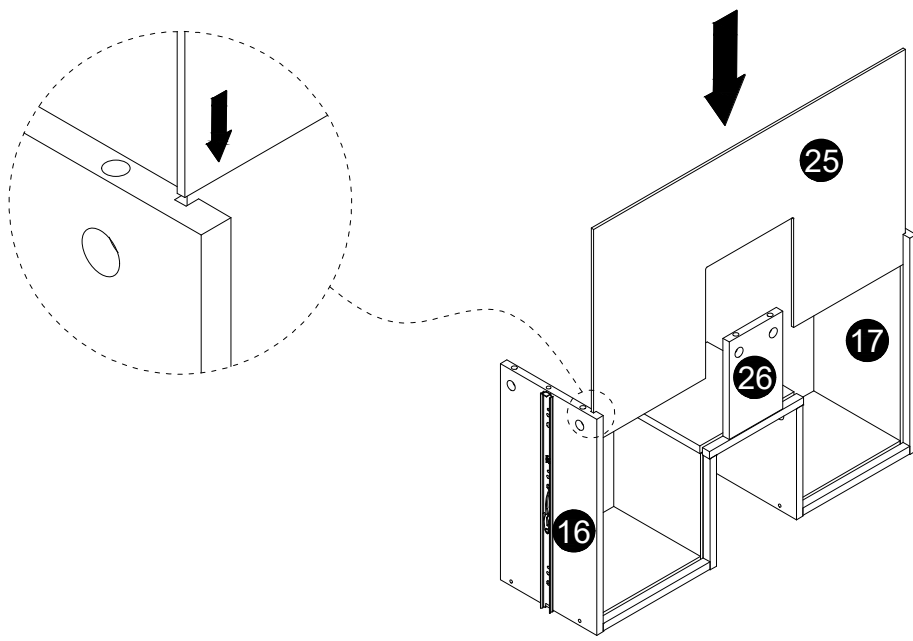




STEP 23

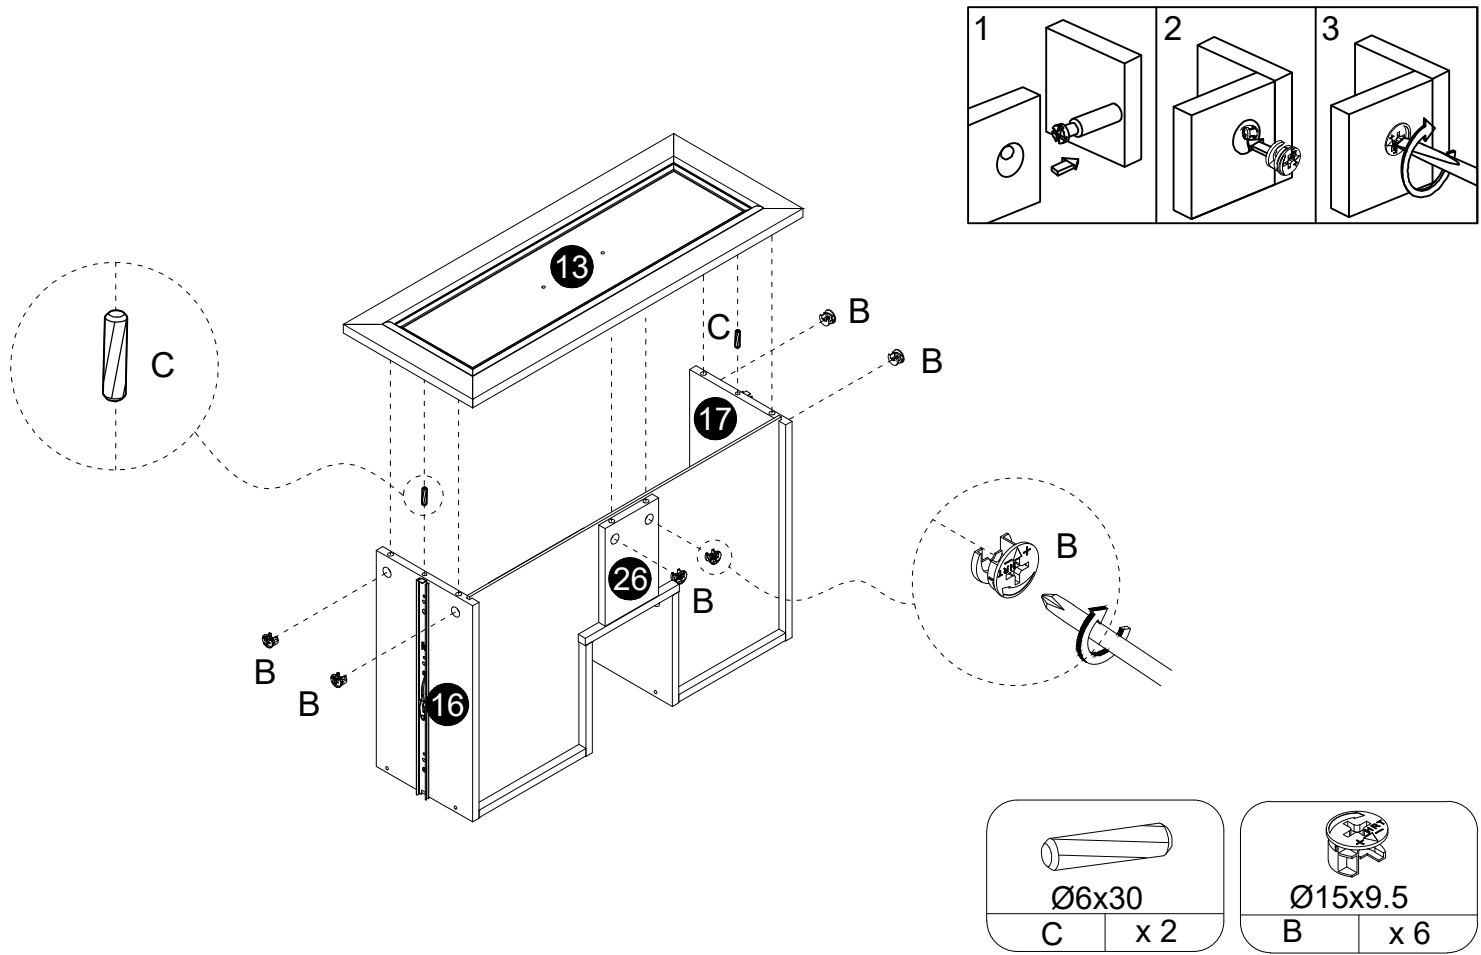


STEP 24

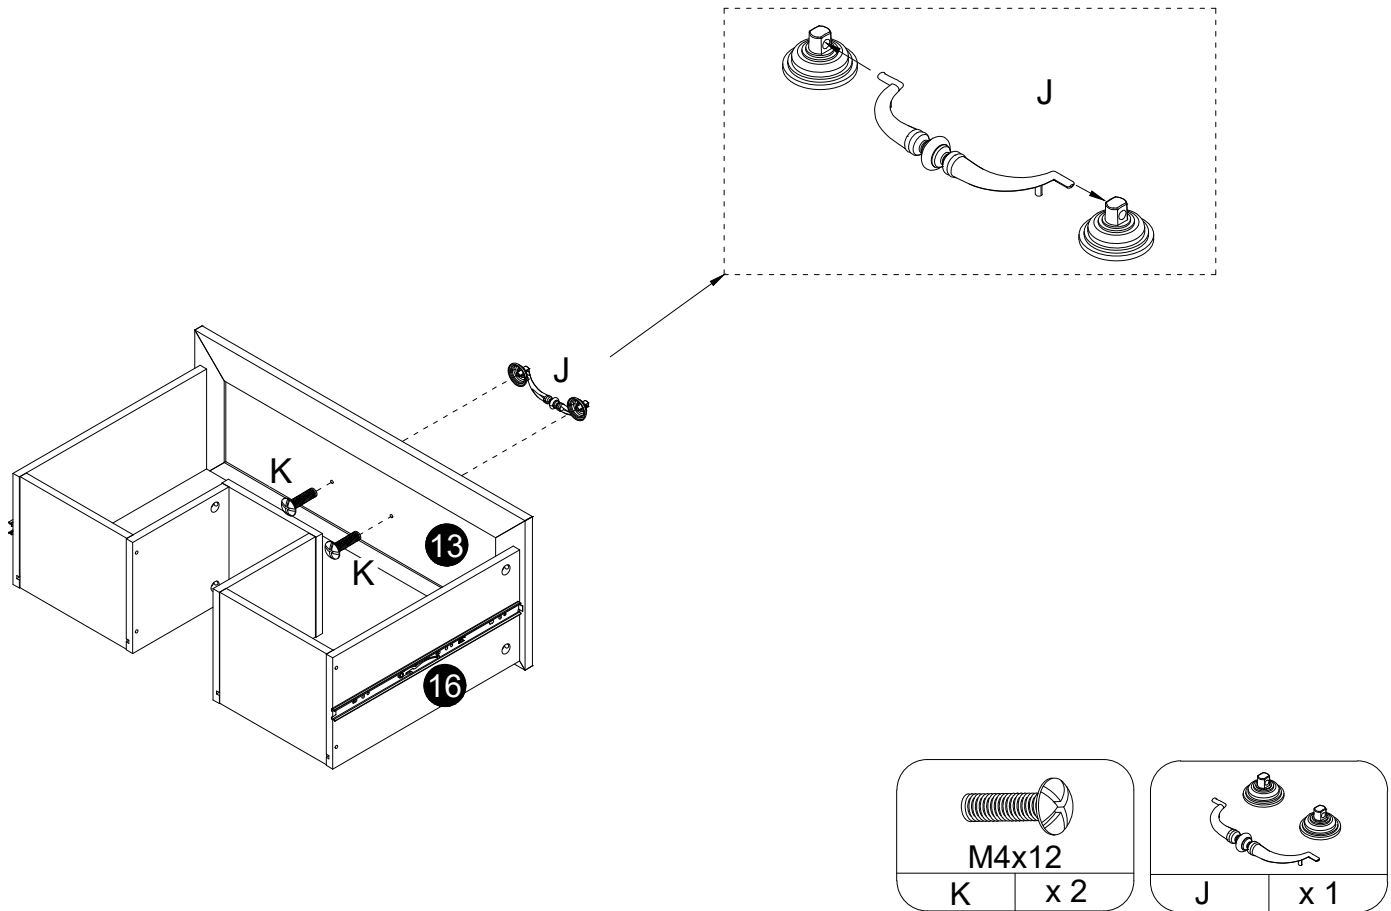


STEP 25

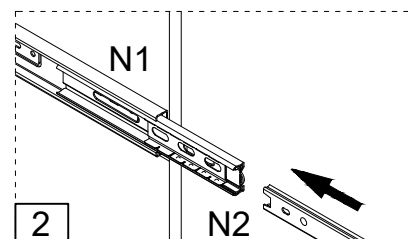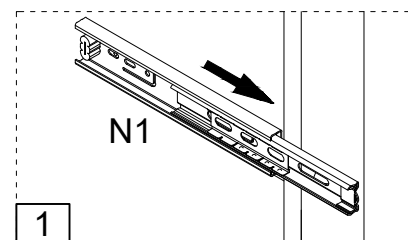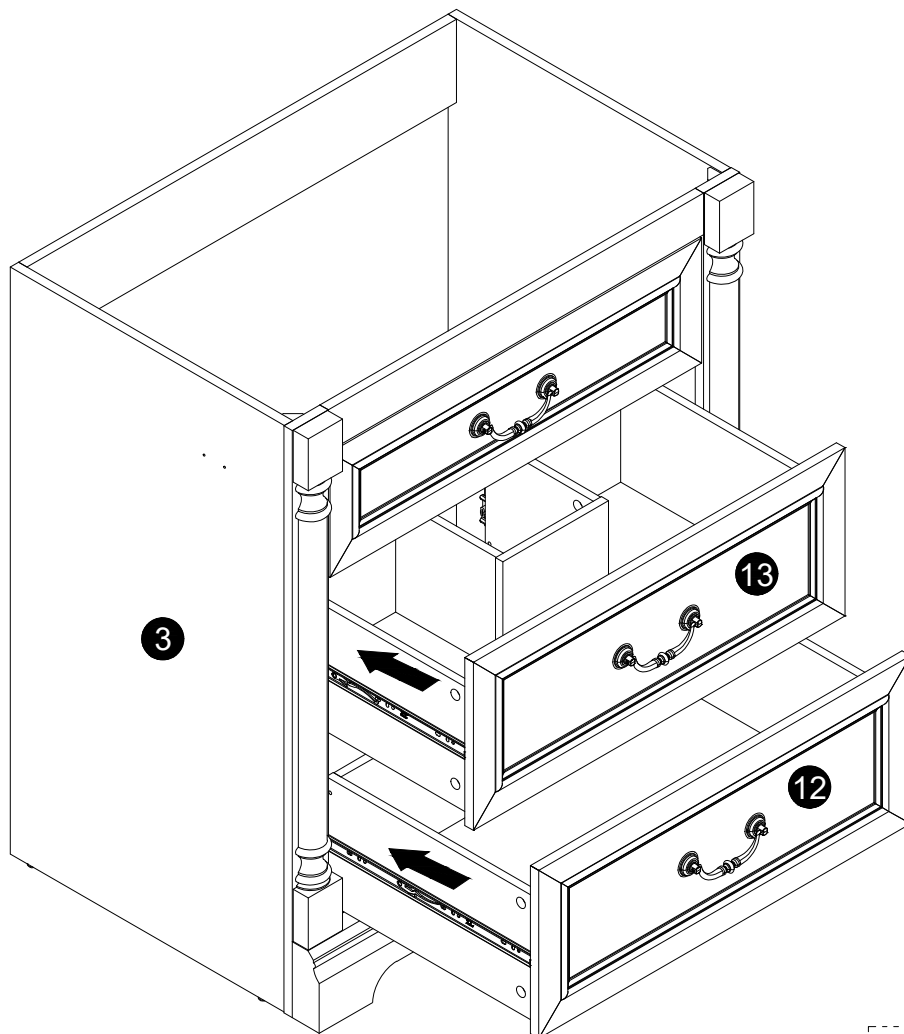


STEP 26

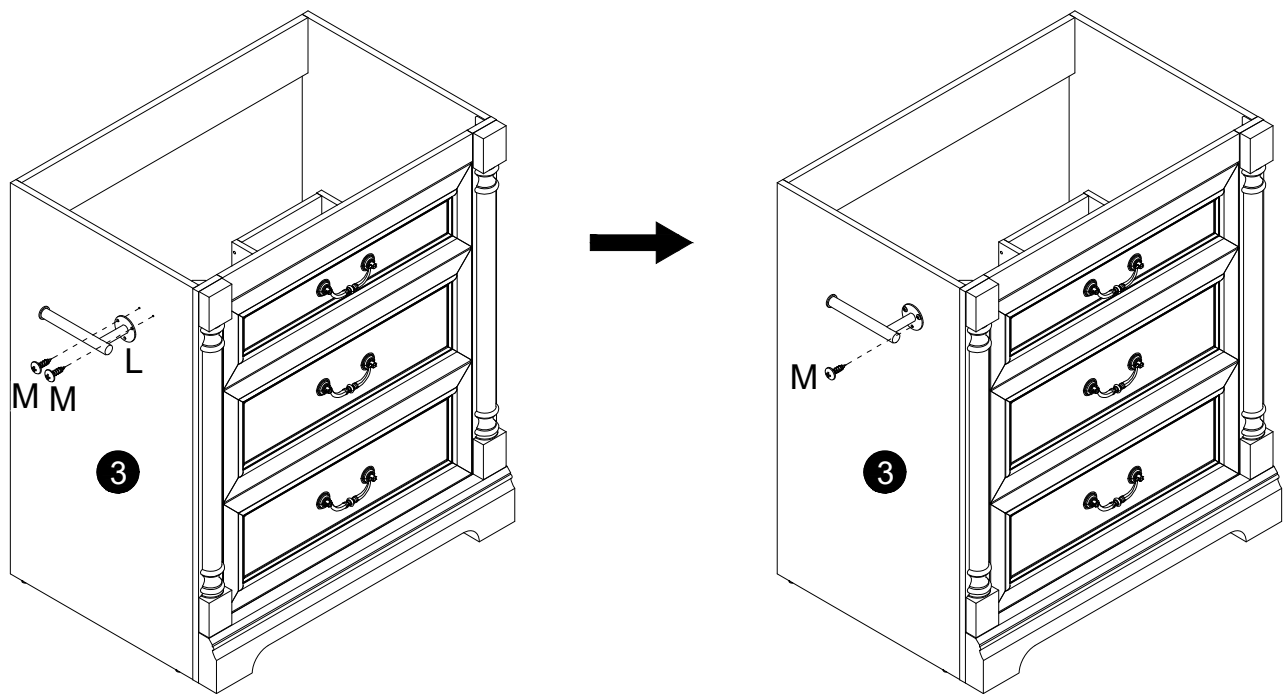

			
L	x 1	M	x 3

STEP 27

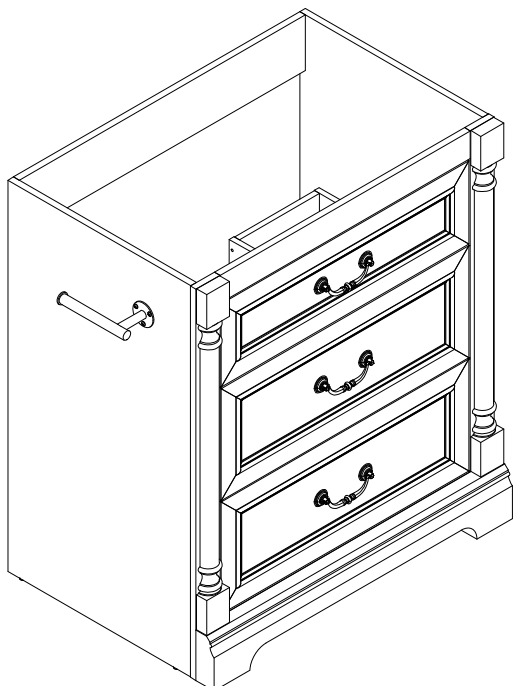

STEP 28




***Note:** Clean area where the vanity will be permanently located prior to beginning installation, ensuring the vanity will not interfere with any water supply and drain lines once mounted.

*** With the help of another adult, carefully place vanity against the wall in its final location. From inside vanity, drill hole through vanity mounting area and into wall studs.**

Using mounting hardware (**P**) appropriate for your installation site, secure vanity to wall studs.

*** WARNING**


Vanity **MUST** be secured to wall

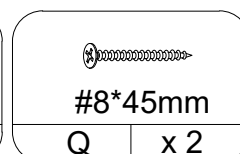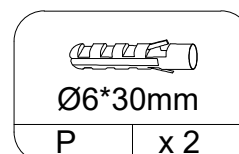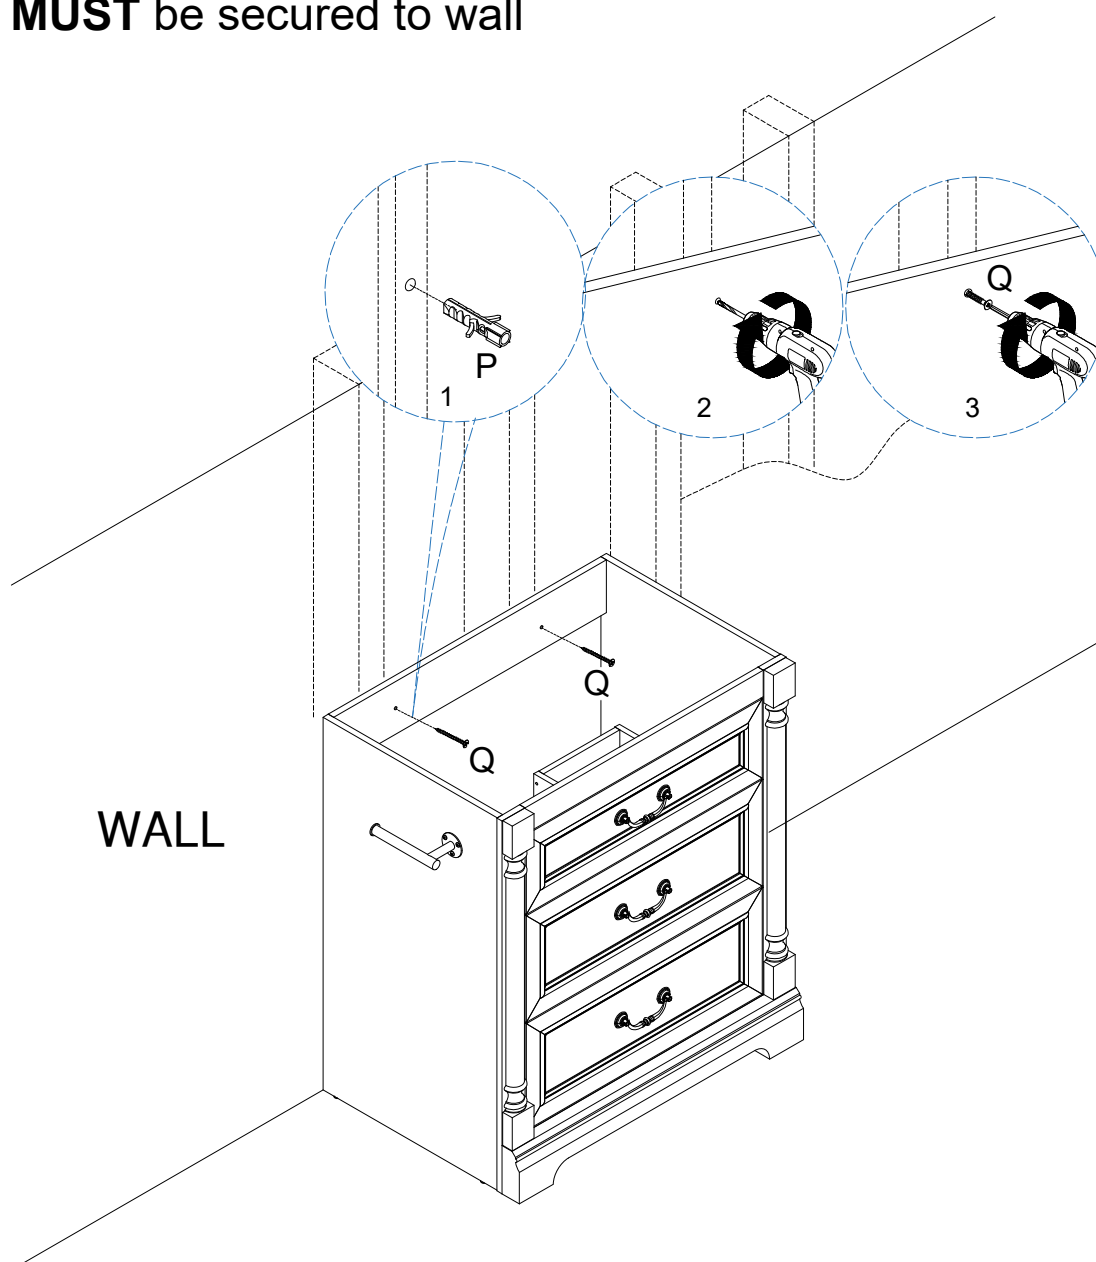

STEP 29


Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (1) per the manufacturer's instructions.

* Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity. With the help of another adult, gently lower top (1) onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

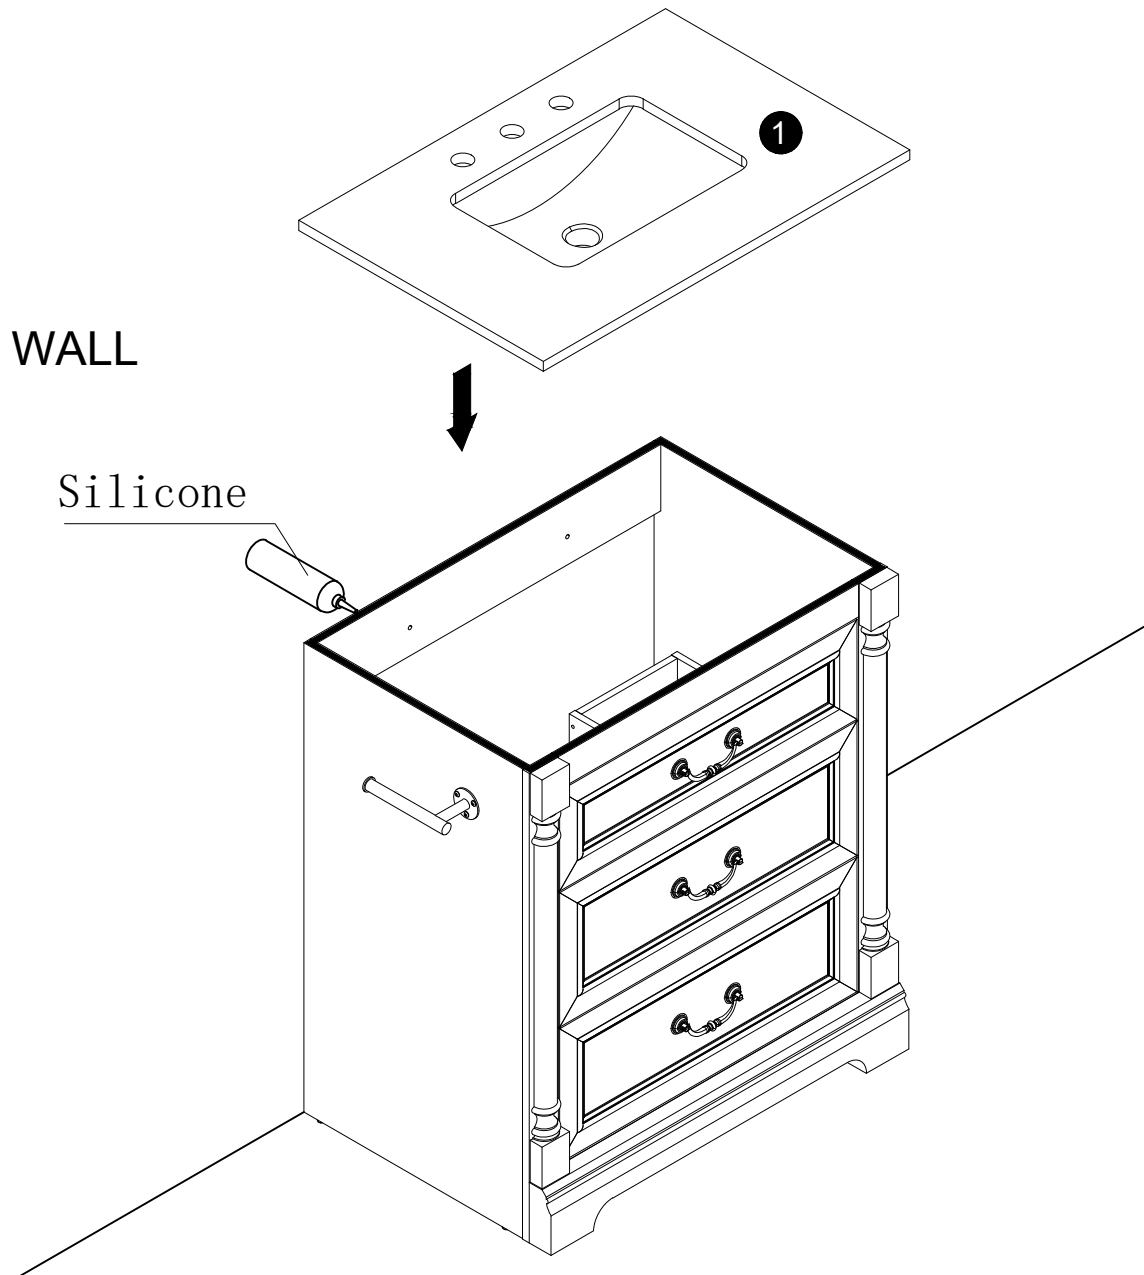

STEP 30

*Apply stain free silicone or latex silicone caulk (not included) to unpolished side and bottom of backsplash (2).
Position backsplash (2) on top (1) and against wall.
Clean any excess flowing to dry.

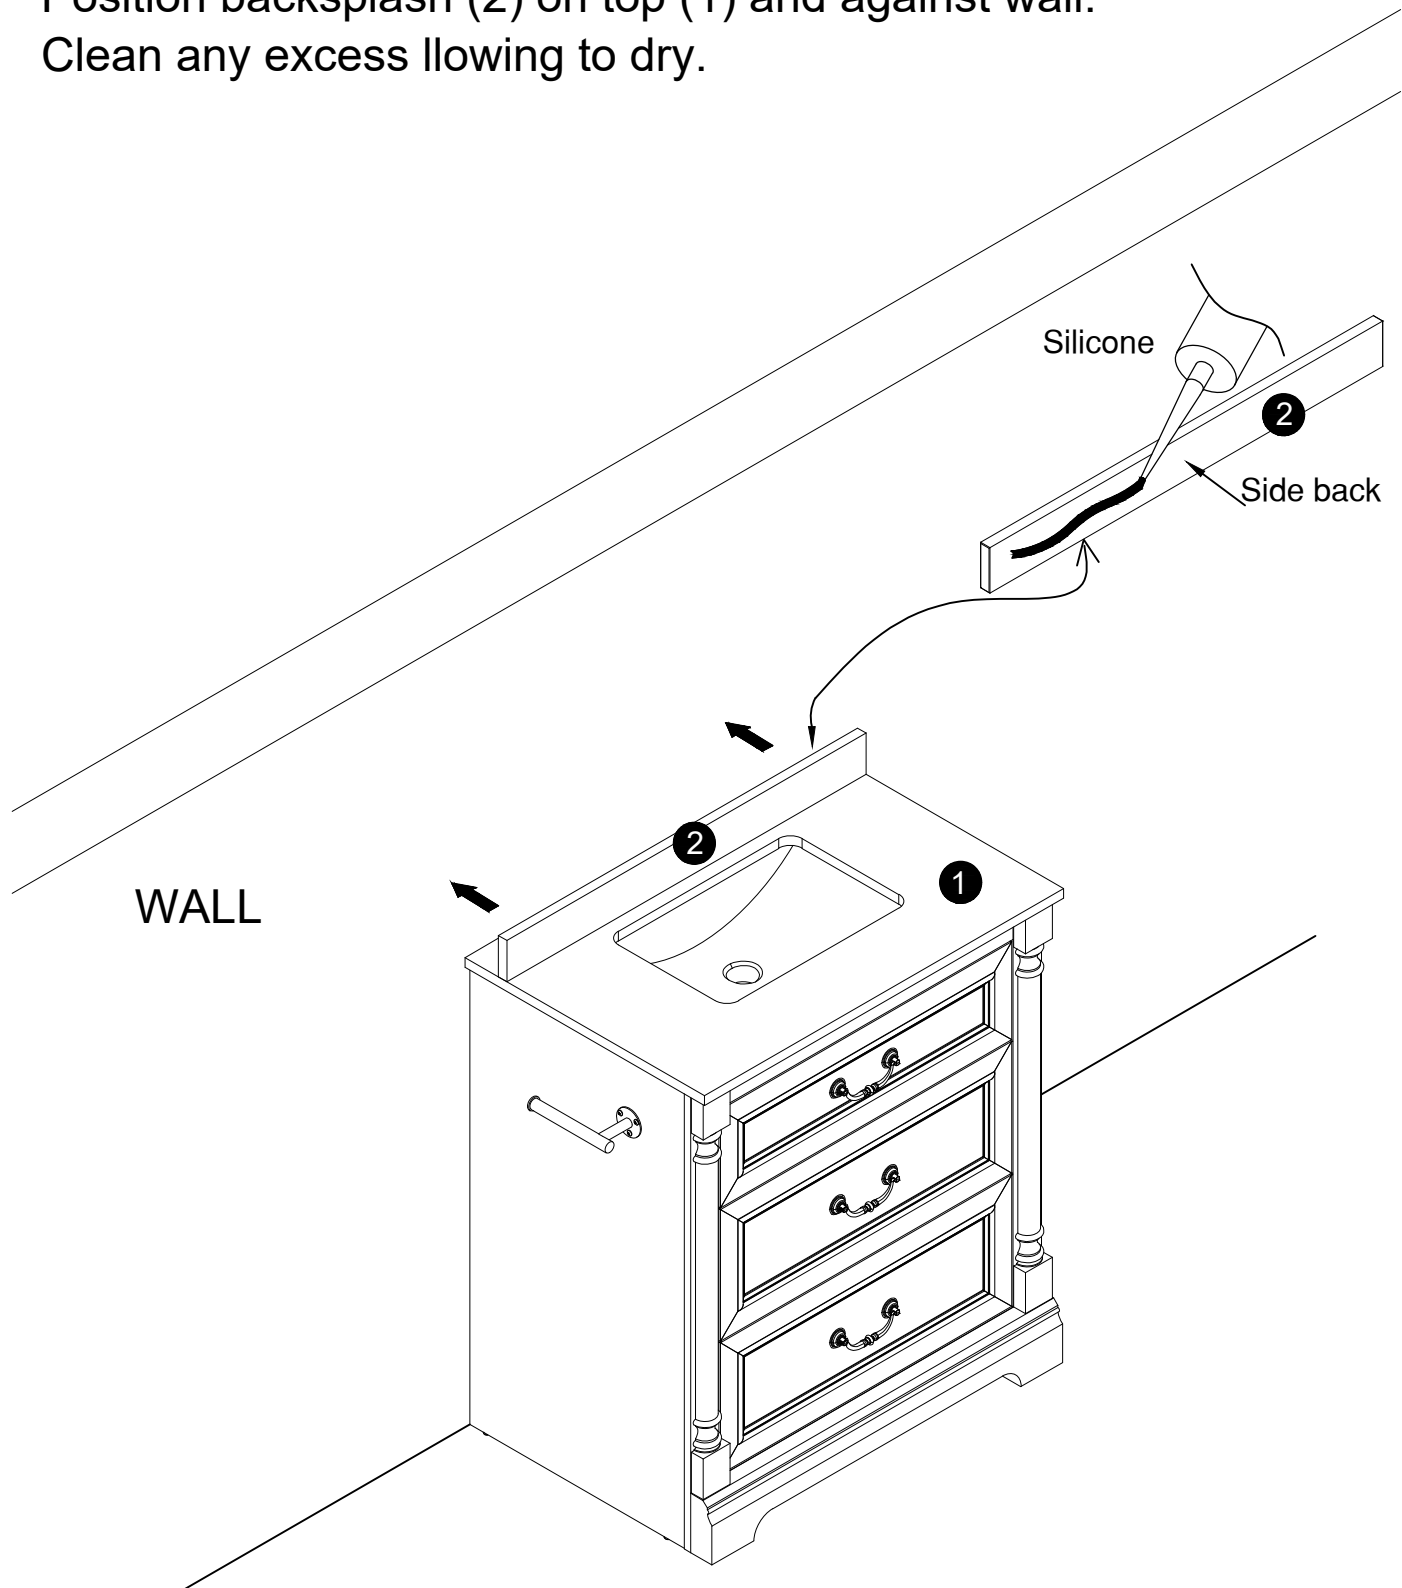

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning