


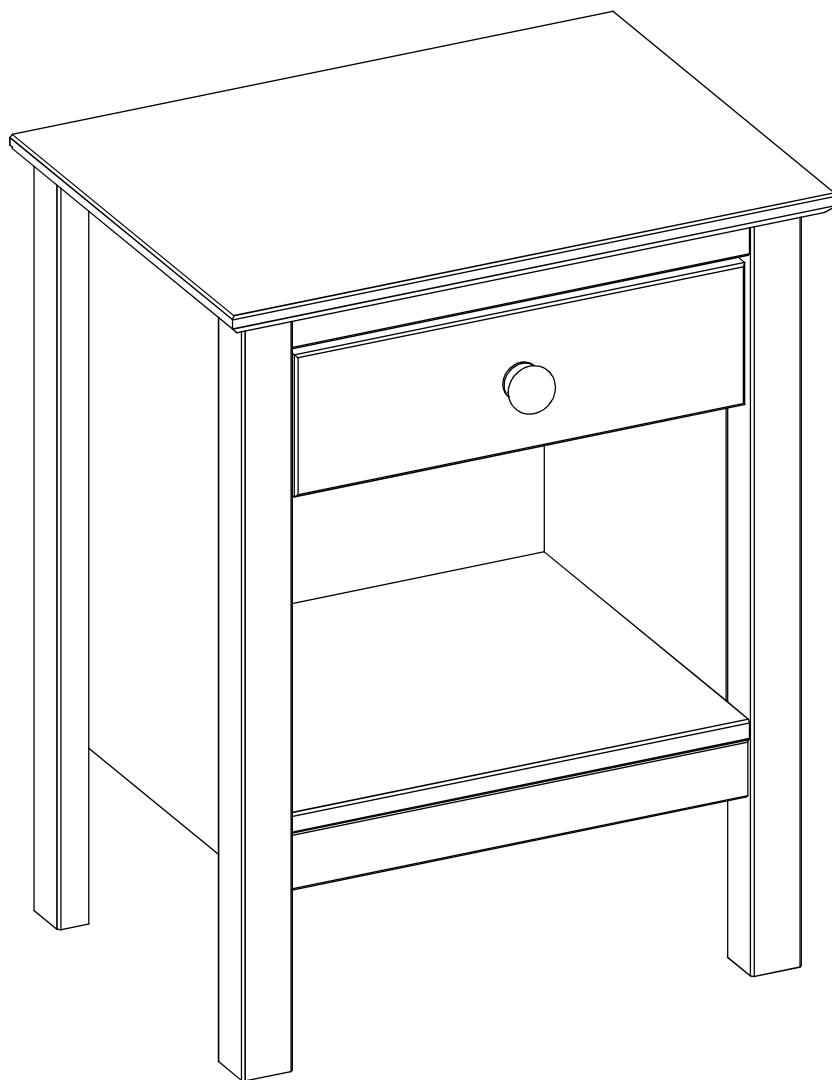



1 Drawer Bedside

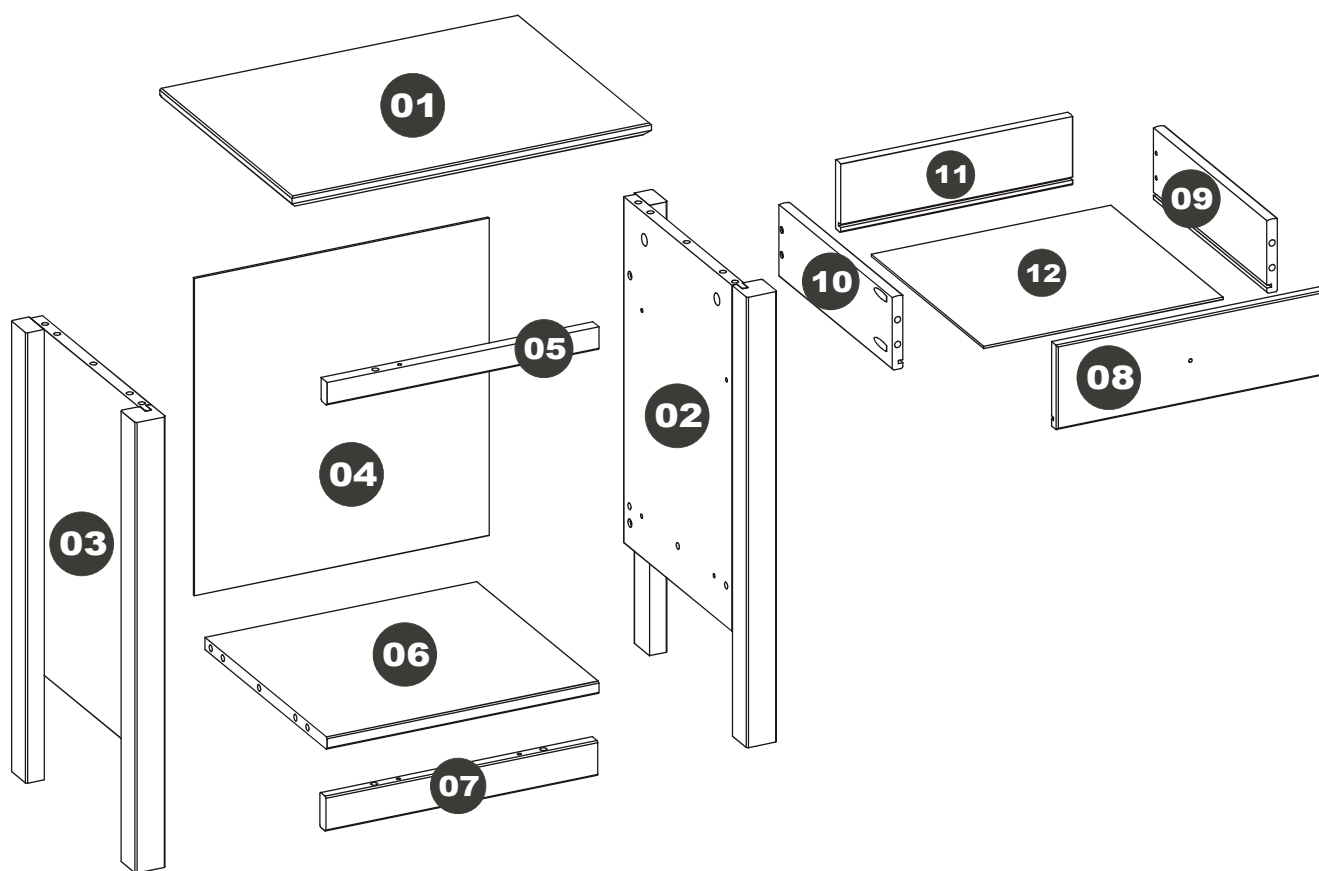


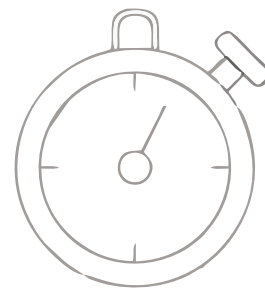


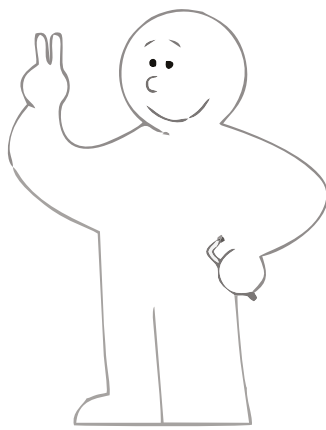


30 Min

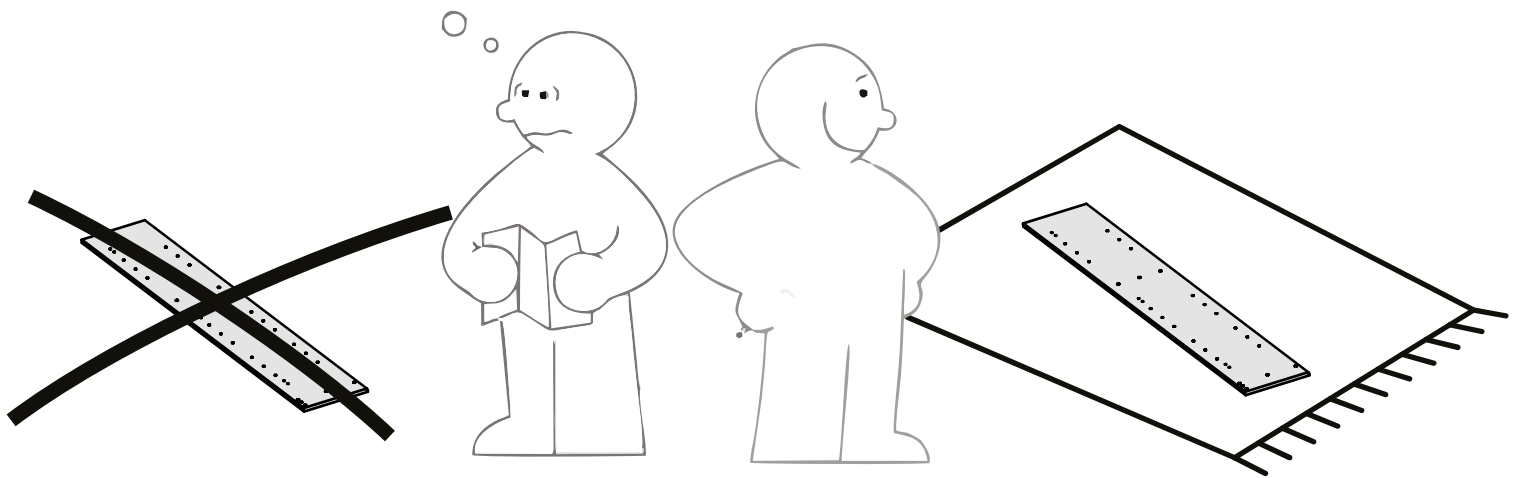

Tools required

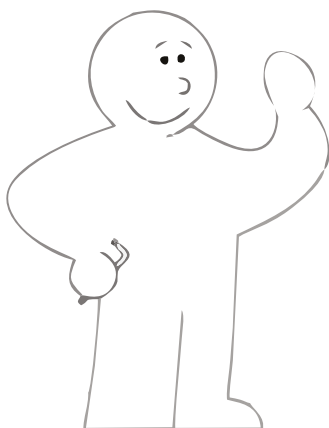


Phillips screwdriver
(medium & large)

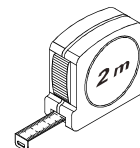







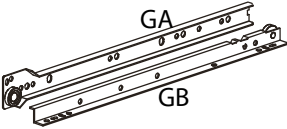
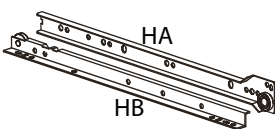





Ruler/tape
measure



Small
hammer



Eye protection
(when using a
hammer or glue)

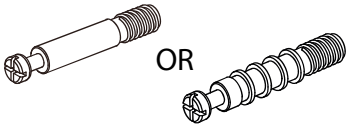A	 8x30mm	20	B	 3,5x30mm	11
C	 3,0x16mm	07	D	 4,0x40mm	05
E	 6,0x10mm	04	F	 3x10mm	12
G	 300mm	01	H	 300mm	01
I	 300mm	01	J	 300mm	02
K	 300mm	08	L	 300mm	08
M	 300mm	01			









HARDWARE IS LOCATED INSIDE A CARDBOARD BOX ! CHECK FOR IT BEFORE DISPOSING PACKAGING

Ruler - Use this ruler to help correctly identify the screws






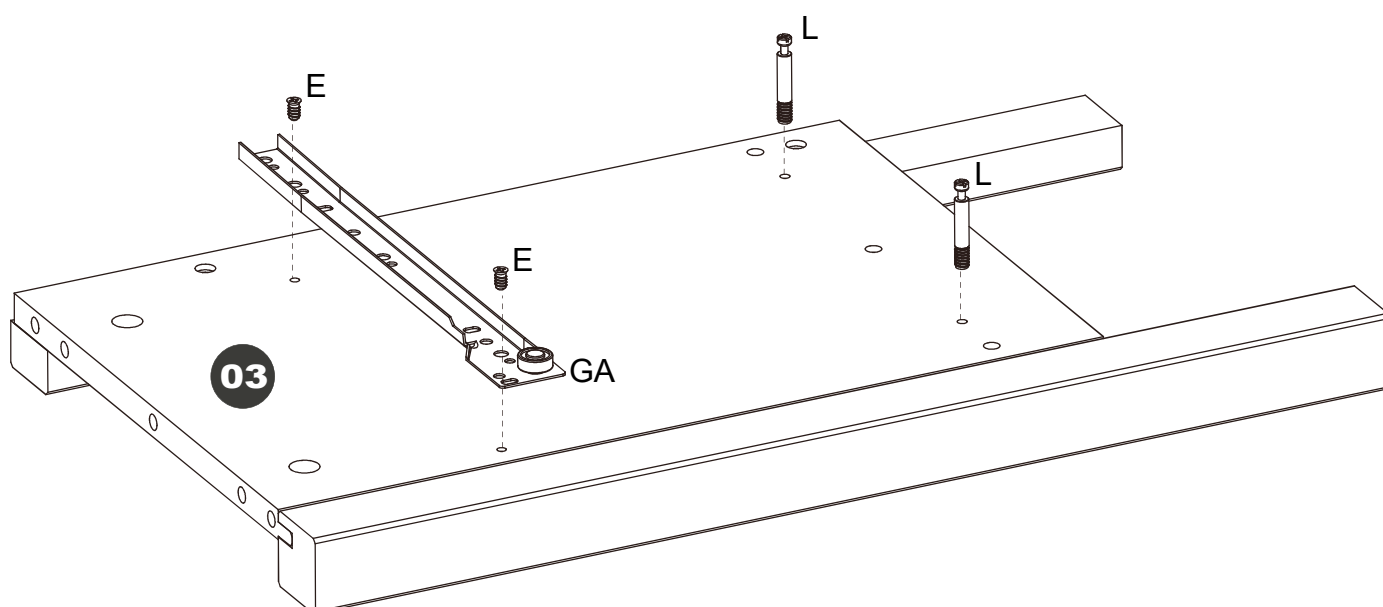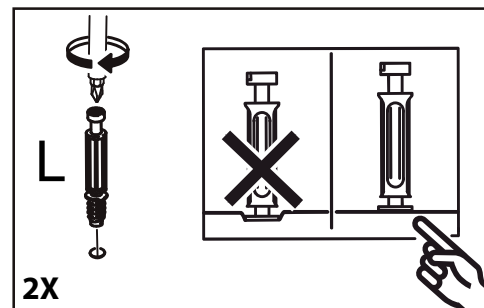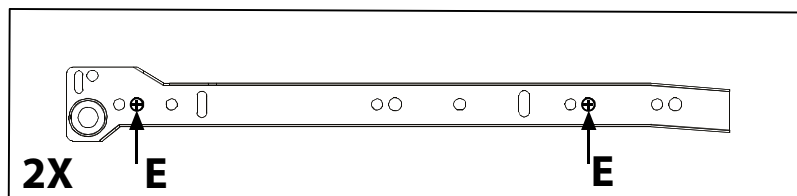


01





L		02	G		01	E		02
				LEFT SET			6,0x10mm	

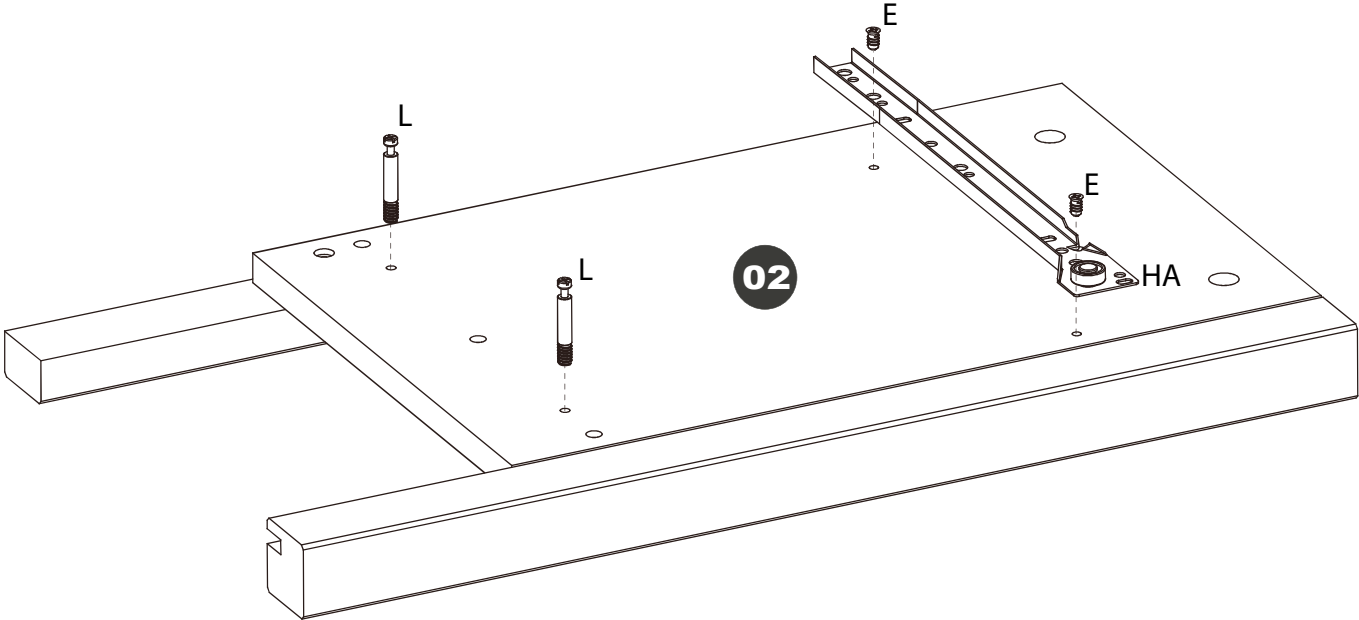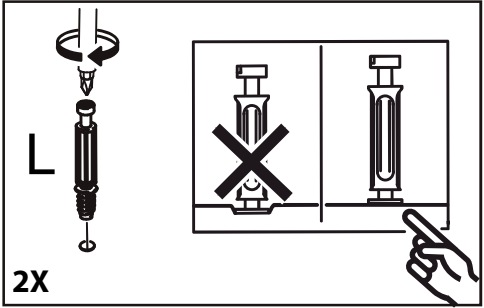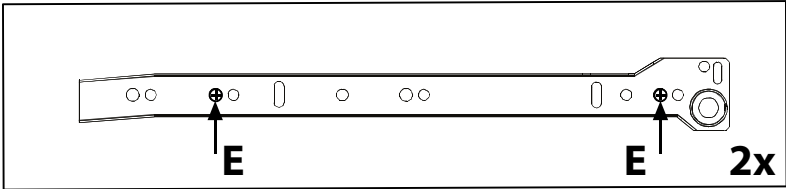
02






L		02	H	 RIGTH SET	01	E		02
						6,0x10mm		

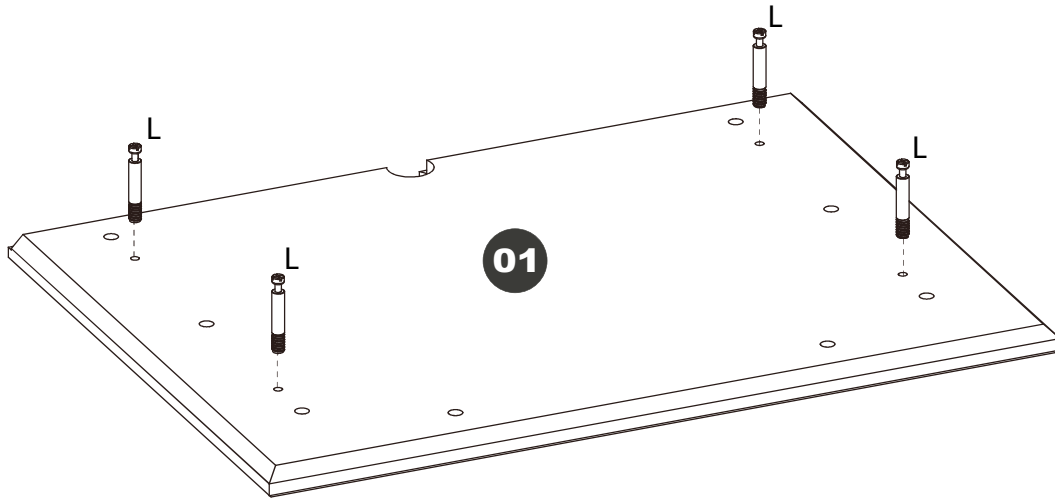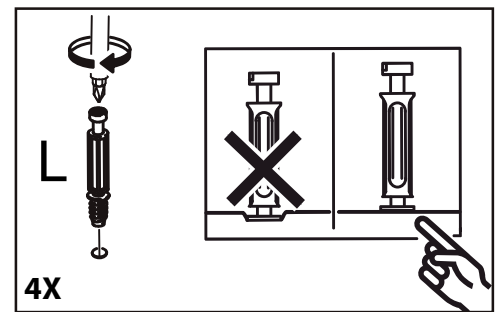

03






L		04
---	---	----

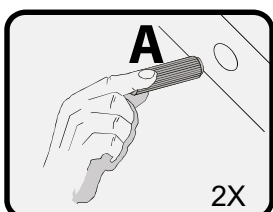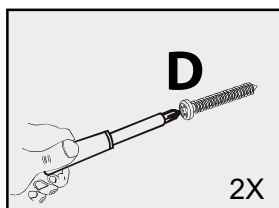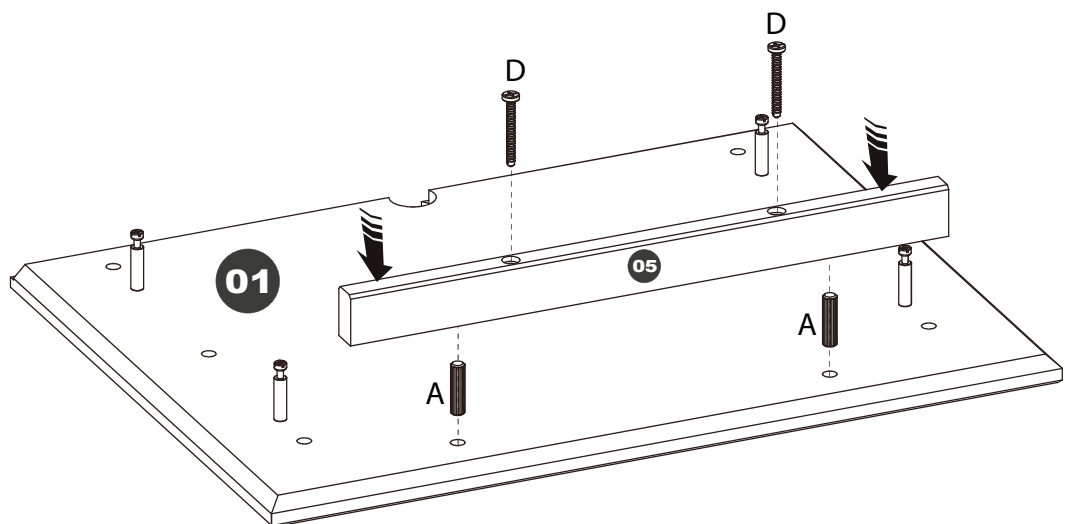
04




A		02	D		02
	8x30mm			4,0x40mm	





05

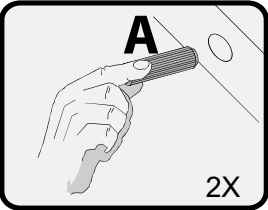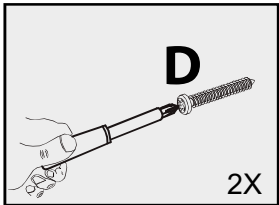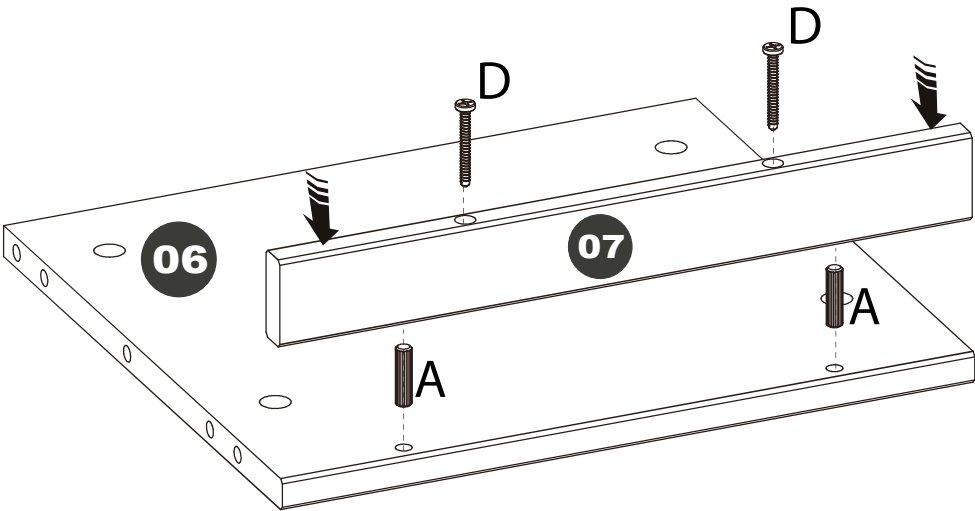



A		02
8x30mm		


D		02
4,0x40mm		

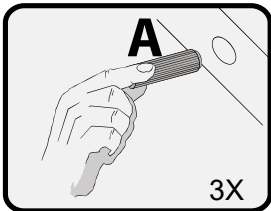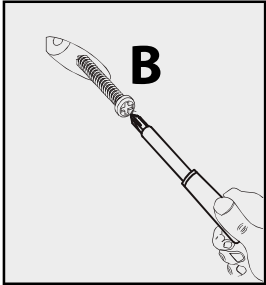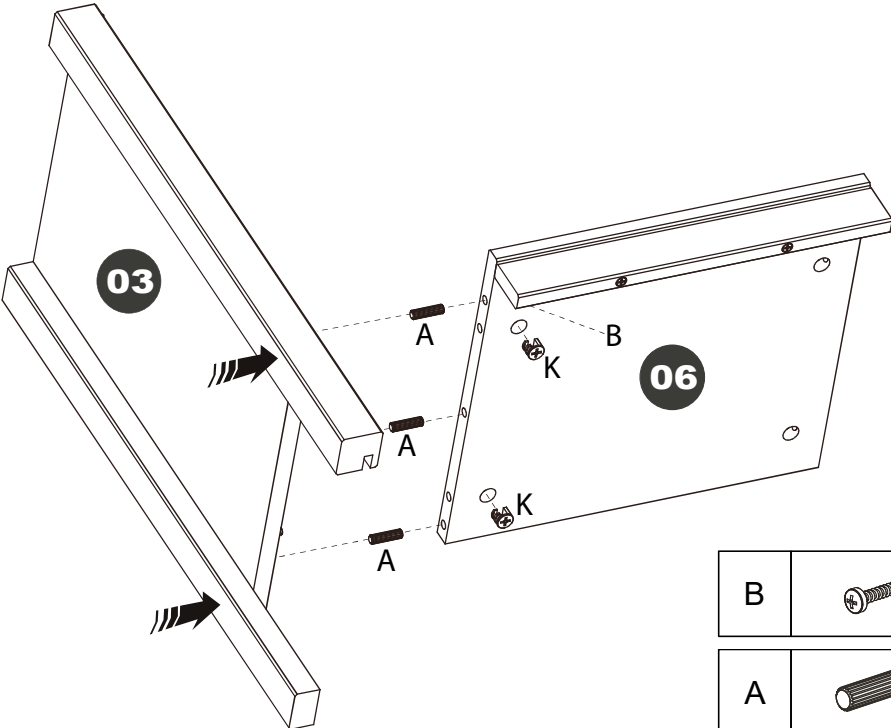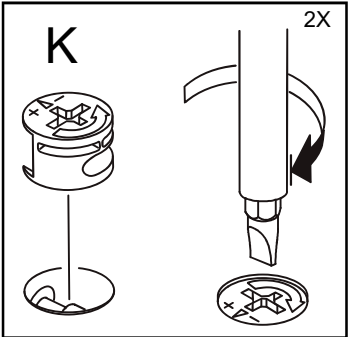06









B		01
3,5x30mm		


A		03
8x30mm		

K		02
---	---	----

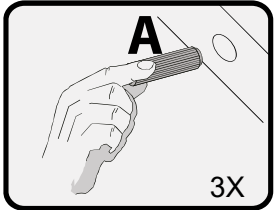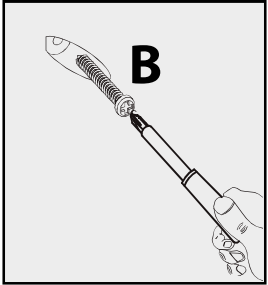
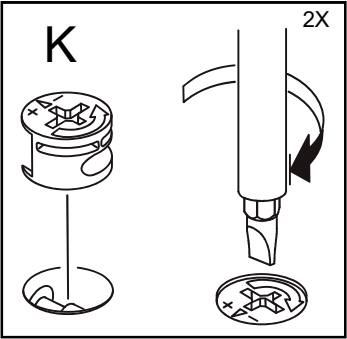
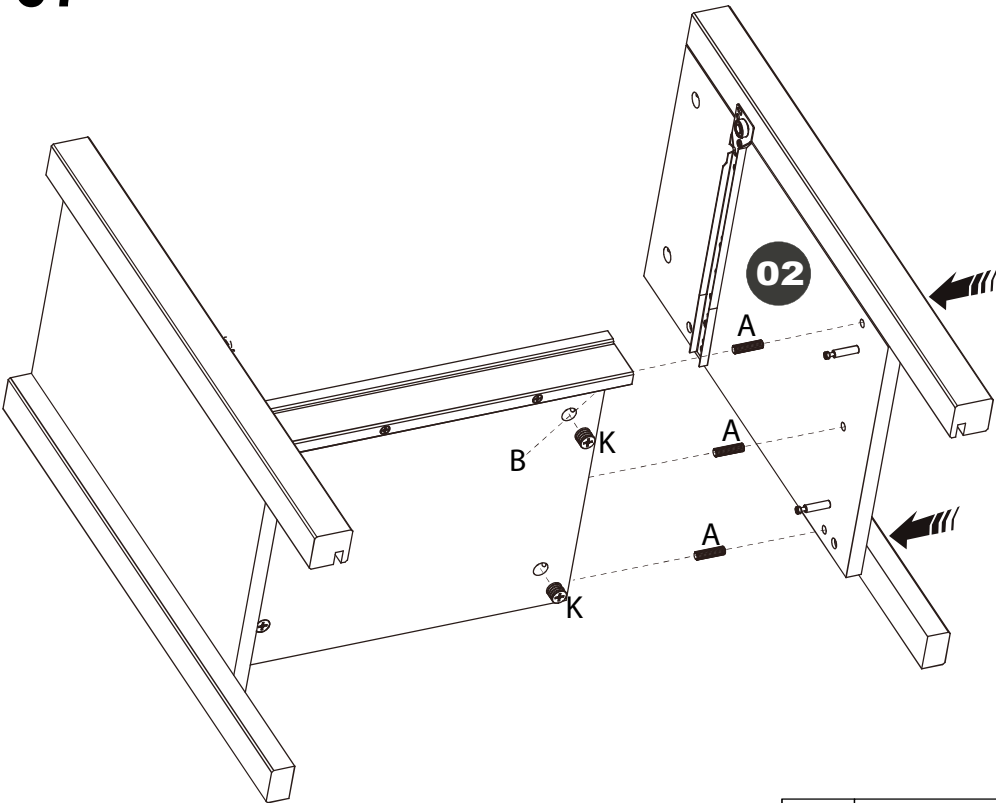
07







B	 3,5x30mm	01
A	 8x30mm	03

K		02
---	---	----

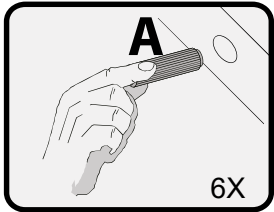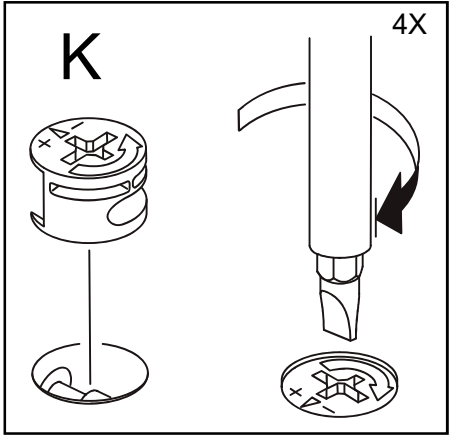
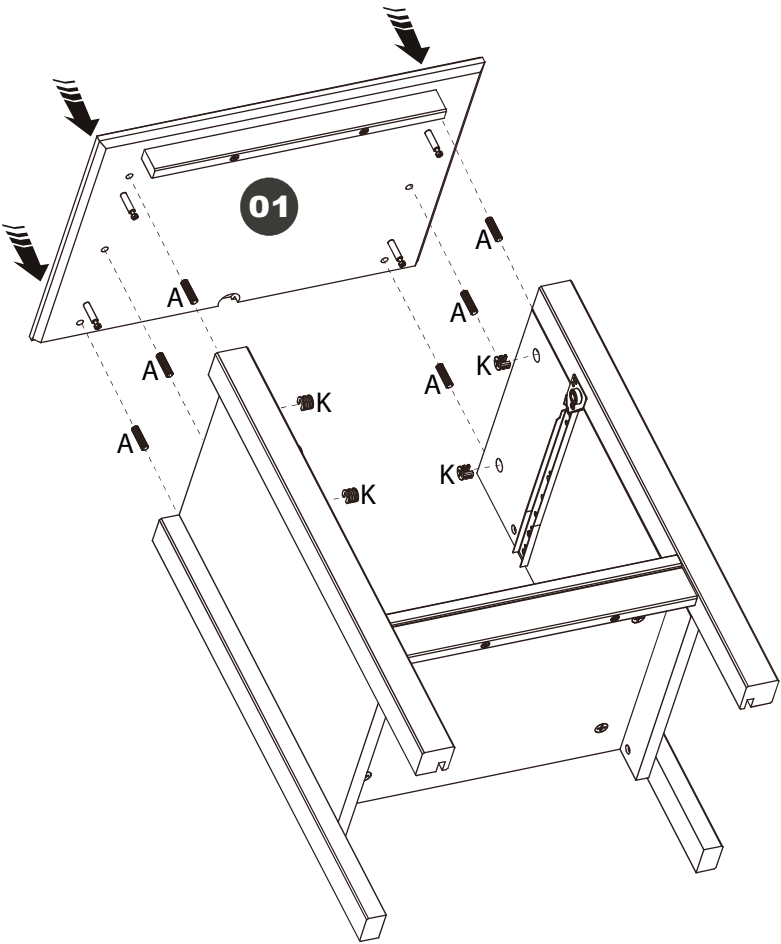
08




A		06	K		04
---	---	----	---	---	----

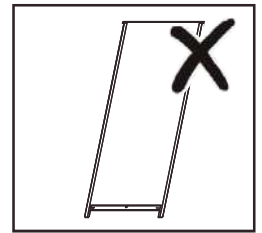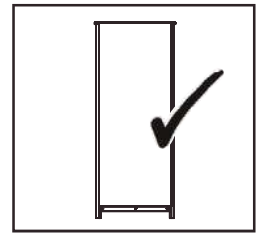

Important:
Cabinet **MUST** be
'square' when back panel
is attached.

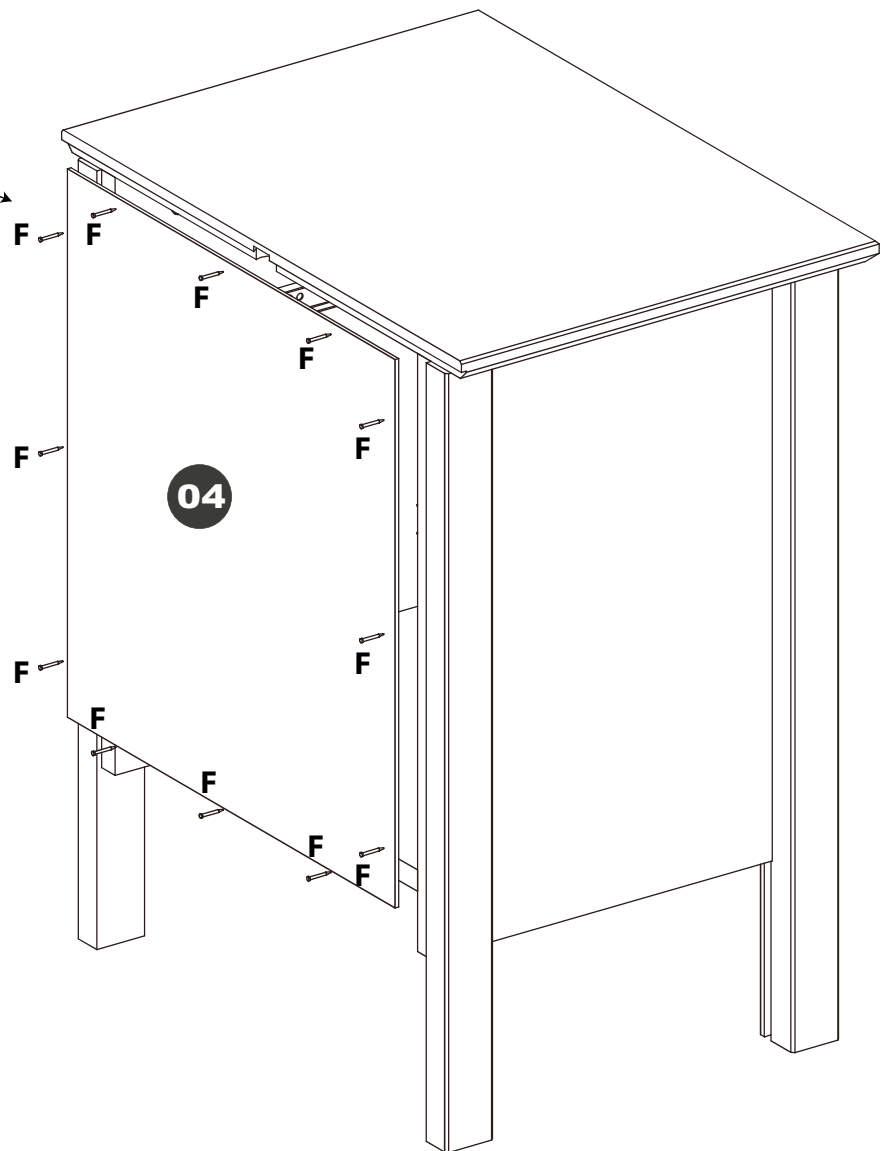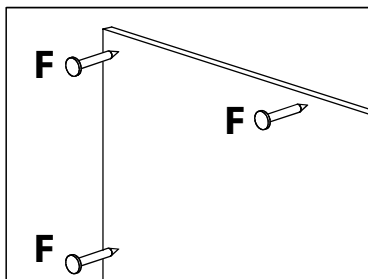


Use all back panels nails.
Evenly spaced, they help
make the unit strong.

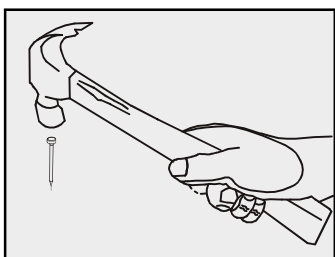


10


a)

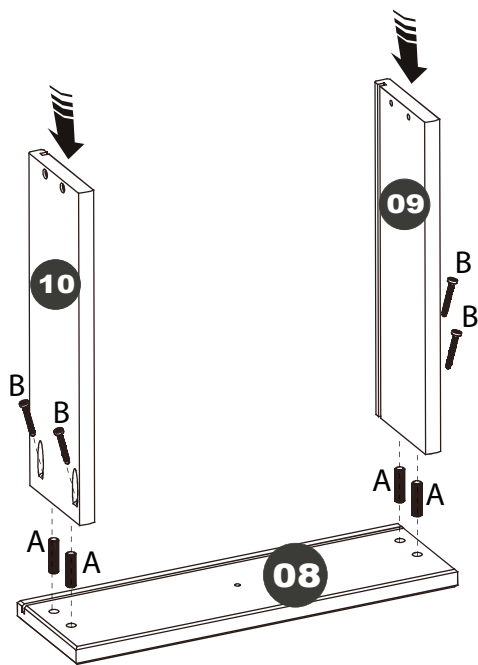




b)

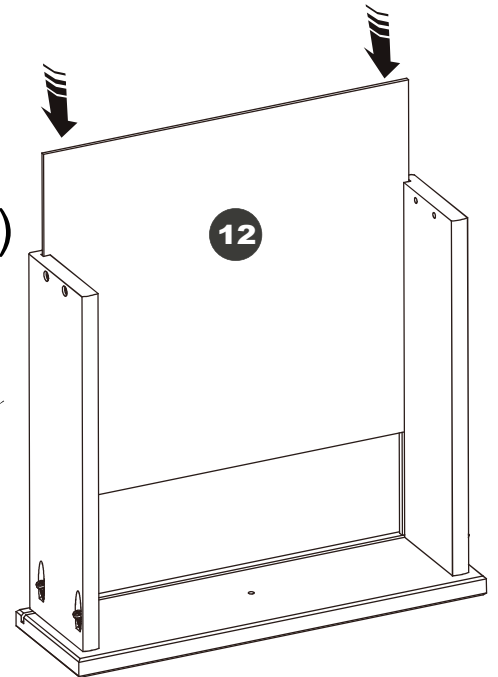


c)

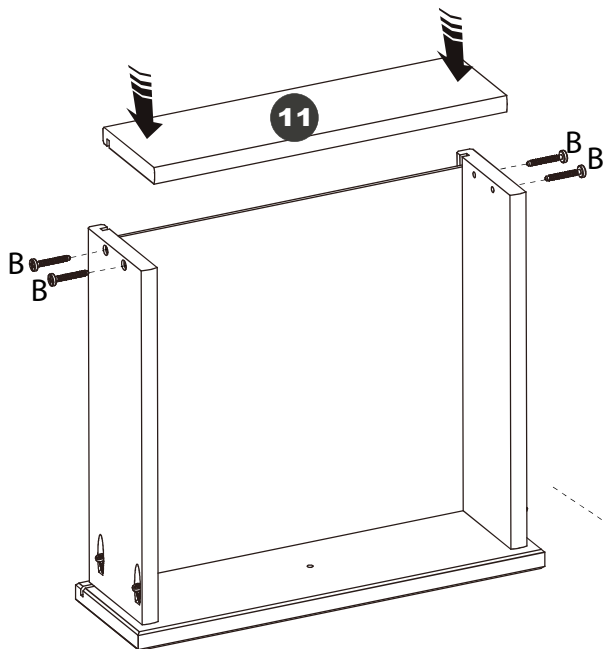

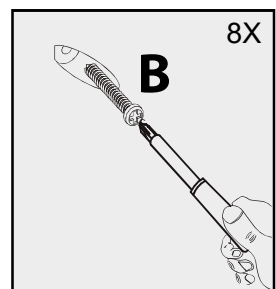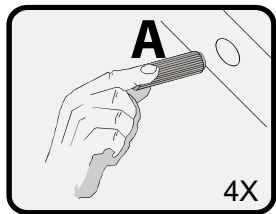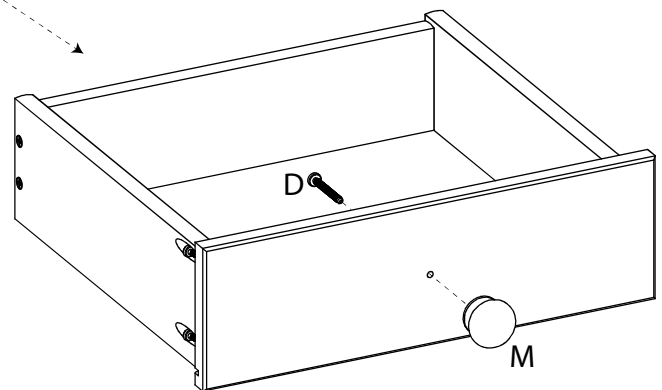


d)

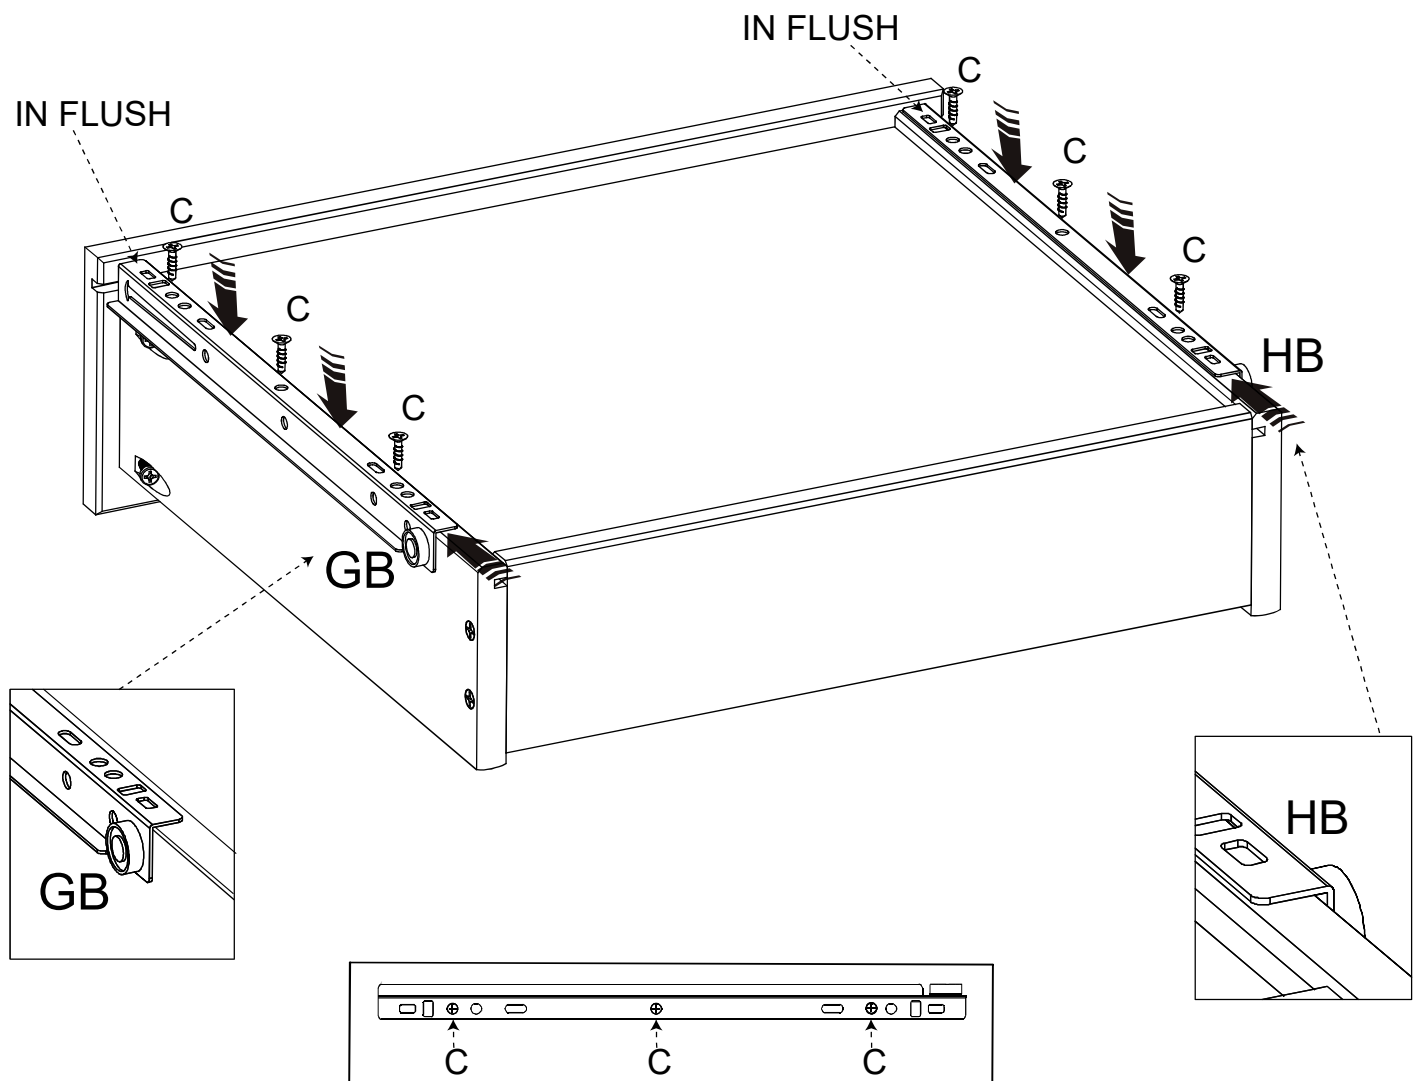

M		01	D		01	A		04	B		08
							4,0x40mm	8x30mm		3,5x30mm	




G		01	H		01	C		3.0x16mm	06
---	---	----	---	---	----	---	---	----------	----


12



Position the furniture into place and make a mark to the wall, as shown.

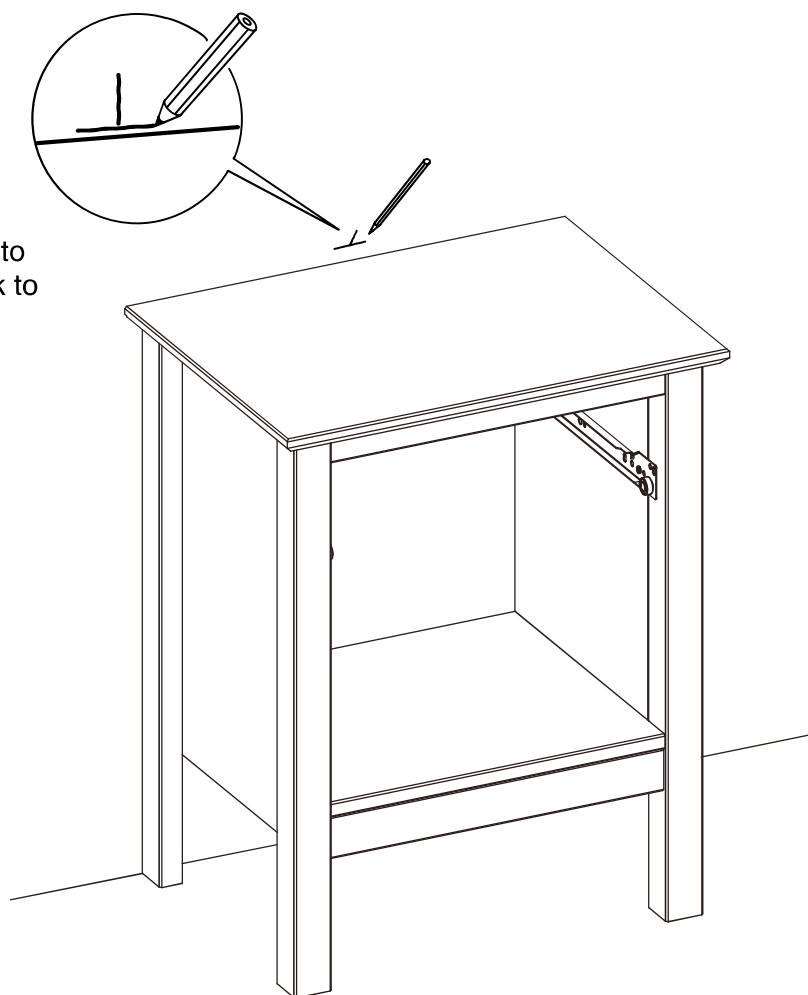

13

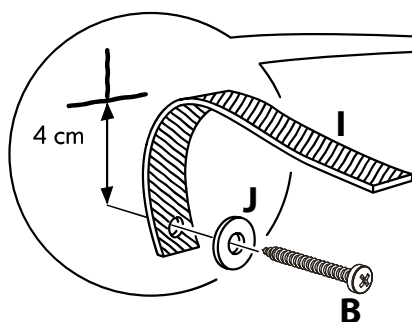





With help, carefully move the furniture away to access the mark in the wall.

Drill hole on wall 4cm below the mark, as shown in the diagram.

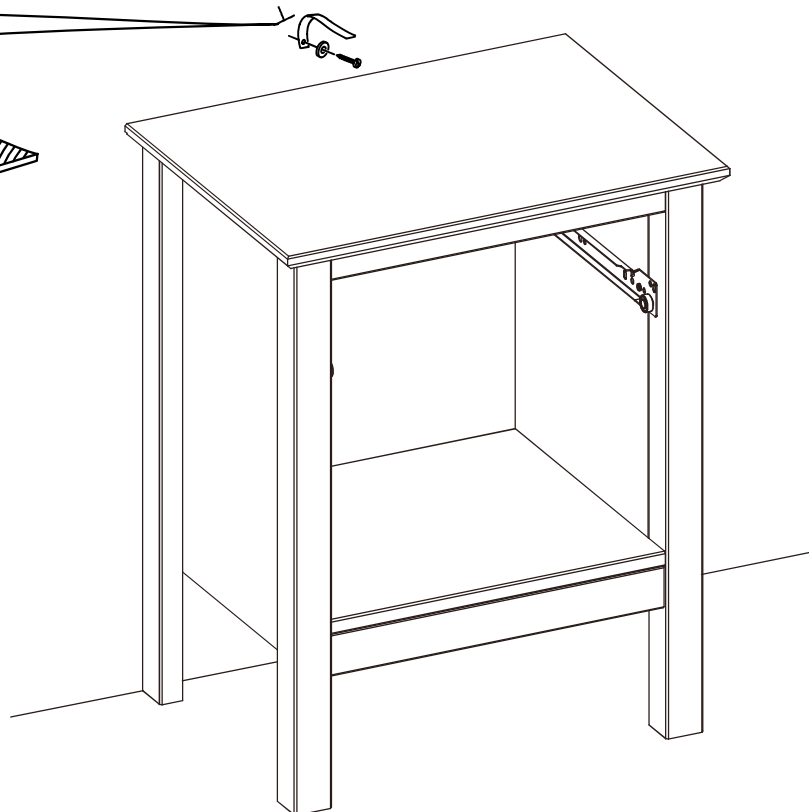

Before drilling, check wall for hidden pipes and cables.




J		01	I		01	B	 3.5x30mm	01
---	---	----	---	---	----	---	---	----

14





With help, carefully move the furniture back to position and insert wall strap into slot on top panel, as shown.

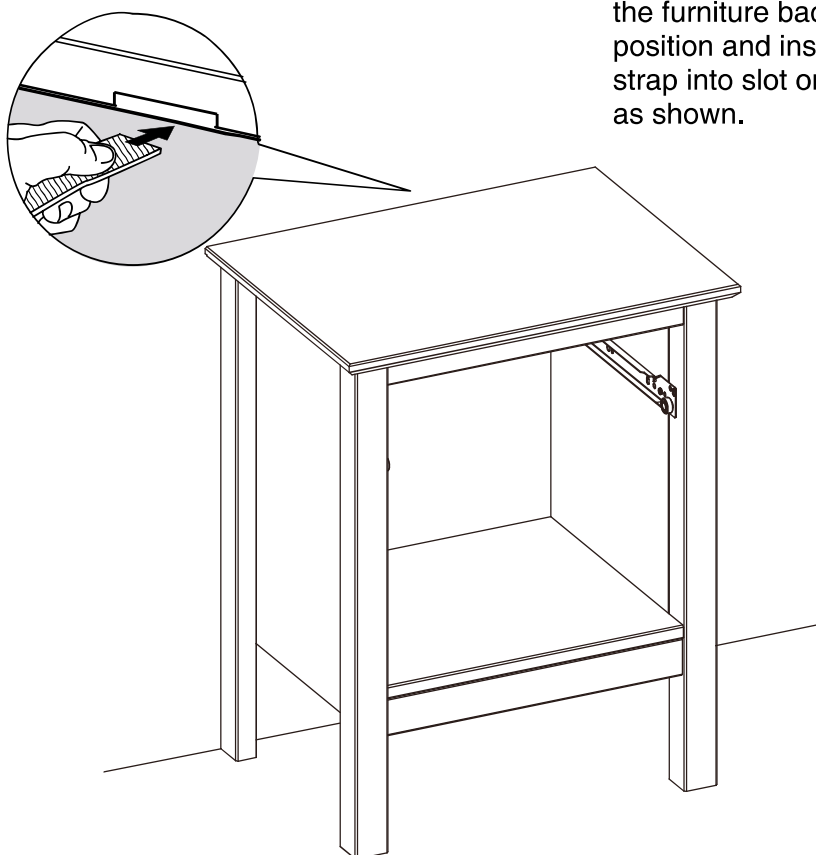

15



Inside the unit, hold wall strap in position and fix it using washer and screw, as shown.

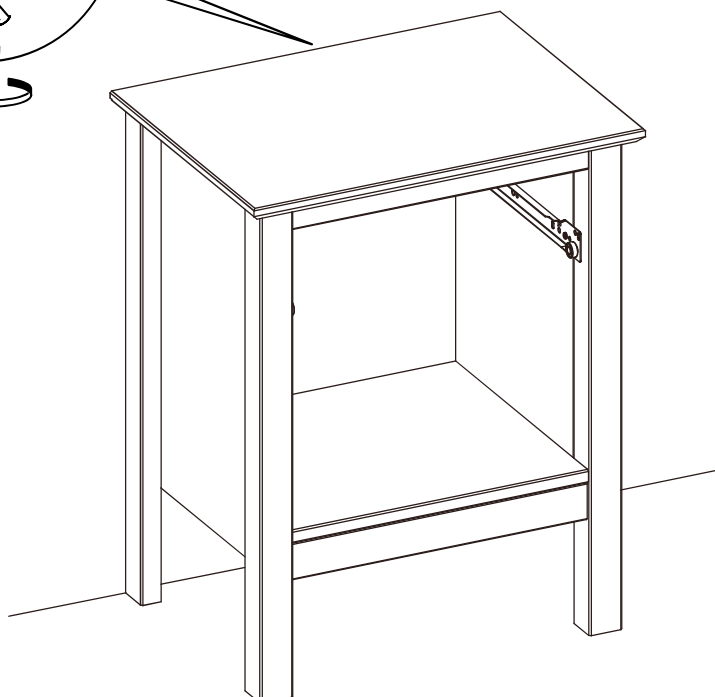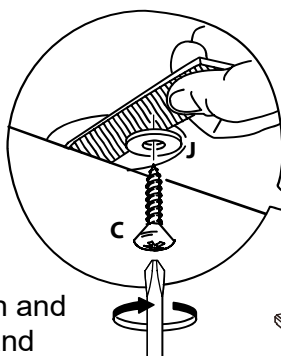

J



01

C



3,0x16mm

01

