



ASSEMBLY INSTRUCTION

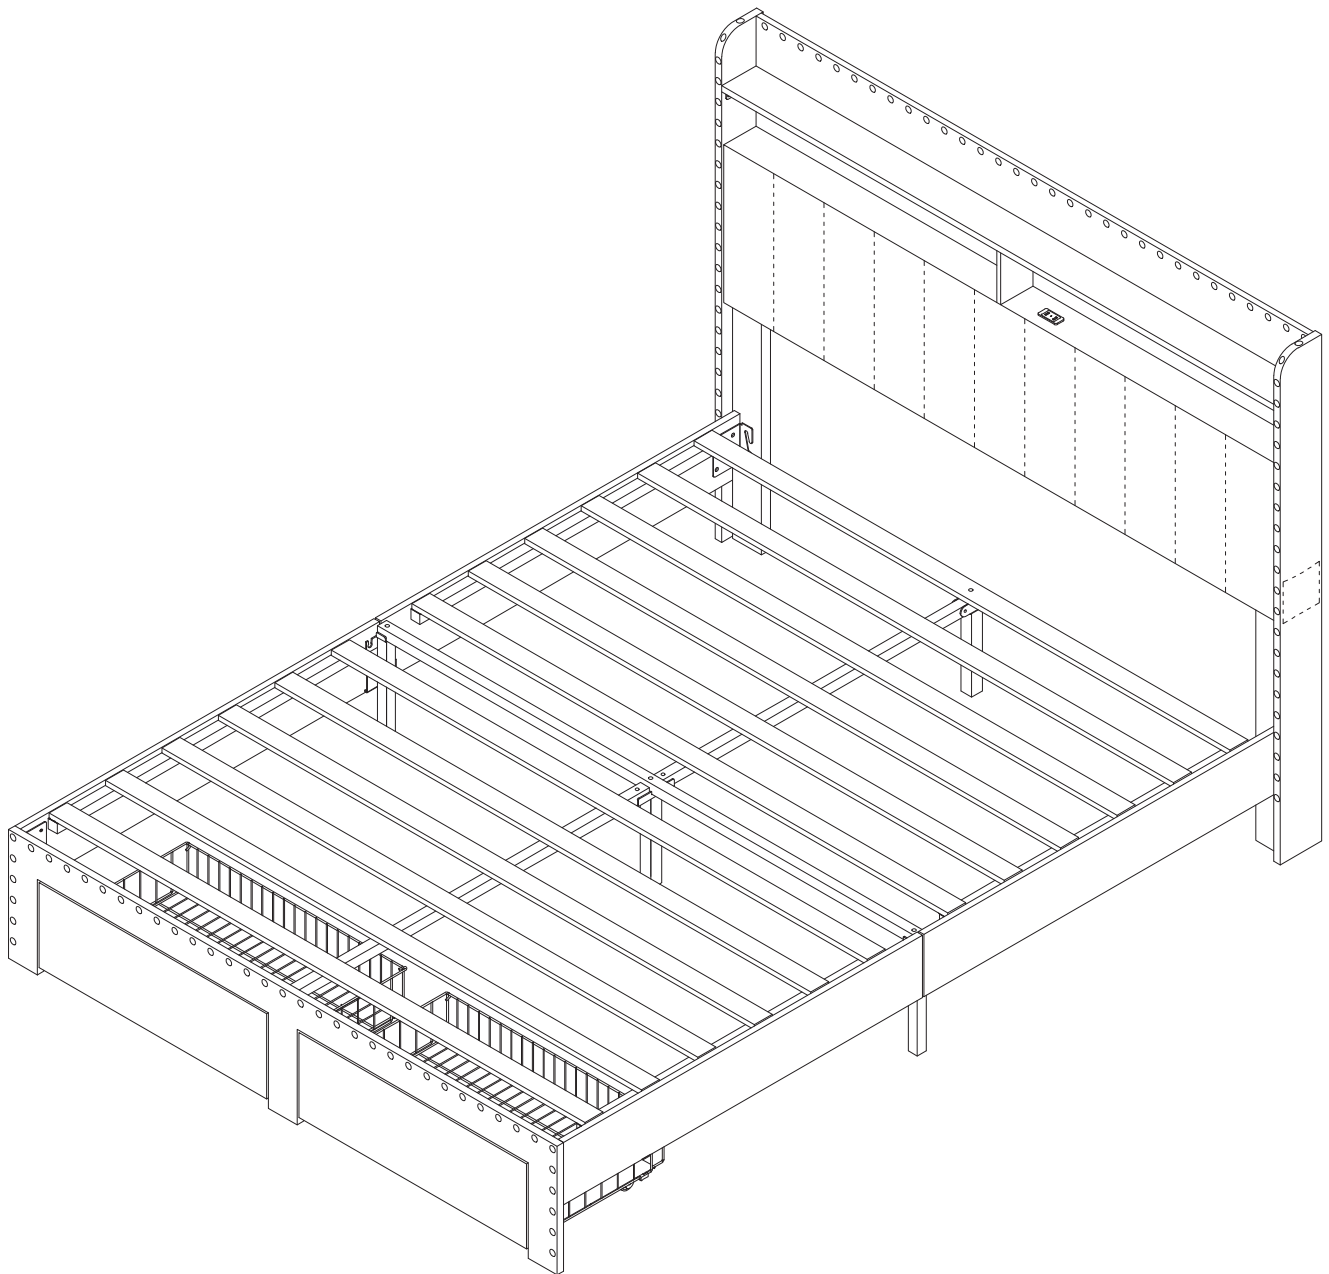




WARNING

Need Two Or More People To Complete

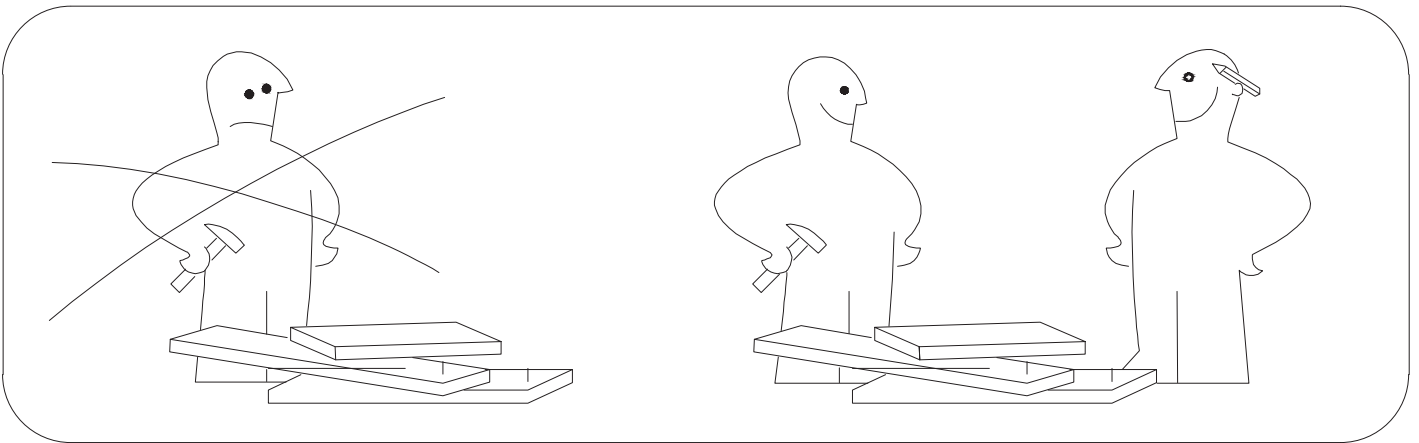


Assemble Item On a Clean Flat Surface

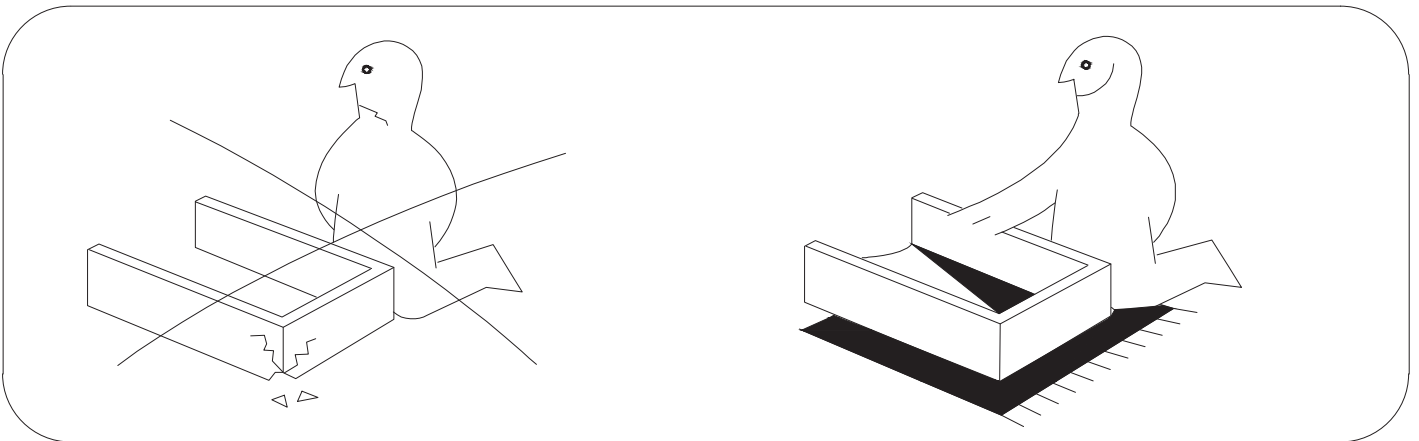

- Please check you have all hardware before assembling.
- Please ensure you have the name of the item and hardware part required and quantity.
- If you have any questions, please contact us by original purchase platform.
we will reply you ASAP.

















EXPLODED DRAWING:


















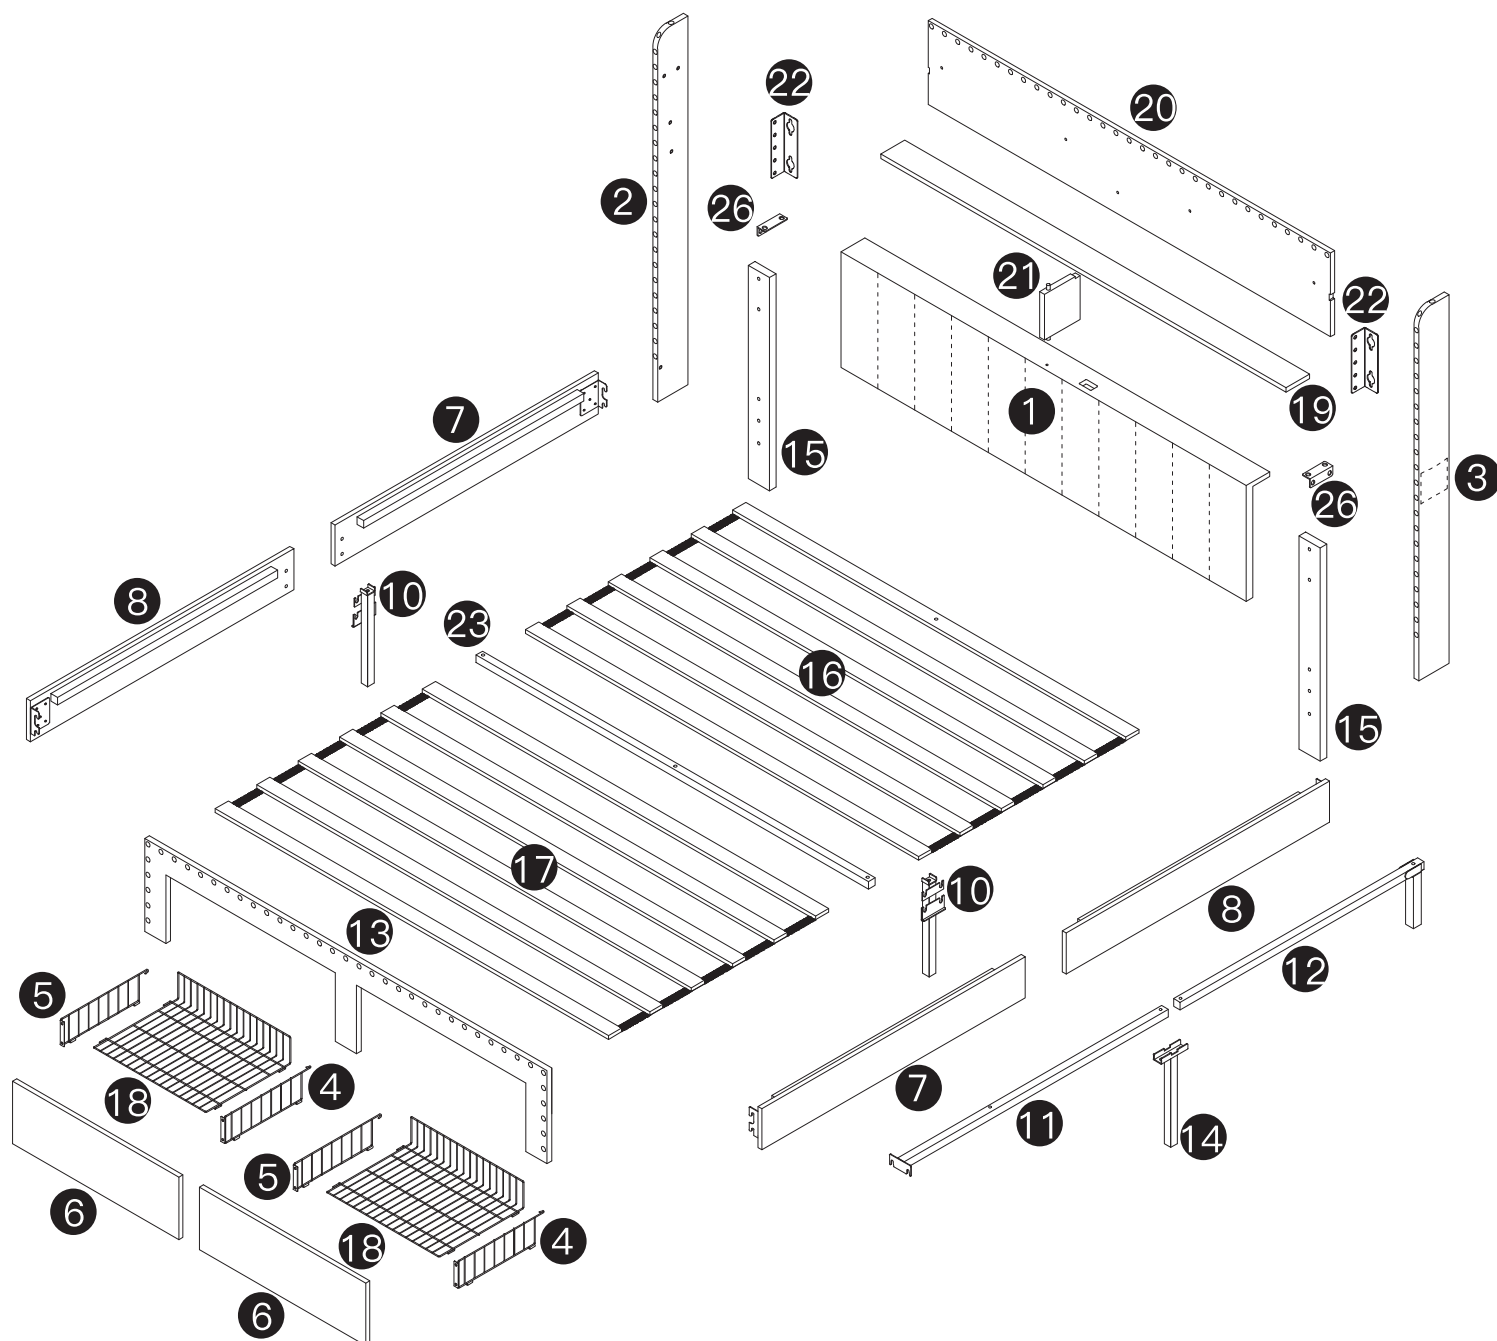


Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition.

If there is any parts missing or defective, please contact us with purchase platform message immediately to get replacement parts.





PARTS:

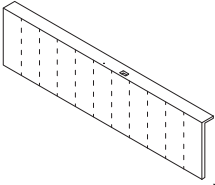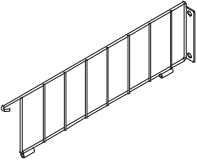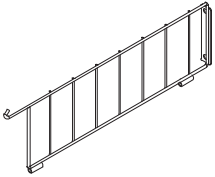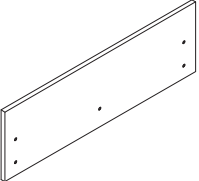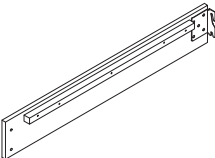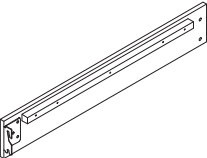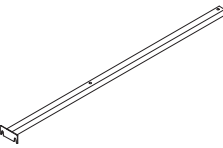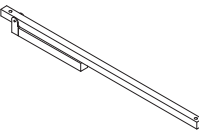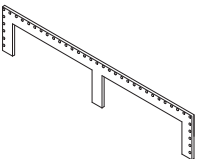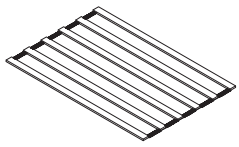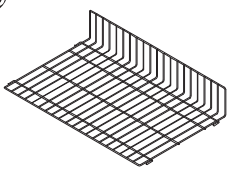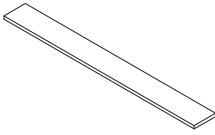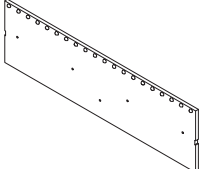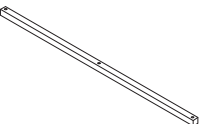1  x1	2  x1	3  x1	4  x2
5  x2	6  x2	7  x2	8  x2
10  x2	11  x1	12  x1	13  x1
14  x1	15  x2	16  x1	17  x1
18  x2	19  x1	20  x1	21  x1
22  x2	23  x1	24  x2	25  x6

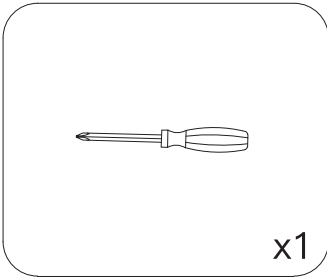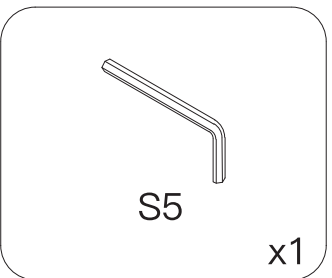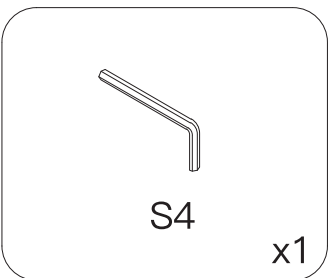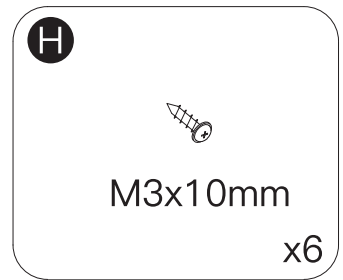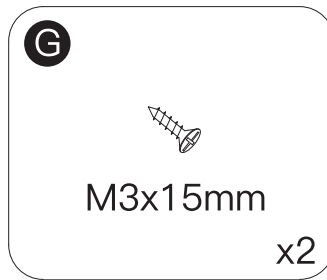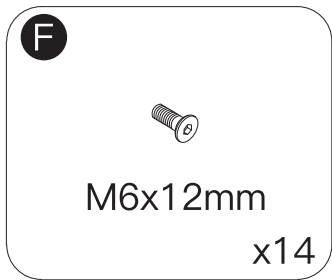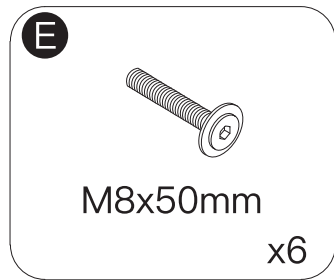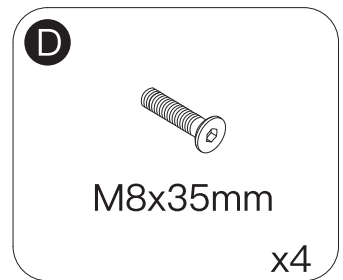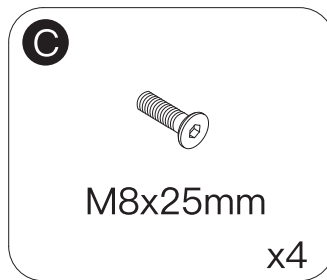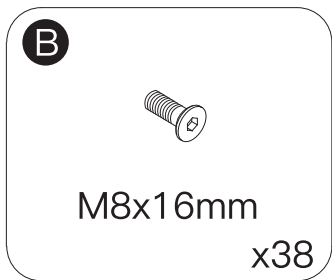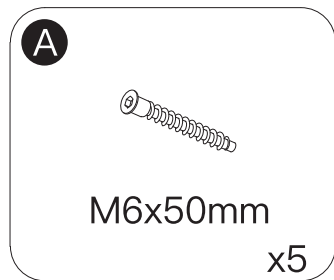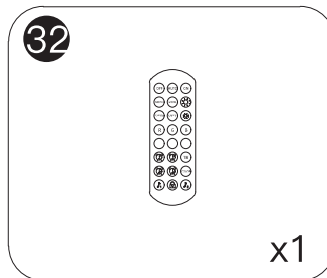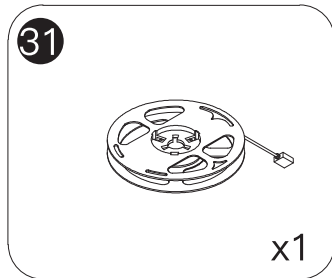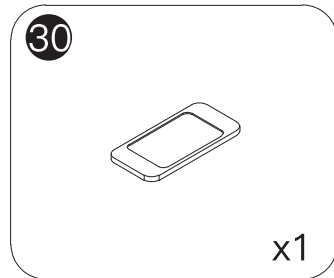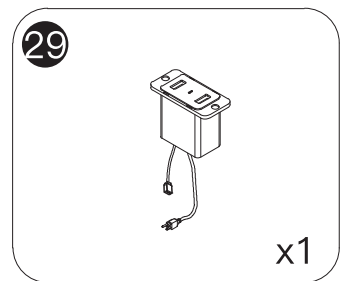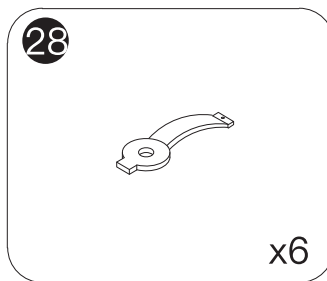
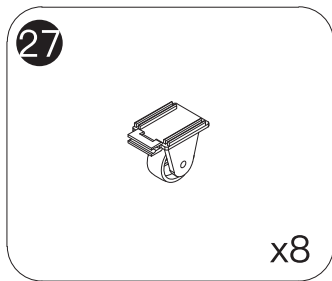
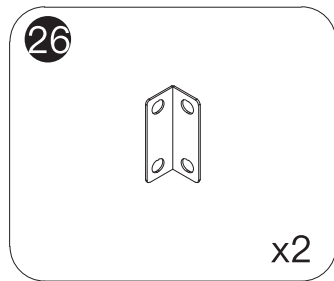


HOW TO INSTALL




STEP 1

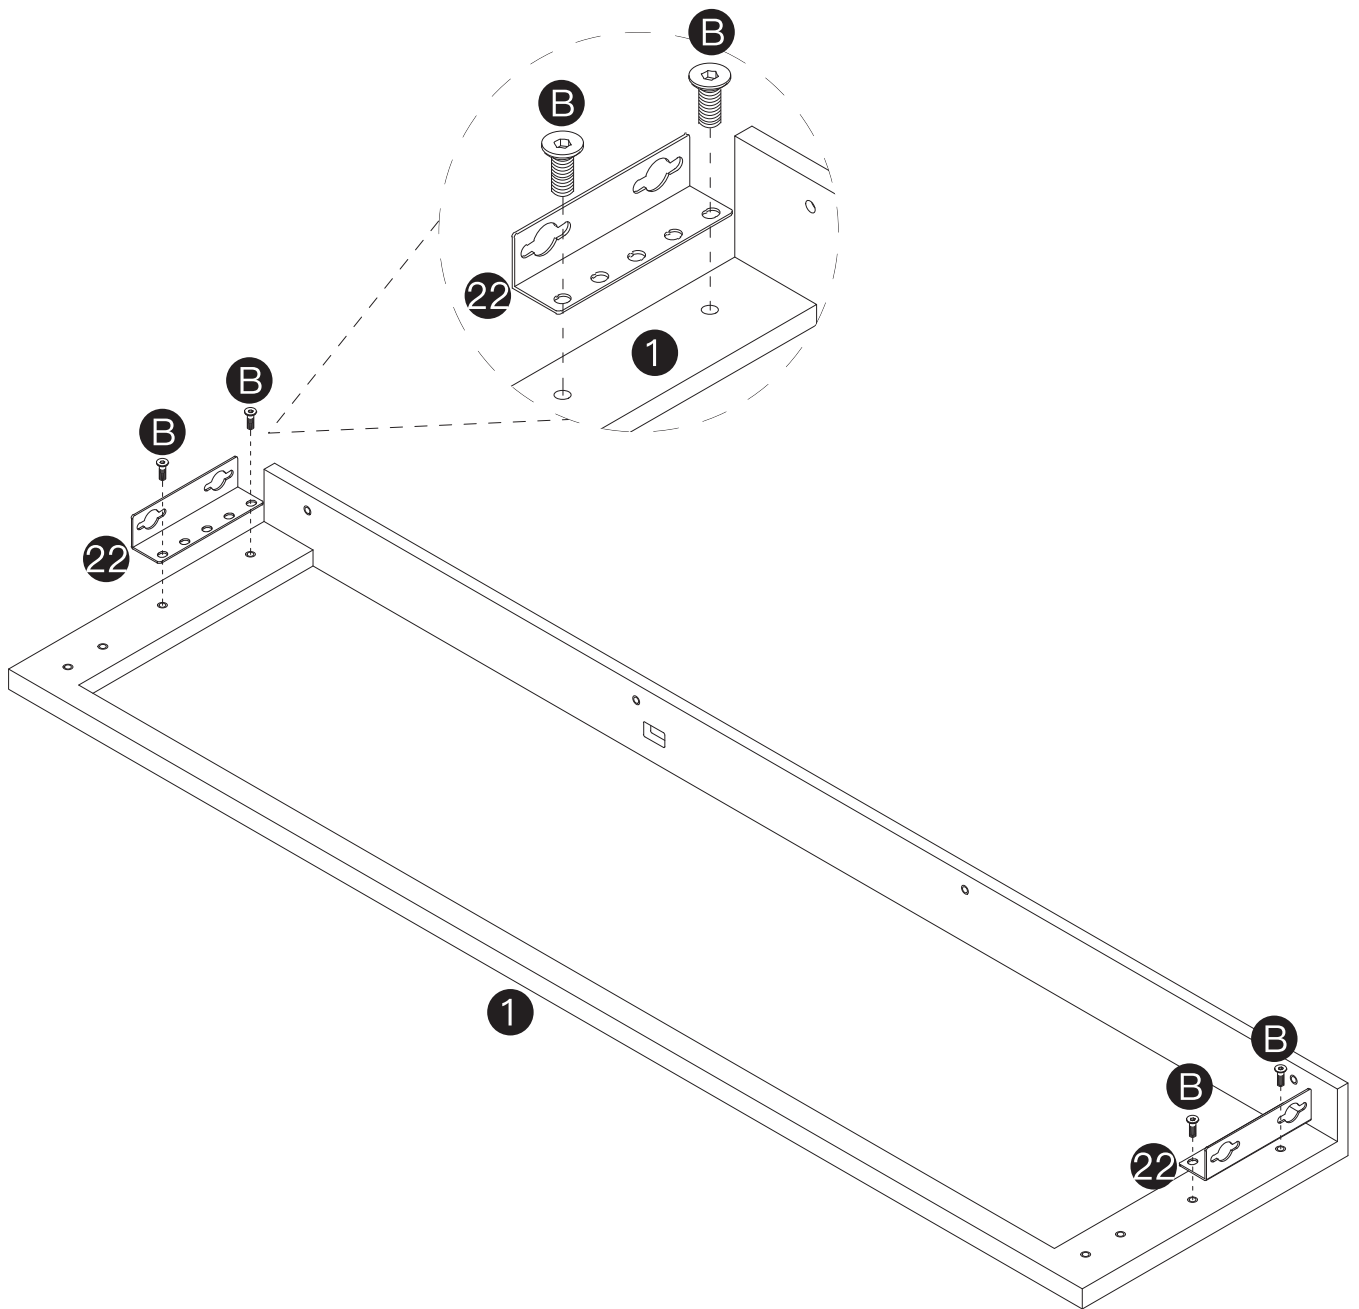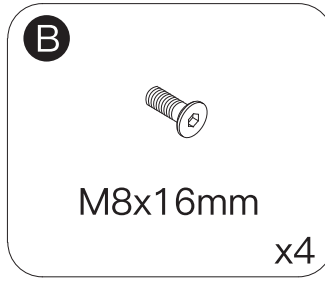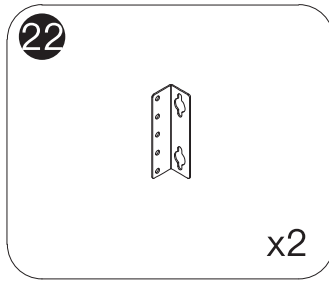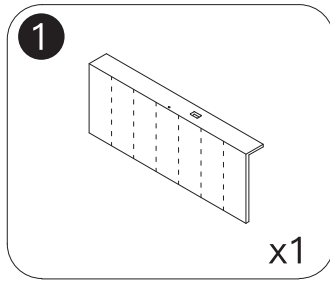


STEP 2

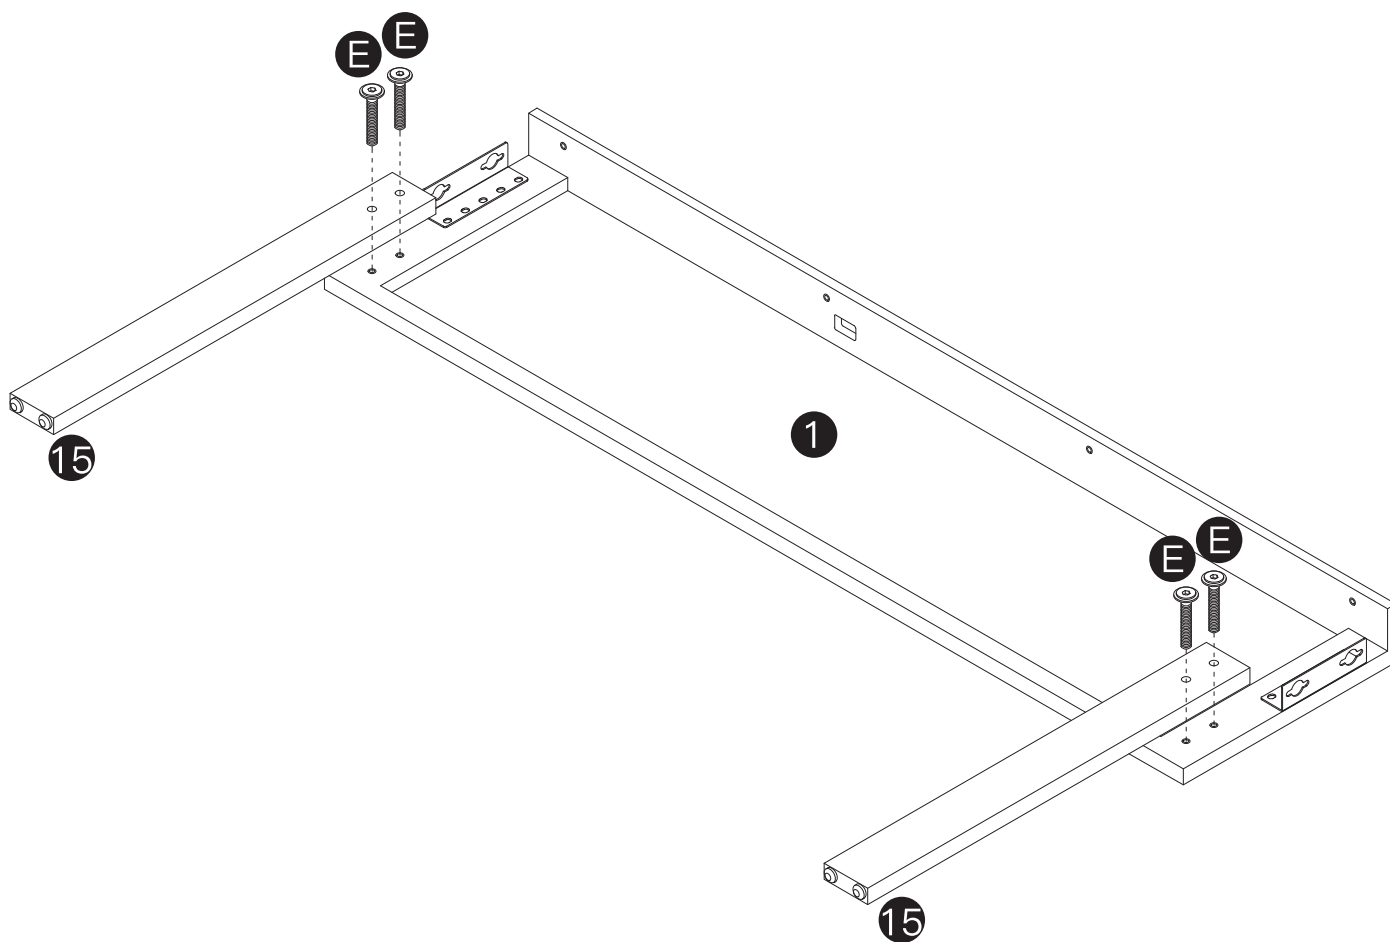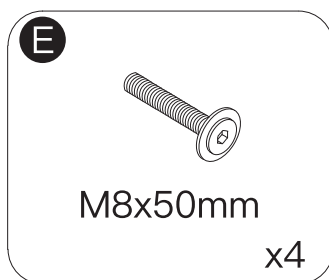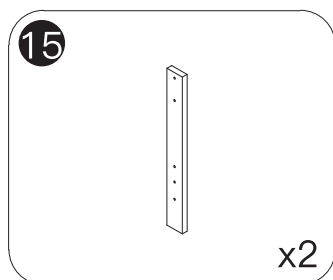

STEP 3

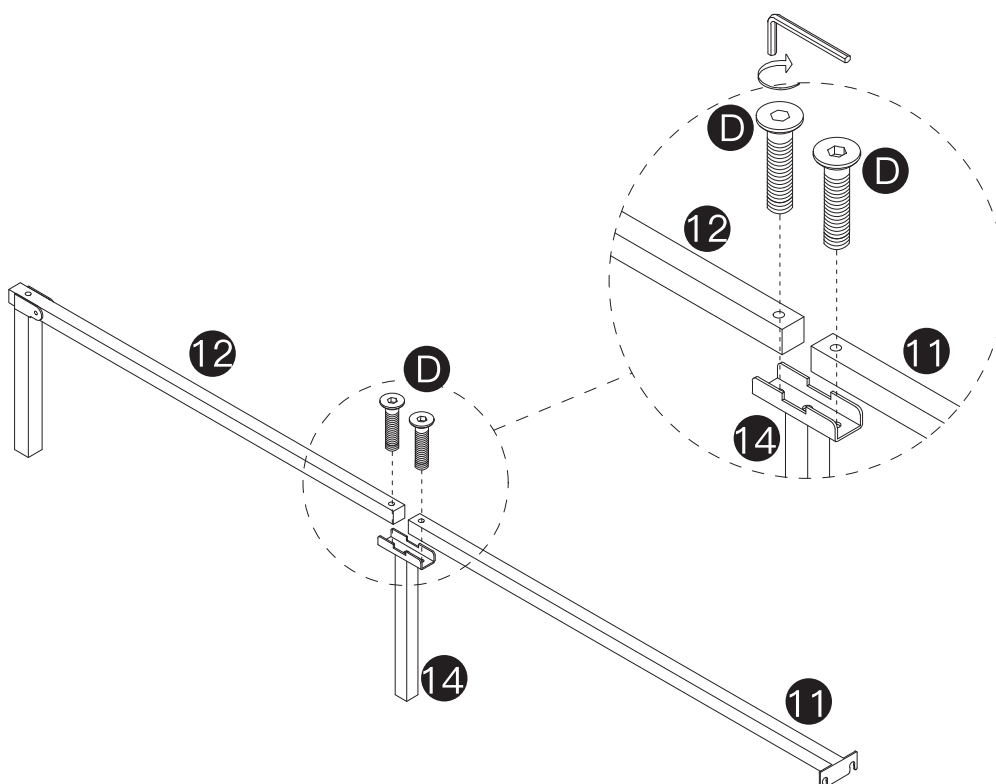
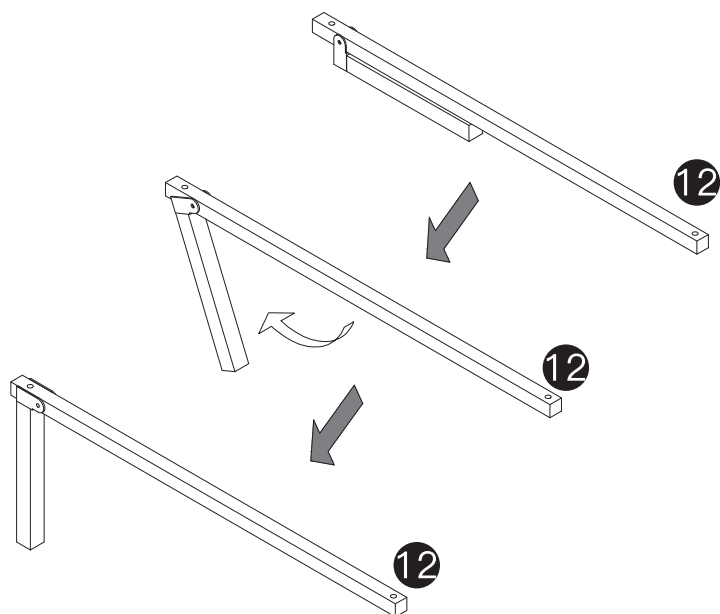
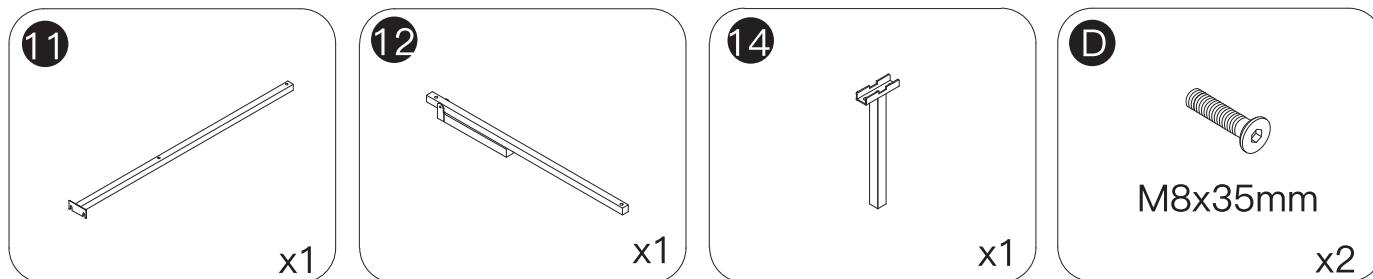


STEP 4

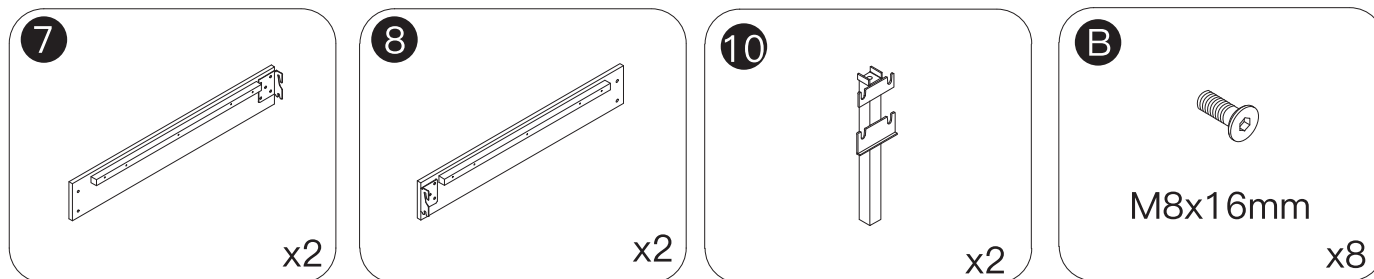




NOTICE:

1. Please screw bolt (part B) in 1/2 at the marked position to make assembly easier.

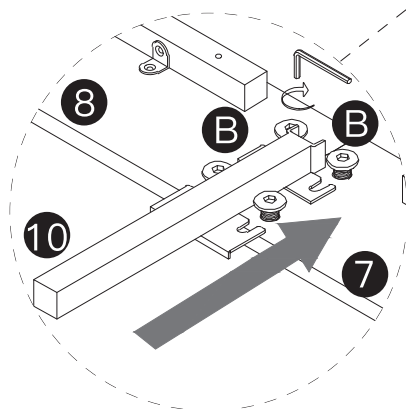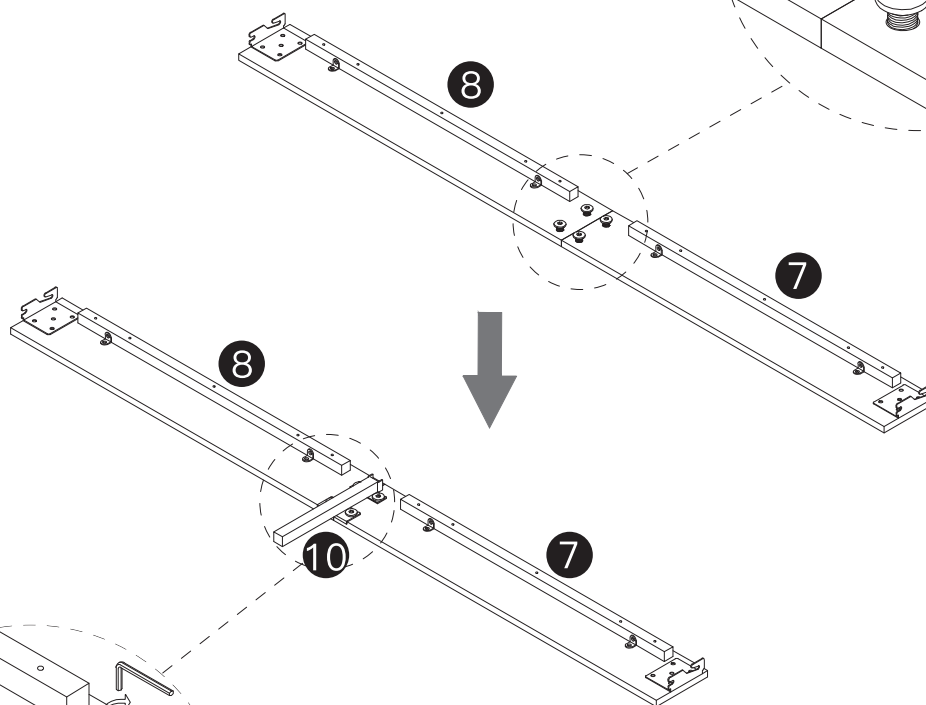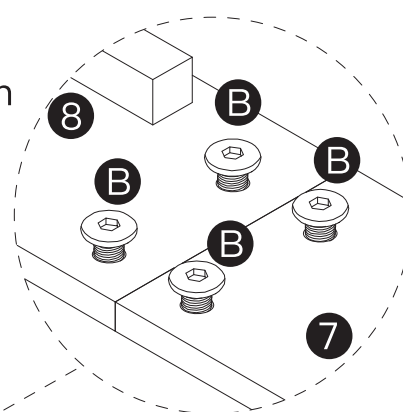


2. Hang part 10 onto part 7 & 8 .
After hanging, tighten part B on part 7 & 8 .

STEP 5

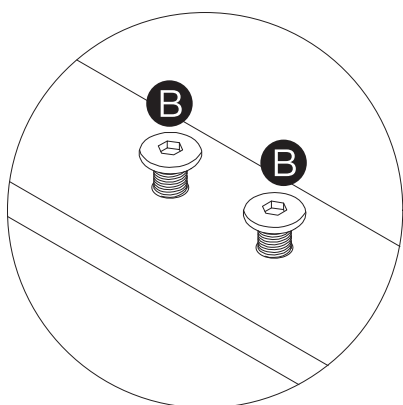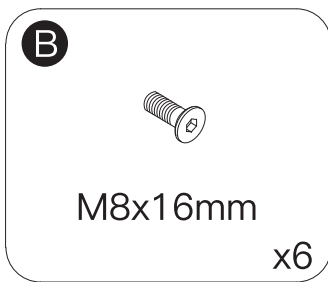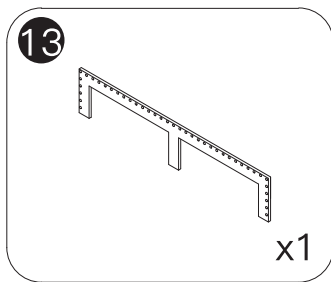

NOTICE:


Please screw bolt (part **B**) in 1/2 at the marked position to make assembly easier.

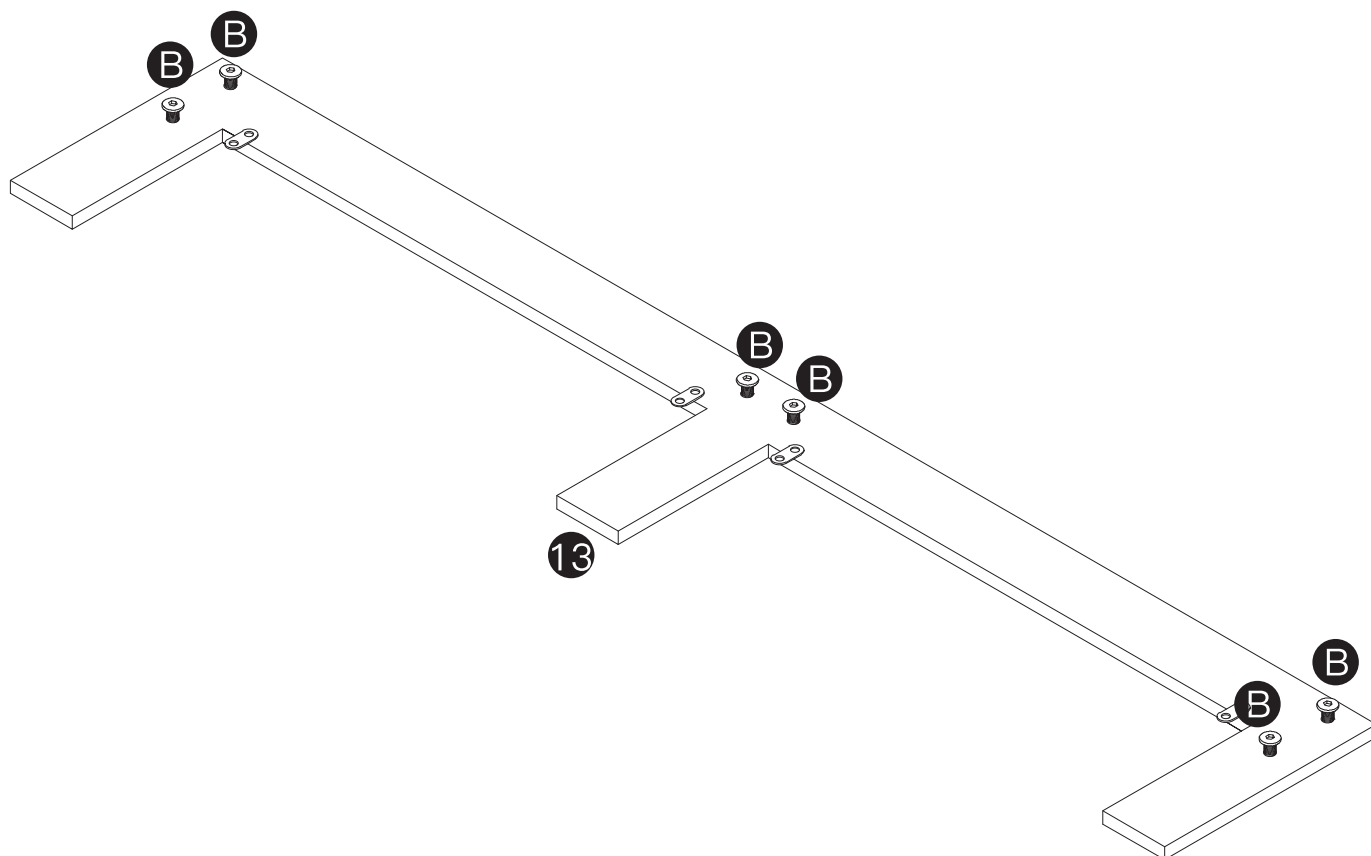

STEP 6

NOTICE:

Hang part 7 & 8 onto part 13. After hanging, tighten part B on part 13.

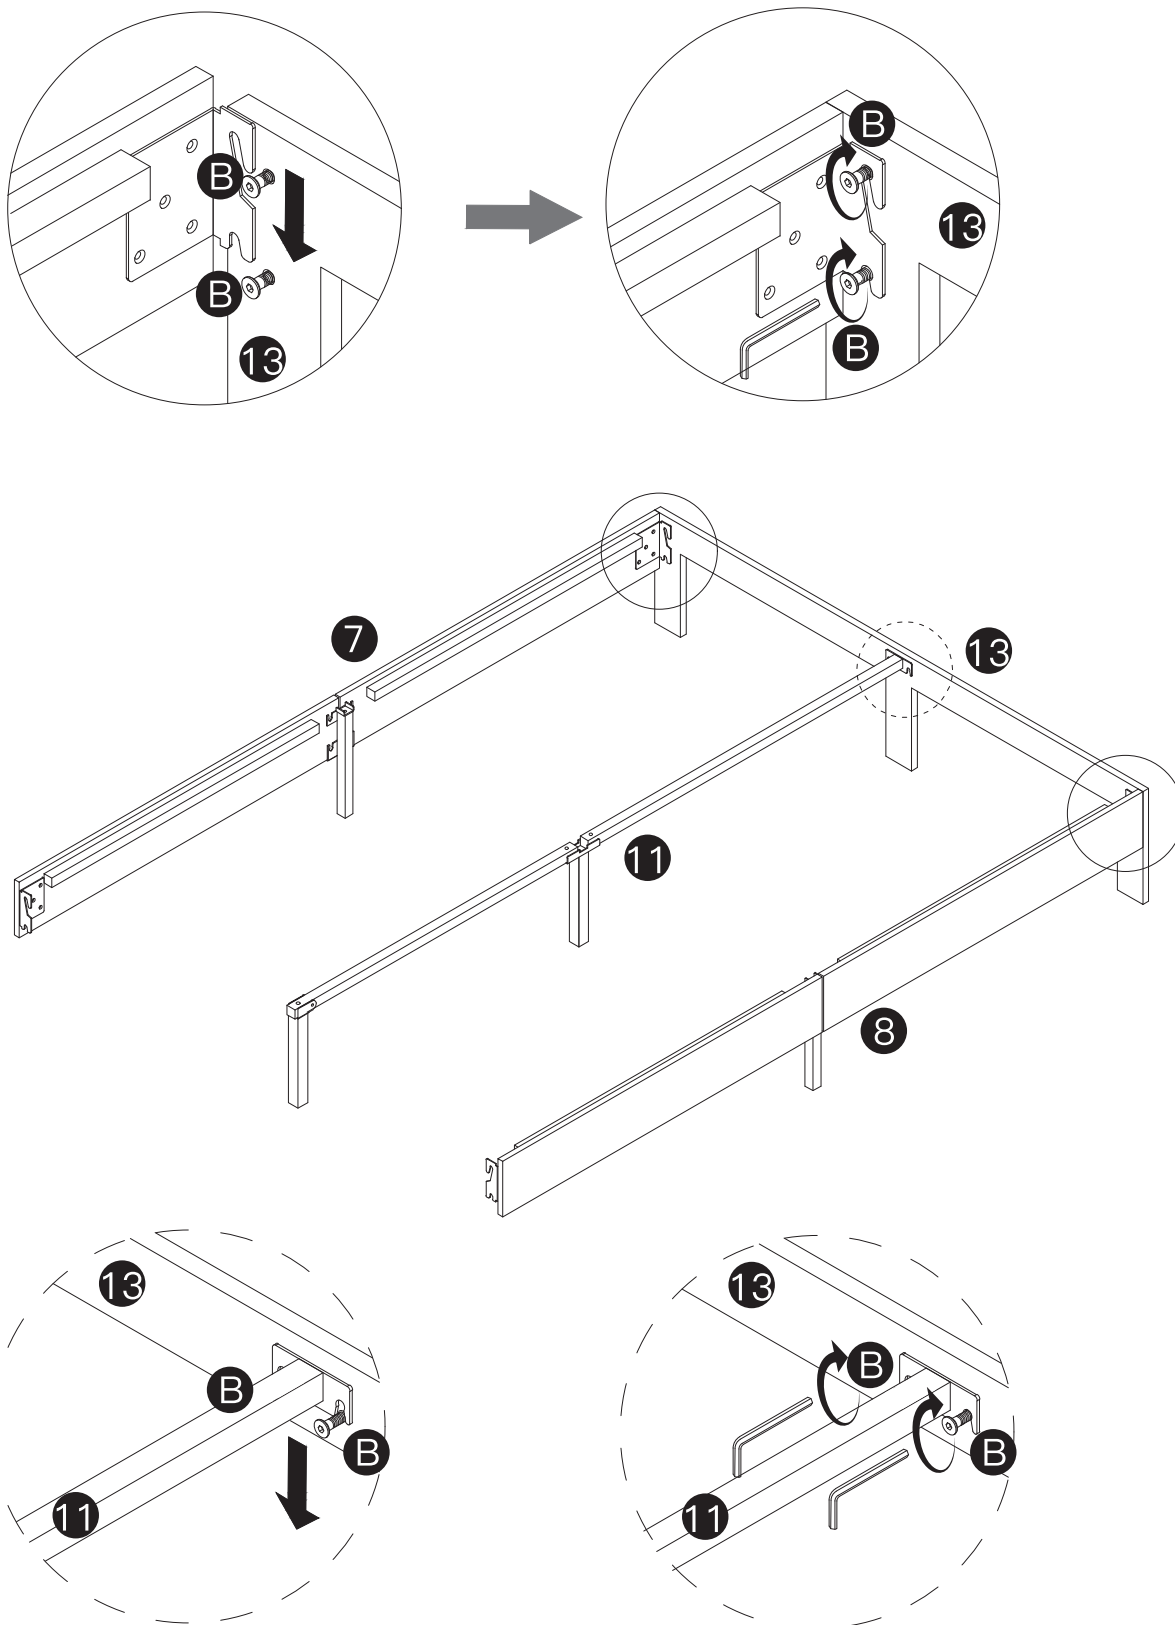

NOTICE:

Hang part 11 onto part 13. After hanging, tighten part B on part 13.



STEP 7

C



M8x25mm


x4

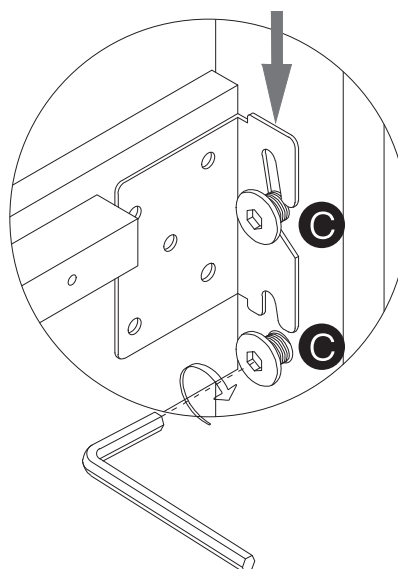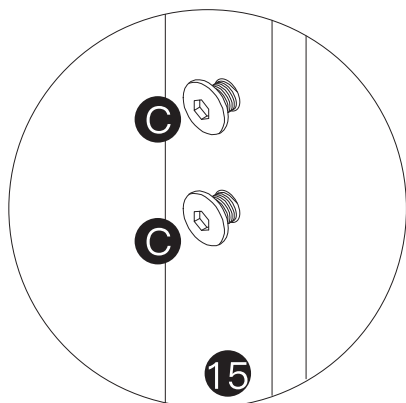








NOTICE:

1. Please screw bolt (part **C**) in 1/2 at the marked position to make assembly easier.

2. Hang part **7** & **8** onto part **15** .
After hanging, tighten part **C** on part **15** .

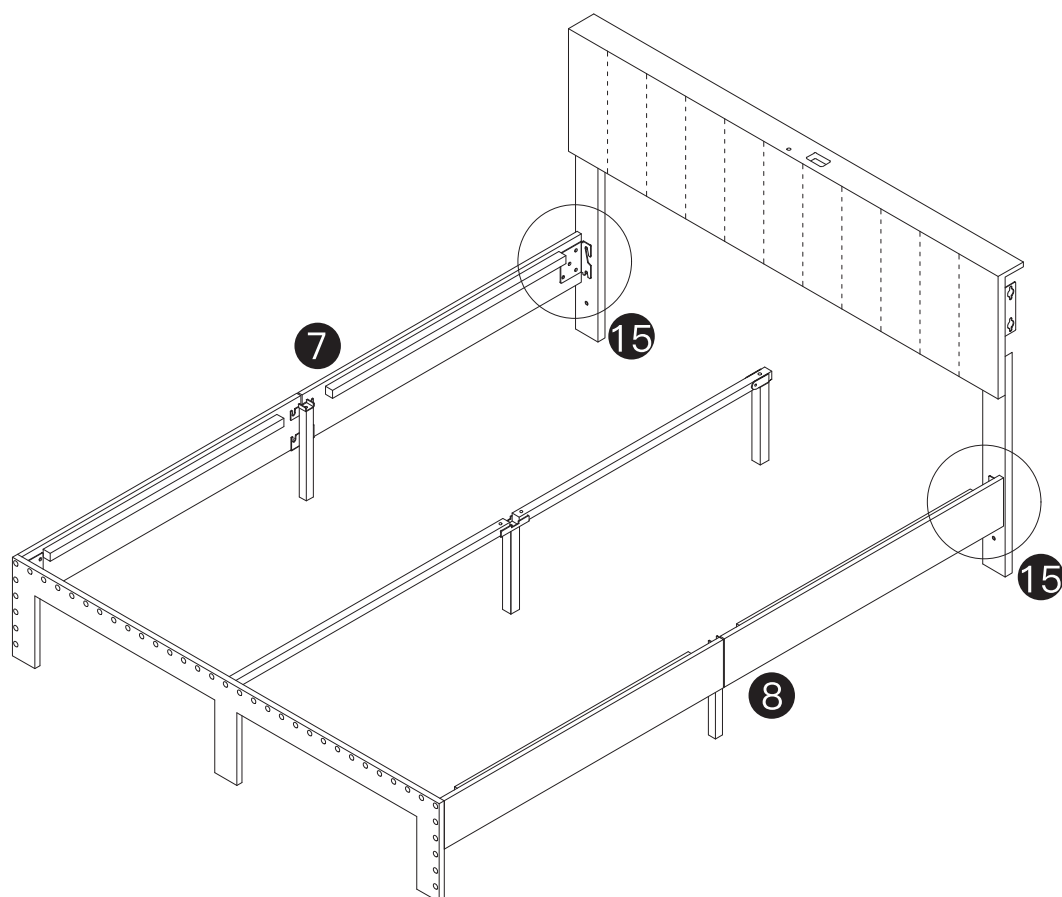

STEP 8

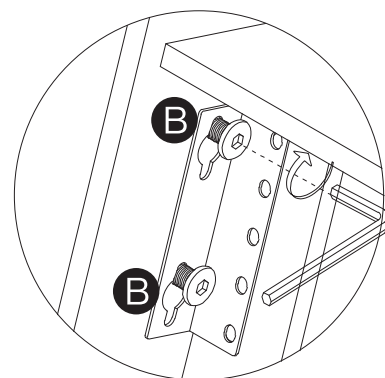
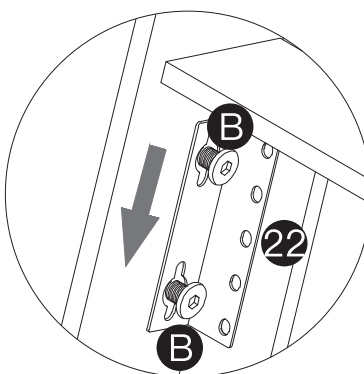
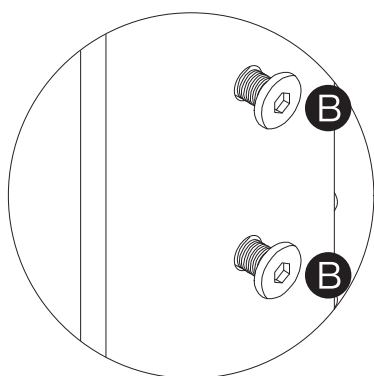
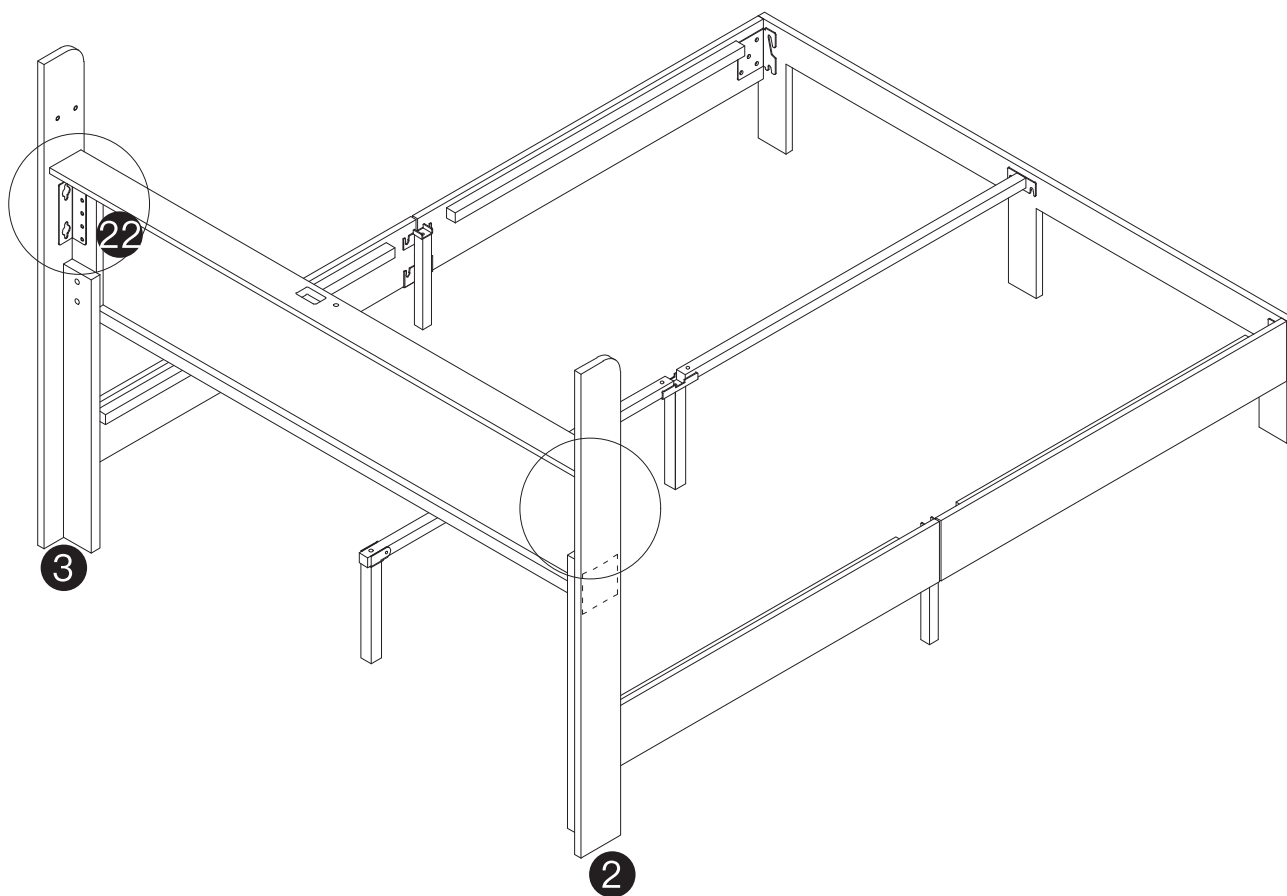
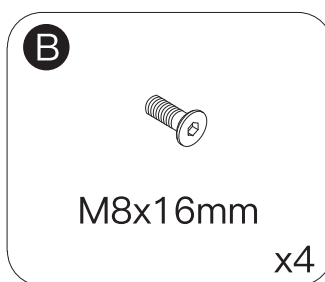
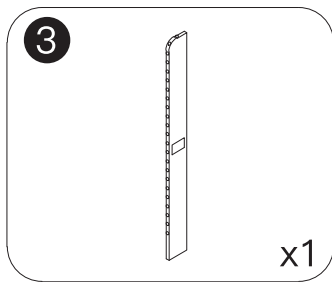
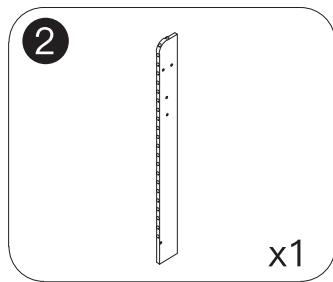


1. Please screw bolt (part **B**) in 1/2 at the marked position to make assembly easier.

2. Hang part **B** onto part **22**.

3. After hanging, tighten part **B**.



STEP 9

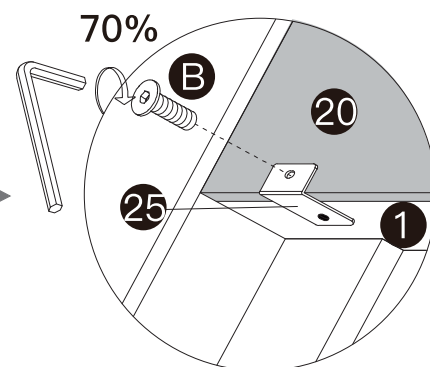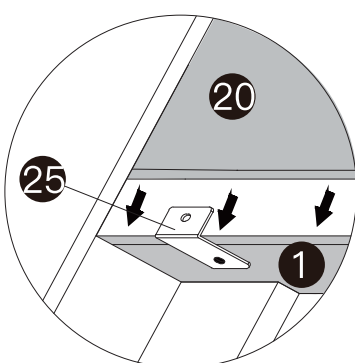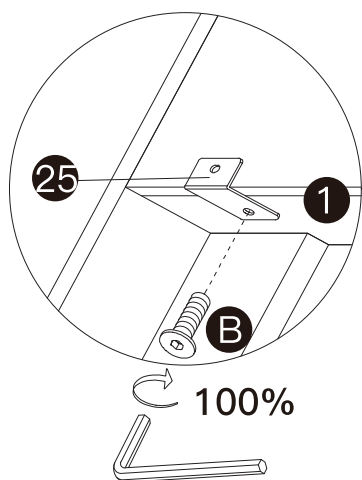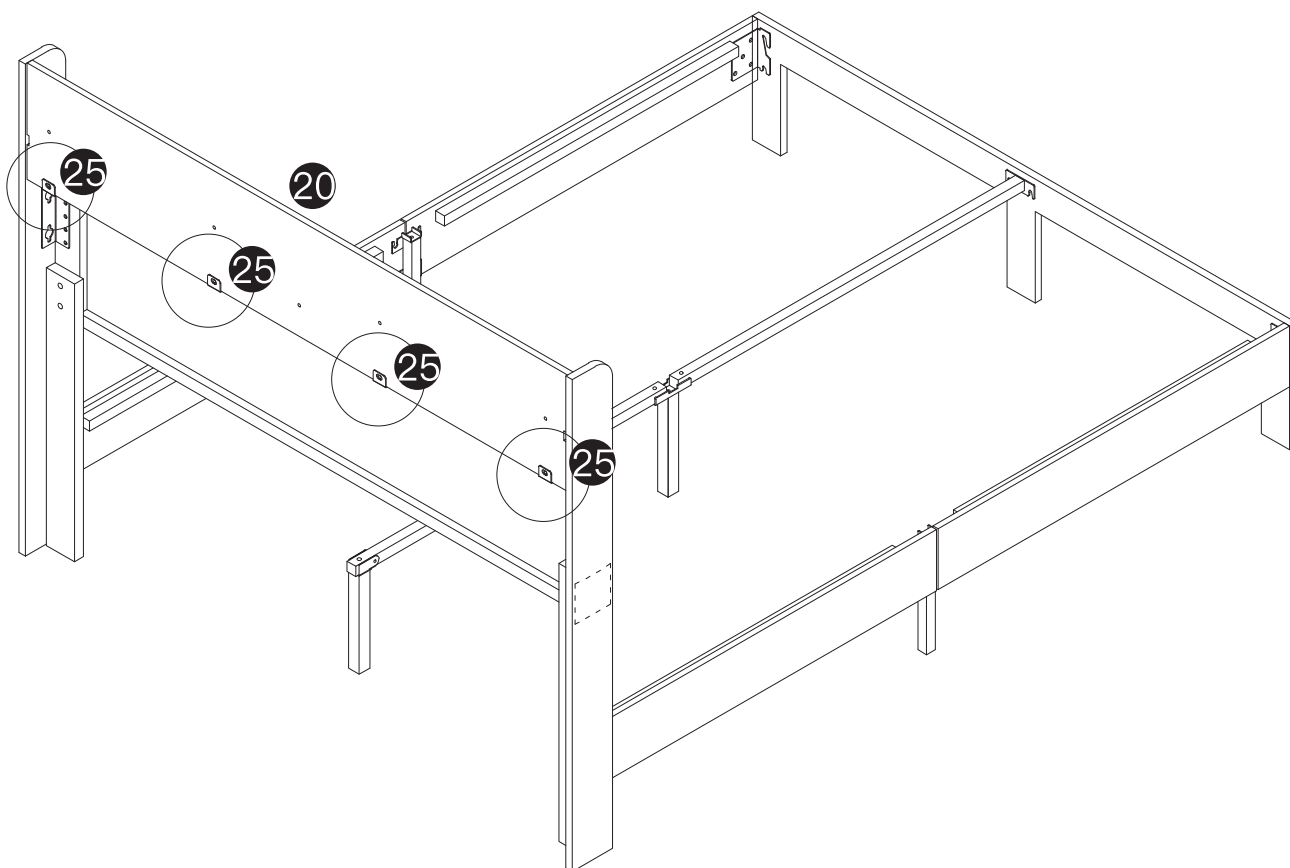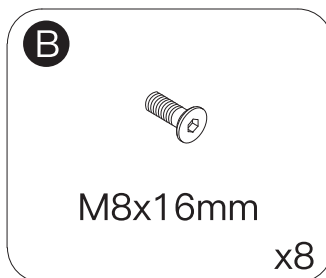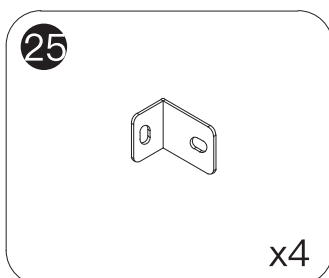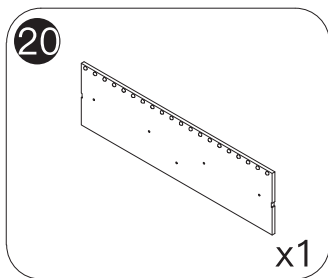







NOTICE:

Insert part 20 into the gap between part 1 & 25 before installing screw B , and fully tighten screw B after part 19 is installed.



STEP 10

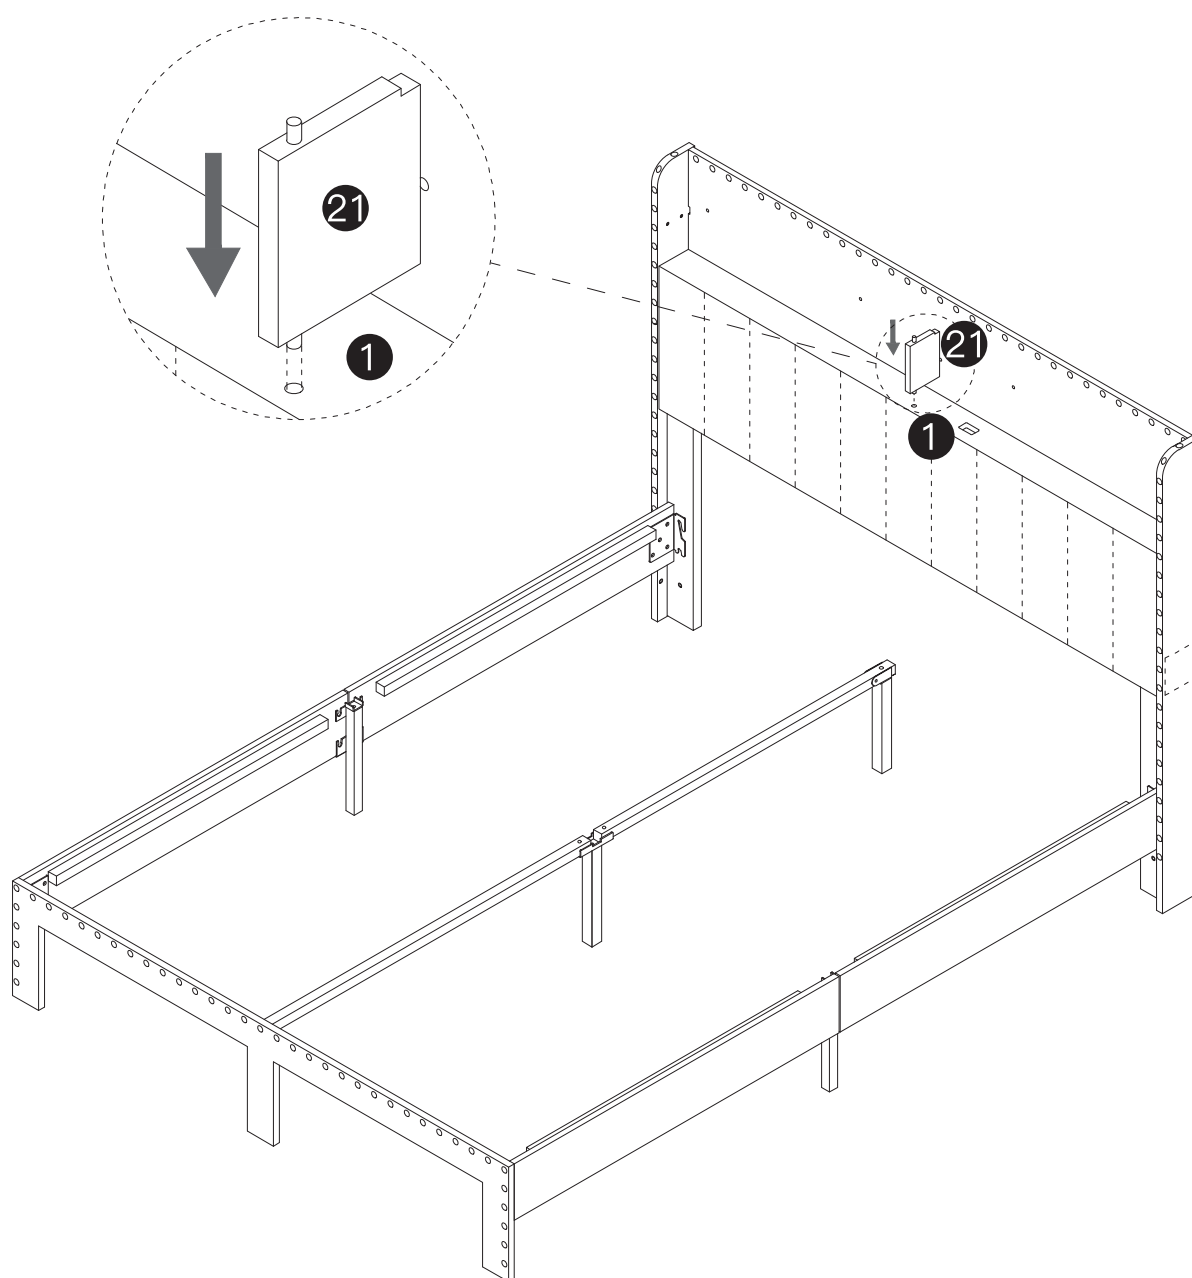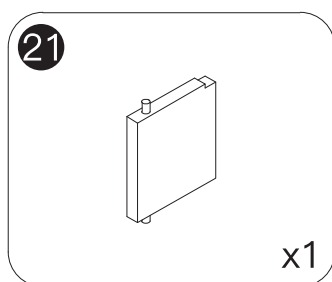









STEP 11

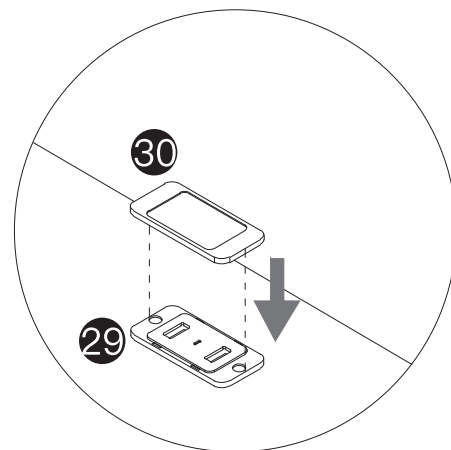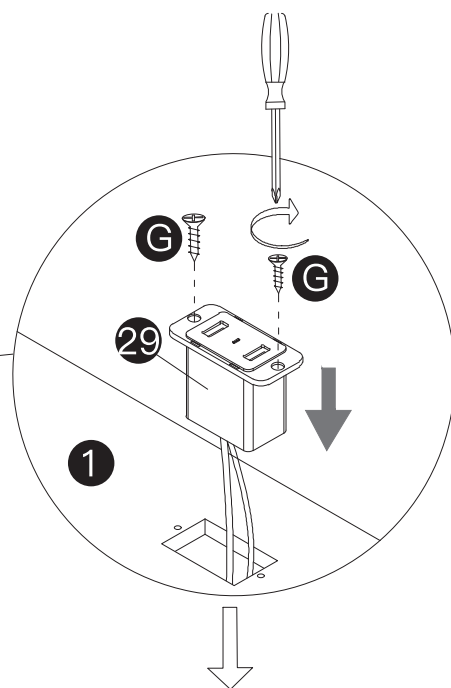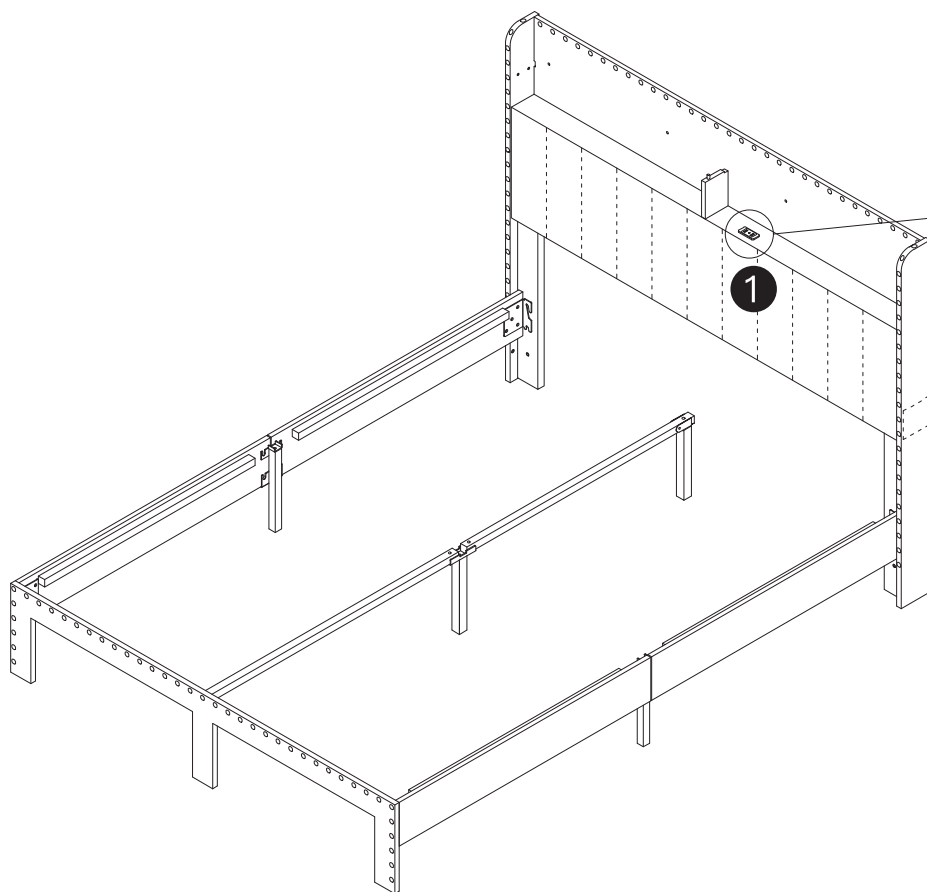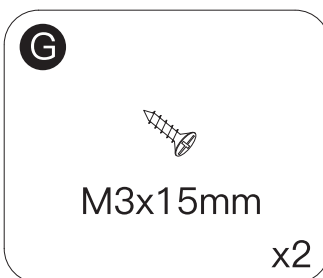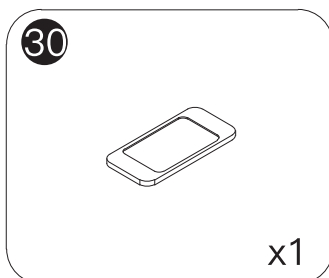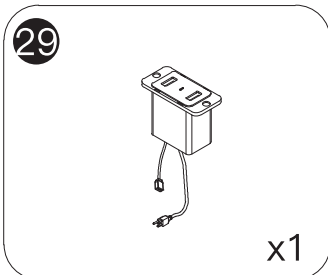


STEP 12

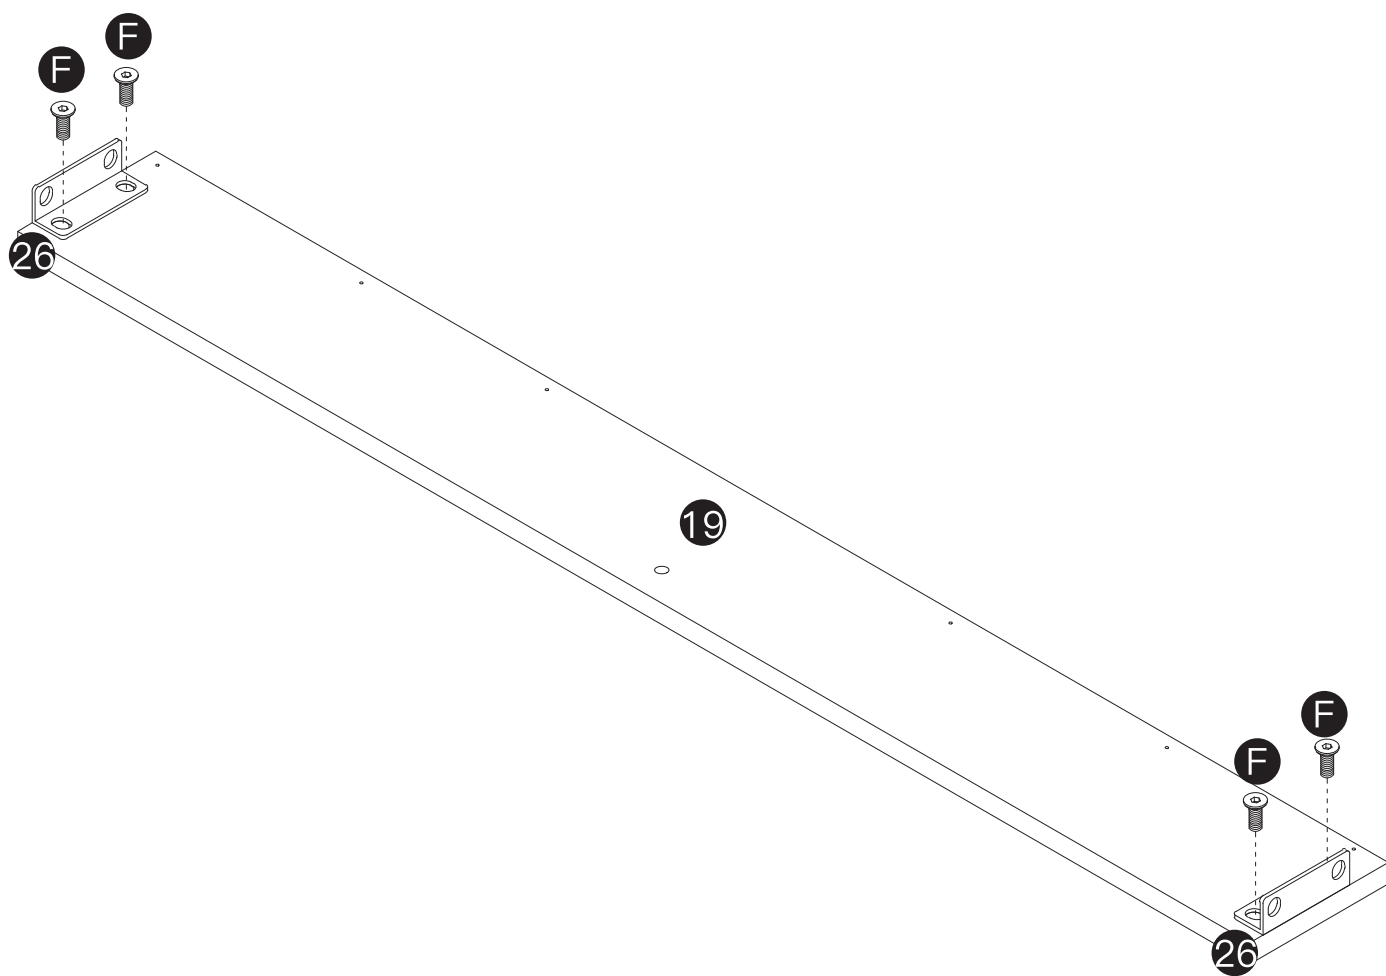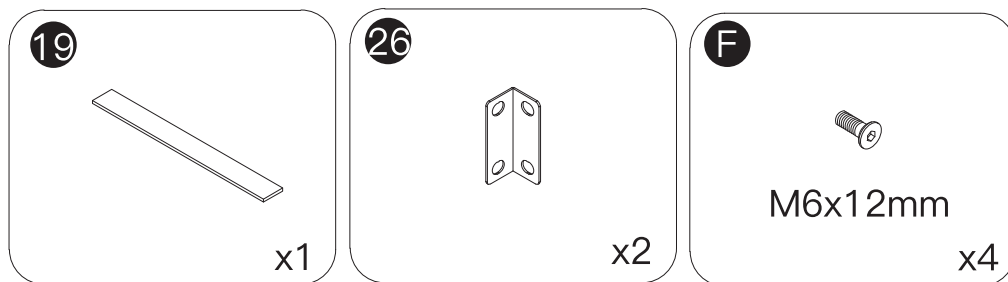

STEP 13

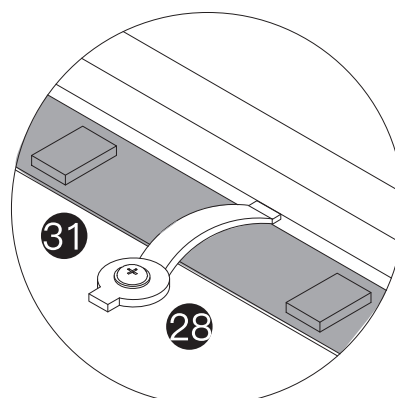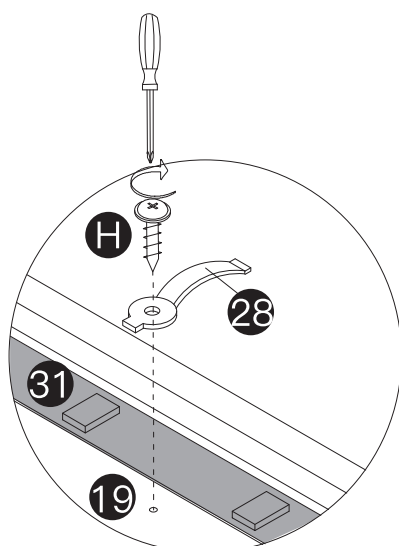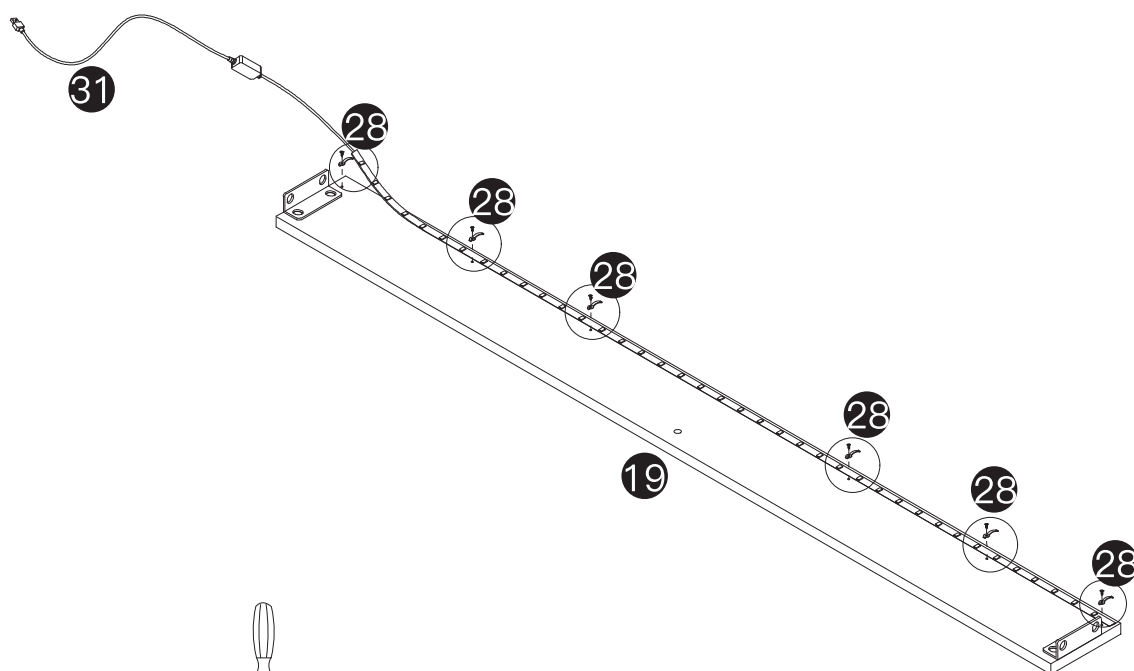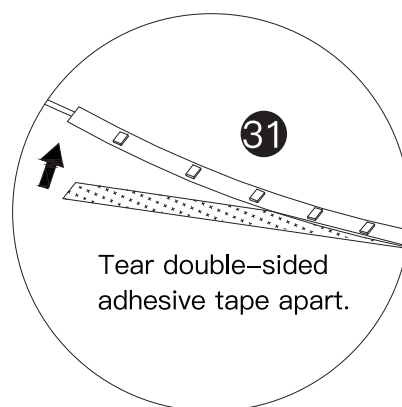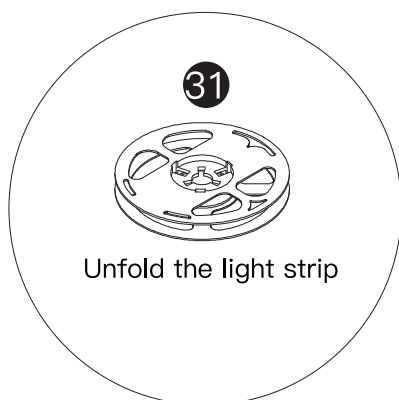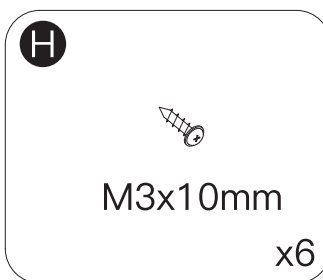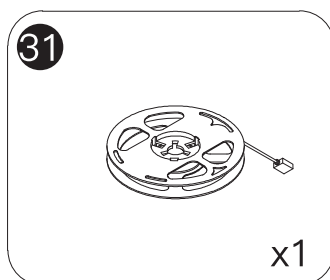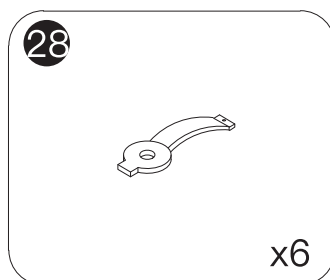


STEP 14

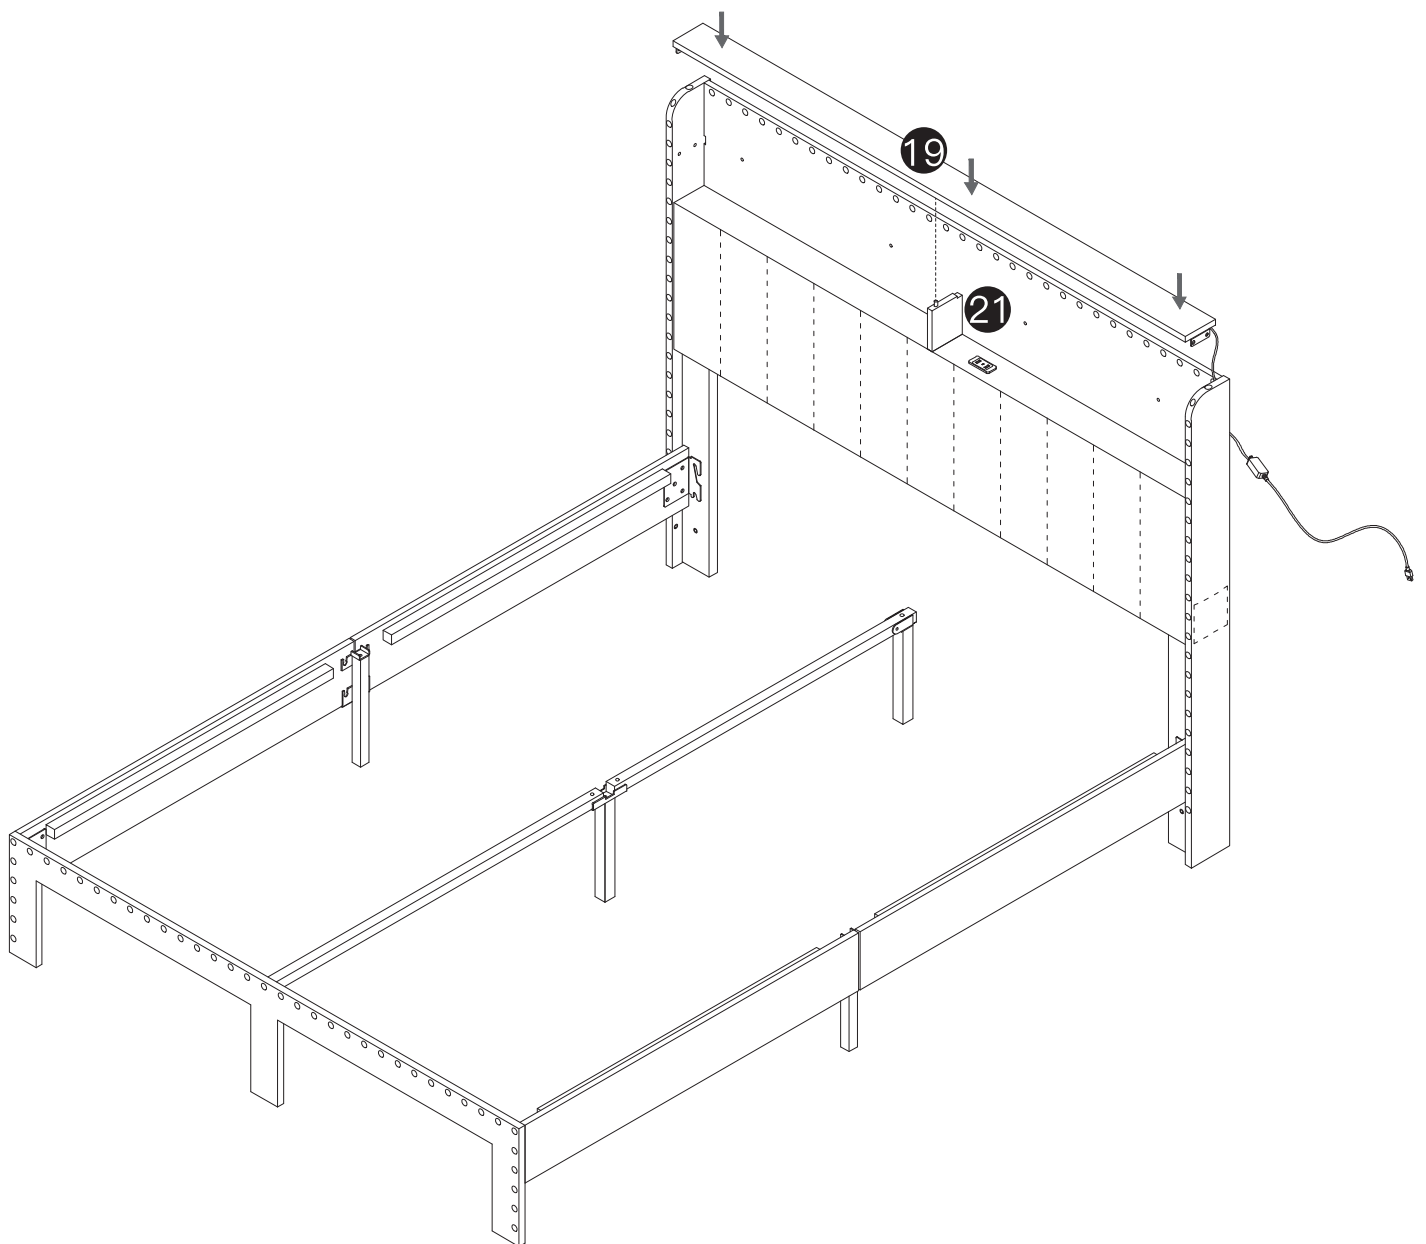

STEP 15




A



M6x50mm


x5

The wire for the
neon light leads
out from this gap

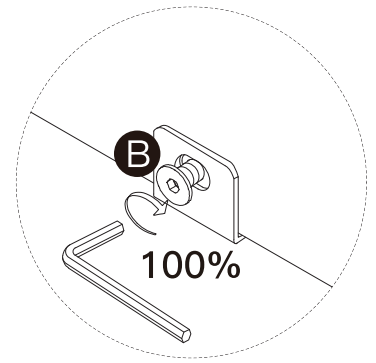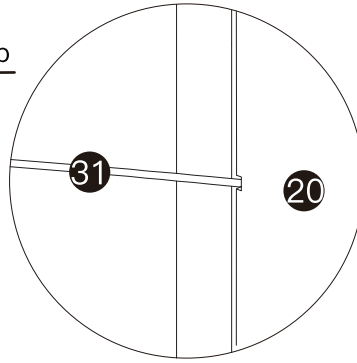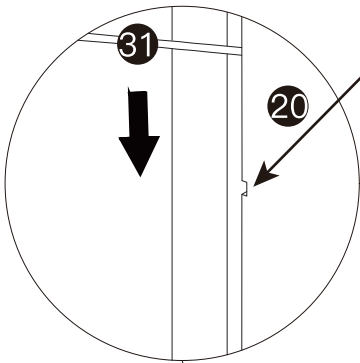


NOTICE:

First, clip the neon light lead into the groove on part 20 that can be touched by hand, and then fully tighten screws A & B.

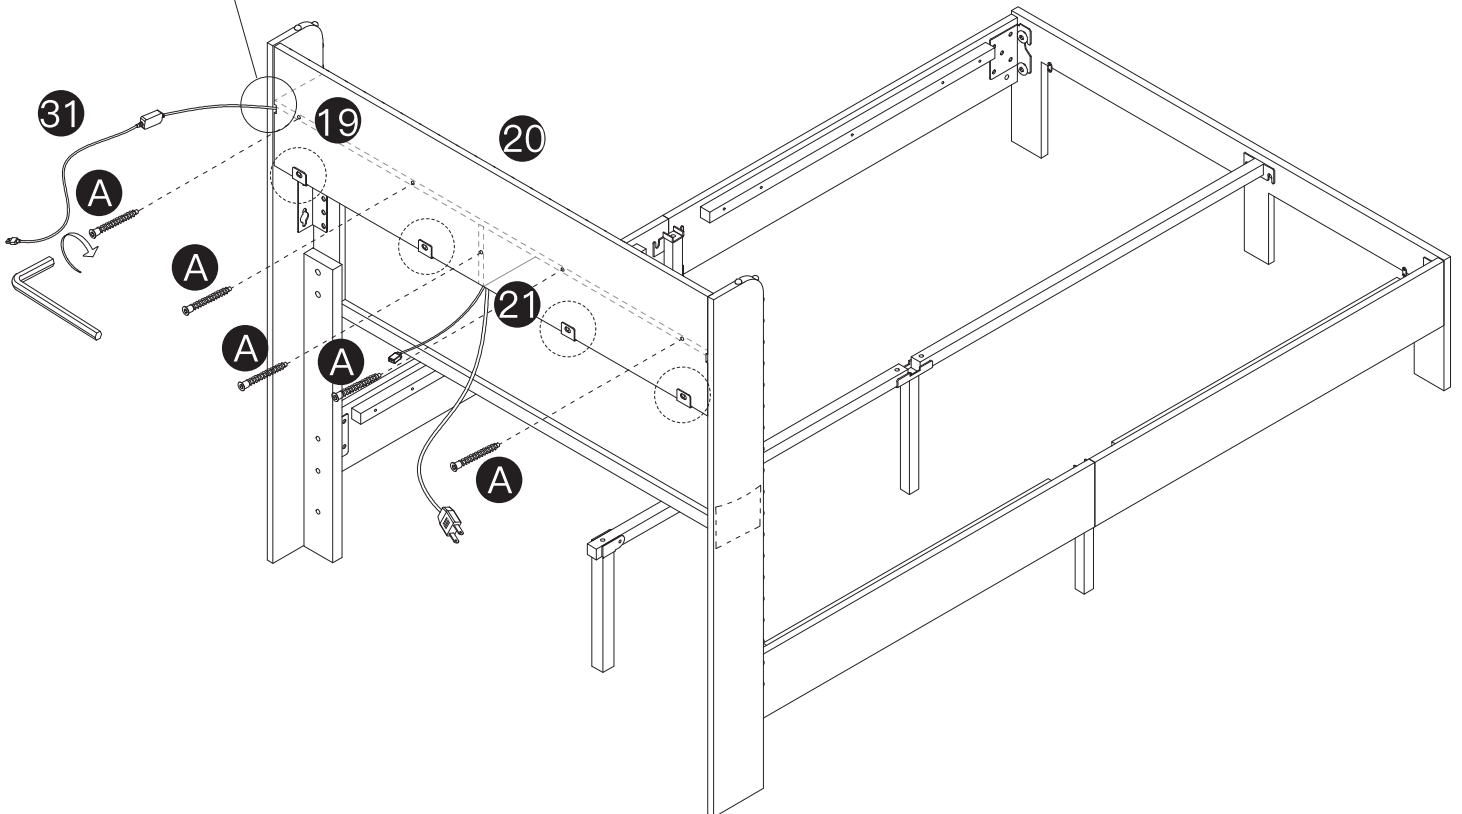

STEP 16

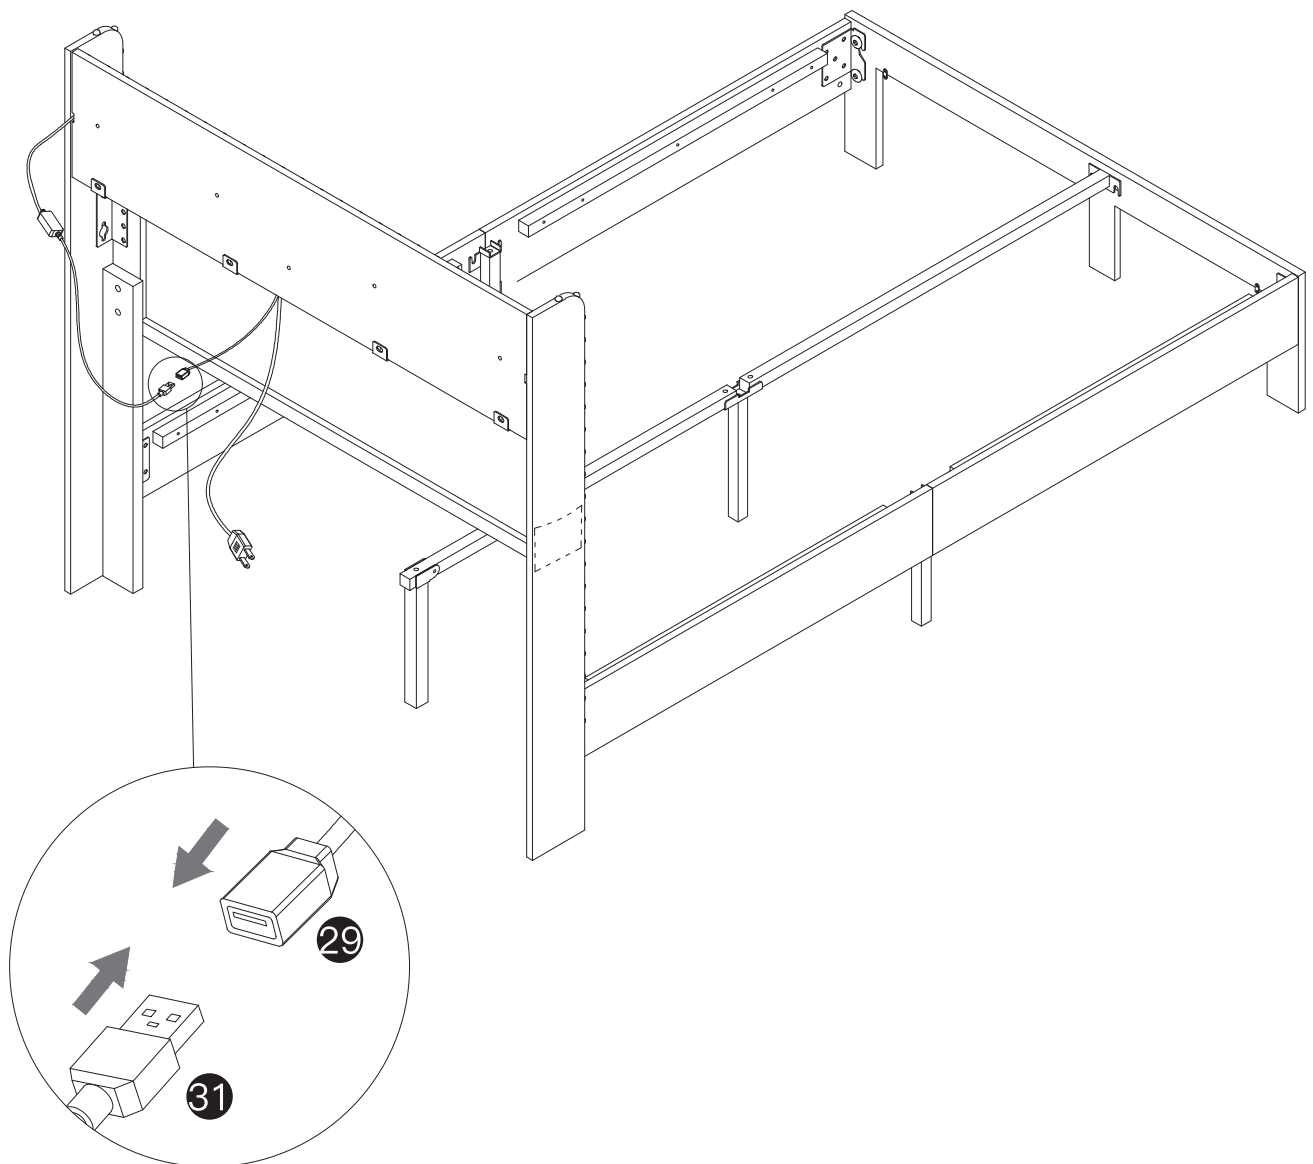


STEP 17

B



M8x16mm

x4

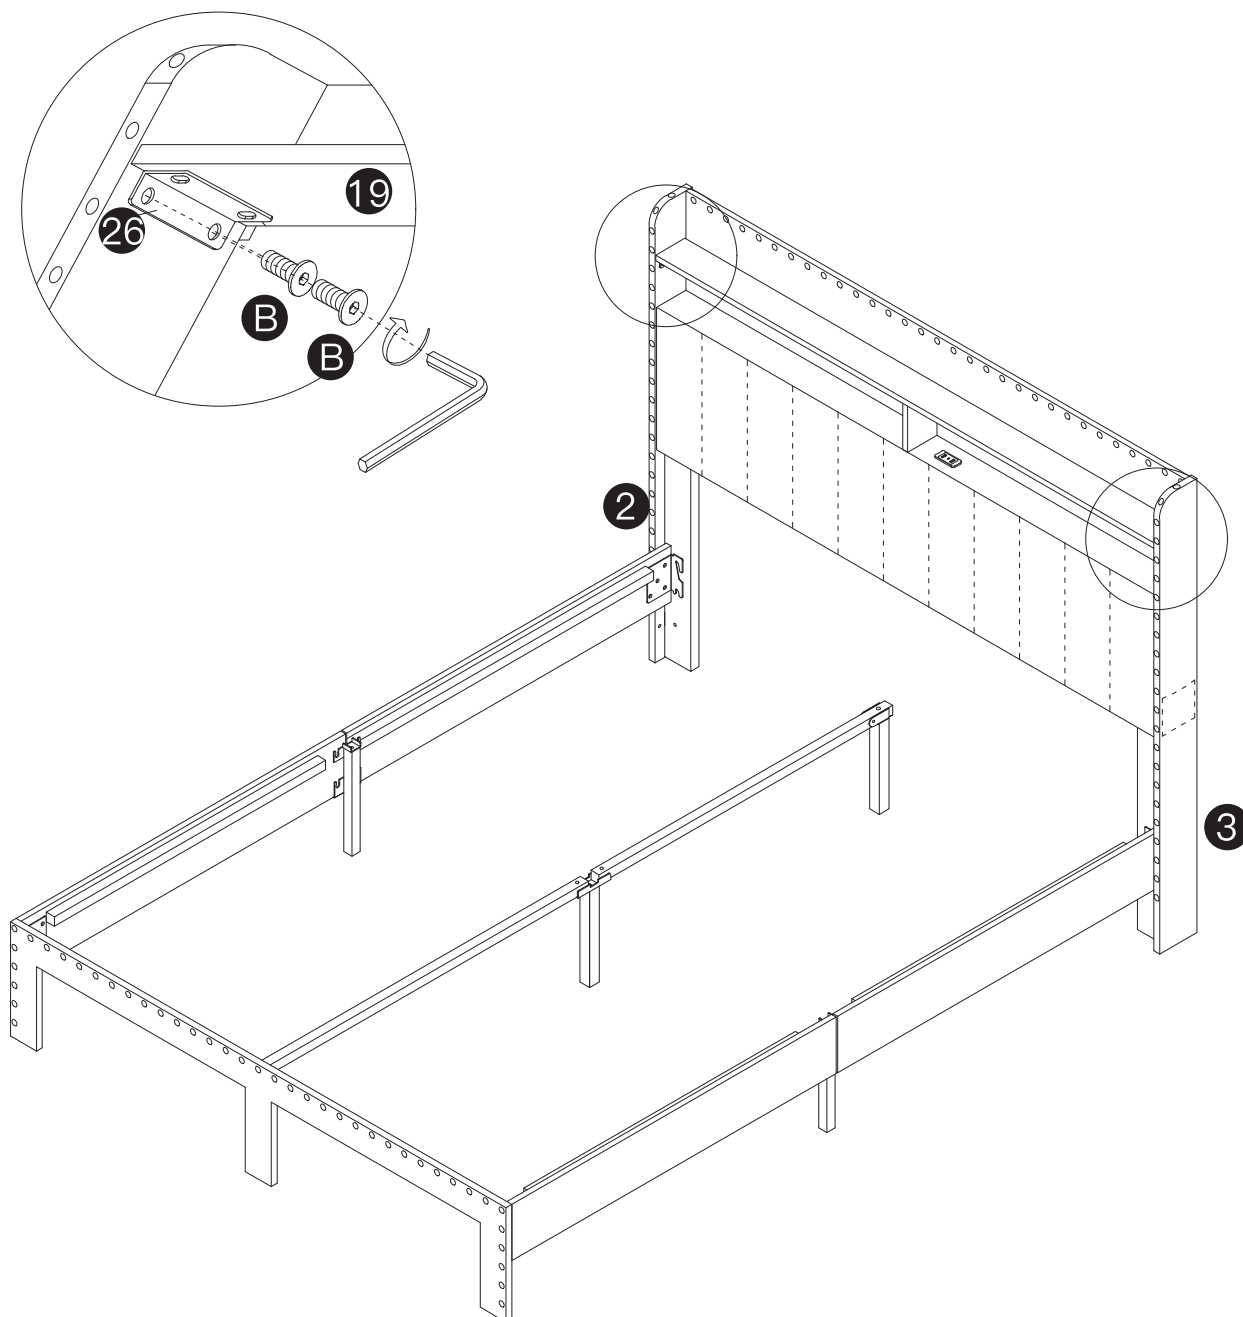

STEP 18

25




x2

B







M8x16mm





x4

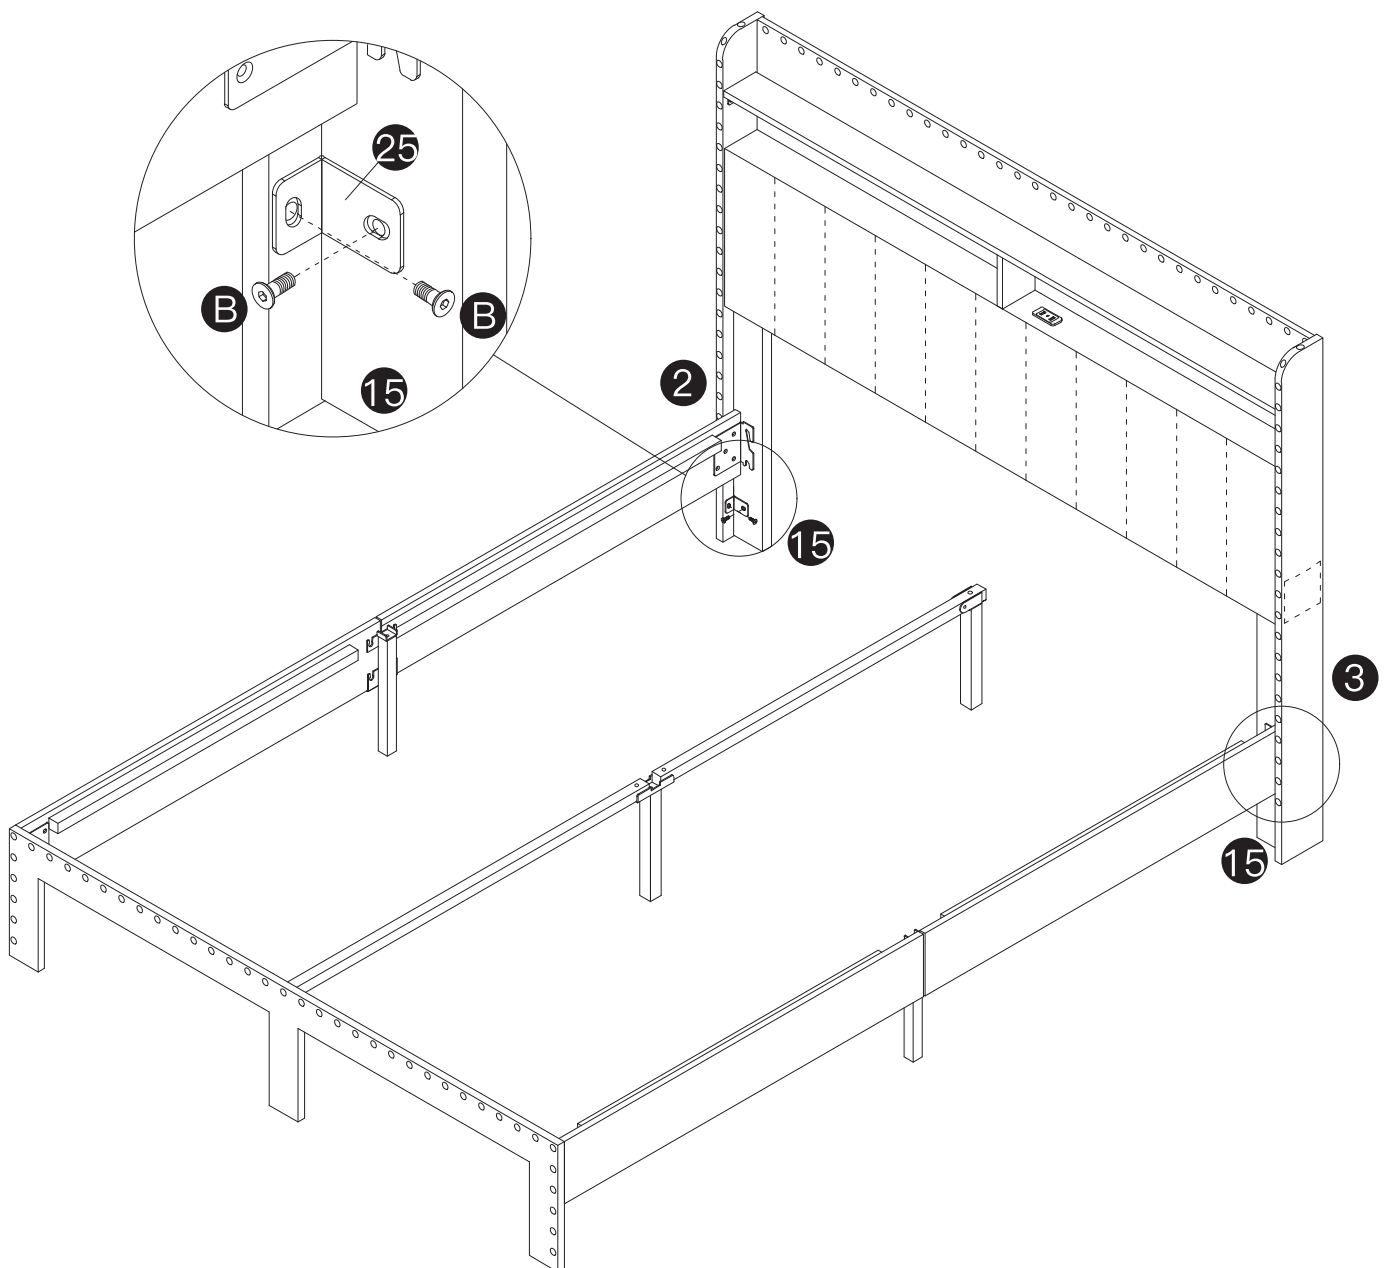

STEP 19




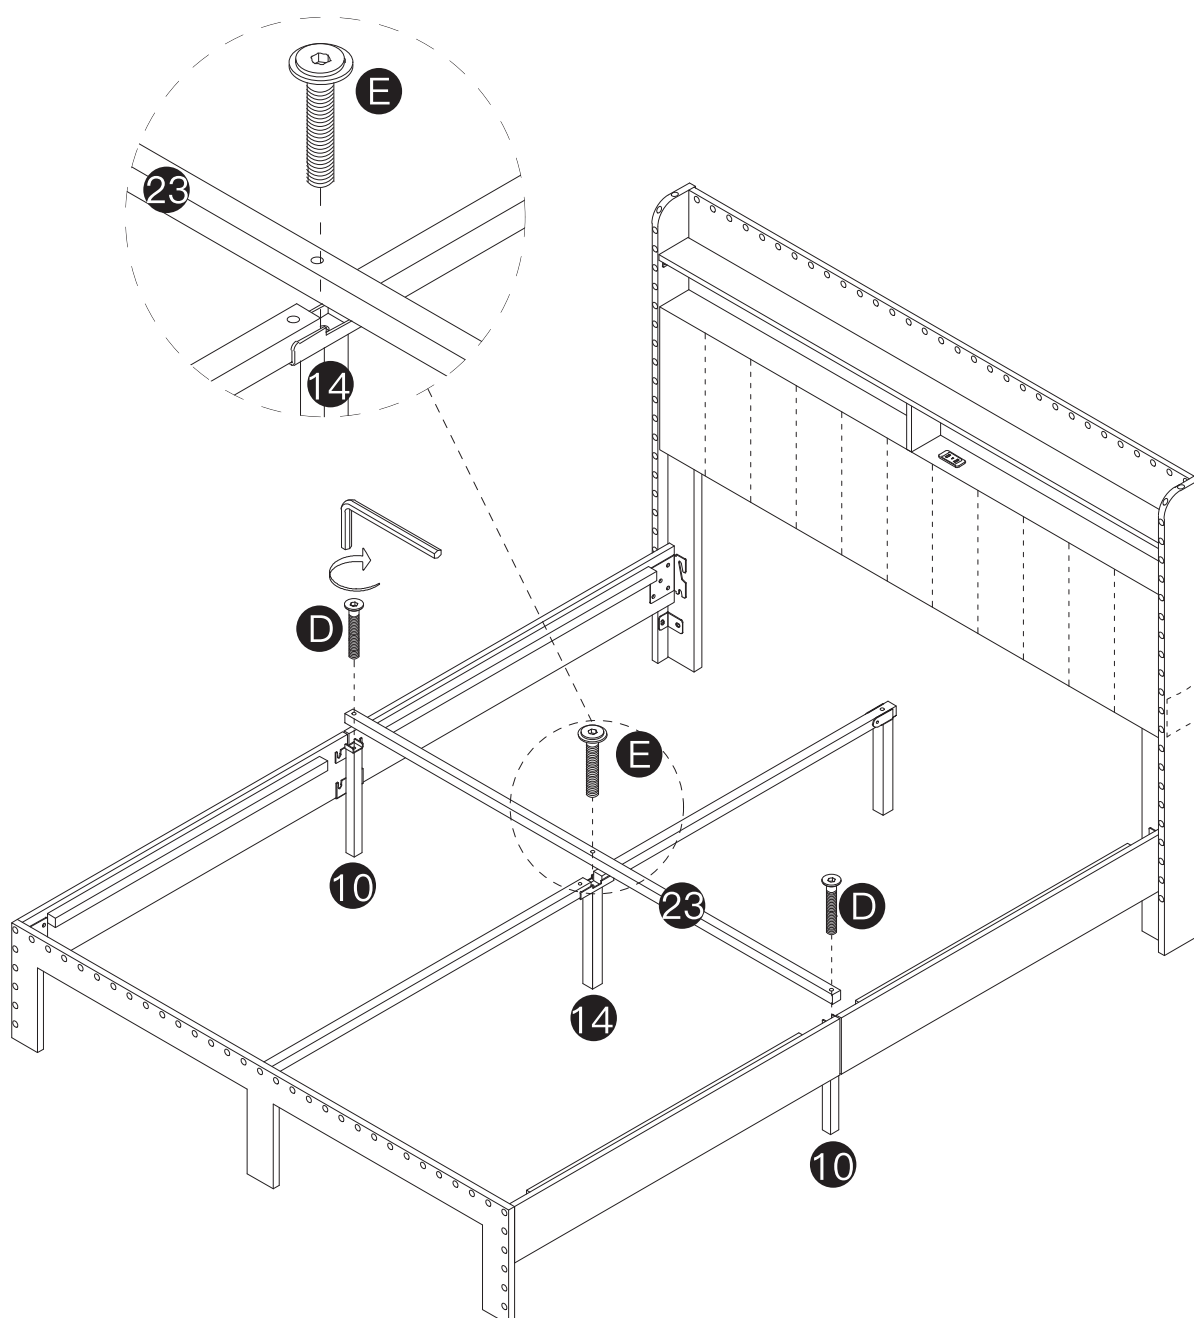
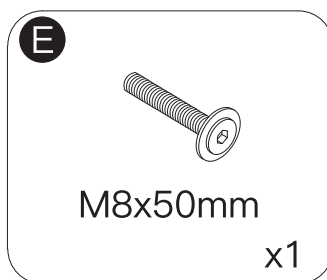
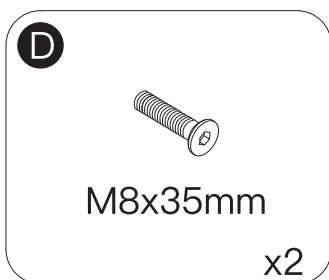
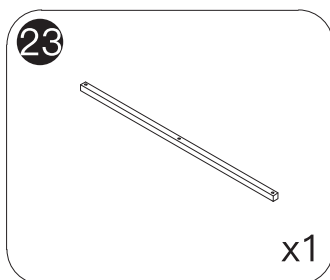


STEP 20

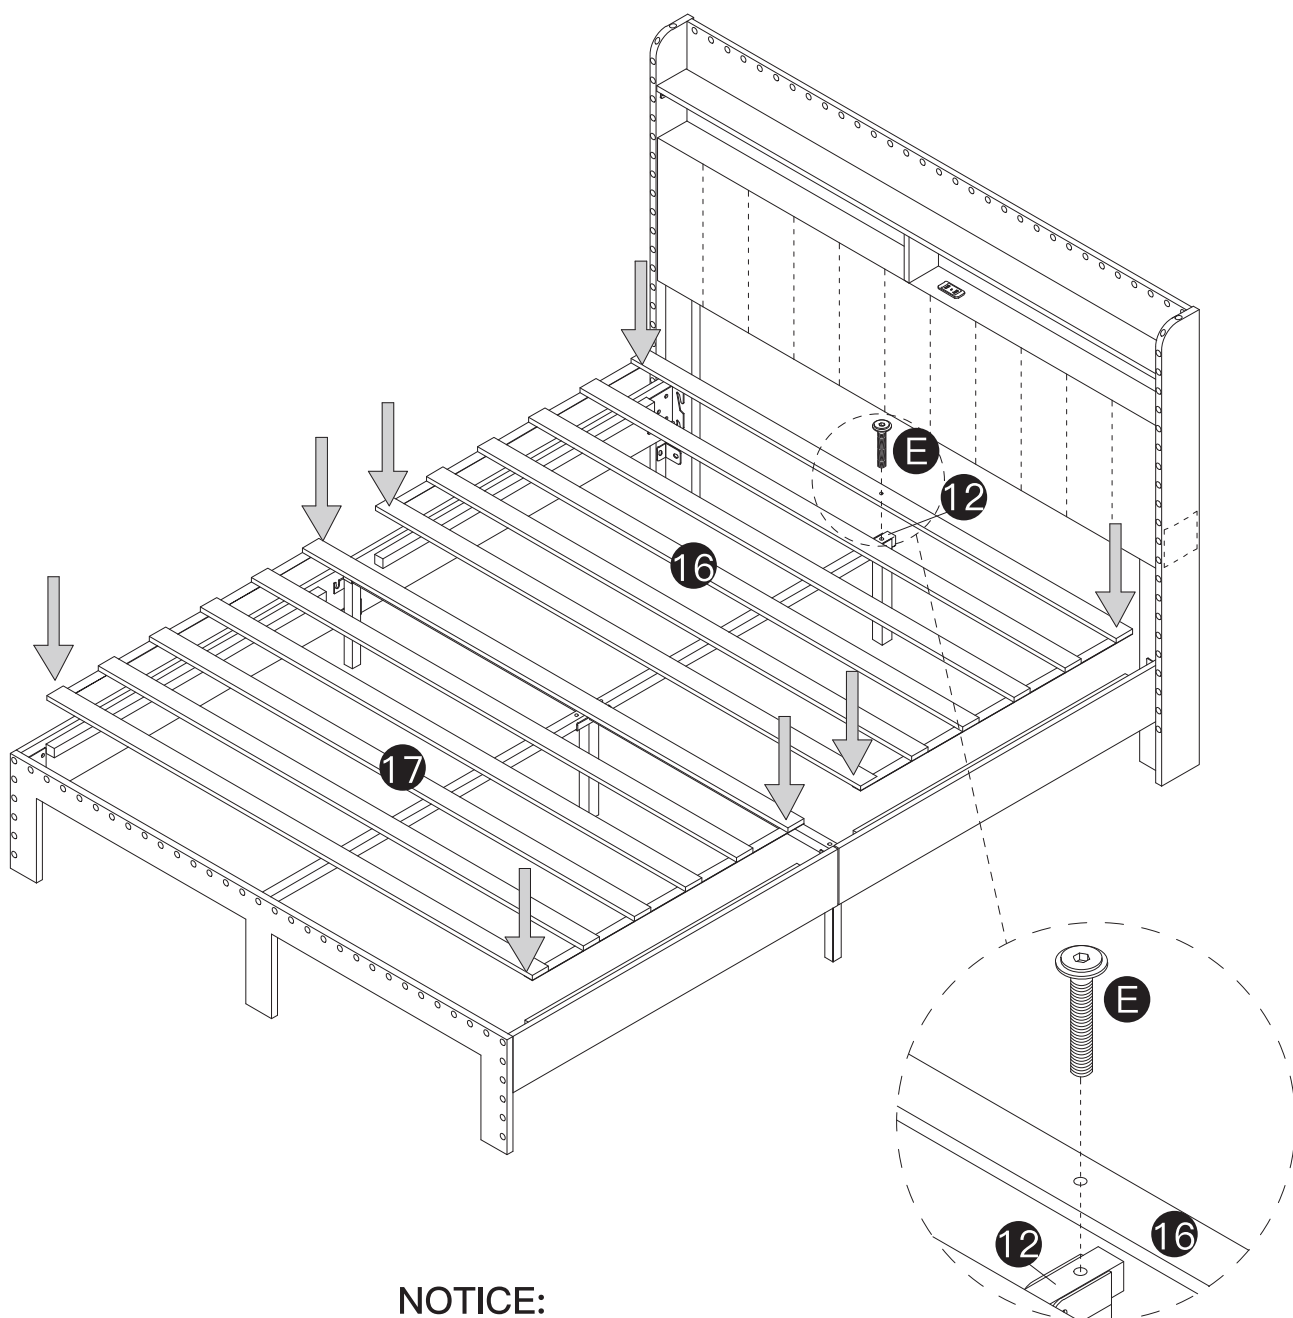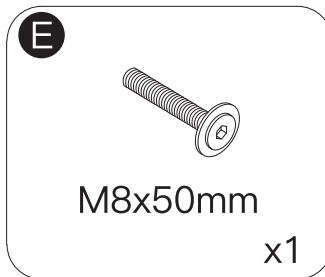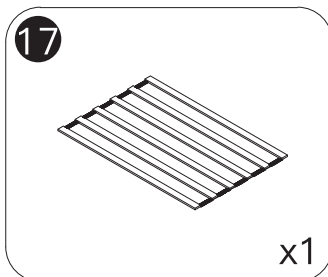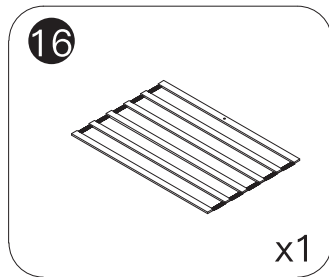



NOTICE:
Make sure that part 16 is installed
as shown in the diagram.

STEP 21

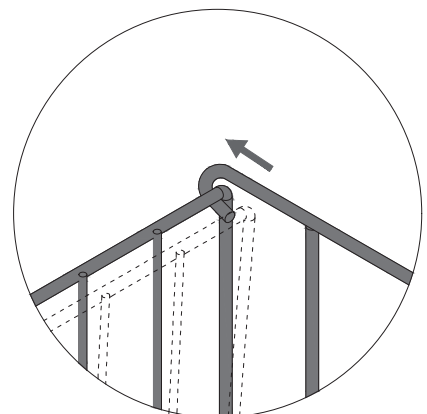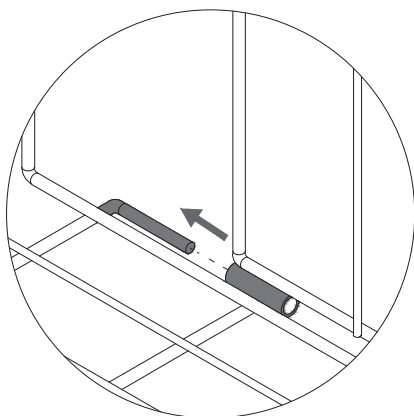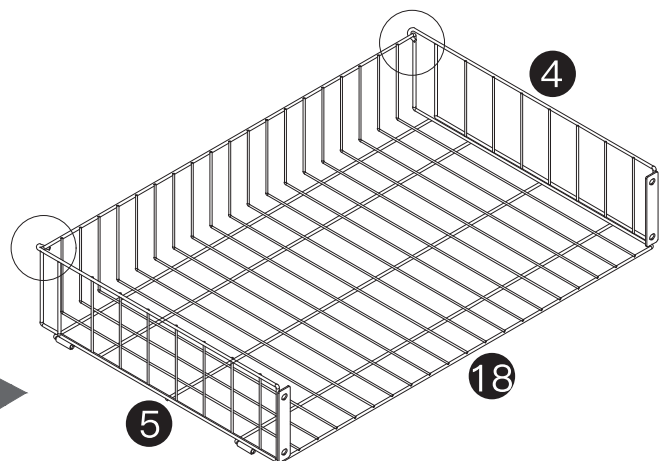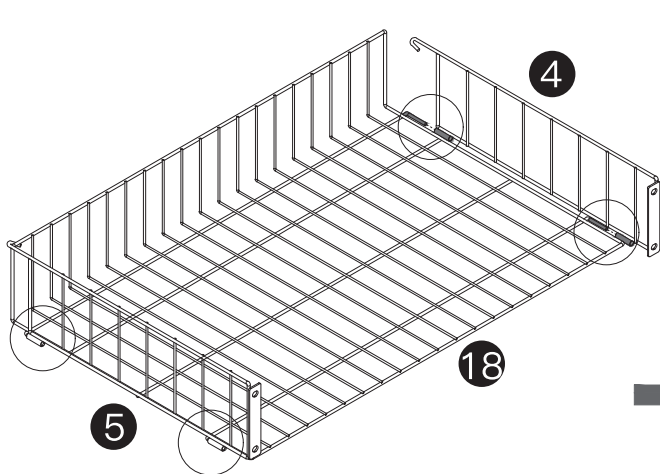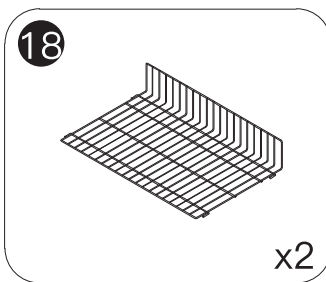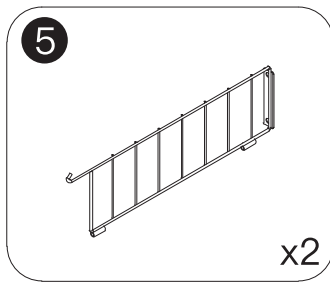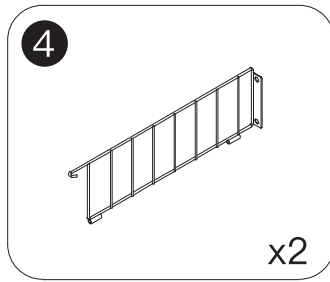


x2



STEP 22

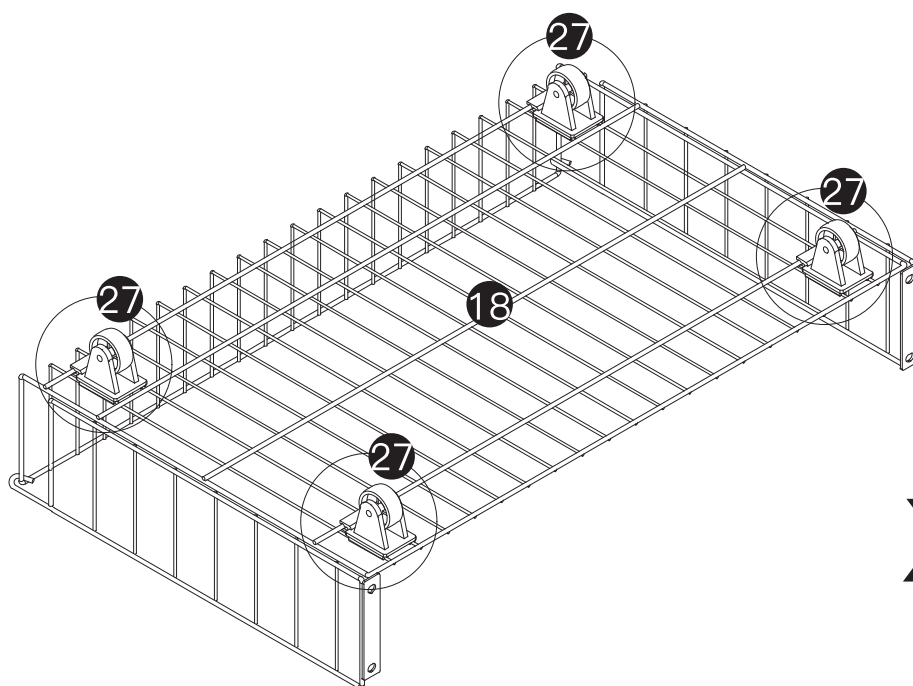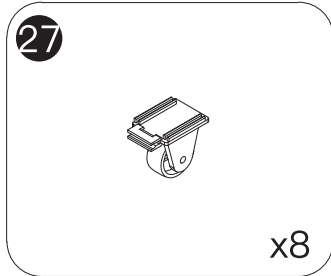

x2



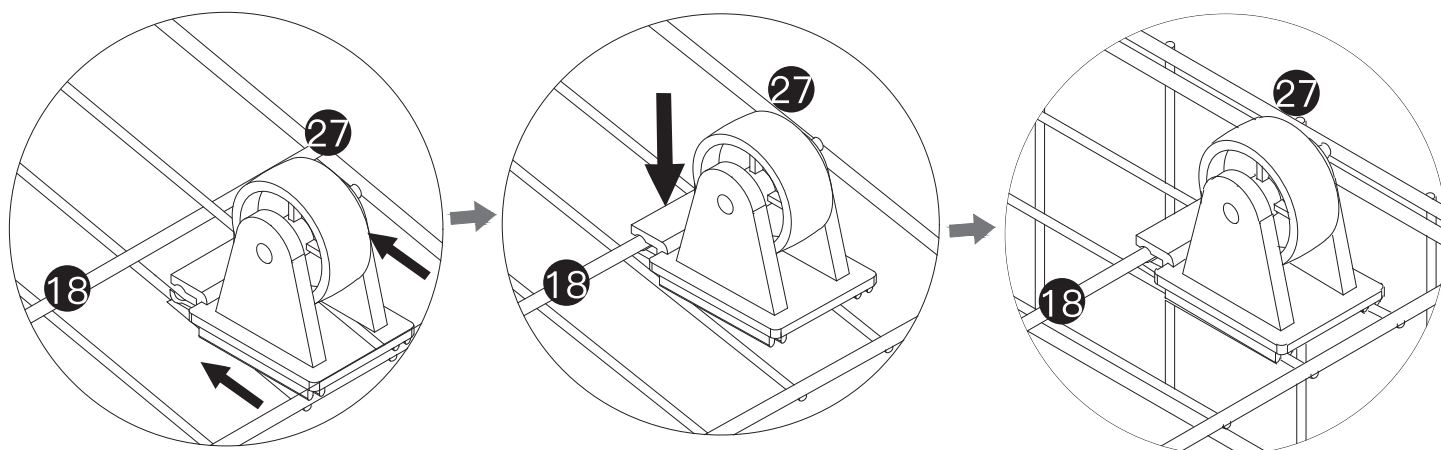


STEP 23

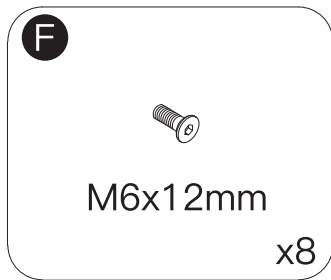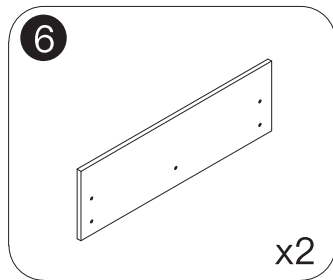

NOTICE:


Make sure the frame is installed on the shorter side of the front panel.

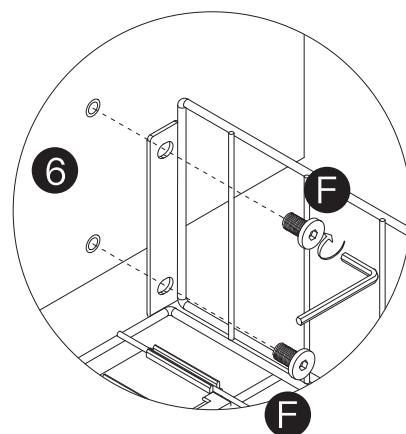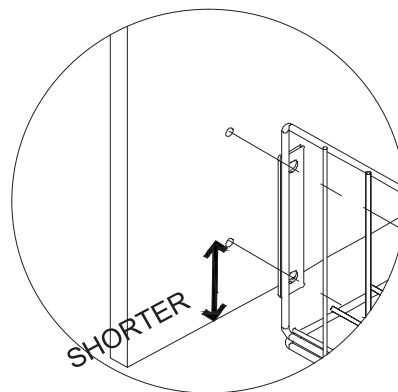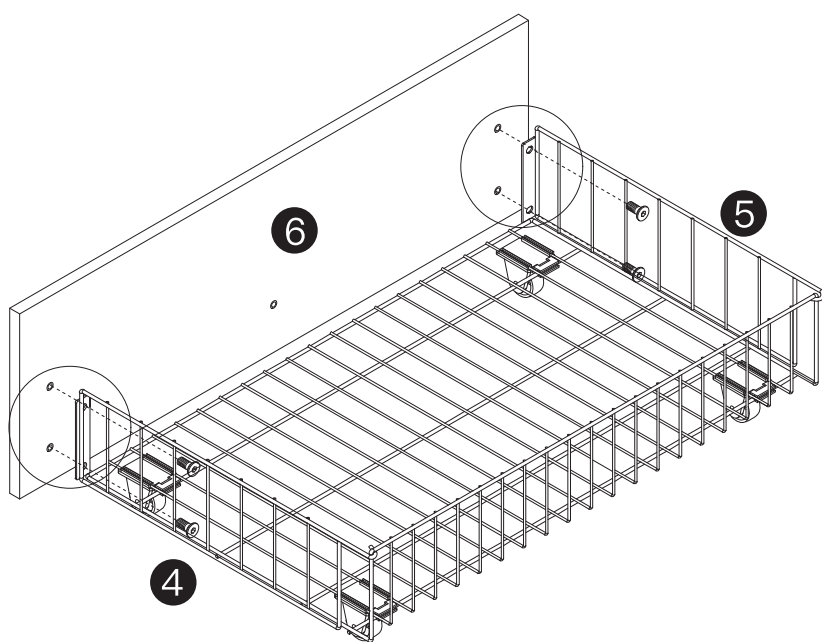

x2

STEP 24

24




x2

F




M6x12mm


x2

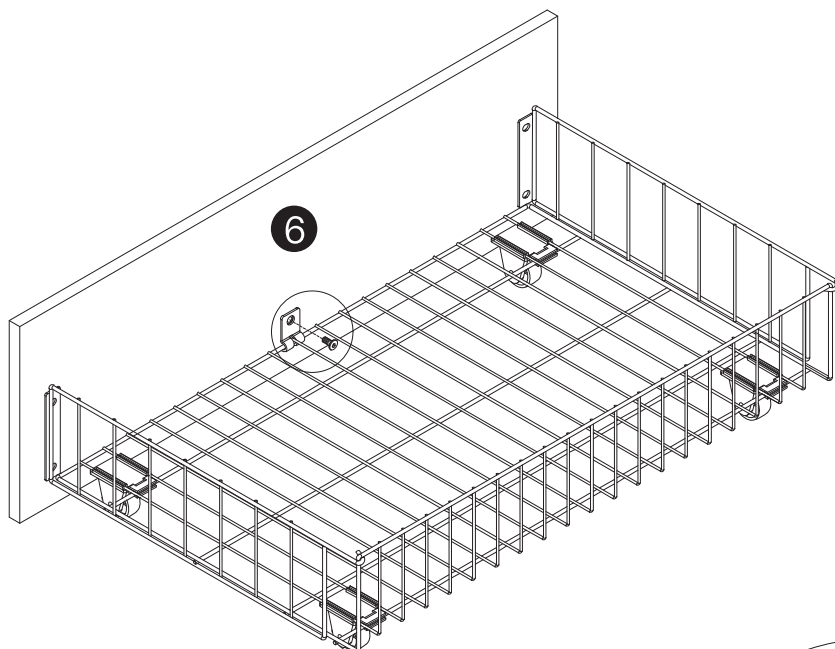

x2

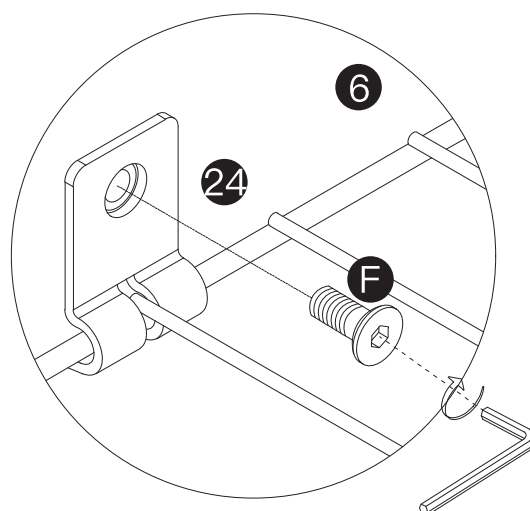

STEP 25

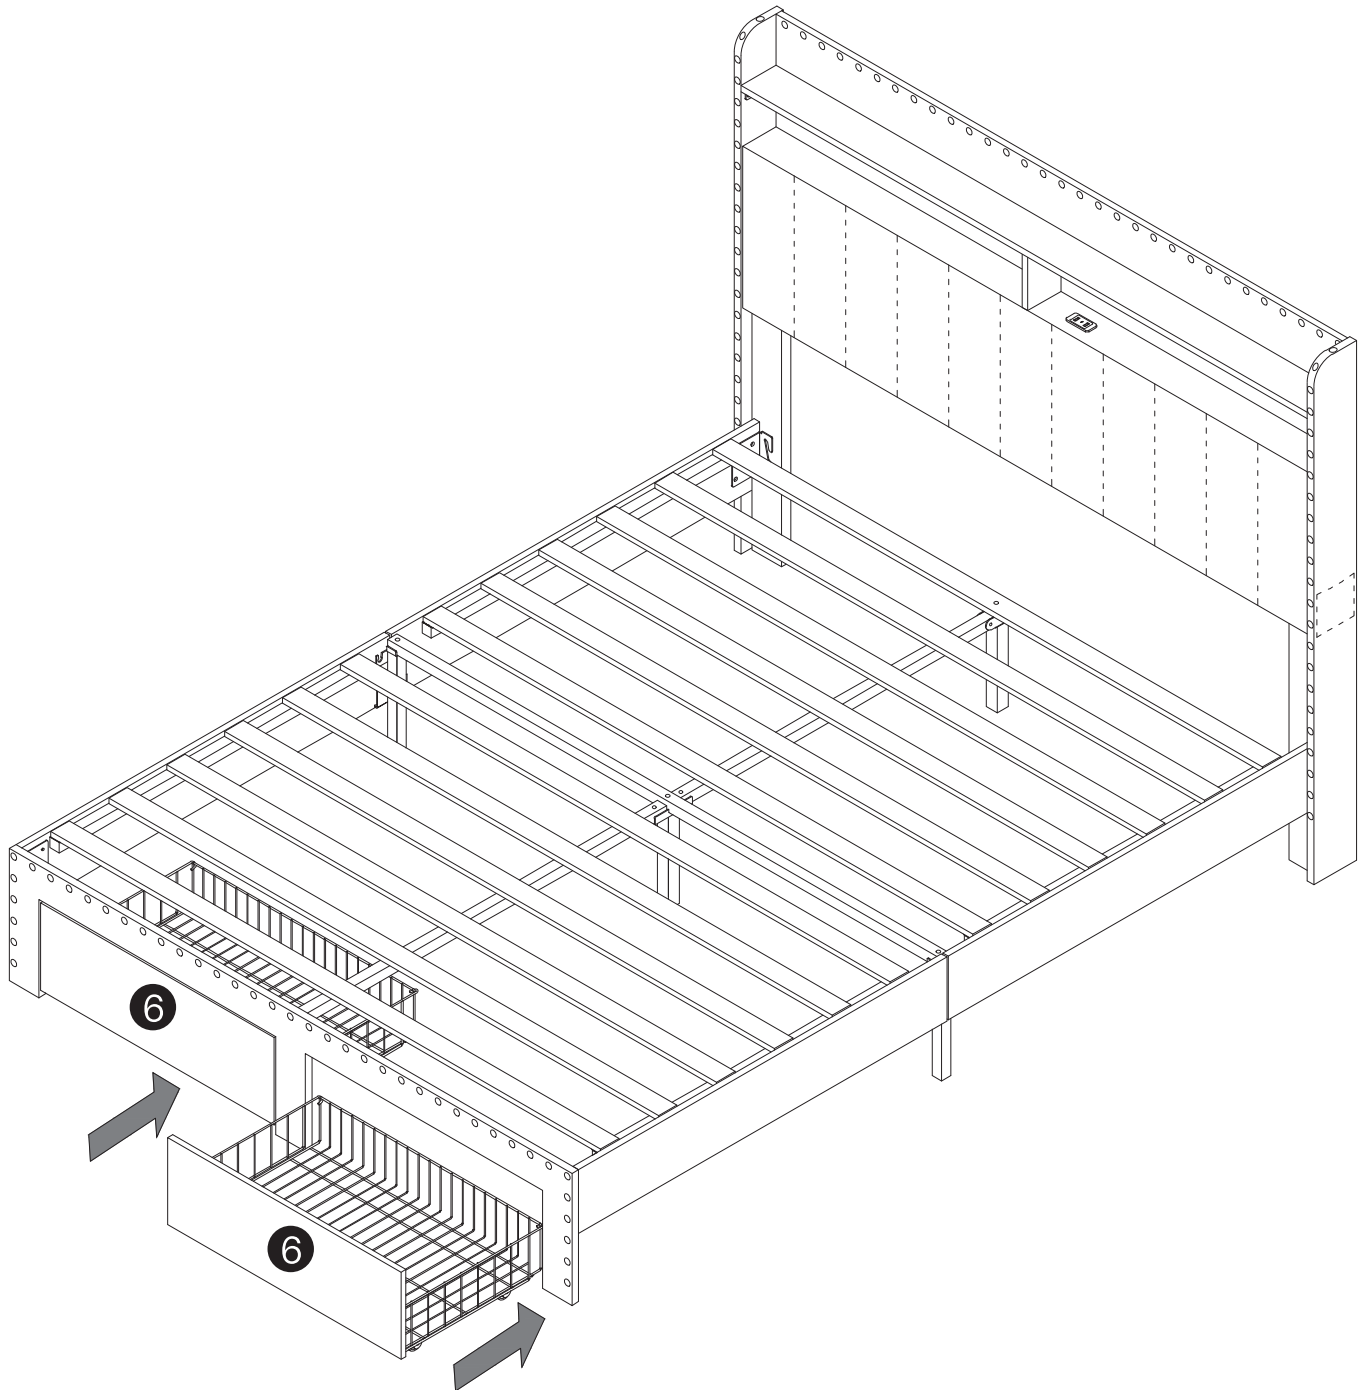

AFTERSALE SERVICE

Dear customer,

Thank you so much for purchasing the product from us, we really appreciate your support.

We are aimed to provide the best shopping experience to our customers. We also want to build a mutually beneficial relationship with our customers, and step further to make our brand both reliable, responsible and recommendable.

We hope that our products could meet your needs and expectations, please consider us again if you need more products for your home and kitchen.

The package would be out of our control during shipping, please contact us through your purchasing channel directly if there is anything wrong with the box or contents. We are always here offering you our service.

We will reply your messages within 24 hours, please kindly wait for the response from our team.

Your comfort and contentment are of utmost importance.

Best Regards,

Customer Care Specialist