

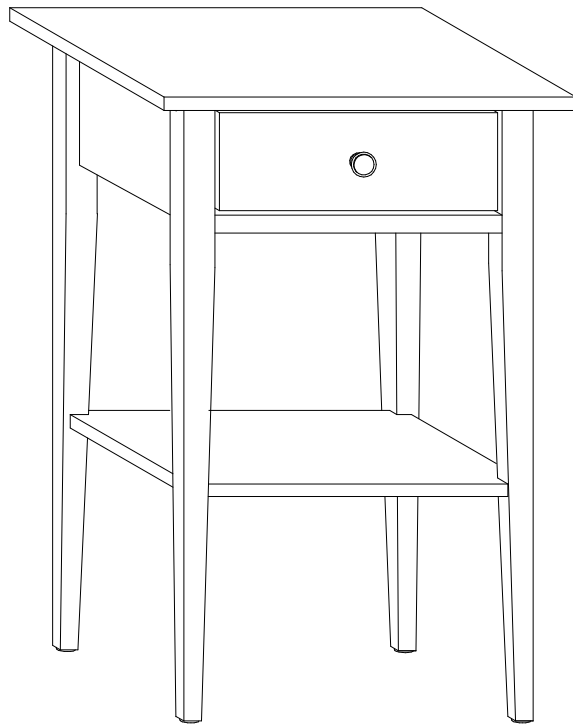
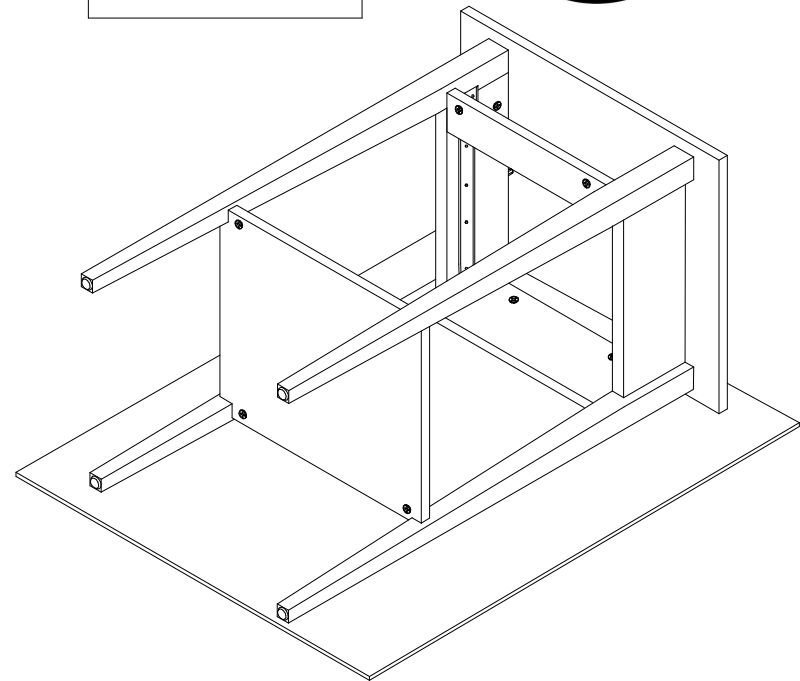



MODEL : NIGHT STAND

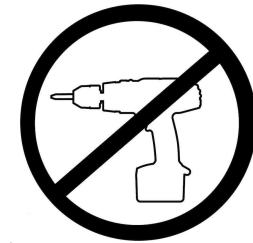

Required Tools : Screwdriver & Hammer











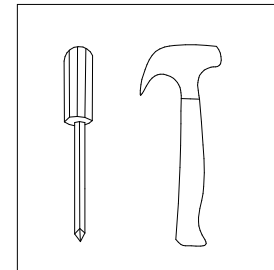


Please place on the carton while installing to prevent damage or scratches.

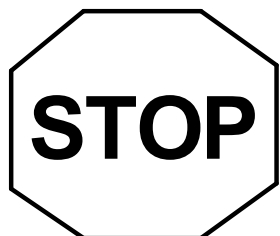


ASSEMBLY INSTRUCTION (PART & HARDWARE LIST)

MODEL : NIGHT STAND

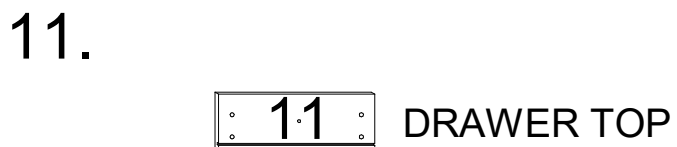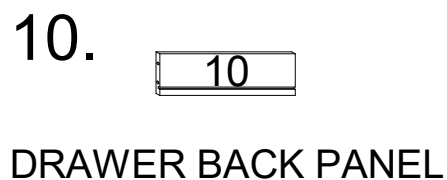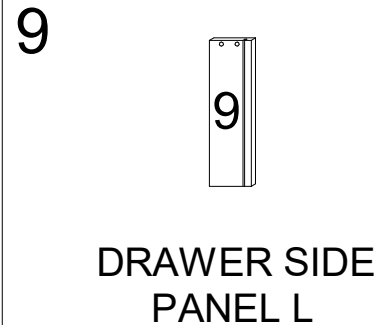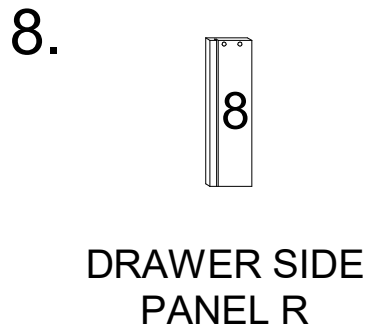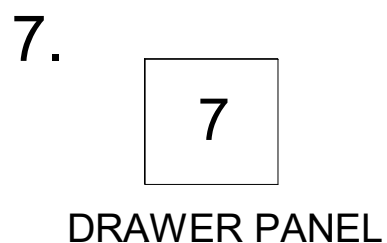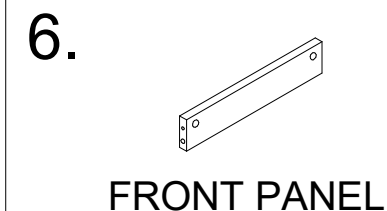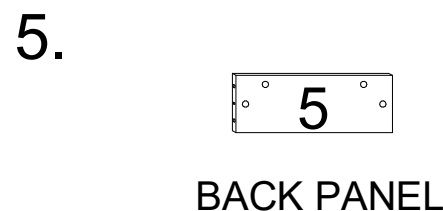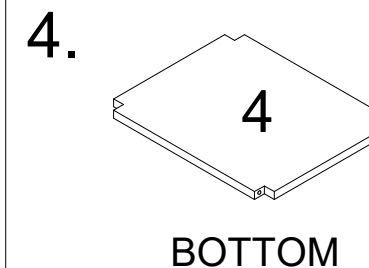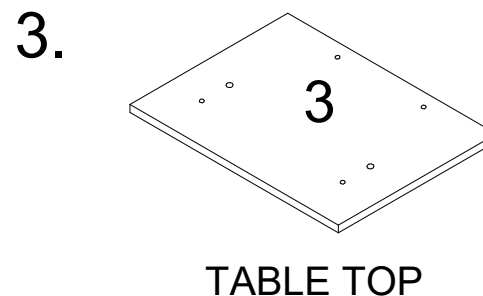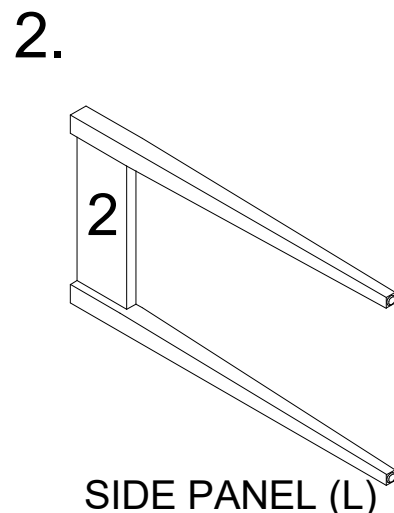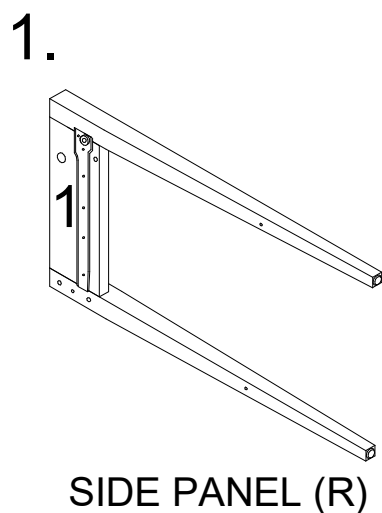

NO	HARDWARE DESCRIPTION	QTY
A.	Steel Handle 	1
B.	Handle Screw 	1
C.	Wood Dowel M6 X 30mm 	4
D.	JCBC Bolt M6 X 50mm 	2
E.	Wood Dowel M8 X 30mm 	8
F.	Allen Key 	1
G.	Cam Screw 	14
H.	Cam Lock 	14
I.	Barrel Nut M6 X 13mm 	2
*Screw Driver and Hammer Not Provided		


MODEL : NIGHT STAND

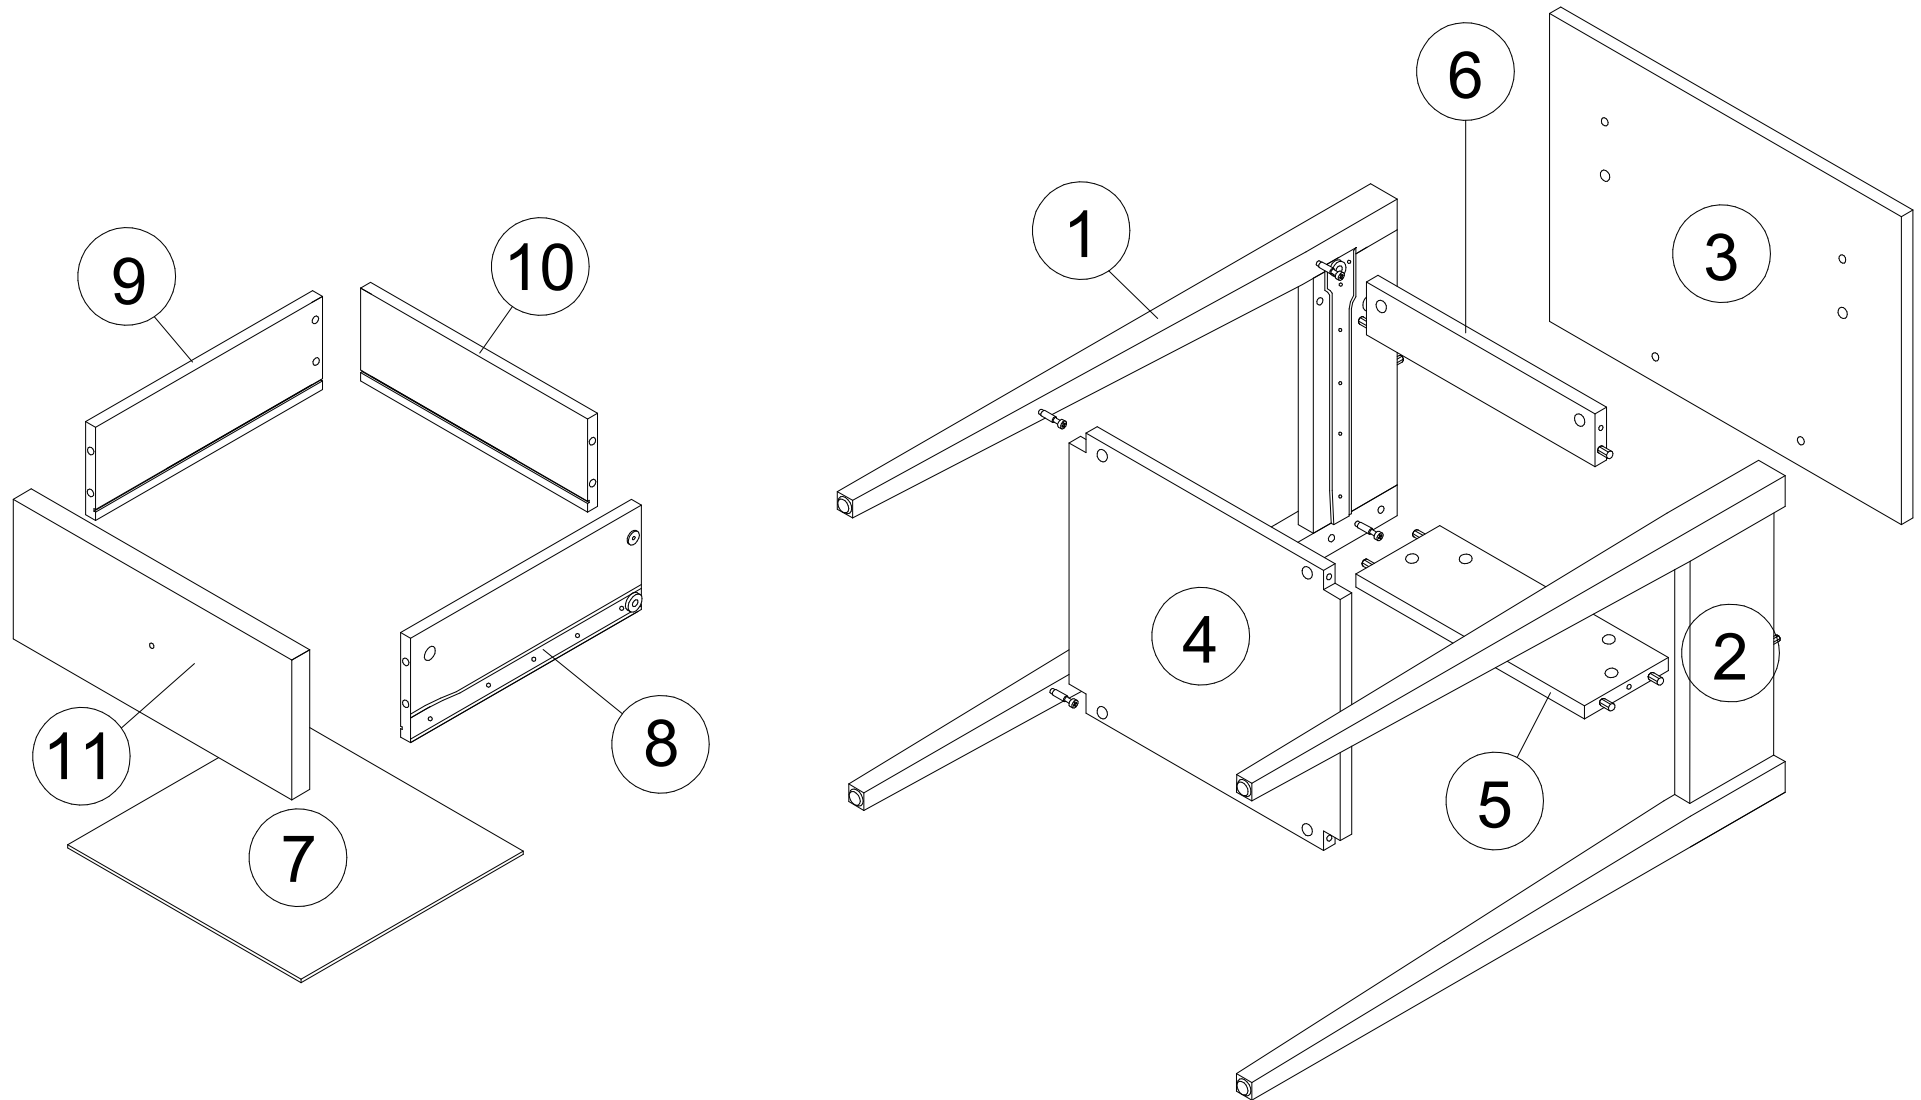

ASSEMBLY INSTRUCTION


MODEL : NIGHT STAND

STEP 1.

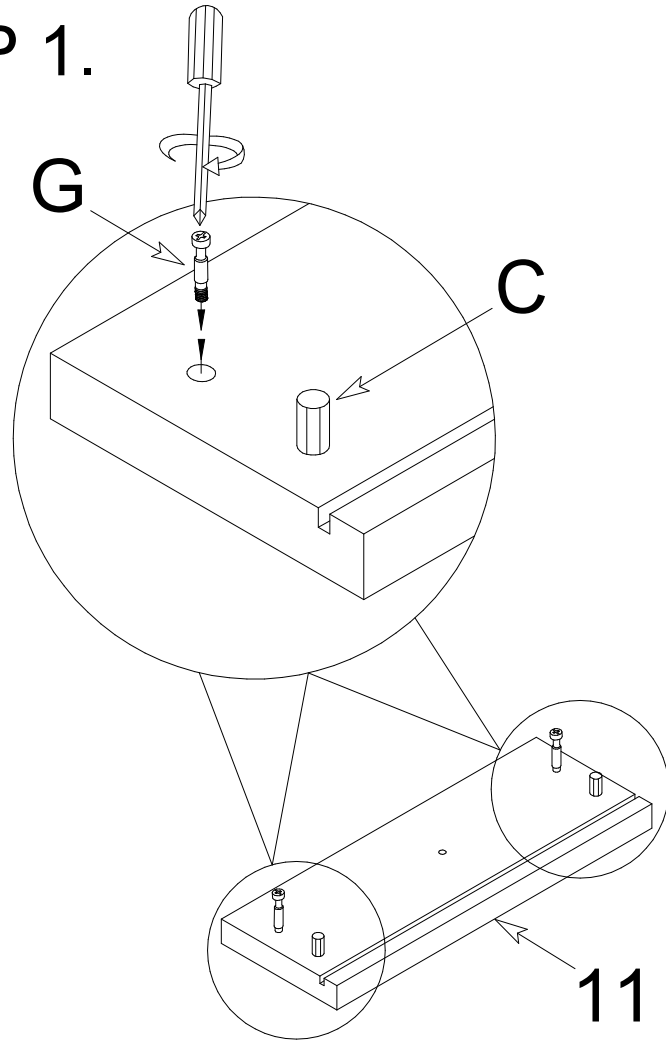


Insert wood dowel in predrilled hole.
Tighten fully minifix screw (Do not over tighten).

STEP 2.

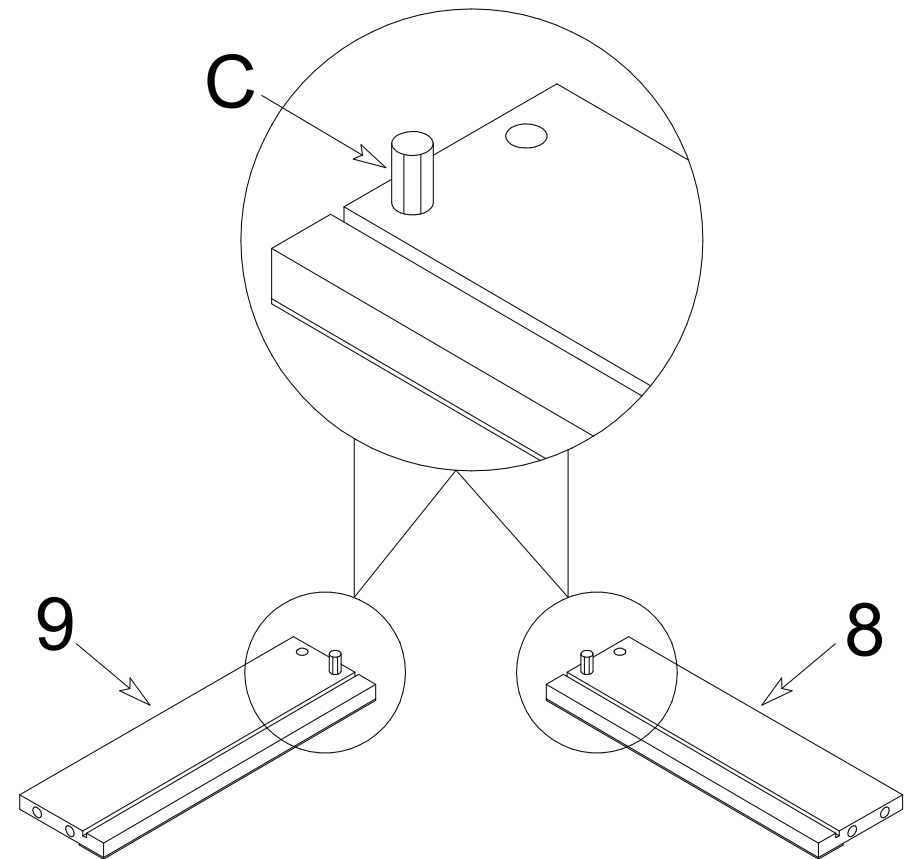


Insert wood dowel in predrilled hole.

STEP 3.

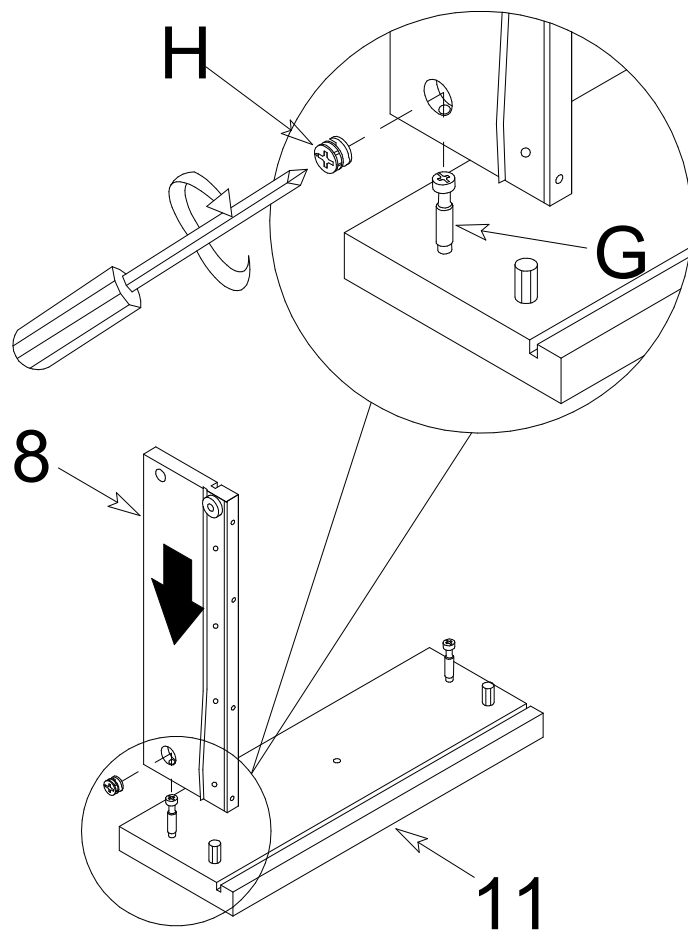


Proper orientation of Cam Lock (H).
1/2 turn to fully lock.

STEP 4.

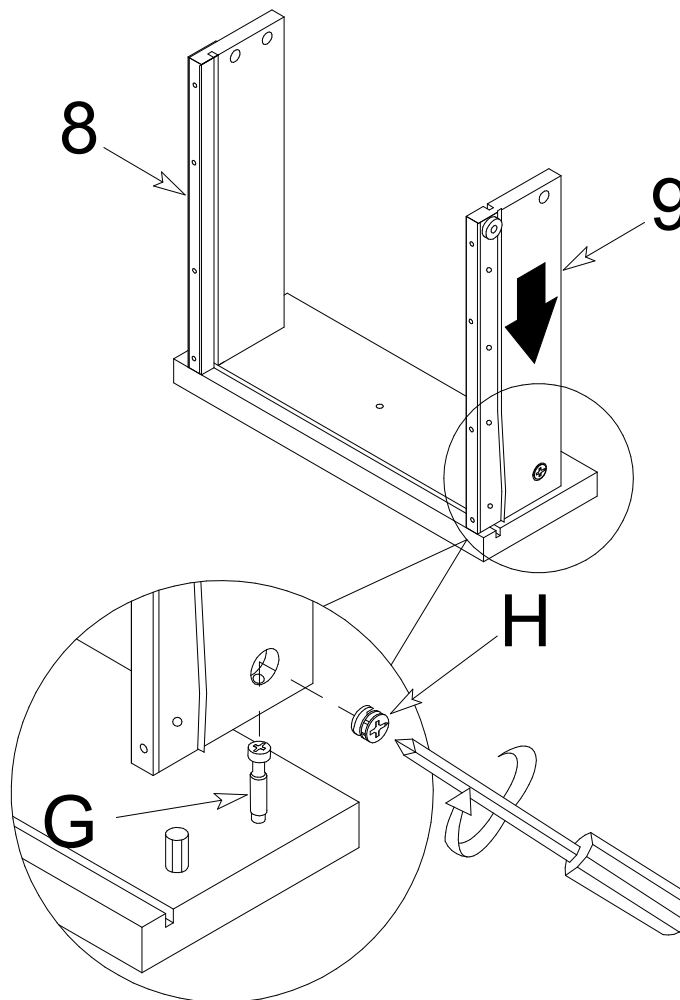


Proper orientation of Cam Lock (H).
1/2 turn to fully lock.

STEP 5.

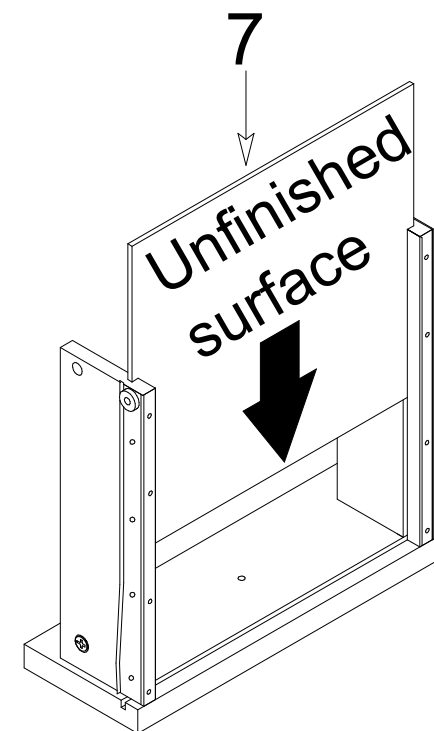


STEP 6.

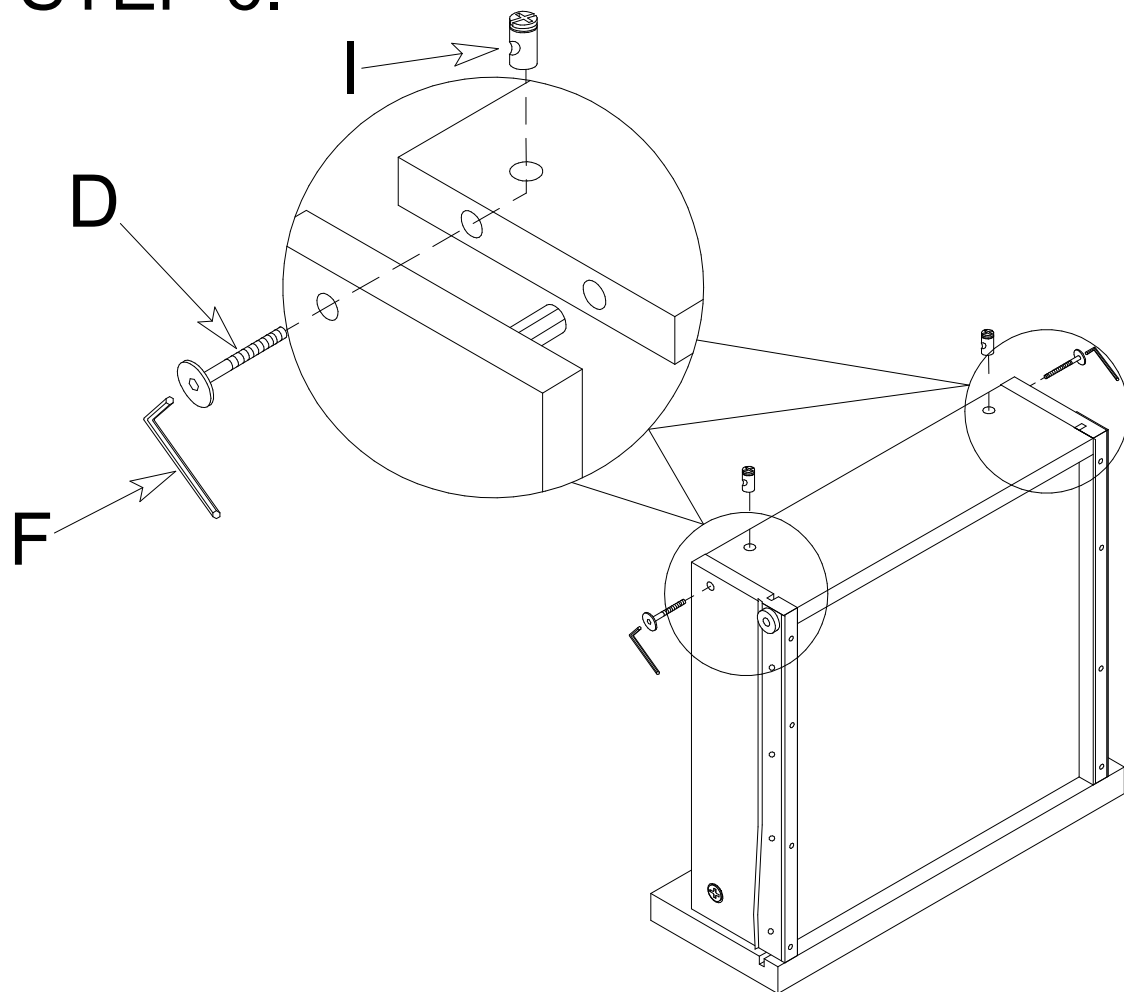


Insert wood dowel in predrilled hole.
Tighten fully. (Do not over tighten).

STEP 7.

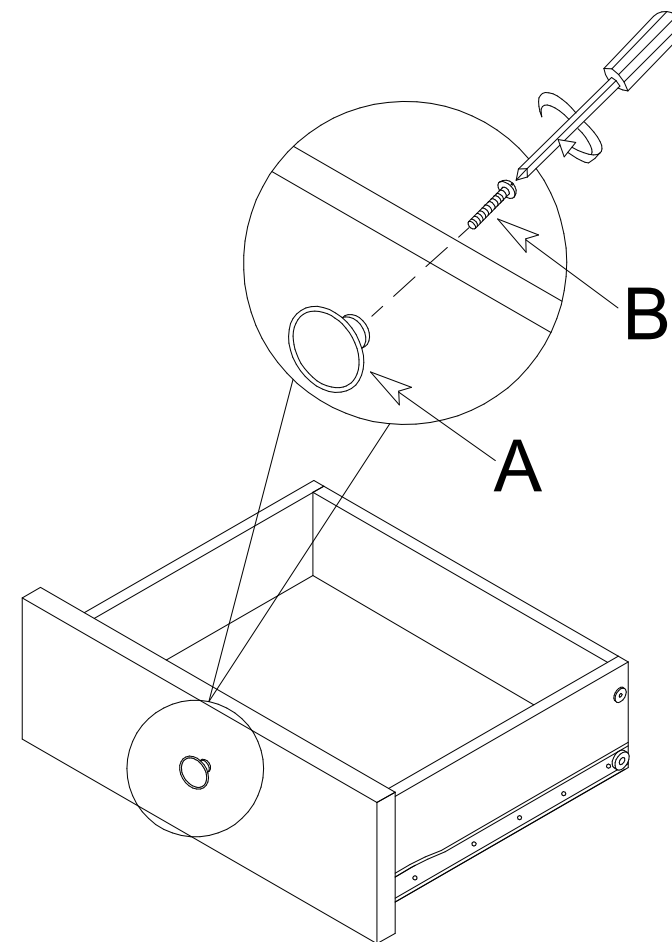


Attach handle using handle screw (B).

STEP 8.

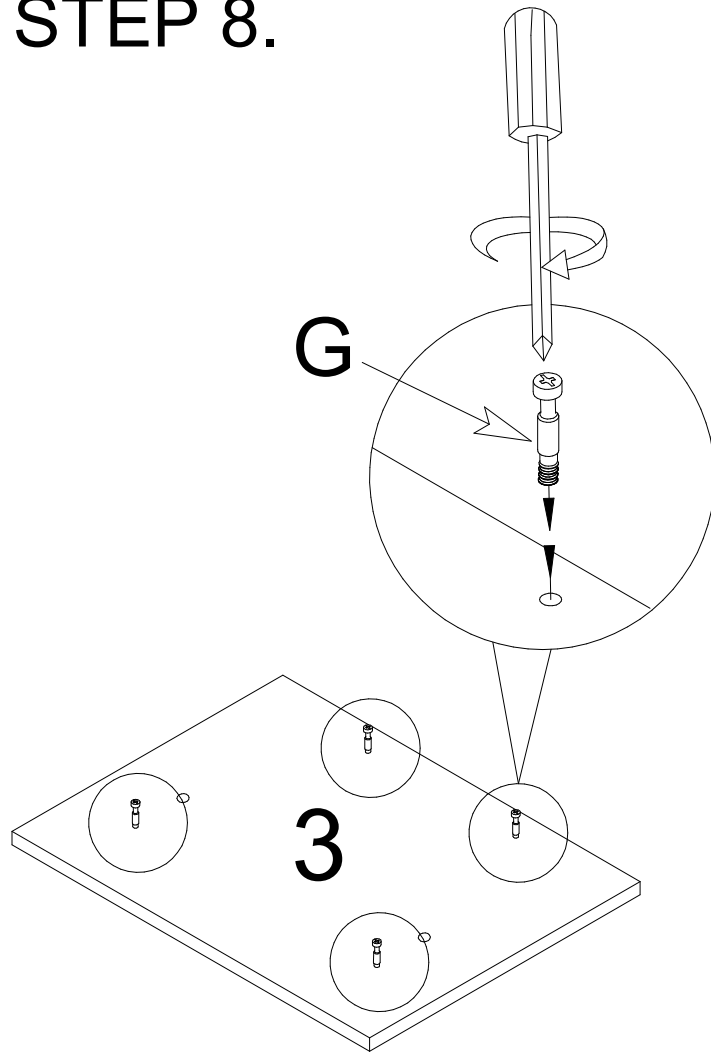


Tighten fully. (Do not over tighten).

STEP 9.

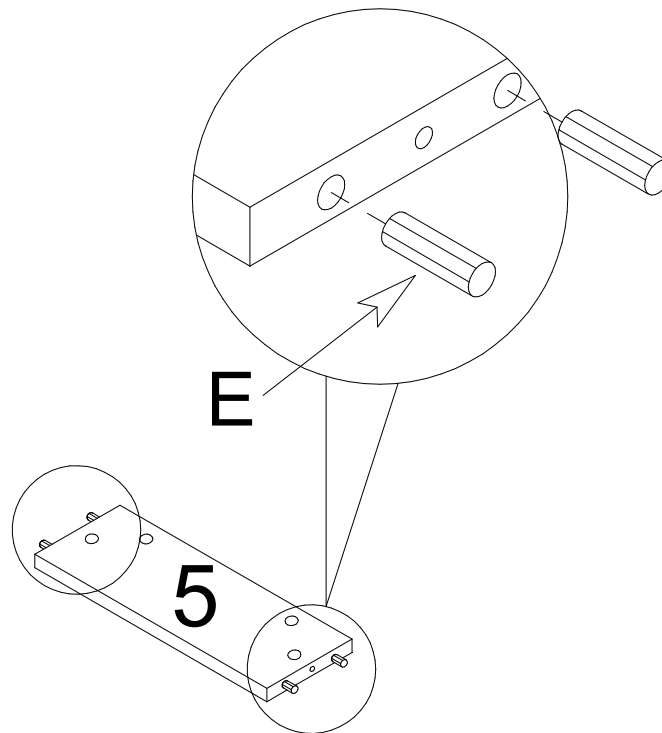

Insert wood dowel in predrilled hole.


STEP 10.

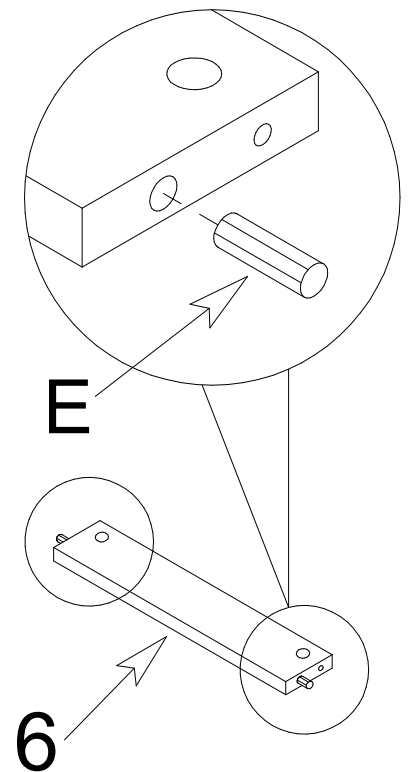

STEP 11.

Tighten fully.
(Do not over tighten).


Insert wood dowel
in predrilled hole.

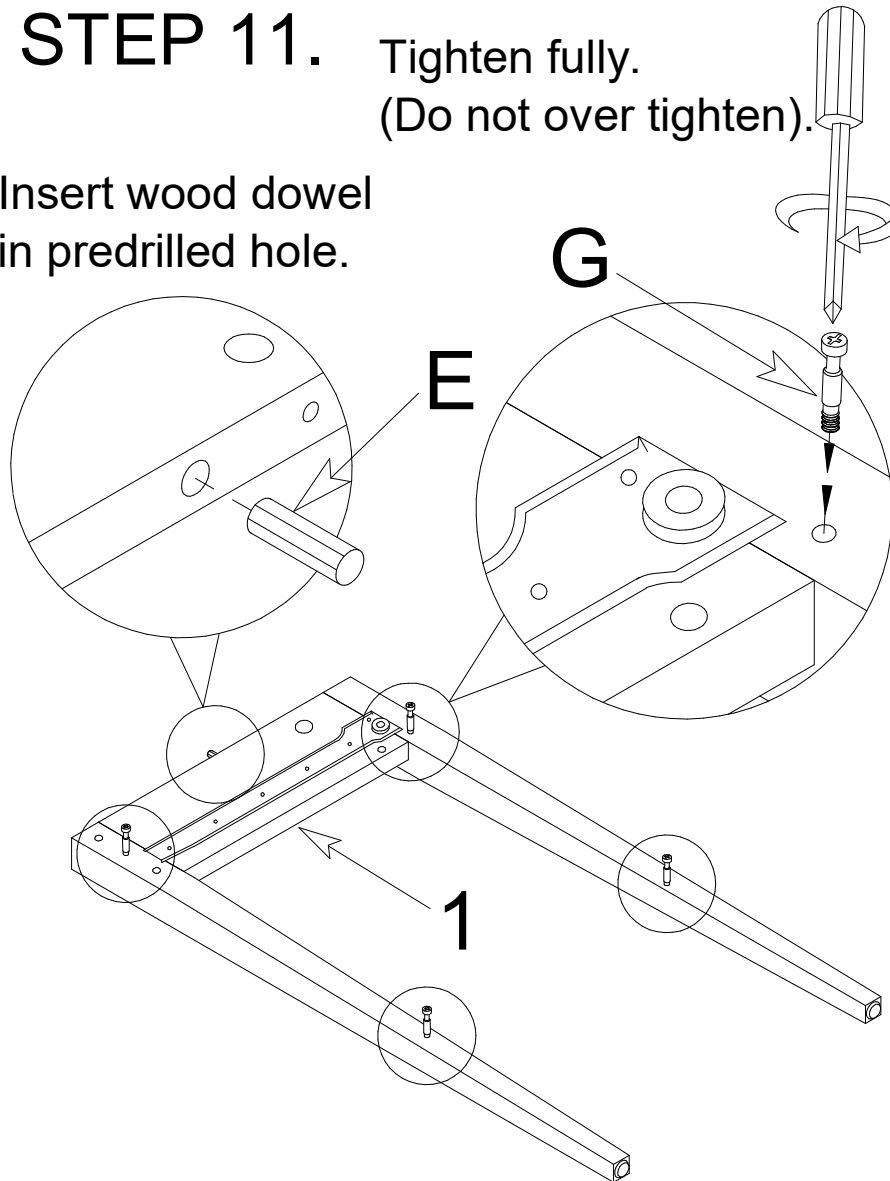


STEP 12.

Tighten fully.
(Do not over tighten).


Insert wood dowel
in predrilled hole.

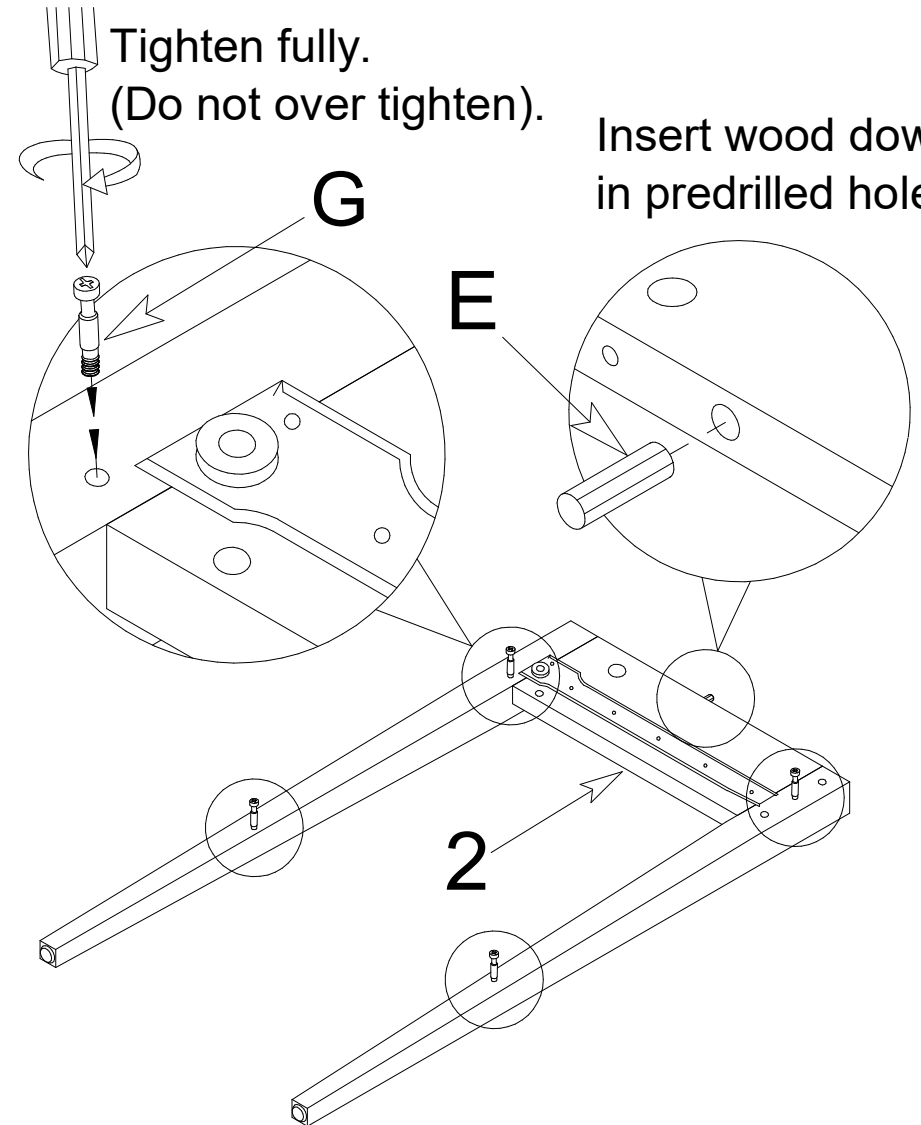

STEP 13.

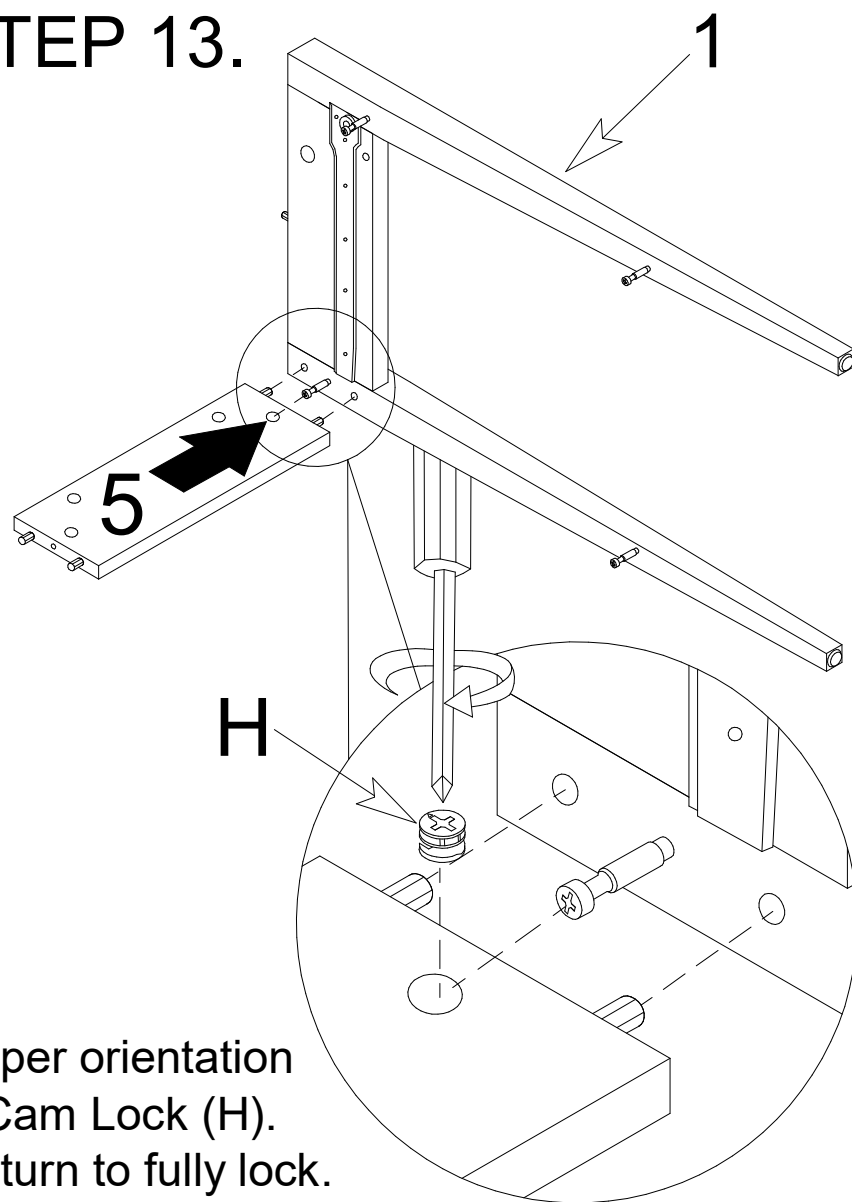


STEP 14.

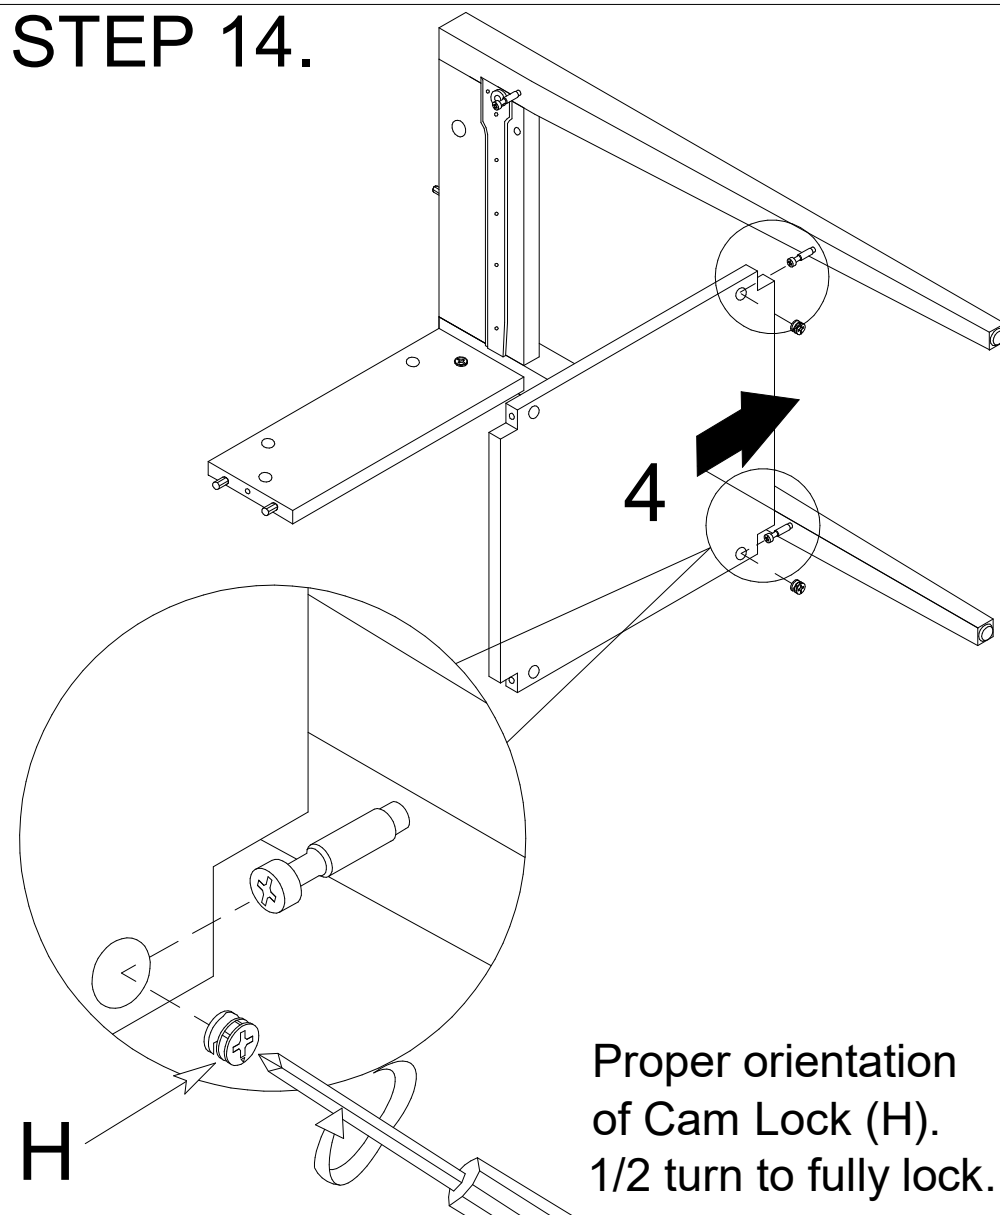


STEP 15.

Proper orientation
of Cam Lock (H).
1/2 turn to fully
lock.

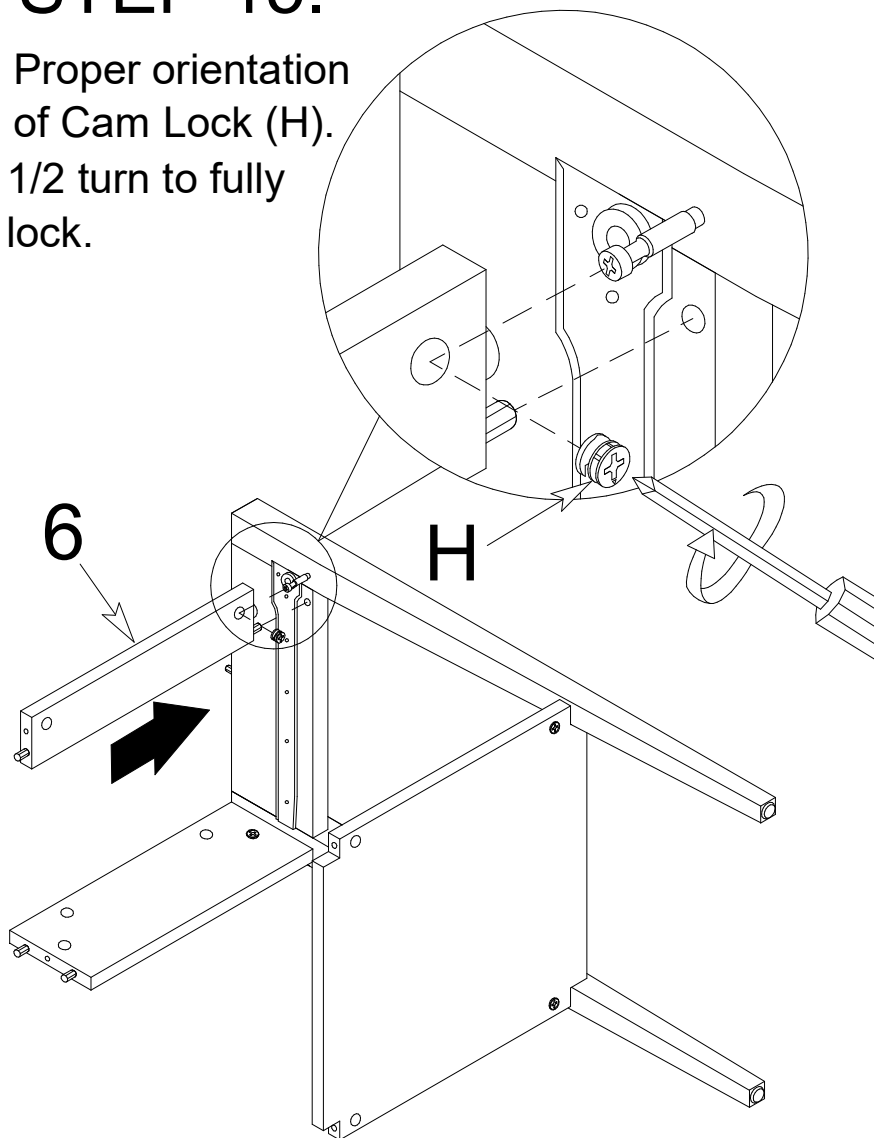


STEP 16.


Proper orientation
of Cam Lock (H).
1/2 turn to fully lock.

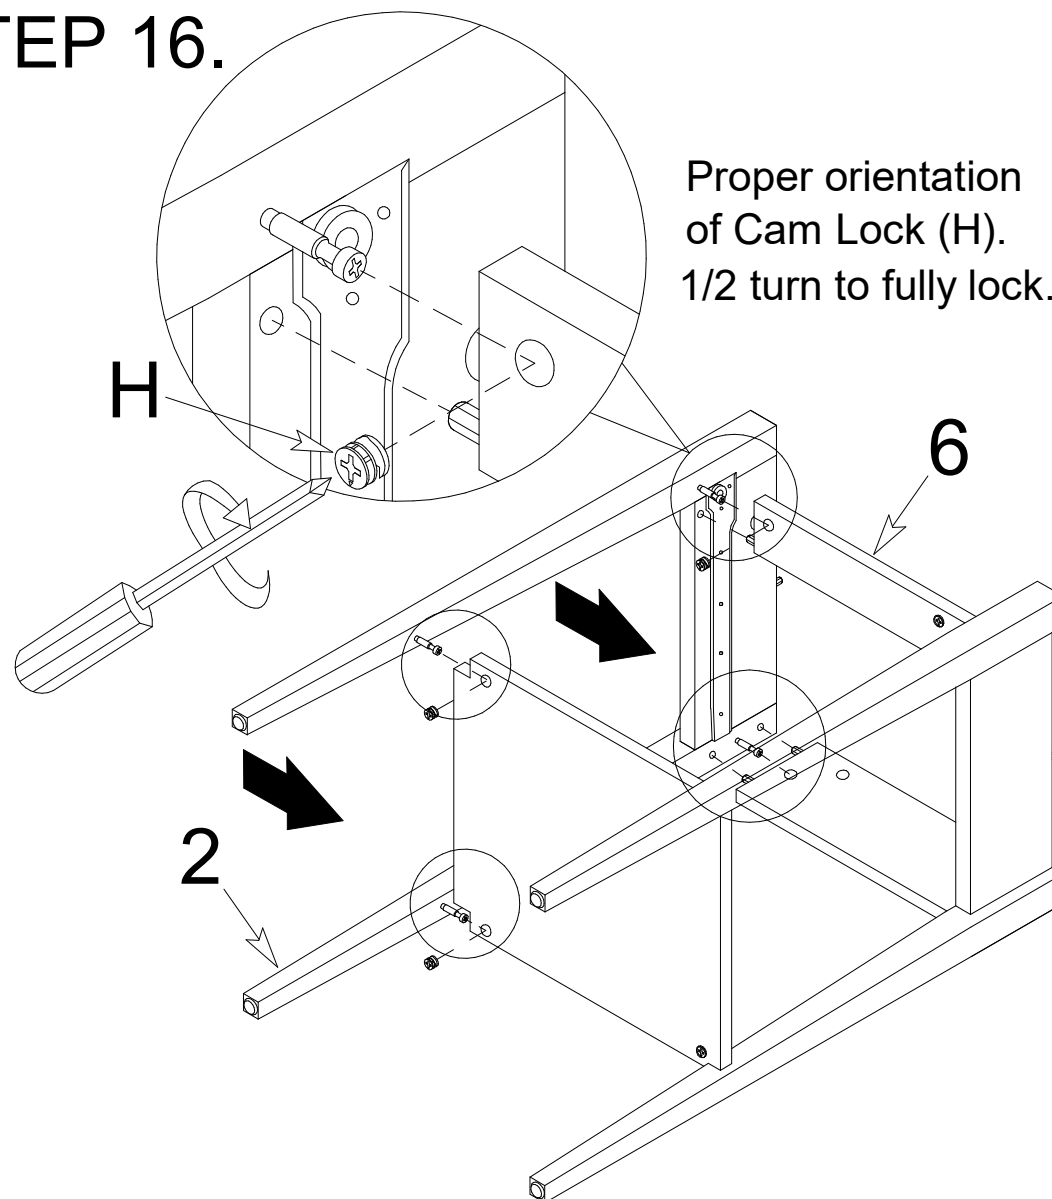

STEP 17.

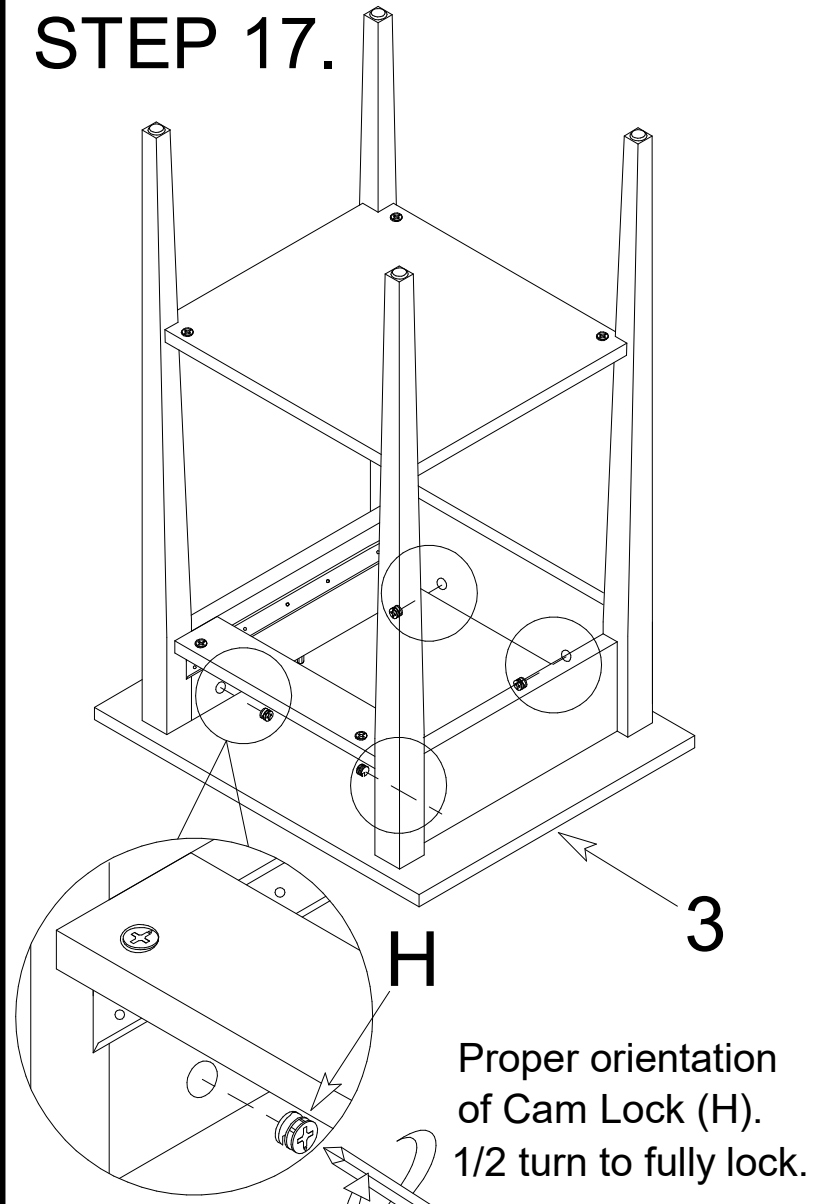

STEP 18.

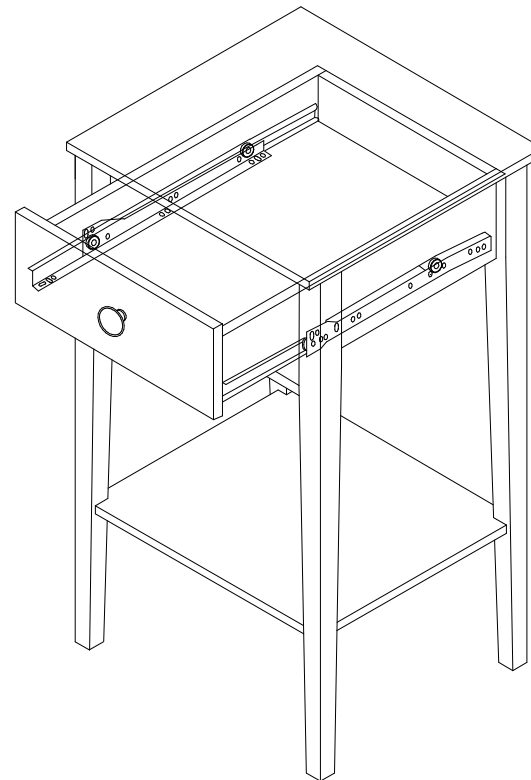

Put in drawer on the track.

