

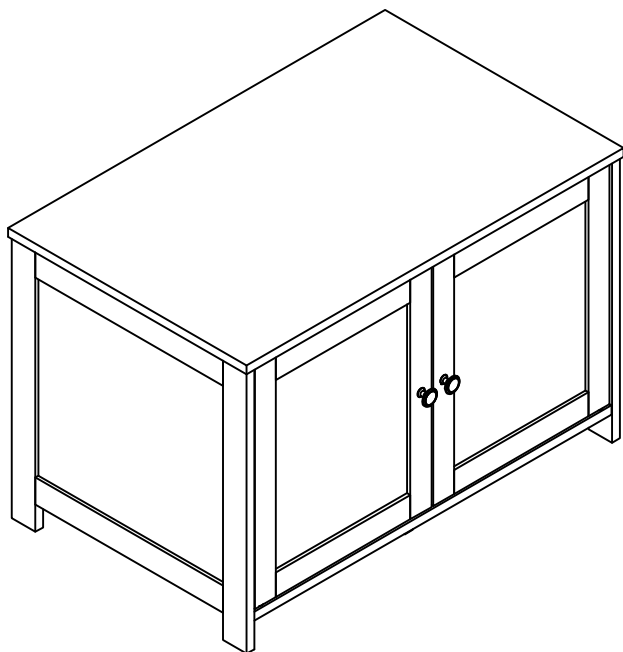




USER INSTRUCTIONS

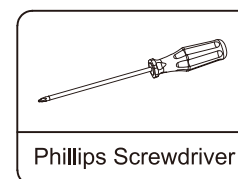

 6×35 A 10PCS Spare: 1	 ∅15×9.5 B 10PCS Spare: 1	 ∅6×30 C 8PCS	 ×2 ×2 3.5×14 ×4 D	 E 4PCS
 ×10 ×6 3×12 G F	 M4×20 G 2PCS	 ① 1PC	 ② 1PC	 ③ 1PC
 ④ 1PC	 ⑤ 1PC	 ⑥ 1PC	 ⑦ 1PC	 ⑧ 1PC

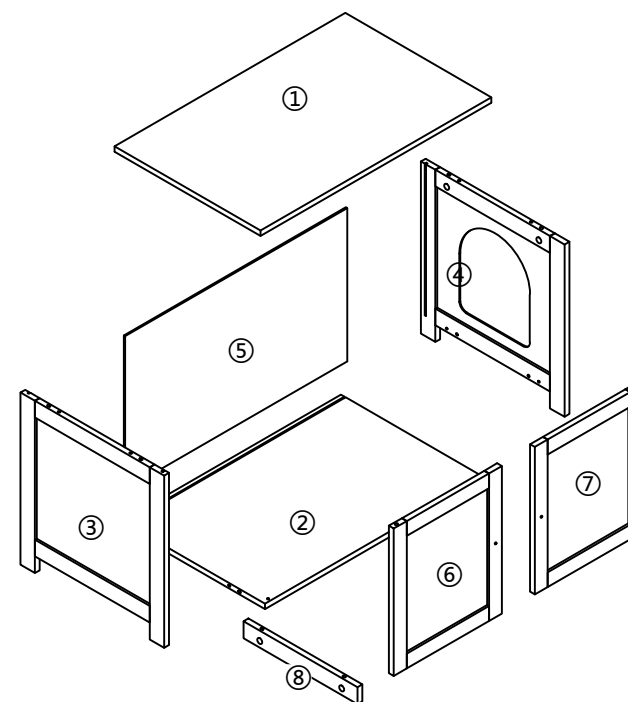


Self-prepared tool


STEP 1




6×35
A 10PCS




×2
3.5×14
D ×4



① 1PC




② 1PC



③ 1PC



④ 1PC

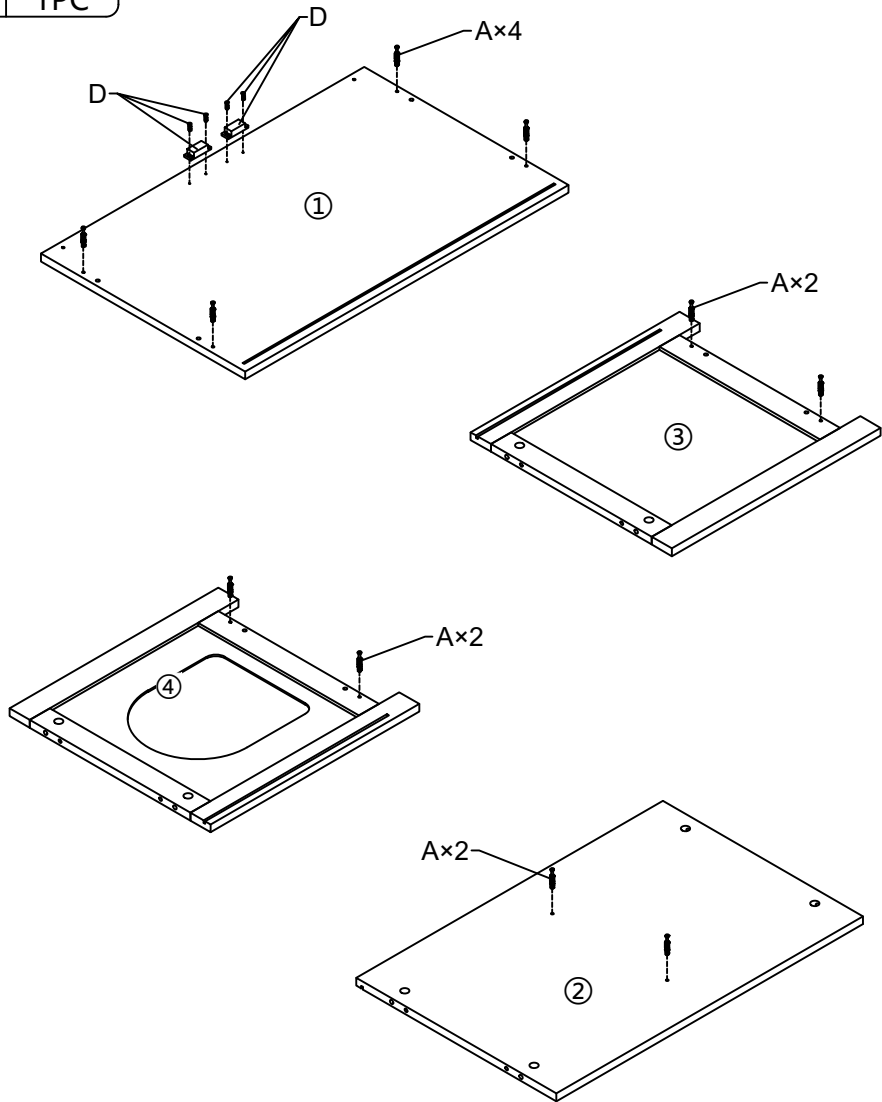

STEP 2




∅15×9.5
B 6PCS




∅6×30
C 4PCS




⑧ 1PC

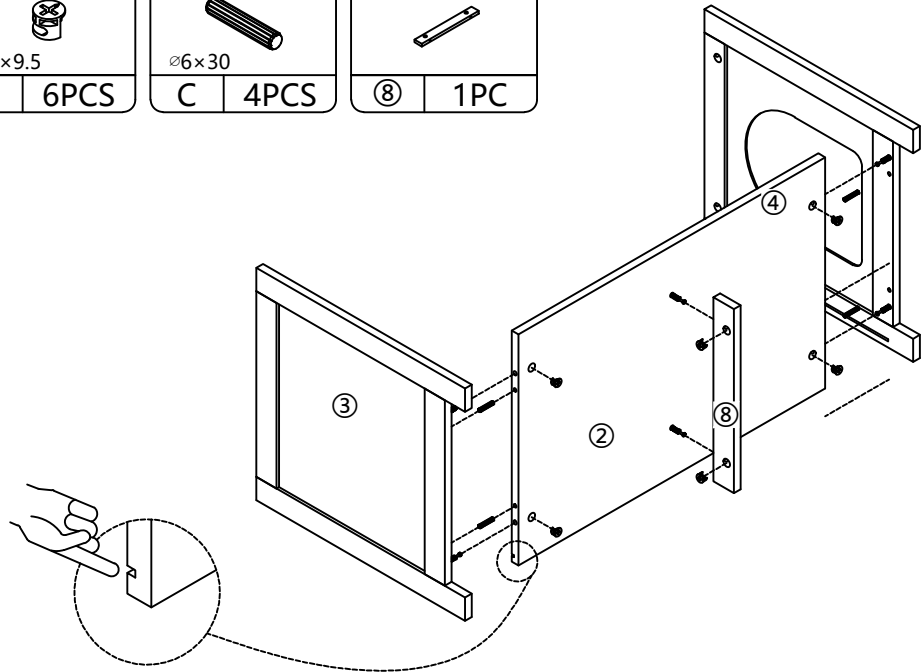




STEP 3






⑤ 1PC

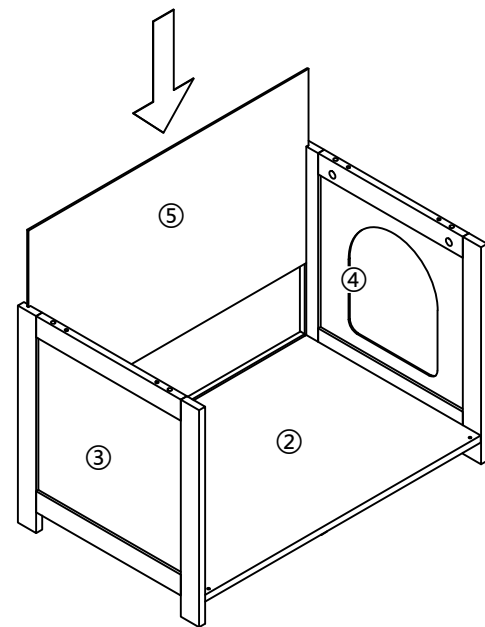







STEP 4

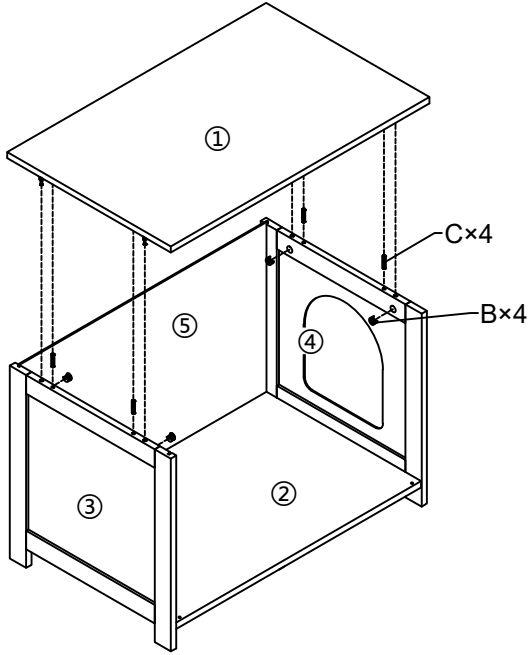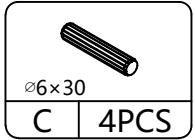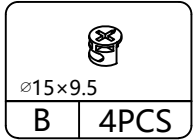

STEP 5

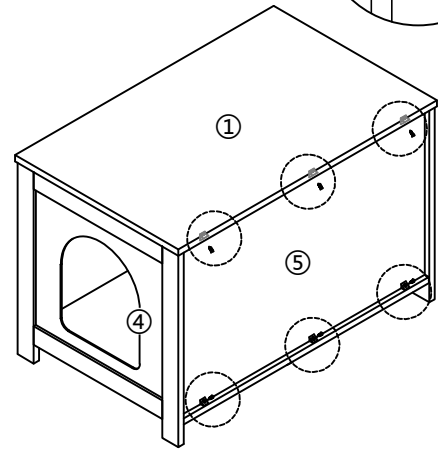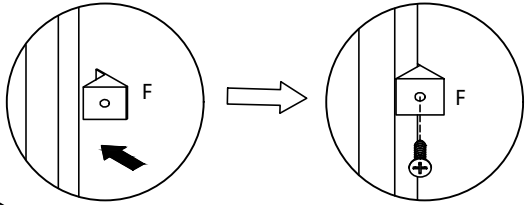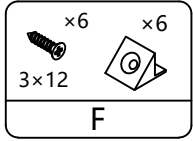

STEP 6

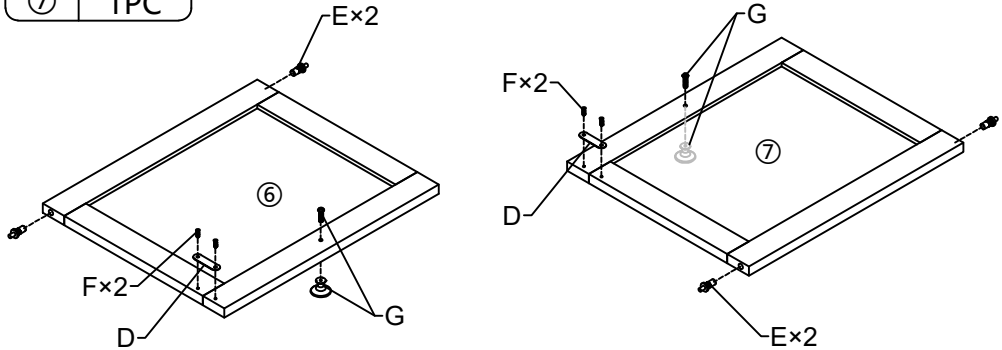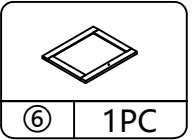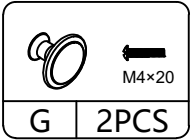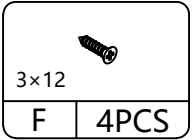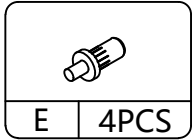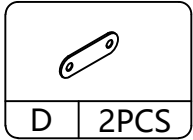

STEP 7

