



ASSEMBLY INSTRUCTIONS

PARTS (Per Unit):


(2) Side Piece

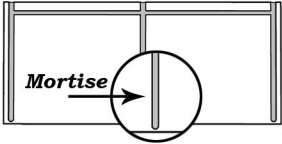

Top Piece

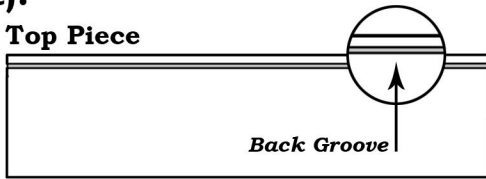


Bottom Piece

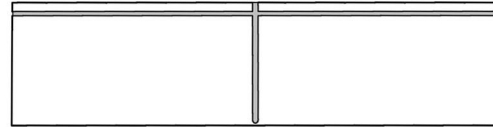


(16) Hex Screws




Shelf Piece

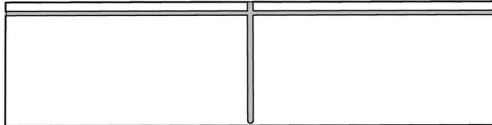

(2) Back Piece

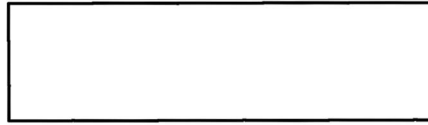

Divider

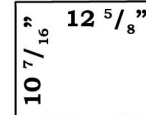


(1) allen wrench

2 Hinge Pins




Notice - KEEP BACK GROOVES ALIGNED


Step 1: Insert edge of **top** piece into mortise of **side** piece, making sure back grooves are aligned. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway

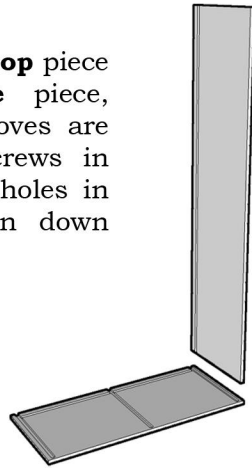


Step 2: Positioning **shelf** piece so that mortise faces away from **top** piece and back grooves are aligned, insert edge into mortise of **side** piece. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.

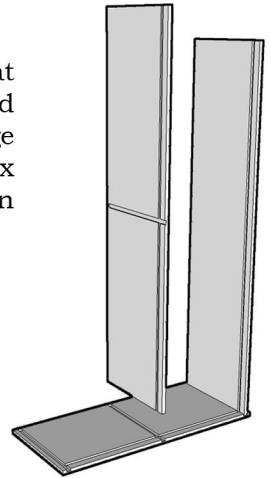


Step 3: Positioning **back** piece so that mortise faces **shelf** piece and back grooves are aligned, insert edge into remaining mortise of **side** piece. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.

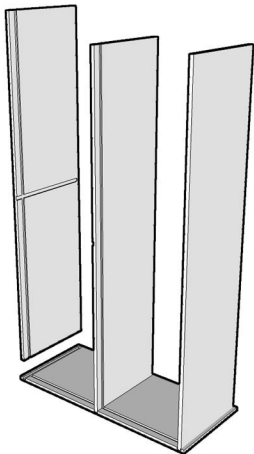

Step 4: Insert short sides of **divider** into mortises of **bottom** piece and **shelf** piece and slide in far enough so that back grooves remain clear. Insert hex screws in each of (2) pre-drilled holes in **bottom** piece and (2) pre-drilled holes in **shelf** piece and tighten down halfway.

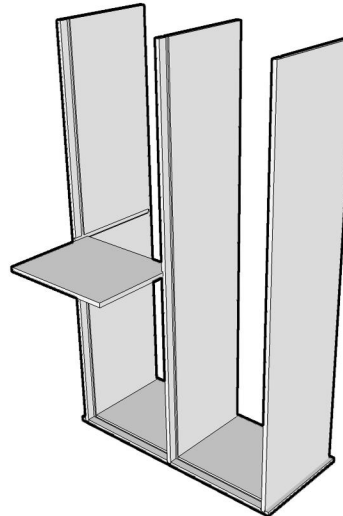


Step 5: Insert sides of **back** piece into back grooves of **bottom** piece and **shelf** piece. Slide down until edge rests firmly in back groove of **side** piece.

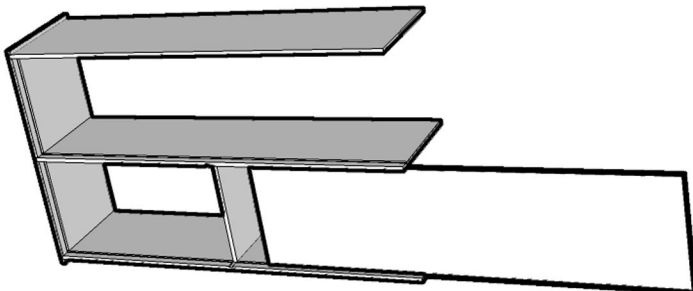


ASSEMBLY INSTRUCTIONS

Notice - KEEP BACK GROOVES ALIGNED


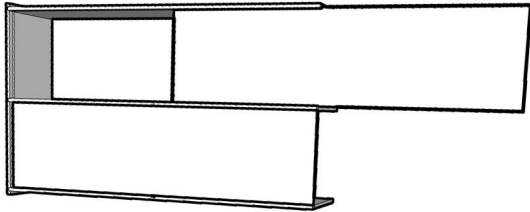


Step 6: Insert sides of remaining **back** piece into back grooves of **top** piece and **shelf** piece. Slide down until edge rests firmly in back groove of **side** piece.

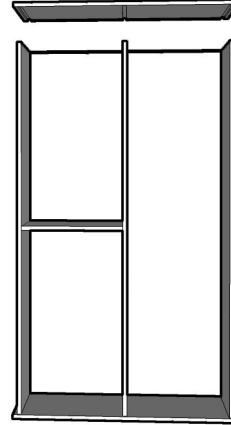


Step 7: Insert edges of assembled pieces into mortises and back grooves of remaining **side** piece. Insert hex screws in each of (6) pre-drilled holes in **side** piece and tighten down halfway.


Step 8: Tighten all screws until snug. DO NOT OVER TIGHTEN. DO NOT DRILL. Rotate unit so that it rests on **bottom** piece and edges of **side** pieces. **Assembly of first unit is now complete.**

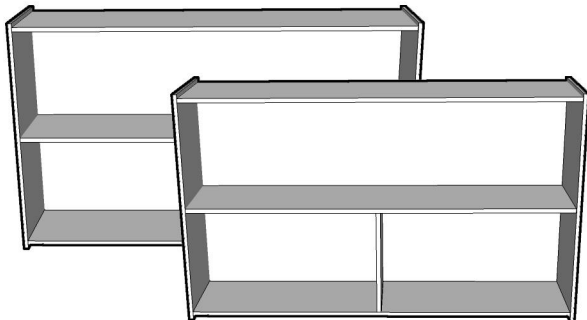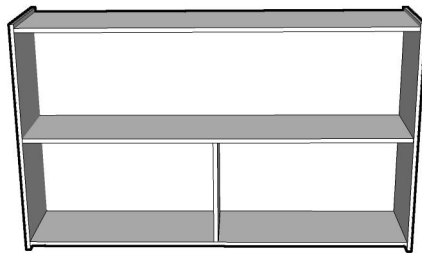

Step 9: Using the remaining parts, repeat steps 1-8 to assemble second unit.

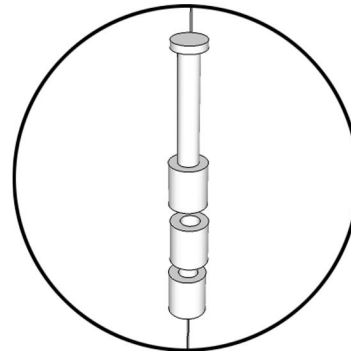

Step 10: Line up two units so that the hinges on each one meet. Place hinge pin into holes of each hinge as shown to hinge units together.

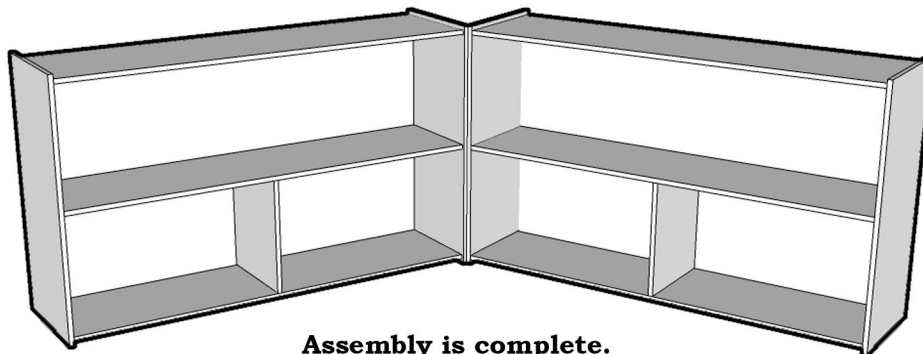

Assembly is complete.