


HW-AM553365


CUSTOMER MANUAL

-V4.2



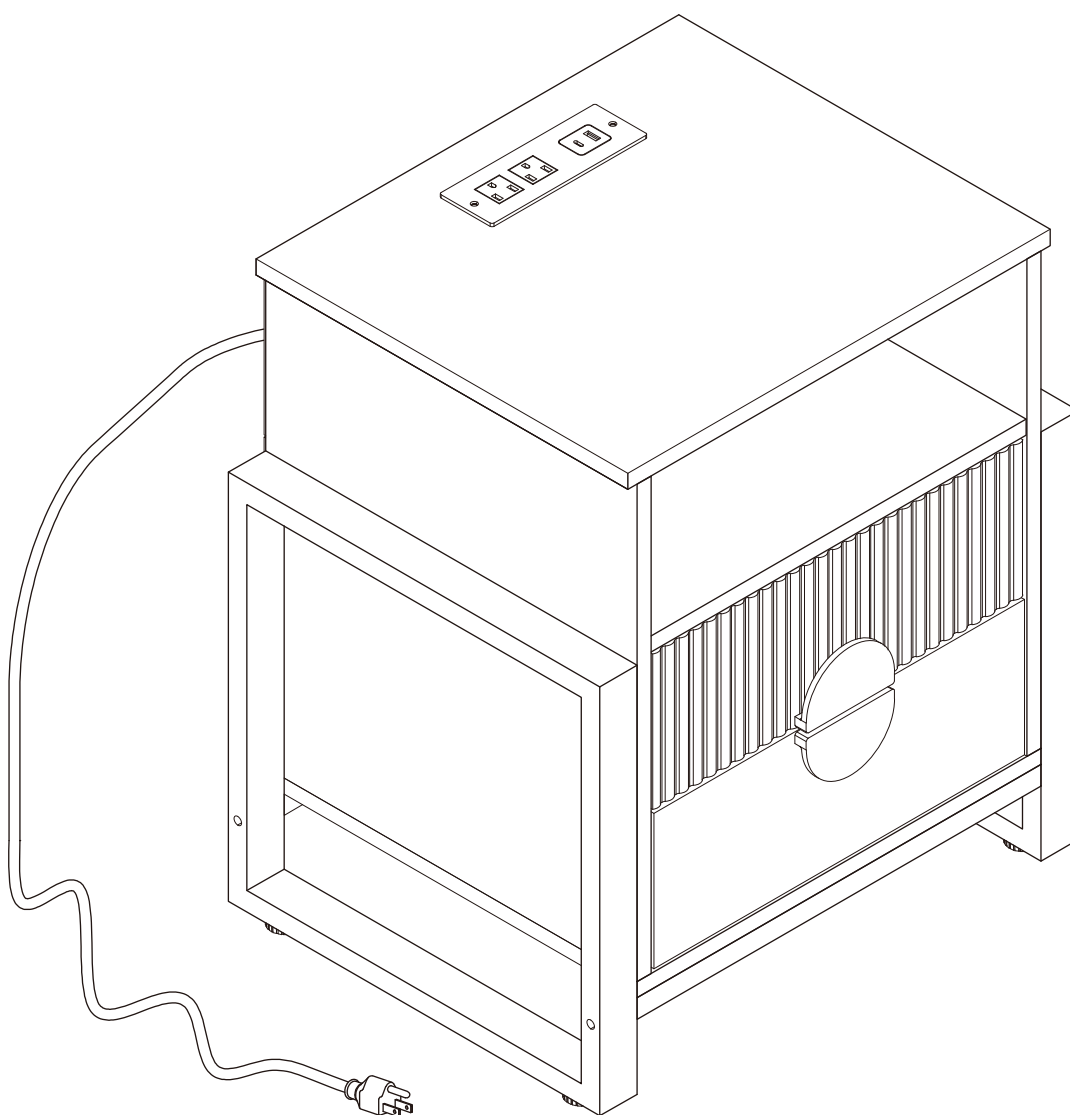


Contact us: Support@lghm.vip

ASSEMBLY STRUCTURE REFERENCE DIAGRAM

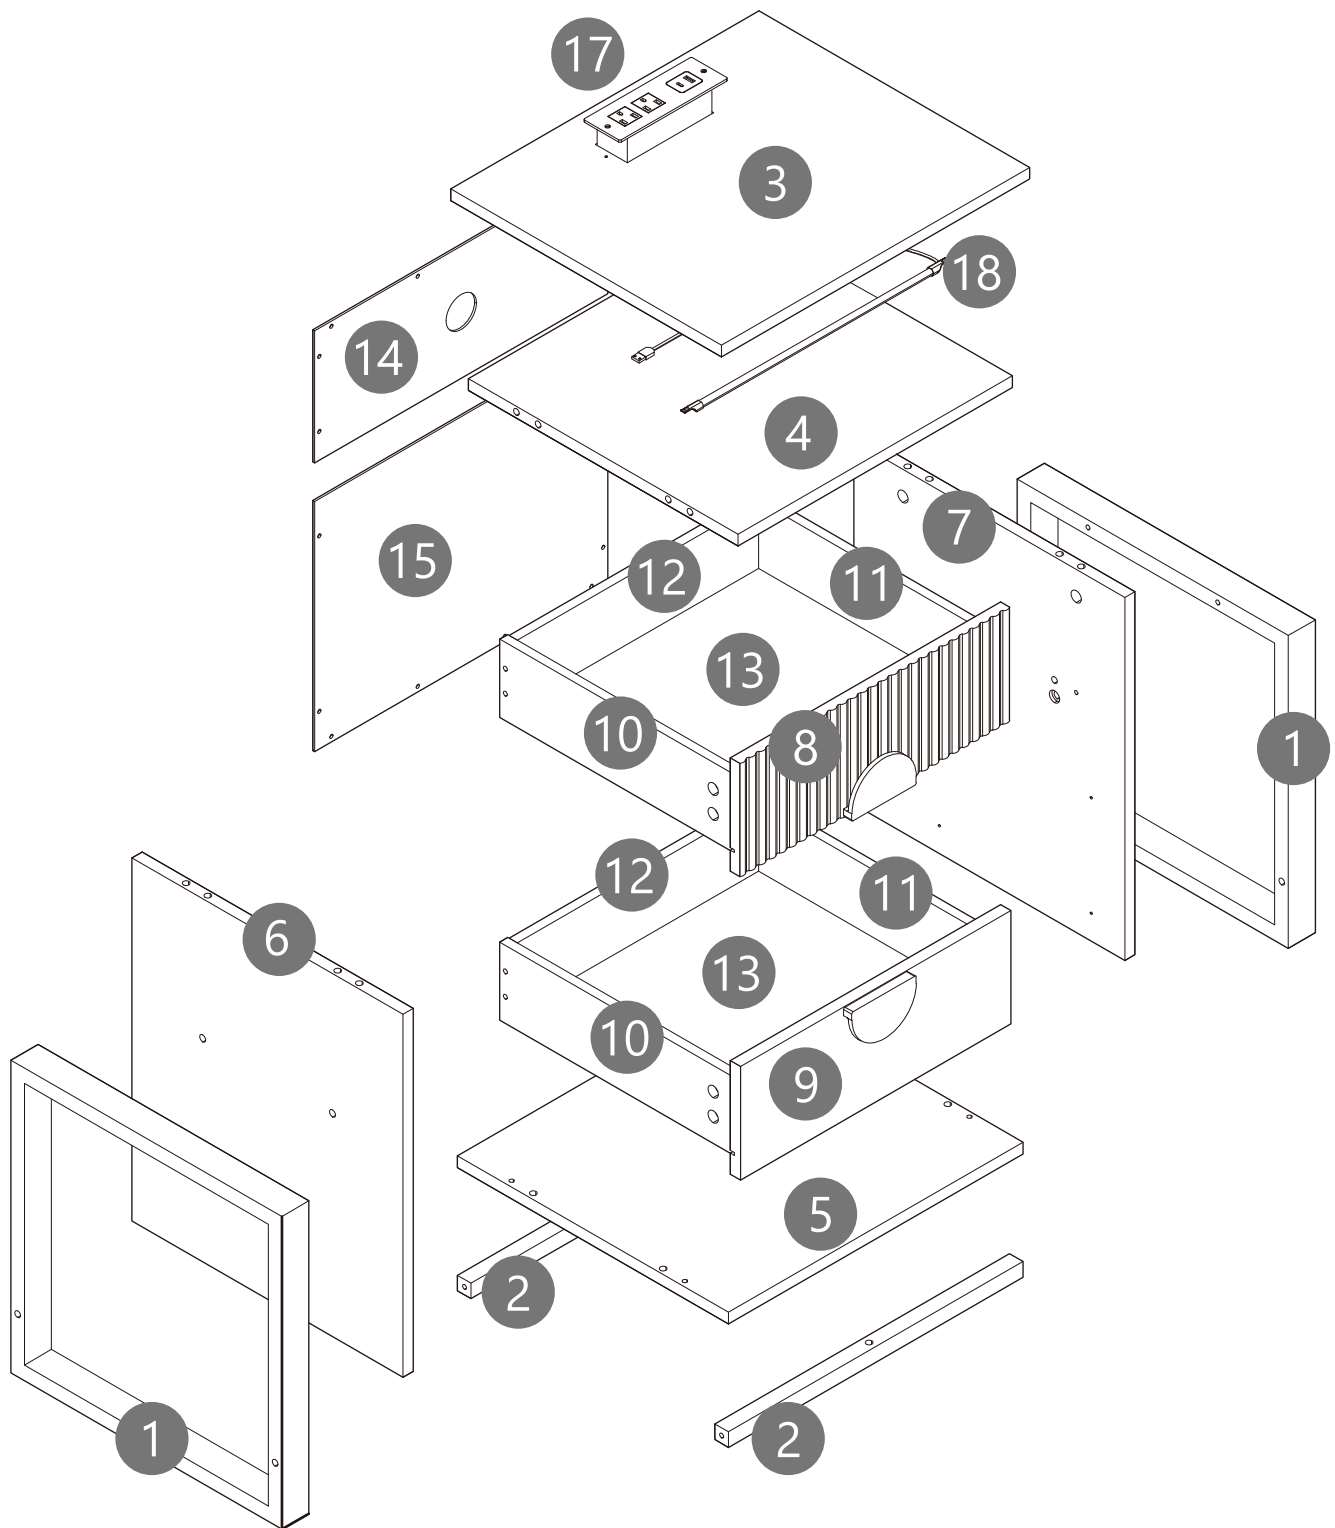


PARTS

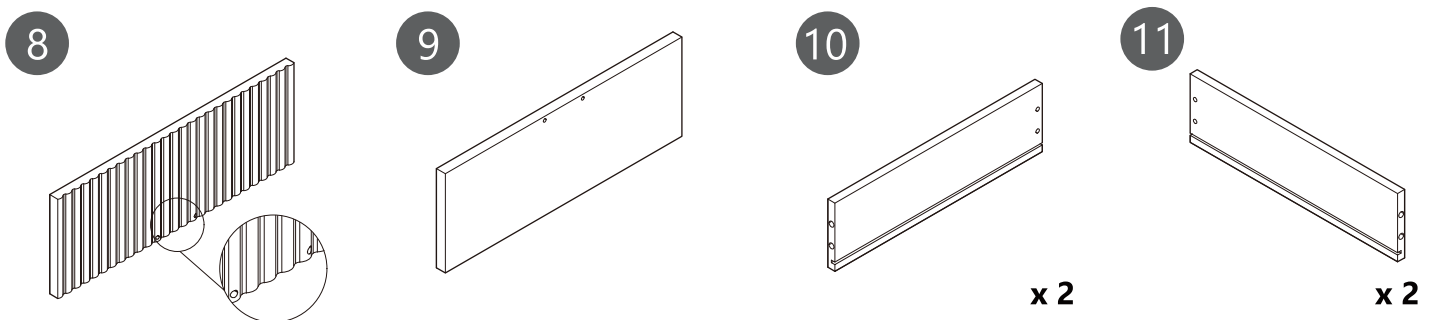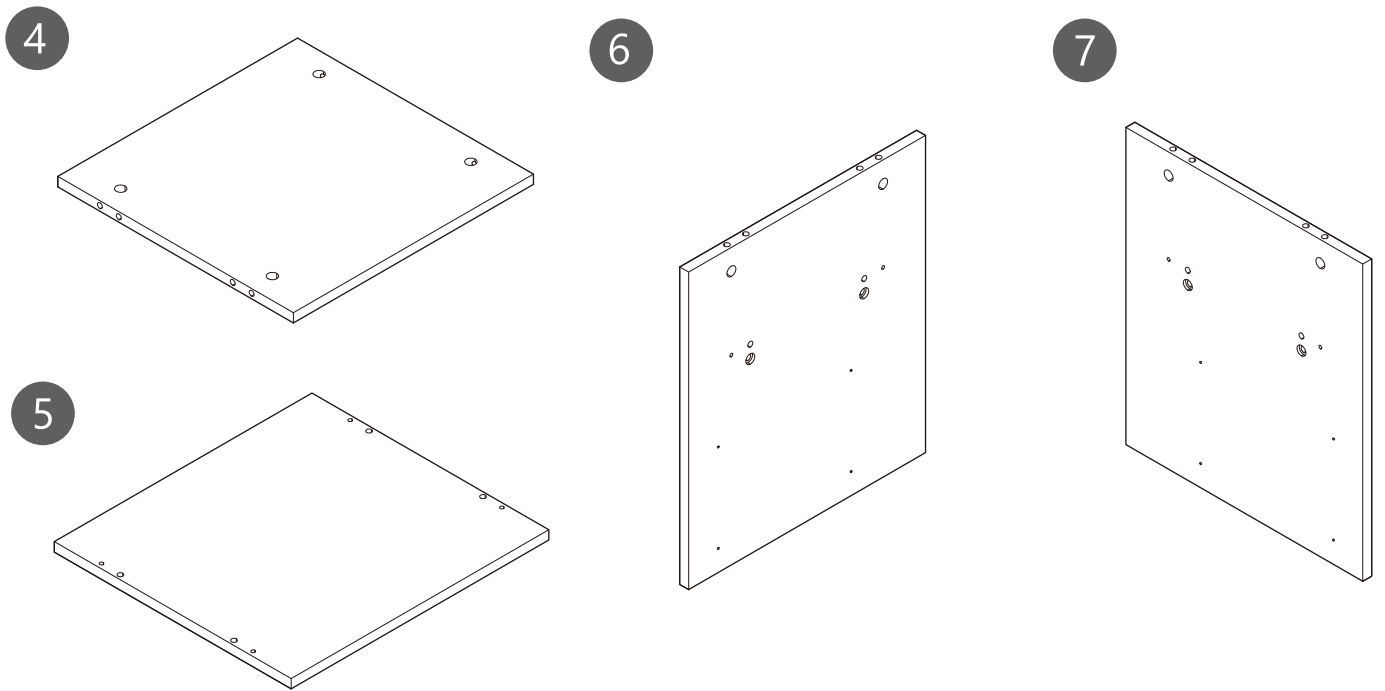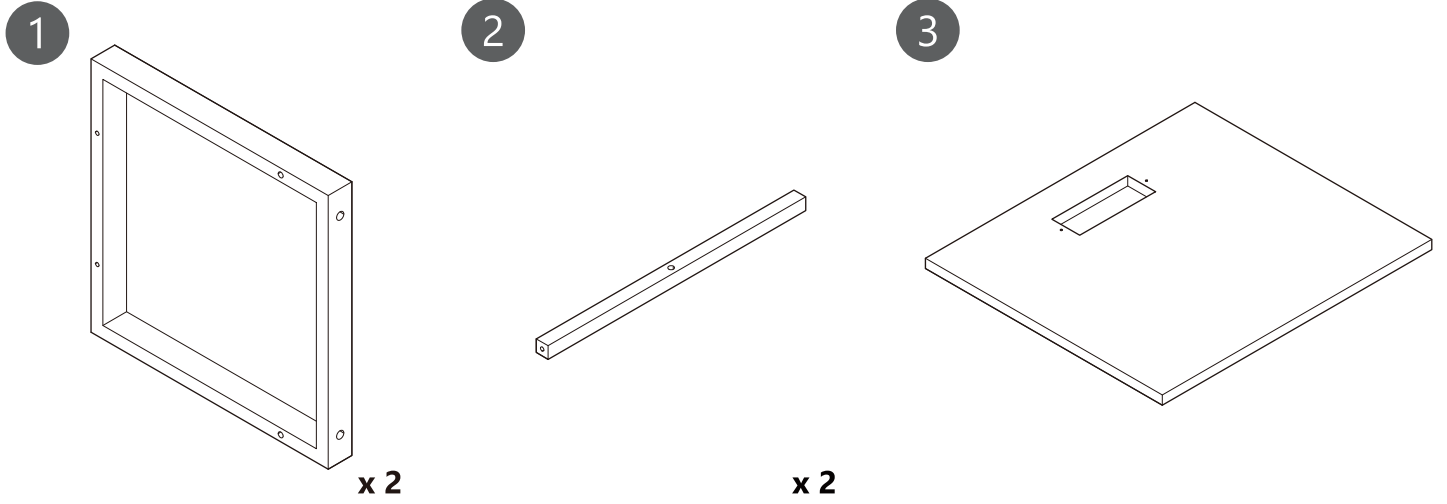


PARTS

12

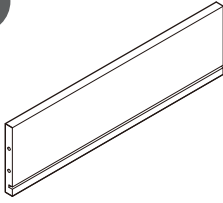


x 2

13

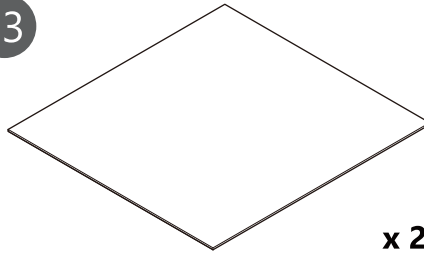


x 2


14

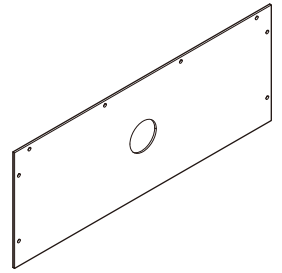


15

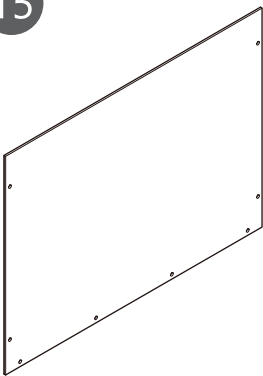

17

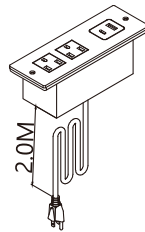

18

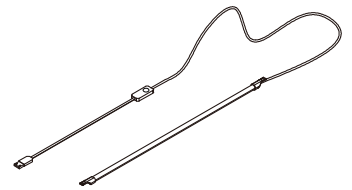

A



M5x42
16 PCS

B



Ø15x10
16 PCS

C




Ø8x40
12 PCS

D




M3.5x14
50+2 PCS

E




M5x40
12 PCS

F



M6x30
6 PCS

G




M6x70
4 PCS

H




M4x15
4 PCS

I




Ø95*64
2 PCS

J



M6x15
4 PCS

K




40*10
2+1 PCS


L



M3.5x14
2 PCS




1 PCS

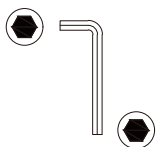

4 #
1 PCS

PARTS

16



CL X 2



DL X 2



CR X 2





DR X 2







Attention: there are 4 kinds of slides in our product, in which 2 are **Boards slides**, which marked as **CL & CR** and contains 2 pieces respectively , and the other 2 are the **Drawer slides**, which marked as **DL & DR** and contains 2 pieces respectively.

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.


Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process

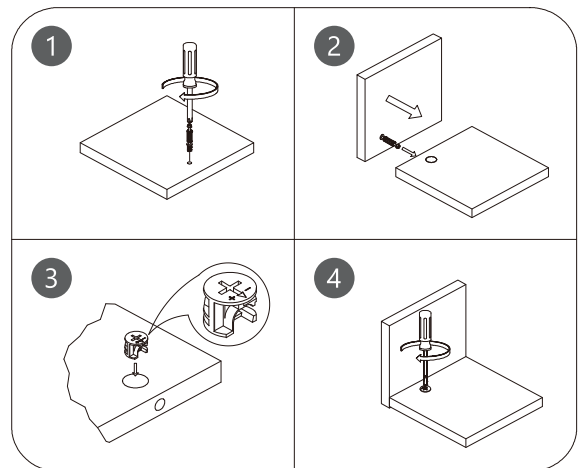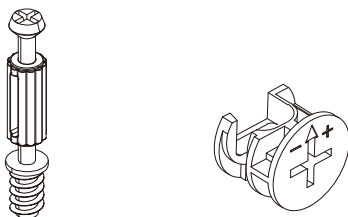

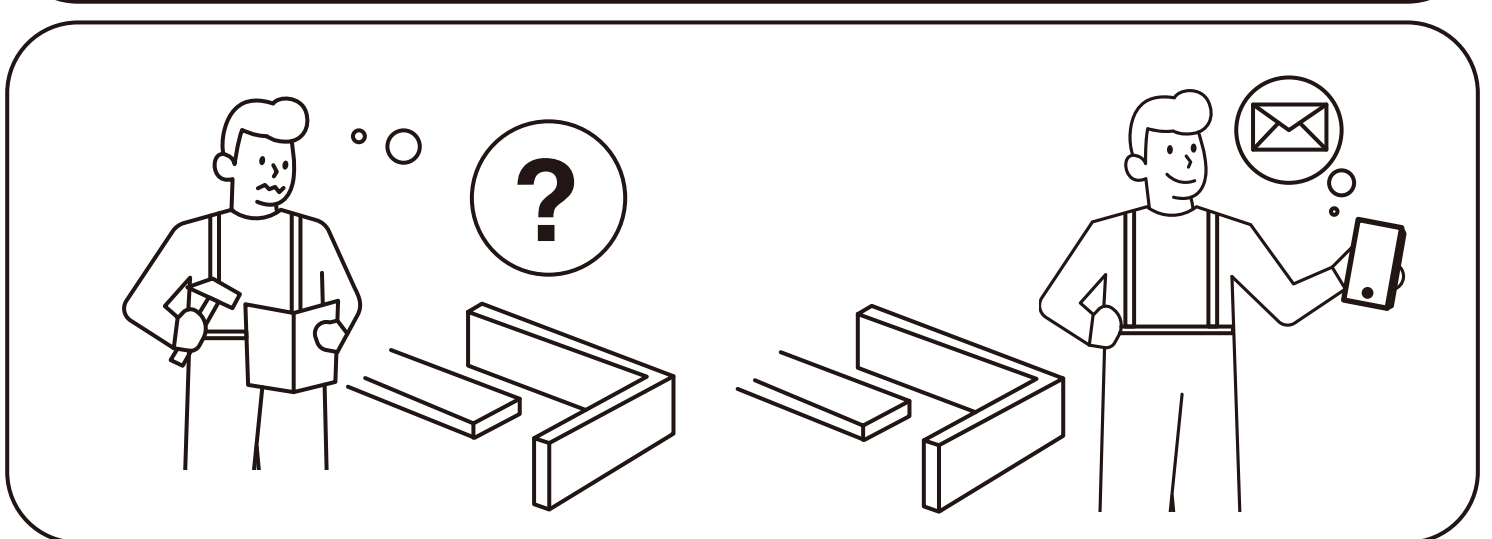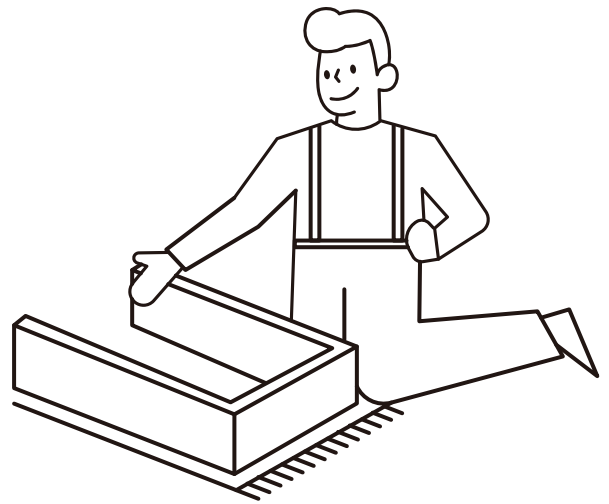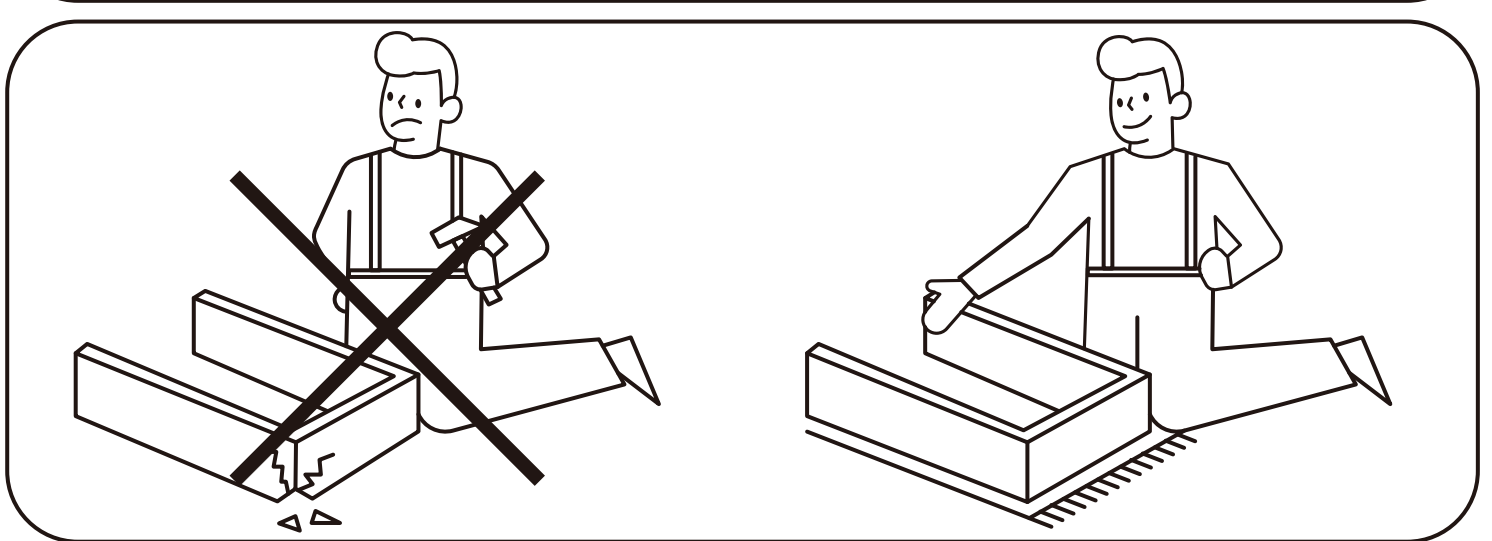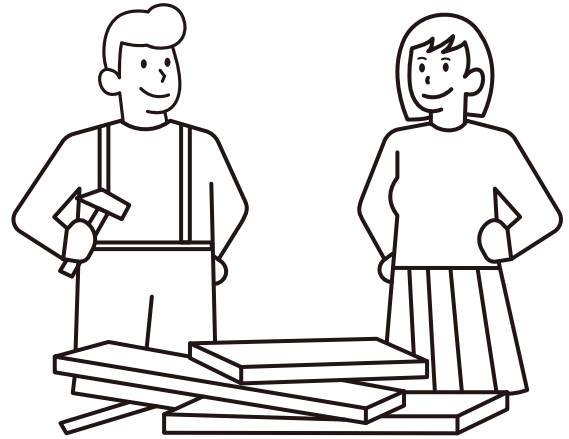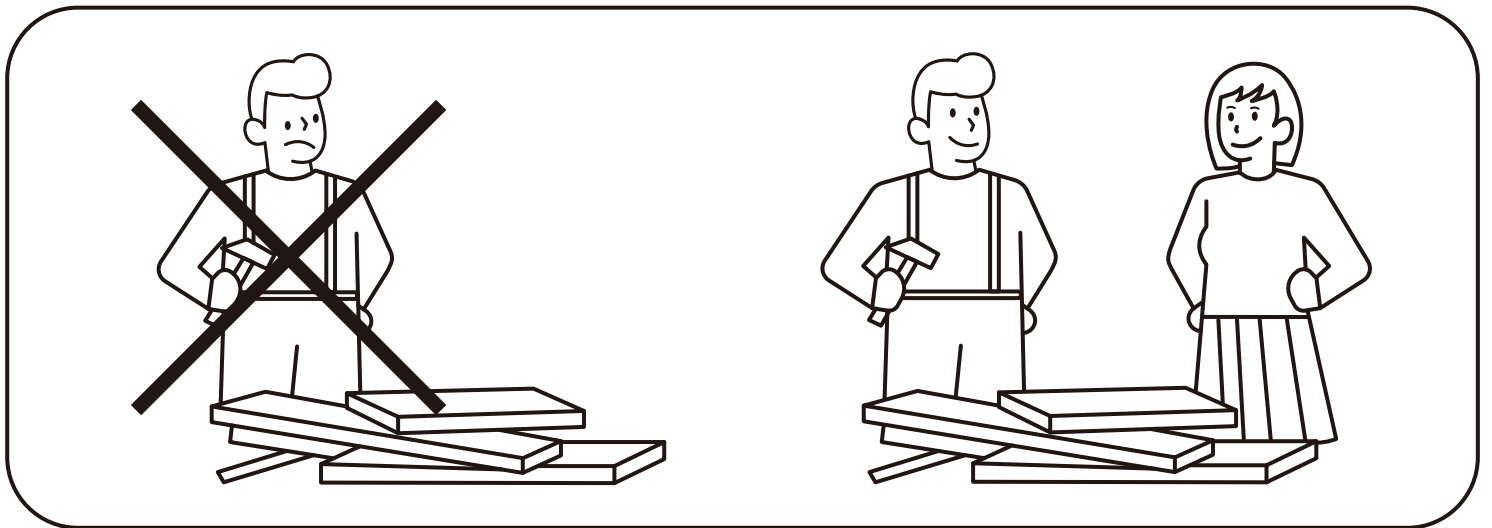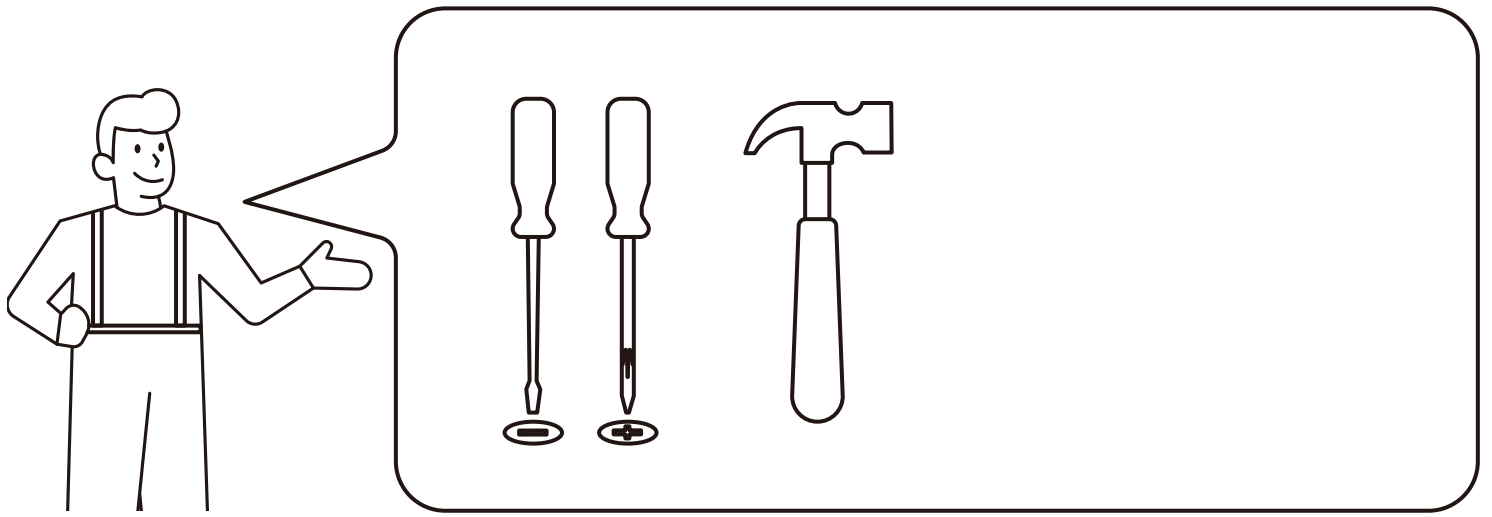


How to work the Knock Down (kd) assembly system

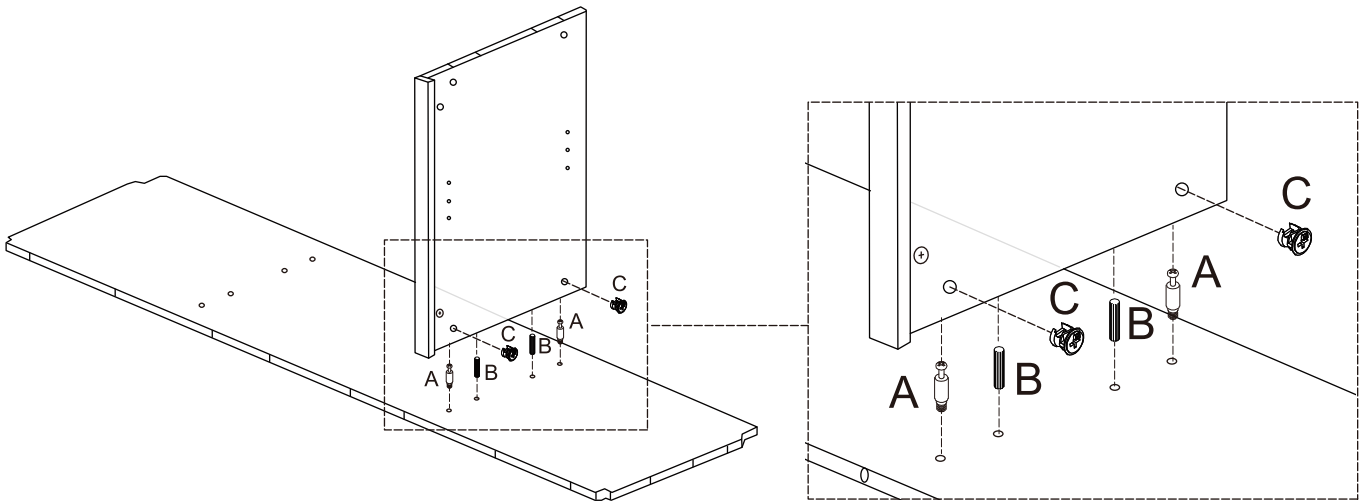


How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

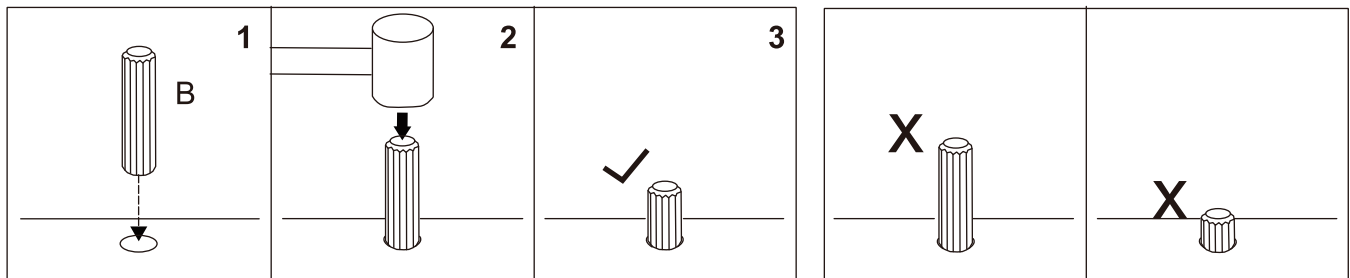

How to use the Cam Lock system

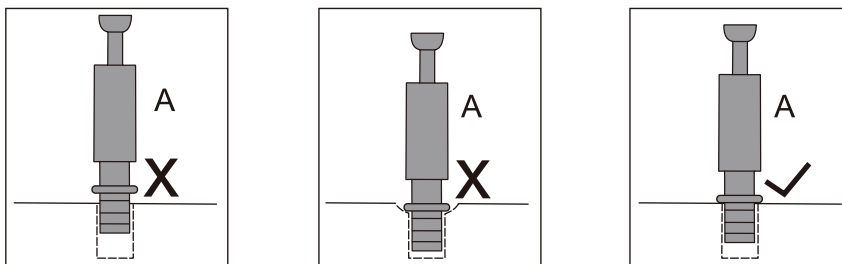


1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-drilled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

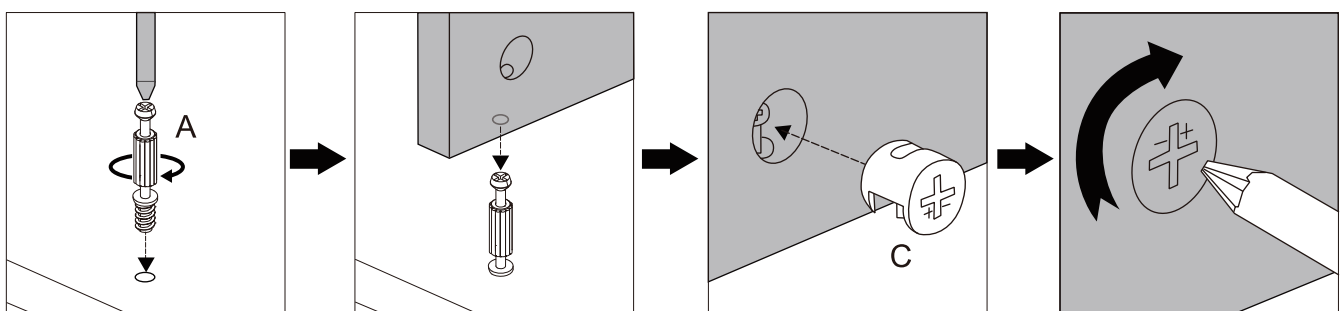


Before installing the product, observe the general structure.
It is divided into 5 parts in total:

1. Install the Boards and Slides(⑥&⑦)
2. Install the Frame Part (④&⑤&①)
3. Install the Top Panel (③) & Back Panel (⑭&⑮)
4. Install the Drawers
5. Install the Drawers Slides

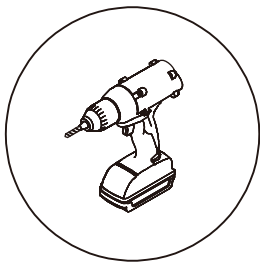


We recommend using a power drill to assemble.

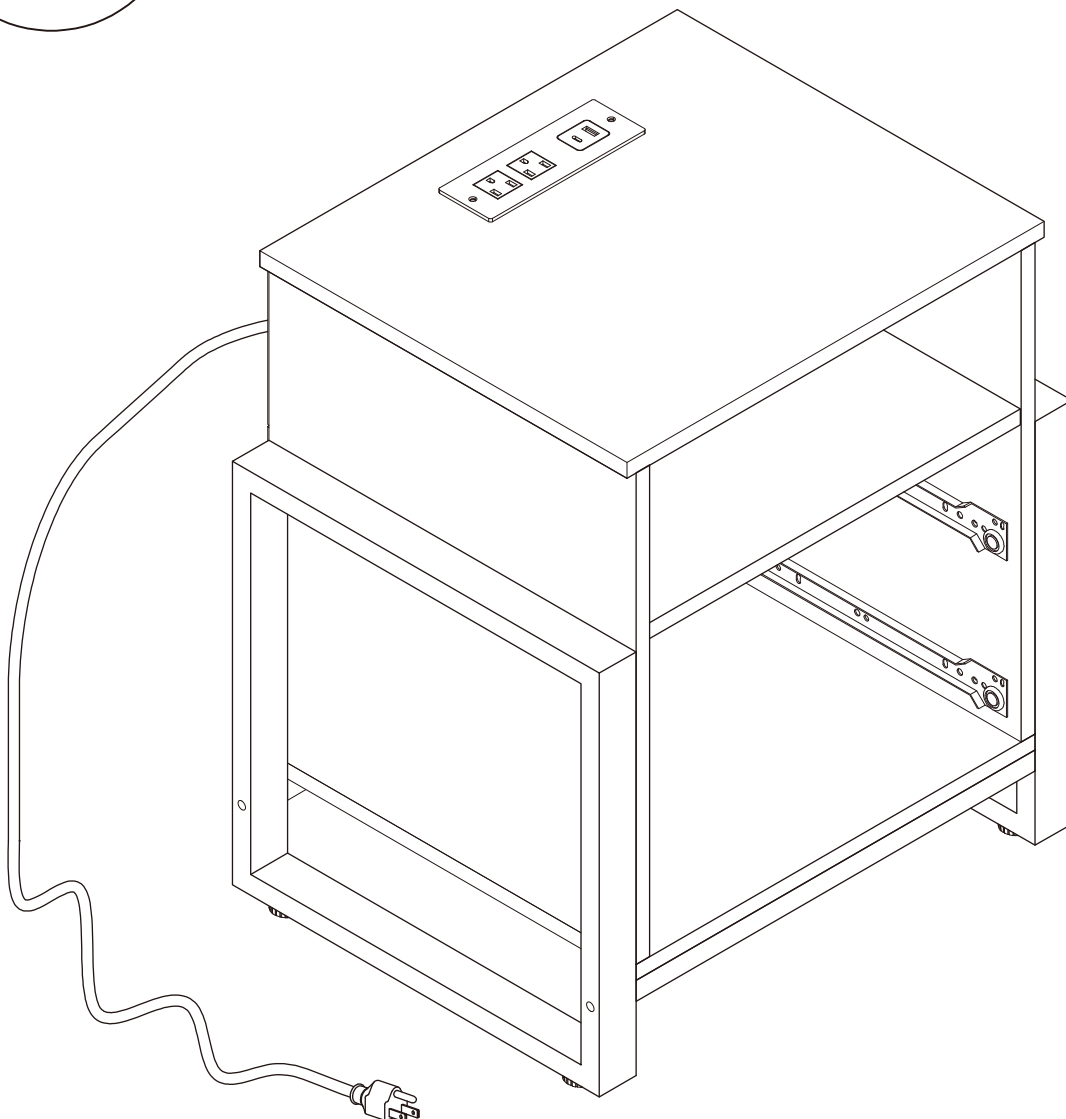

Step 1

-Using Screws (D) to assemble Slide (CL) to Board (⑥).


Screwing one more screw in this position for reinforcement.

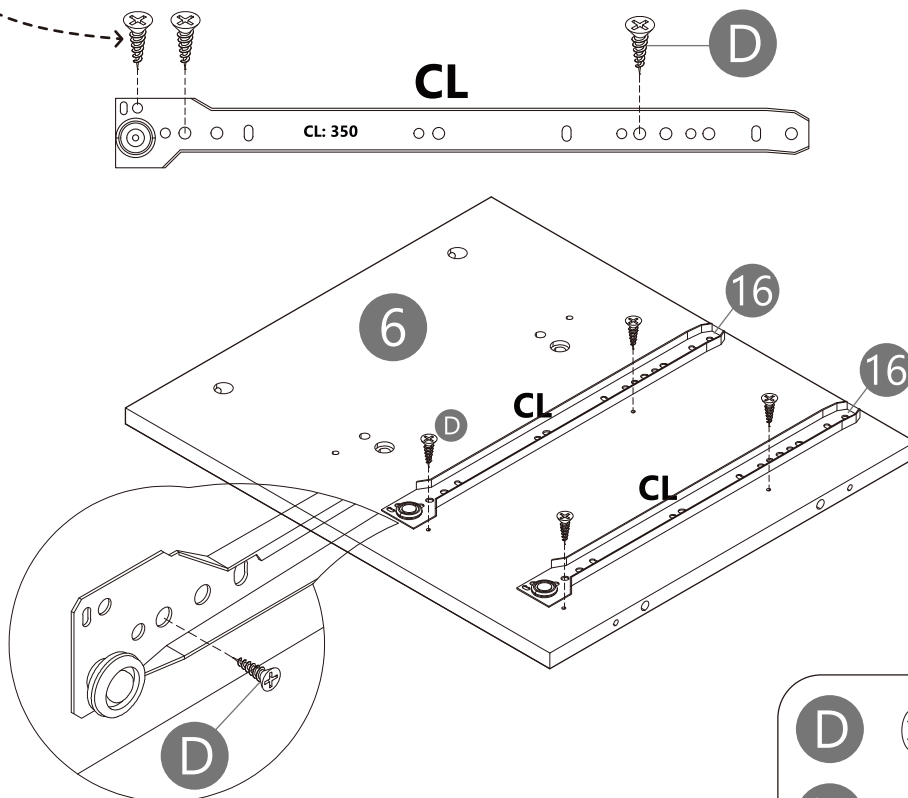

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

Step 2


-Securing Cam Bolt(A) into Board (⑥).

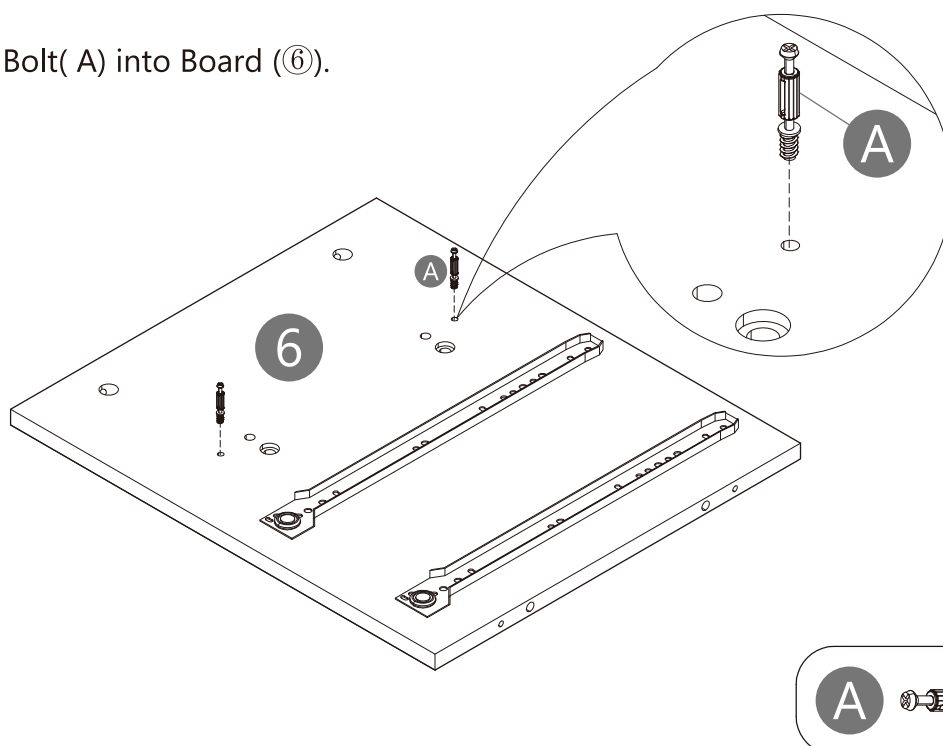

Step 3

-Using Screws (D) to assemble Slide (CR) to Board (7).

Screwing one more screw in this position for reinforcement.

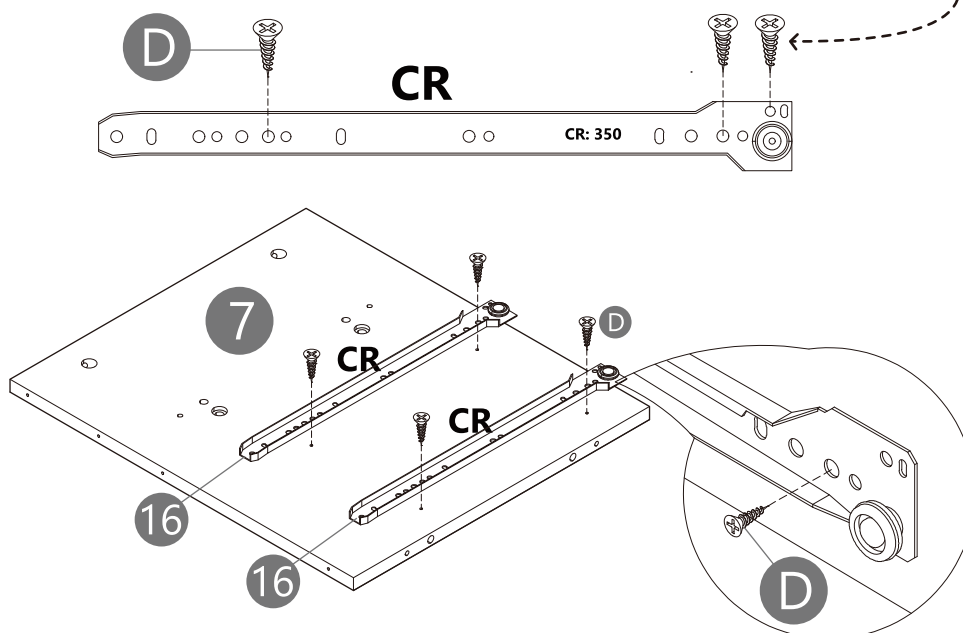


D  x 6

16  CR x 2

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

Step 4


-Securing Cam Bolt (A) into Board (7).

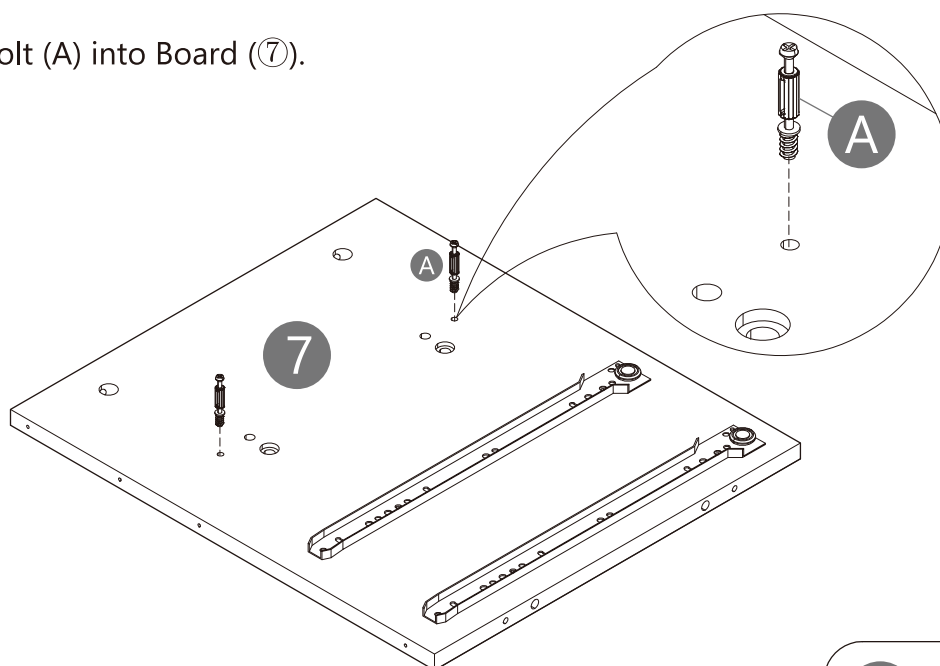

A  x 2

Display. Non-installation steps






Reference to the completion of the installation: checking the position of the slides and screws in the board.

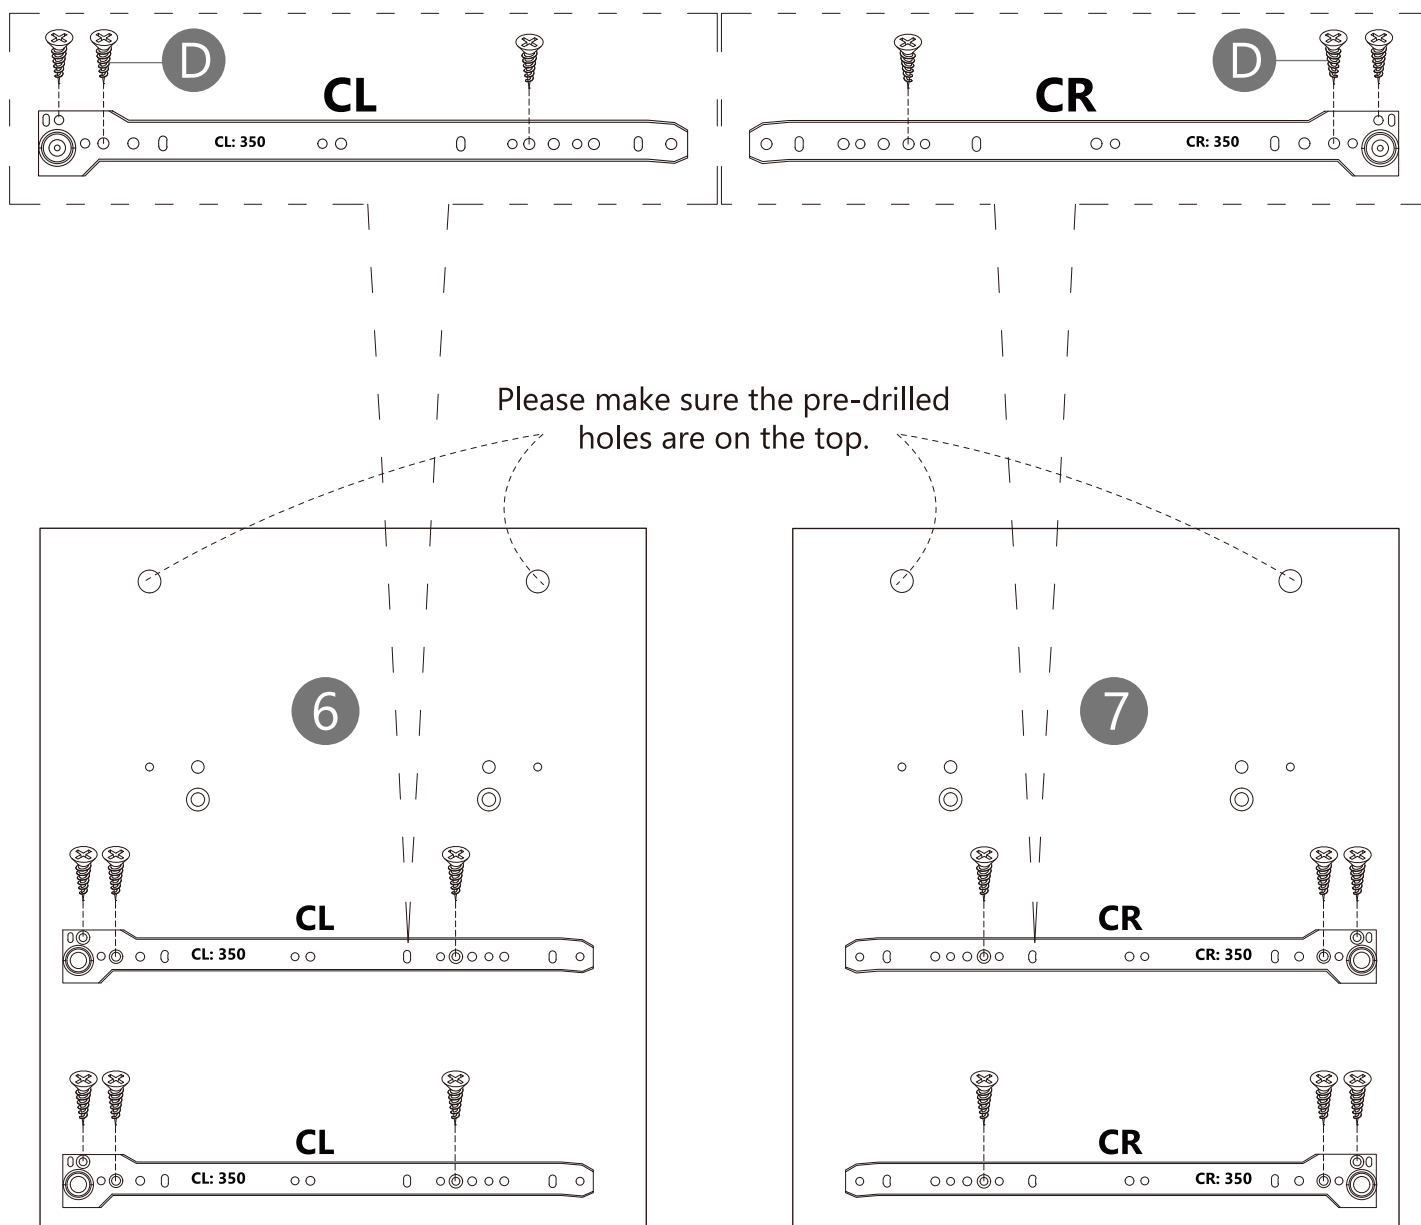

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.



Step 5

- Inserting Wooden Dowel (C) into Board (⑥), then attach Board (④) to Board (⑥).
- Using Cam Lock (B) secure Board (④) to Board (⑥).

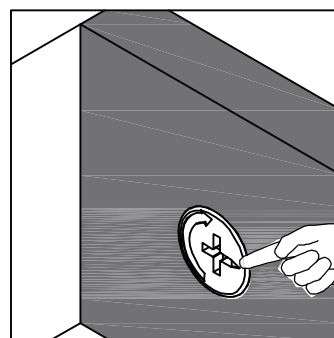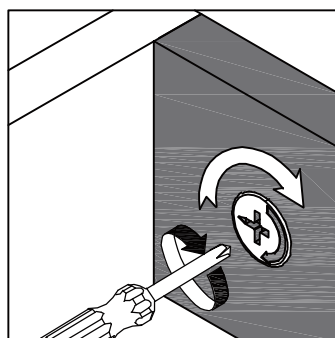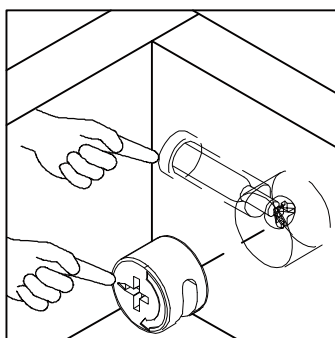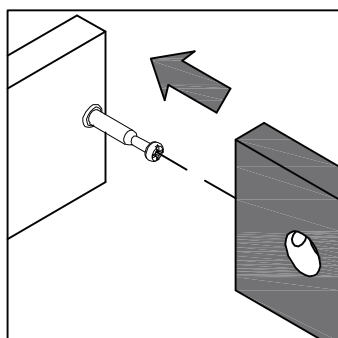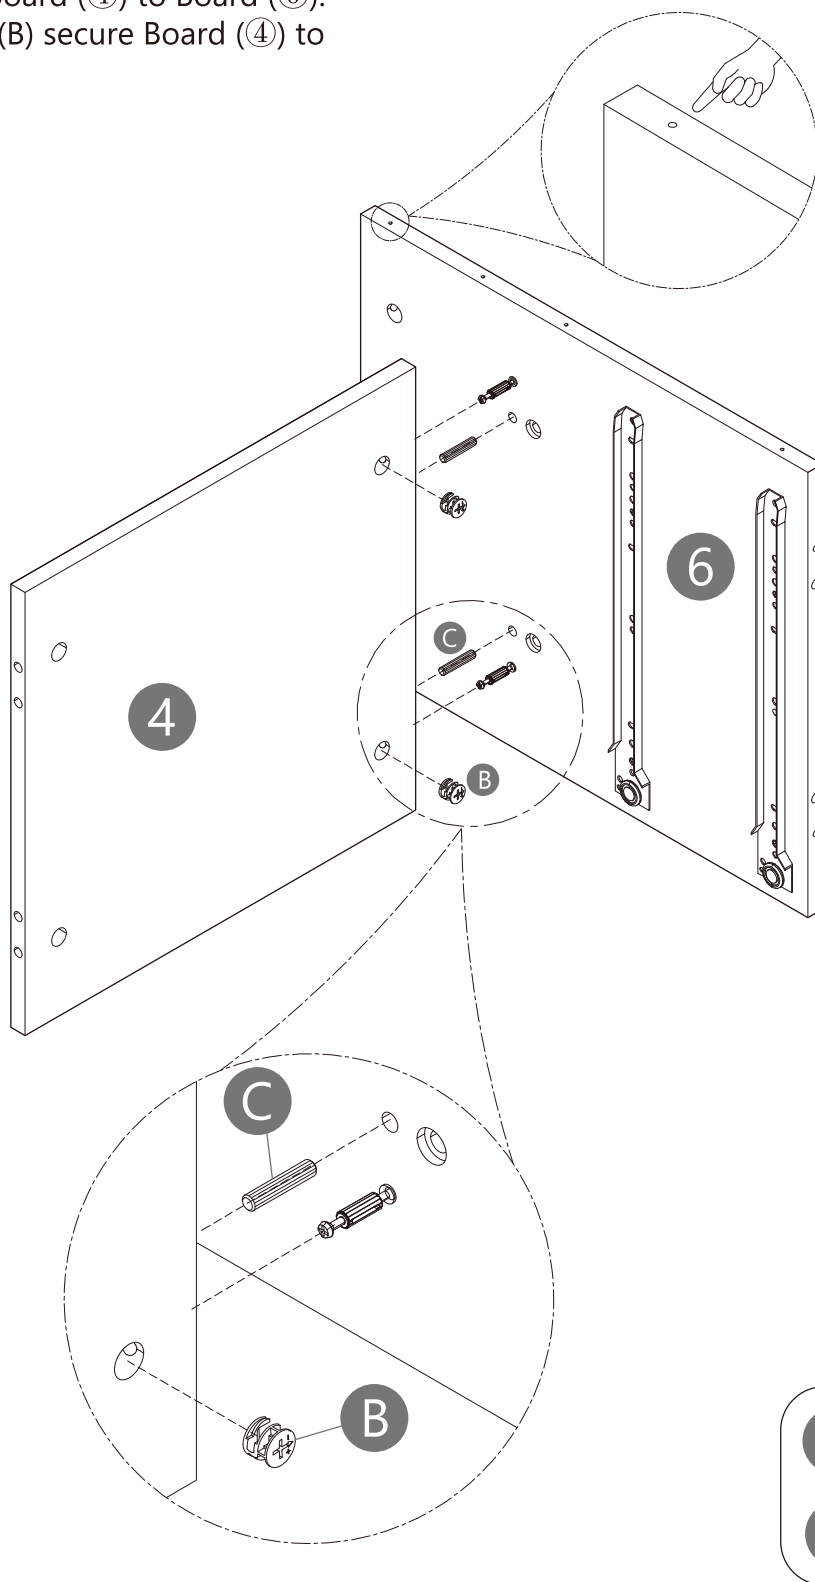



Step 6

Inserting Wooden Dowel (C) into Board (7), then attach Board (4) to Board (7).
Using Cam Lock (B) secure Board (4) to Board (7).

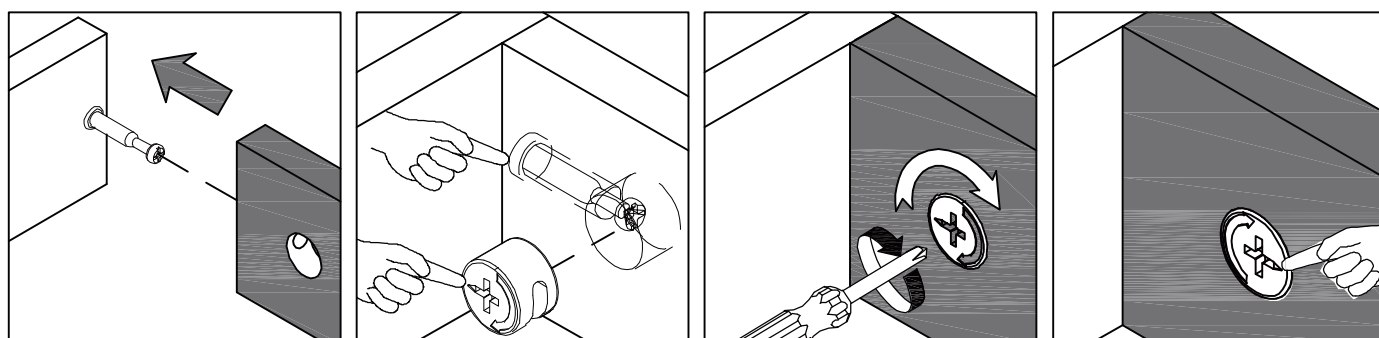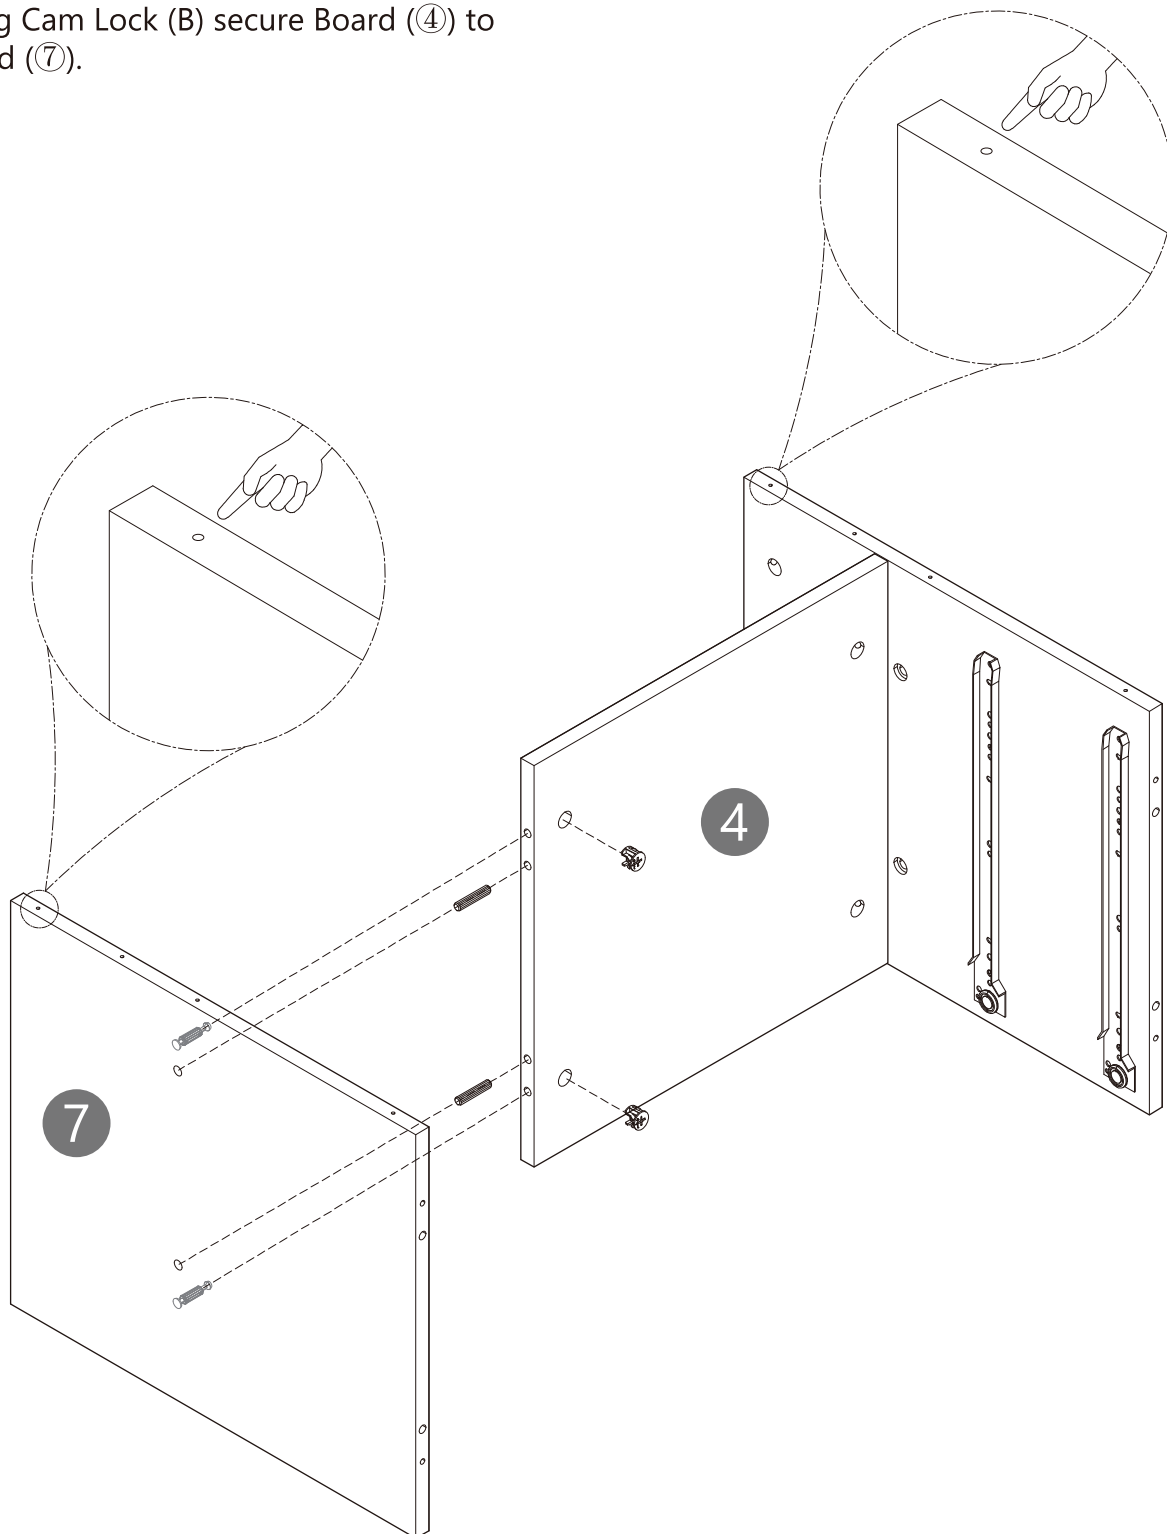



Step 7

-Using Screws (F) to assemble Steel Pipe (2) to Board (5).

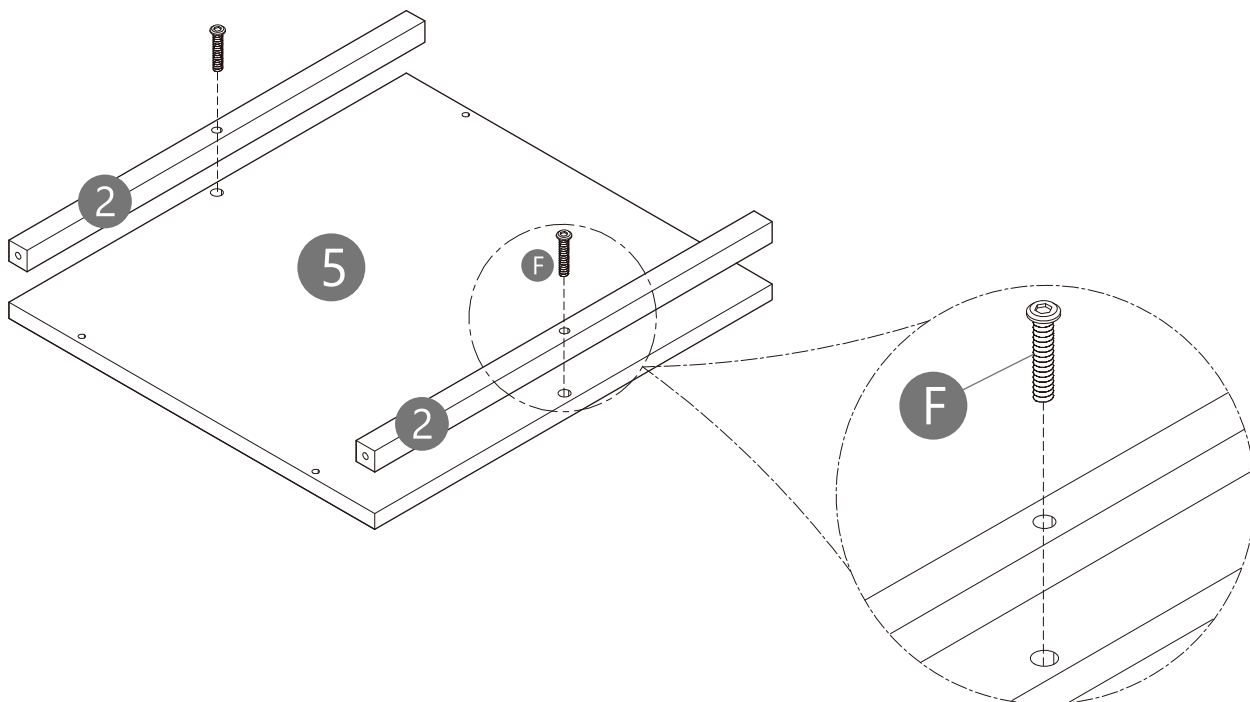




Step 8

-Inserting Wooden Dowel (C) into Board (6&7), then attach Board (5) to Board (6&7).
-Using Screws (E) to assemble Board (5) to Board (6&7).

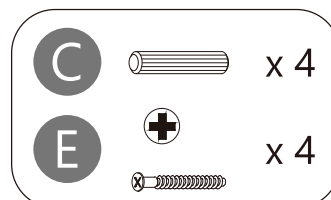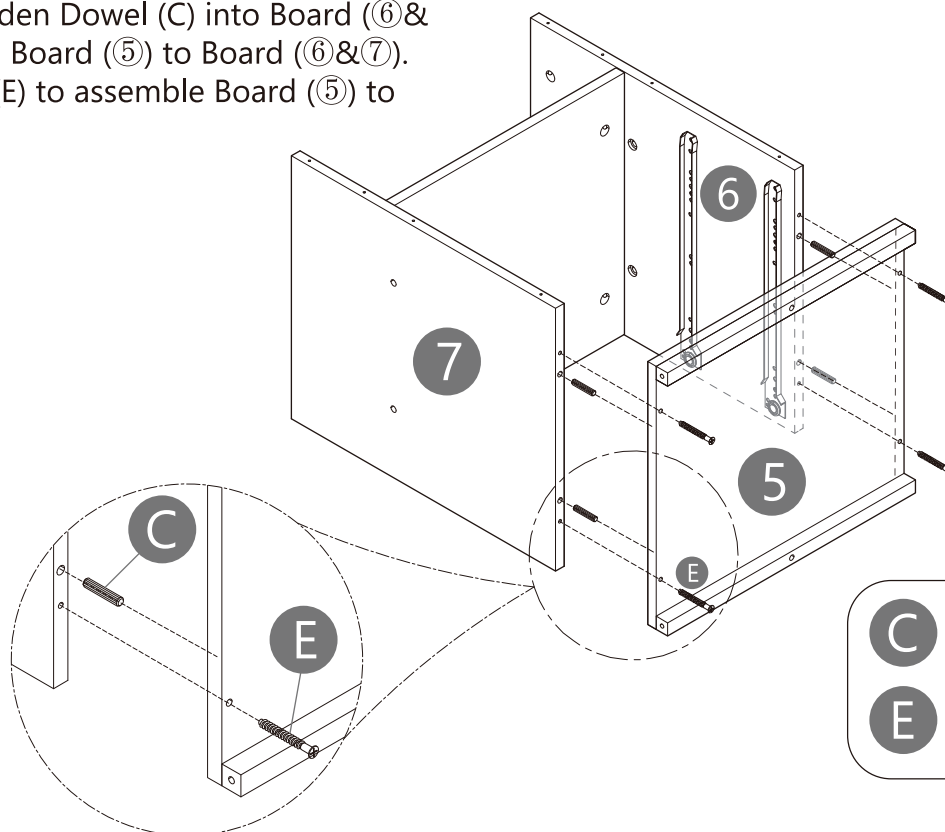



Step 9

-Inserting the feet (J) into the Steel Pipe (①) .

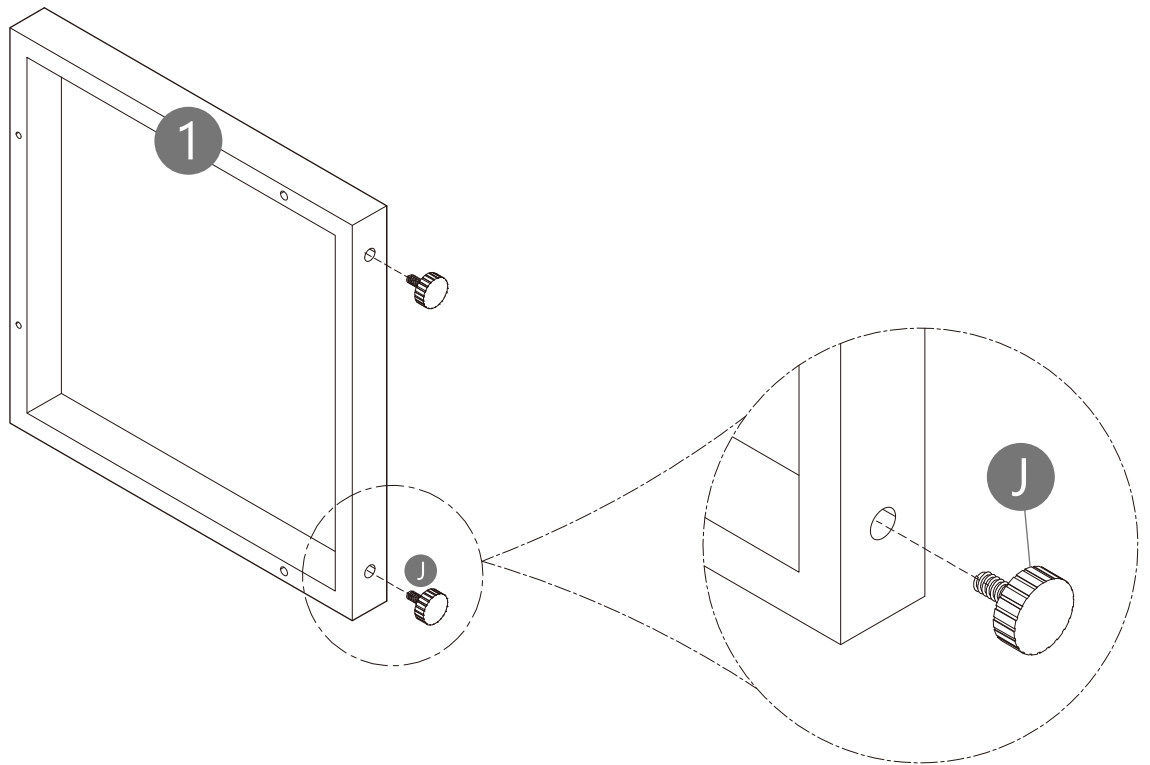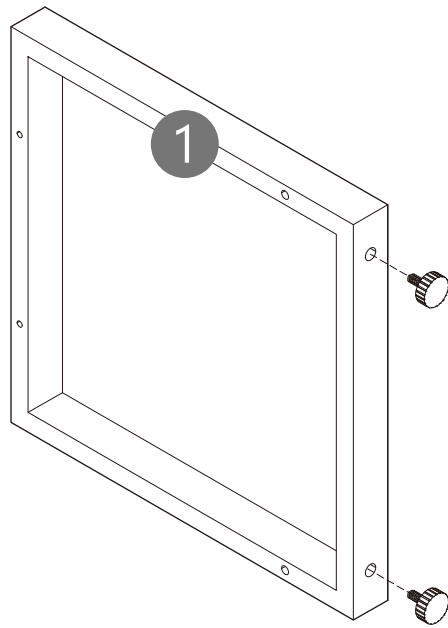



Step 10

-Using Screws (F) to assemble Steel Pipe (①)
to Board (⑥&⑦).

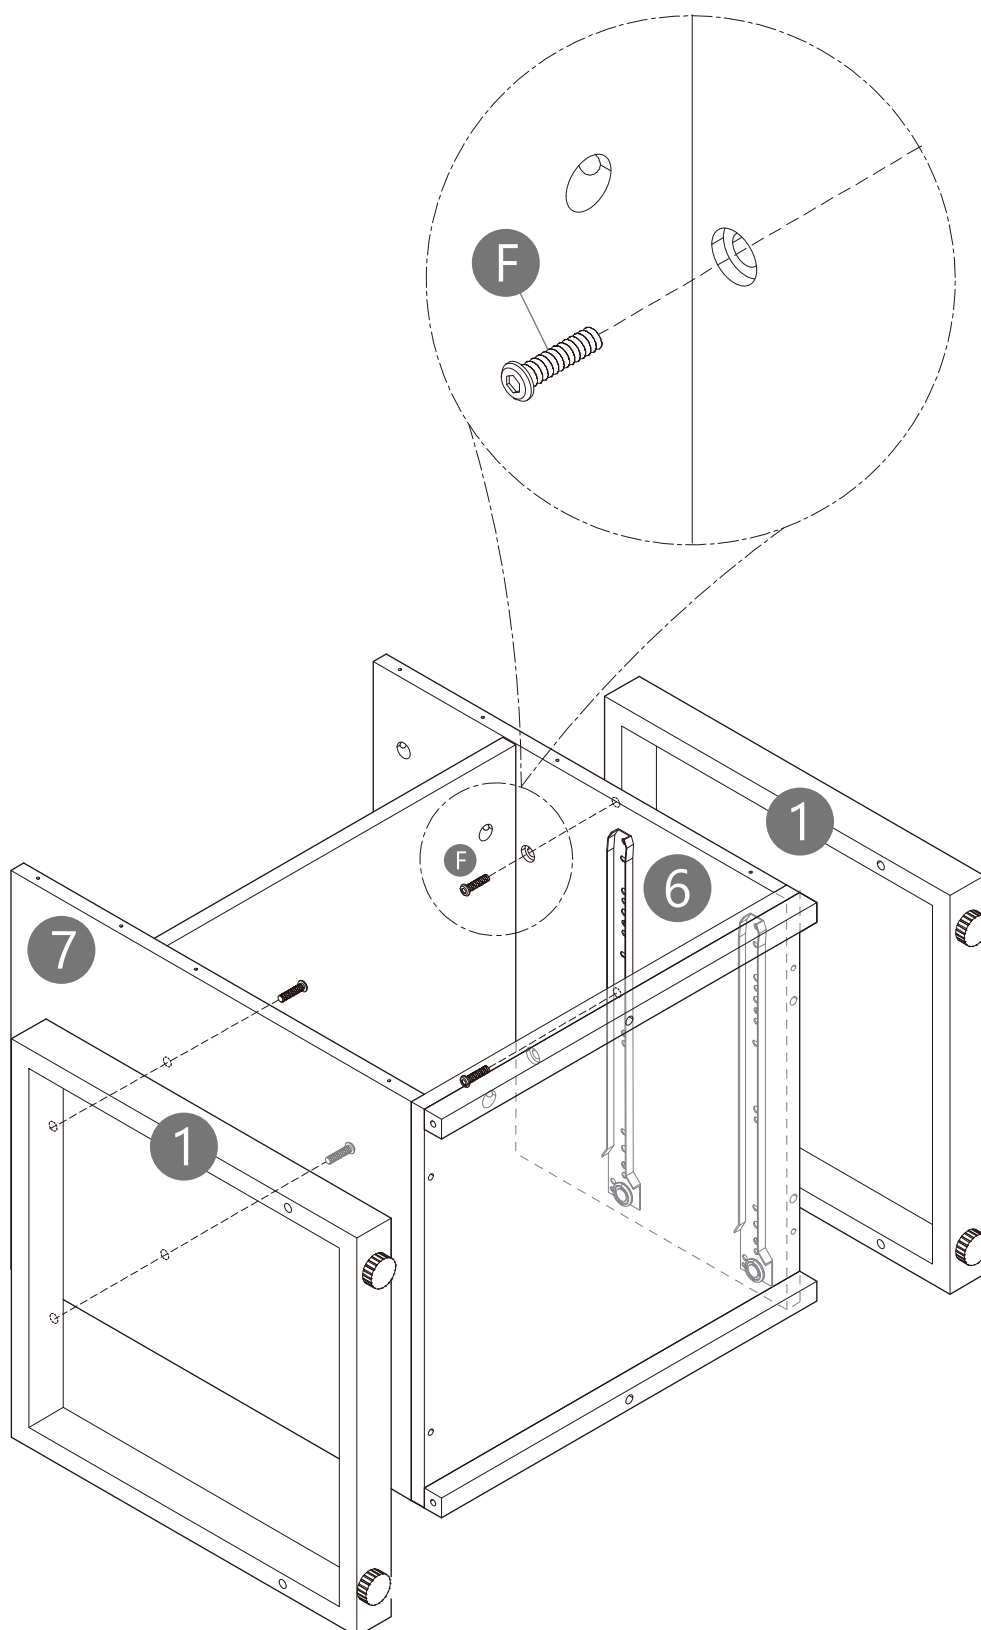

Step 11


-Using Screws (G) to assemble Steel Pipe
(①) to Steel Pipe (②).

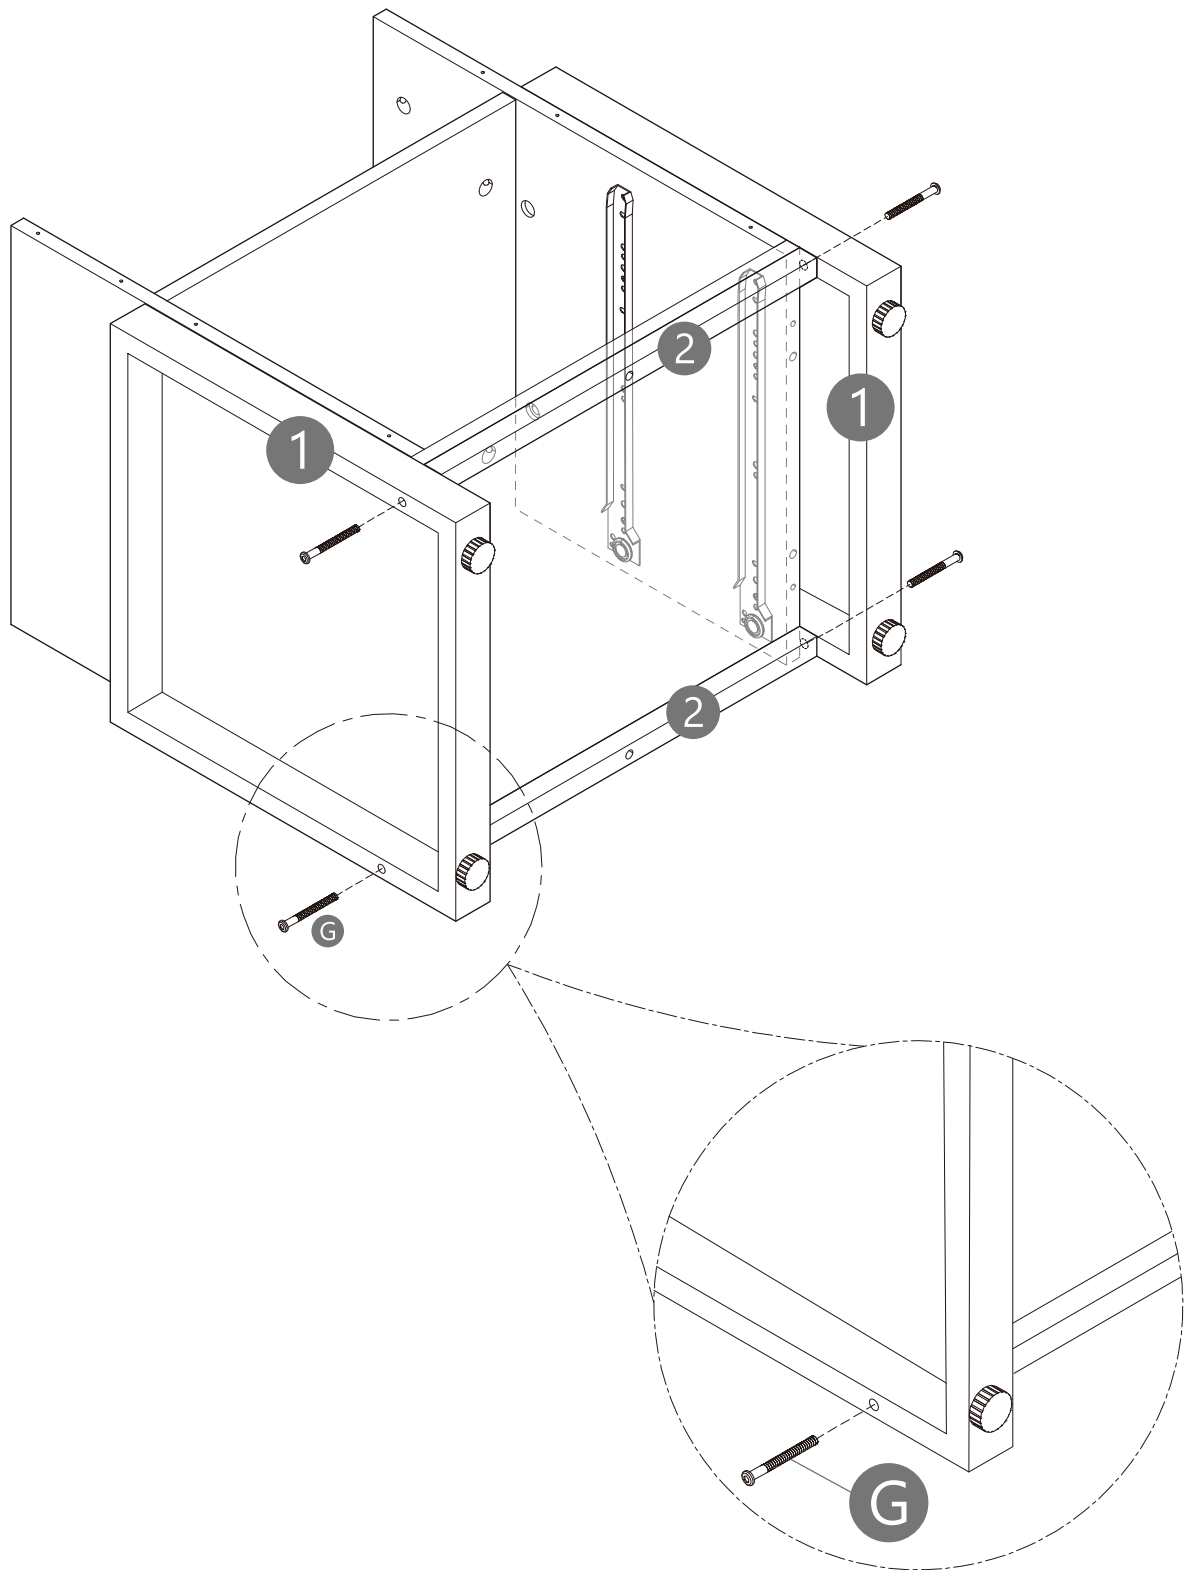

Step 12


-Using Screws (D) to assemble part (18) to Board (3).

-Using Screws (D) to assemble part (K) to Board (3).

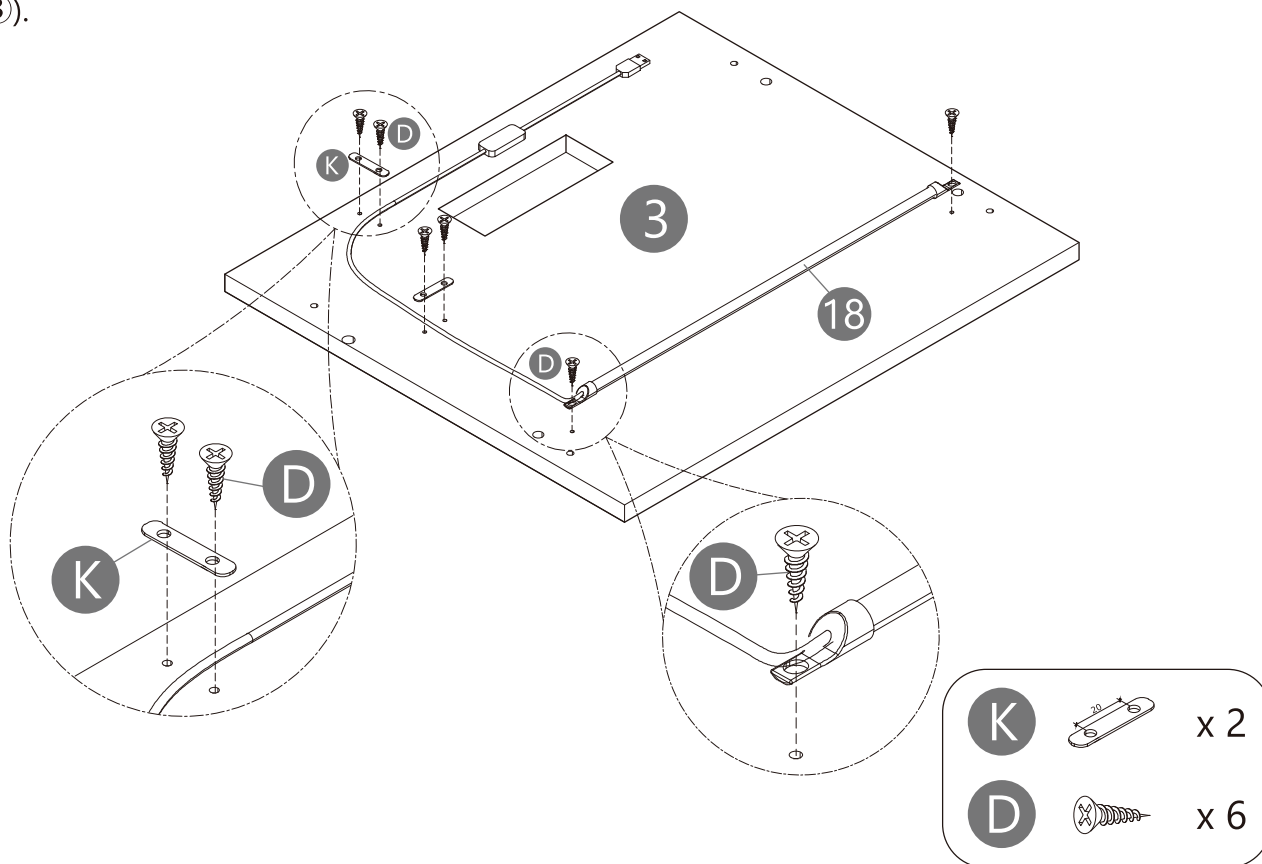



Step 13

-Securing Cam Bolt (A) into Board (3).

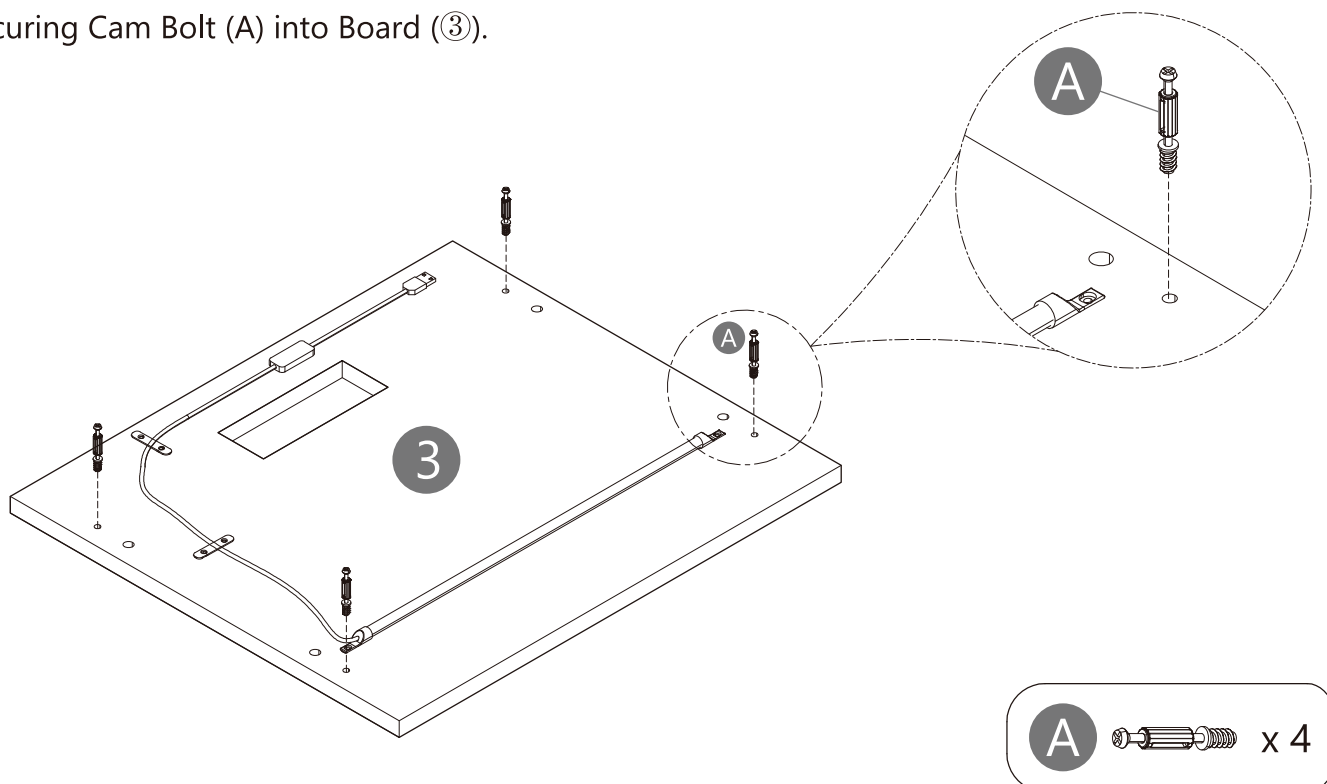


Step 14

- Inserting Wooden Dowel (C) into Board (⑥&⑦), then attach Board (③) to Board (⑥&⑦).
- Using Cam Lock (B) secure Board (③) to Board (⑥&⑦).

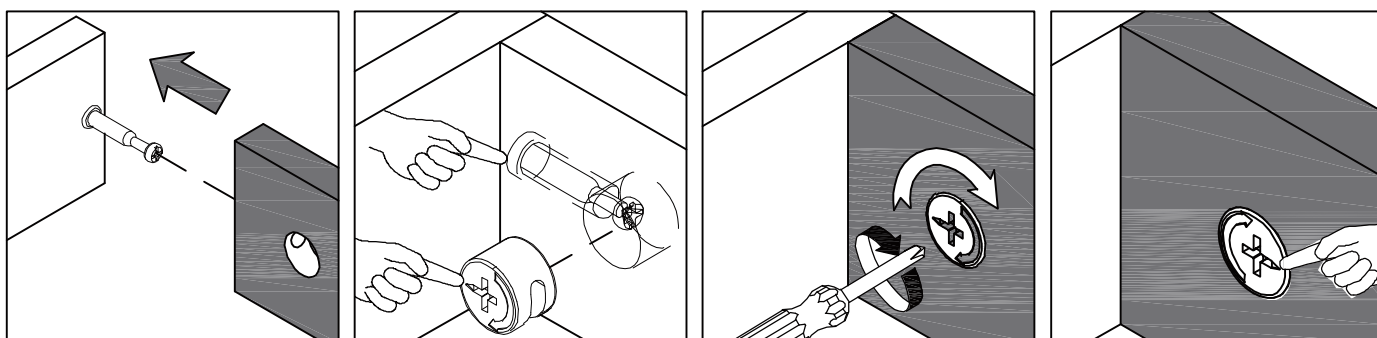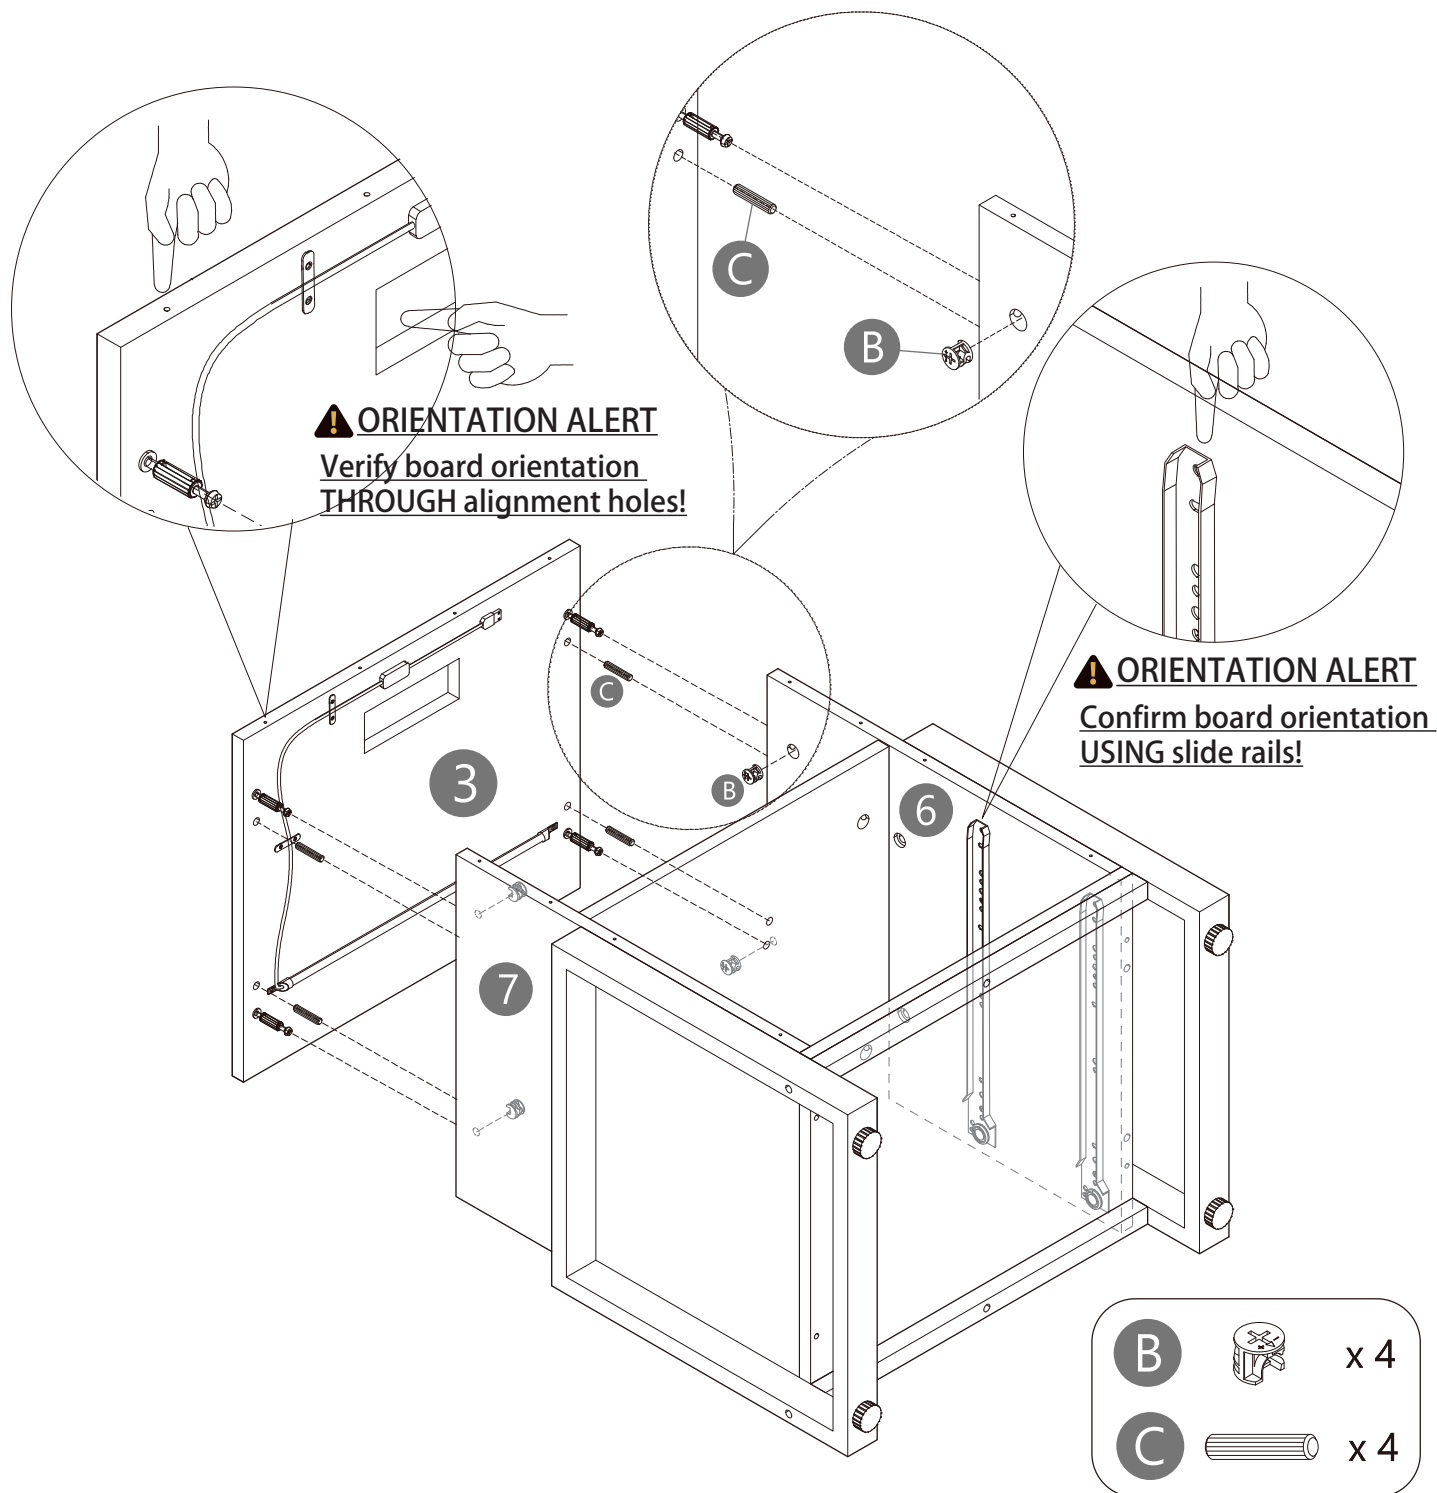



Step 15

-Using Screws (D) to assemble Back Panels (14&15) to the main body (6&7).

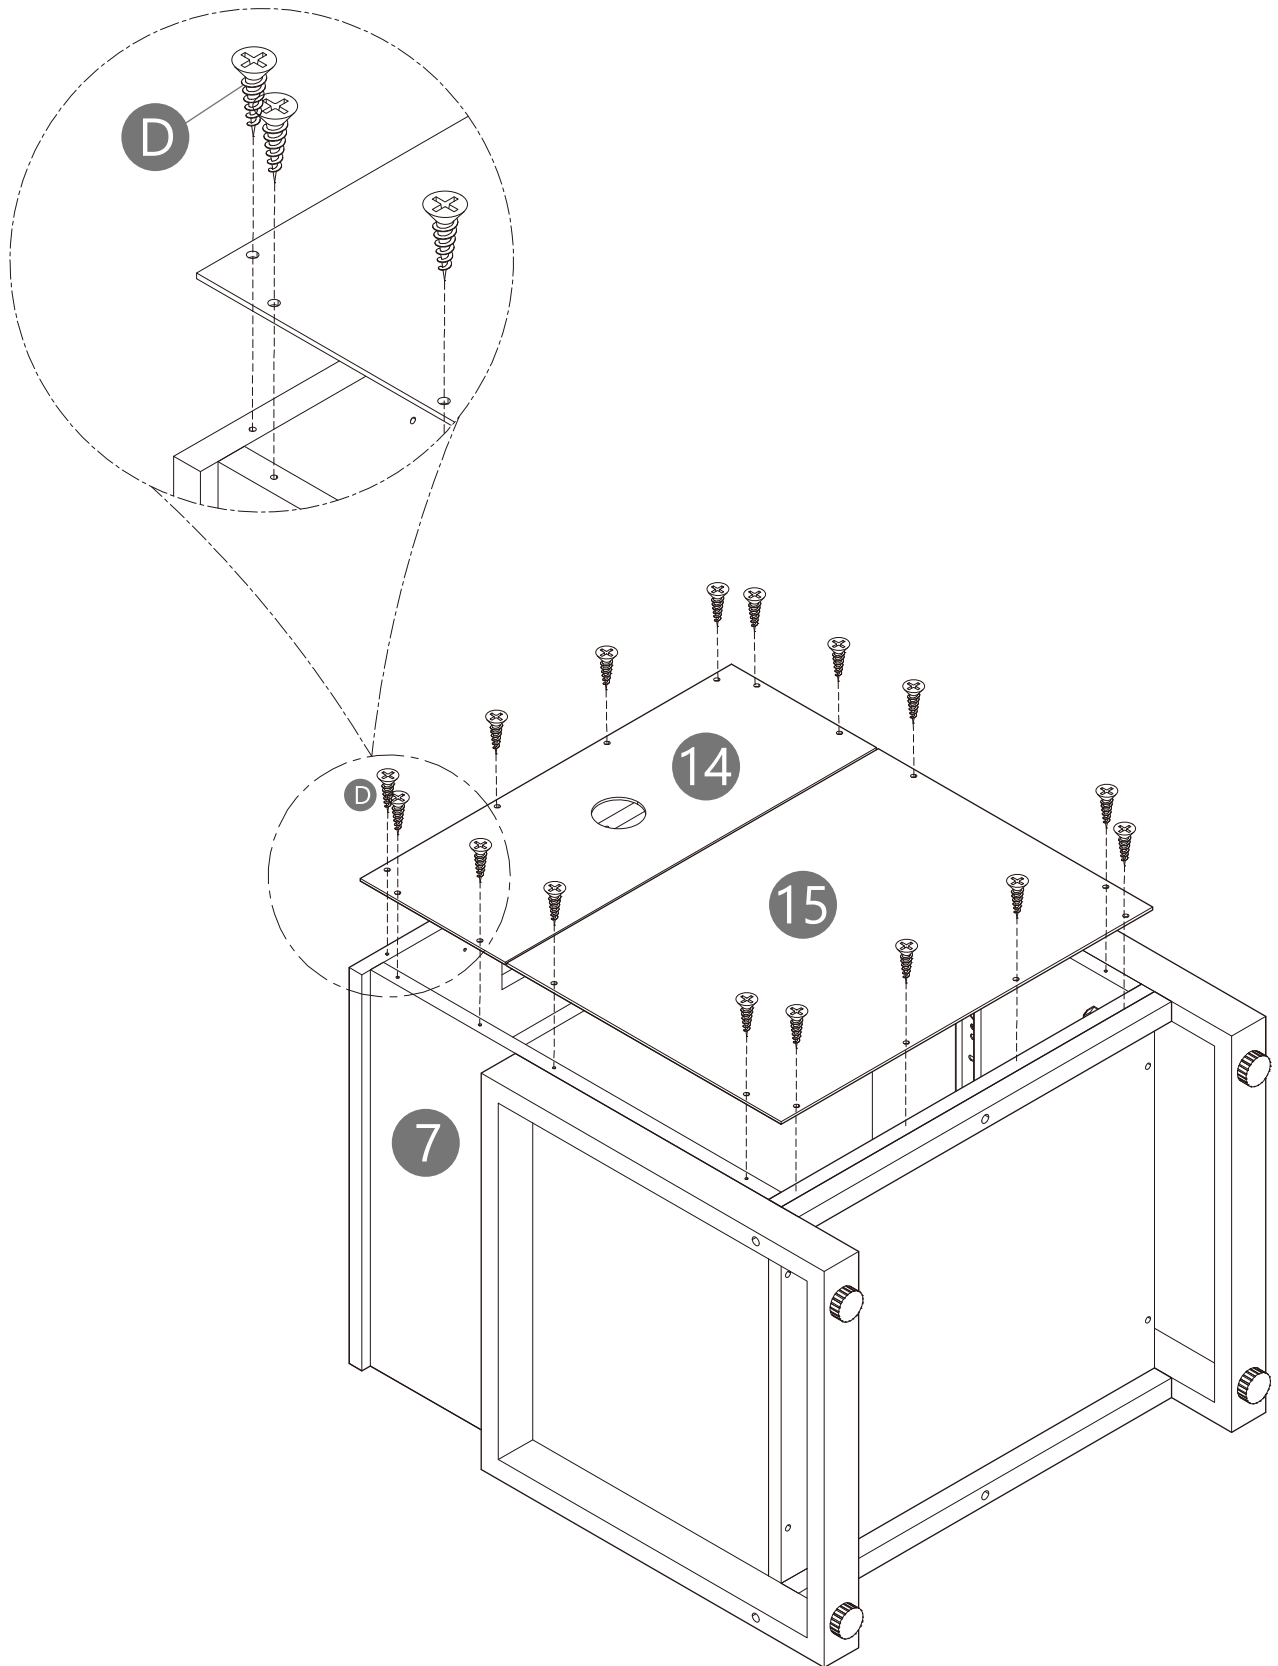



D  x 16

Step 16

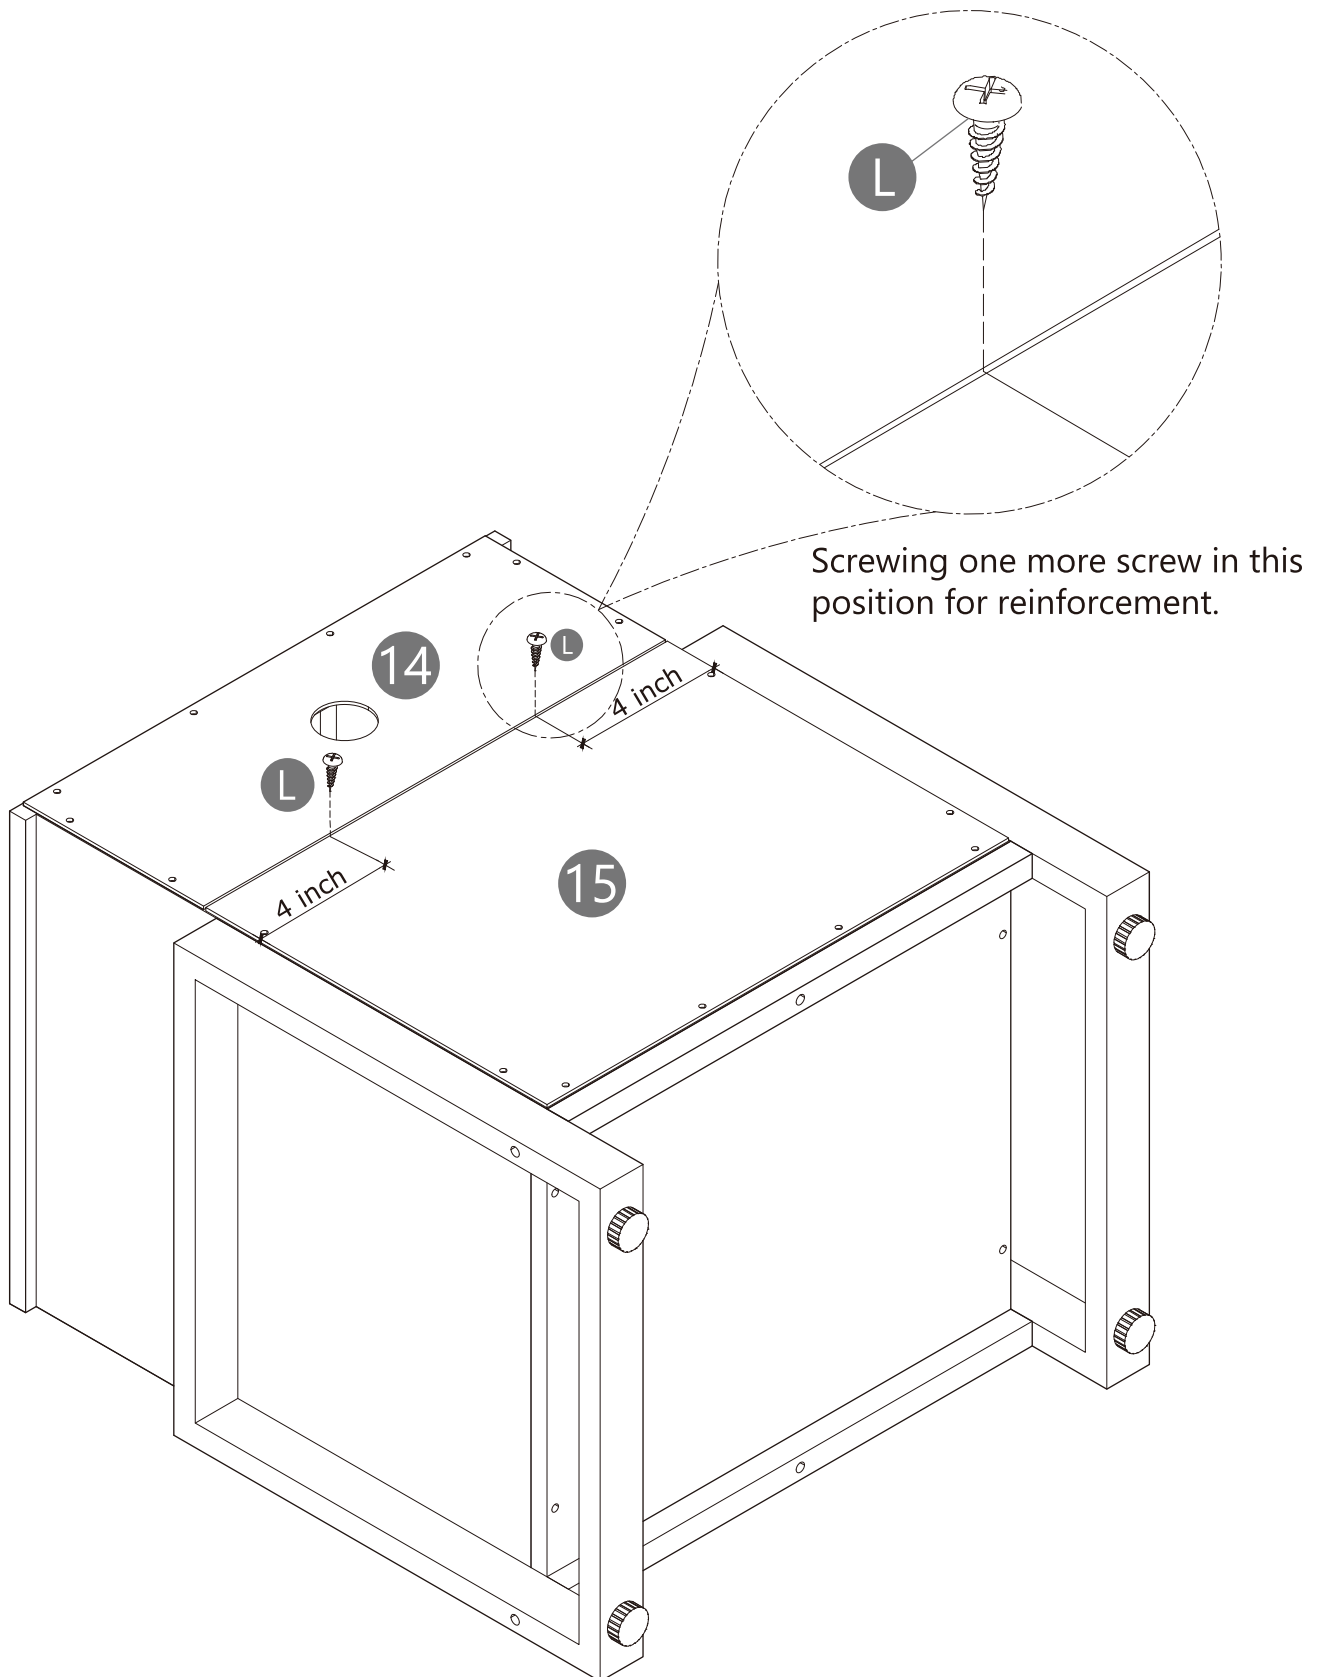




Step 17

-Using Screws (D) to assemble Charging Station (17) to the Board (3). Push the plug through the hole in the back panel.

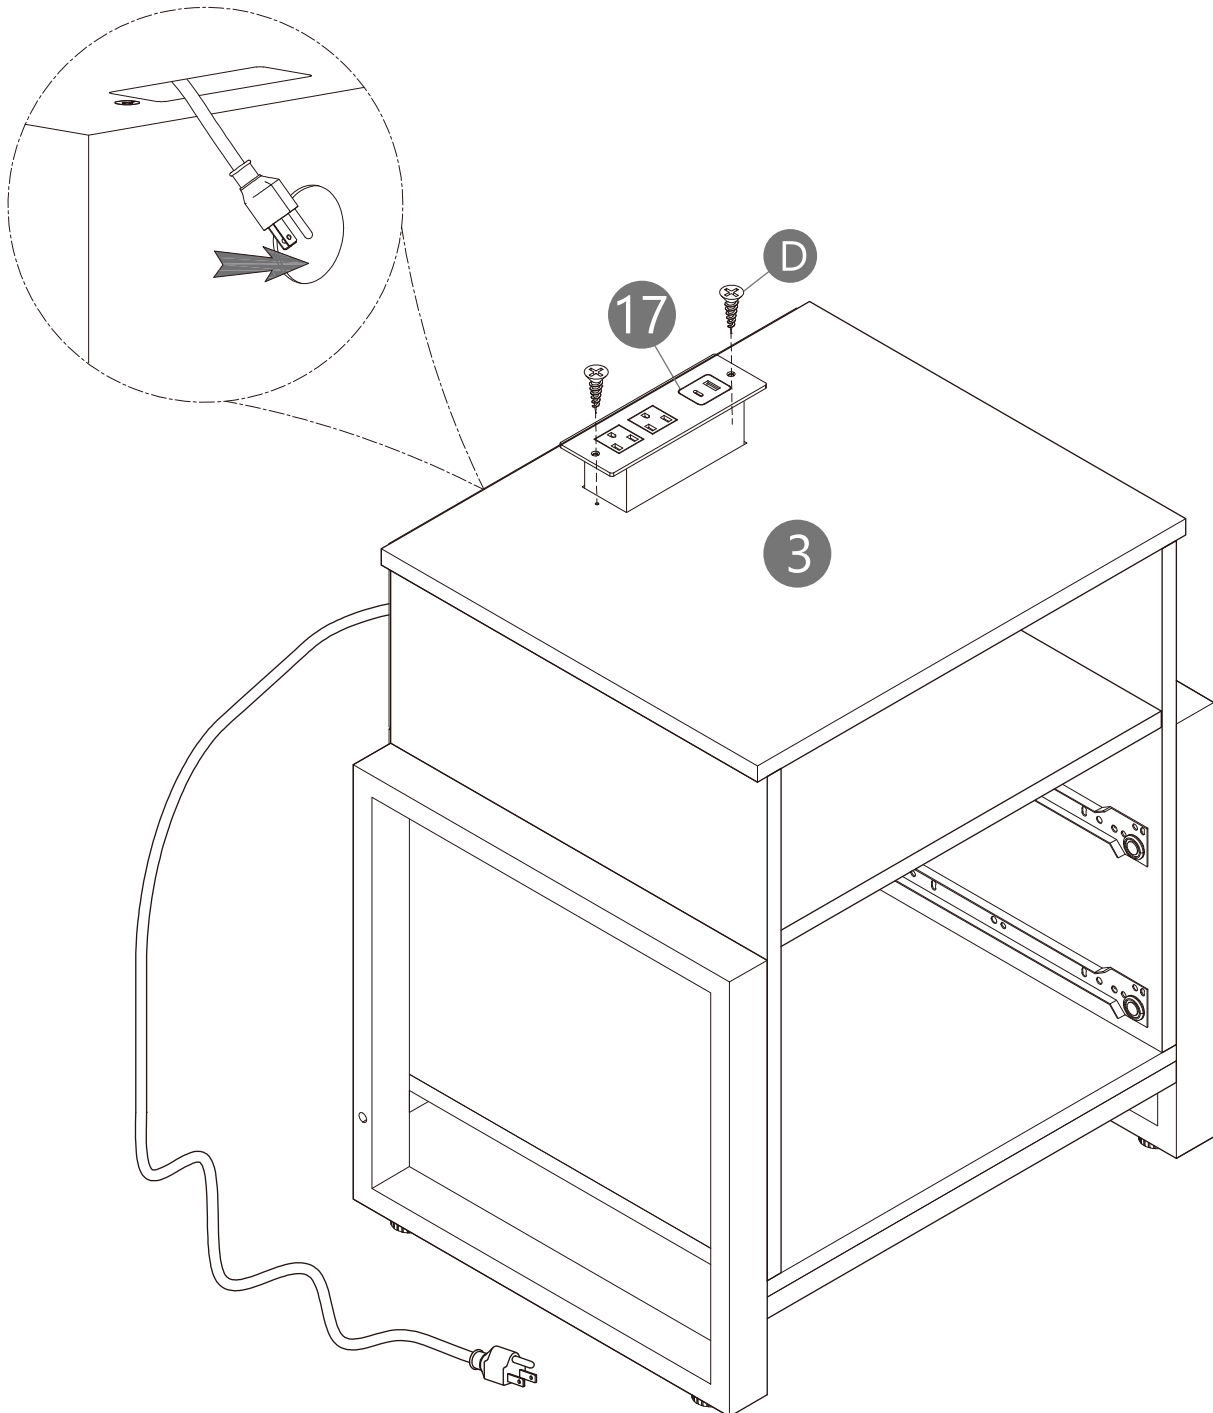







Step 18

-Securing Cam Bolt (A) into Board (⑧&⑨).

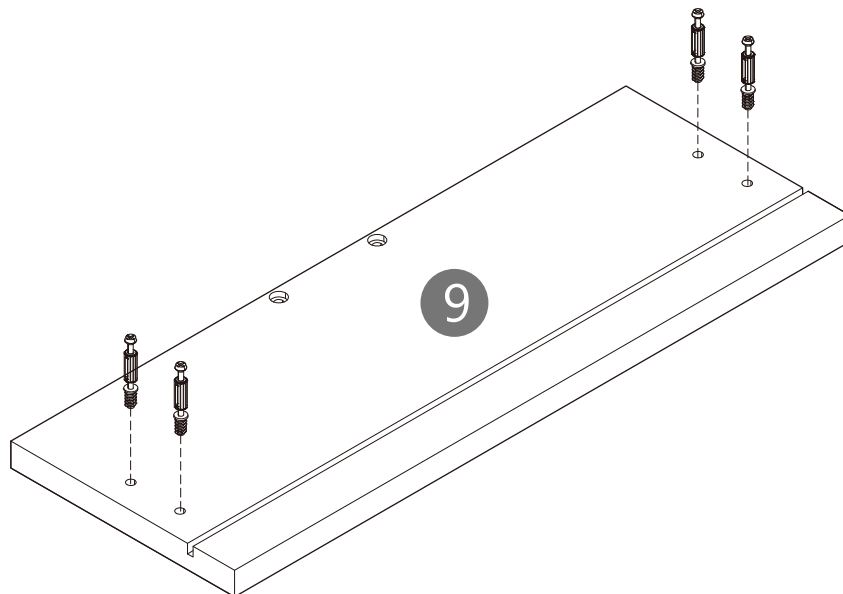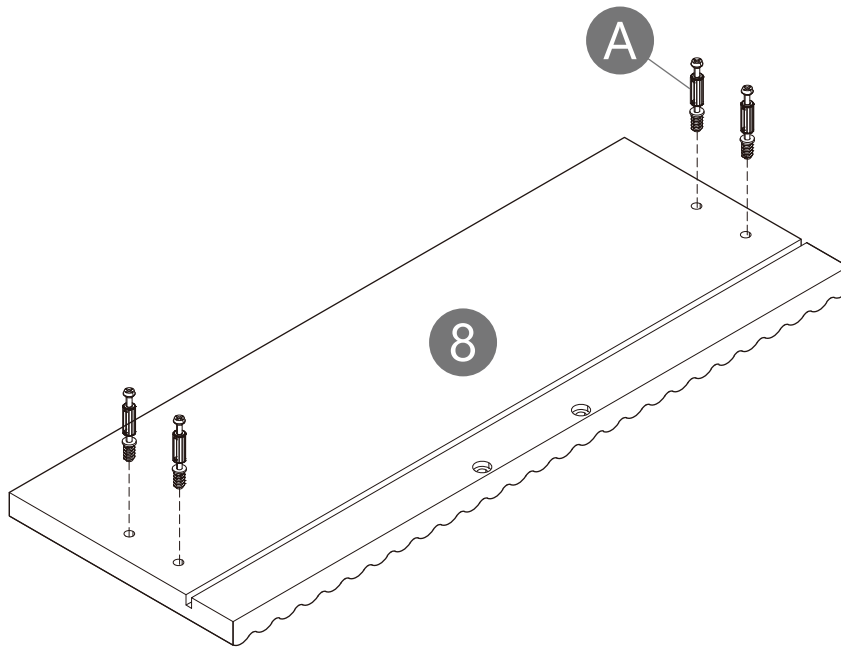



Step 19

-Using Cam Lock (B) secure Board (⑧&⑨)
to Board (⑩&⑪).

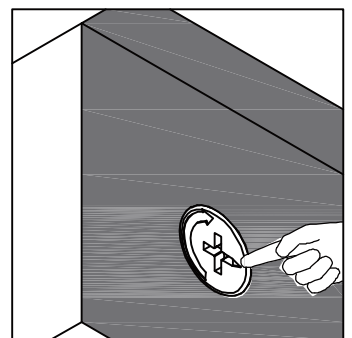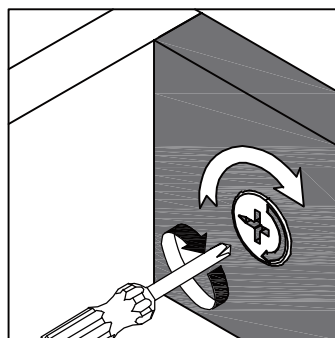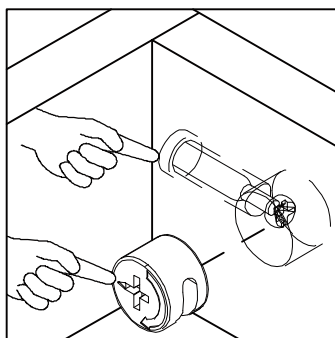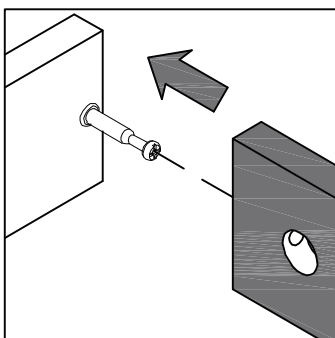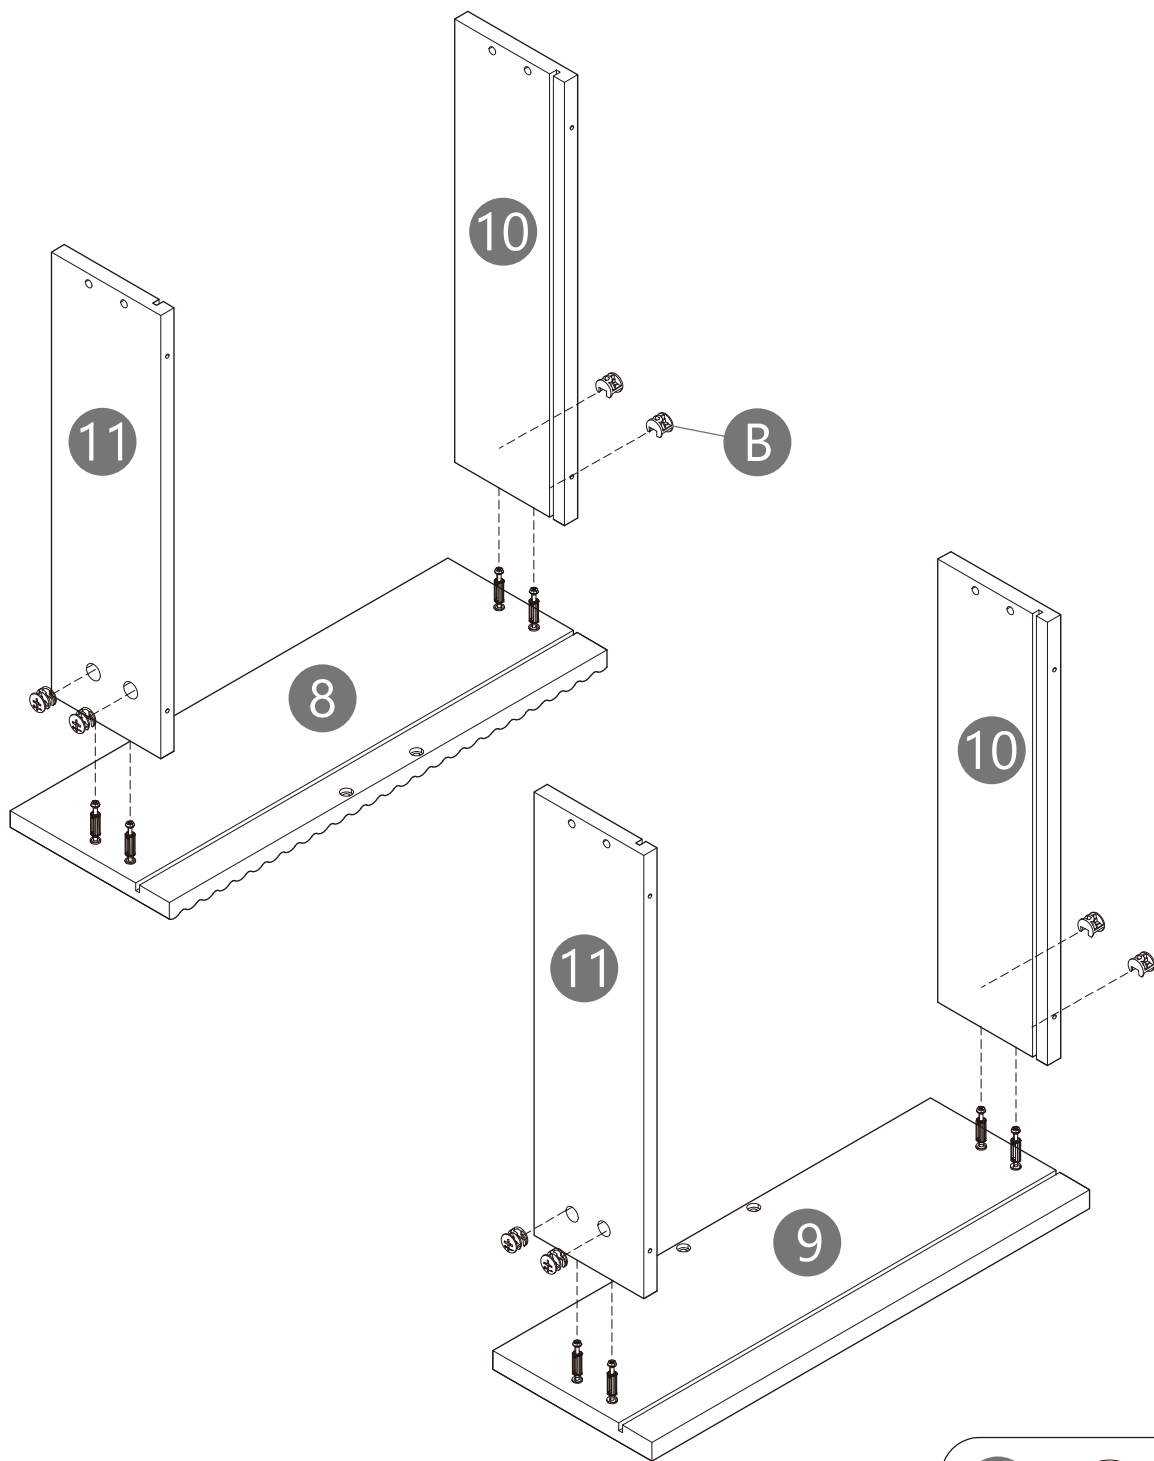




Step 20

-Sliding drawer bottom panels (13) into grooves.

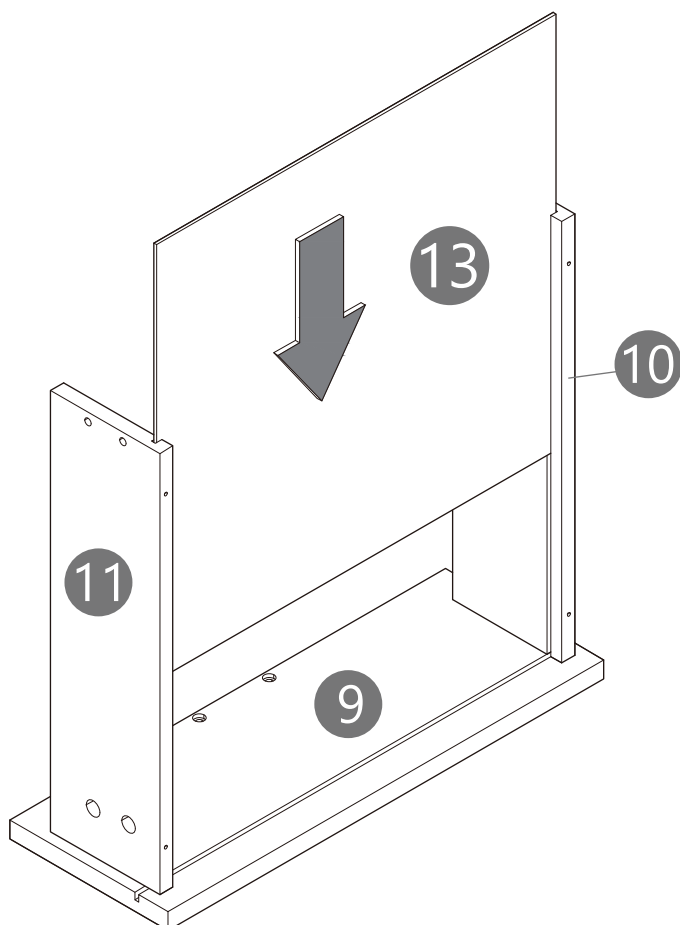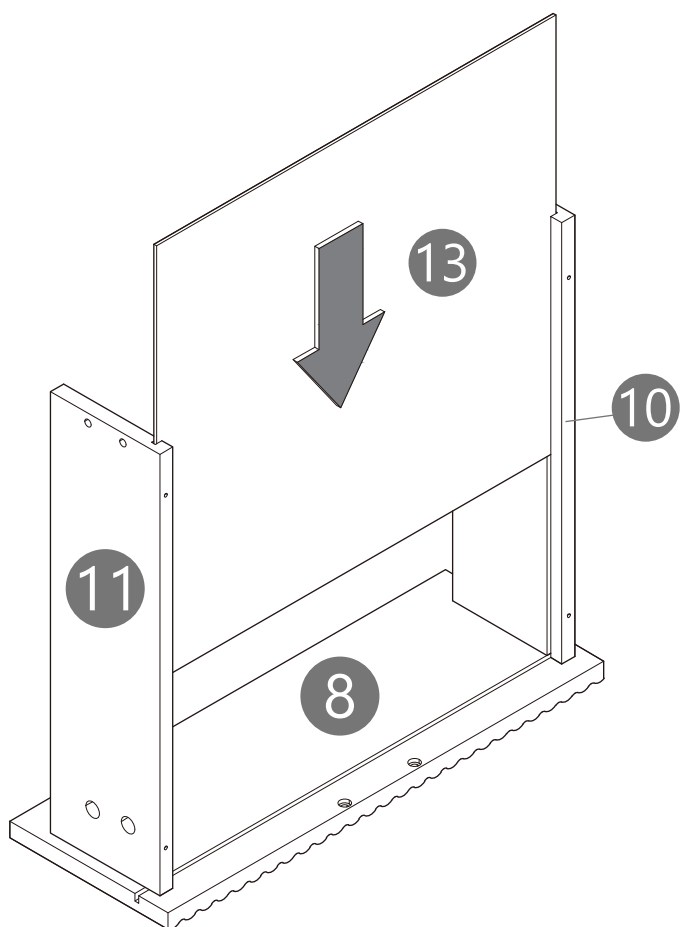




Step 21

-Using Screws (E) to assemble Board (12) to the Board (10&11).

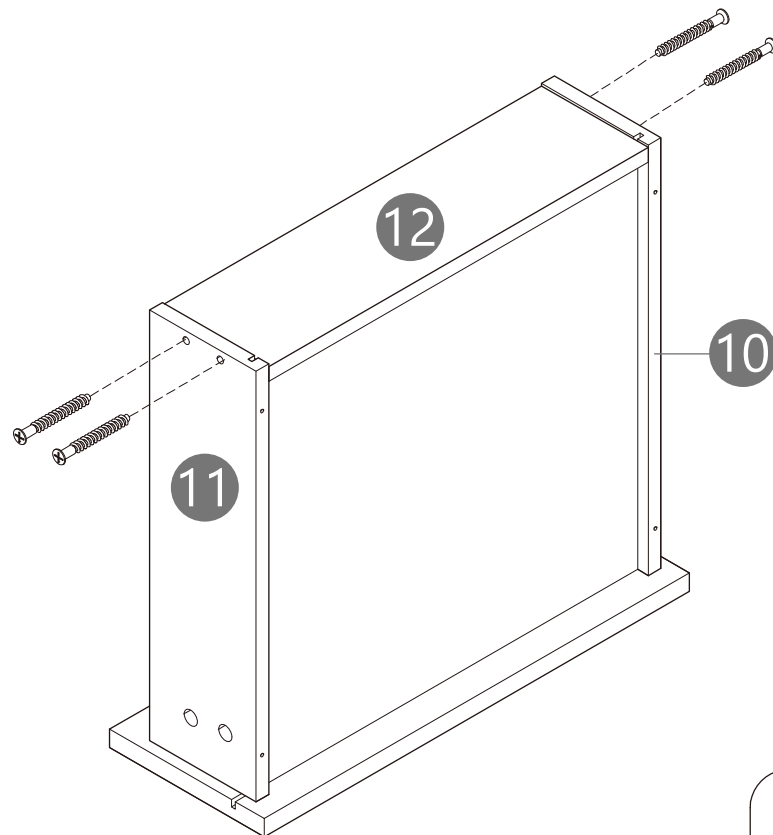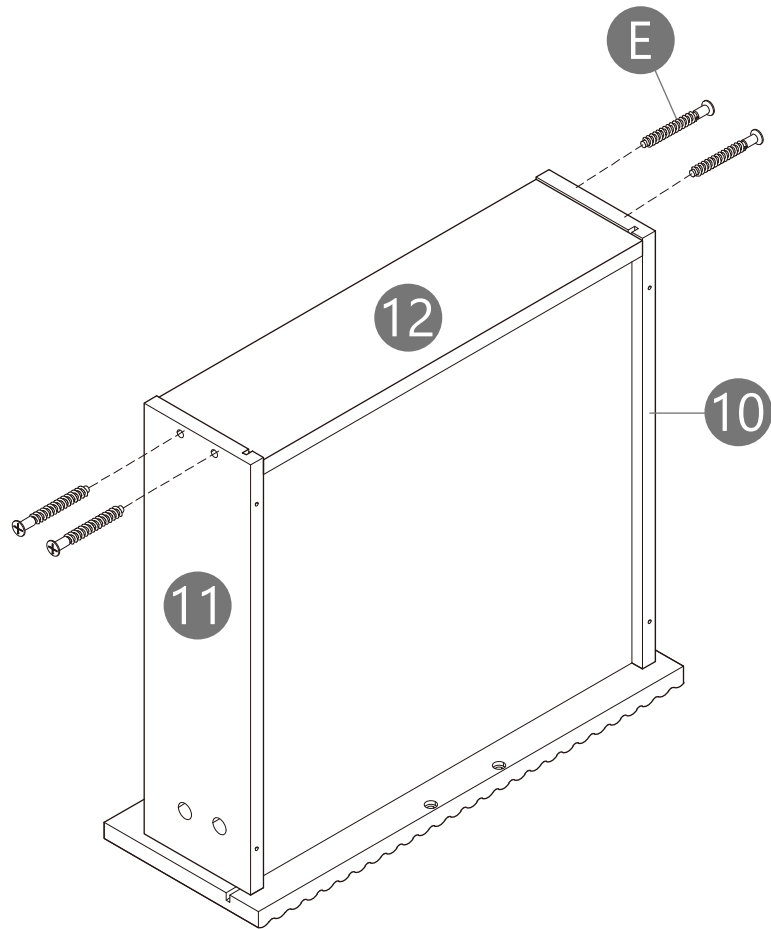

Step 22

-Using Screws (H) to assemble Handle (I) to the Board (8&9).

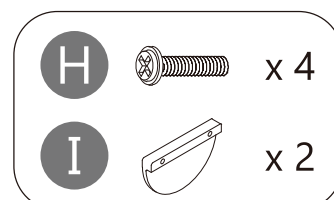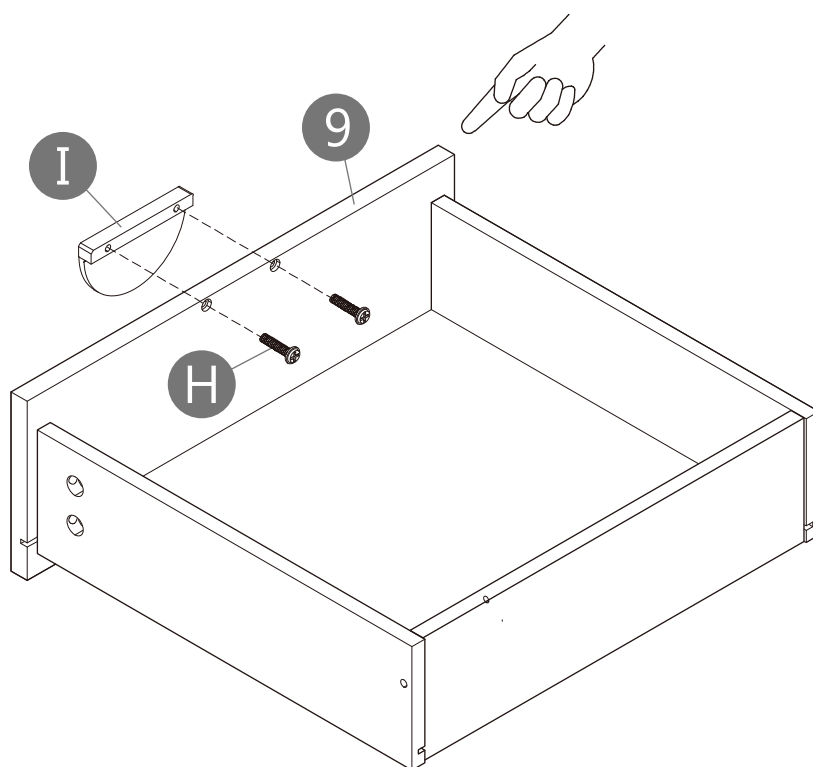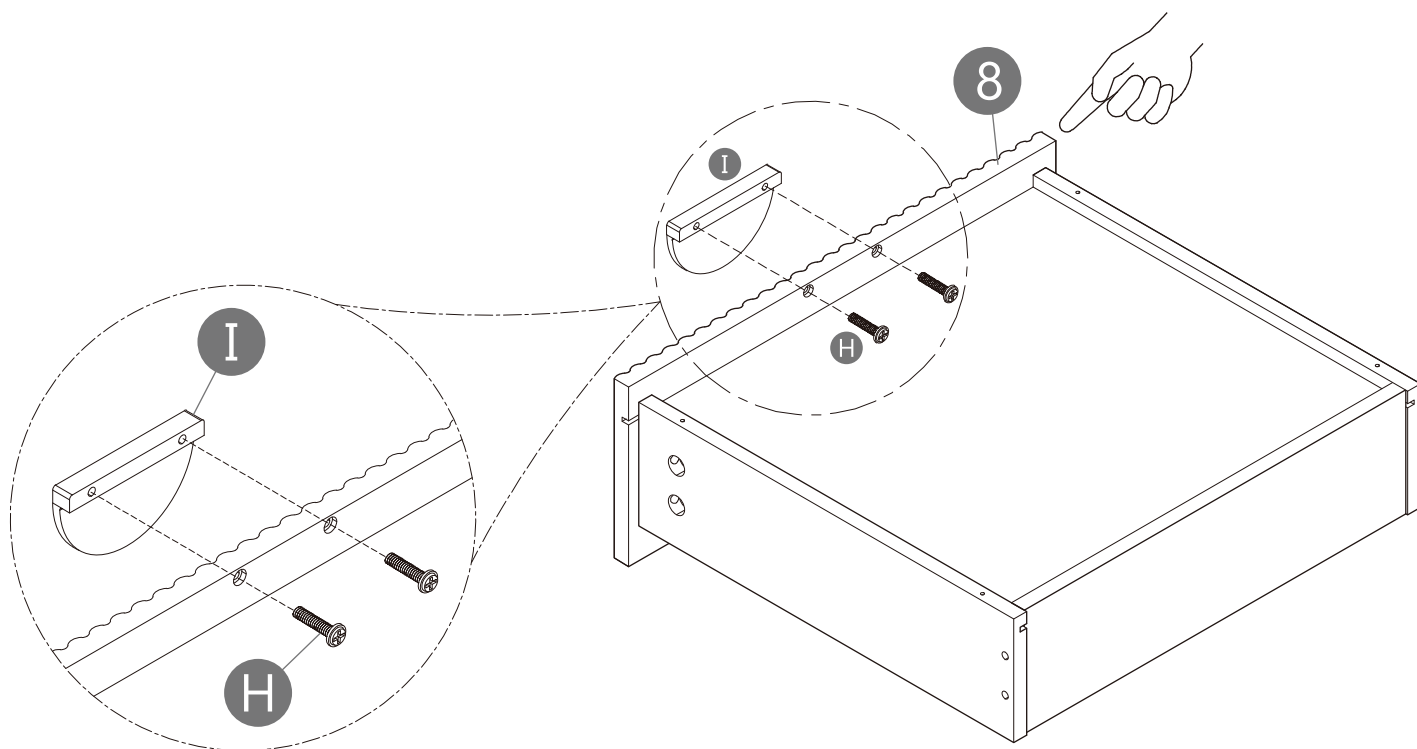


-Using Screws (D) to assemble Slide (DL&DR) to Board (10&11).

-Using Screws (D) to assemble Slide (DL&DR) to Board (10&11).



Step 24

- Plug the light strip into the Charging Station.
- Assembled the drawers as per diagram.

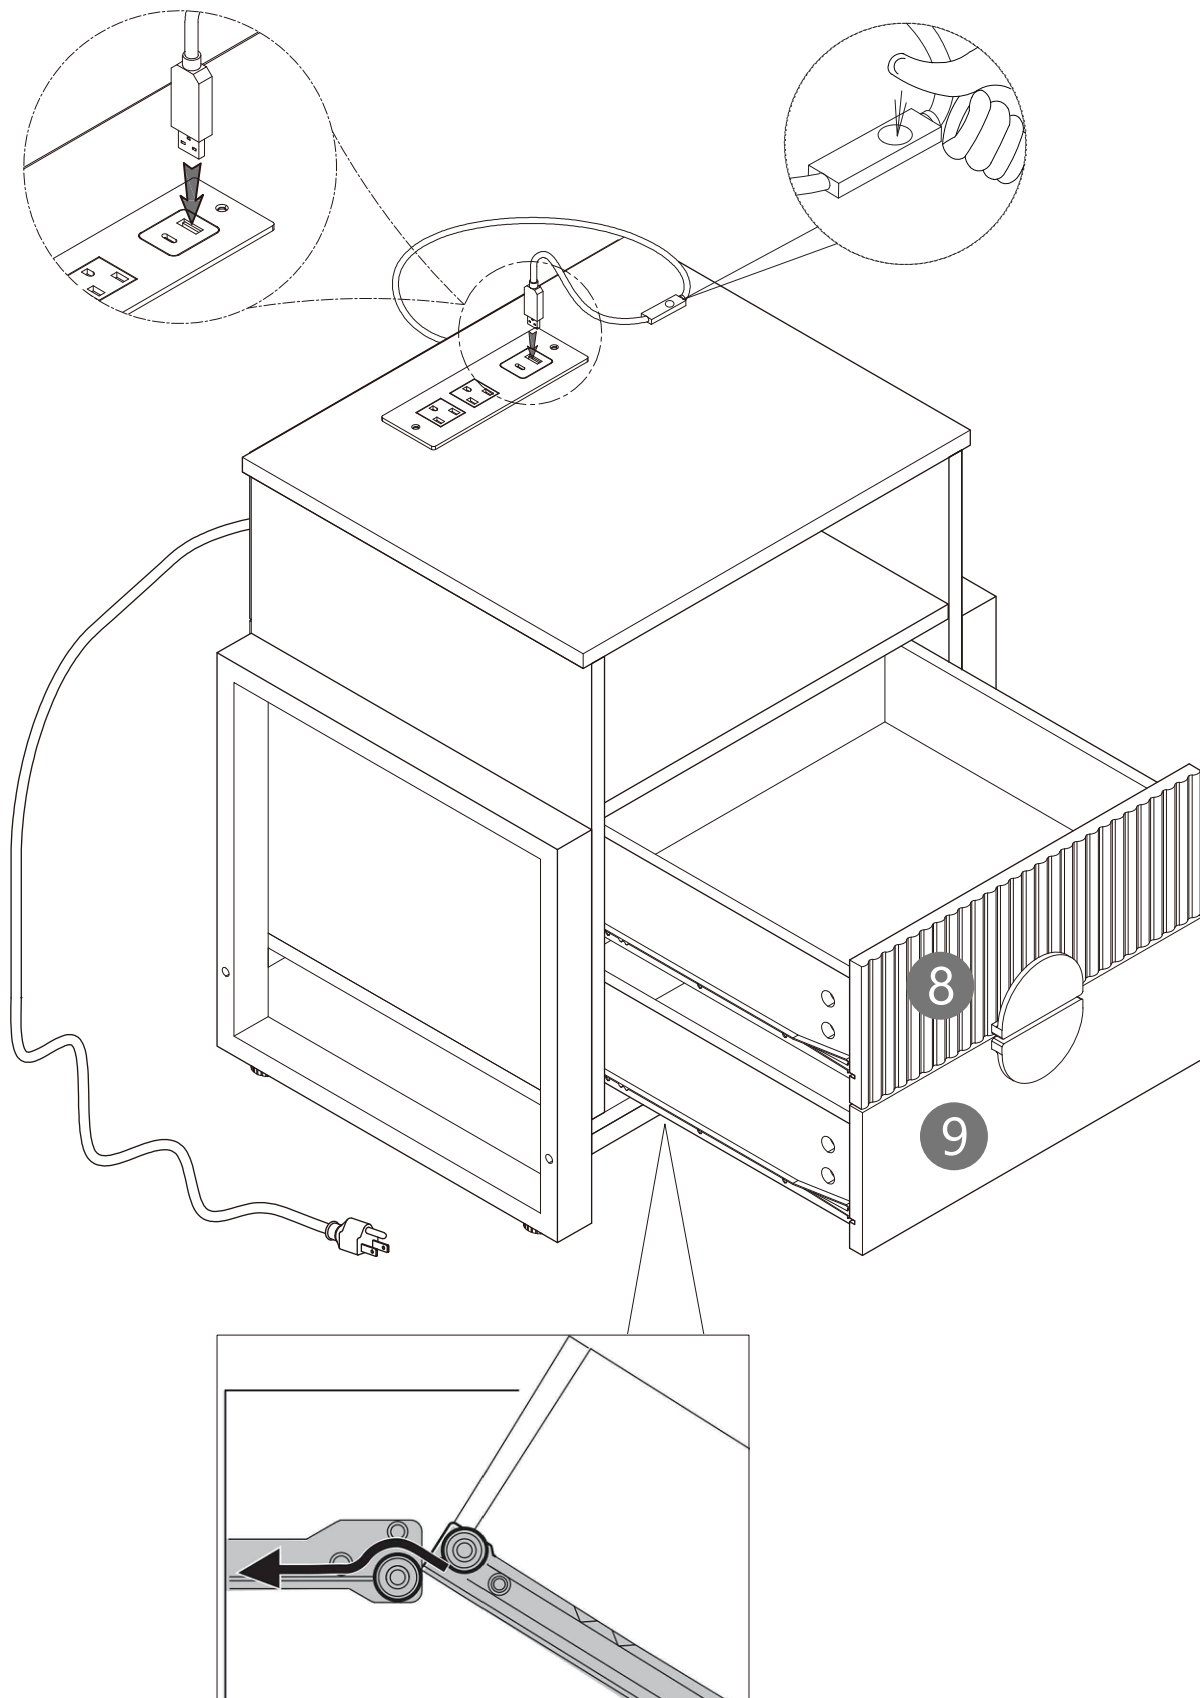

When you put the drawer, please note that the drawer wheels on top of the wheels of the slide, then check whether the drawer is smooth when pulled out. Otherwise, the drawer will not be aligned with other drawers.