


Tambour Door Bar Table

Assembly Instruction

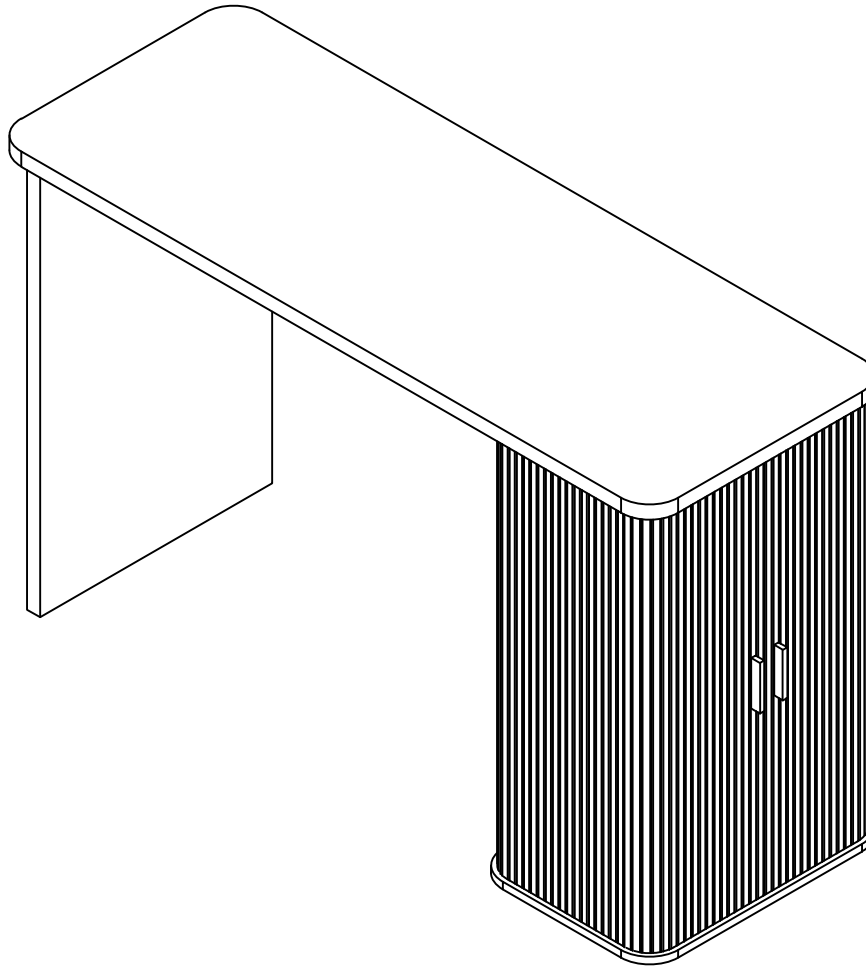

INTRODUCTION


Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS
















1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product is relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. This product requires two people to install.
6. If you have any questions during installation, please contact the customer service in time.

***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**



***IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.**

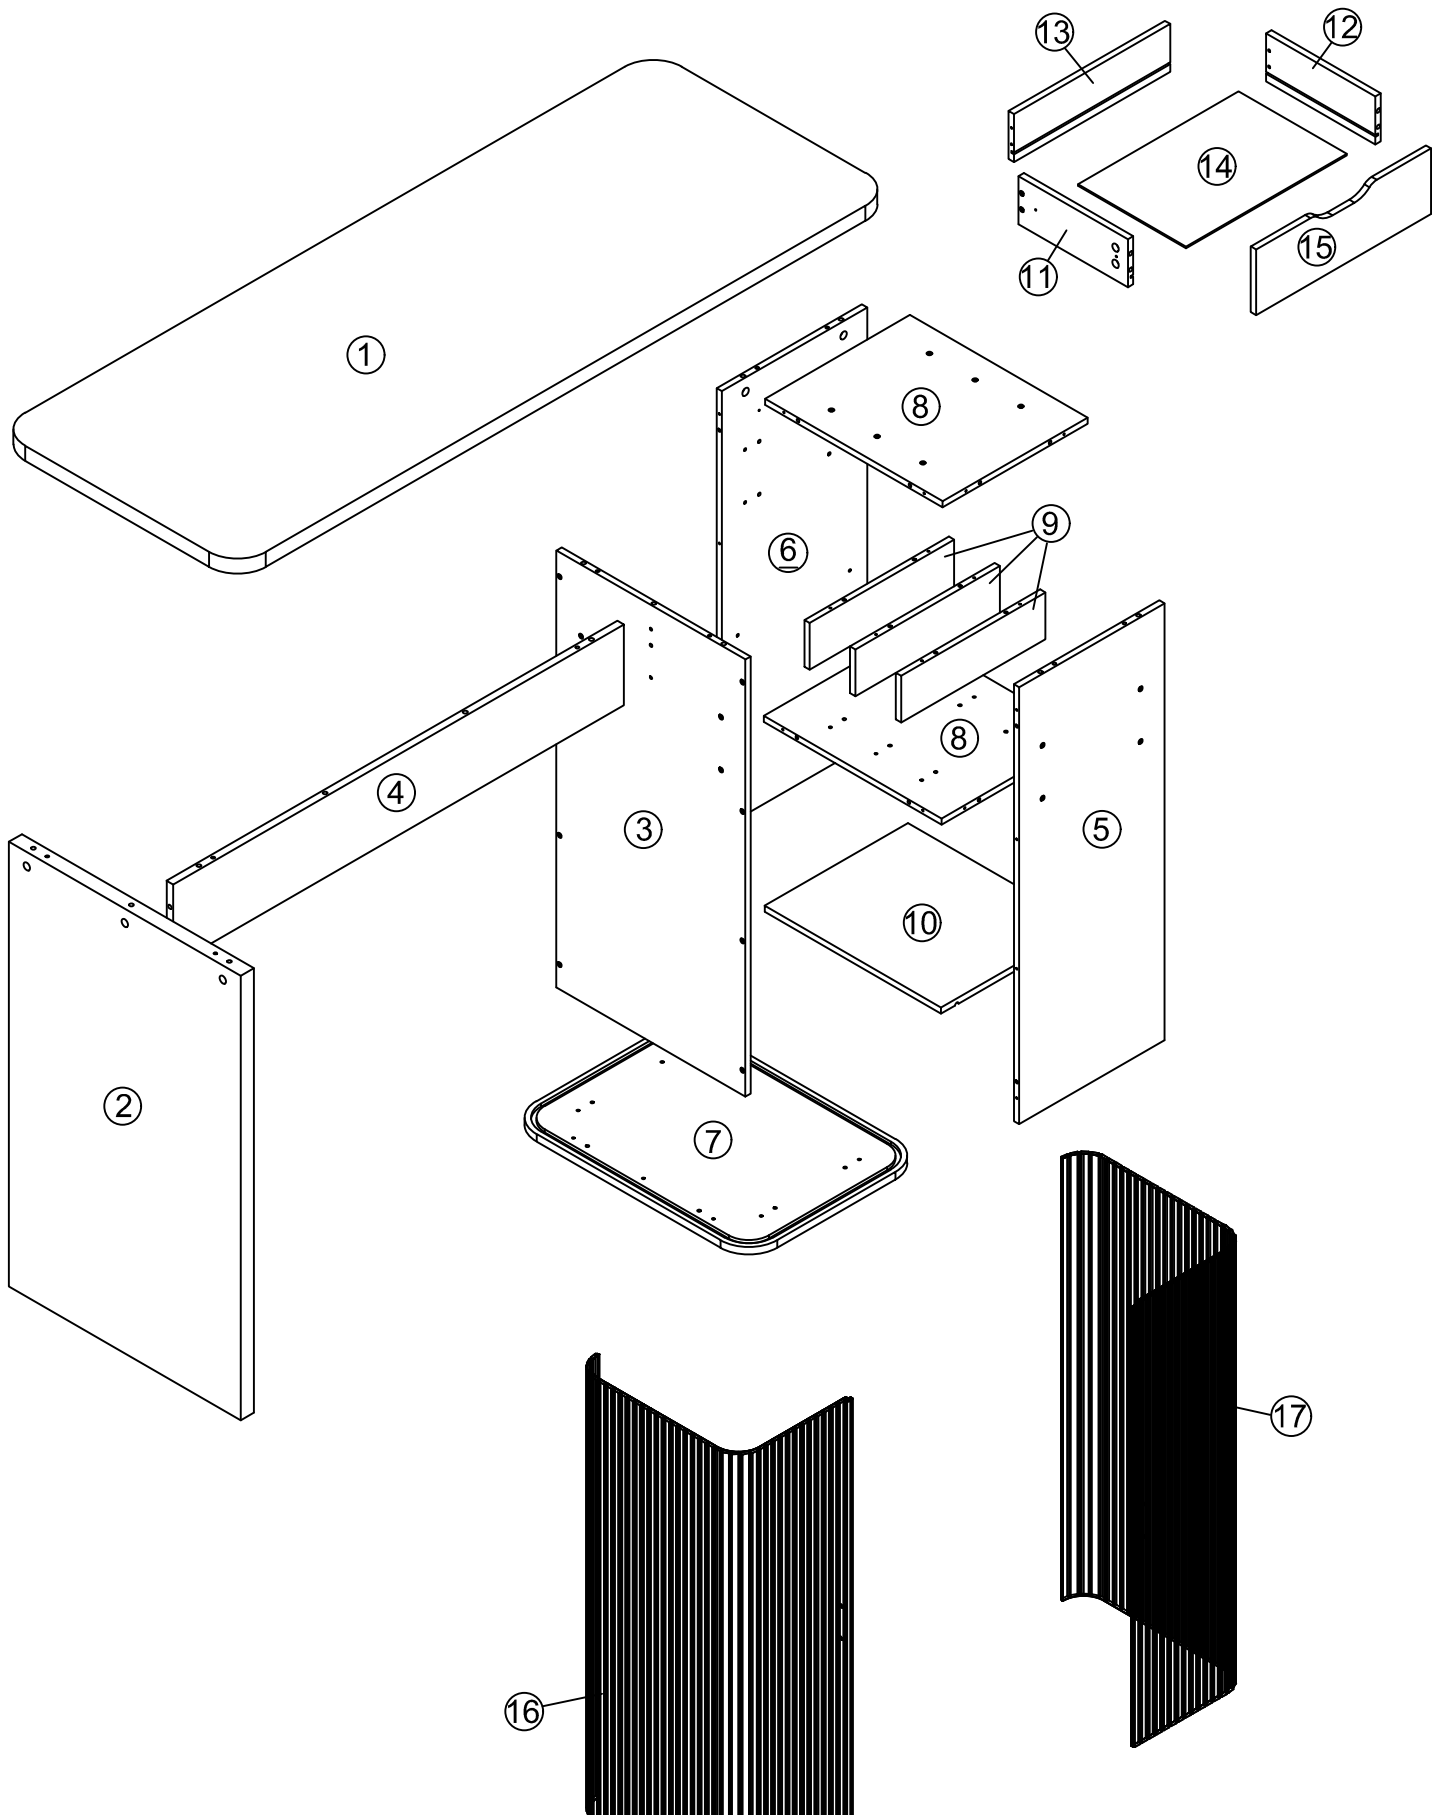



Parts List

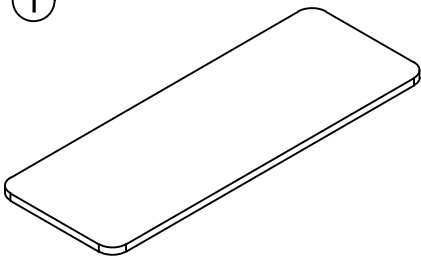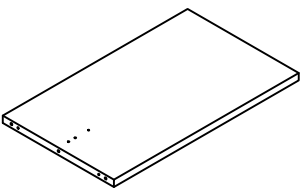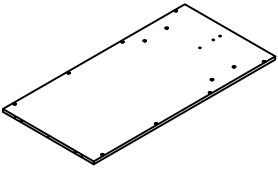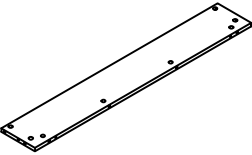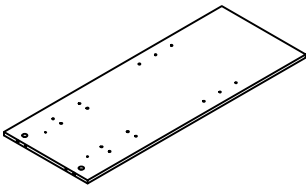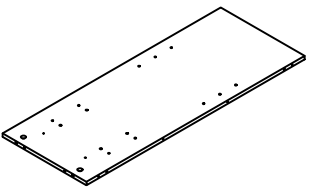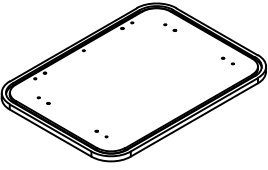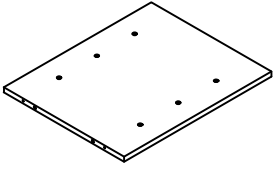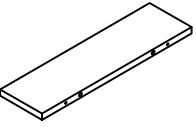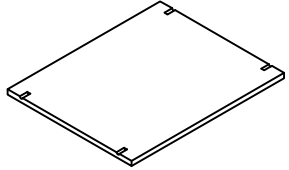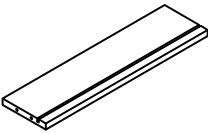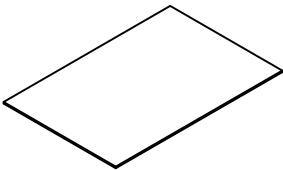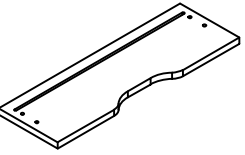①  X1	②  X1	③  X1
④  X1	⑤  X1	⑥  X1
⑦  X1	⑧  X2	⑨  X3
⑩  X1	⑪  X1	⑫  X1
⑬  X1	⑭  X1	⑮  X1

Parts List

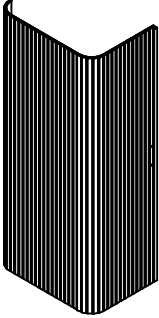①⑥  X1	①⑦  X1
---	---


Hardware List

A  Ø15X9.5mm X22	B  Ø6.5X35mm X22	C  Ø6X30mm X46
D  Ø3.5X12mm X8	E  Ø4X35mm X43	F  Ø4X20mm X4
G  250mm X1set	H  Ø5X25mm X4	I  Ø14X4mm X6
J  Ø21 X22	K  70X30X5mm X1	18  100X20X10mm X2



STEP1





C X6




E X6

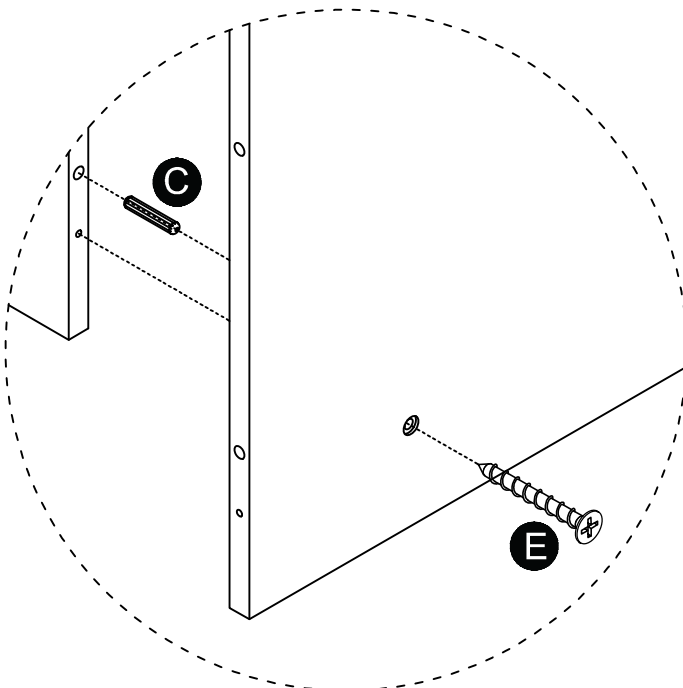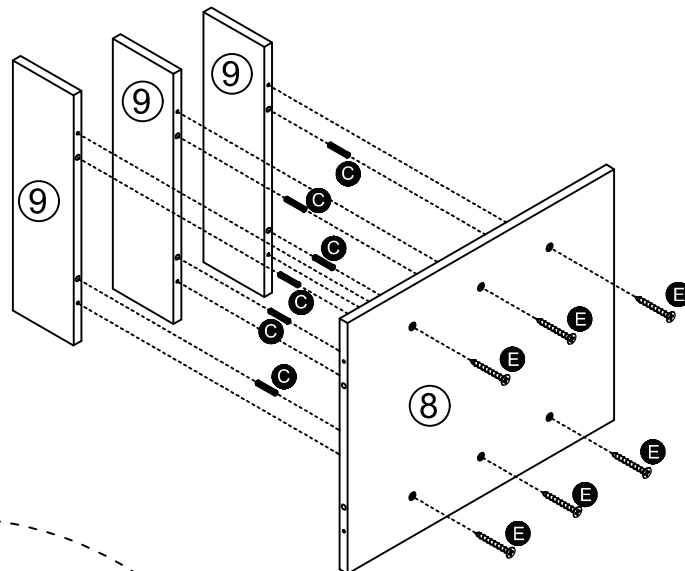

STEP2

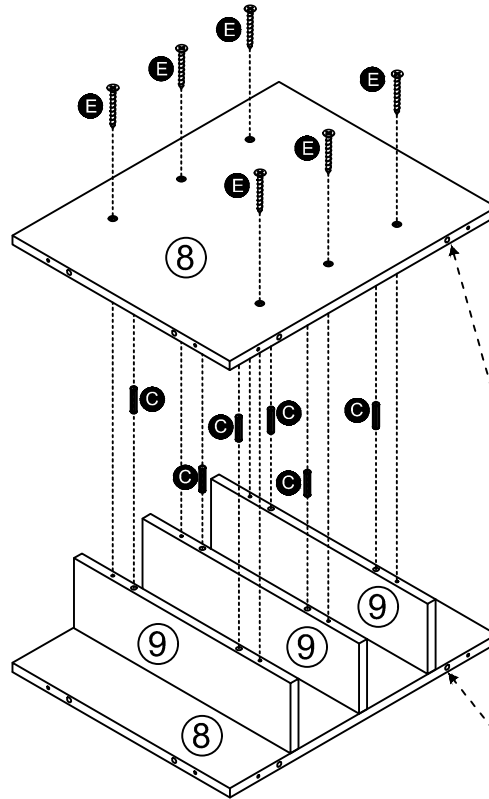**C** X6**E** X6

Note that the hole positions on the No.8 component are on the same side.

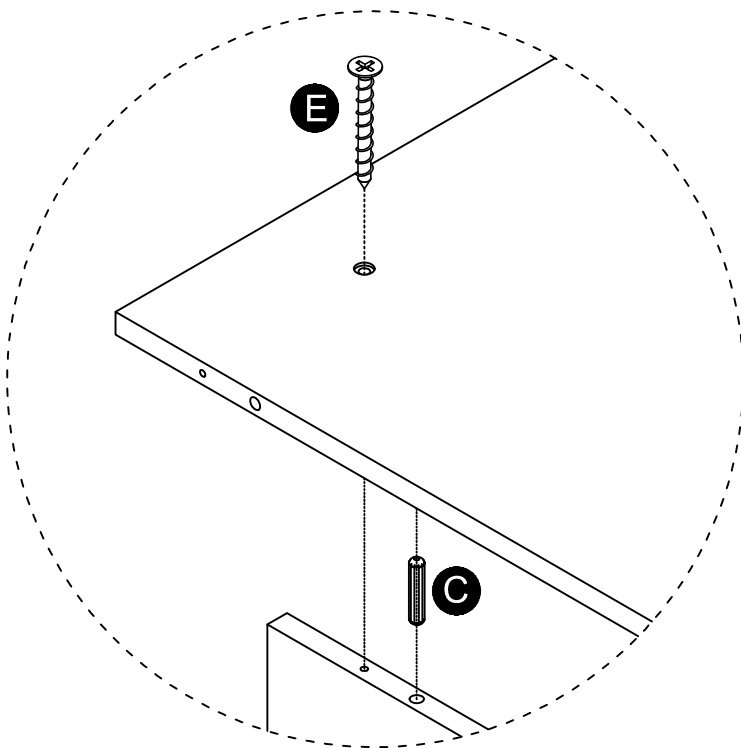


STEP3

WARNING

How To SEPARATE BALL BEARING SLIDE.

- 1) Pull toward arrow to open the slide until its stops and then flip it over.

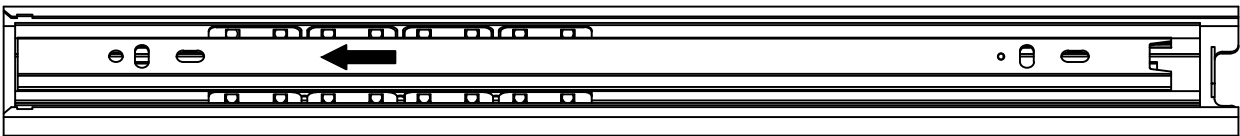


- 2) Push plastic lever down and pull apart.



Cabinet Slide Rail



Drawer Slide Rail



STEP4




D X4





G X1set




Slide Opening

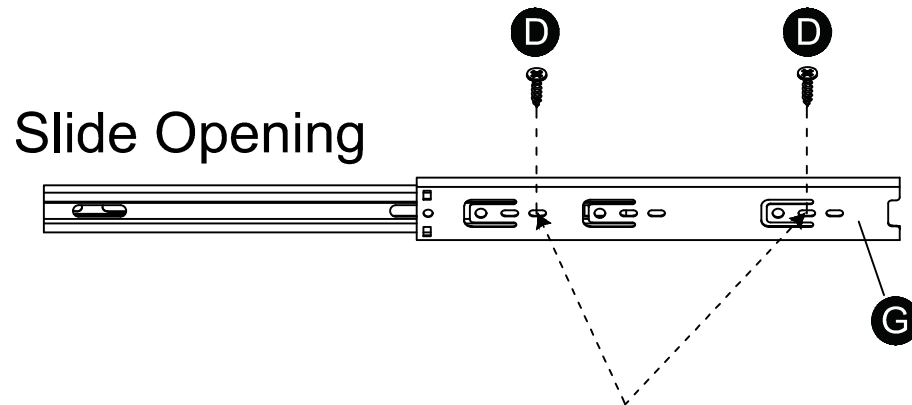

Mounting Holes

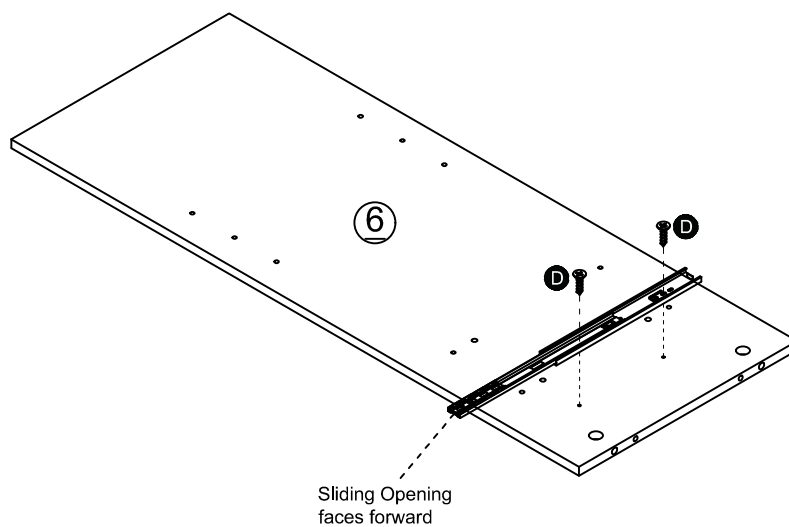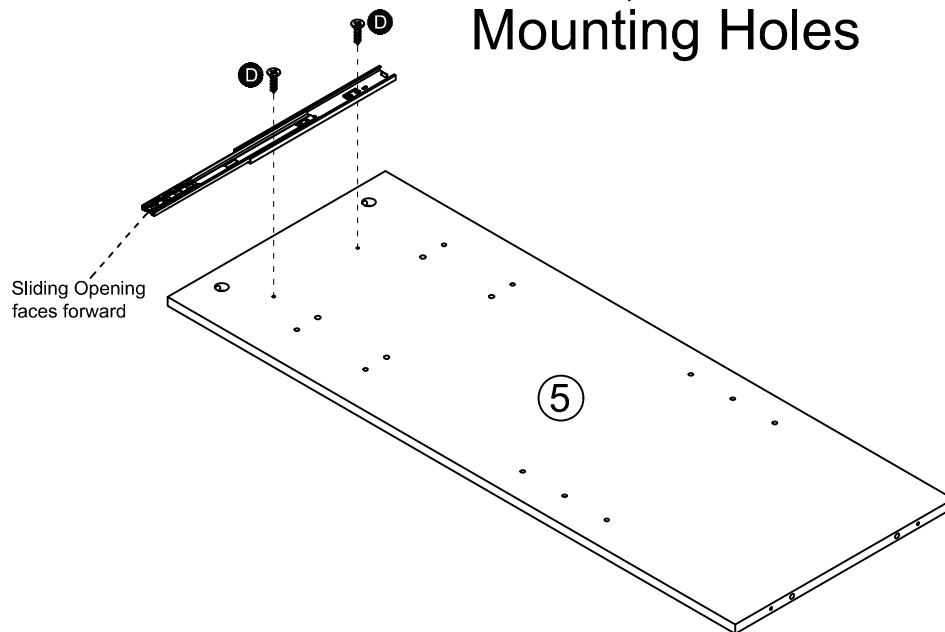


STEP5

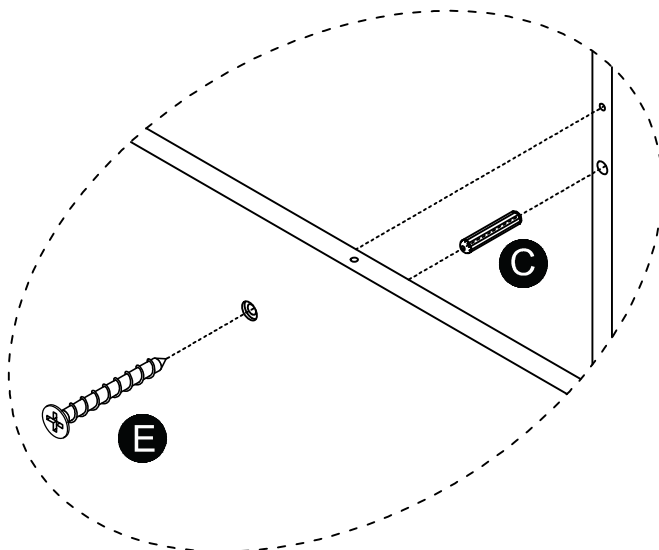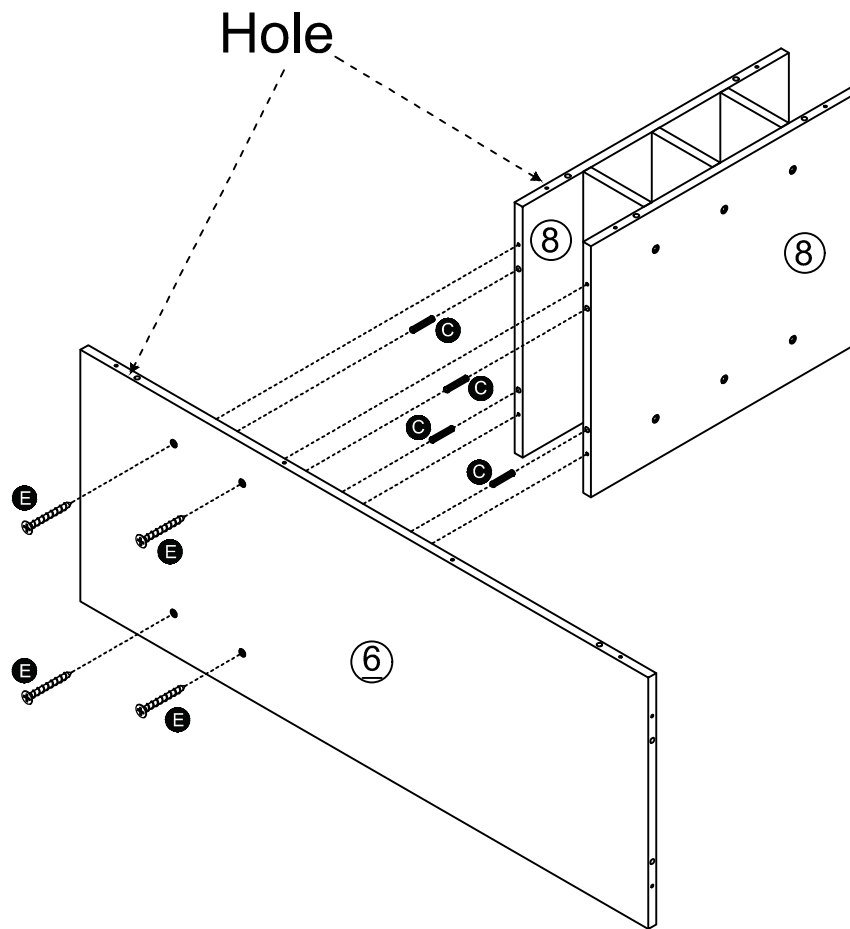**C** X4**E** X4



STEP6










C X4




E X4

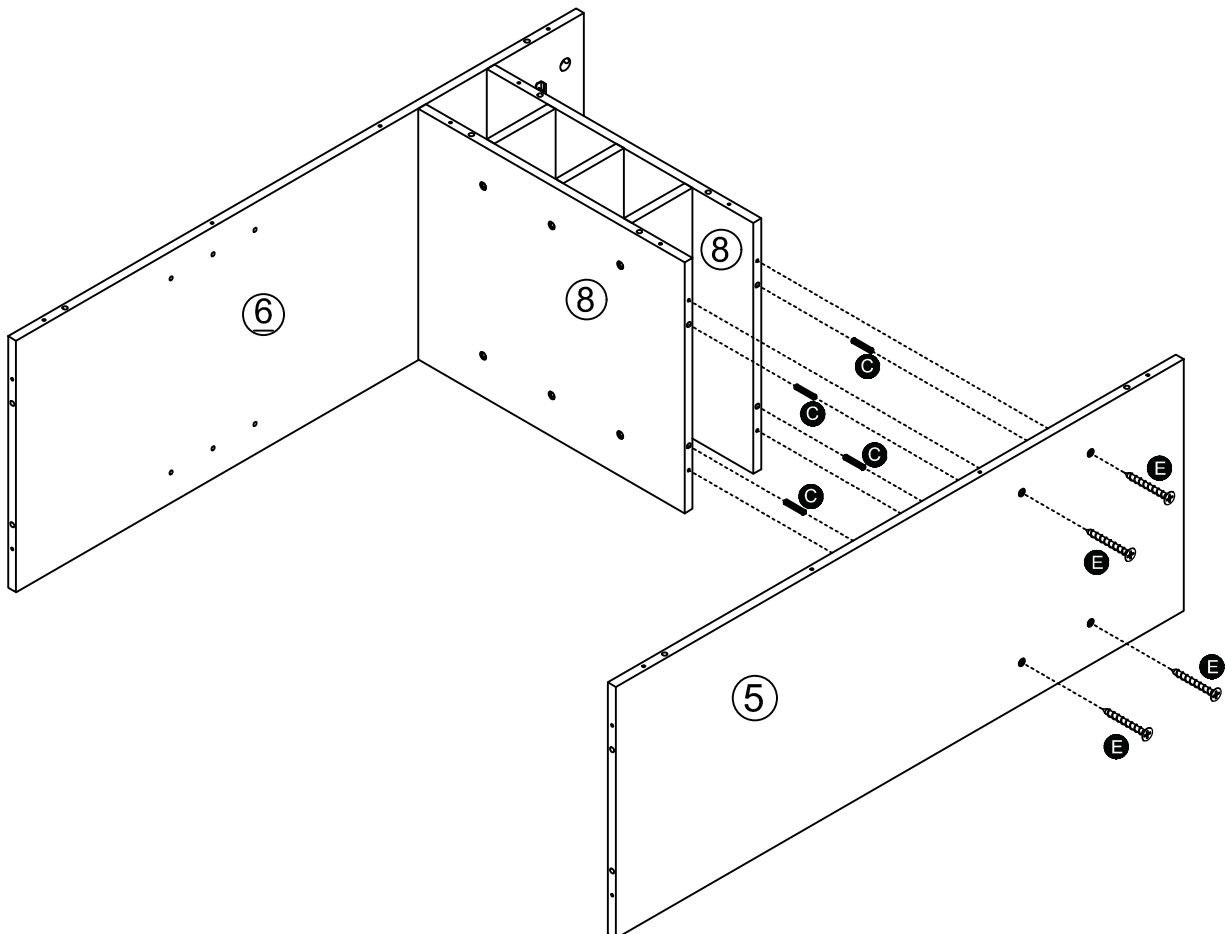
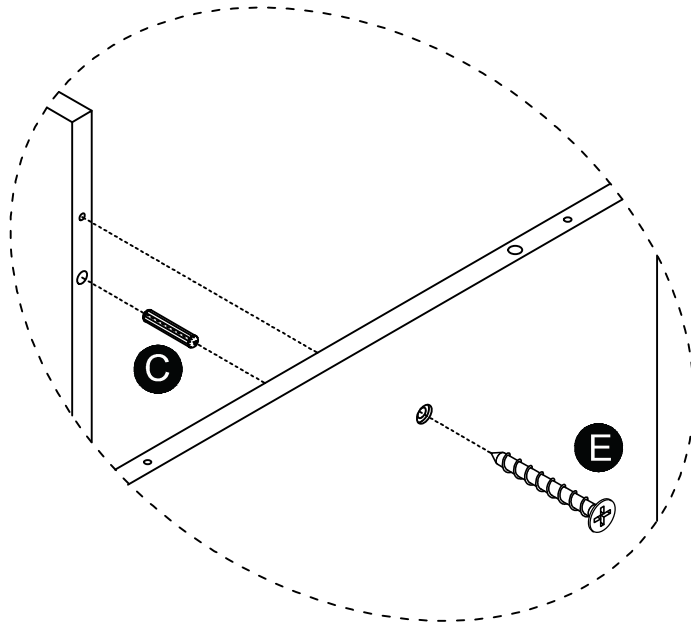


STEP 7

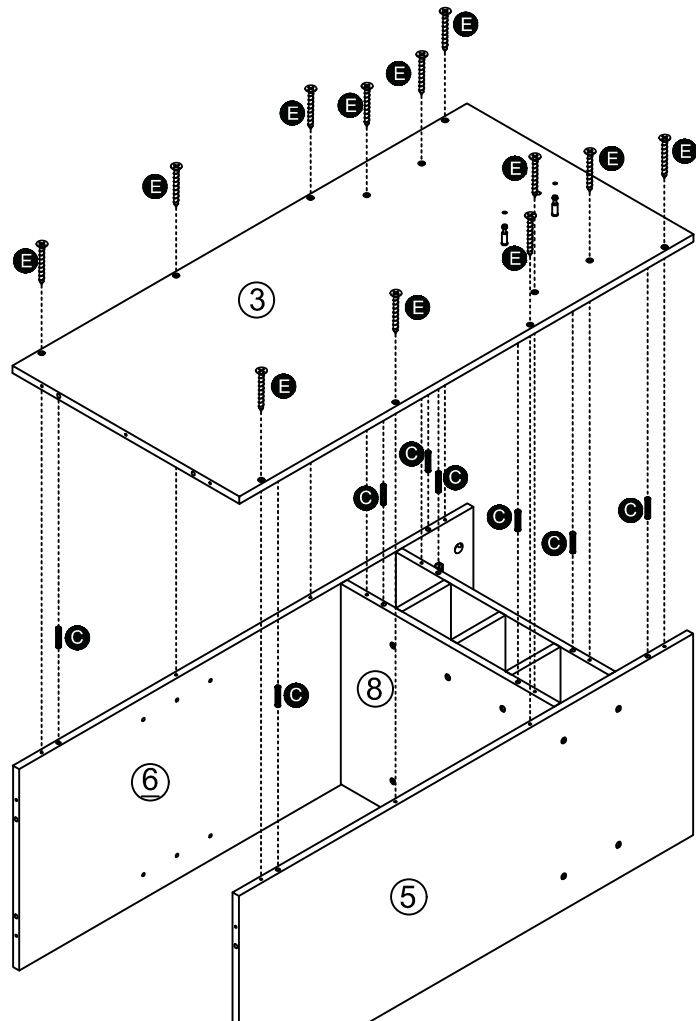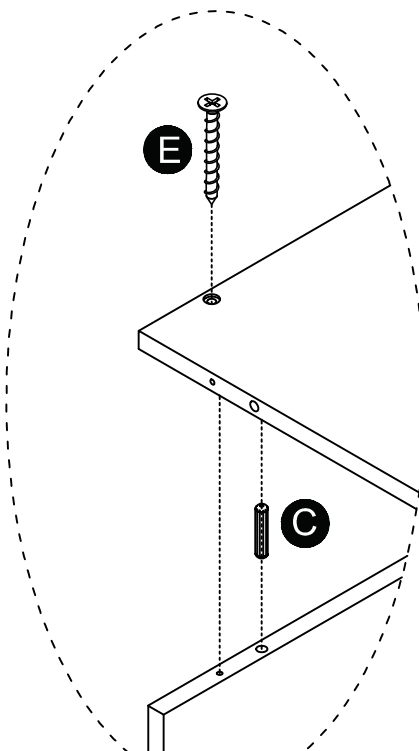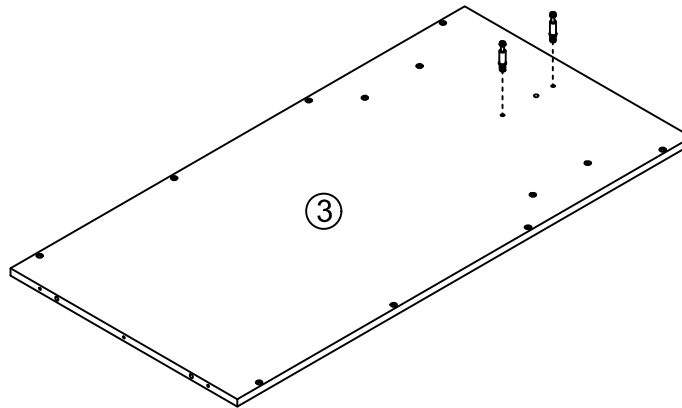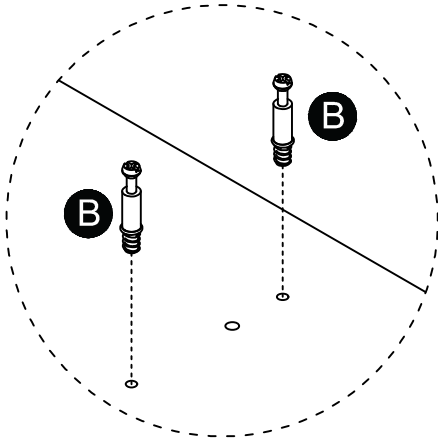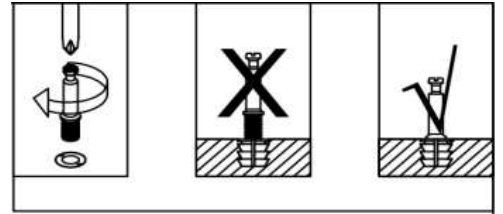**B** X2**C** X8**E** X12

STEP8


-  **C** X6
-  **E** X7

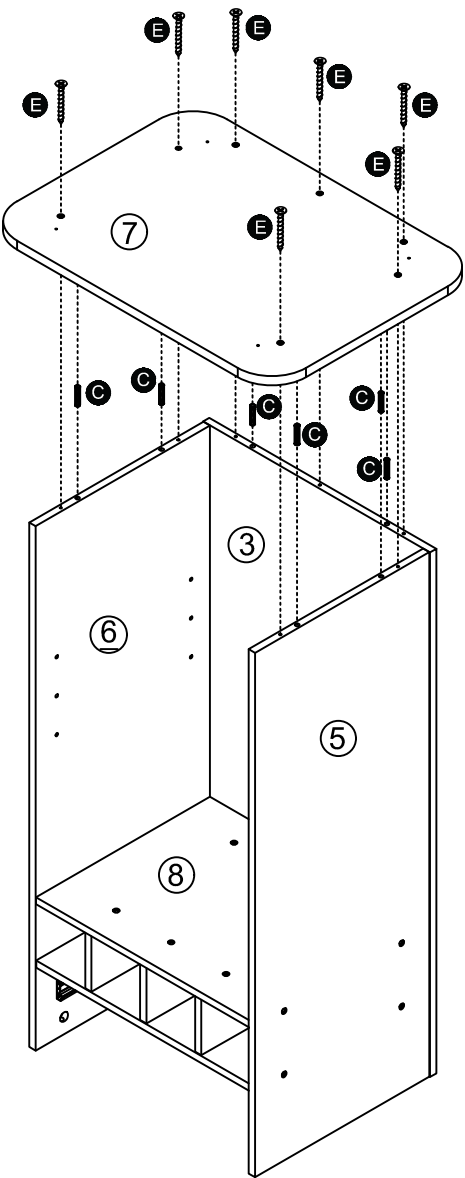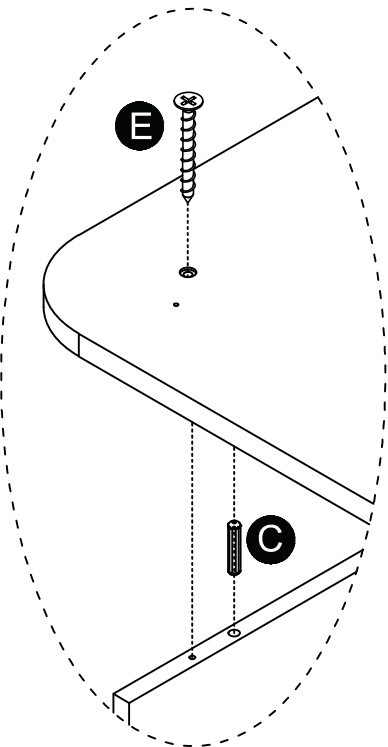

STEP9




I X4

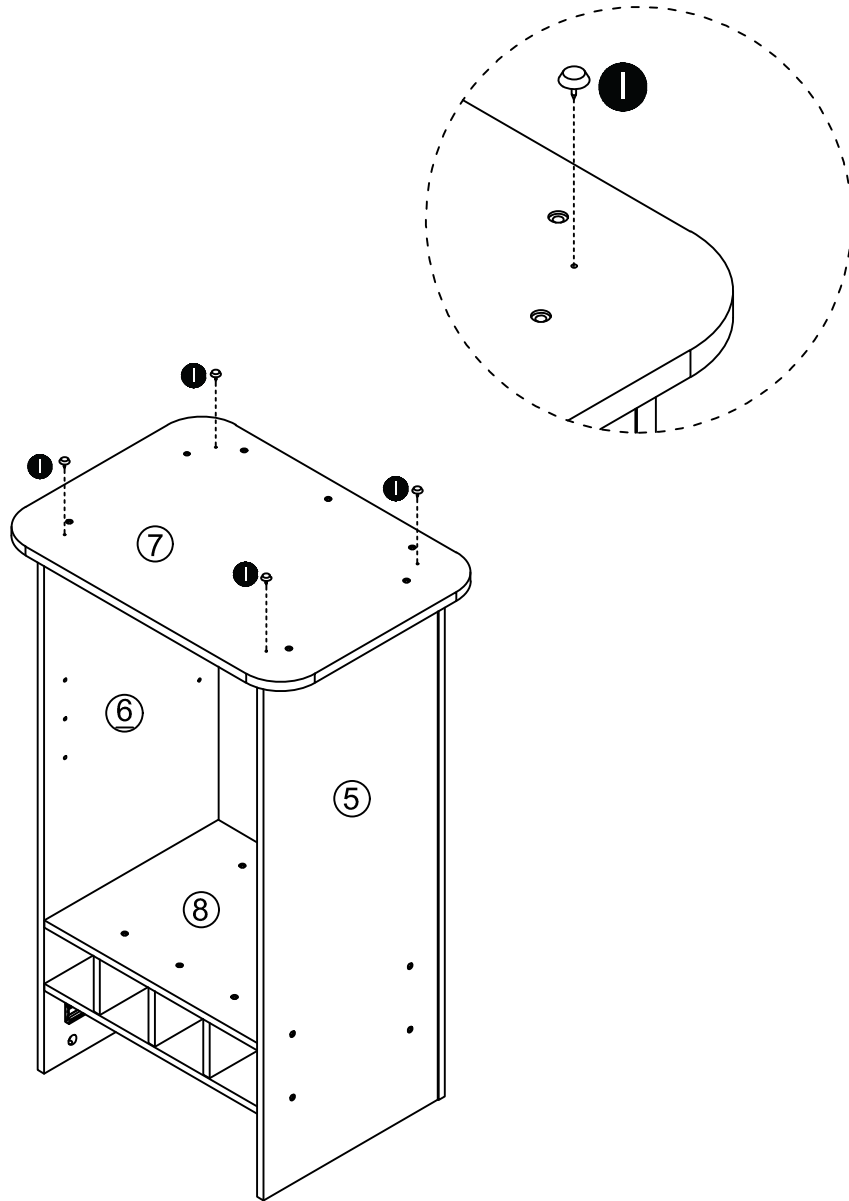

STEP10



A X2








B X2





C X1



I X2

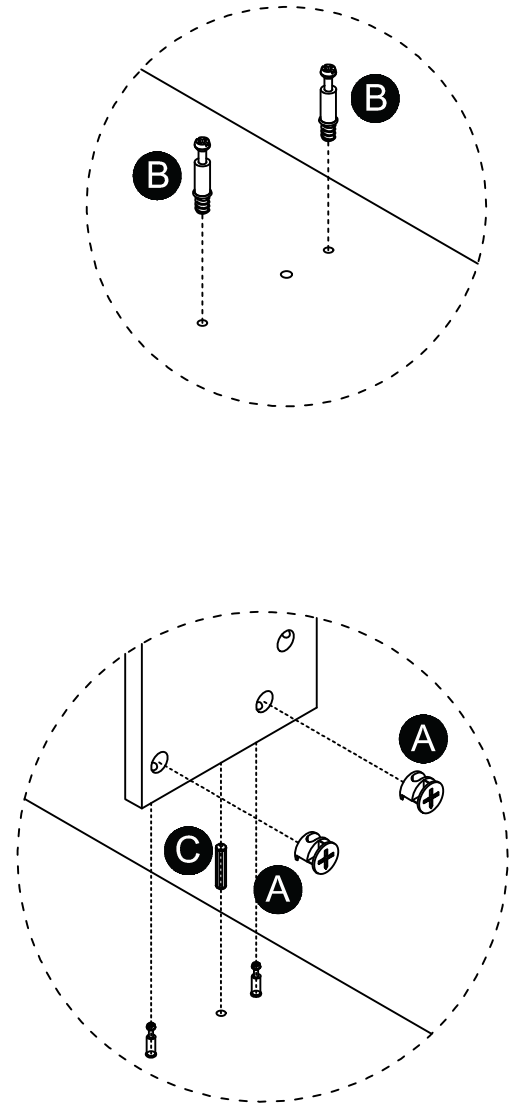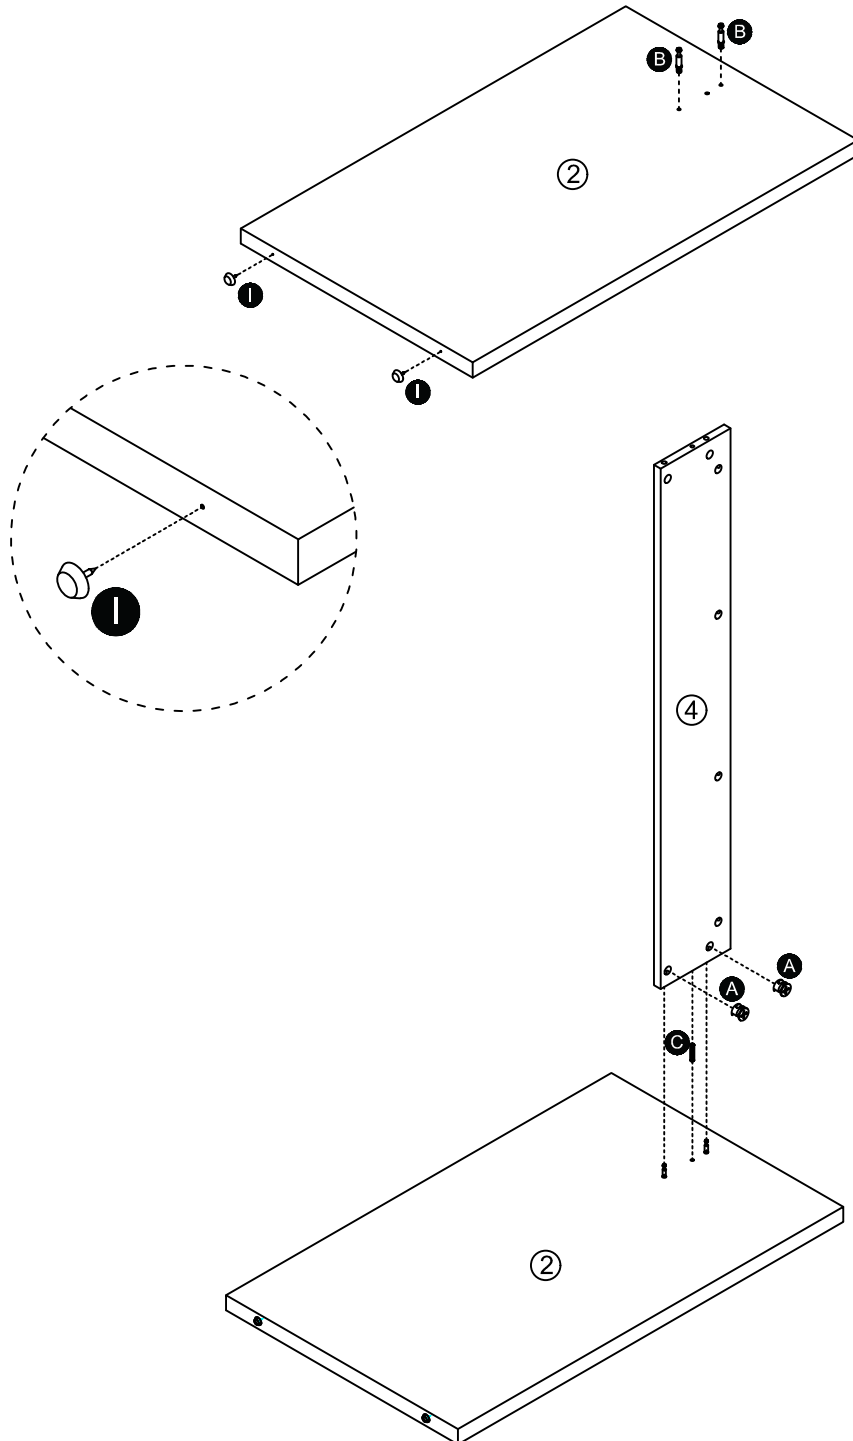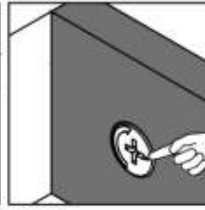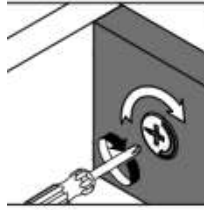


STEP11

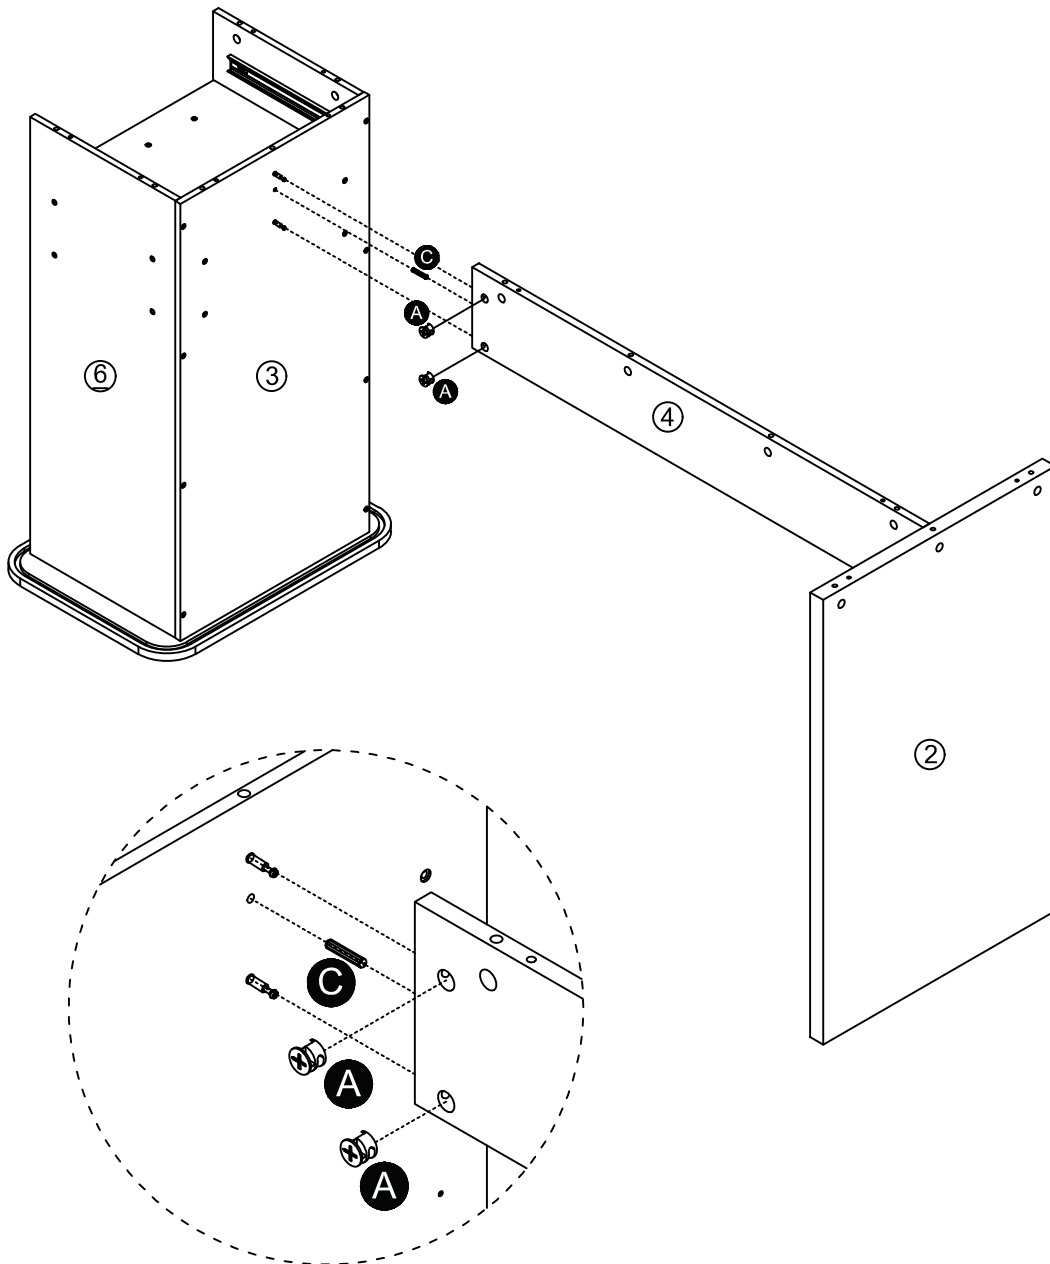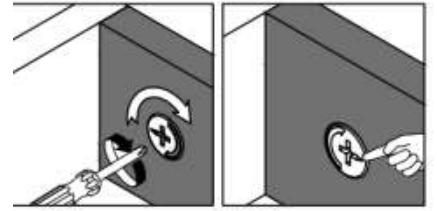**A** X2**C** X1


STEP12



C X10

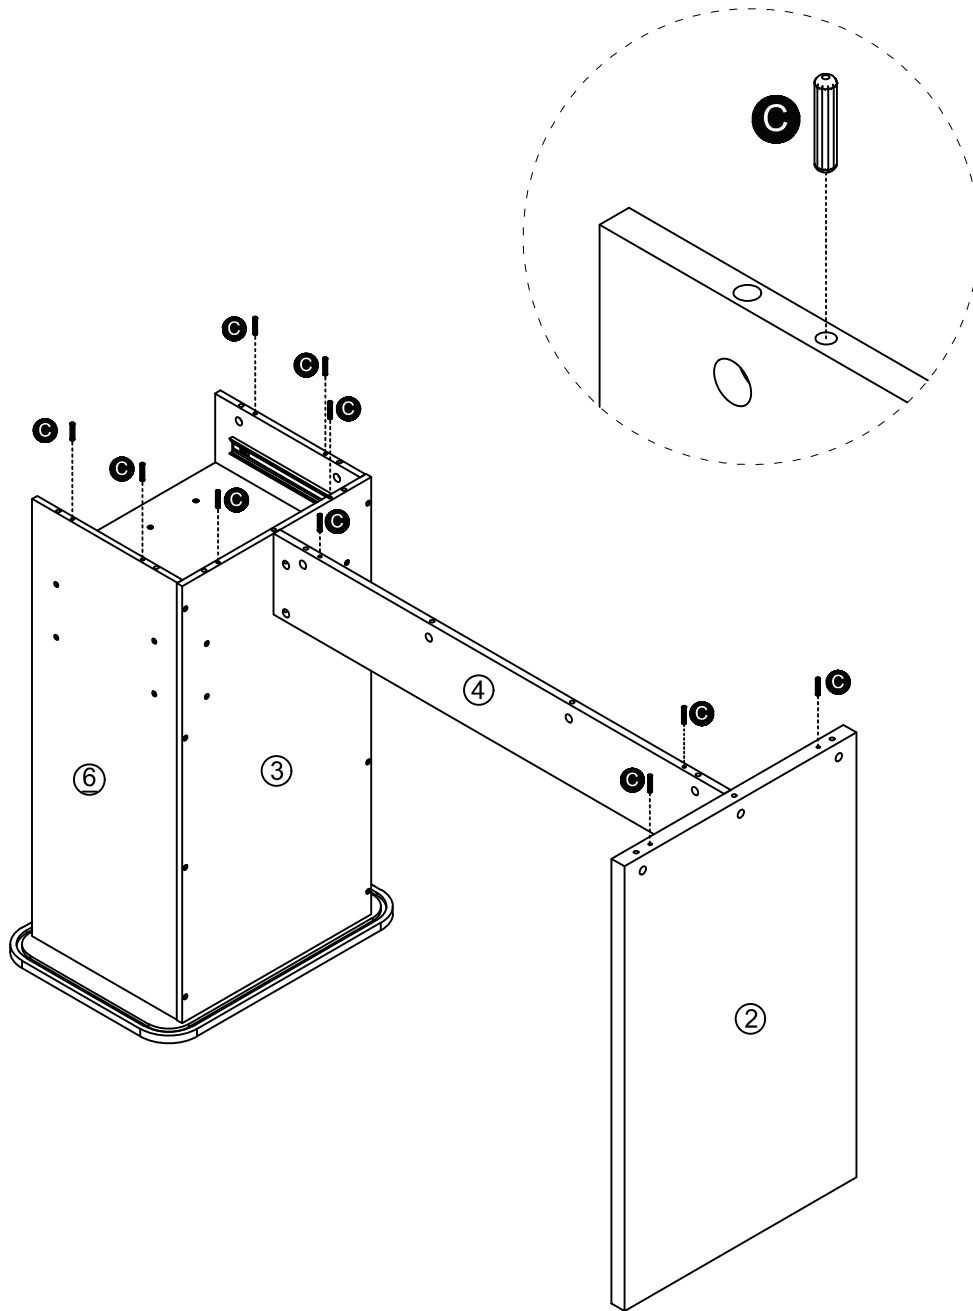


STEP13

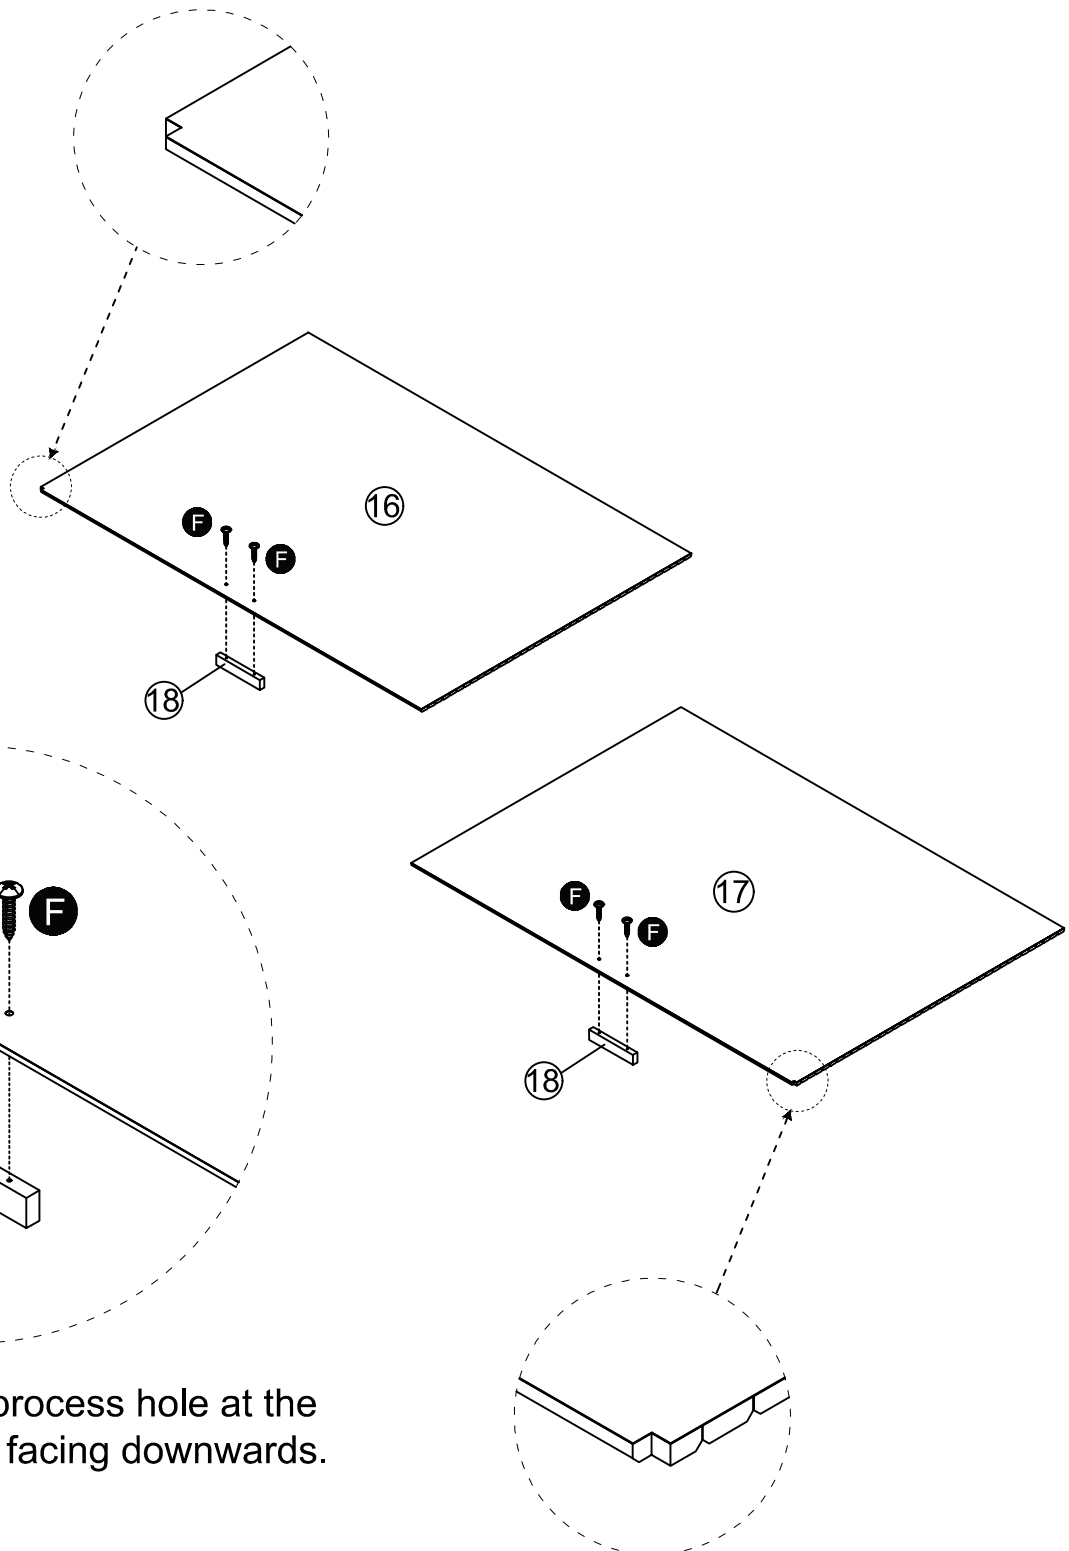
**F** X4**18** X2

Suggest that the process hole at the end of the handle facing downwards.



STEP14

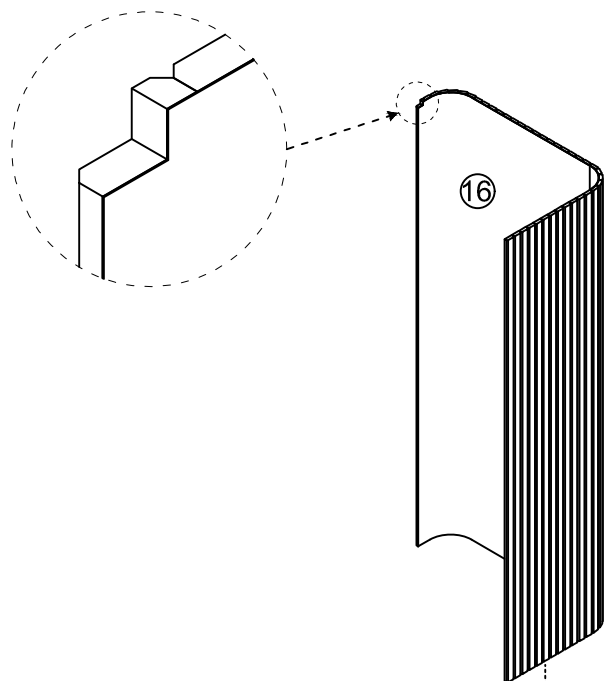

The No.16 piece is inserted into the No.7 piece groove along the No.4 piece, as shown in the figure.

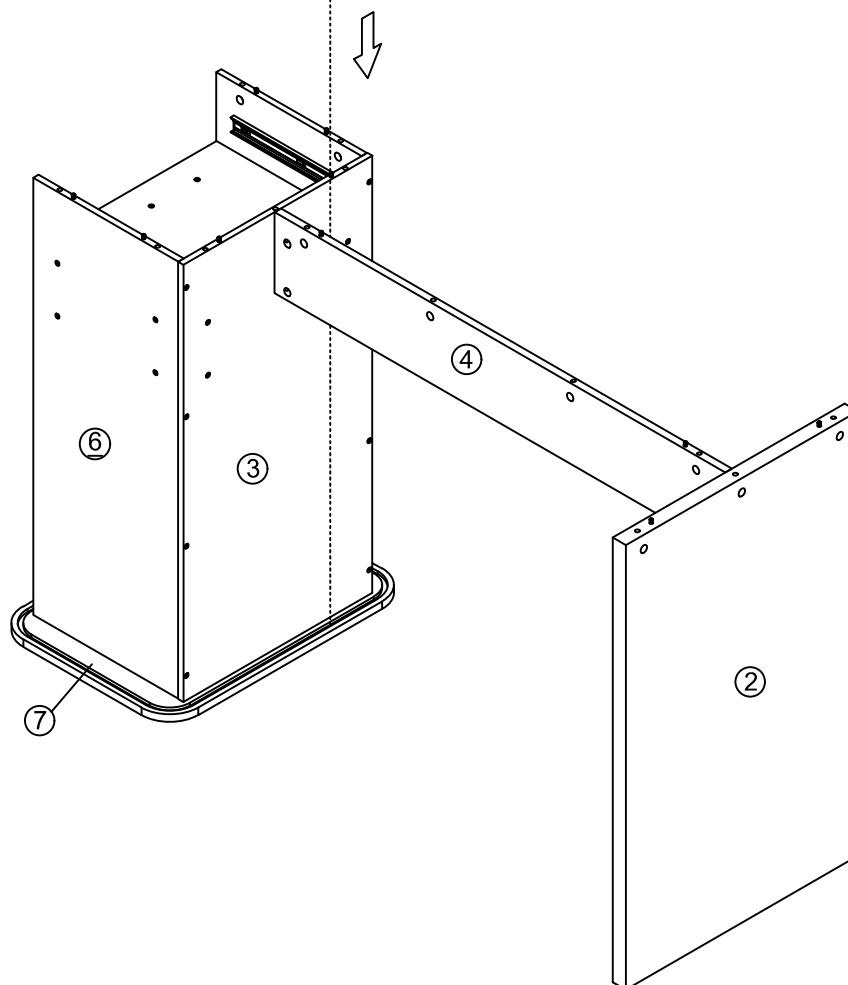


STEP15

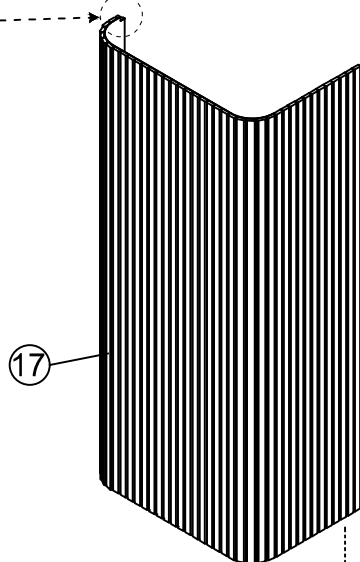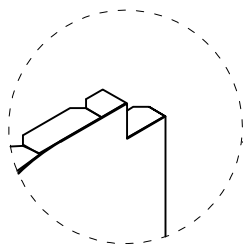


For this step, you need one helper.



The No.17 piece is inserted into the No.7 piece groove along the No.4 piece, as shown in the figure.

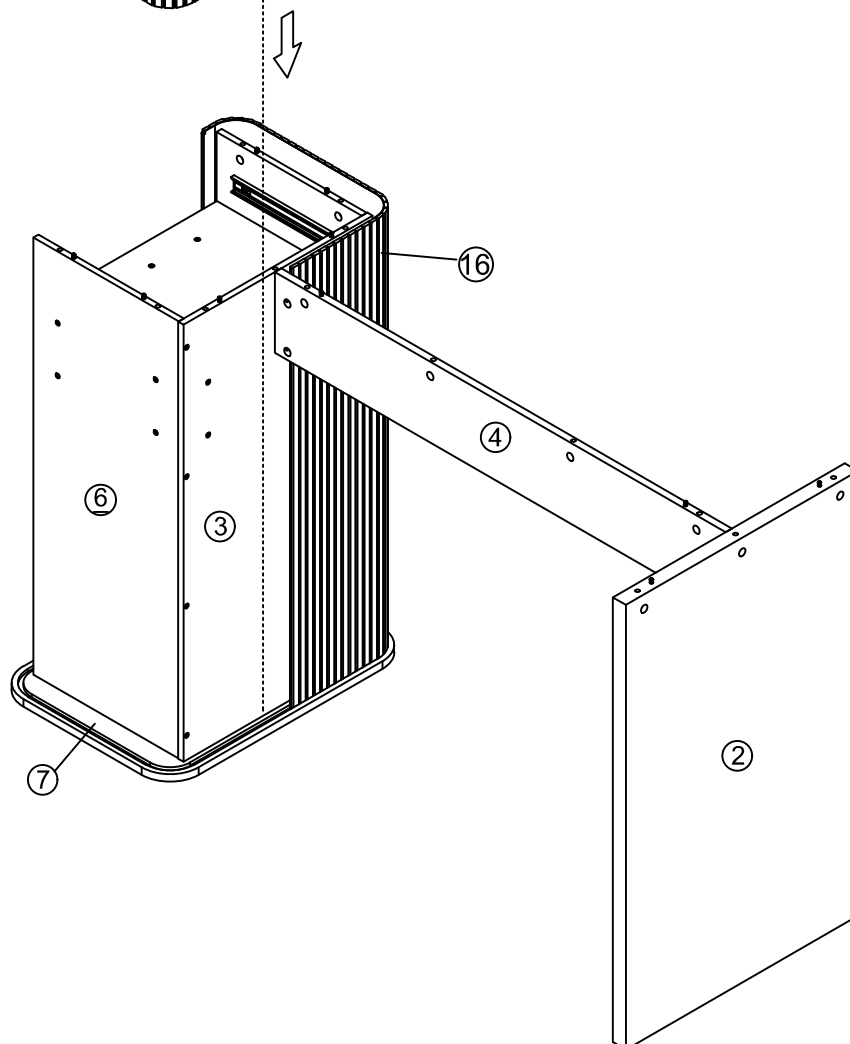

STEP16




B X14

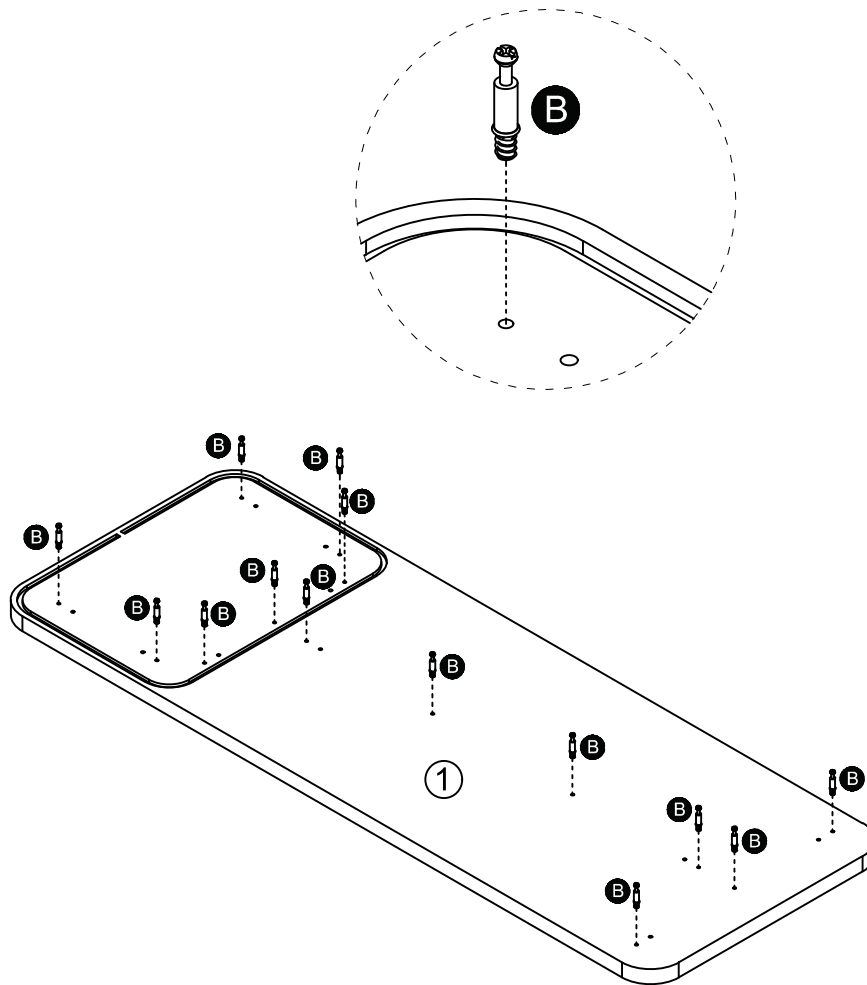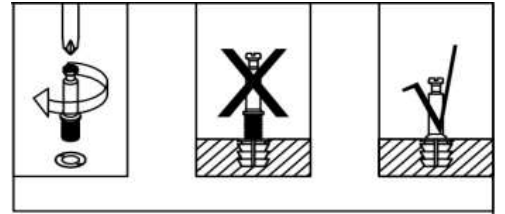

STEP17






A X14

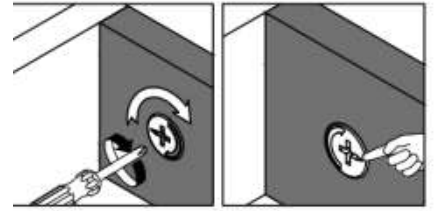

There are grooves on the back here.




For this step, you need one helper.

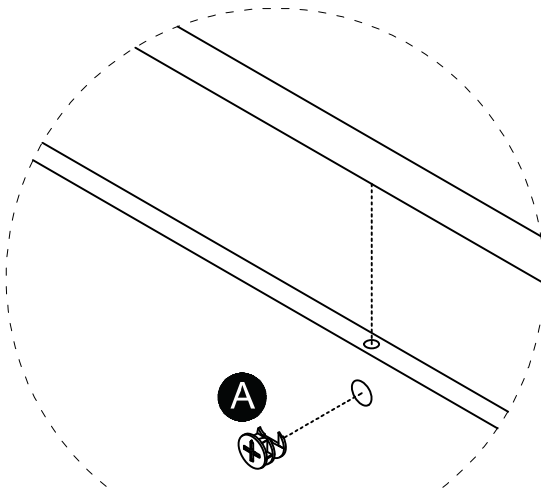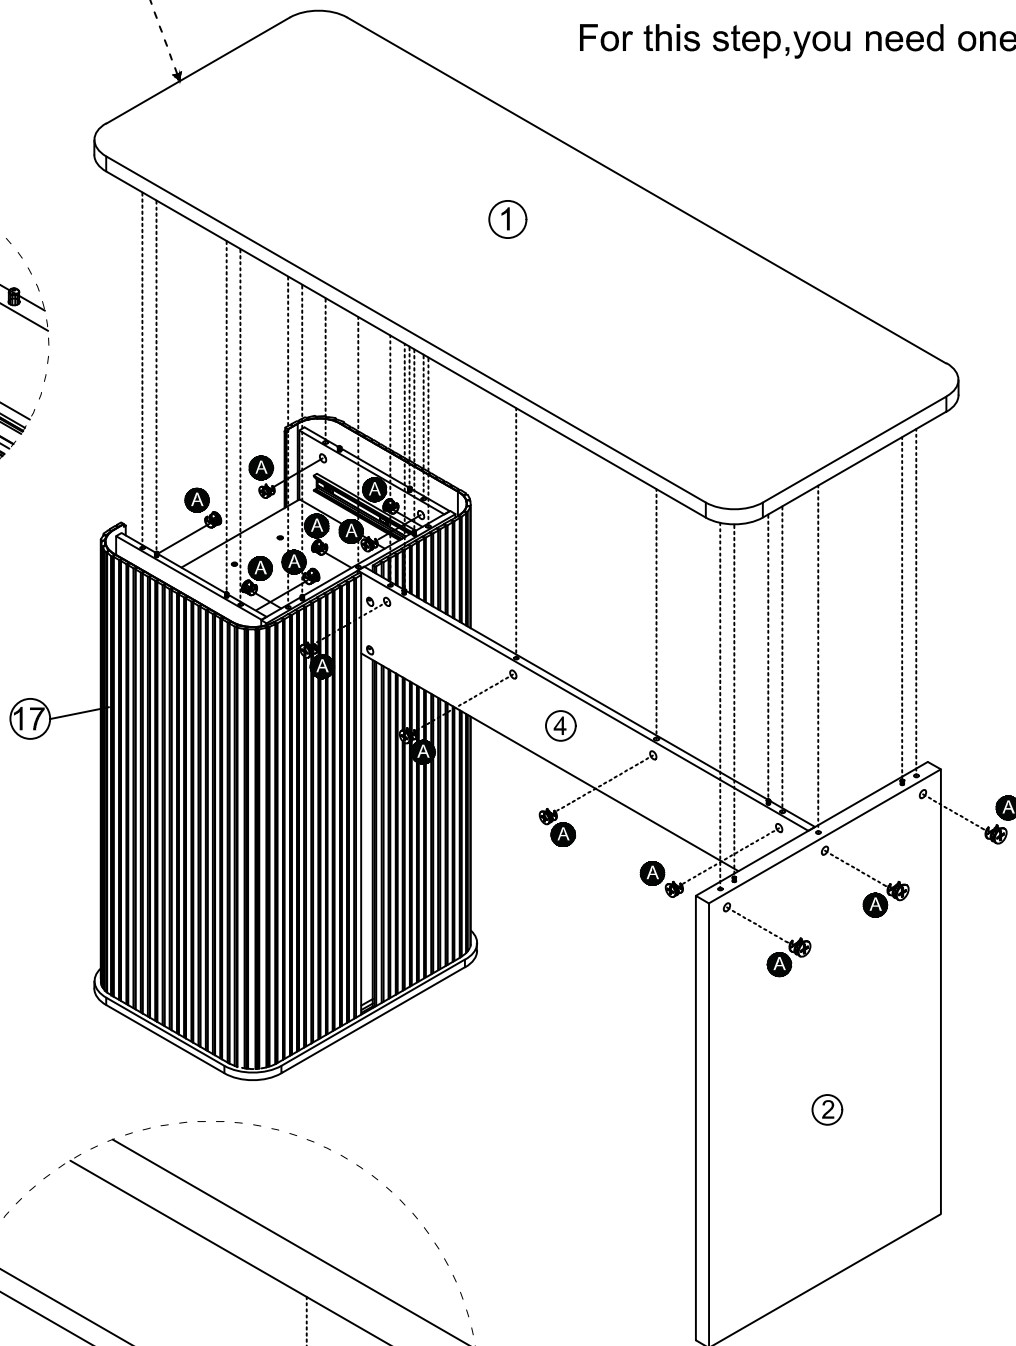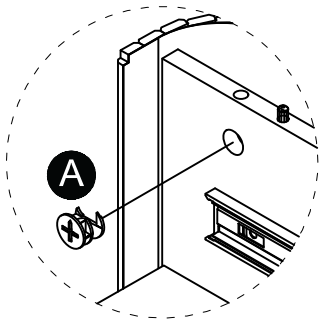


STEP18






A X4



B X4




E X4

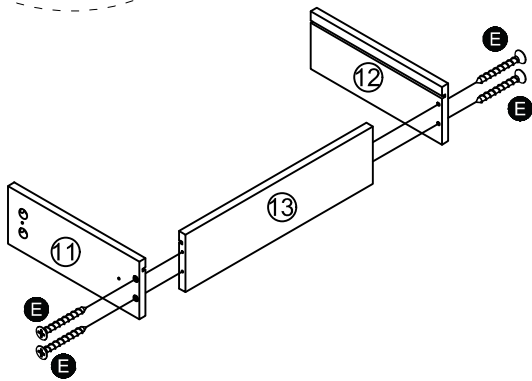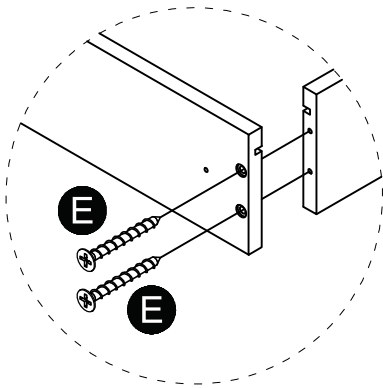
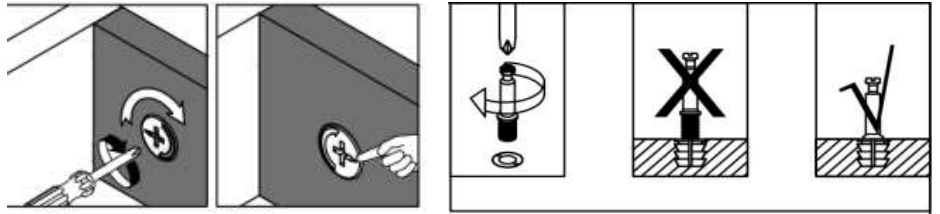


Step 1



Step 2

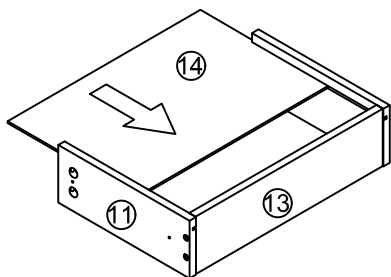





Step 3

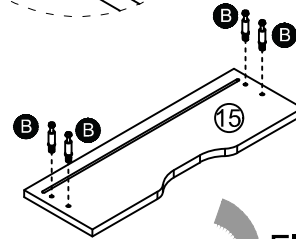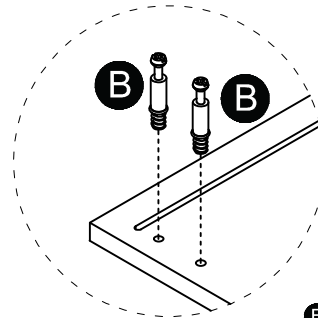

Flip

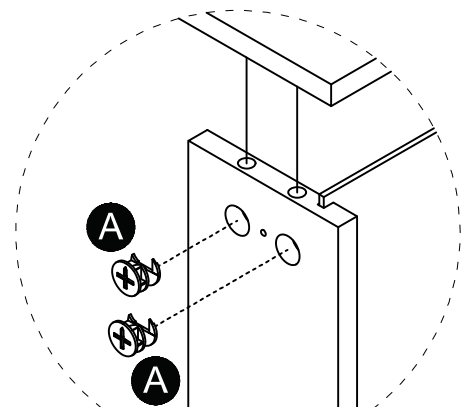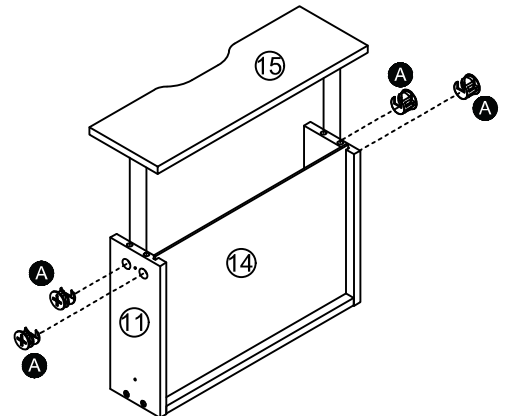

STEP19

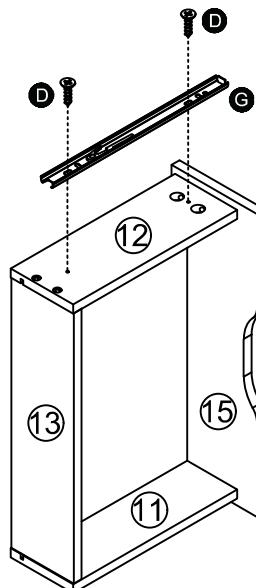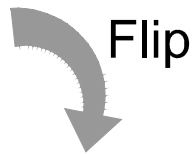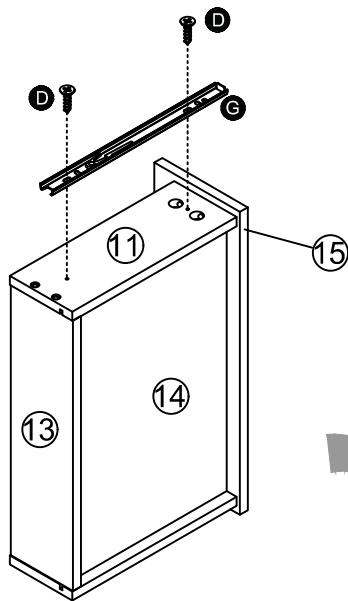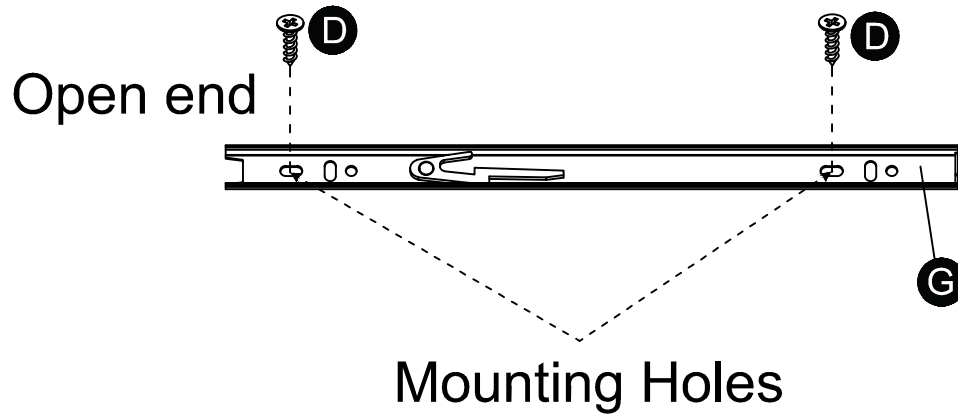**D** X4**G** X1set

STEP20




H X4

Push the slide rails on both sides of the drawer into the grooves of the slide rails on the table top, keeping both sides pushed in simultaneously. Do not allow the drawer to tip to the left or right as it enters. If there is serious jamming during the pushing process, do not force it in.



⑩ board must be sloped into the interior of and then flat.

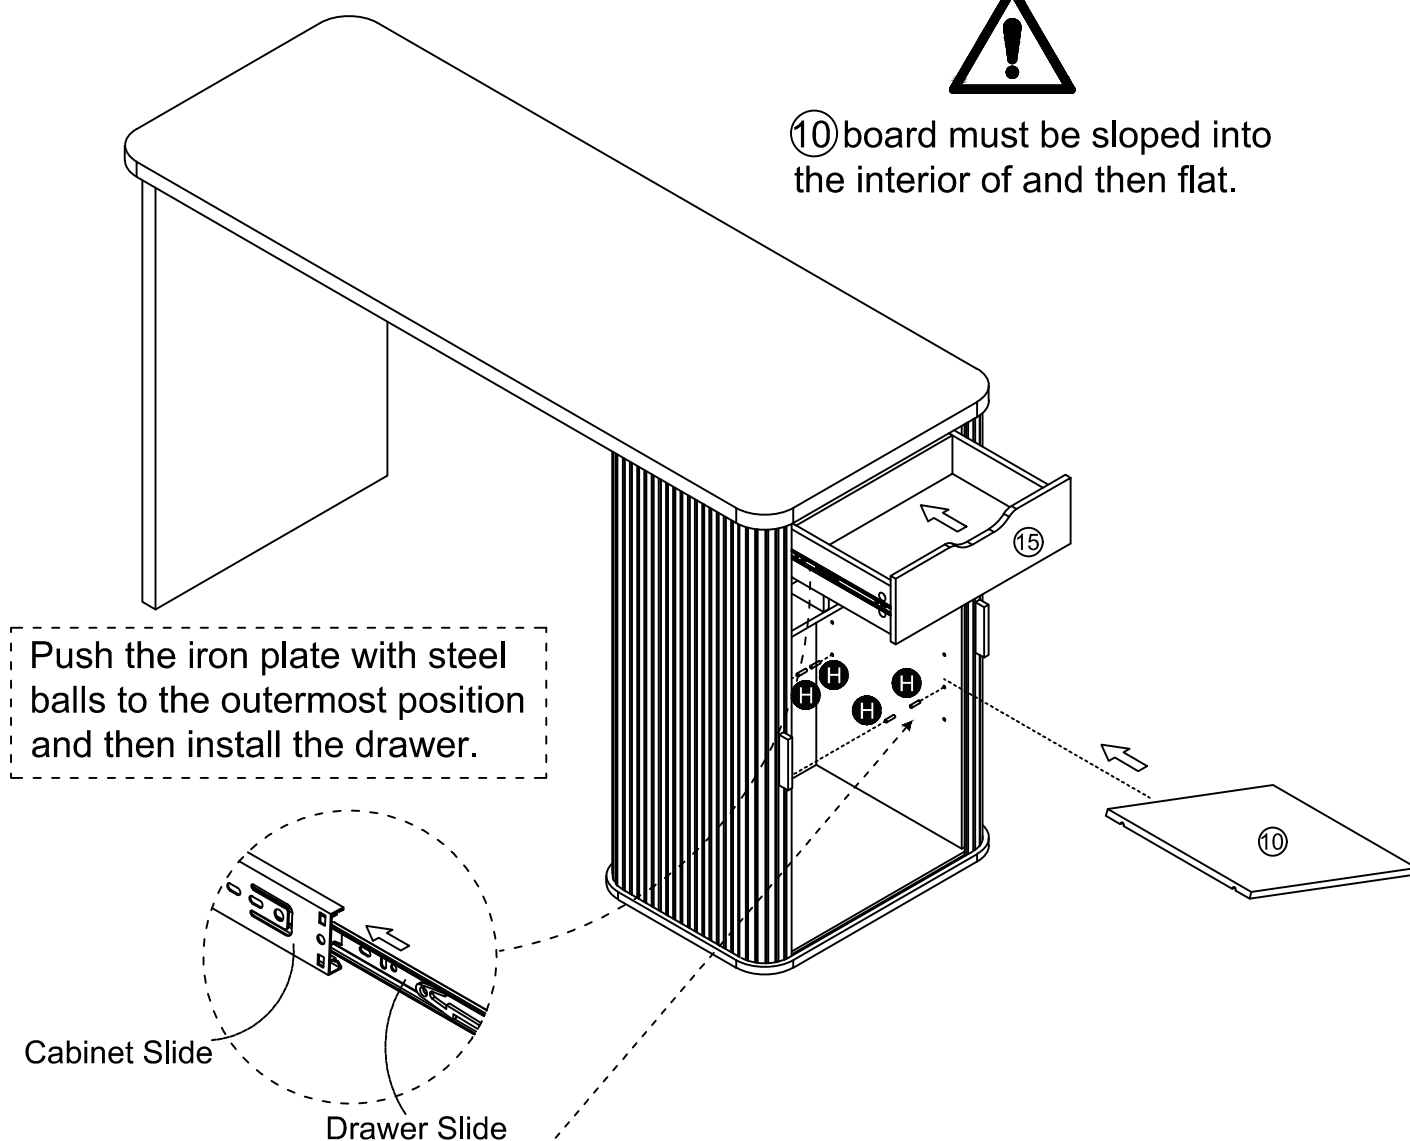


Step 1

Select the desired height and put it in

Step 2


Aim the board gaps down

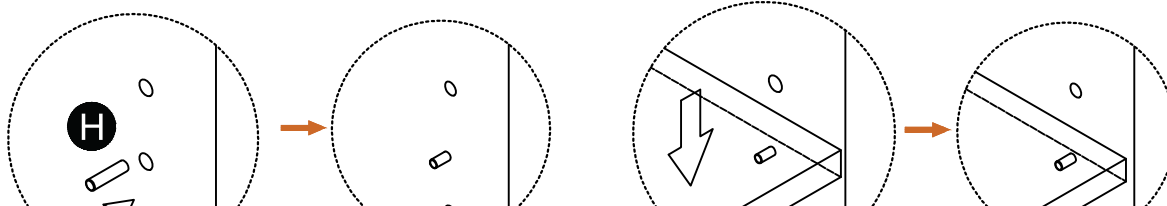

STEP21



J X22

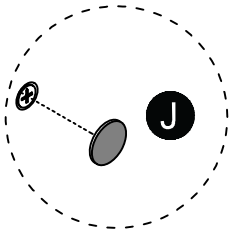

Stick the exposed holes of the cabinet body with hole stickers .

