




# Product Installation Instructions

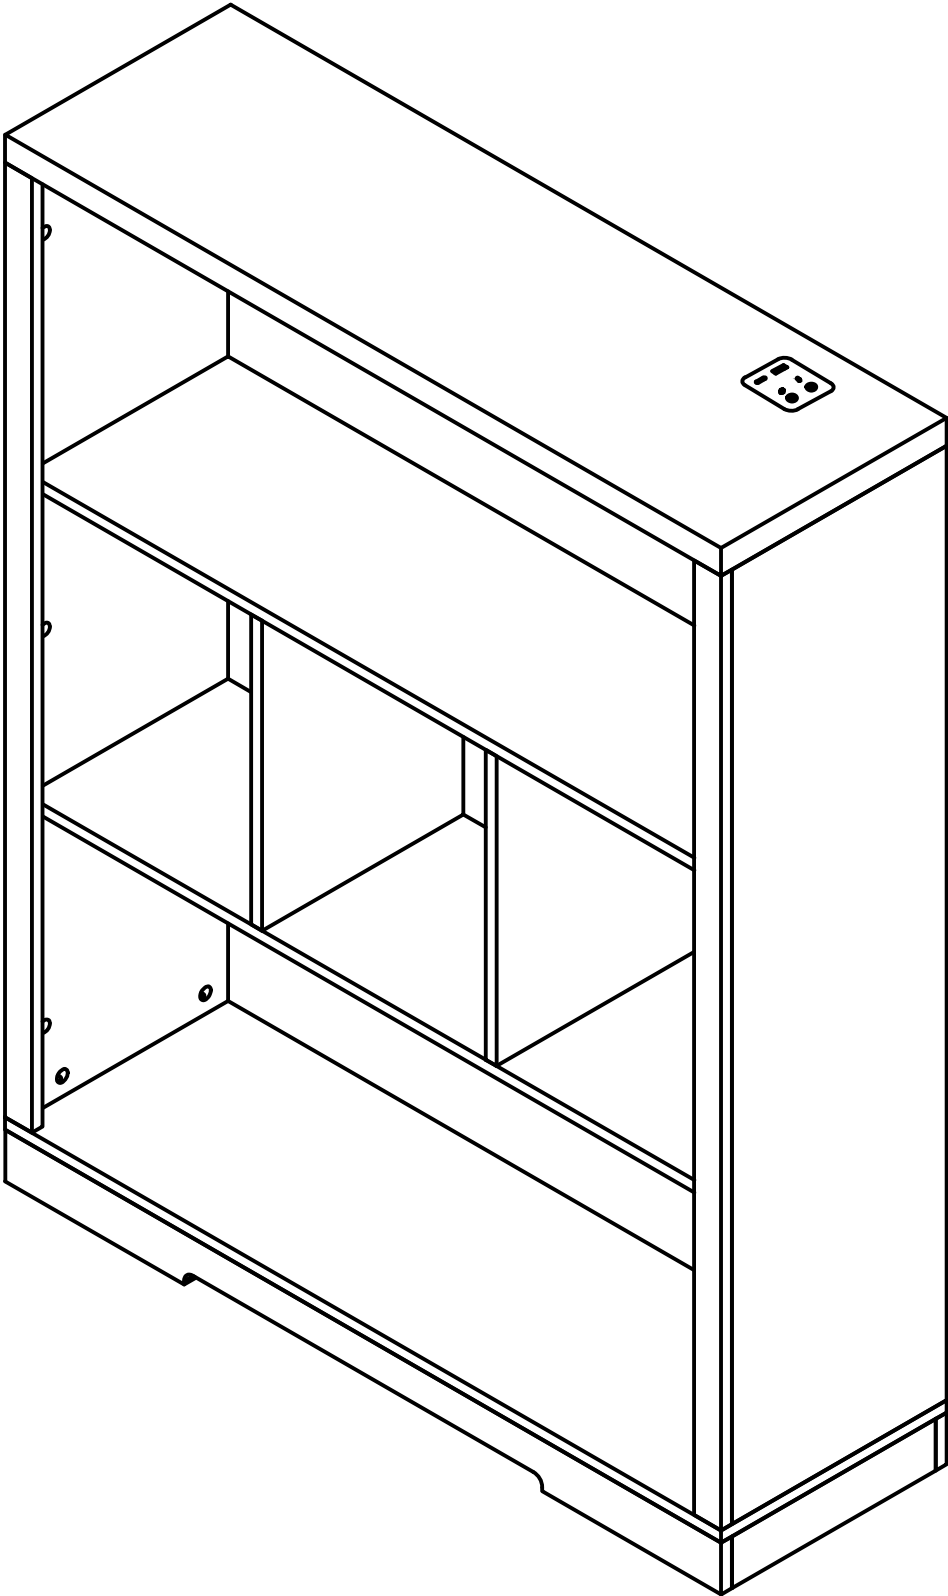


# Product structure decomposition

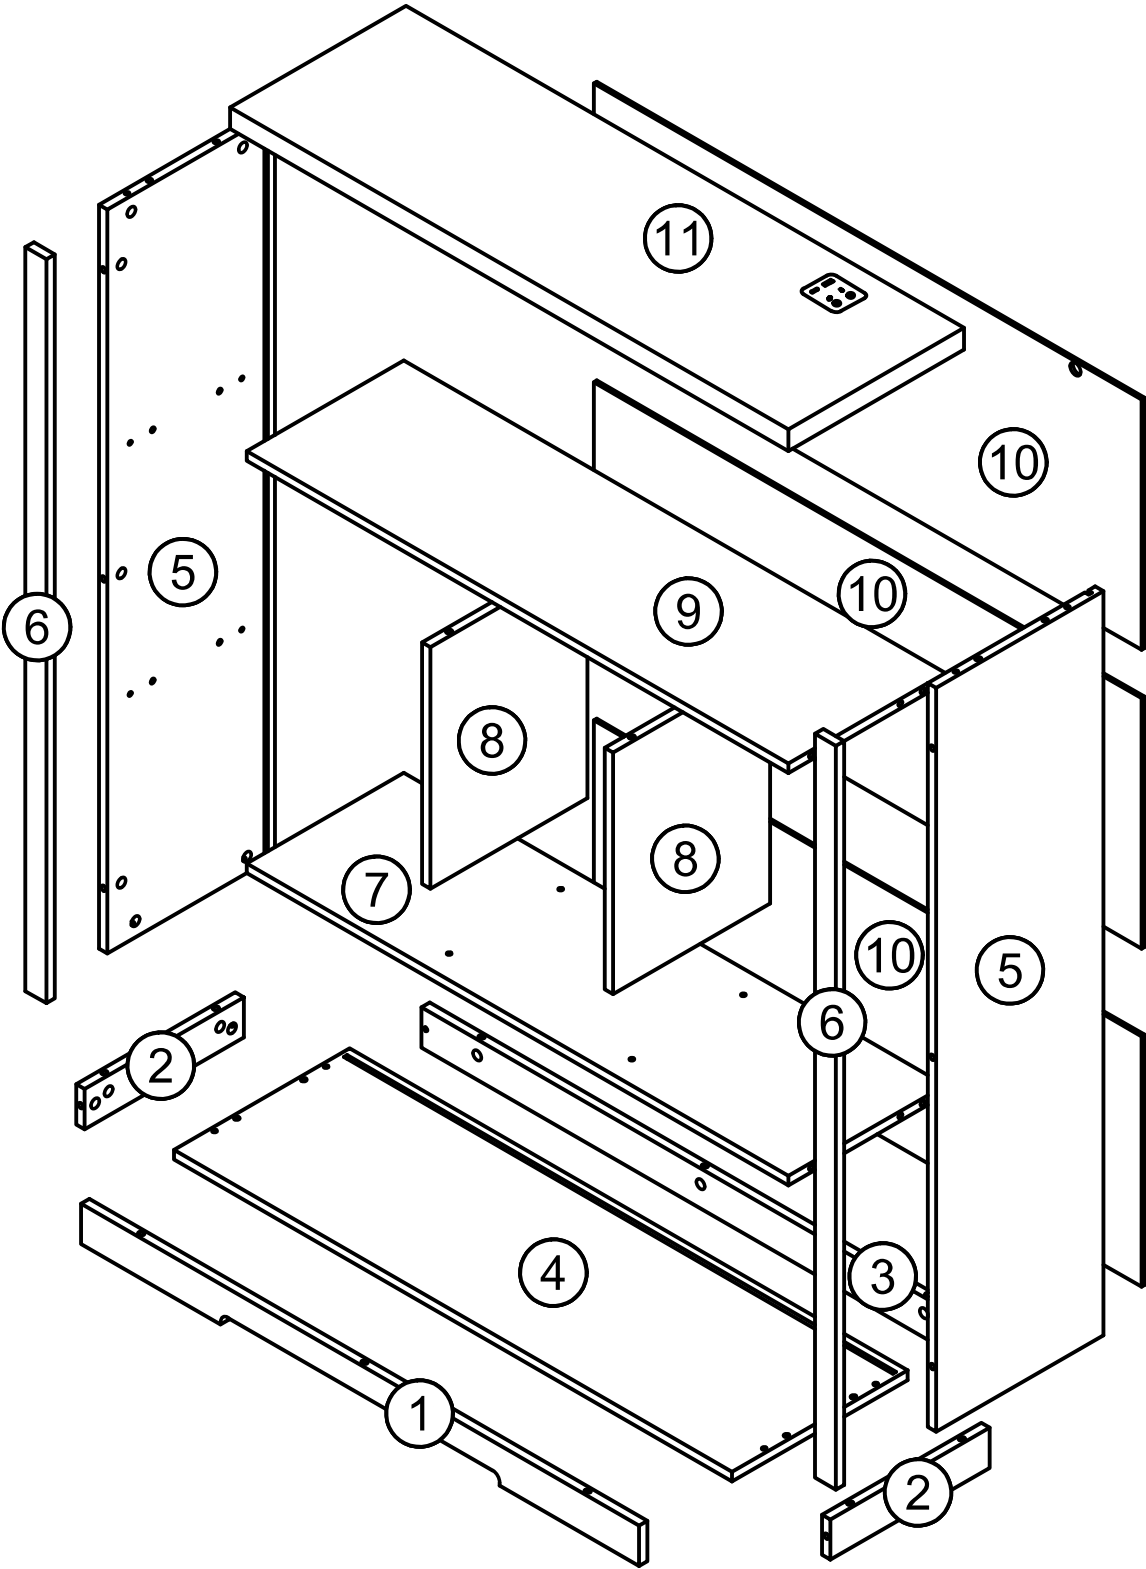


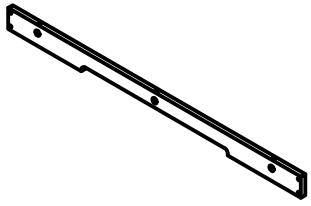


1x1

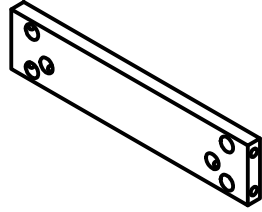


2x2

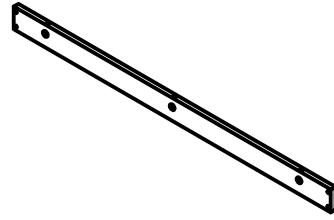

3x1

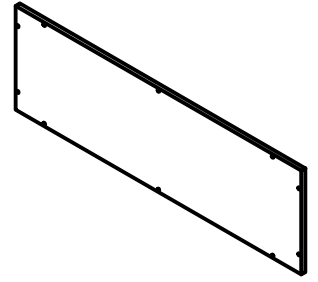


4x1




5x2




6x2

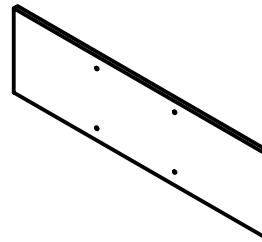


7x1

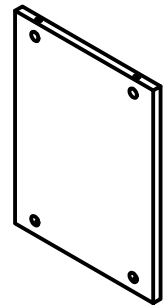


8x2

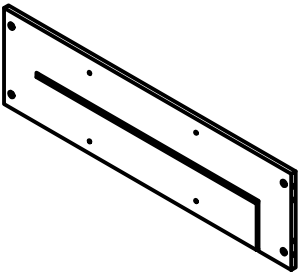


9x1

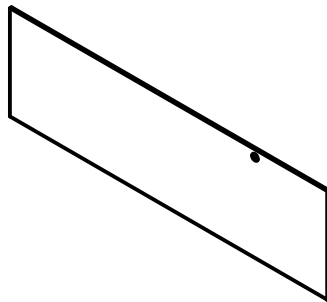





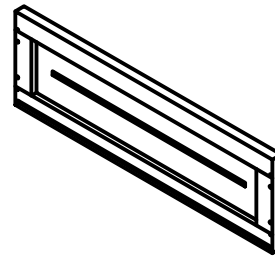




10x3





11x1

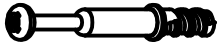


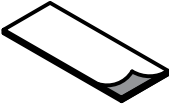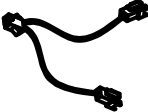

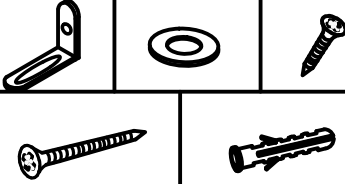


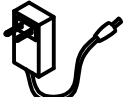



# Accessories list

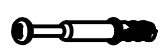A		Two In One Screw (6x28mm)	42pcs +4pcs
B		Two In One Nut (10x12mm)	42pcs +4pcs
C		Wood Chipping (6x30mm)	16pcs +2pcs
D		Non-slip pads	6pcs +2pcs
E		1 bis 2 power extension cable	1pcs
F		Fixing clip & screw (3x16mm)	10pcs +3pcs
G		Foot nail	4pcs +2pcs
H		Anti fall hardware	2pcs
		AC/DC Adapter (12V=3.0A)	1pcs





Double-head screwdriver, use as required


A		42 pcs	B		42 pcs	C		16 pcs
D		6 pcs	E		1 pcs	F		10 pcs
G		4 pcs	H		2 pcs			1 pcs

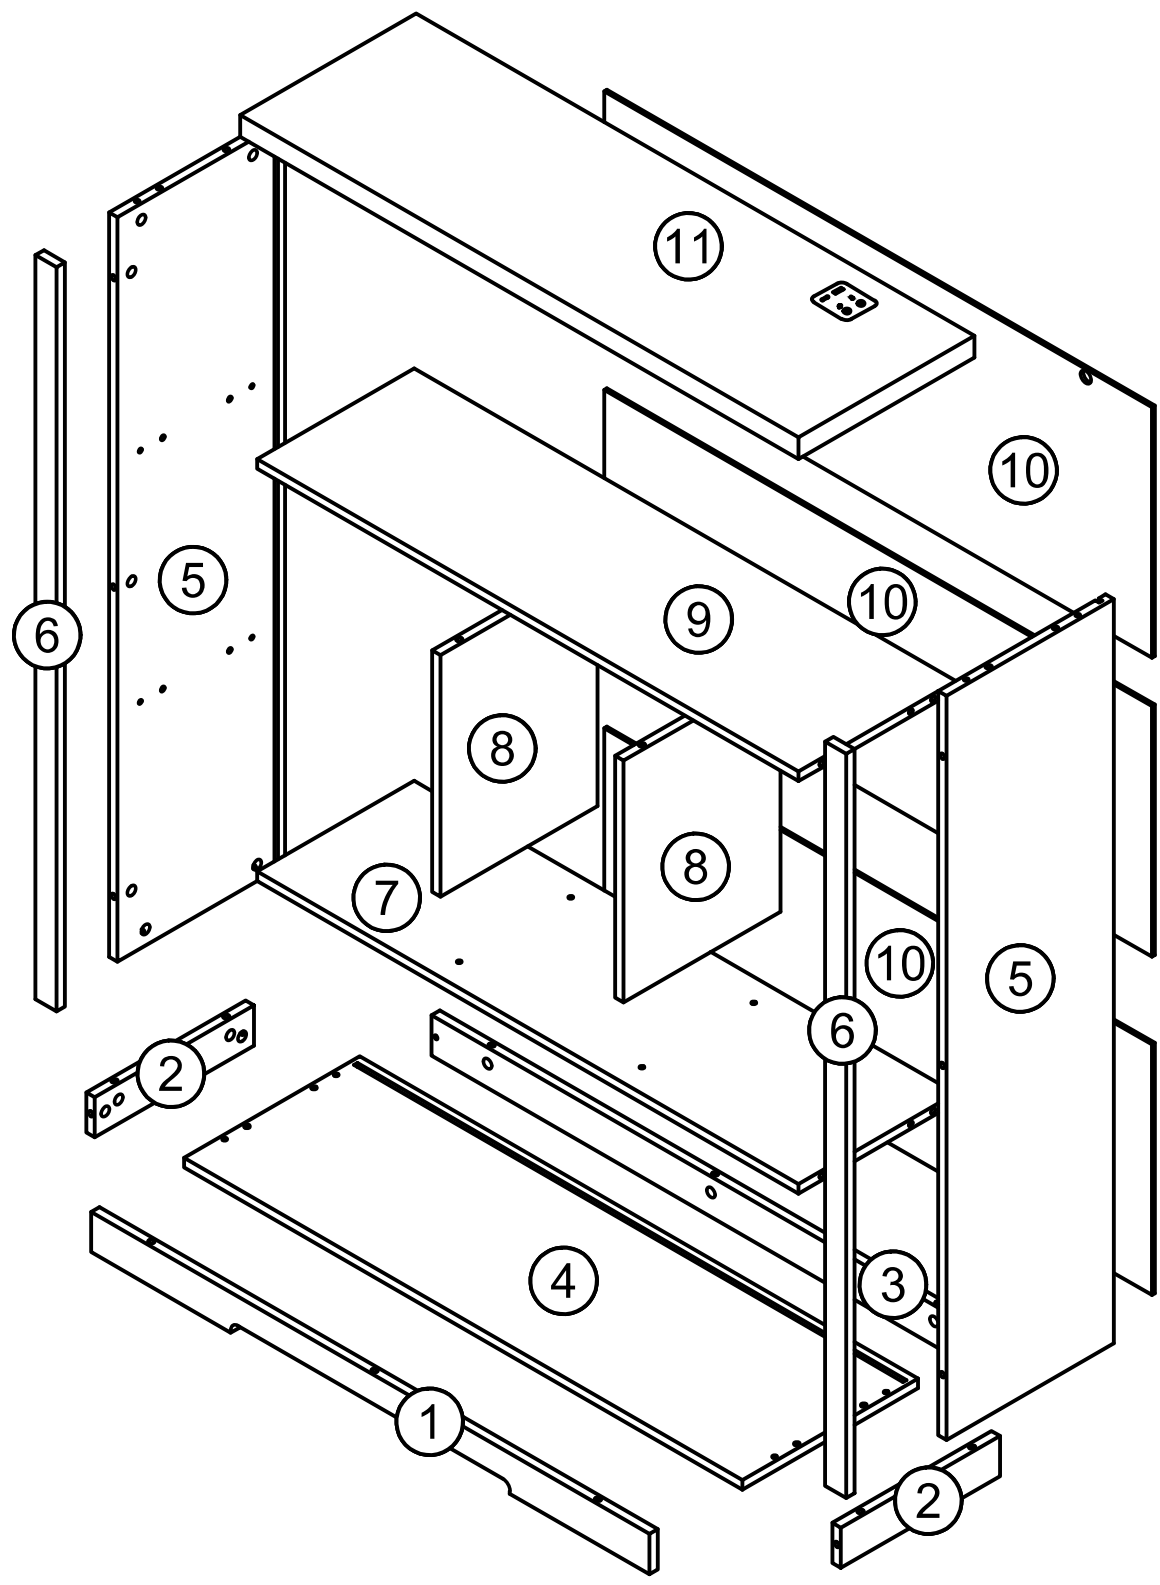



Step 1

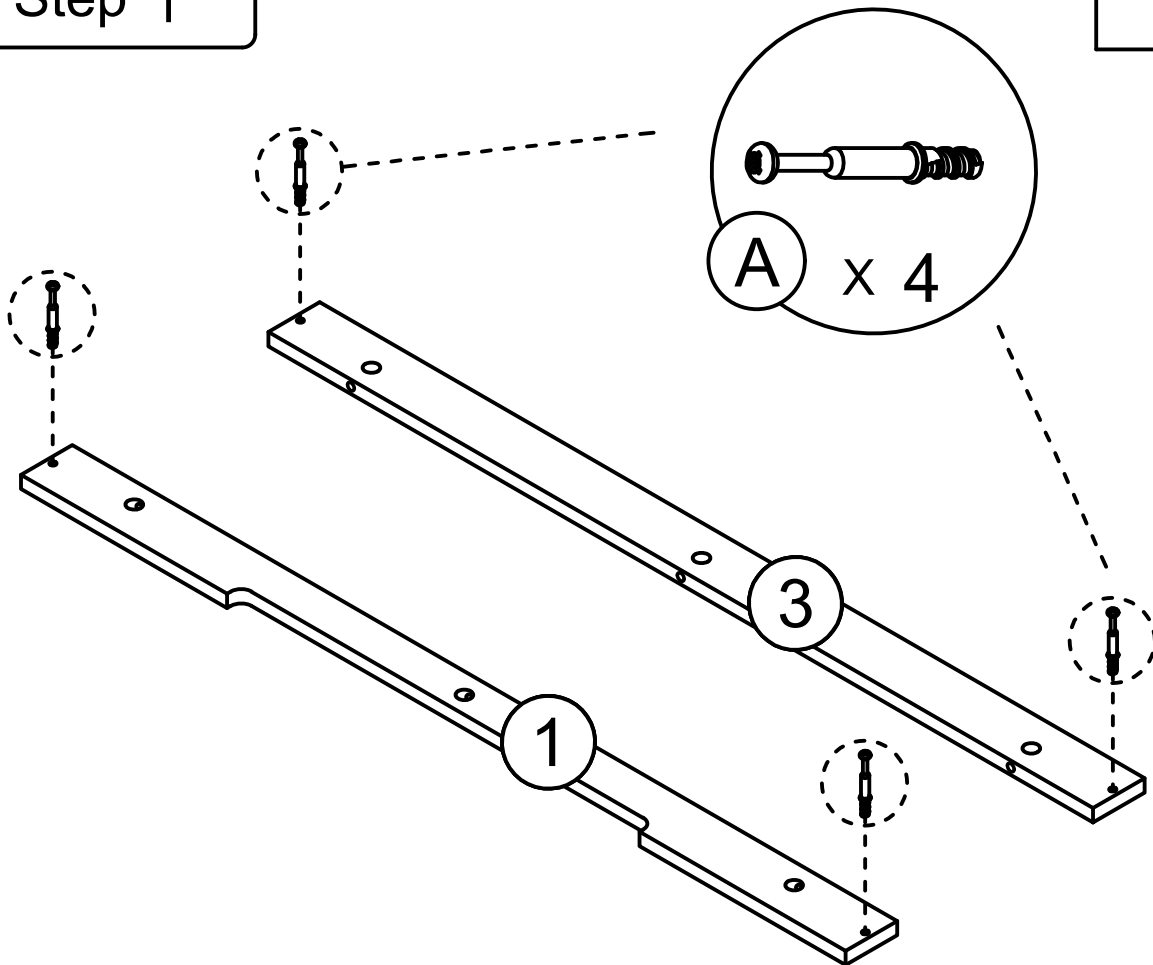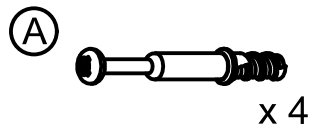


Step 2

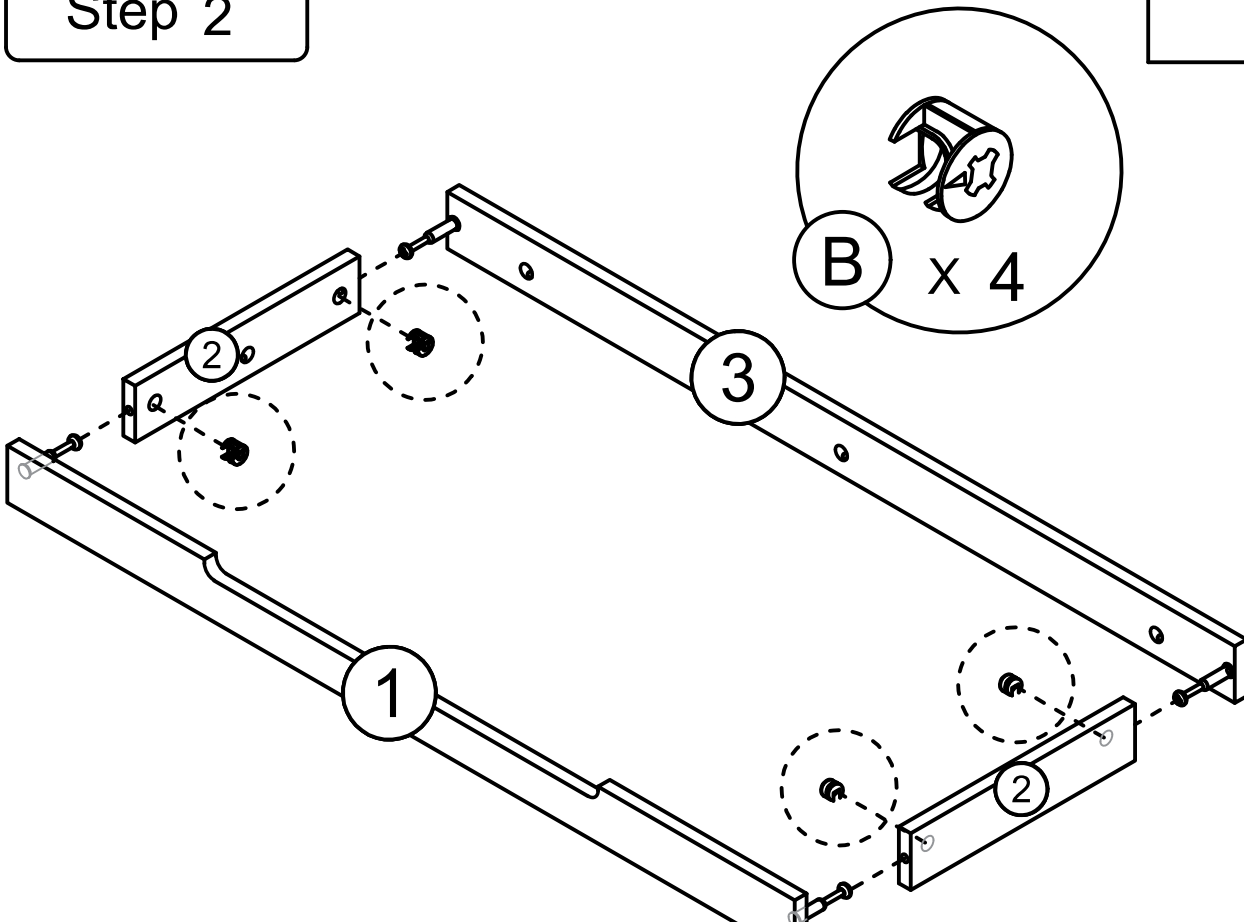


Step 3

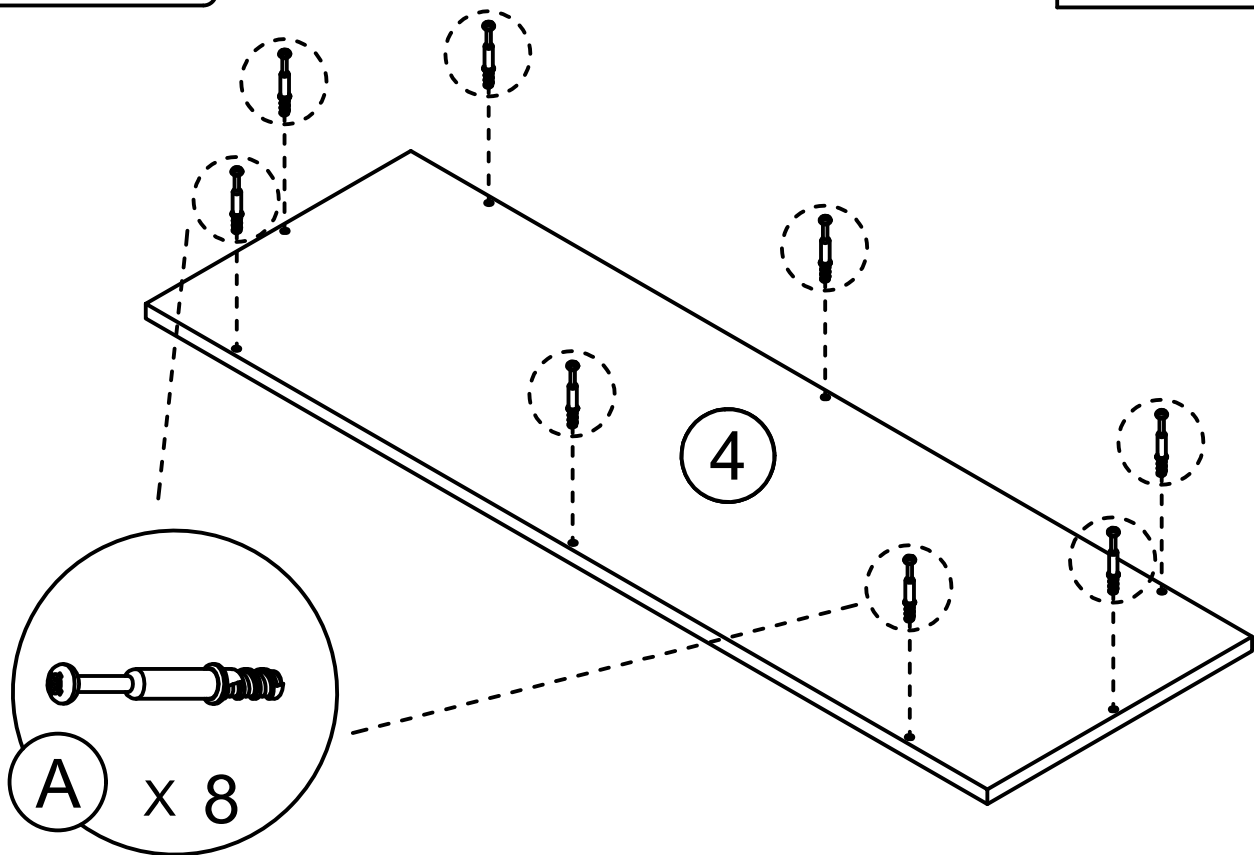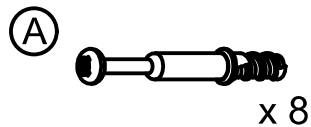


Step 4

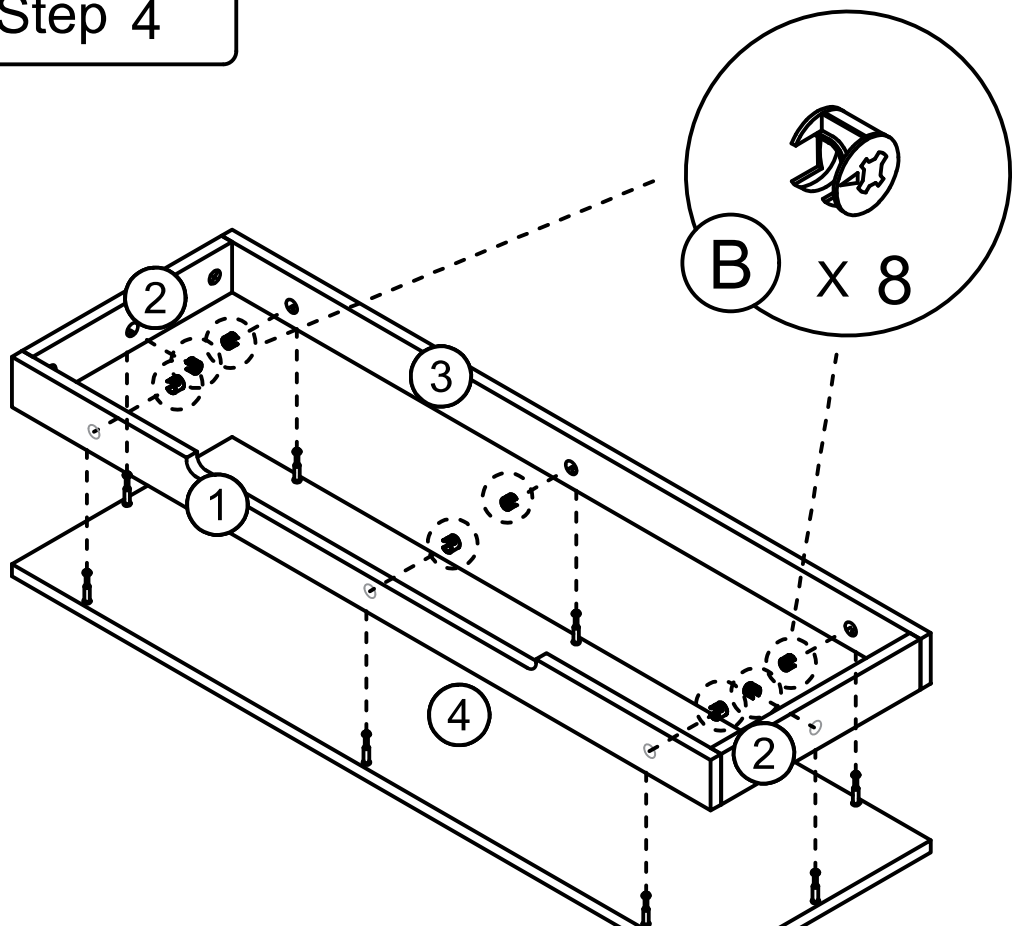



# Step 5

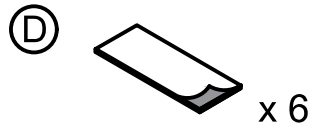



Tear off release paper and stick the black foot pad on the board

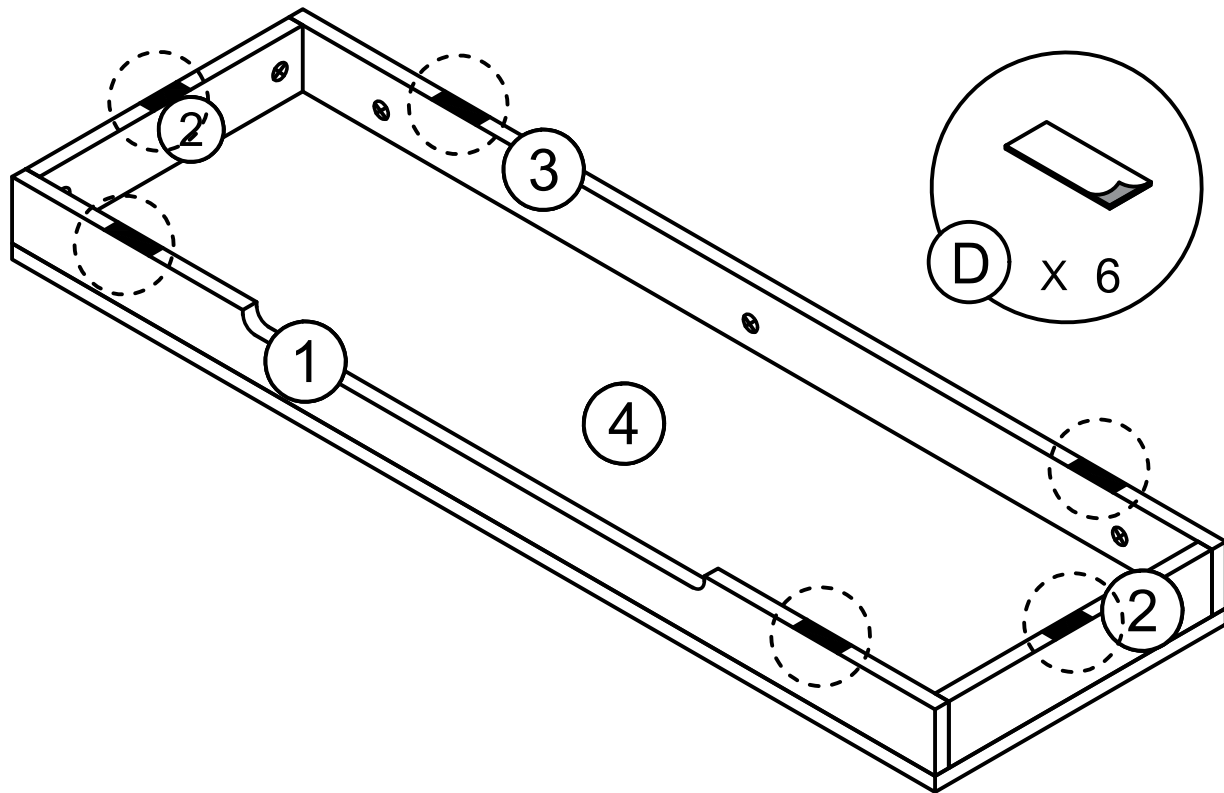



# Step 6

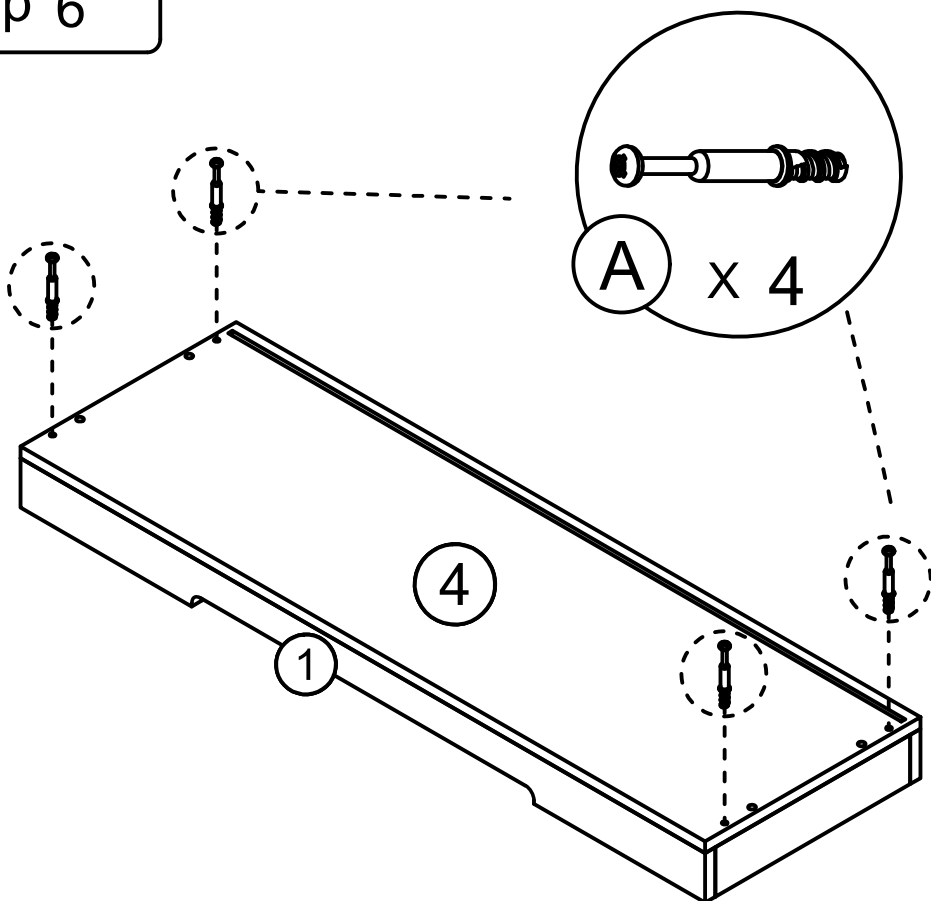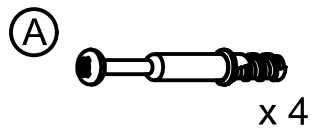

Step 7

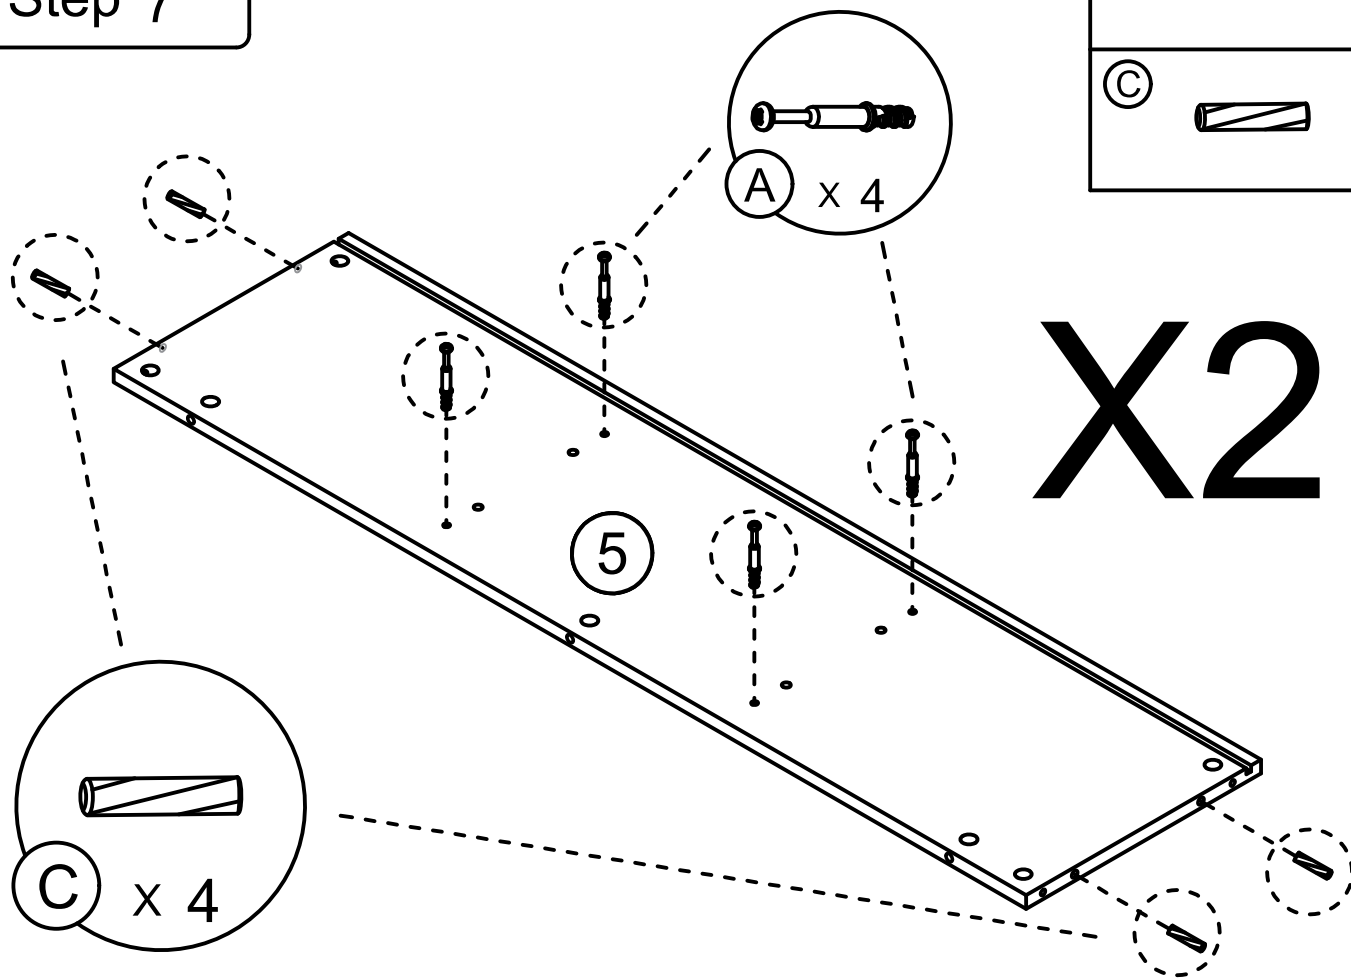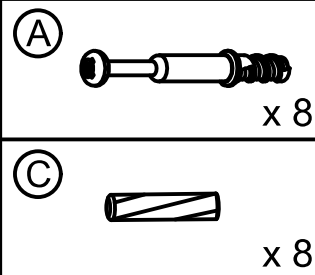

Step 8

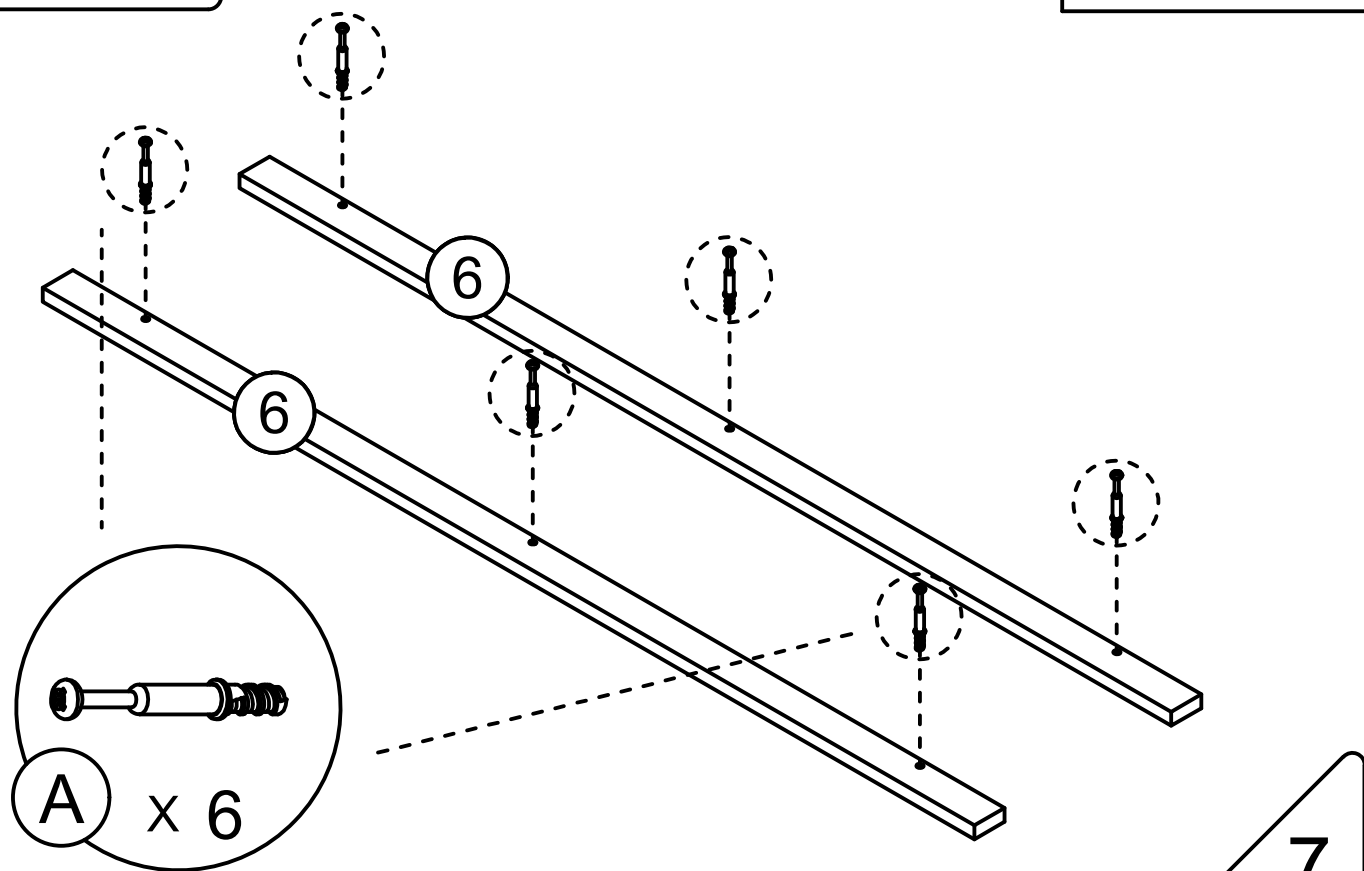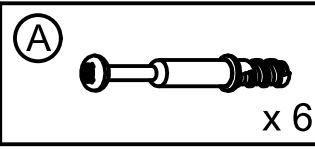


Step 9

(B)




x 6

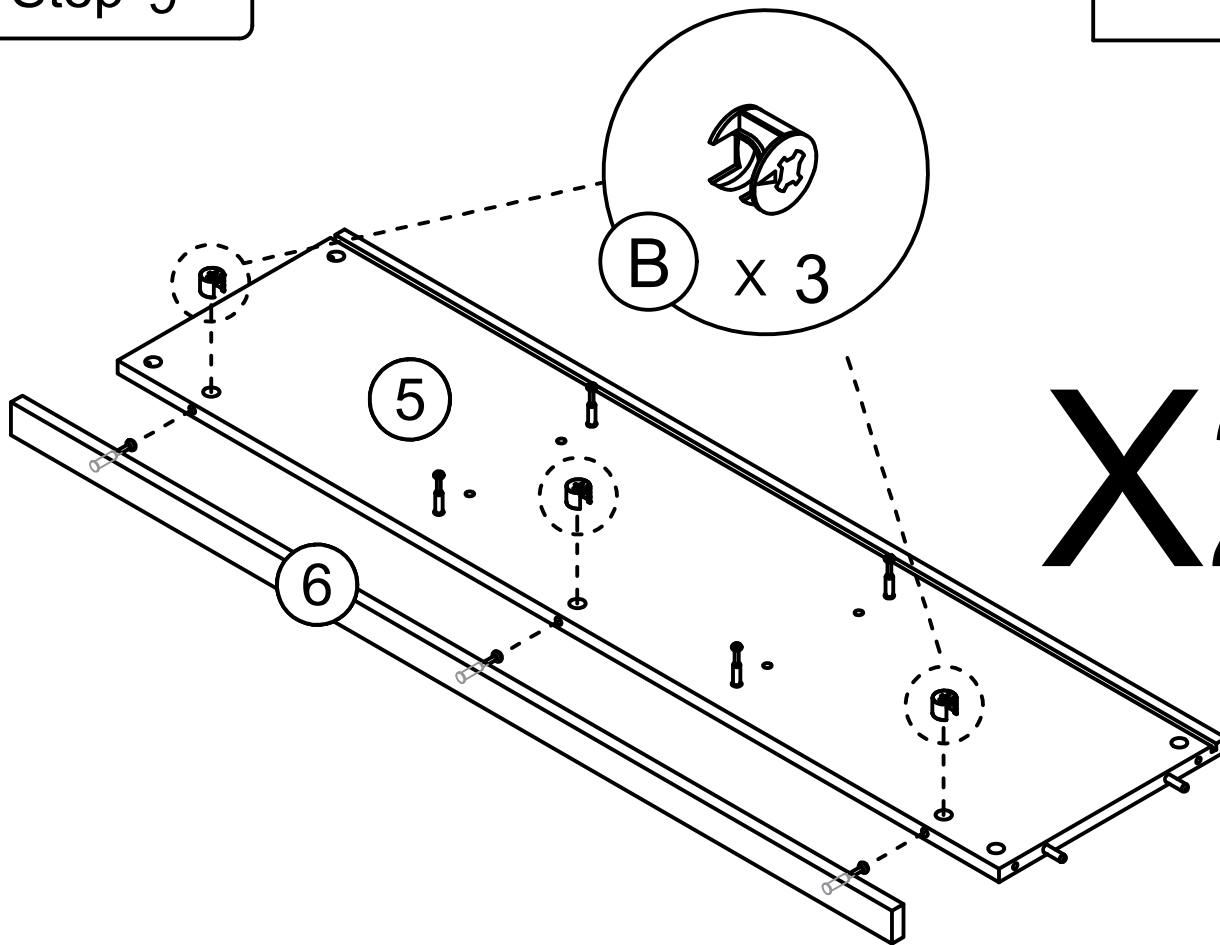



X2

Step 10



(A)

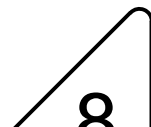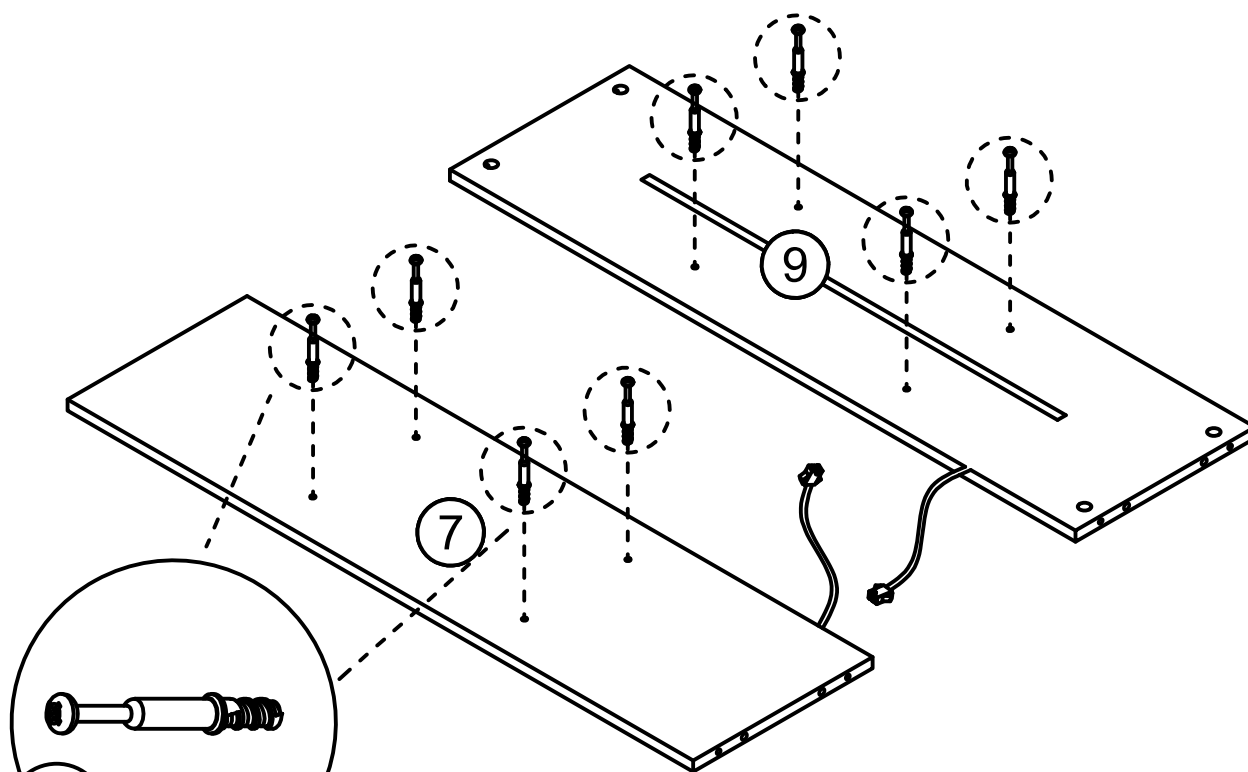


x 8






Step 11

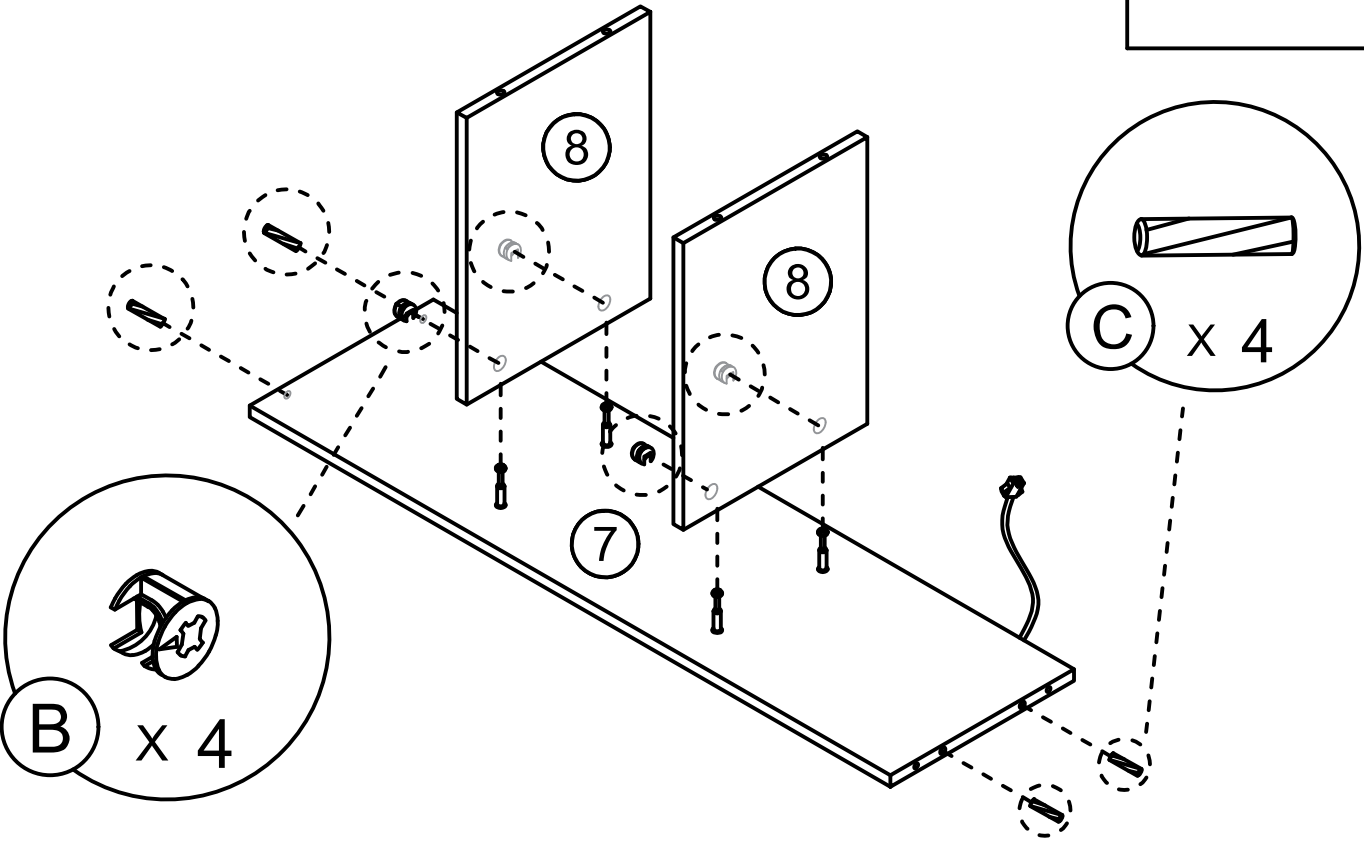- (B)  x 4
- (C)  x 4




Step 12

- (B)  x 4
- (C)  x 4

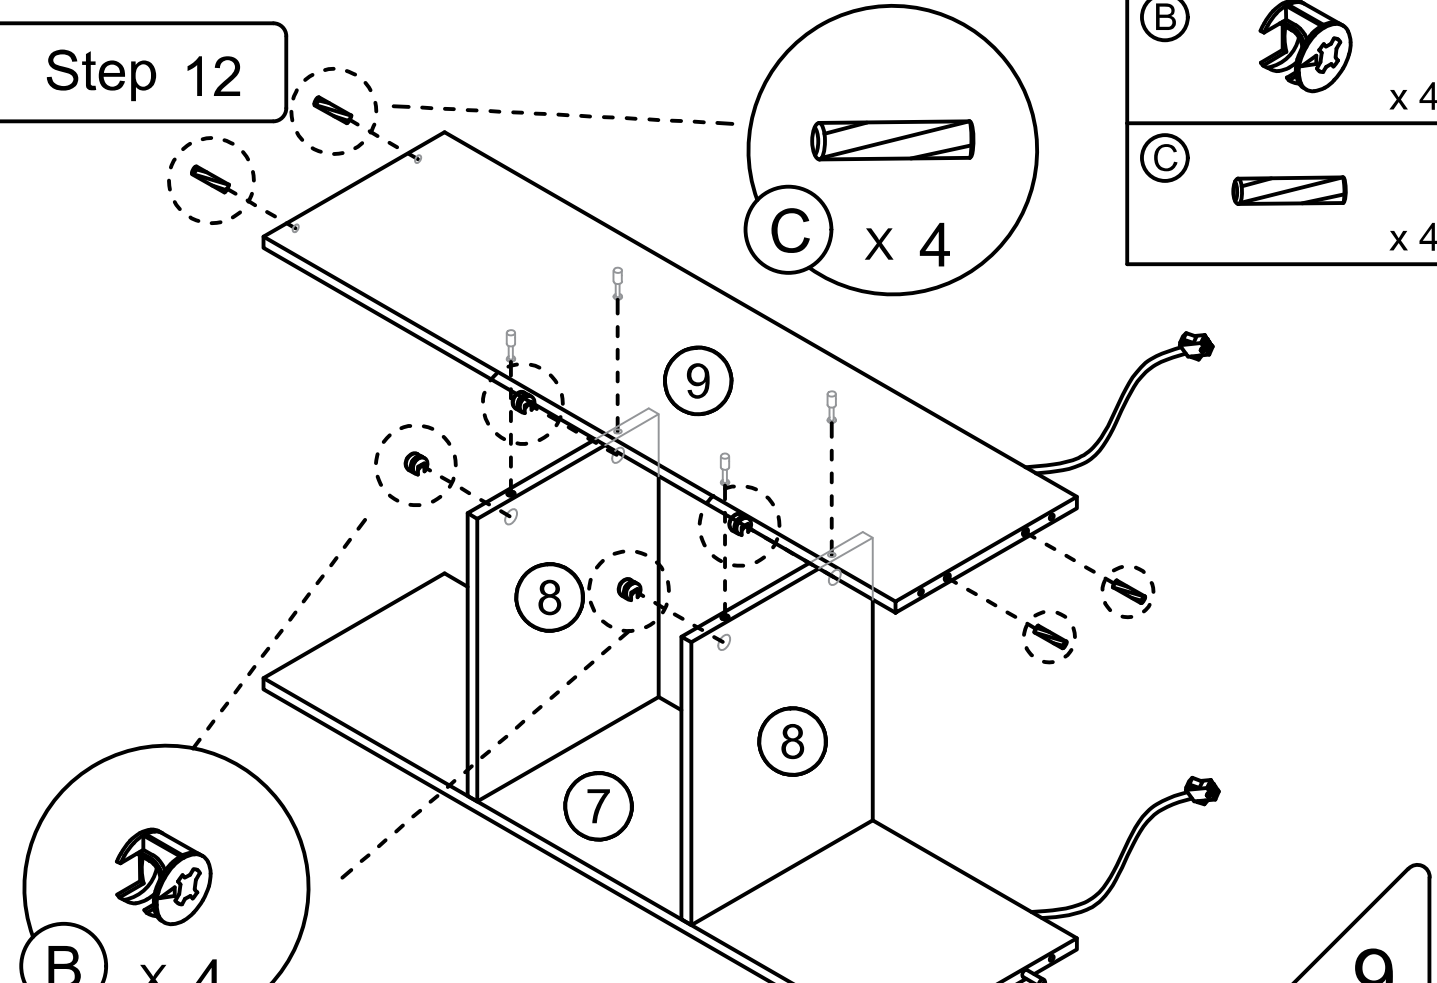


Step 13

(B)  x 4

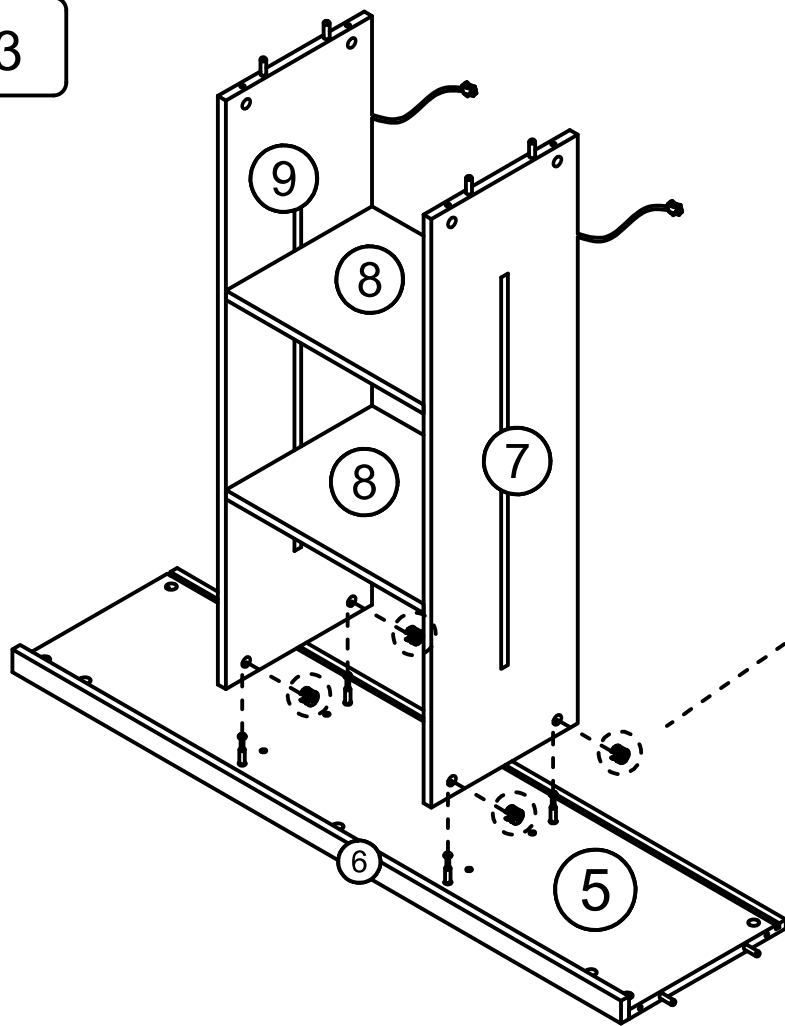


Step 14

(B)  x 4

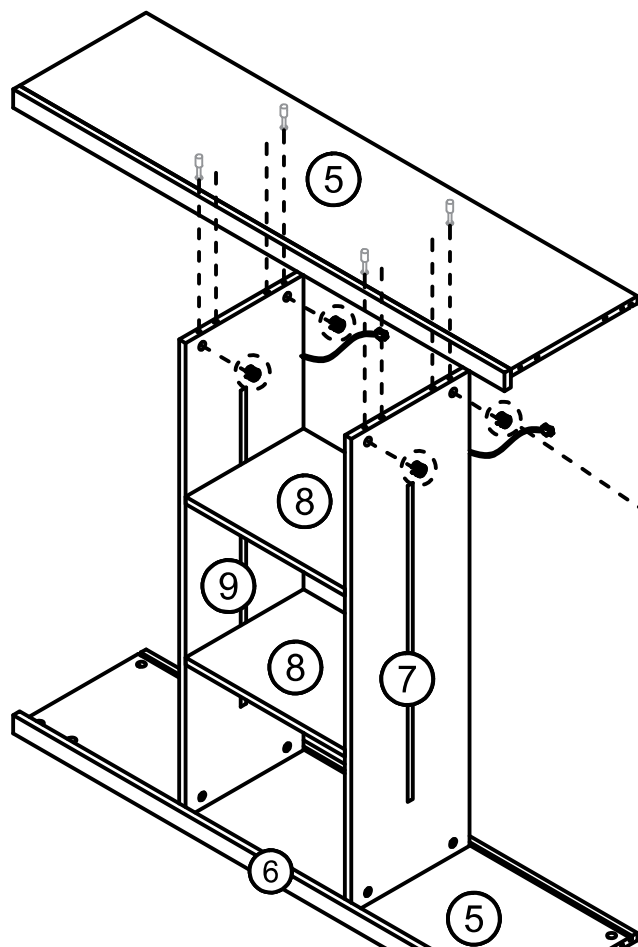


Step 15


Ⓑ x 4

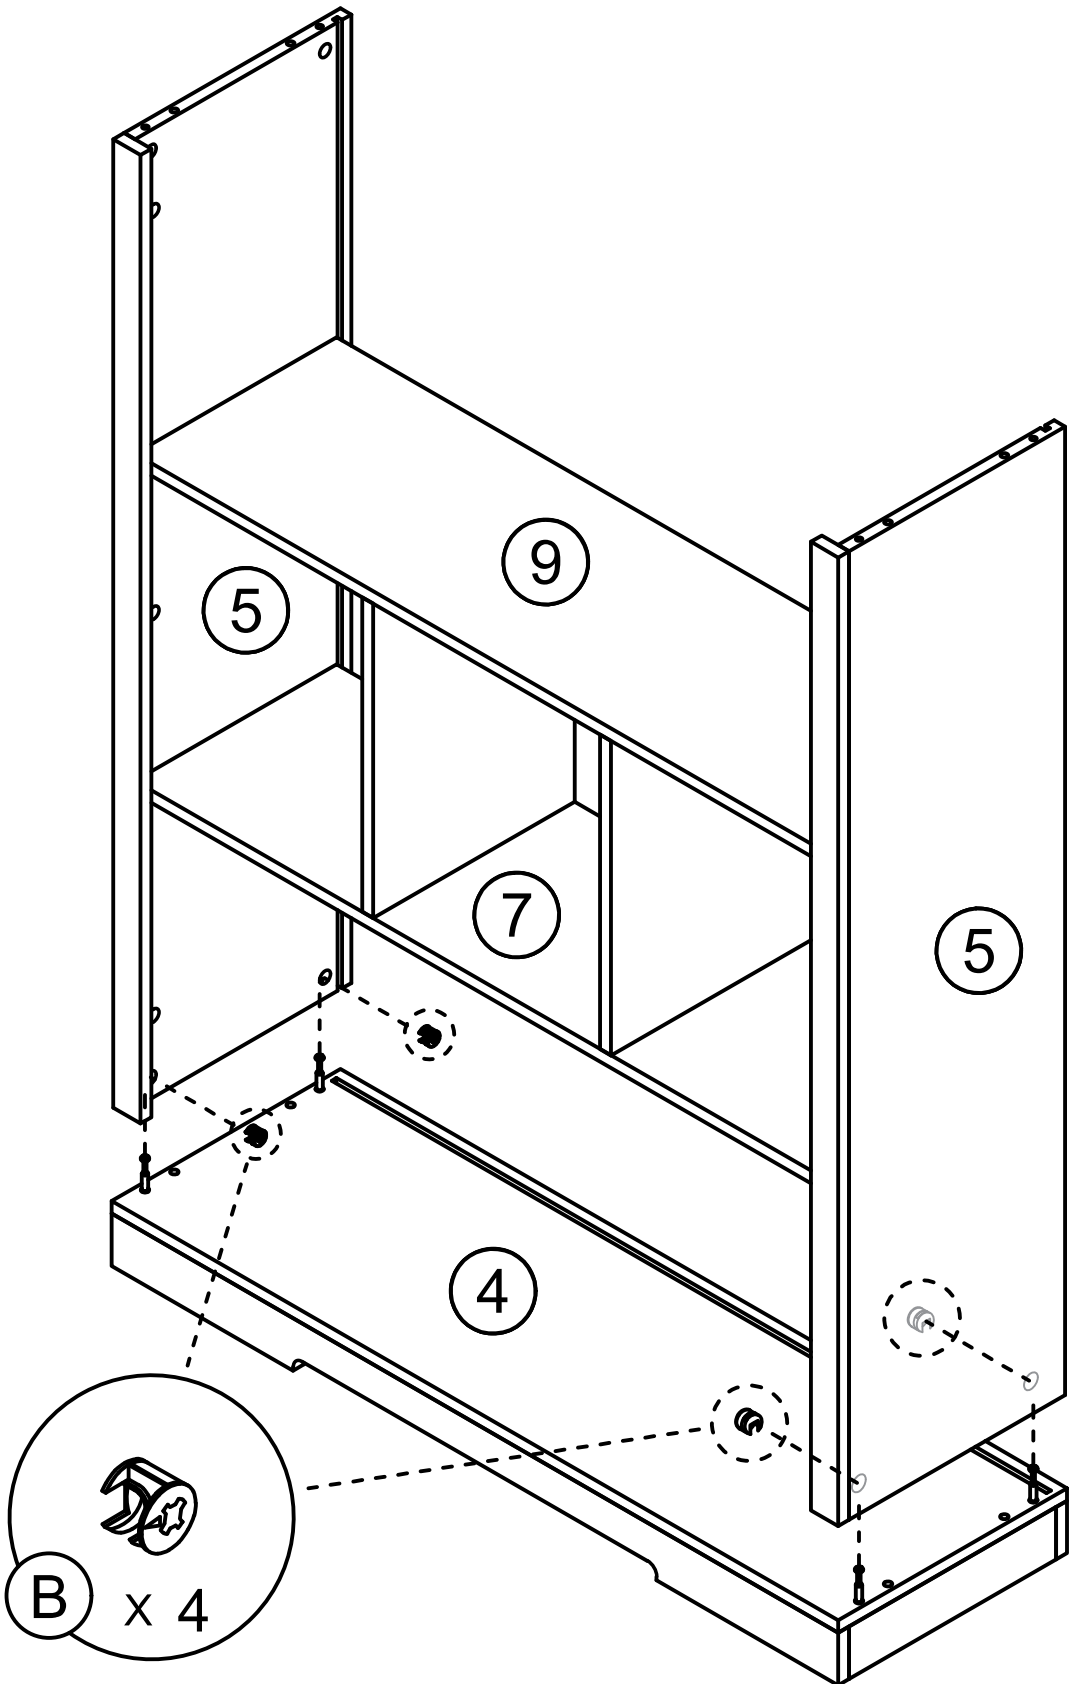

Step 16

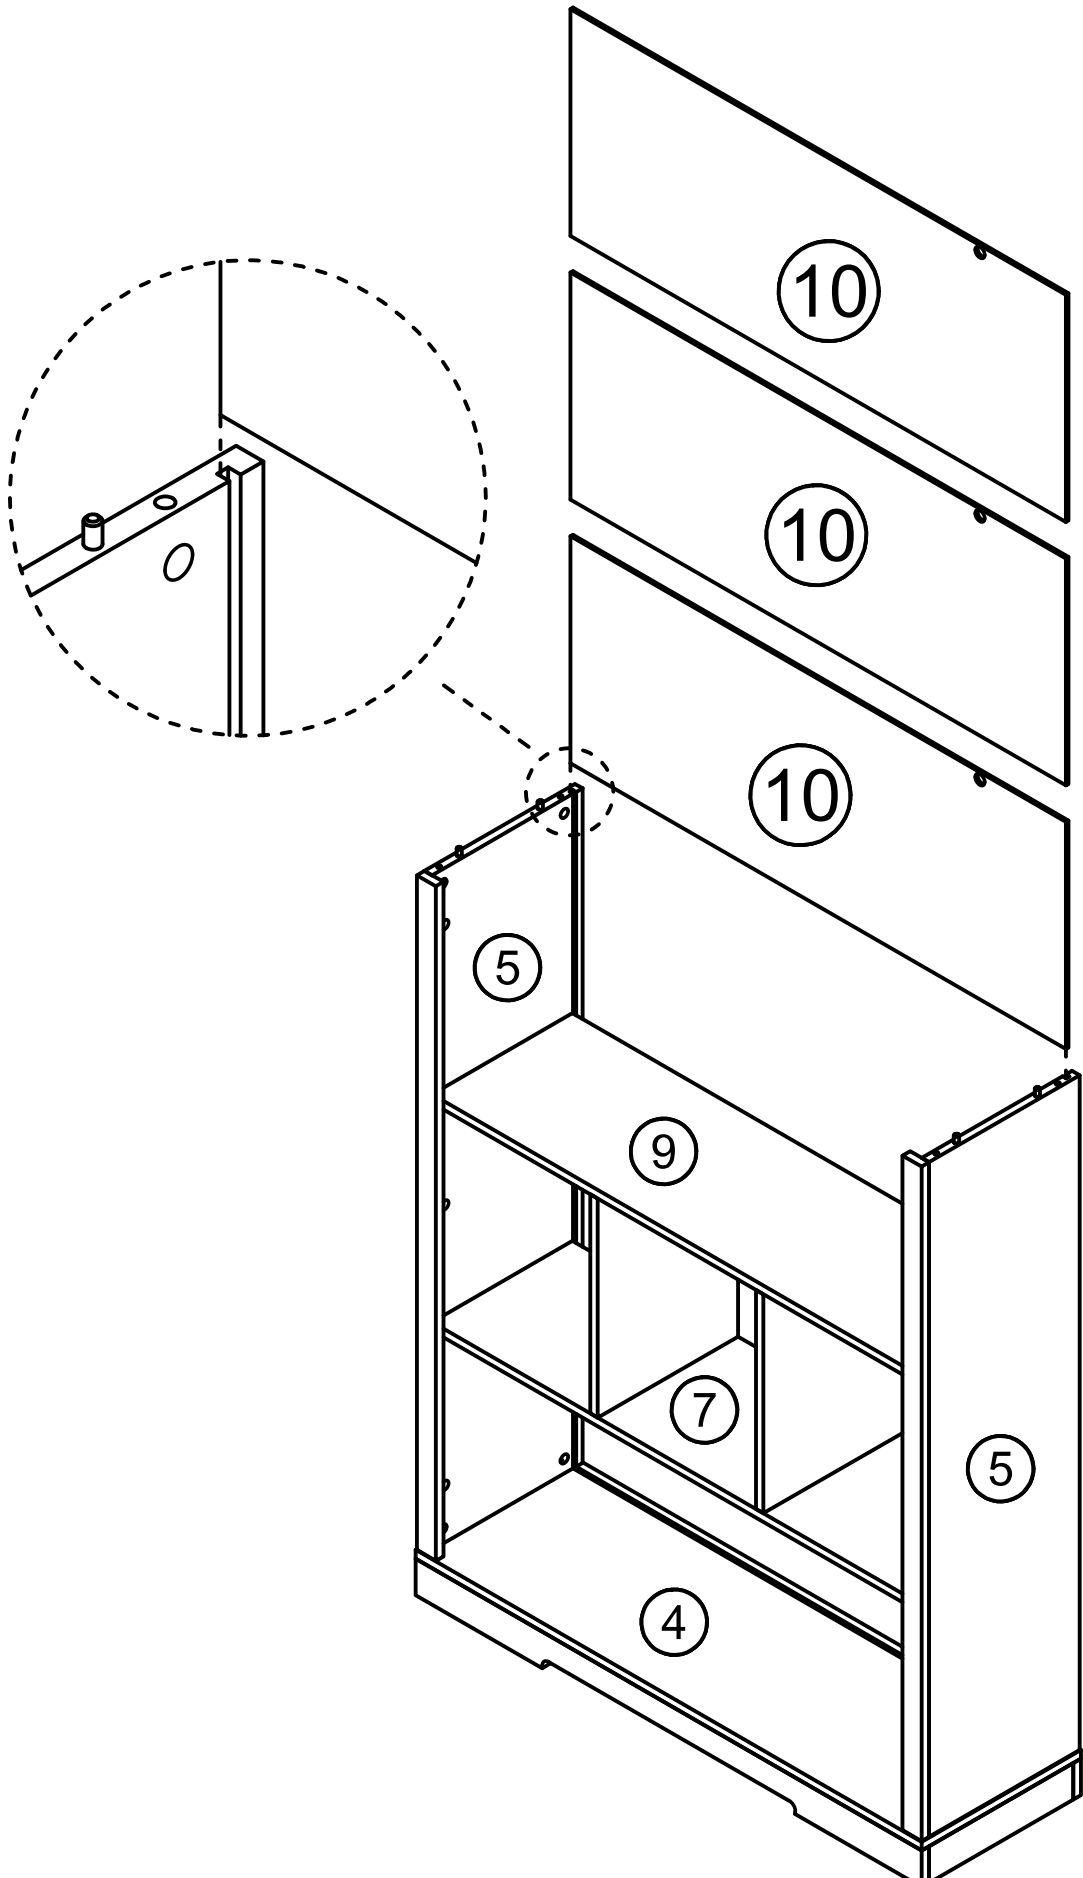


Step 17

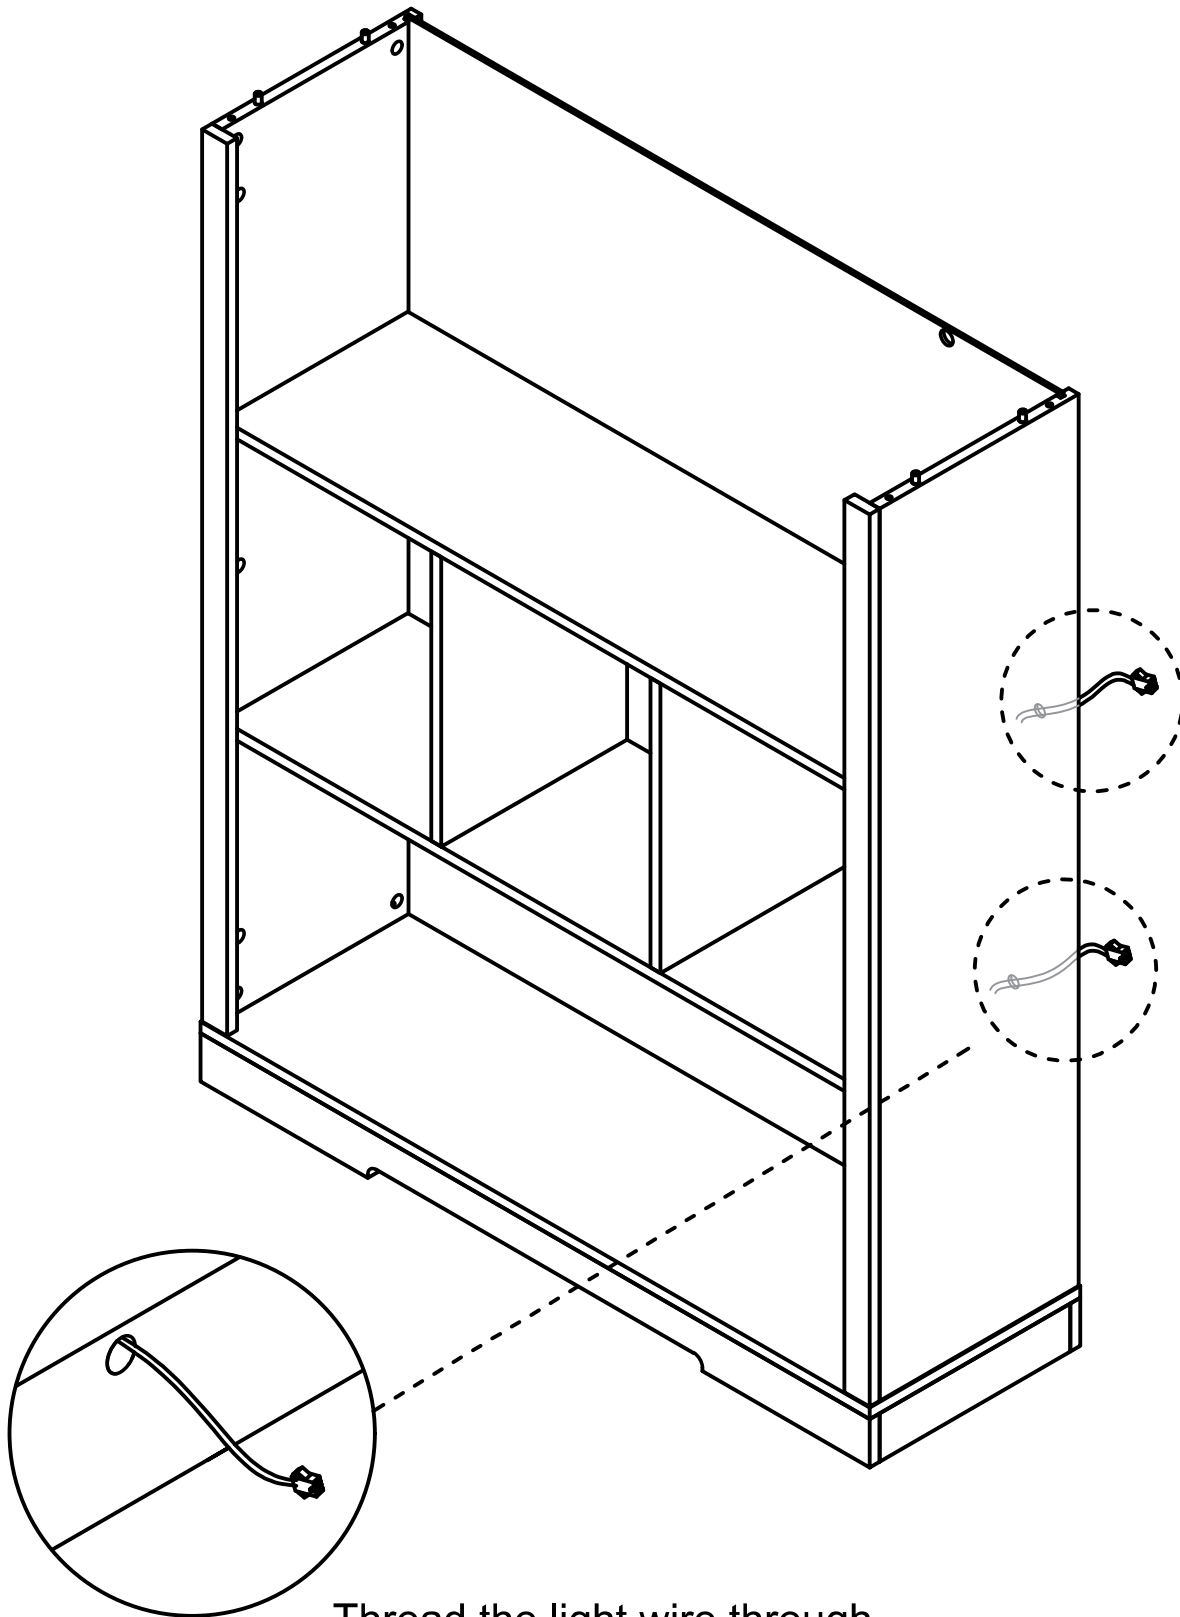



Thread the light wire through  
the back panel hole

Step 18

(A)




x 4

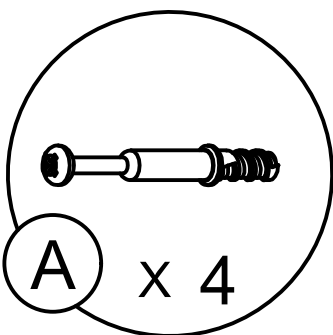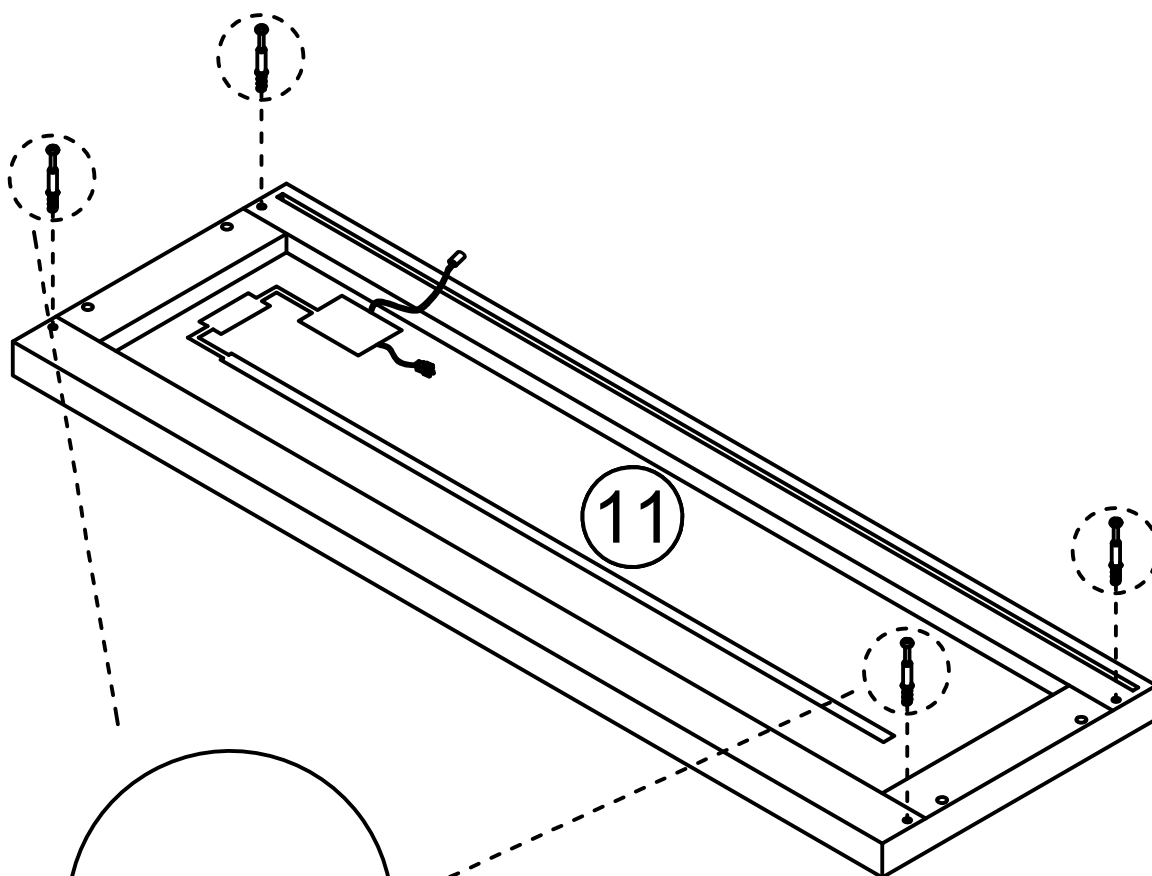





A x 4

Step 19

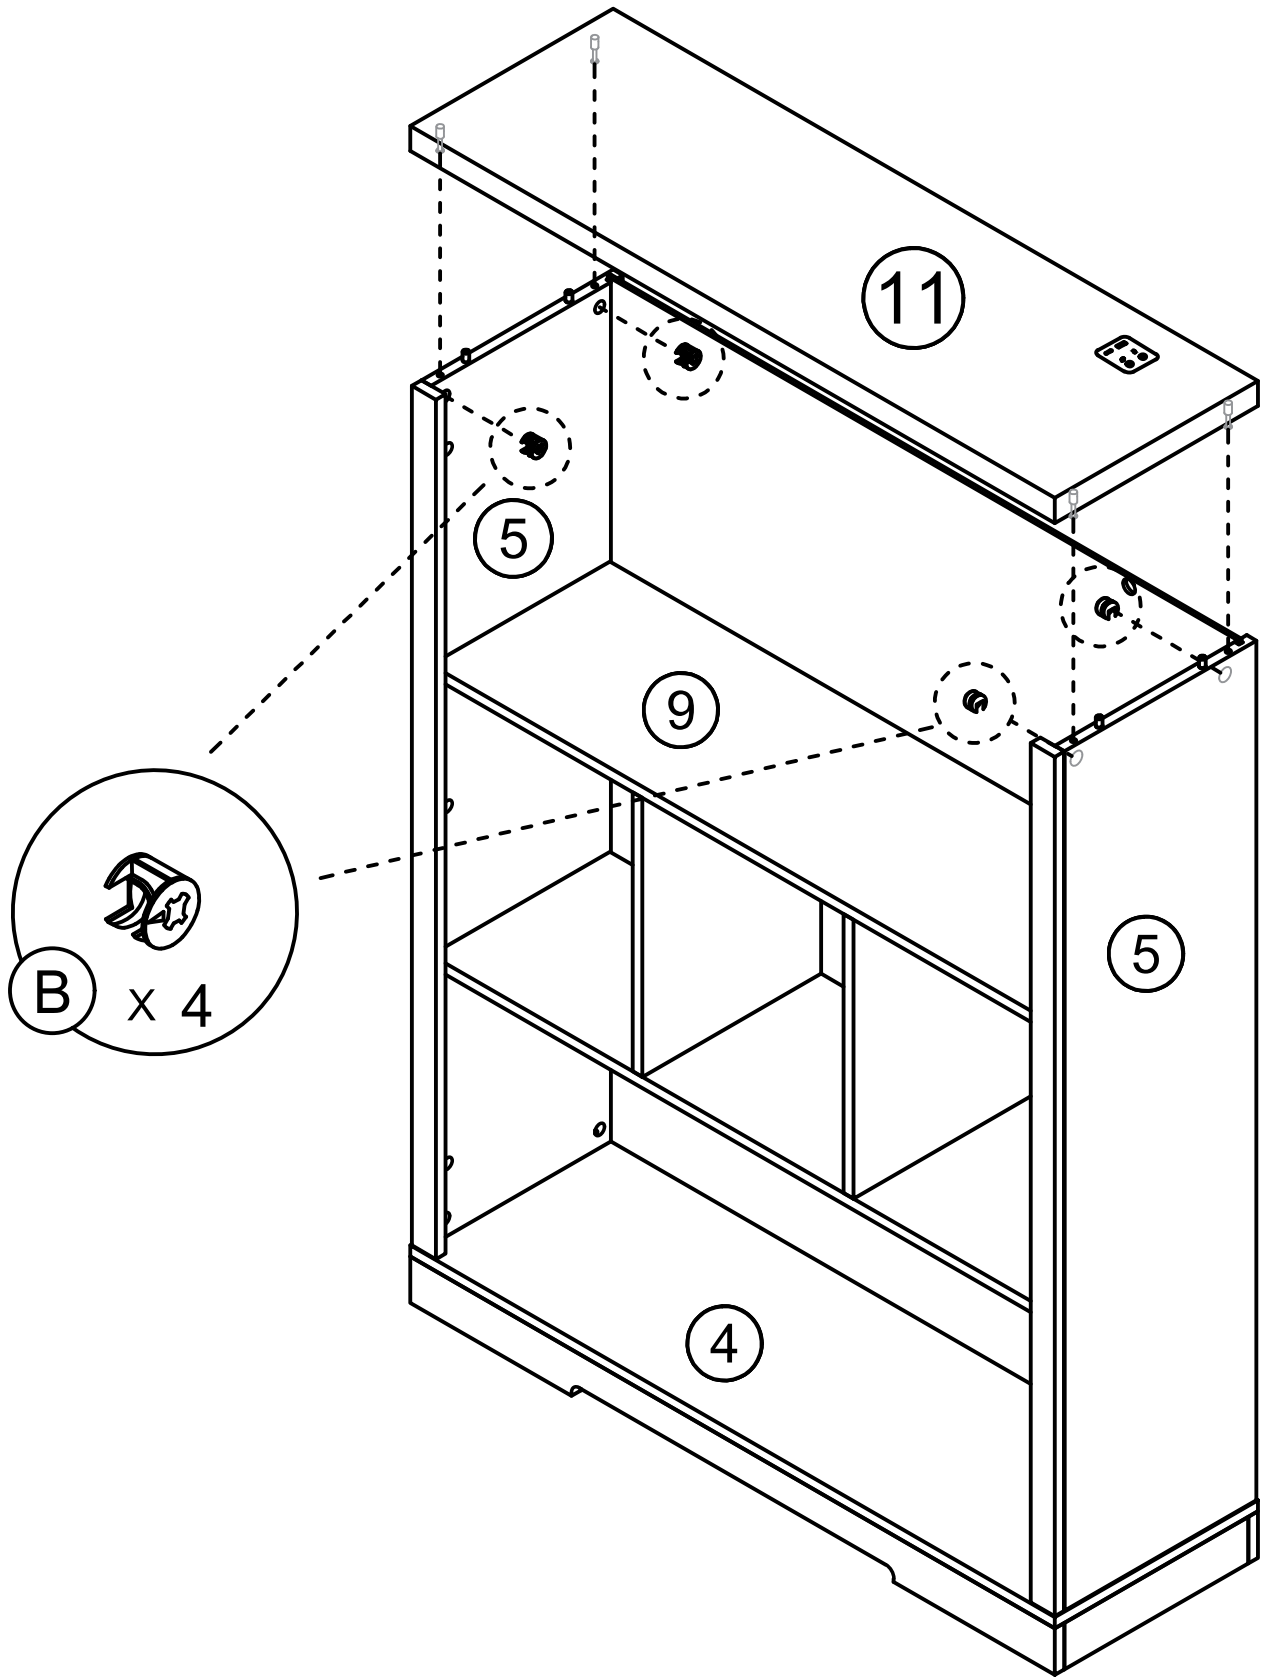

(B)  x 4



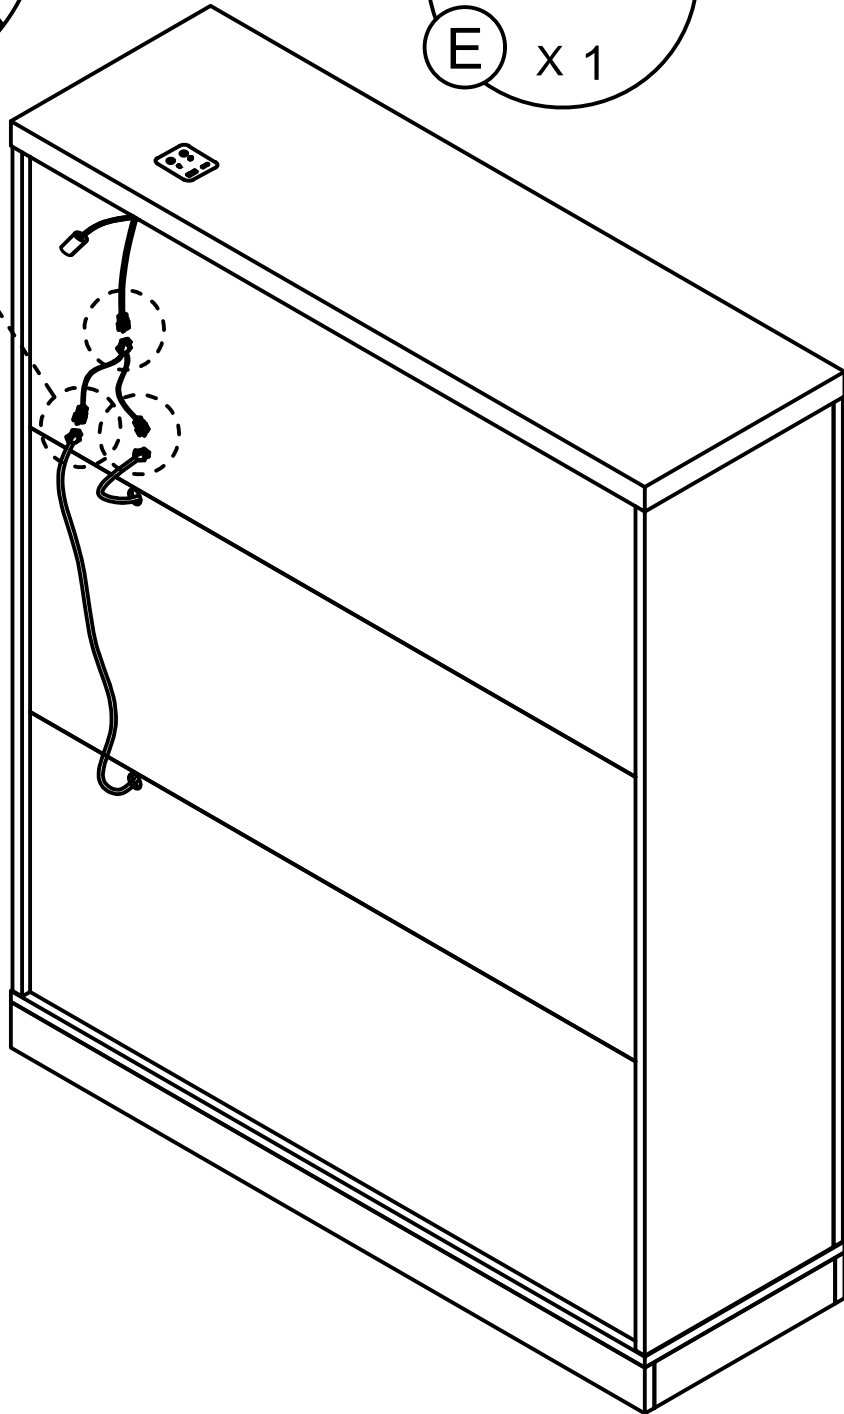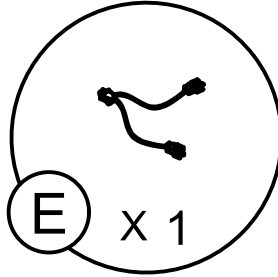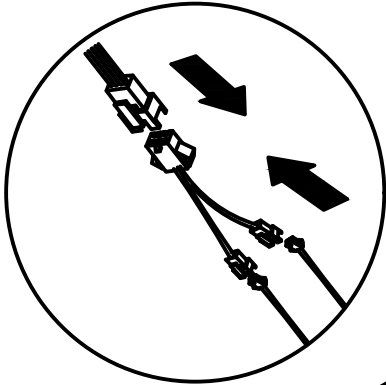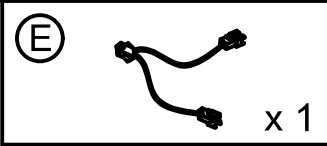


Step 20



Step 21

(F)  x10  x10

(F)  x10  x10


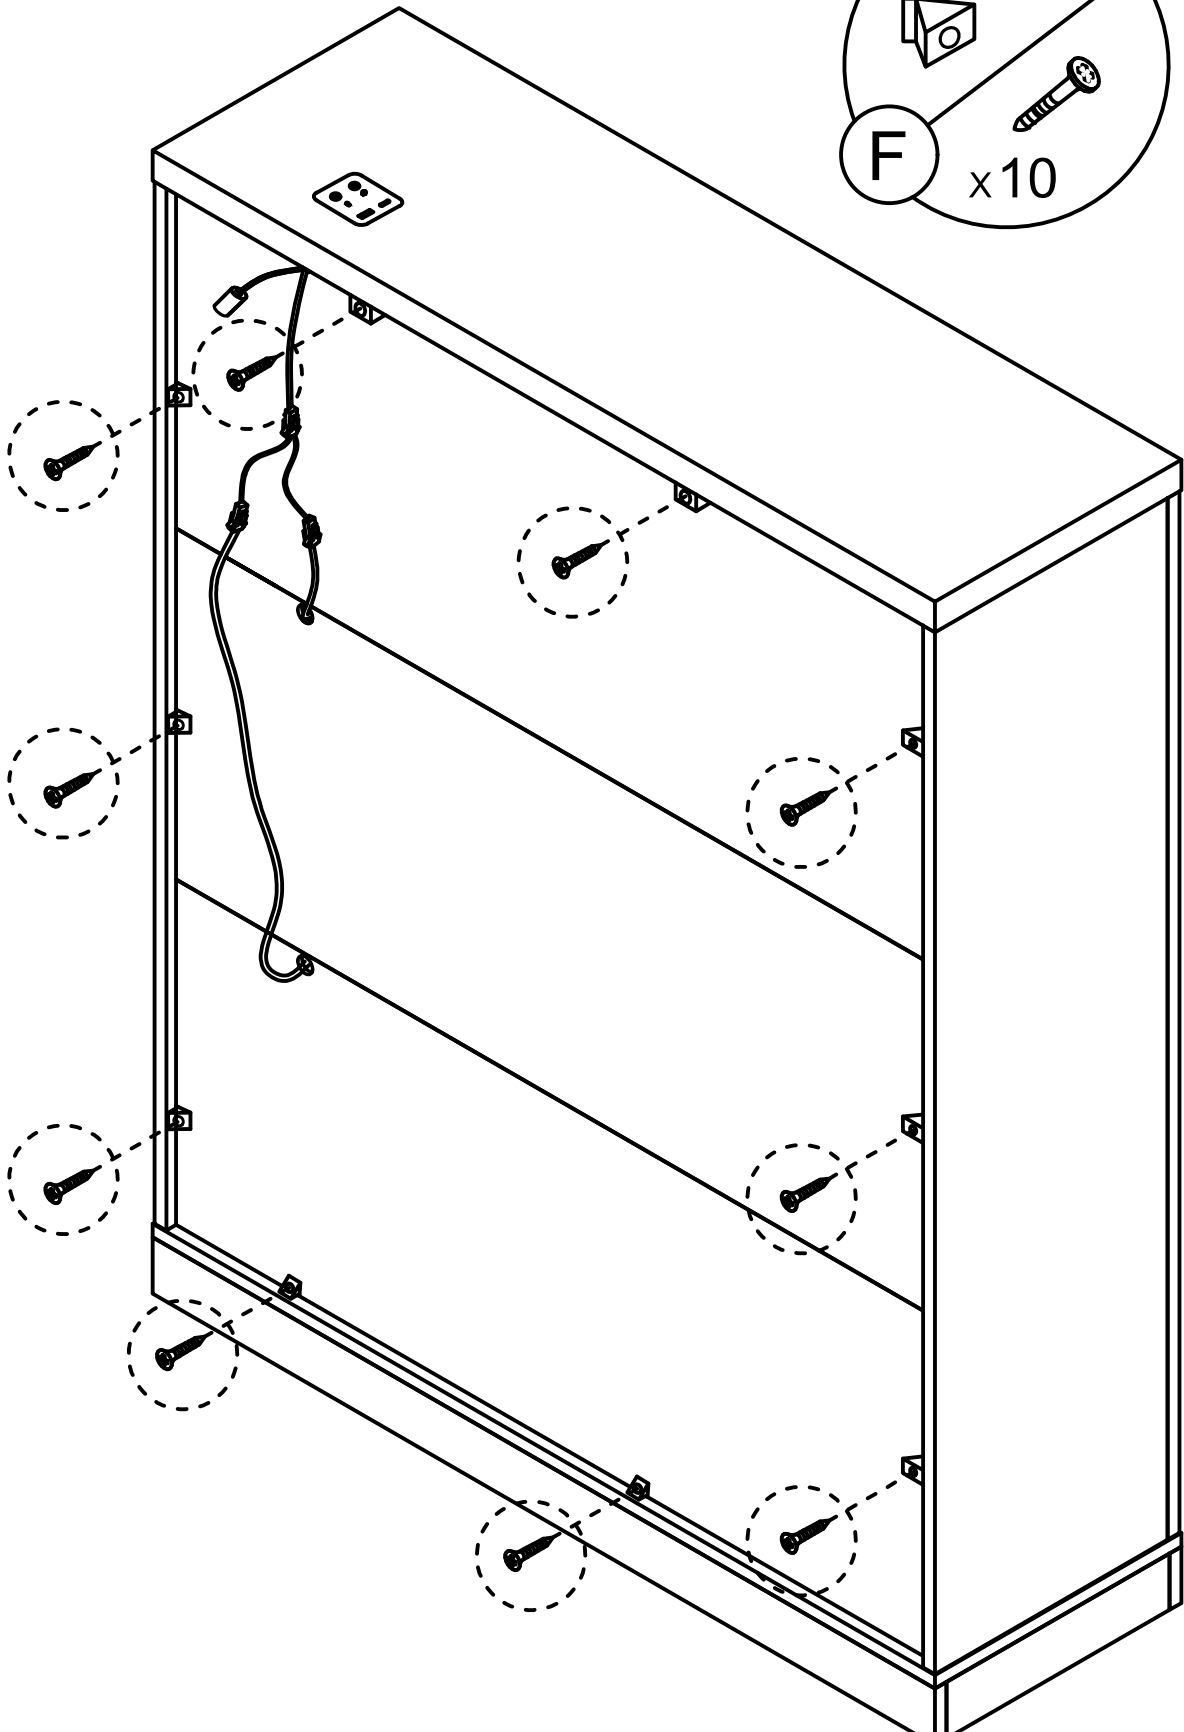


# Step 22

Ⓒ



x 4

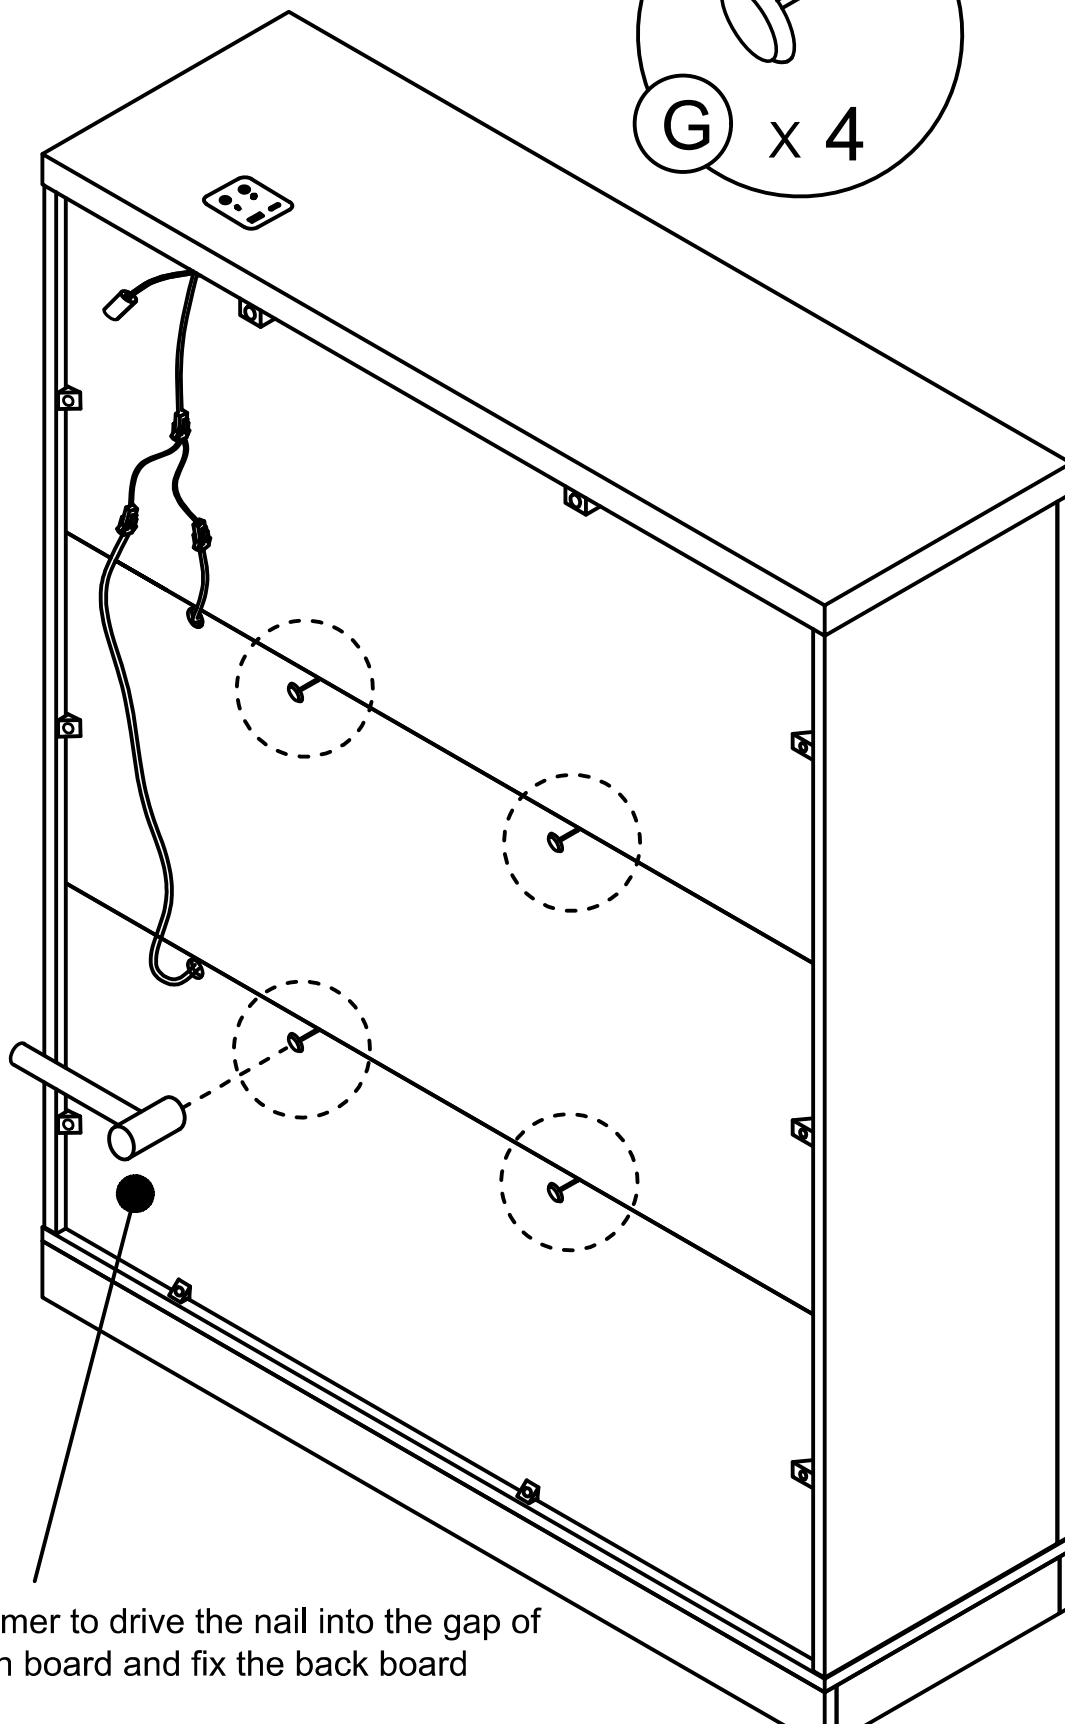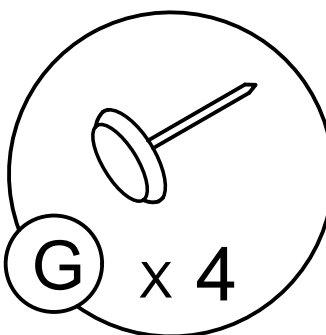

Use a hammer to drive the nail into the gap of the wooden board and fix the back board

# Step 23

**Wall Mount**

+


Drill the hole after measuring and marking position.

Wall




Wall


Wall

- (H) L-shaped bracket x2
- Round washer x4
- 3.5x14mm screw x2
- 4x45mm screw x2

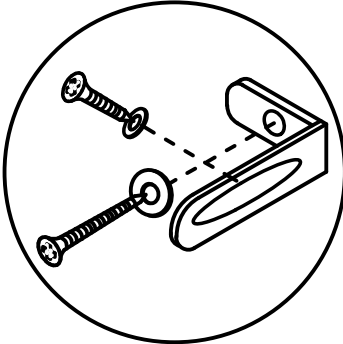

Install as required

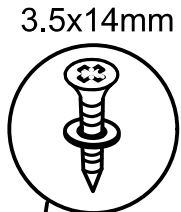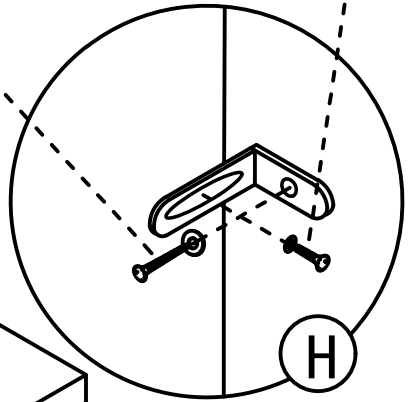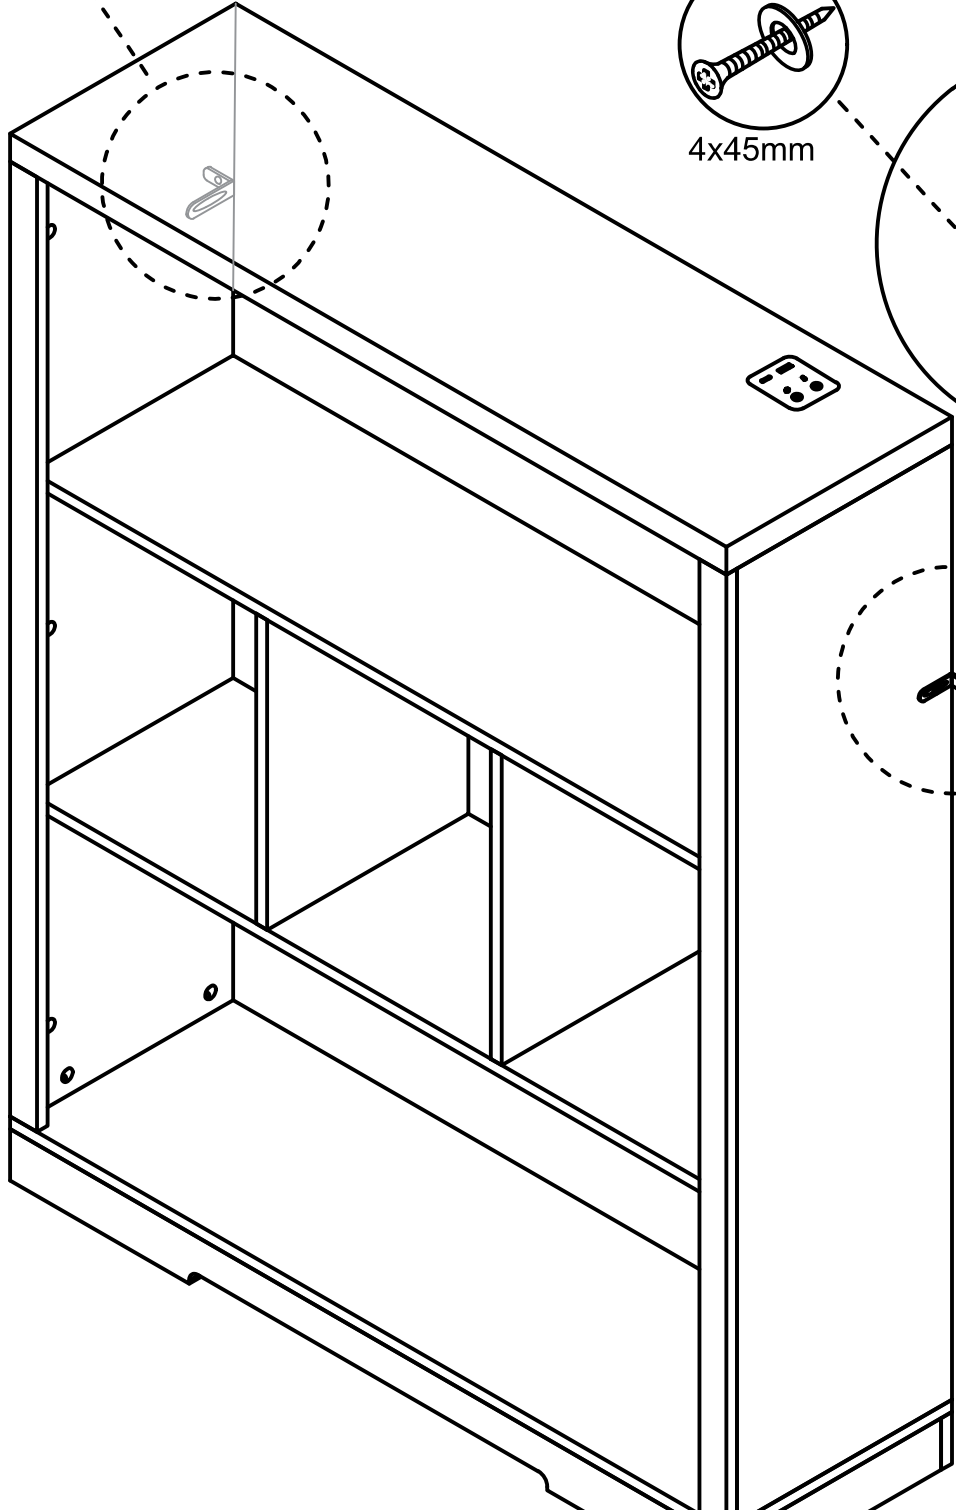



Step 24

wall

