

# Installation mode



### Installation Diagram

### The package contains:

		A: Fixed chassis×2
		B: Big screw×2
		C: Middle screw×2
		D: Expansion casing×2
		E: Small screw×2
		F: Nail-free glue×1
		G: Hexagon wrench×1
		H: Nail free sticker×4



Note: Accessories of different models may vary, some models have hooks and cross bars

## Punching installation



### STEP1.

1. Select appropriate mounting holes on the mounting wall according to the product model and mark them;
2. Drill two holes respectively in marked positions with a hammer drill (depending on the length of the expansion tube of the fittings or the tapping screw, or it can be customized), and insert the expansion casing [D] flush with the wall;

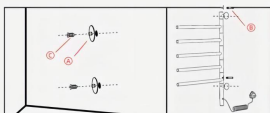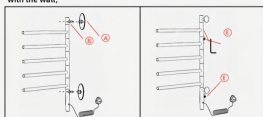


### STEP2.

1. Pass the middle screw [C] through the fixed chassis [A] and align it with the position of the expansion tube. After it is flush with the wall, screw the self-tapping screw into the expansion tube for fixing;
2. Aim the big screw [B] into the hole on the back of the towel rack body and tighten it;

### STEP3.

1. Insert the main body of the towel rack with the big screw [B] into the fixed chassis [A] on the wall;
2. Fix the main body of the towel rack to the fixed chassis [A] with small screws [E], adjust the distance between the towel rack and the wall, and tighten the base with hexagon wrench [G]. Do not install the product upside down.

## No punching installation

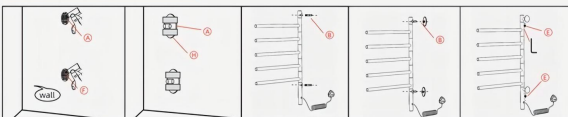

### STEP1.

1. Select appropriate mounting holes on the mounting wall according to the product model and mark them;
2. Clean the wall surface, coat the back of the fixed chassis [A] with nail-free glue [F], and stick it to the marked position on the wall surface;
3. Attach the nail-free sticker [H] to the fixed chassis [A] as shown in the picture, then wait 72 hours, and tear off the nail-free sticker [H];

### STEP2.

1. Aim the big screw [B] into the hole on the back of the towel rack body and tighten it;
2. Insert the main body of the towel rack with the big screw [B] into the fixed chassis [A] on the wall;
3. Fix the main body of the towel rack to the fixed chassis [A] with small screws [E], adjust the distance between the towel rack and the wall, and tighten the base with hexagon wrench [G]. Do not install the product upside down.

### Walls suitable for no punching installation method



Solid wood walls



Smooth ceramic tile



Concave and convex ceramic tile



Mosaic



Glass mirror



Smooth marble

### Walls not suitable for no punching installation method



Painted walls



Concrete walls



Paper walls



Painted walls



Plaster walls



Concave and convex walls