



ASSEMBLY INSTRUCTION

SKU CODE : N709P434054B/N709P434054D

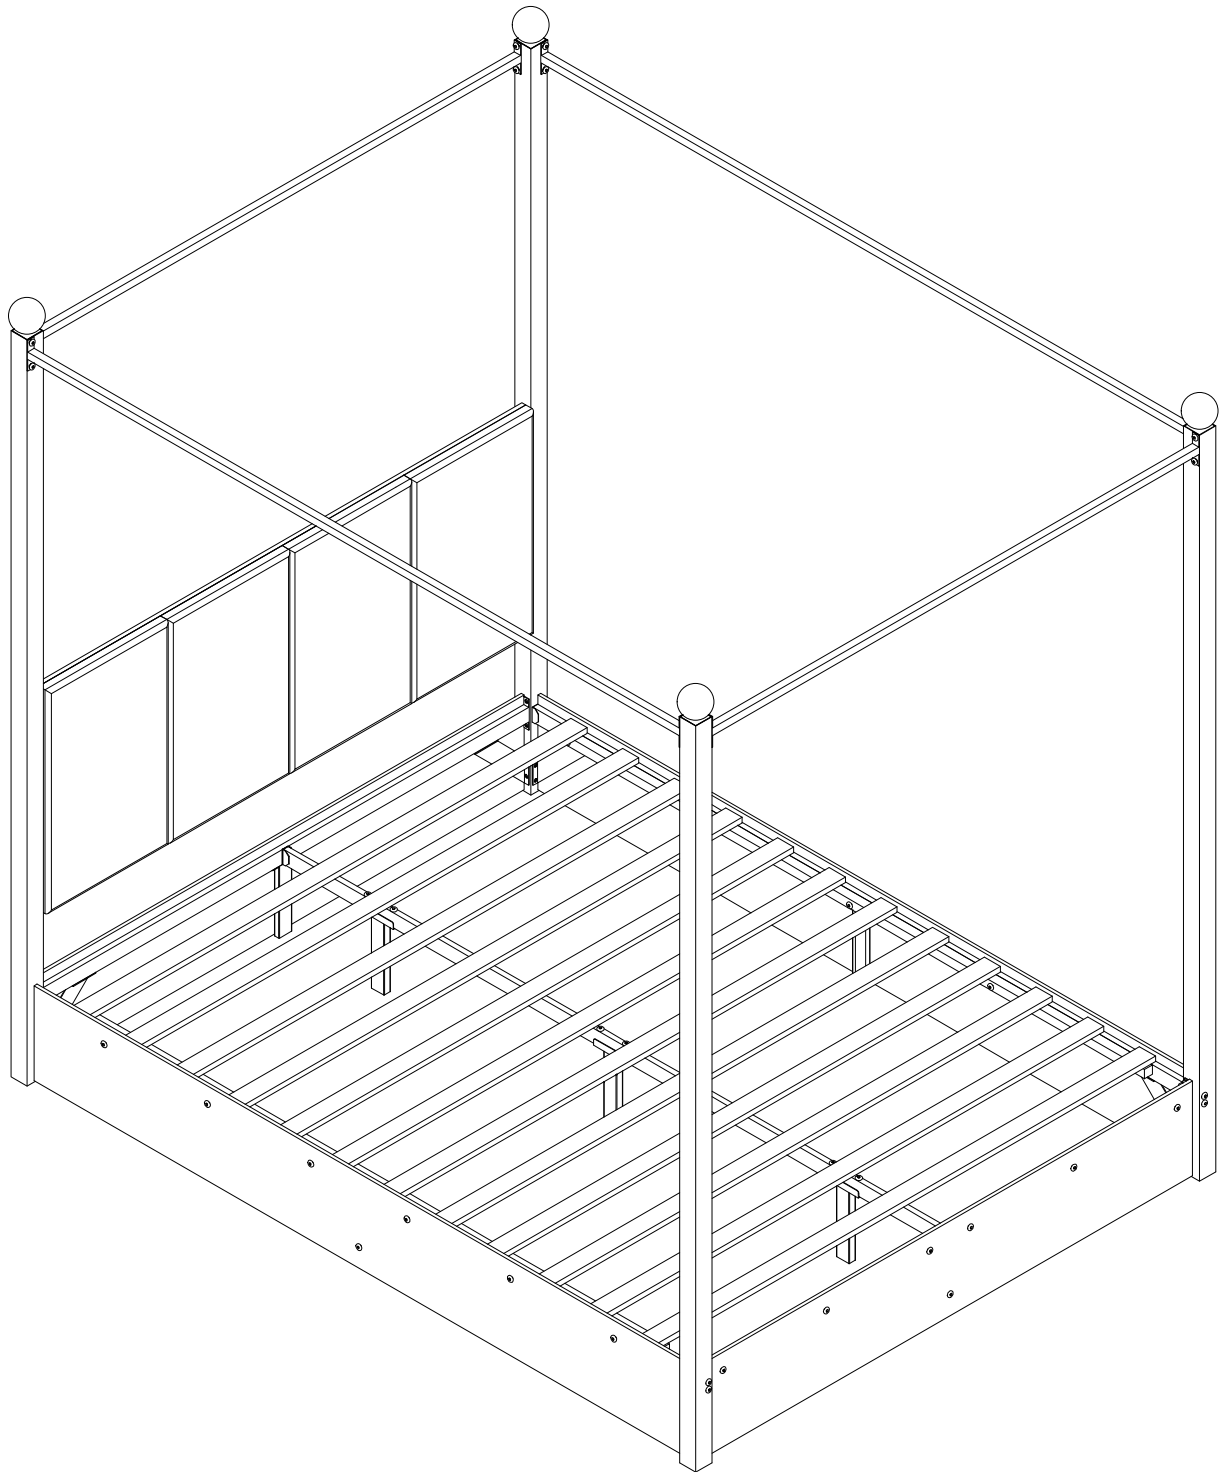


ASSEMBLY INSTRUCTION

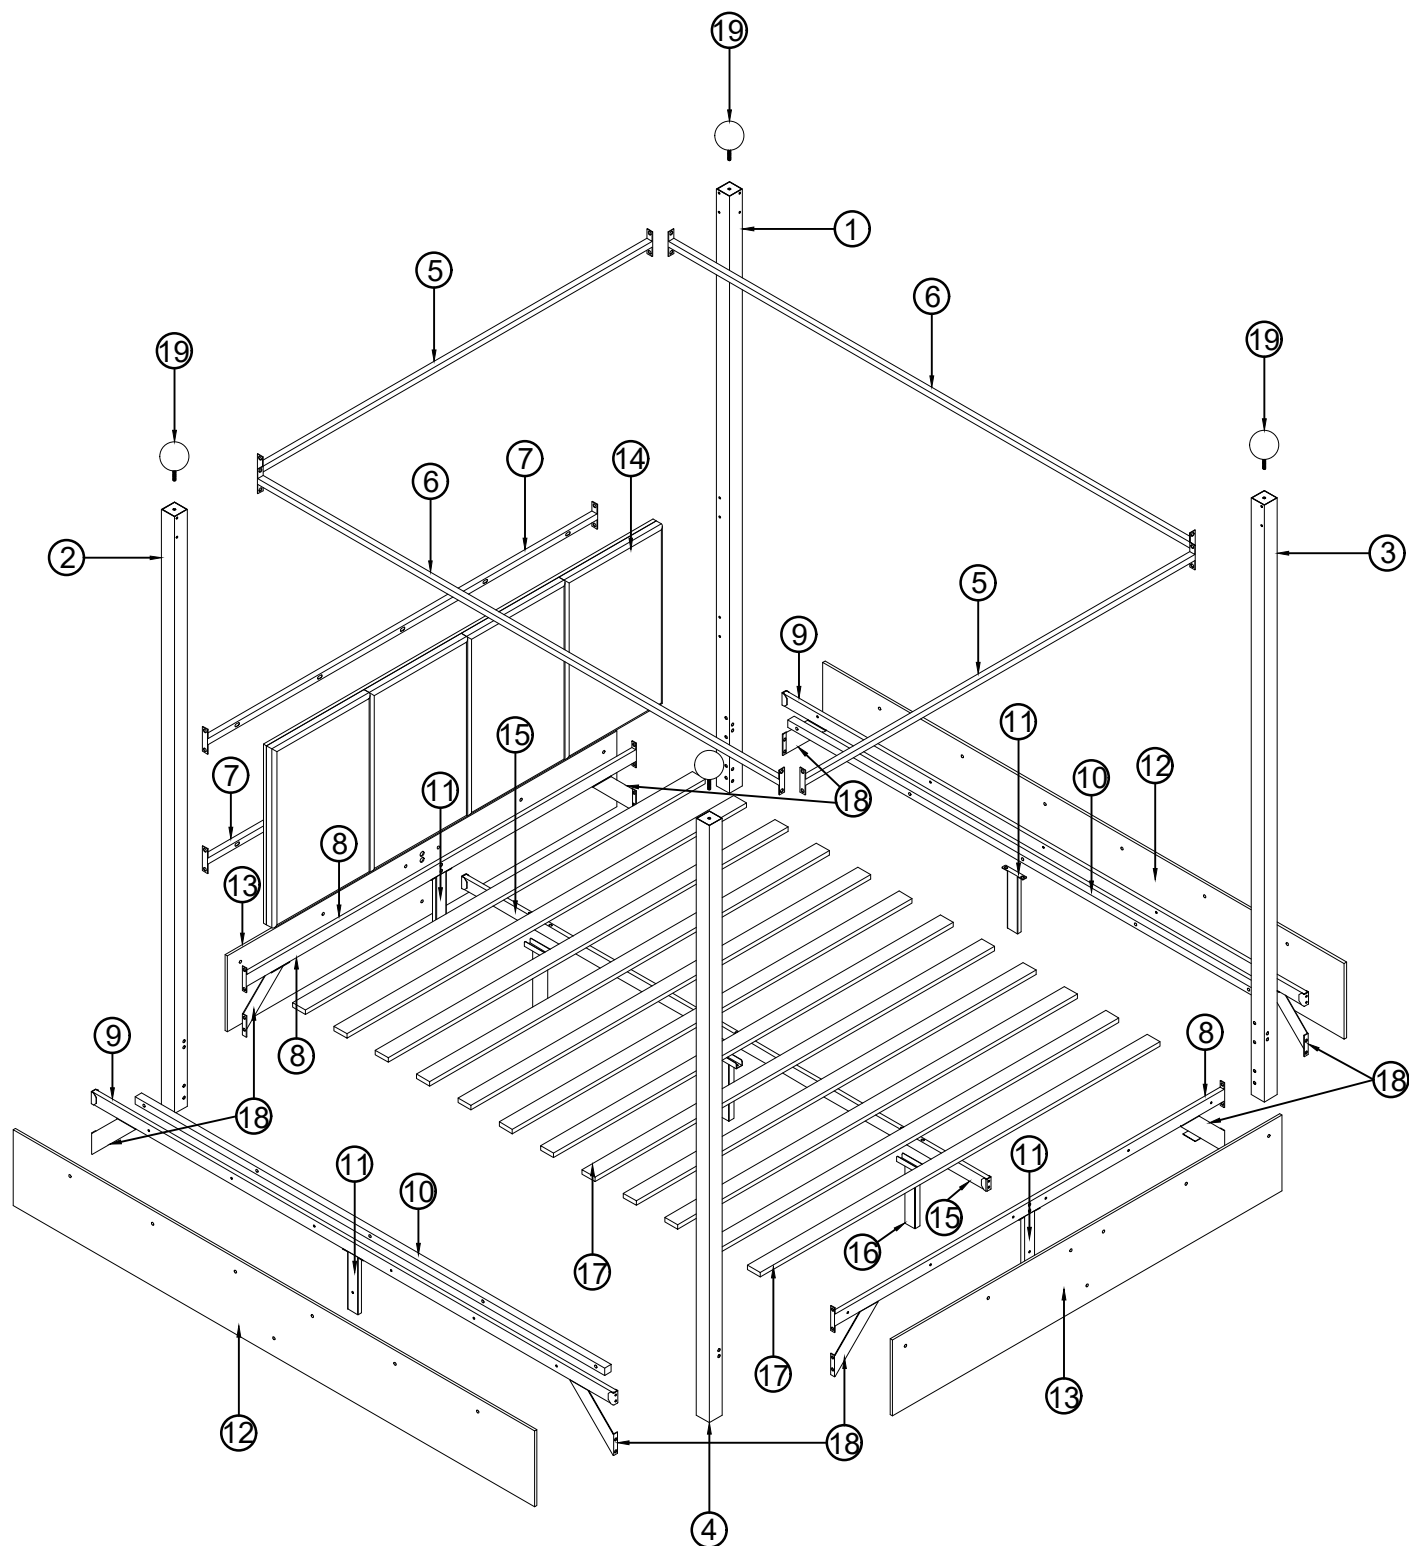














Before installation, insert the screws into the holes and tighten them, but do not tighten them to 100%, 70% to 80% is sufficient. Finally, after all screws are installed, tighten all screws to 100%. If you encounter these issues, such as if the holes cannot be aligned or some parts cannot be installed, please check if the screws are used correctly and adjust the tightness of the screws.

IMPORTANT! KEEP FOR FUTURE REFERENCE READ CAREFULLY


- To be assembled by two adults. Assembly must be checked by an adult before use
- WARNING! Keep all screws, small parts and plastic bags out of the reach of children
- Properly identify all parts before assembling
- Never use your item if any of its parts are broken or missing
- Should any problems arise, please contact our After Sales Service
- Manufacturer's instructions shall be followed at all times
- Care: Clean with a soft, dry cloth, In case of larger stains, carefully rub with a slightly damp, non-abrasive sponge
- Avoid the risk of fire by not placing furniture near sources of ignition or hot items
- Do not jump on the bed

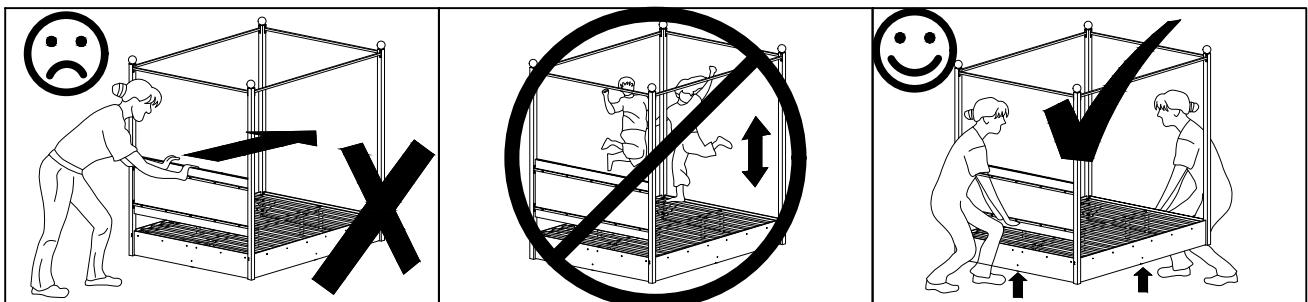

Part List

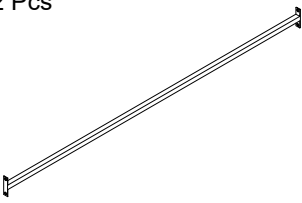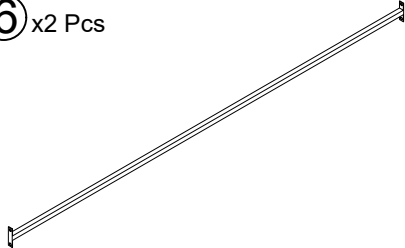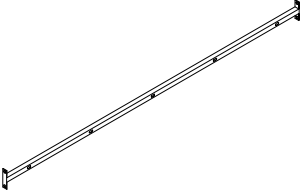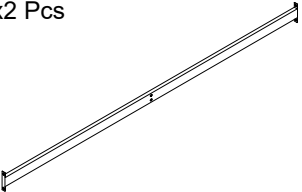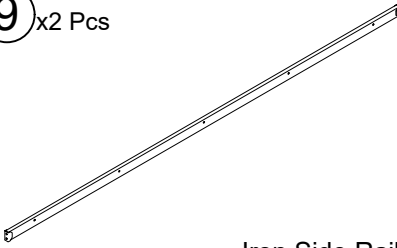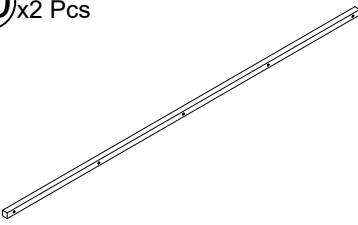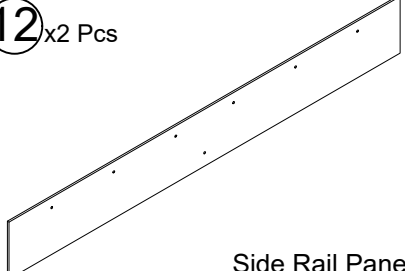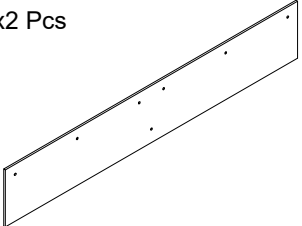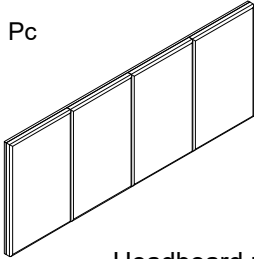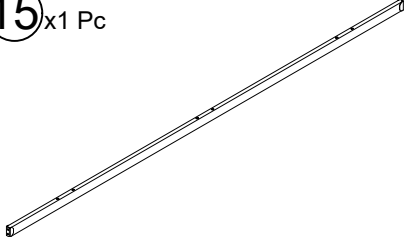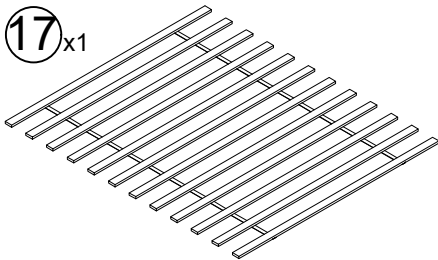① x1 Pc  Right Headboard Leg	② x1 Pc  Left Headboard Leg	③ x1 Pc  Right Footboard Leg
④ x1 Pc  Left Footboard Leg	⑤ x2 Pcs  Above Rails HB & FB	⑥ x2 Pcs  Above Side Rails
⑦ x2 Pcs  Center Headboard Rails	⑧ x2 Pcs  Below HB & FB	⑨ x2 Pcs  Iron Side Rails
⑩ x2 Pcs  Suport Side Rails	⑪ x4 Pcs  Support Legs	⑫ x2 Pcs  Side Rail Panels
⑬ x2 Pcs  HB & FB Panels	⑭ x1 Pc  Headboard mattress	⑮ x1 Pc  Center Support
⑯ x3 Pcs  Center Support Legs	⑰ x1  Bed Slats	⑱ x8 Pcs  Bass Iron

Part List

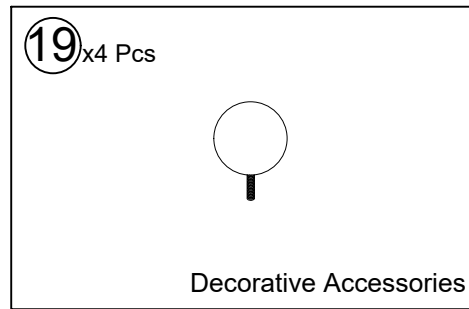


Hardware List

A x4 Pcs Bolts (M8x35mm)	B x6 Pcs Bolts (M8x50mm)	C x8 Pcs Bolts (M8x65mm)	D x72 Pcs Bolts (M6x10mm)
E x28 Pcs Bolts (M6x15mm)	F x20 Pcs Bolts (M6x30mm)	G x4 Pcs Screws (M4x50mm)	H x2 Pcs Allen Key
I x24 Pcs Screws (M4x30mm)			

A x4 Pcs Bolts (M8x35mm)	B x6 Pcs Bolts (M8x50mm)	D x72 Pcs Bolts (M6x10mm)	E x28 Pcs Bolts (M6x15mm)
---	---	--	--


Please note that the shapes of screws A and B; D and E are similar. Please install according to the instructions and distinguish them!

Step 1

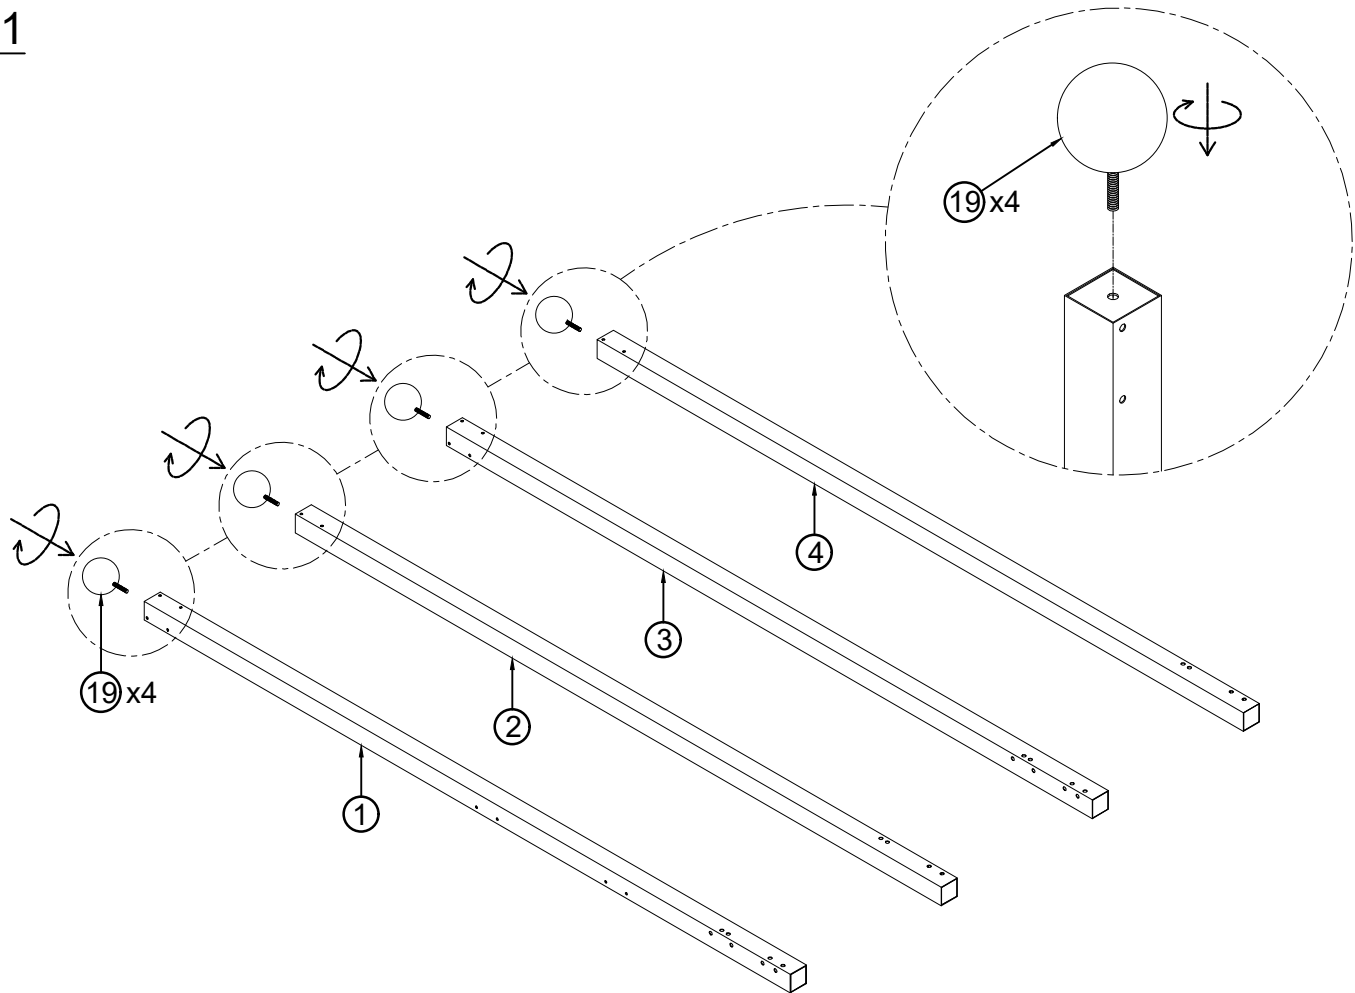

Step 2


ⓓ x6 Pcs  Bolts (M6x10mm)	ⓗ x2 Pcs  Allen Key
--	--

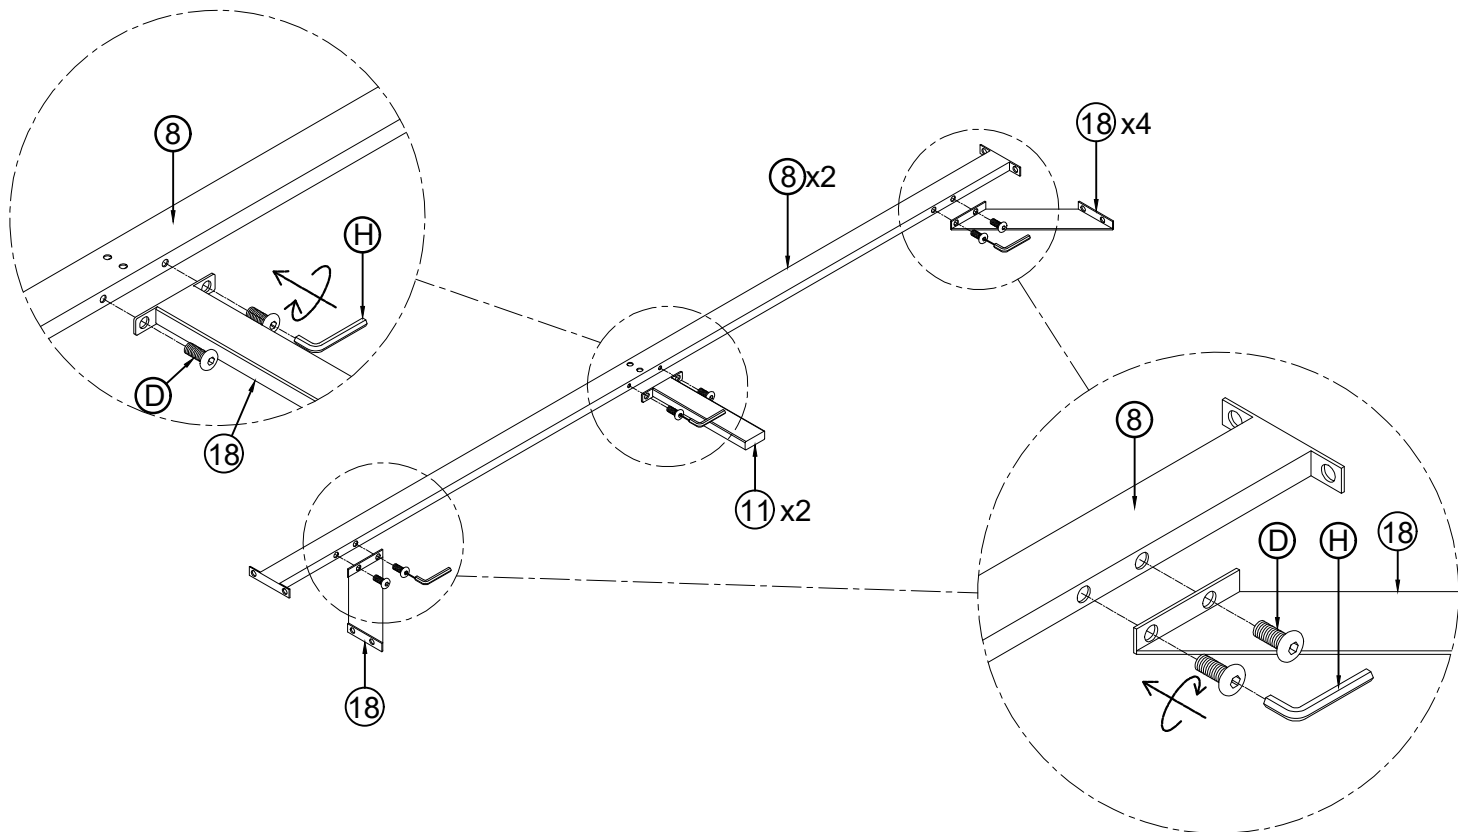

Step 3

D x12 Pcs Bolts (M6x10mm)	H x2 Pcs Allen Key
------------------------------	-----------------------

Step 3.1

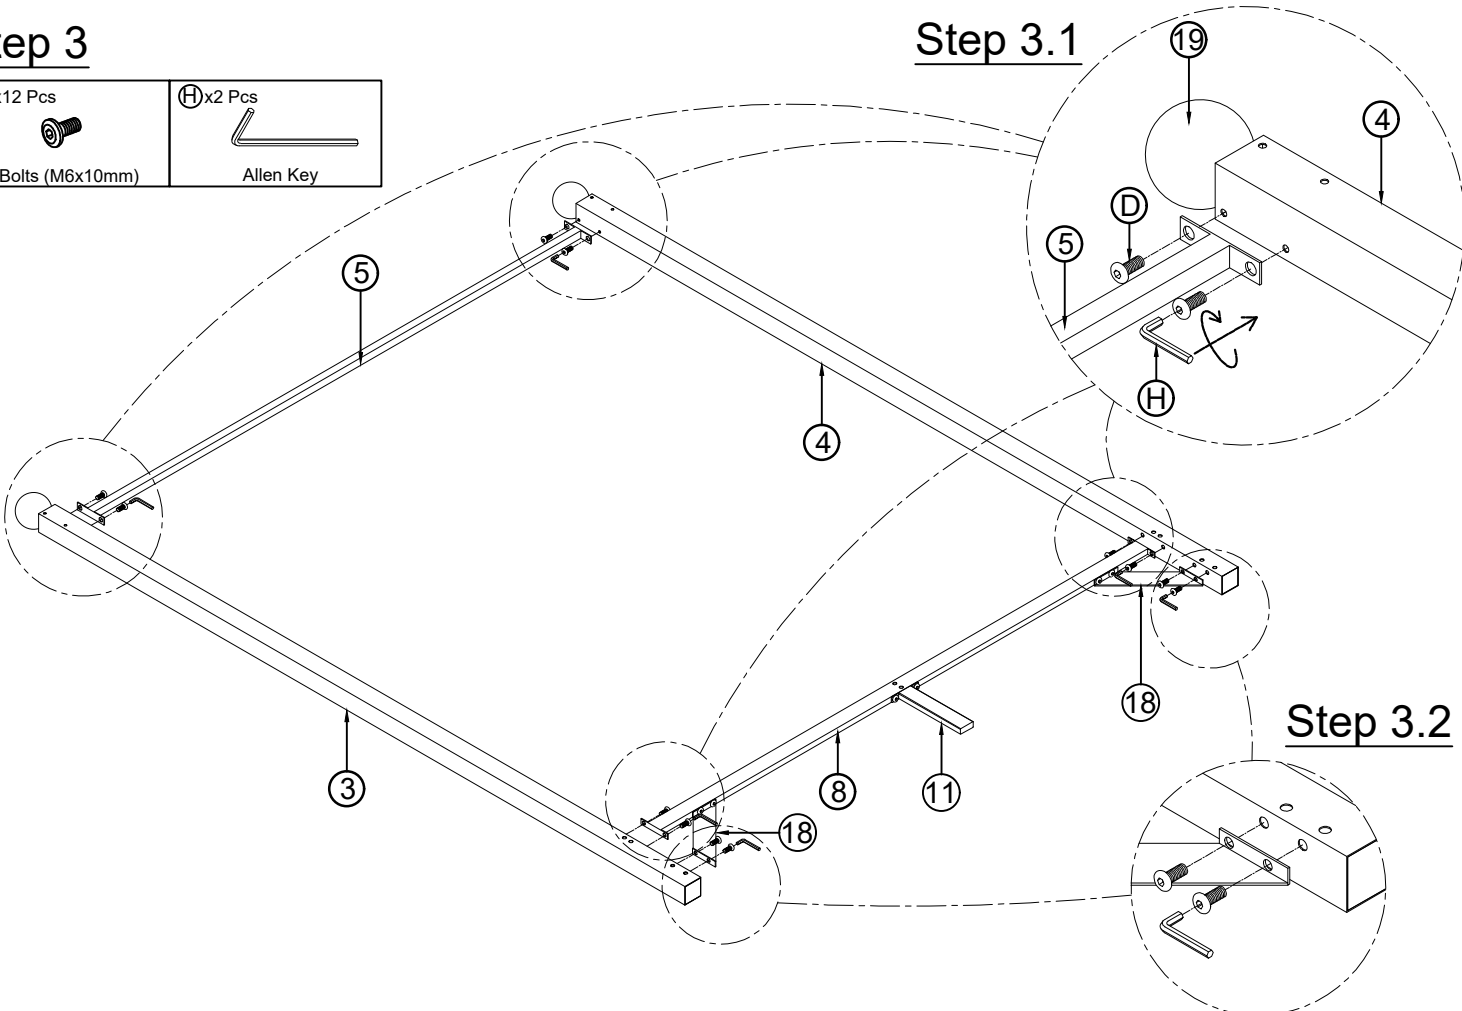


Step 3.2

Step 4

D x20 Pcs Bolts (M6x10mm)	H x2 Pcs Allen Key
------------------------------	-----------------------


Step 4.1

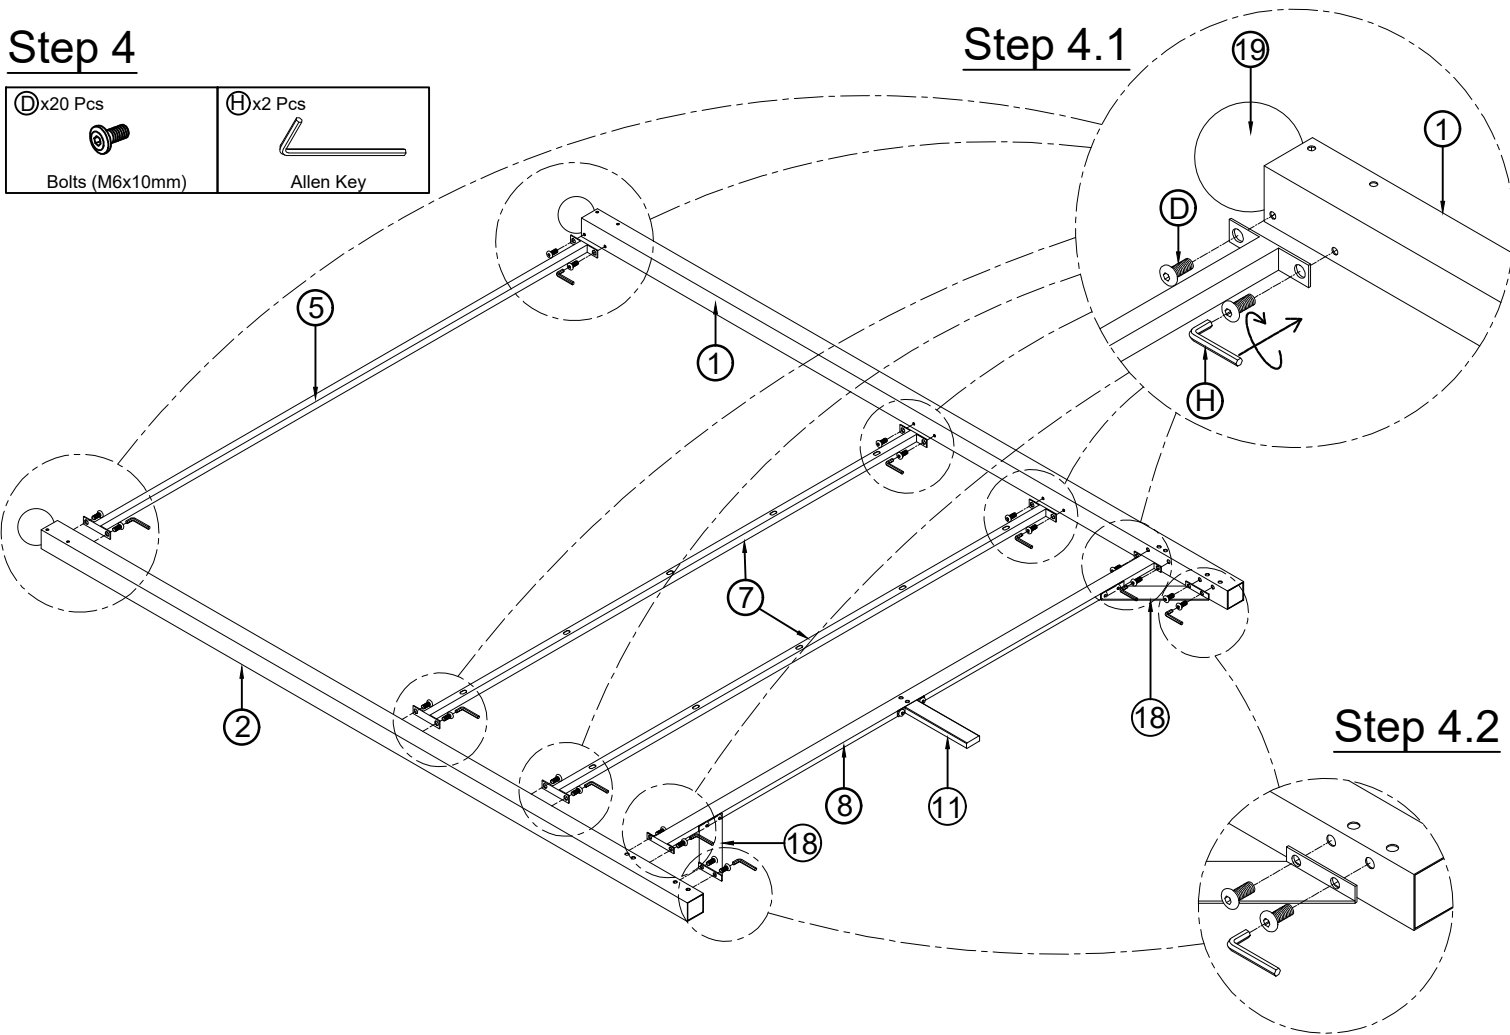

Step 4.2


Step 5

F x10 Pcs  Bolts (M6x30mm)	H x2 Pcs  Allen Key
---	--


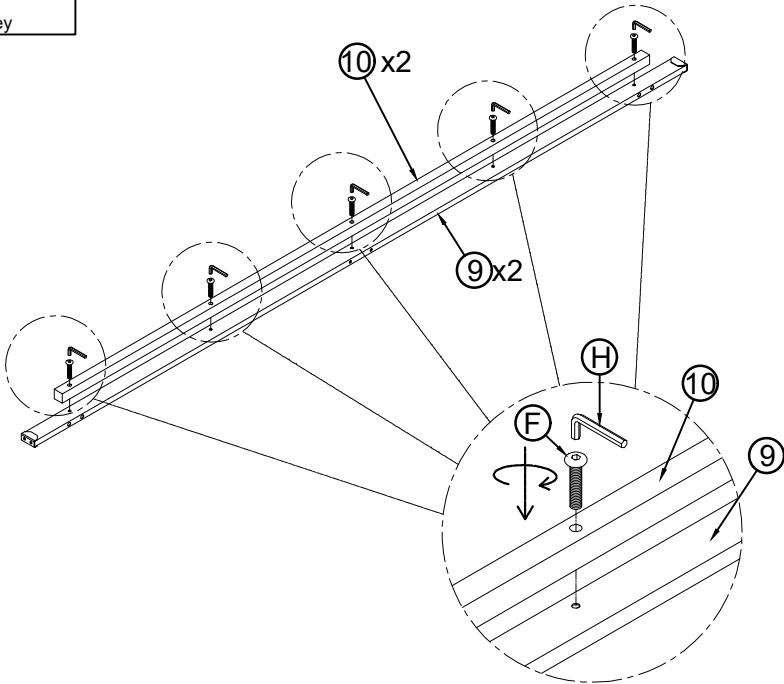



Step 6

D x6 Pcs  Bolts (M6x10mm)	H x2 Pcs  Allen Key
--	--

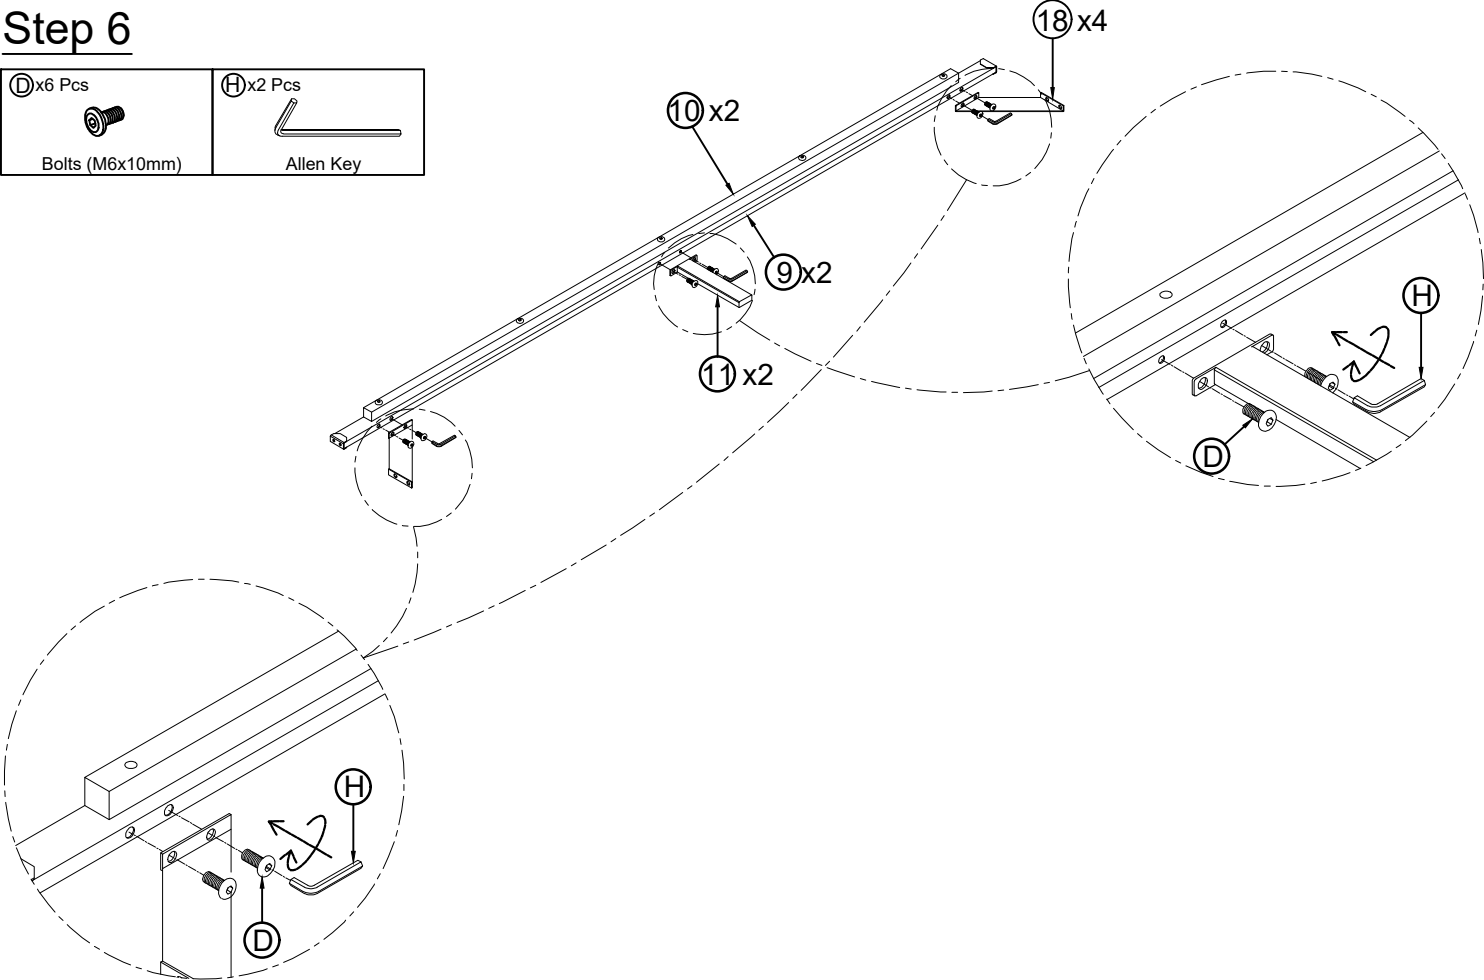



Step 7

C x8 Pcs  Bolts (M8x65mm)	D x12 Pcs  Bolts (M6x10mm)	H x2 Pcs  Allen Key
--	--	---

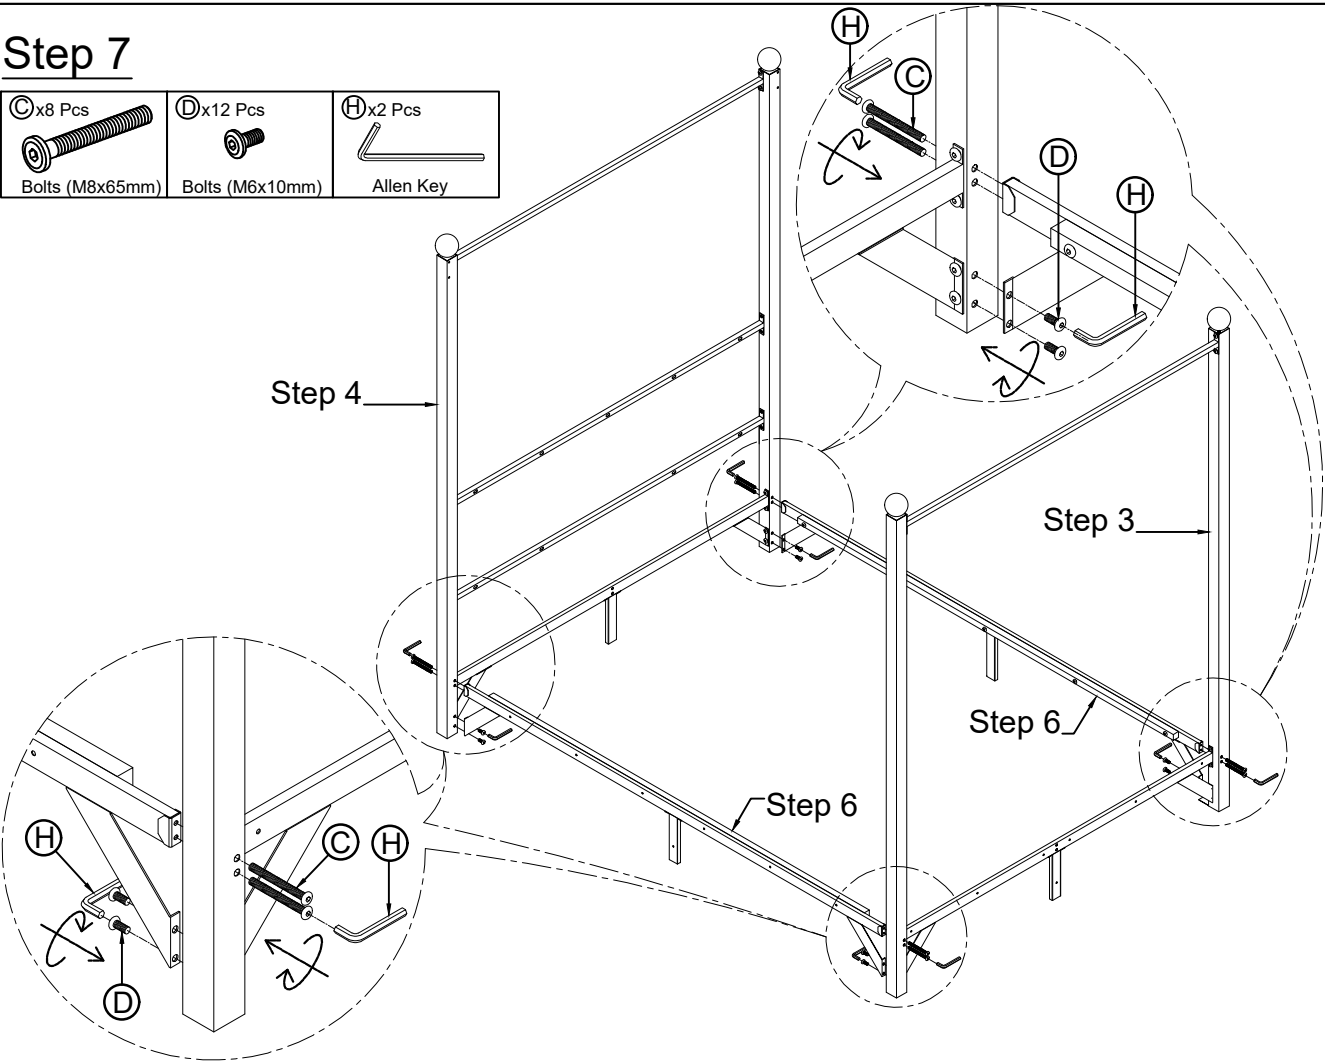


Step 8

B x6 Pcs  Bolts (M8x50mm)	H x2 Pcs  Allen Key
--	---

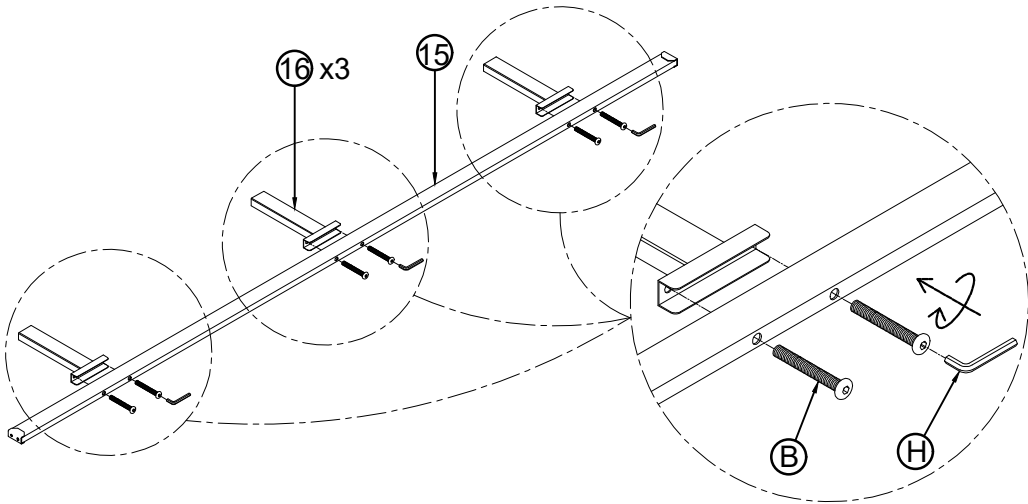


Step 9

A x4 Pcs  Bolts (M8x35mm)	H x2 Pcs  Allen Key
--	---

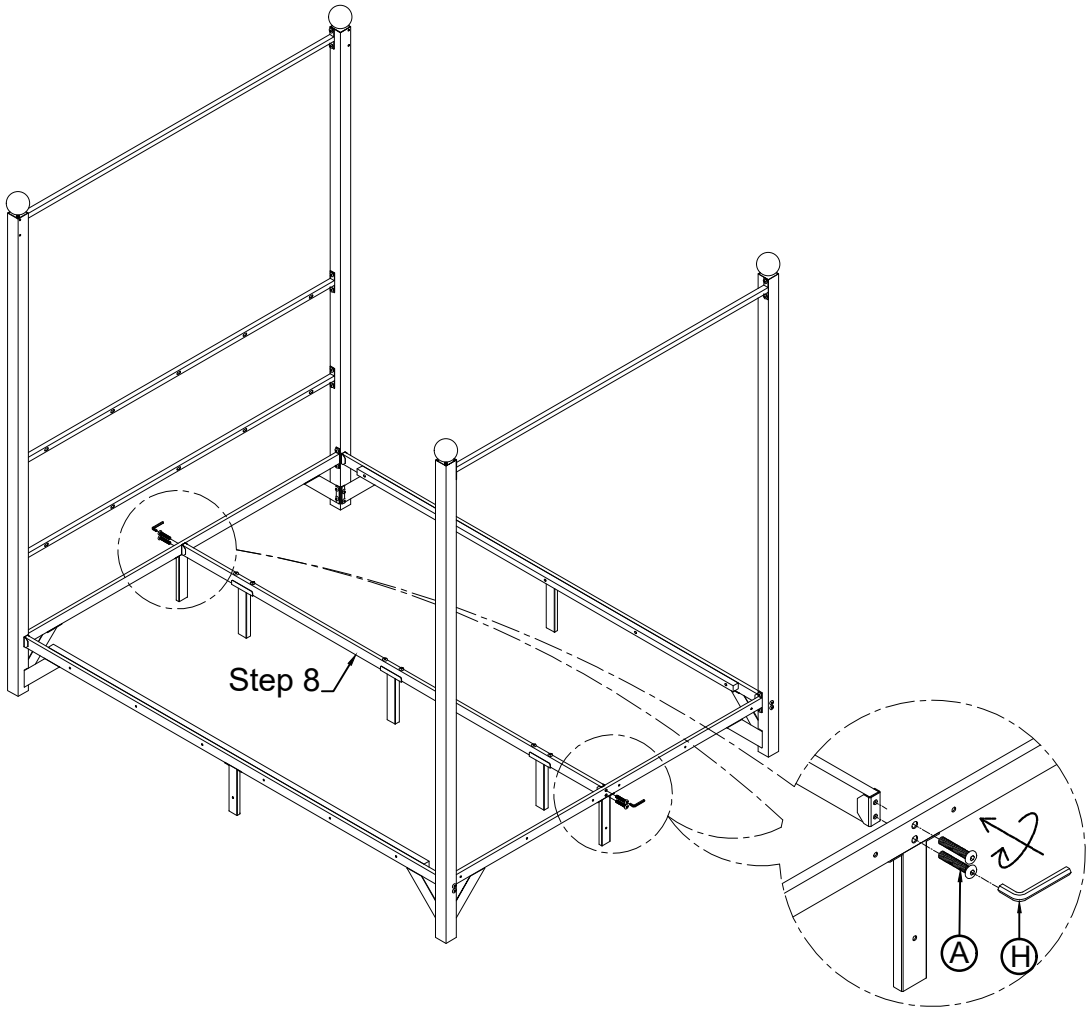

Step 10

D x8 Pcs  Bolts (M6x10mm)	H x2 Pcs  Allen Key
---	---

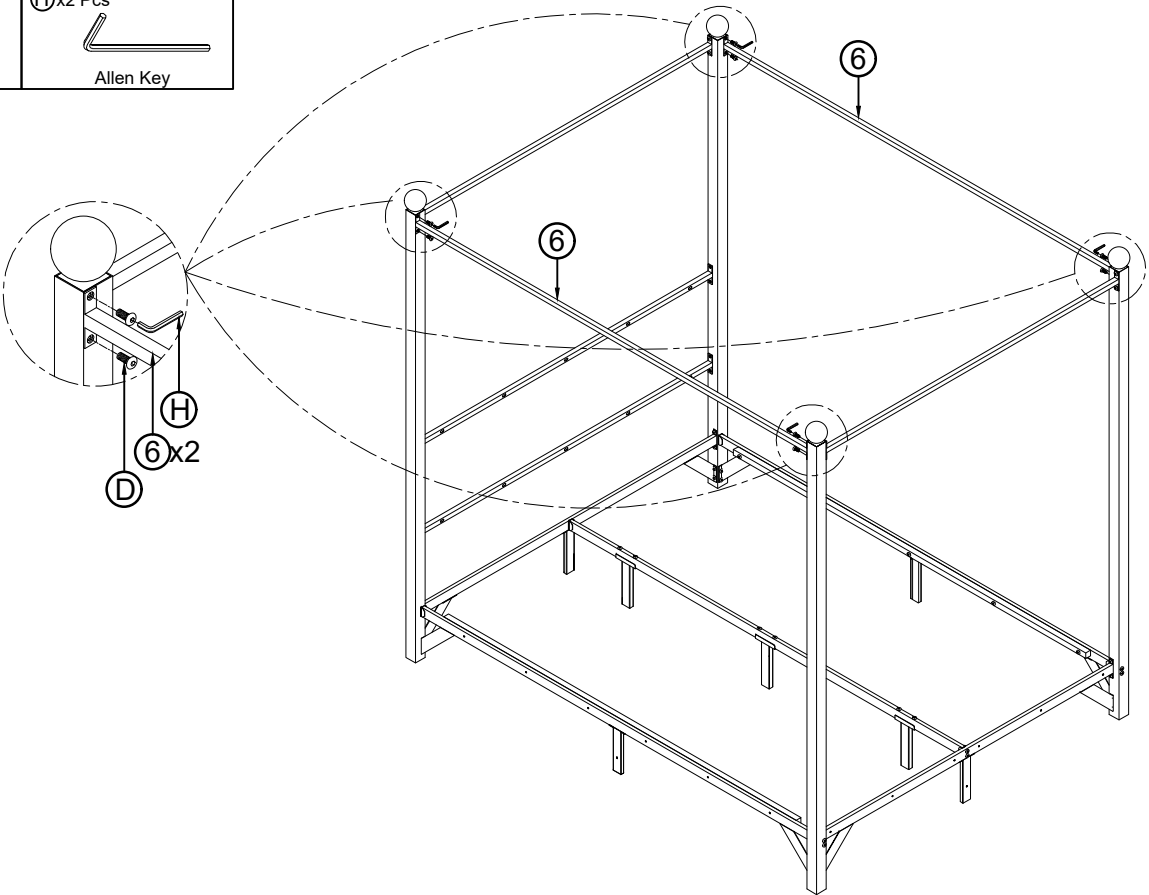

Step 11

F x10 Pcs





Bolts (M6x30mm)

H x2 Pcs



Allen Key

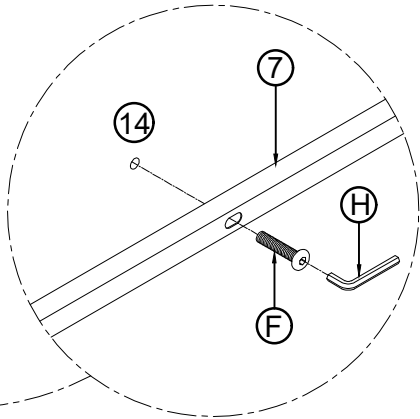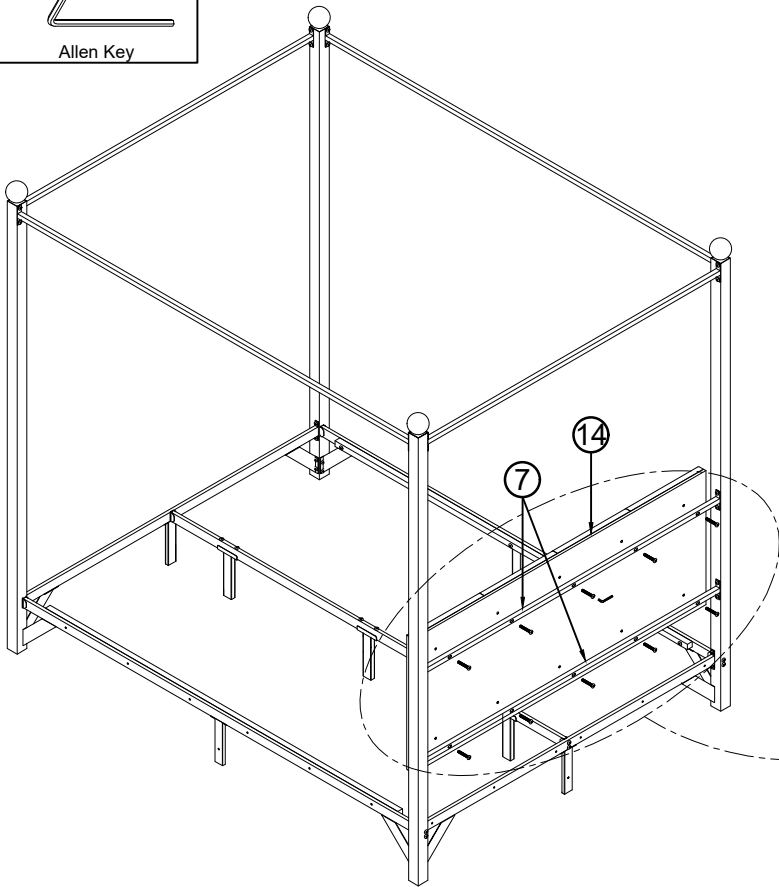

Step 12

E x14 Pcs





Bolts (M6x15mm)

H x2 Pcs



Allen Key

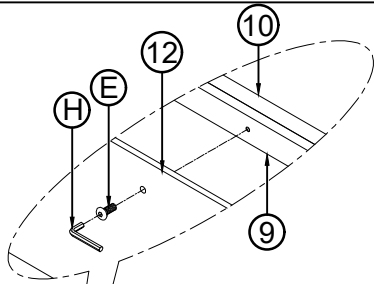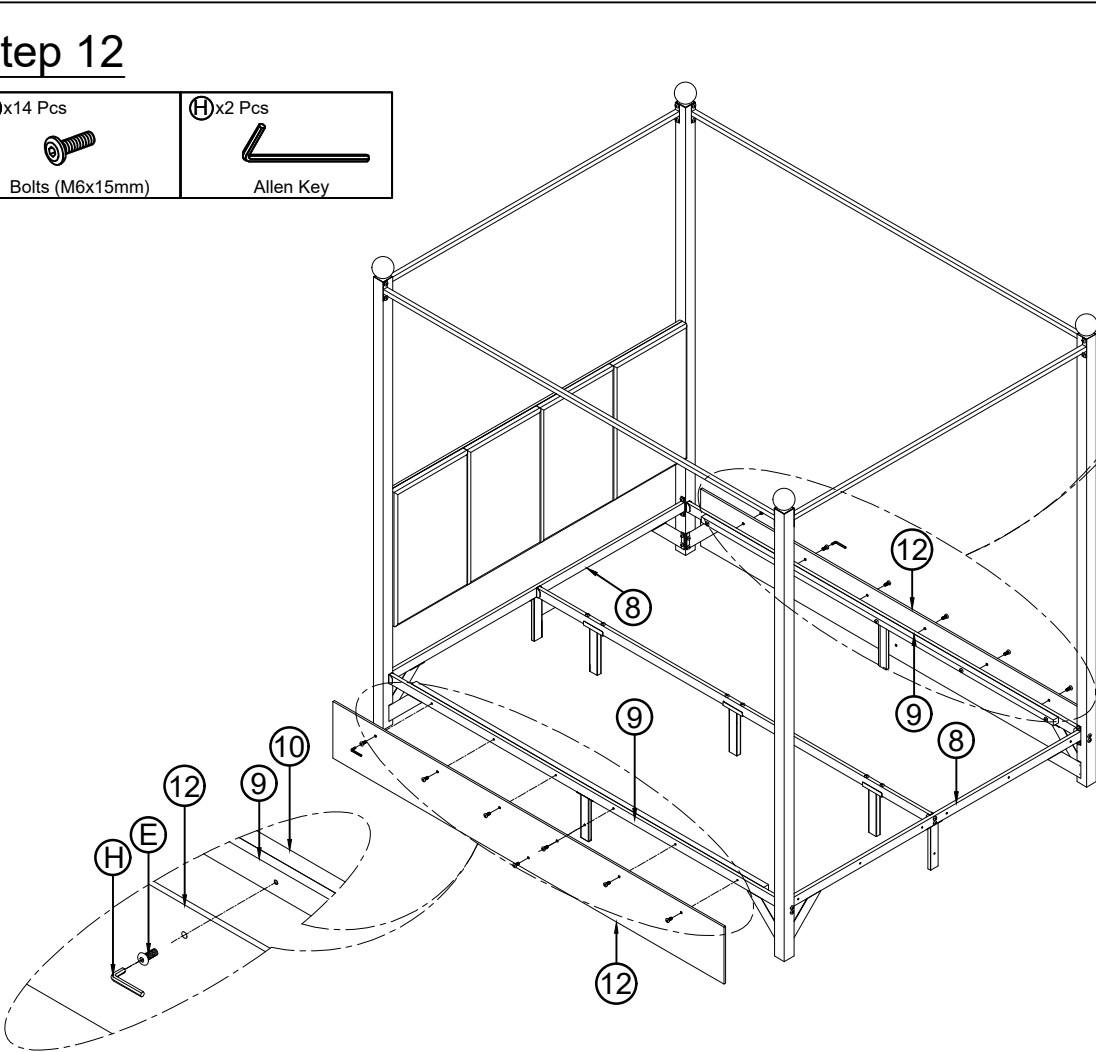

Step 13

E x14 Pcs




Bolts (M6x15mm)

H x2 Pcs



Allen Key

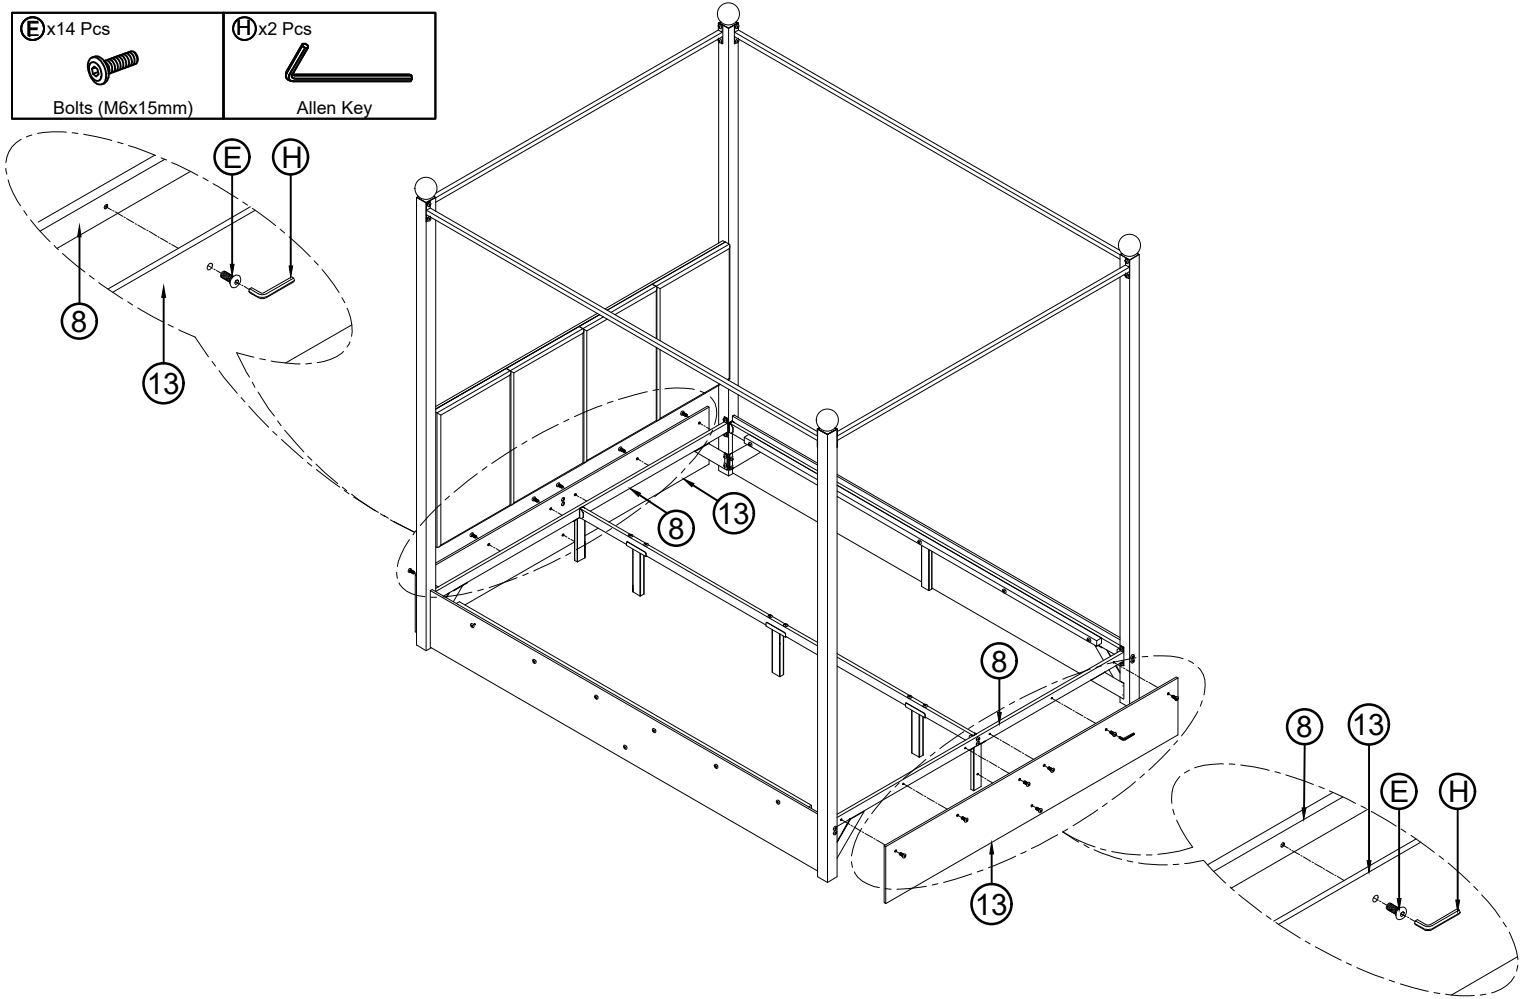


Step 14

We suggest using drill machine to install " G " screws

I x24 Pcs



Screws (M4x30mm)

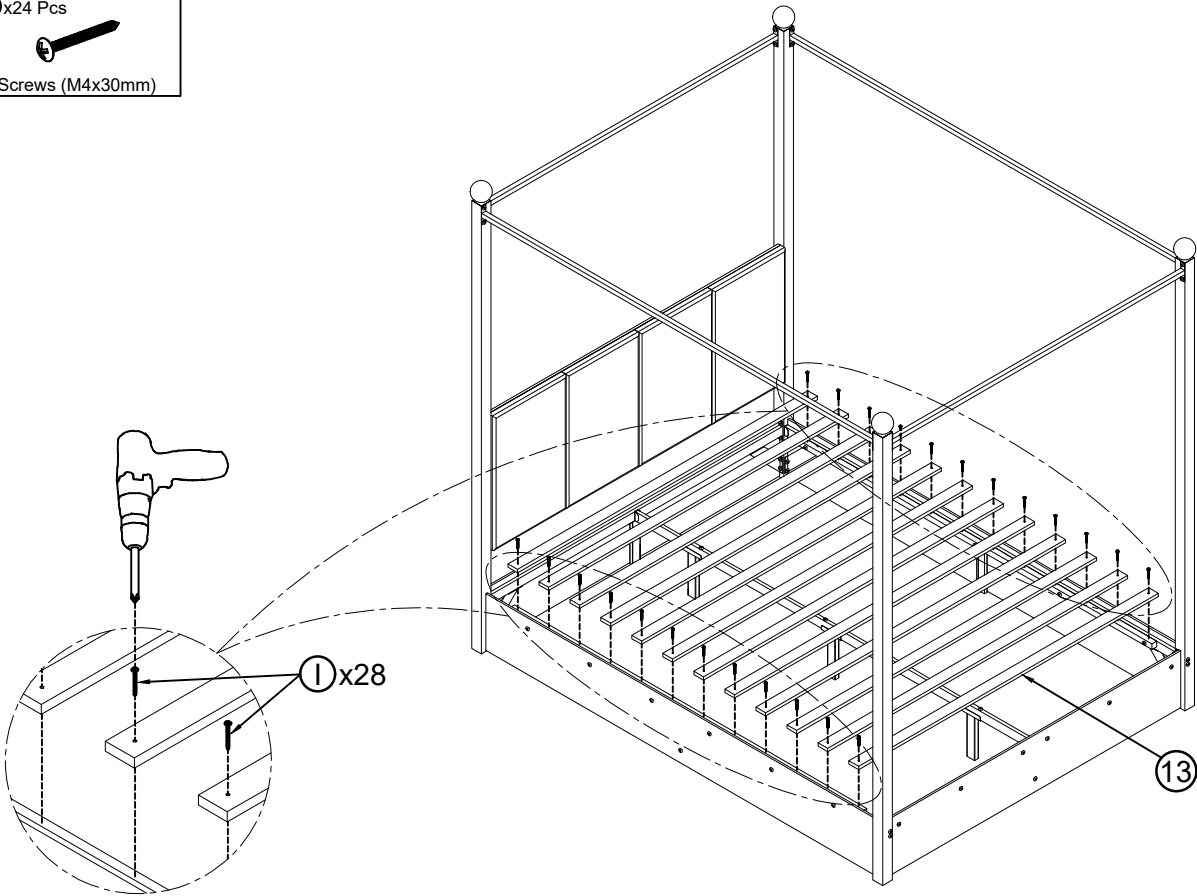

Complete

