
domi
outdoor living

13'x15' Metal Patio Gazebo

ASSEMBLY MANUAL

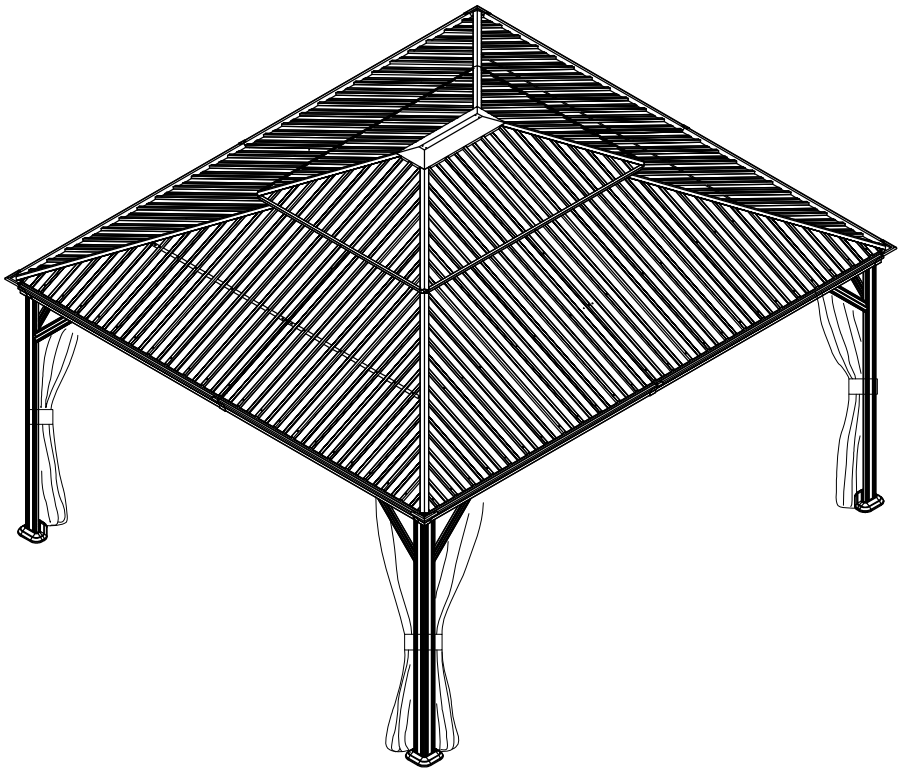

MODEL#: LGMF1737

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2023–2025 domioutdoorliving LLC. All Rights Reserved.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention


-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;


-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.


⚠ Use bolts to secure the frame to the ground to against the strong wind.

IMPORTANT: A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

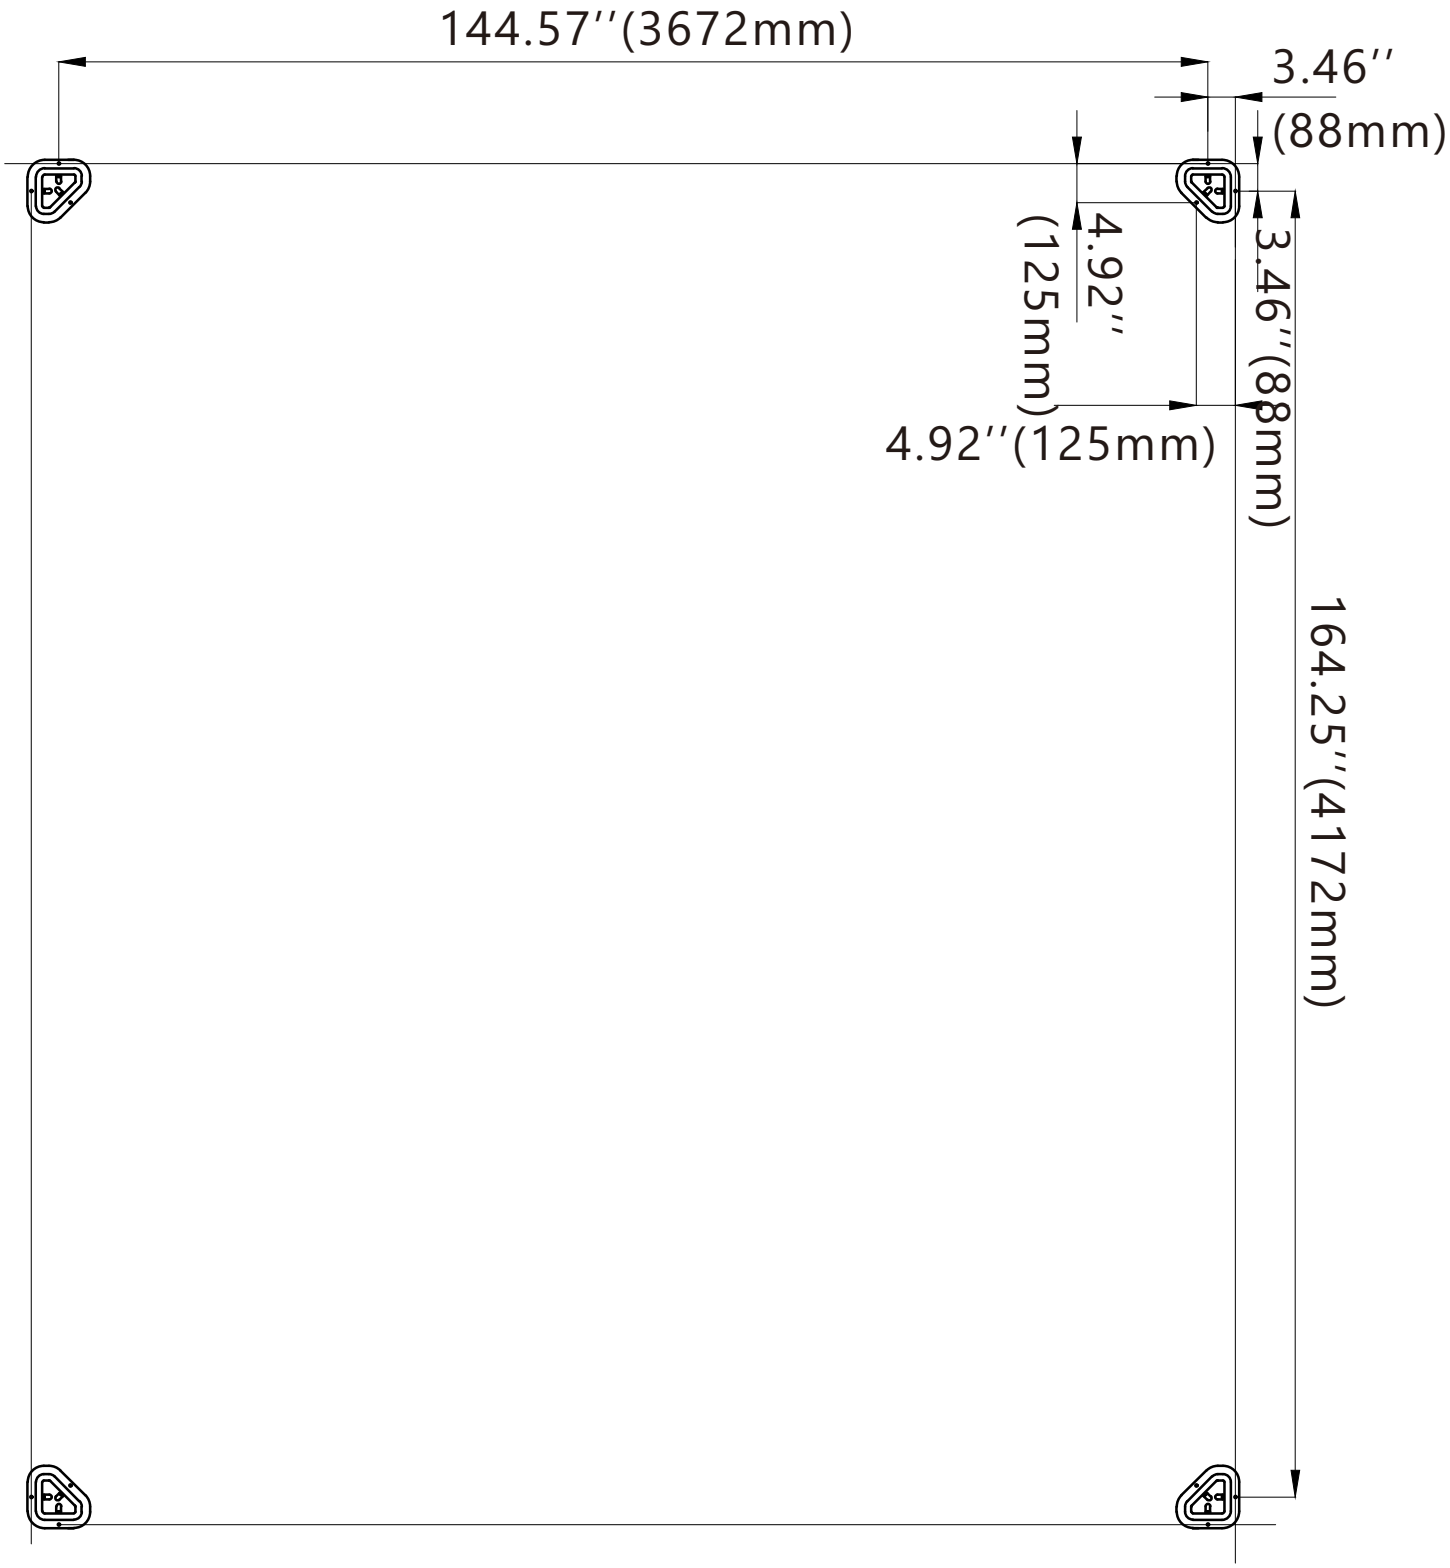

144.57''(3672mm)
3.46''
(88mm)
4.92''
(125mm)
4.92''(125mm)
3.46''(88mm)
164.25''(4172mm)

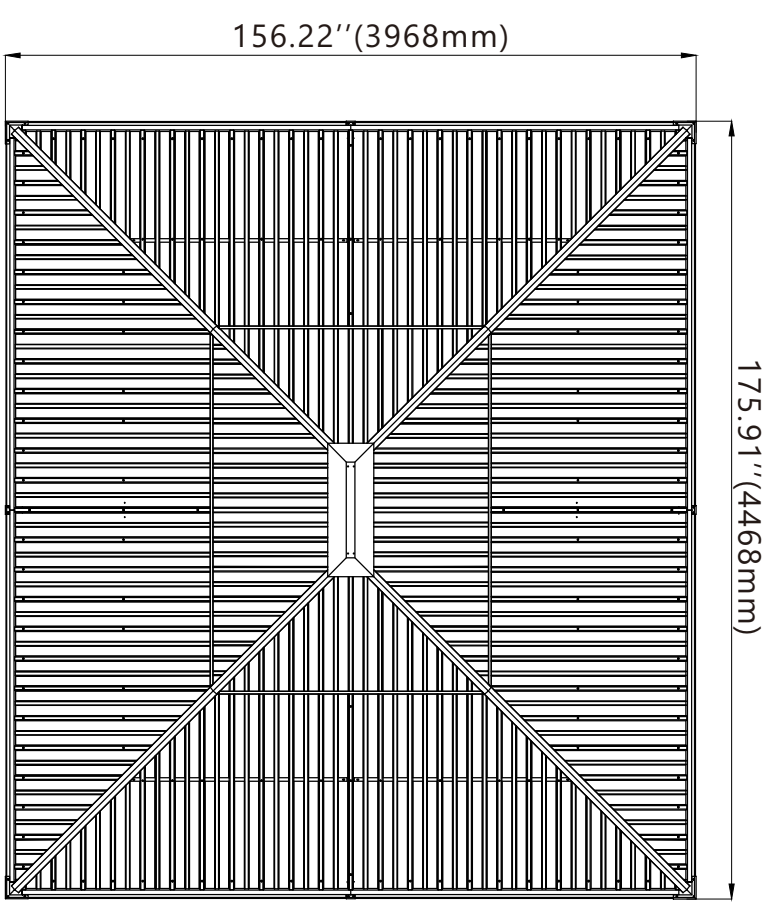

156.22''(3968mm)
175.91''(4468mm)

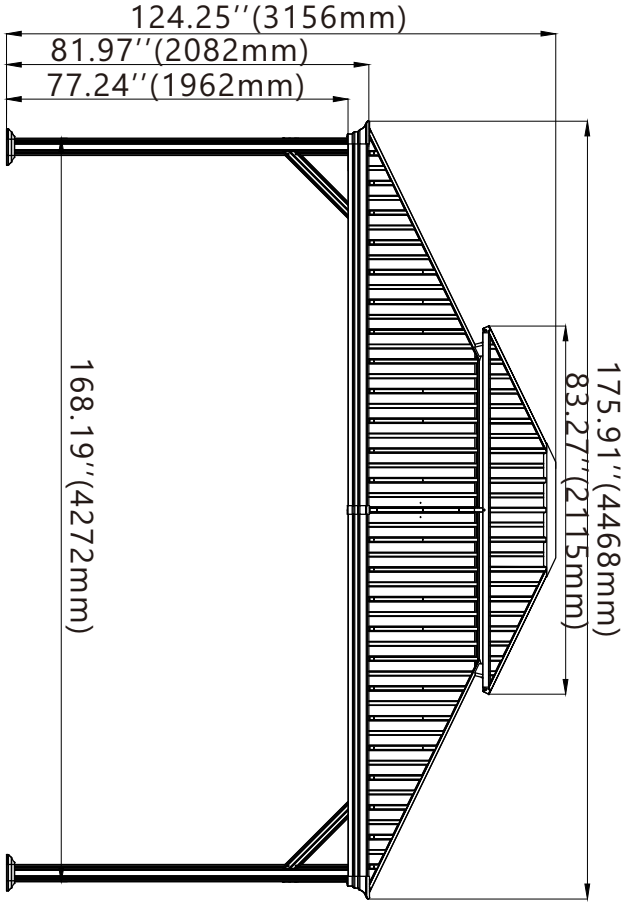
124.25''(3156mm)
81.97''(2082mm)
77.24''(1962mm)
168.19''(4272mm)
175.91''(4468mm)
83.27''(2115mm)

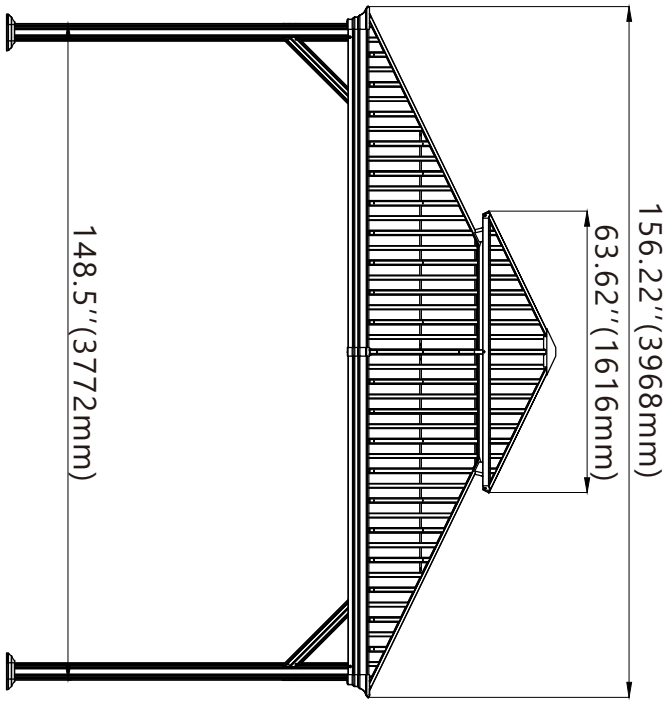
148.5''(3772mm)
156.22''(3968mm)
63.62''(1616mm)


1

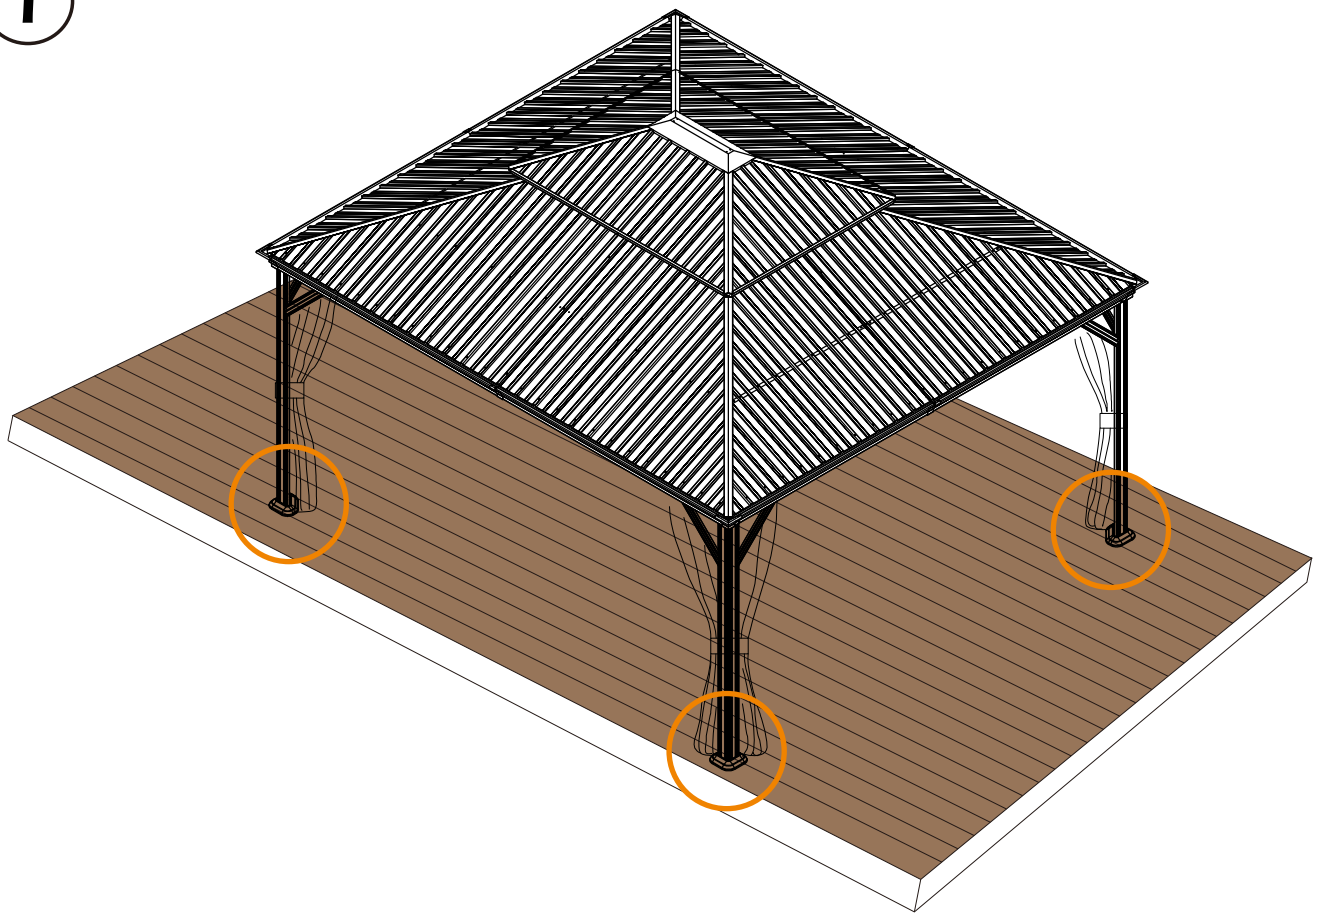





x12


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

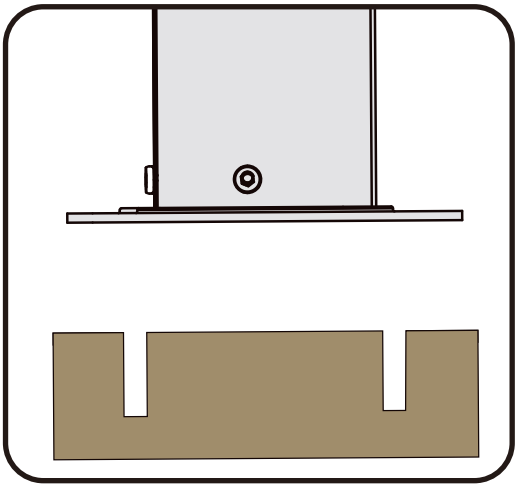

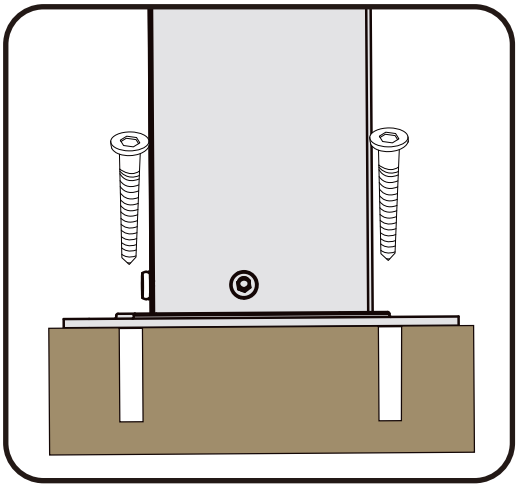

2

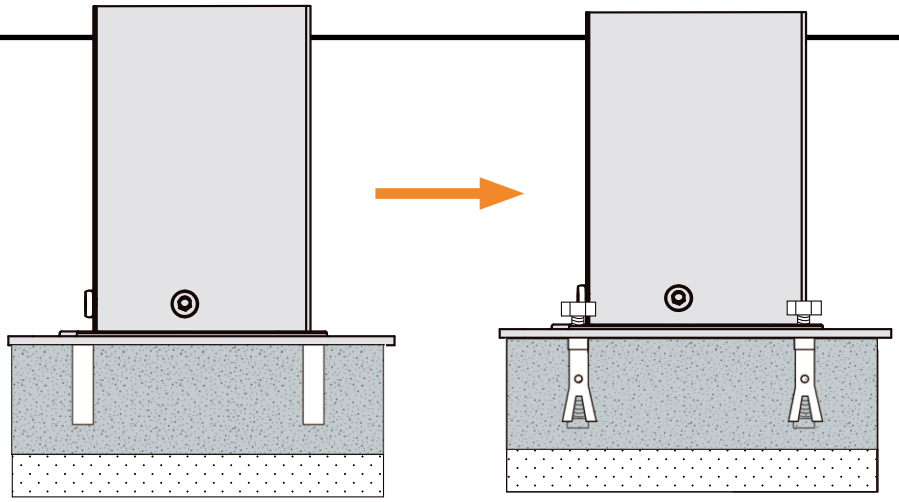

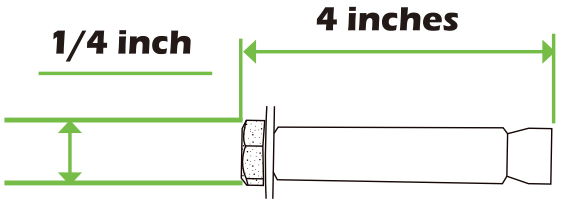



x12

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo

3



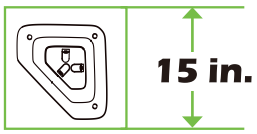


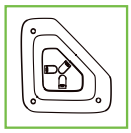




Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended.use expansion bolts to mount the pergola like (2) shows.

IMPORTANT:
Anchor is not recommended

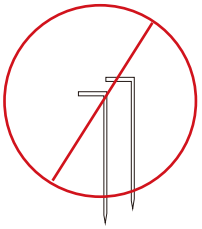





Pole 2080 A x4

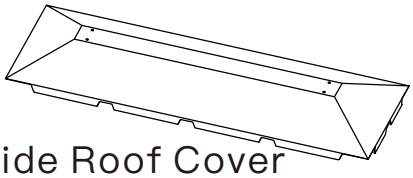


Outside Roof Cover D x1




Beam 2136 B x2



Inside Roof Cover D1 x1



Beam 2136 B1 x2



Union Bar 600 E x4



Beam 1886 B2 x2



Corner Cover F x4



Beam 1886 B3 x2



Joint Cover G x4



Track 2004 C x2



Silicone Sealant H x1



Track 2004 C1 x2



Corner Solidifying Bar J1 x4



Track 1754 C2 x2












Corner Solidifying Bar J2 x4













Track 1754 C3 x2




Base K x4

 Base Cover K1 x4	 Small Mesh P x1
 Bracket K2 x8	 Finishing End Q x8
 Corner Roof Tube Connector L x4	 Hooks R1 x2
 Corner Roof Tube L1 x4	 Black Rubber S x144
 Roof Bar M x4	 Solidifying Bar U1 x4
 Finishing Bar N x2	 Solidifying Bar U2 x4
 Finishing Bar N1 x2	 Bracket U3 x4
 Finishing Bar O1 x2	 Bracket U4 x4
 Finishing Bar O2 x2	


	M6x16	1# x188		M6x25	10# x8
	M6x20	2# x24		M6x12	11# x12
		3# x16		ST6.3*18	12# x12
 Plastic Hooks		4# x136			
	M6x28	5# x84			
	M6x45	6# x8			
	M6x50	7# x44			
	M5x16	8# x4			
	ST4.8x13	9# x24			

Roof Panels

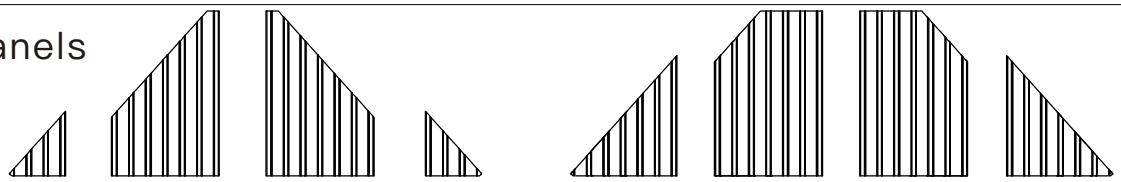


V1 x2 V2 x2 V3 x2 V4 x2 V5 x2 V6 x2 V7 x2 V8 x2

Roof Panels

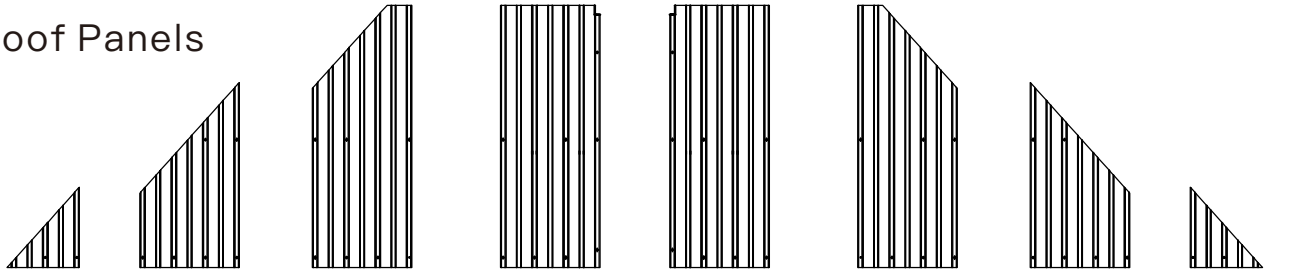


W1 x2 W2 x2 W3 x2 W4 x2 W5 x2 W6 x2 W7 x2 W8 x2

Roof Panels

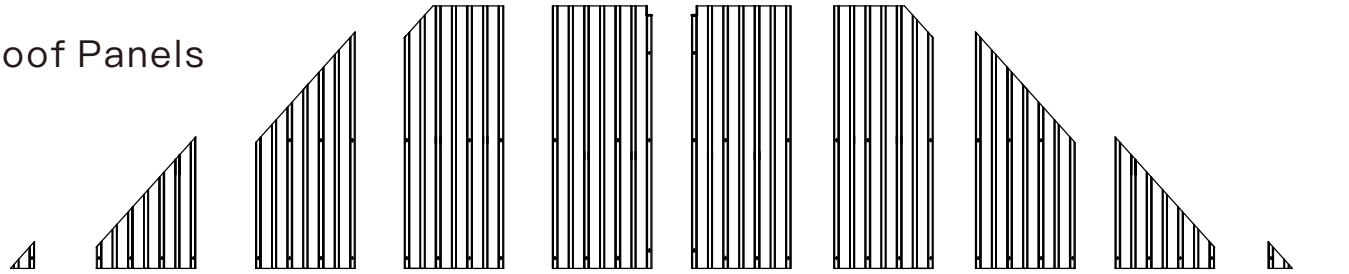

X1 x2 X2 x2 X3 x2 X4 x2 X5 x2 X6 x2 X7 x2 X8 x2 X9 x2 X10 x2

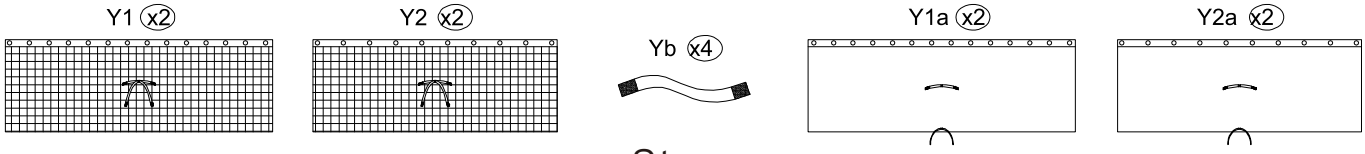



Mosquito Netting

Strap

Curtains

Plastic Clips





x1 x1 x1




Plastic Bar

Pa x2




Plastic Bar

Pb x2

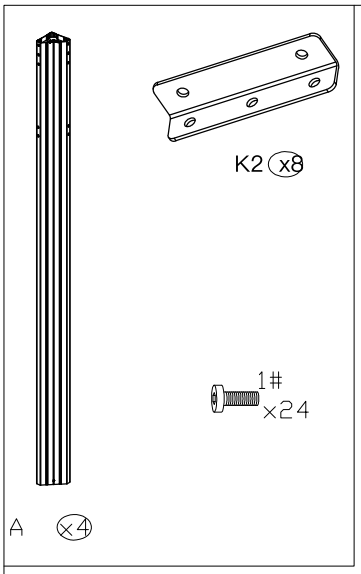


POST ASSEMBLY:

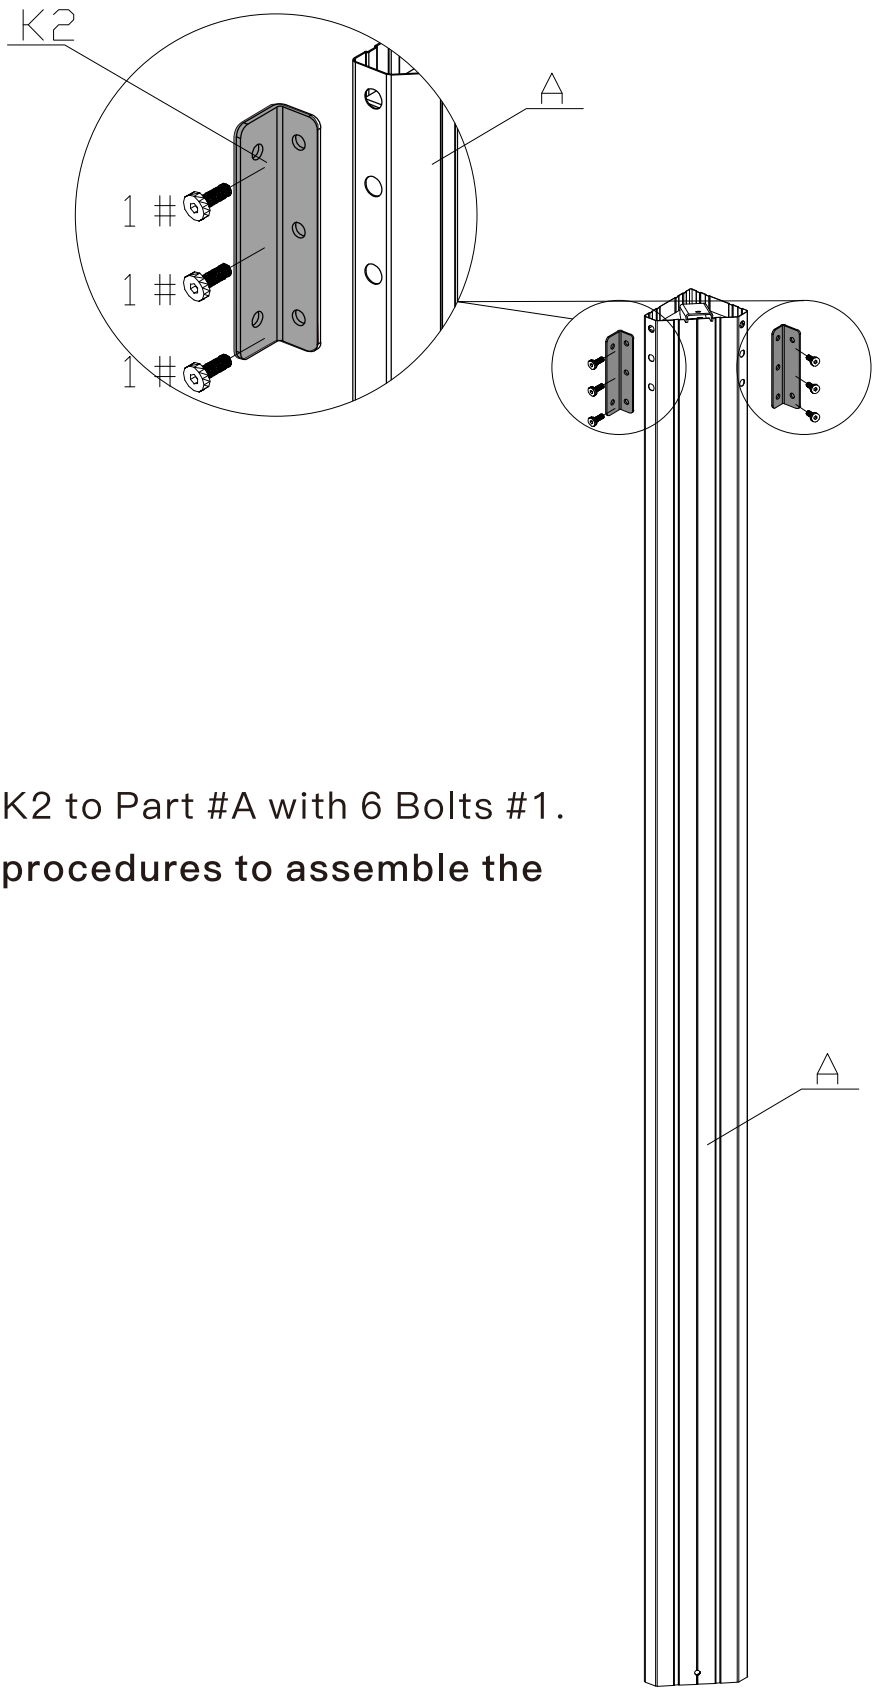


(1) Attach 2 Part #K2 to Part #A with 6 Bolts #1.

Repeat the above procedures to assemble the other 3 Poles.

X4










(1) Put on Base Cover #K1 first;


(2) Attach Base #K to Pole #A with 3 Bolts #1.

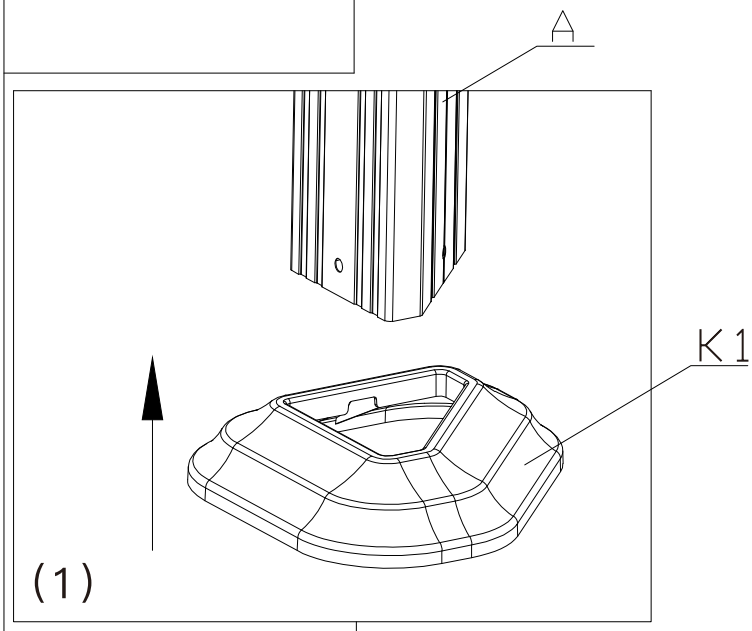

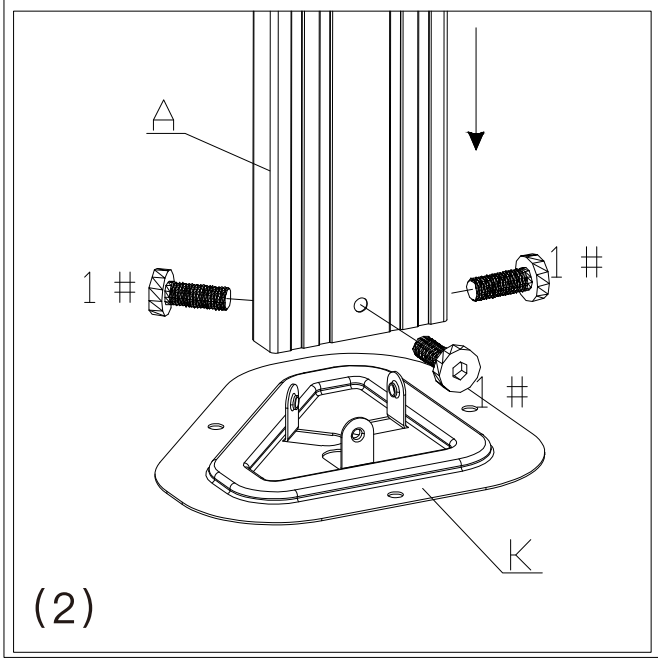


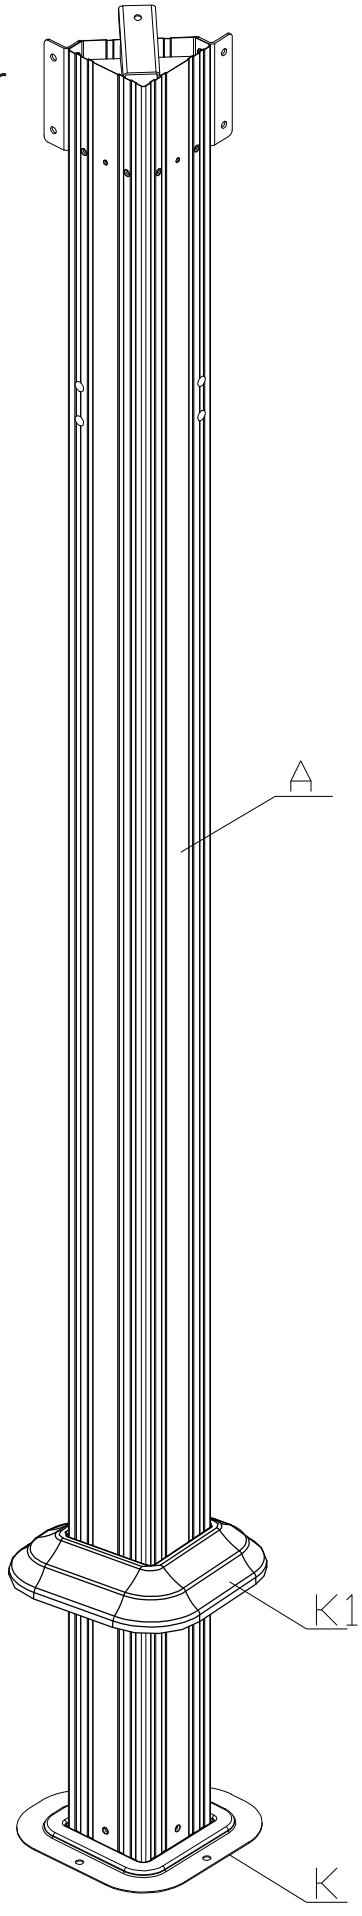


X4

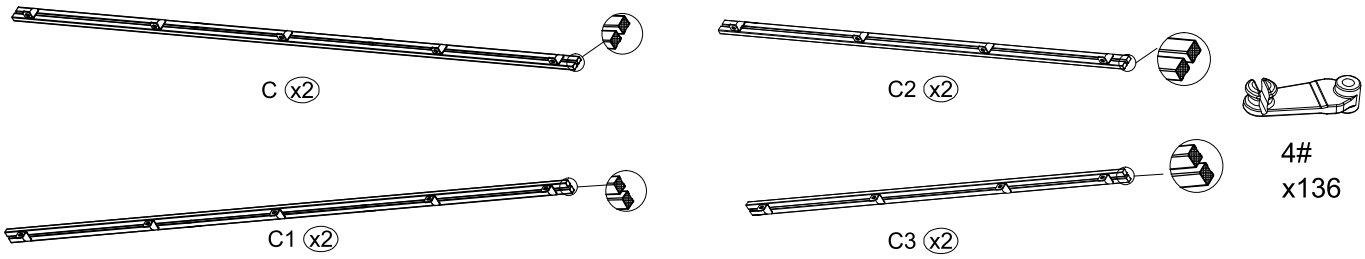


(1) Slide the Plastic Hooks #4 to the double-rail track #C (each slot should slide 9 plastic hooks).

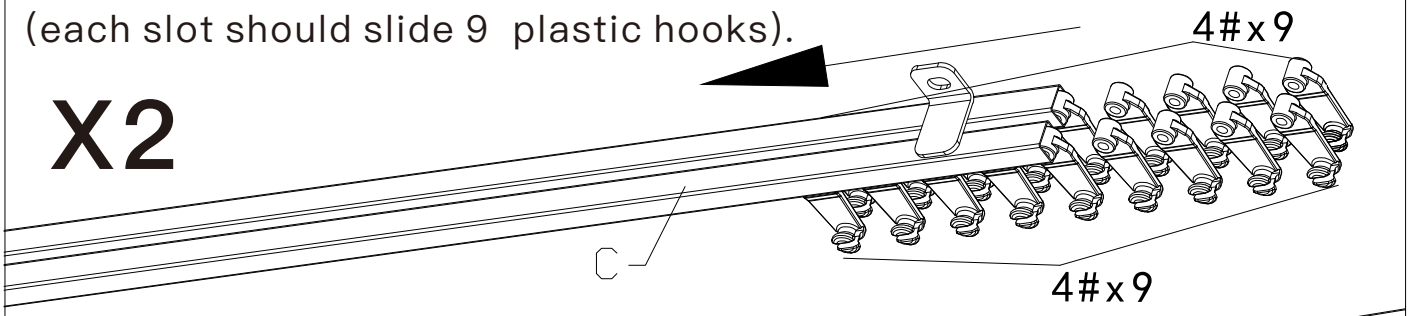


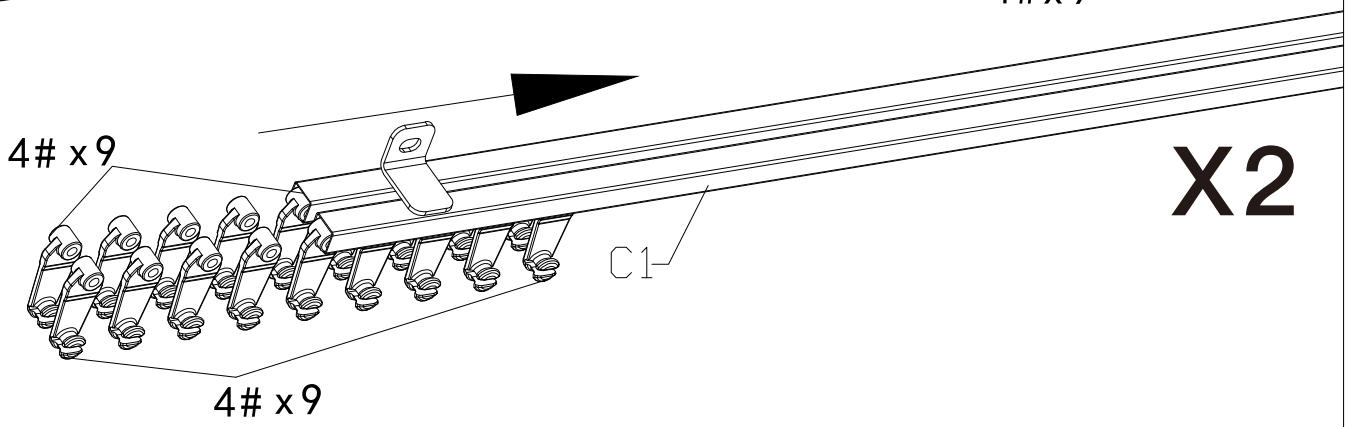

(2) Slide the Plastic Hooks #4 to the double-rail track #C1 (each slot should slide 9 plastic hooks).

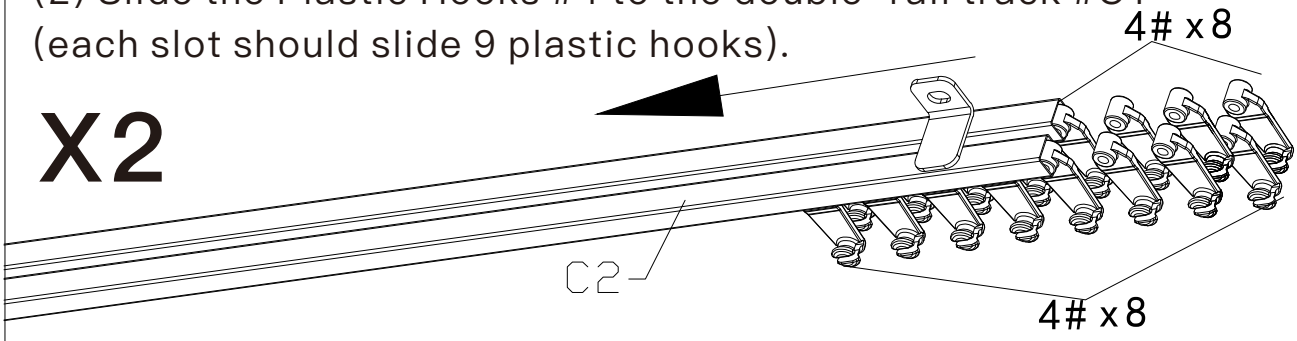


(3) Slide the Plastic Hooks #4 to the double-rail track #C2 (each slot should slide 8 plastic hooks).

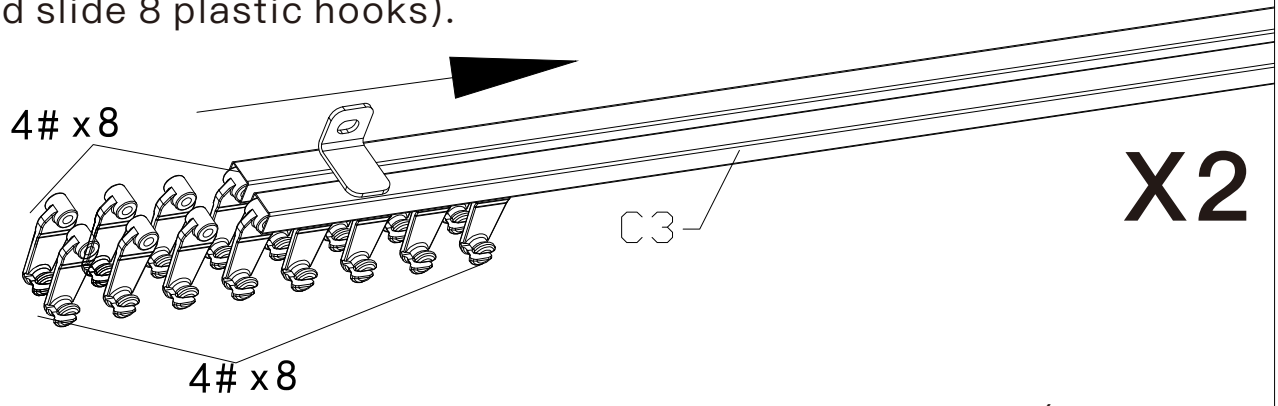

(4) Slide the Plastic Hooks #4 to the double-rail track #C3 (each slot should slide 8 plastic hooks).



B x2



E x2




1#
x16




B1 x2

BEAM ASSEBMLY

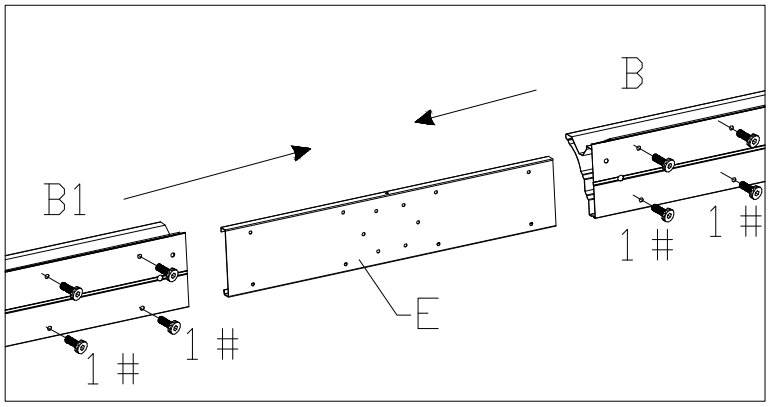

(1) Insert Part #E into Part #B1,and secure with 4 Bolts #1.
(2) Insert the other side of Part #E into Part #B and secure with 4 Bolts #1.

Repeat the above procedures to assemble the other Part #B1 and #B.

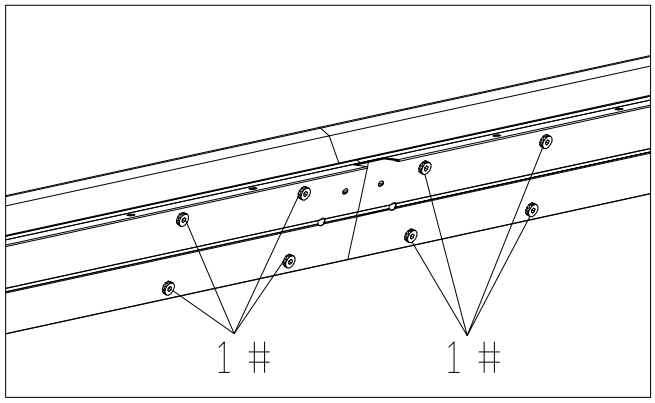



TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant(part #H) and Joint Cover #G to affix the gap.(see P11)




1#
x20

Use 10 Bolts #1 to fix the track C & C1 to the beam B1 & B.
Repeat the above procedures for aother beams B1 & B.

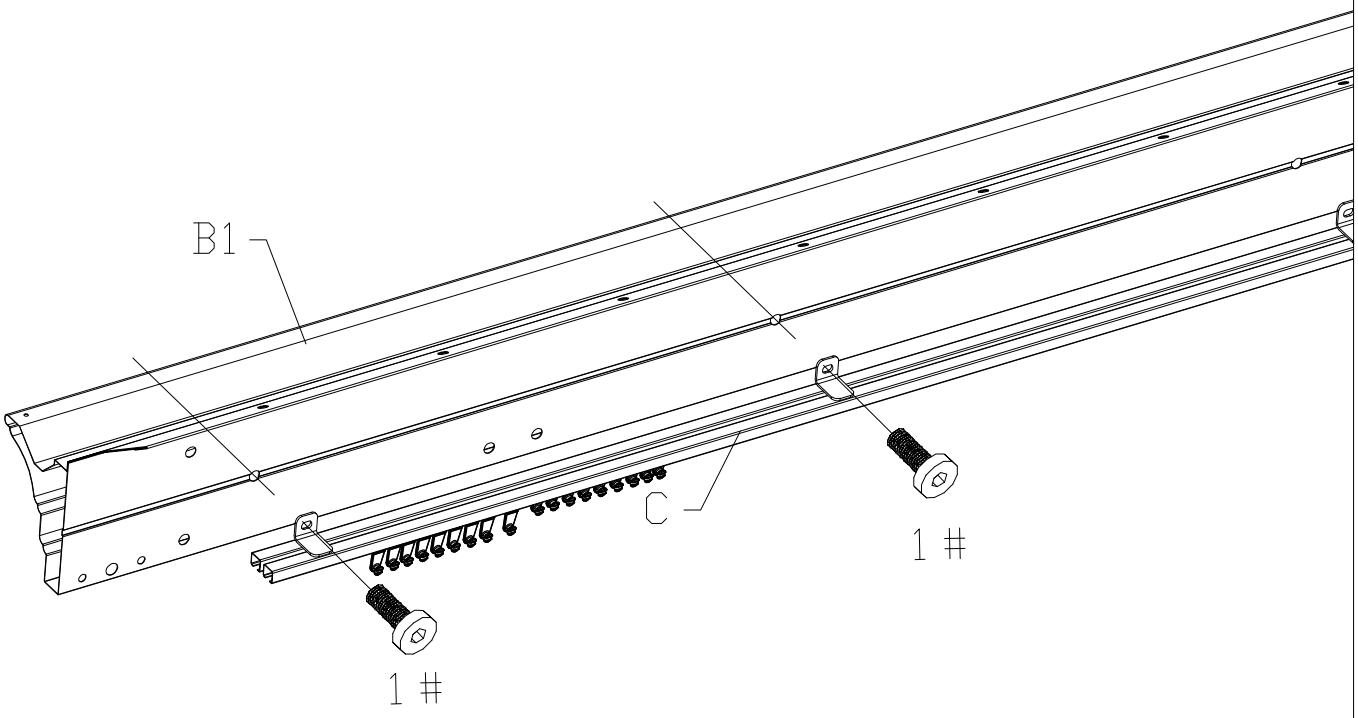


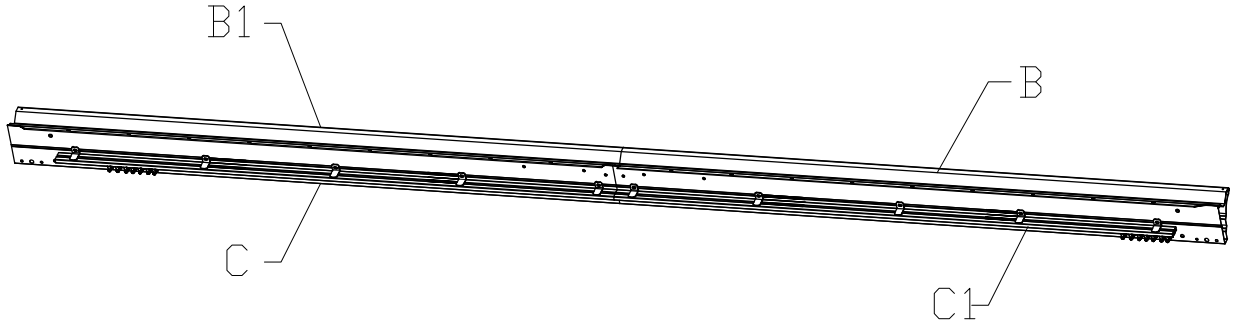

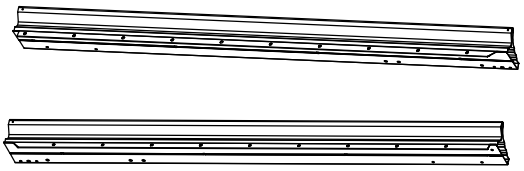

B2 (x2)

B3 (x2)




E (x2)




1#
x16

BEAM ASSEBMLY

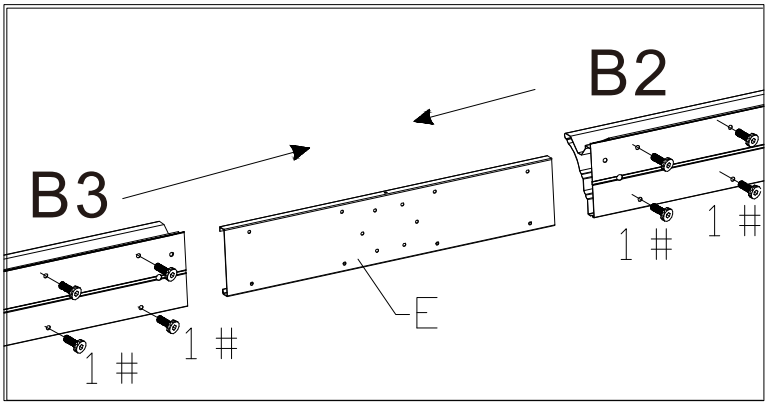


(1) Insert Part #E into Part #B3,and secure with 4 Bolts #1.
(2) Insert the other side of Part #E into Part #B2 and secure with 4 Bolts #1.
Repeat the above procedures to assemble the other Part #B3 and #B2.

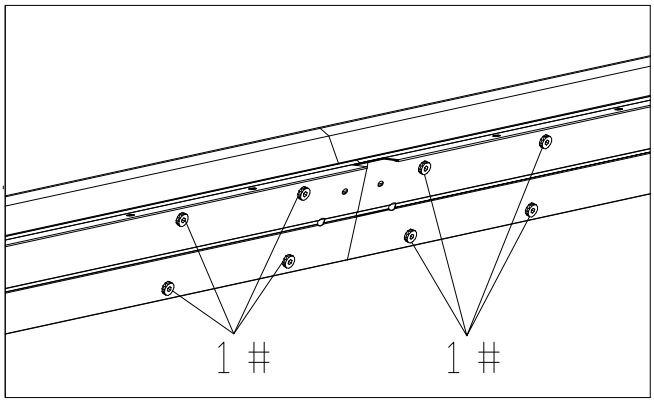


TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant(part #H) and Joint Cover #G to affix the gap.(see P11)




Use 8 Bolts #1 to fix the track C2 & C3 to the beam B3 & B2.
Repeat the above procedures for aother beams B3 & B2.

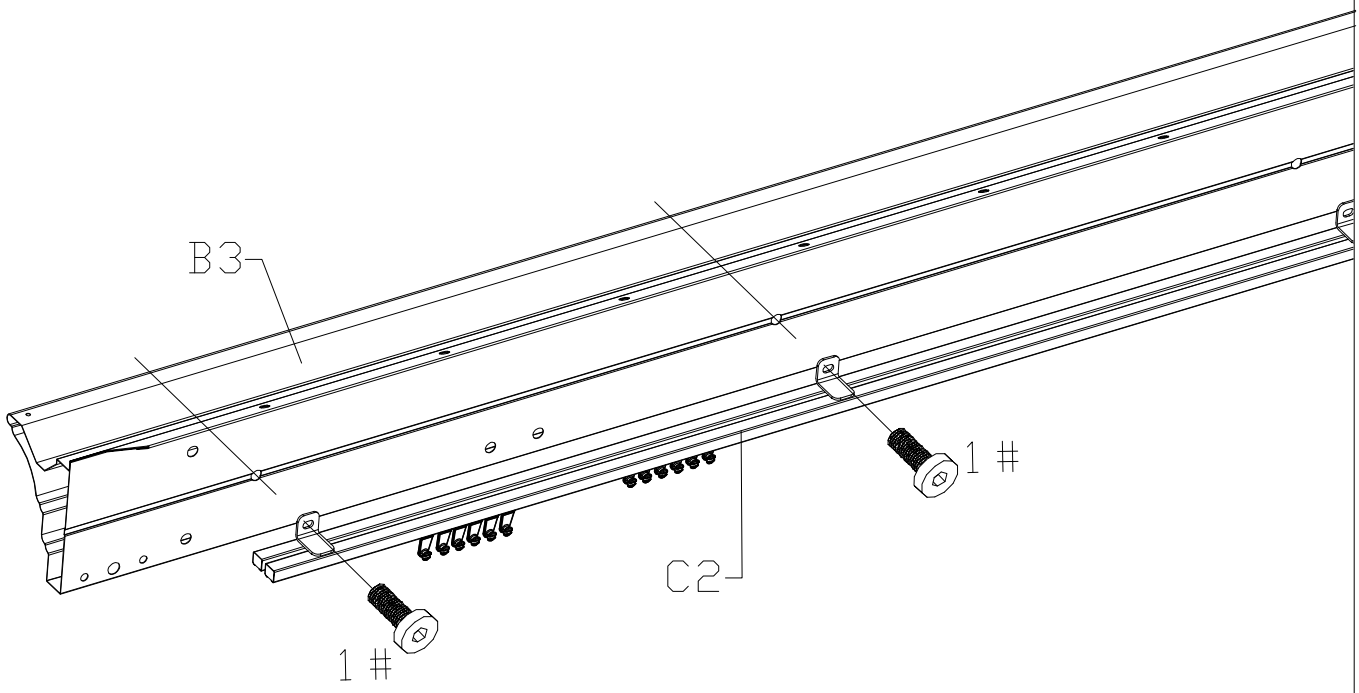

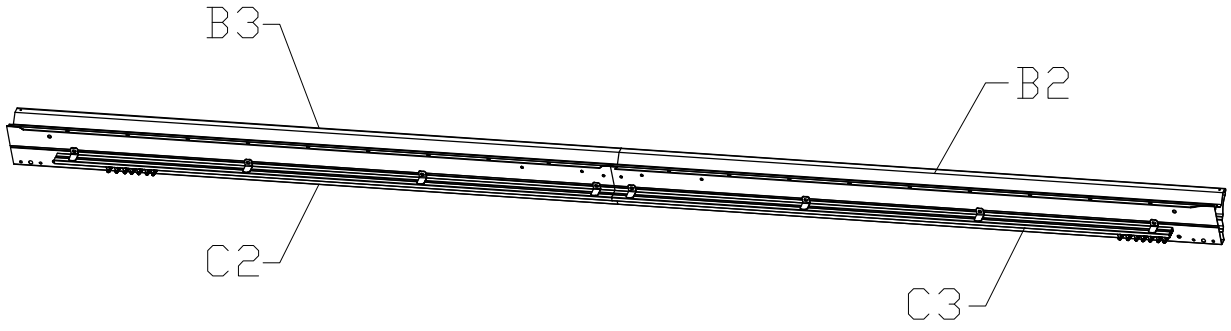




2#
x16




3#
x16

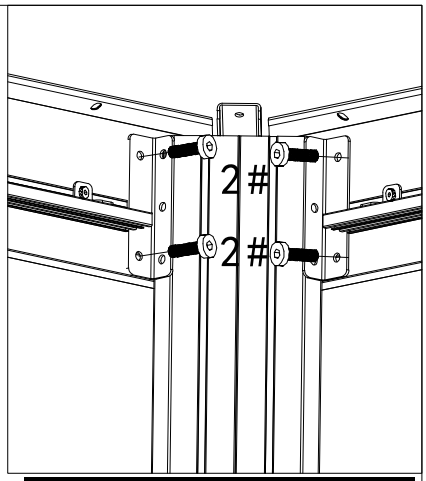


Inside View


FRAME ASSEMBLY:

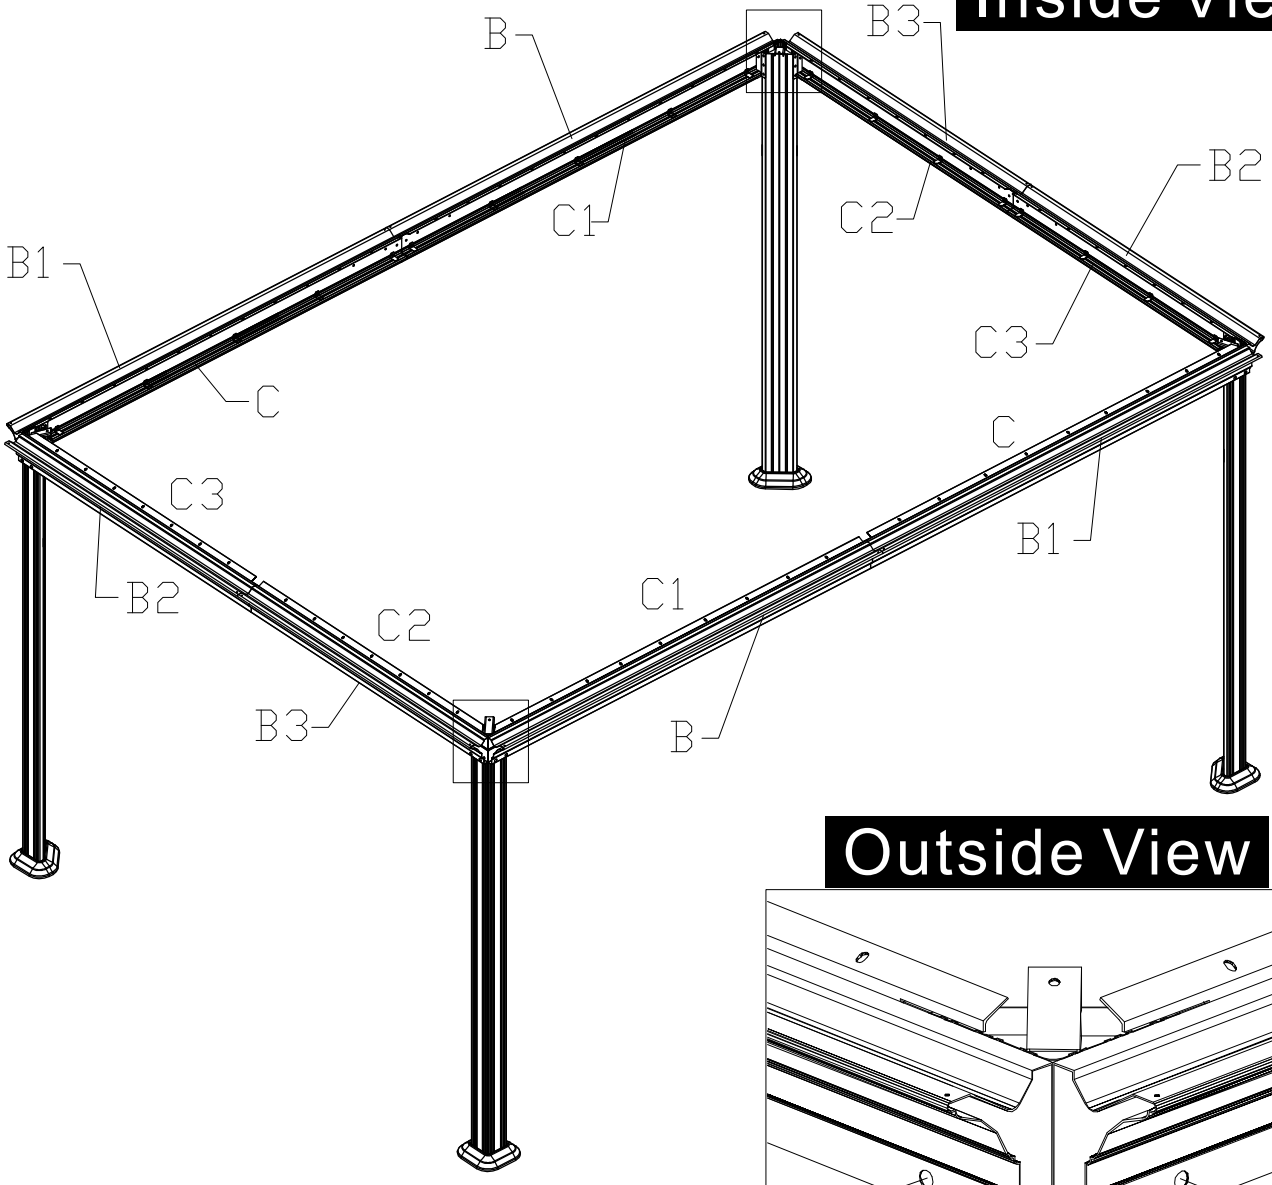

Outside View

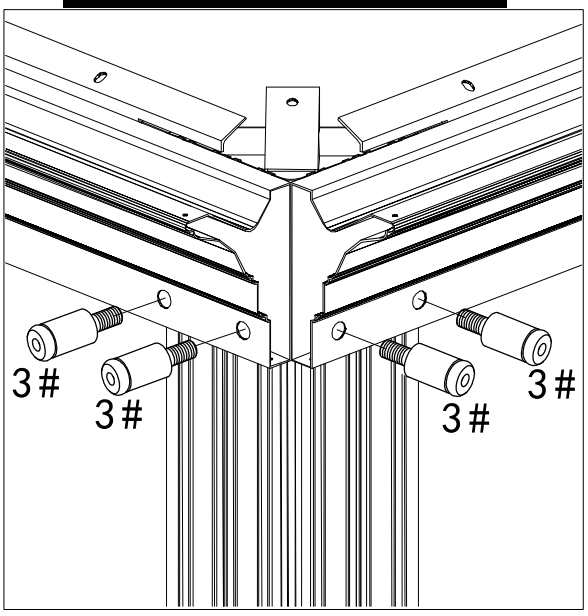



Please don't tighten all bolts.

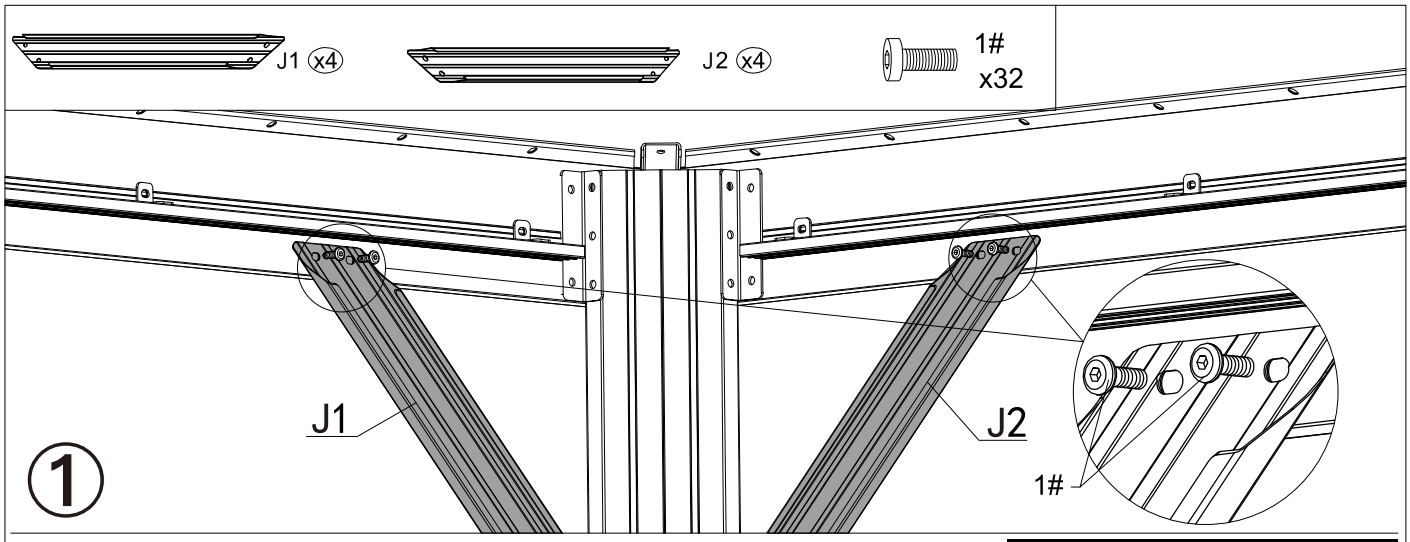

Inside View

CORNER SOLIDIFYING BAR ASSEMBLY:

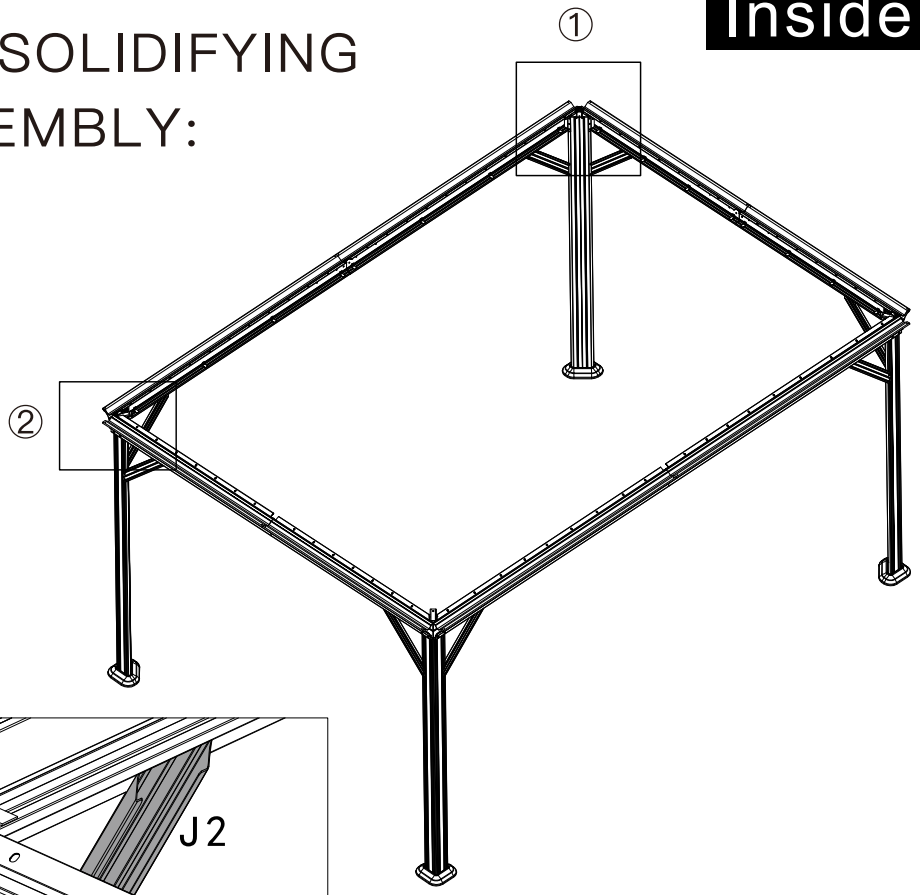

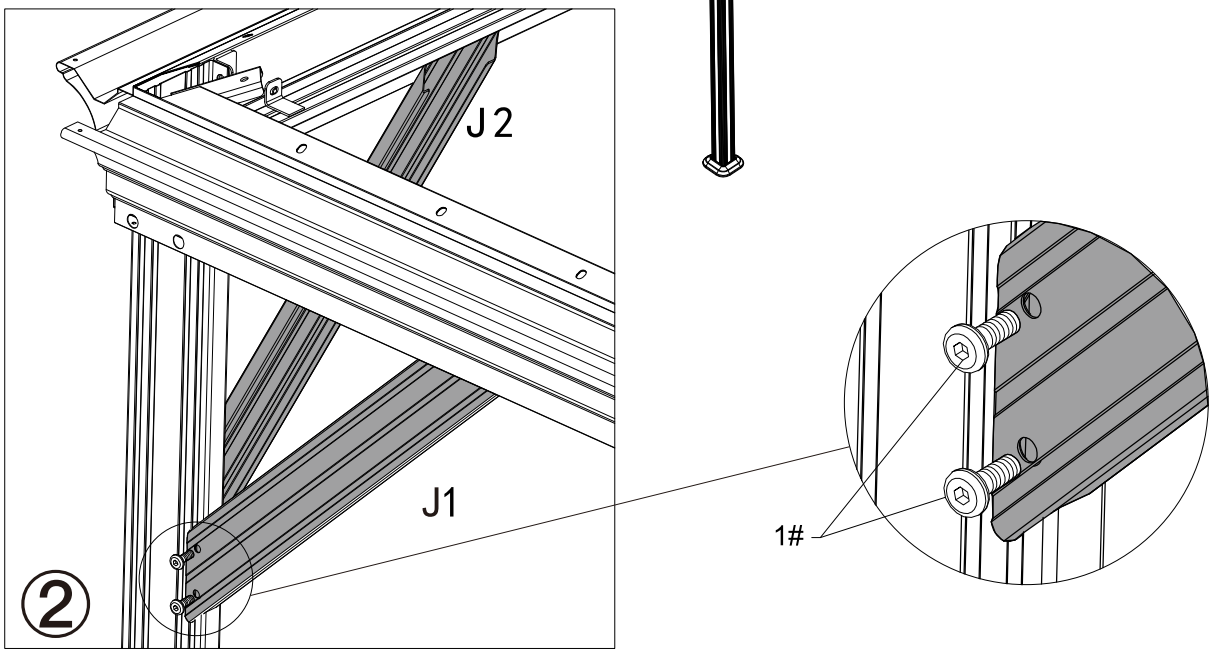

Outside View





F x4




9#
x16

CORNER COVER & JOINT COVER ASSEMBLY:

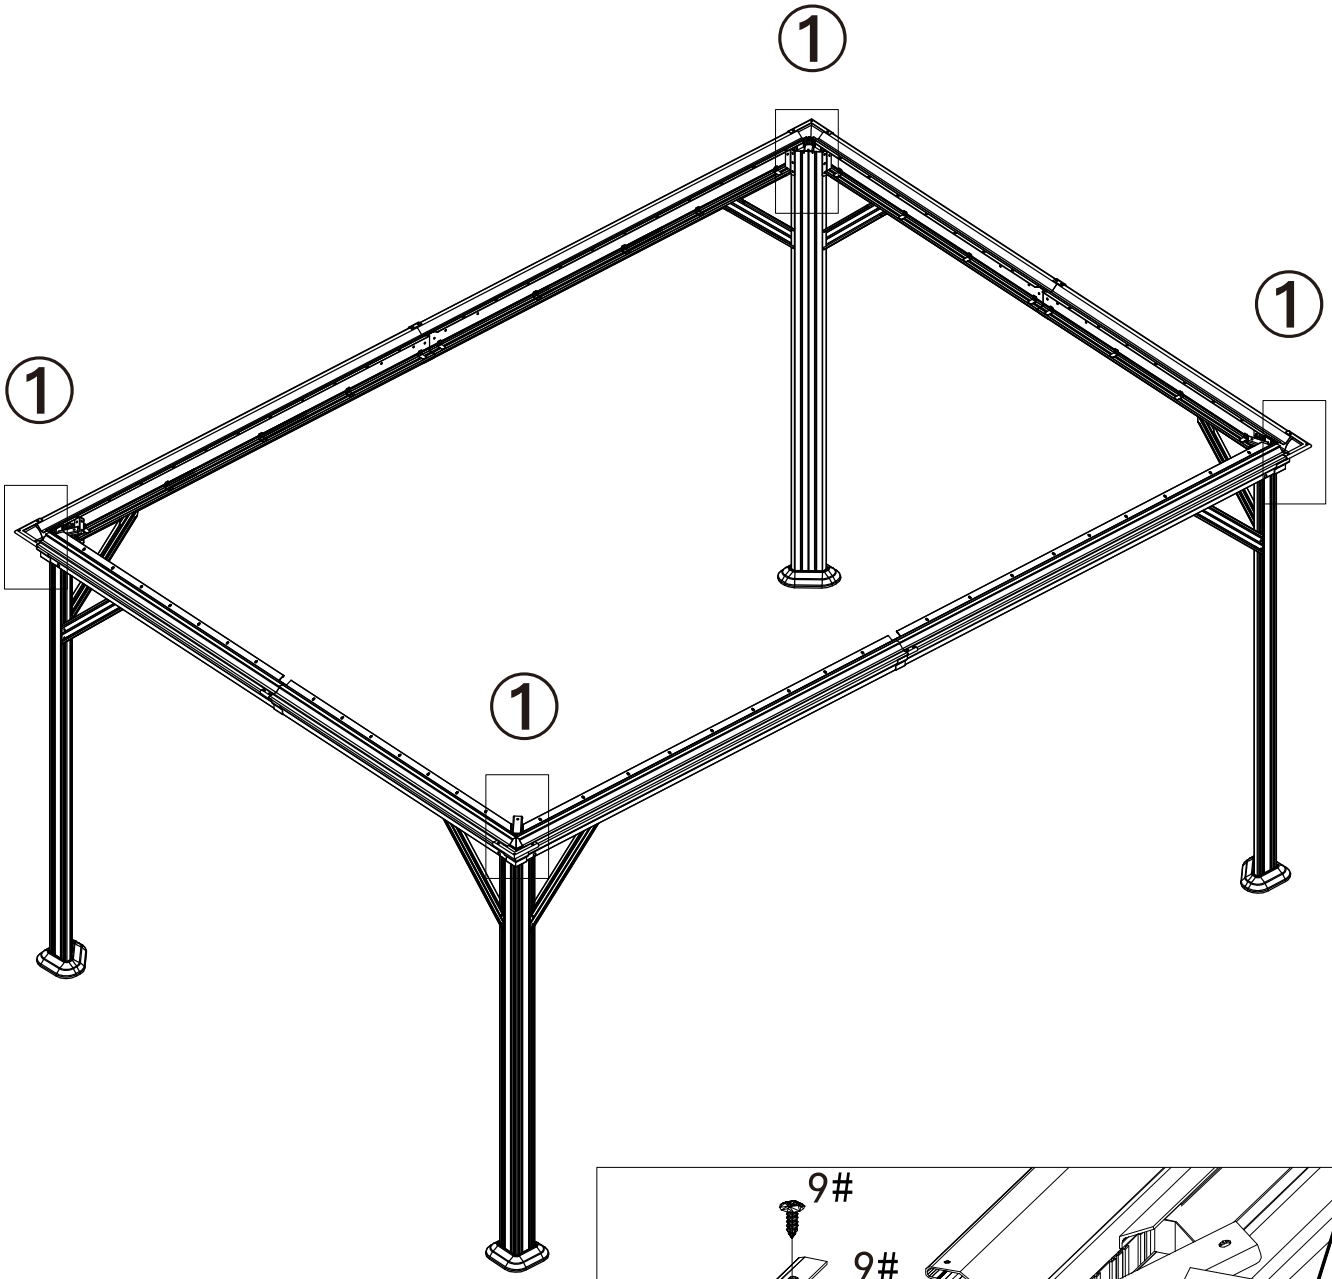

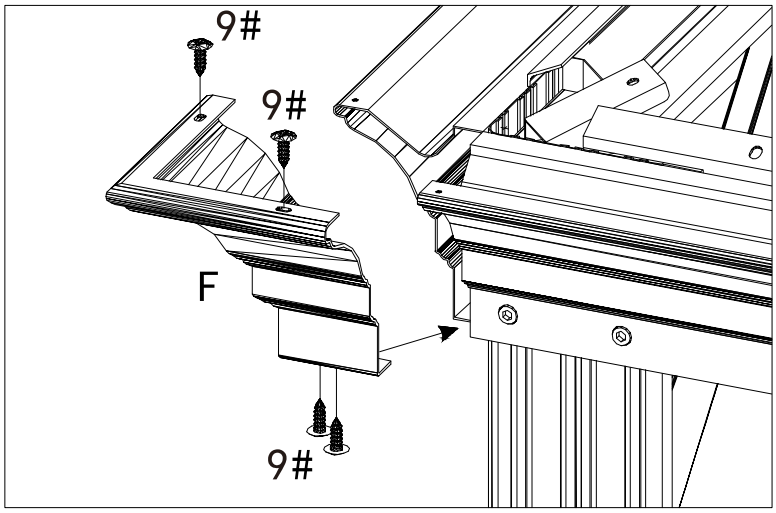












Use 5mm silicone sealant(part #H) and Joint Cover #G to affix the gap.

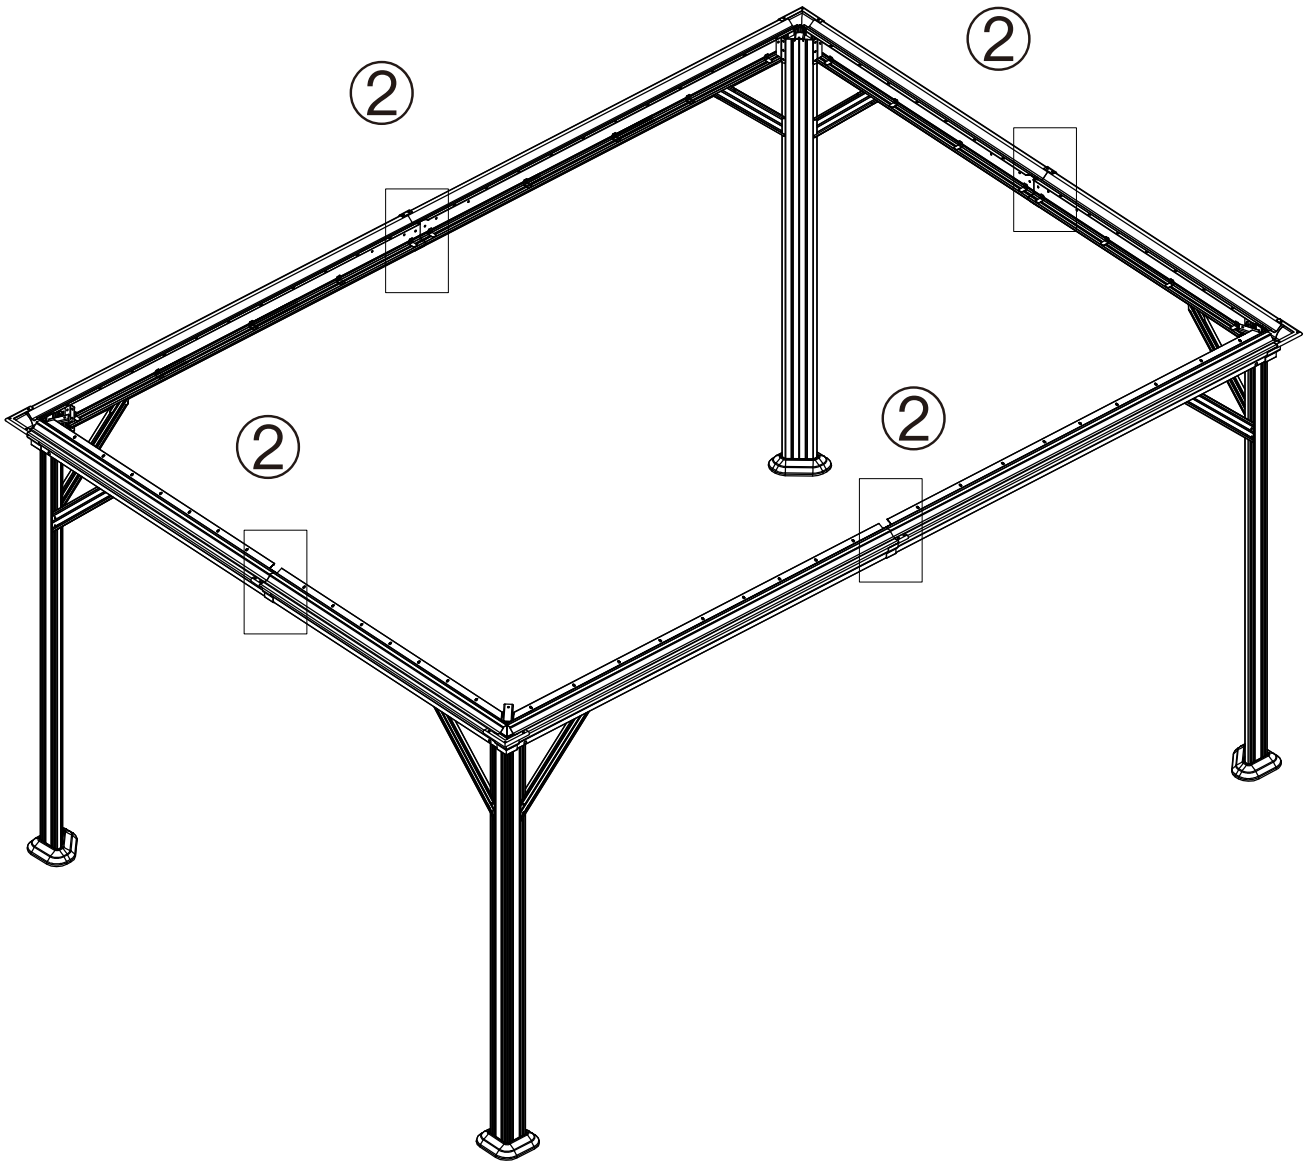

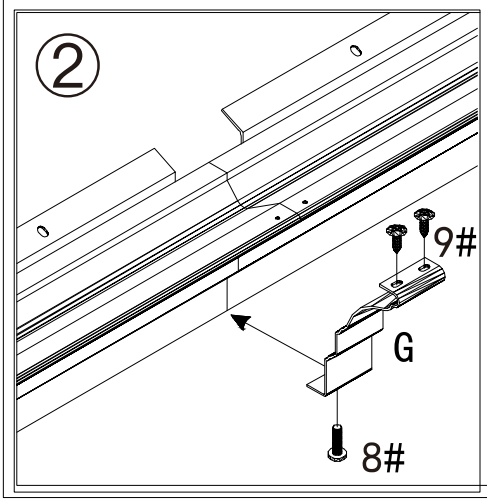

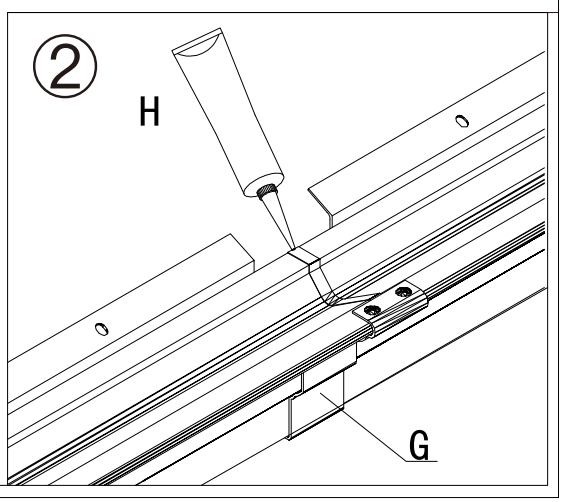




L (x4)




L1 (x4)




2#
x8

CORNER ROOF TUBE ASSEMBLY:

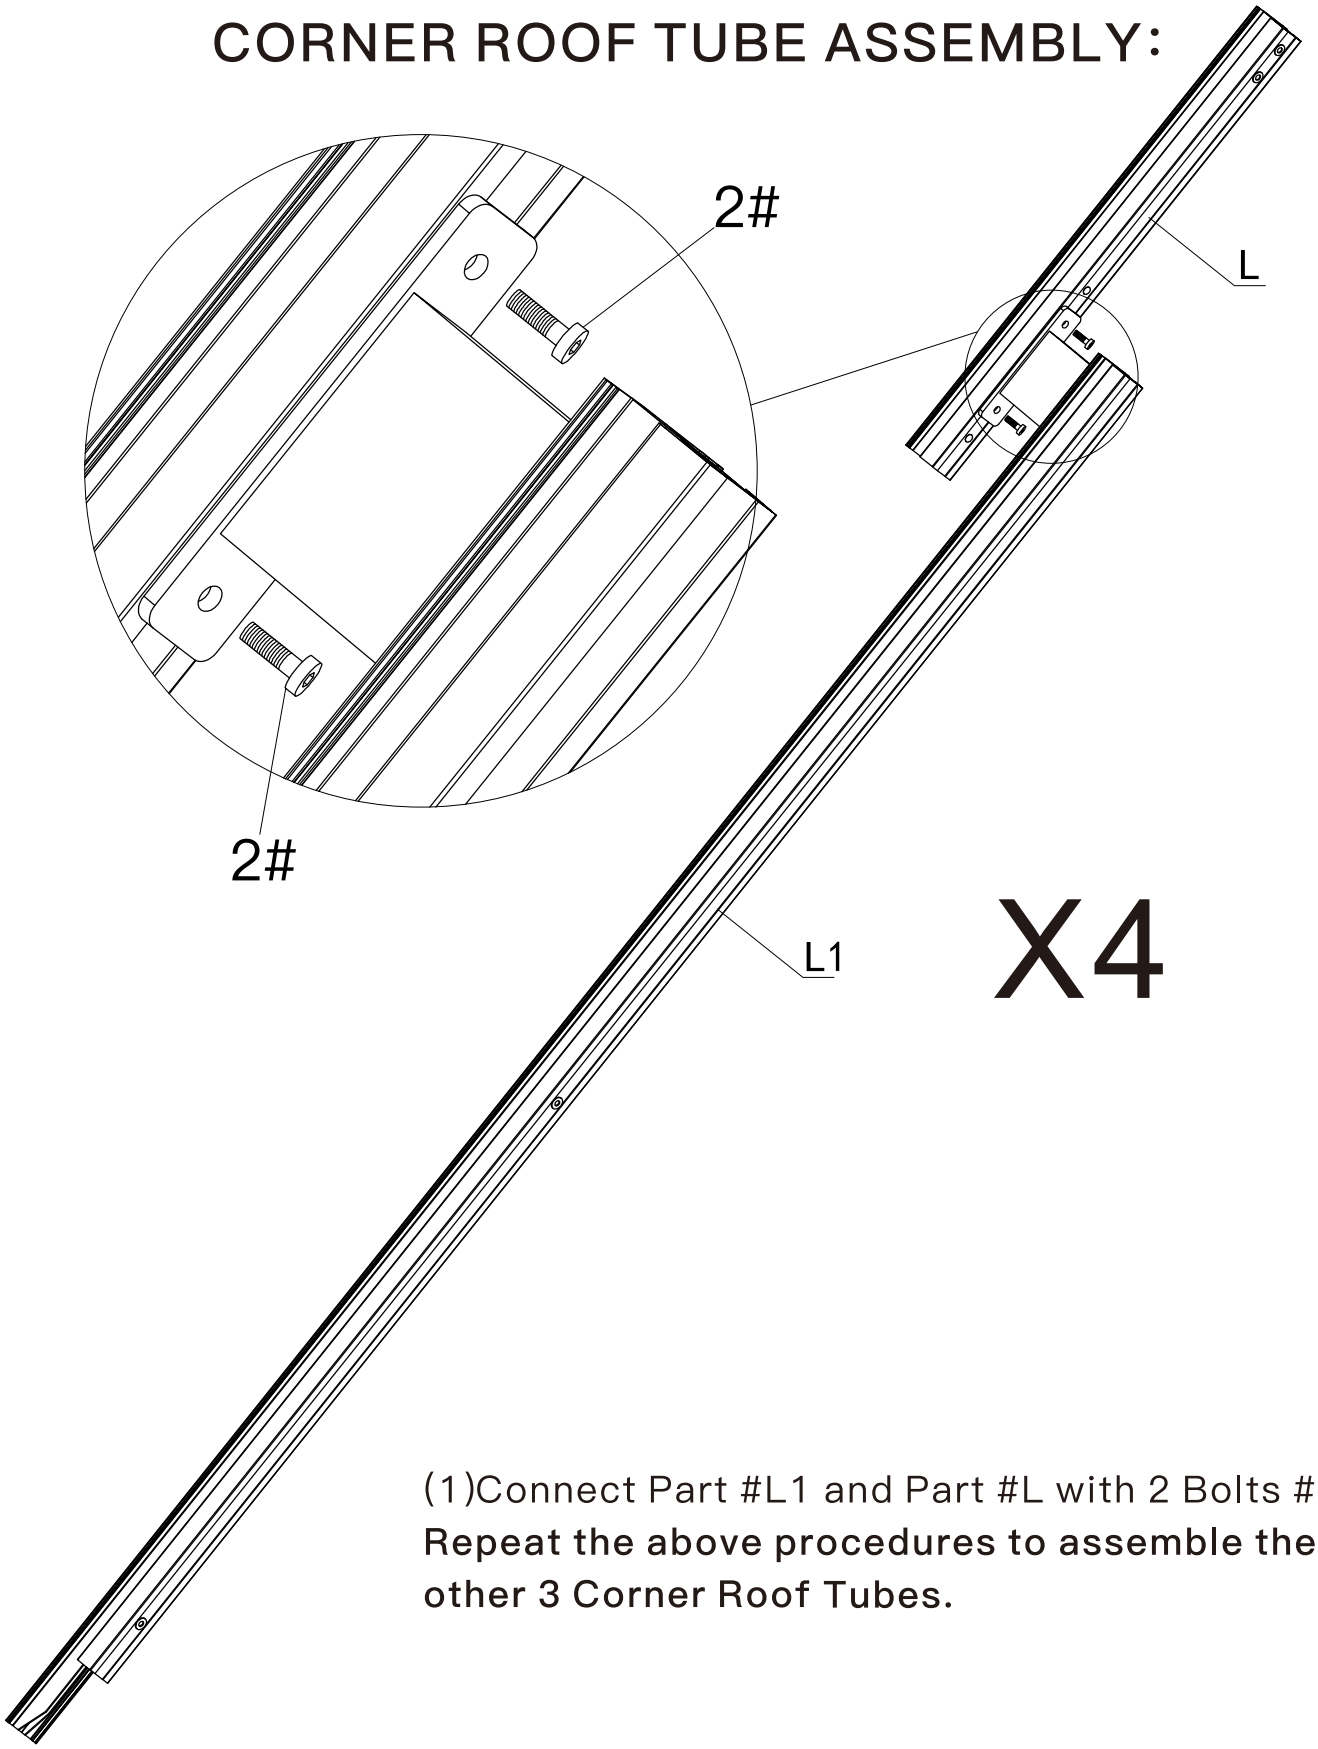



(1)Connect Part #L1 and Part #L with 2 Bolts #2.
Repeat the above procedures to assemble the other 3 Corner Roof Tubes.




D1 (x1)

CORNER ROOF TUBE AND INSIDE ROOF CONNECTOR ASSEMBLY:

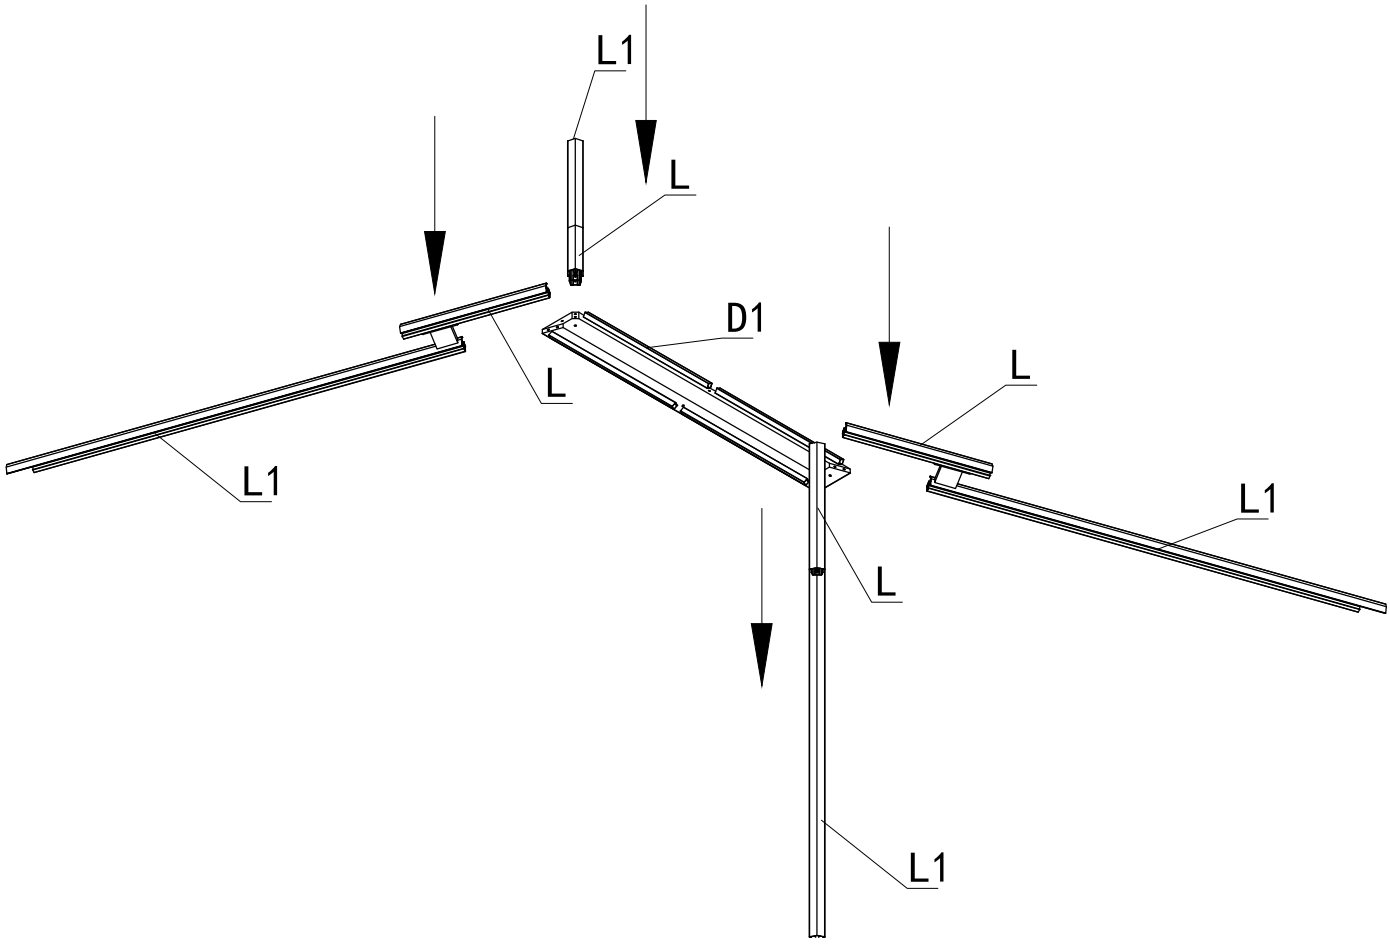





Place 4 Corner Roof Tubes on the 4 corners of Inside Roof Cover #D1 ,secure with 8 Bolts #1 (**from bottom to top**).

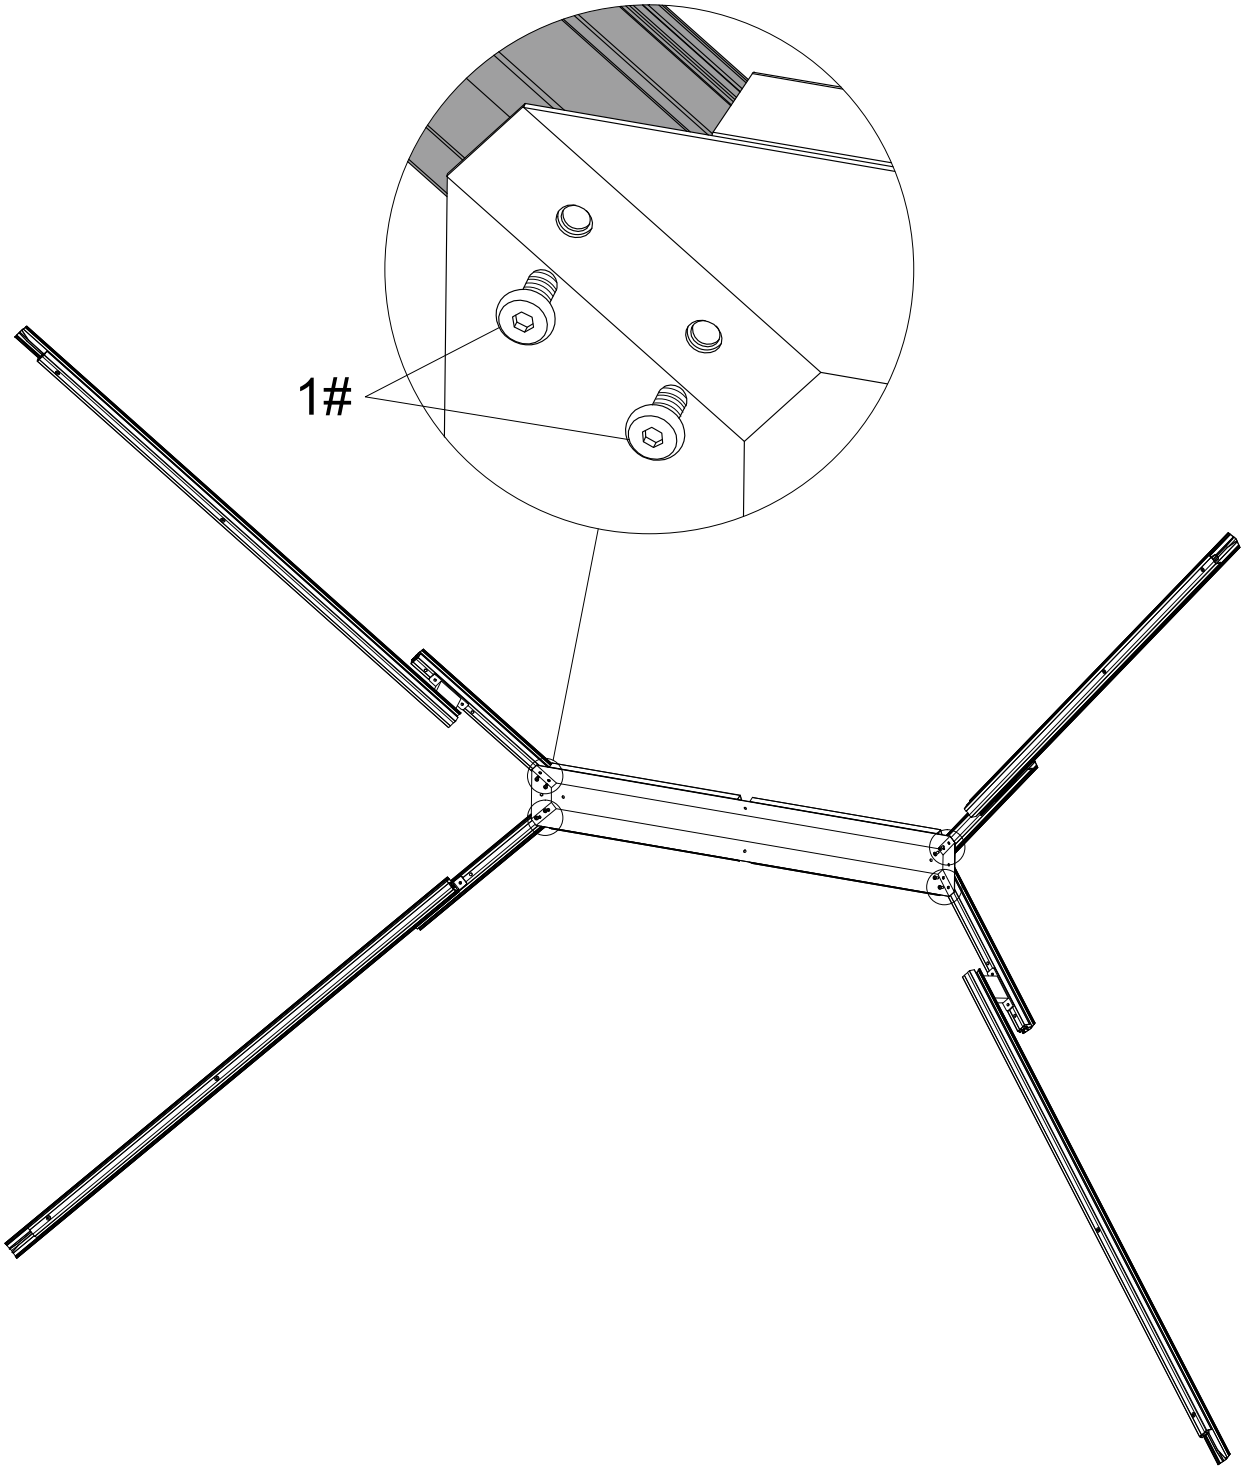



Lift 4 corner roof Tubes and inside roof connector to the top of the frame.(You may need 2 people and 2 ladders).

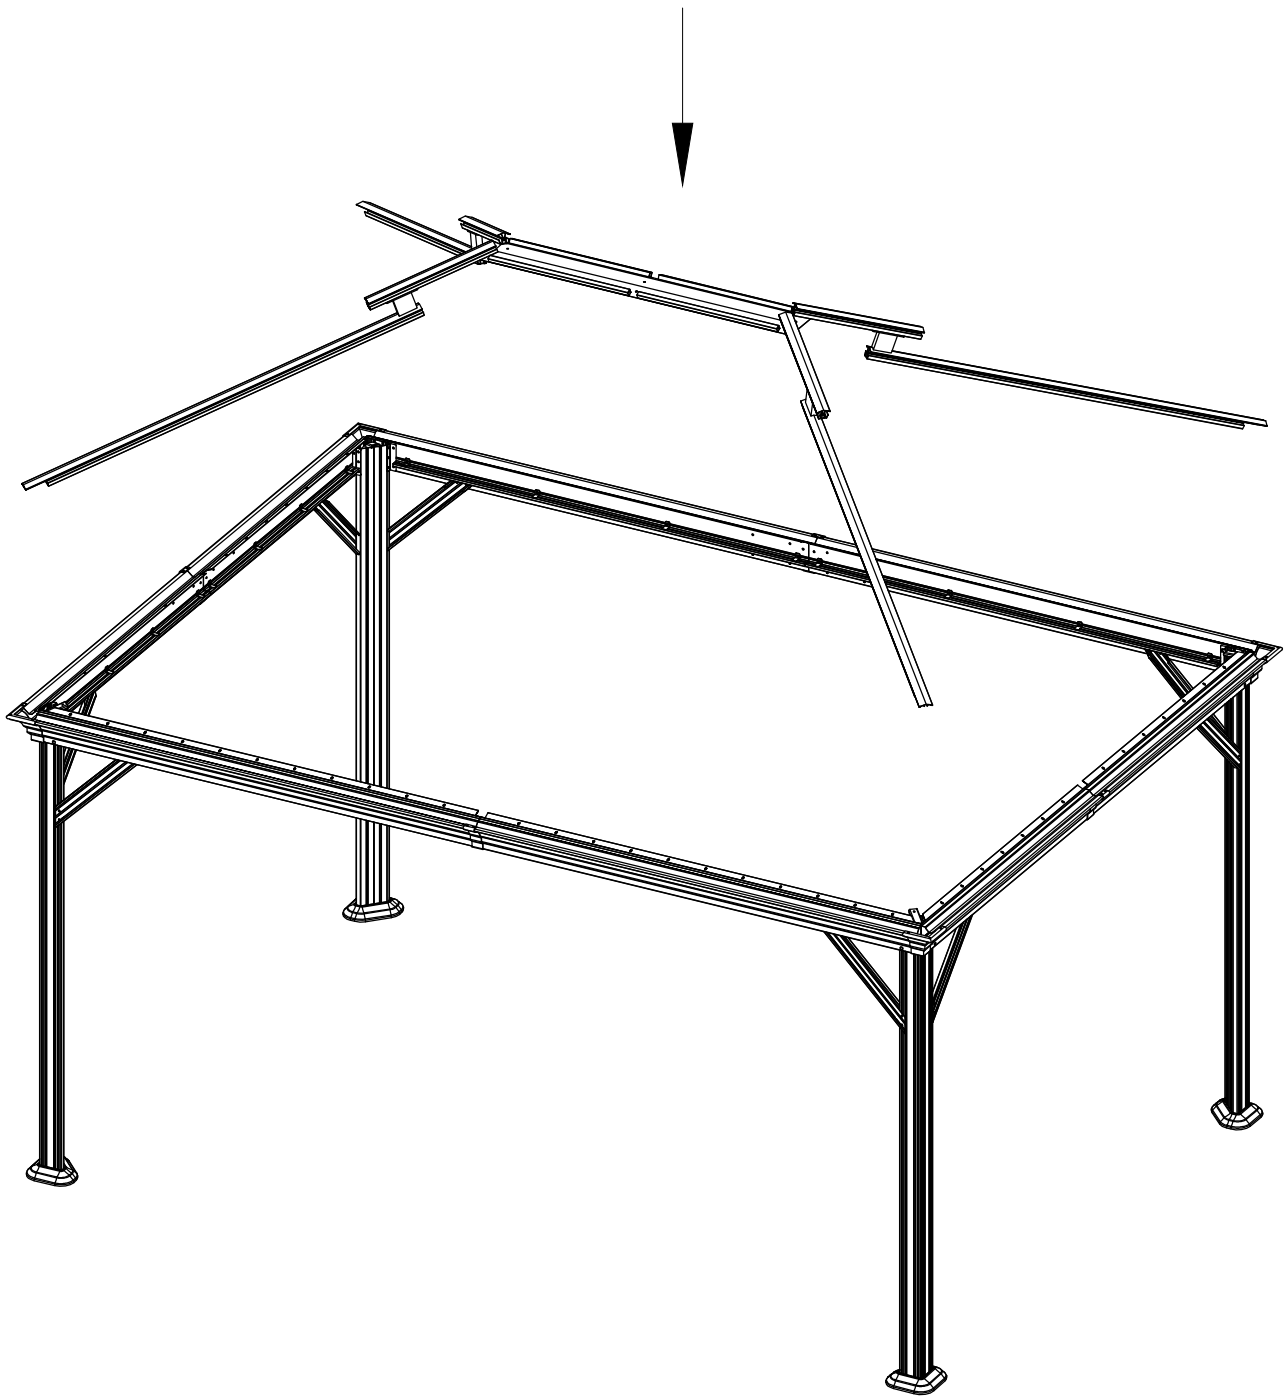




Secure with 4 Bolts #1.

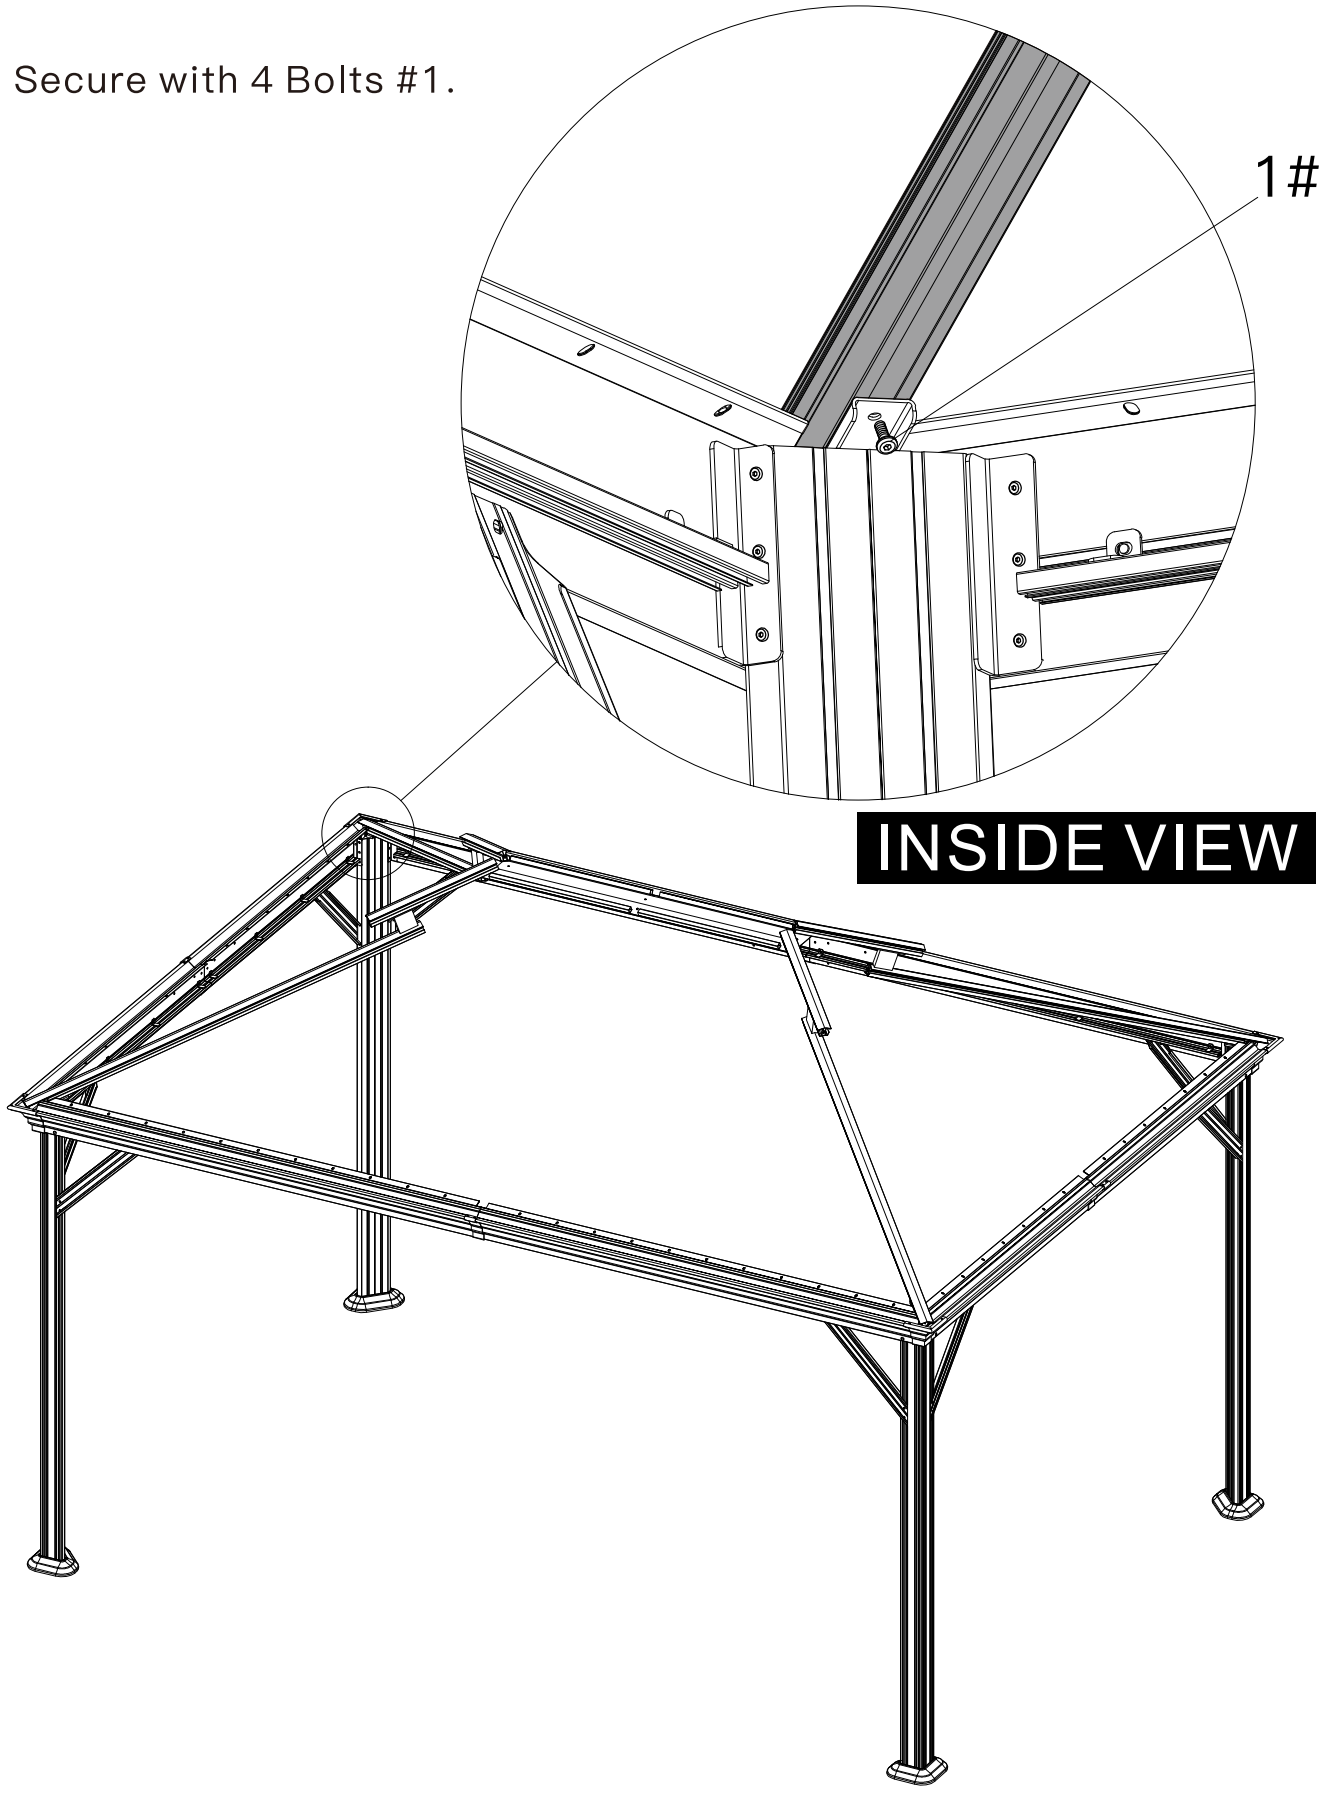





M x4

MIDDLE ROOF TUBE ASSEMBLY:

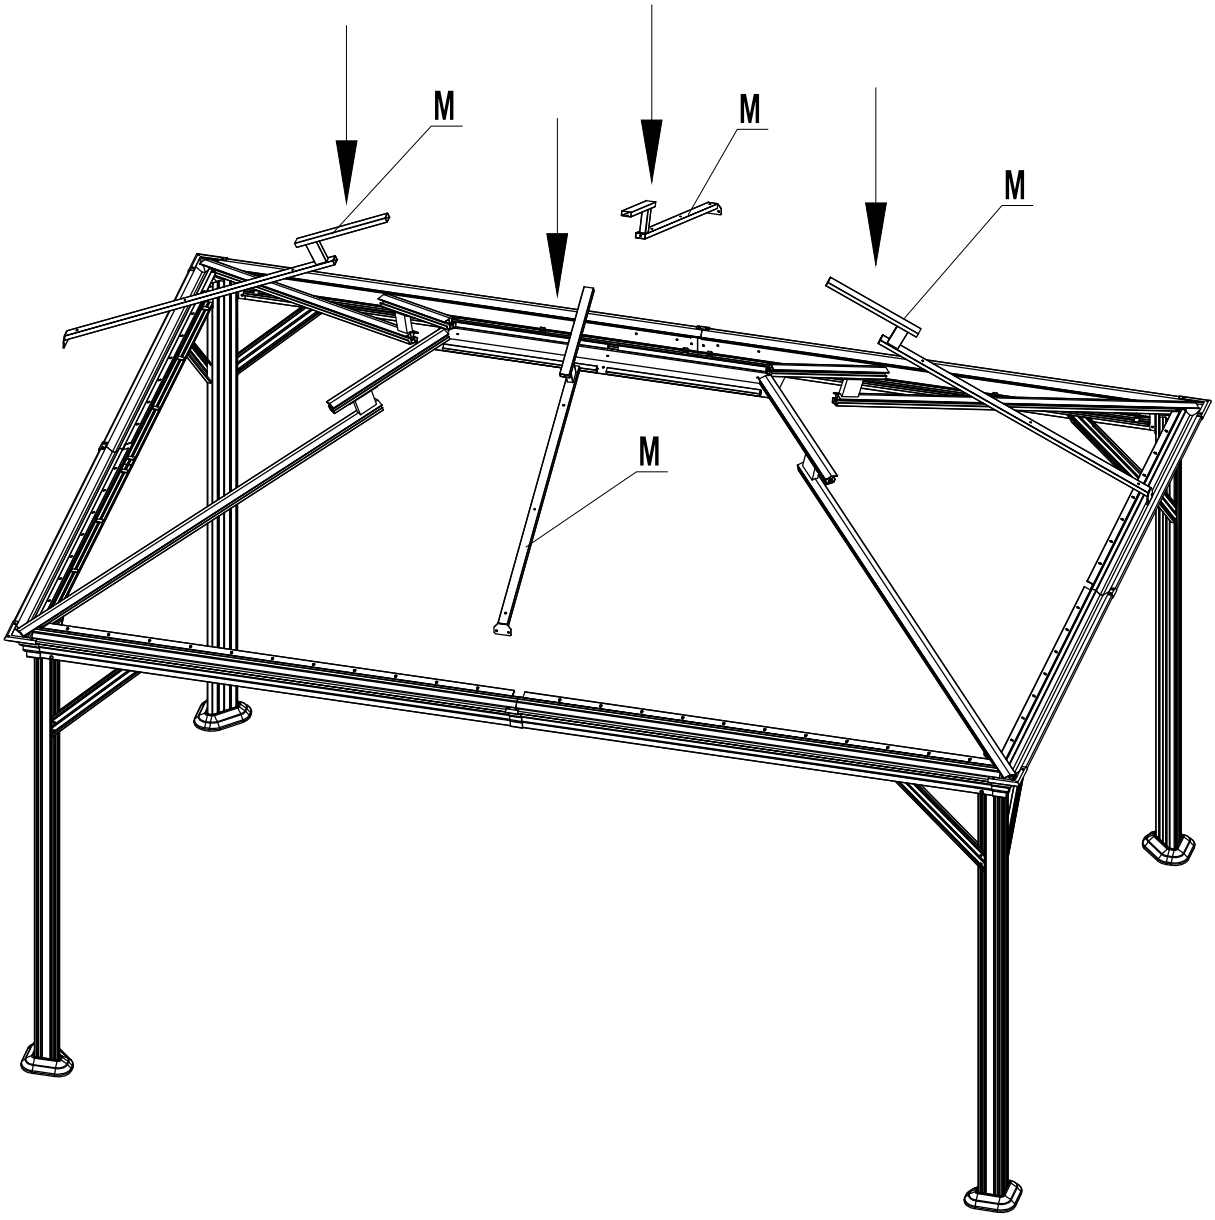





MIDDLE ROOF TUBE ASSEMBLY:

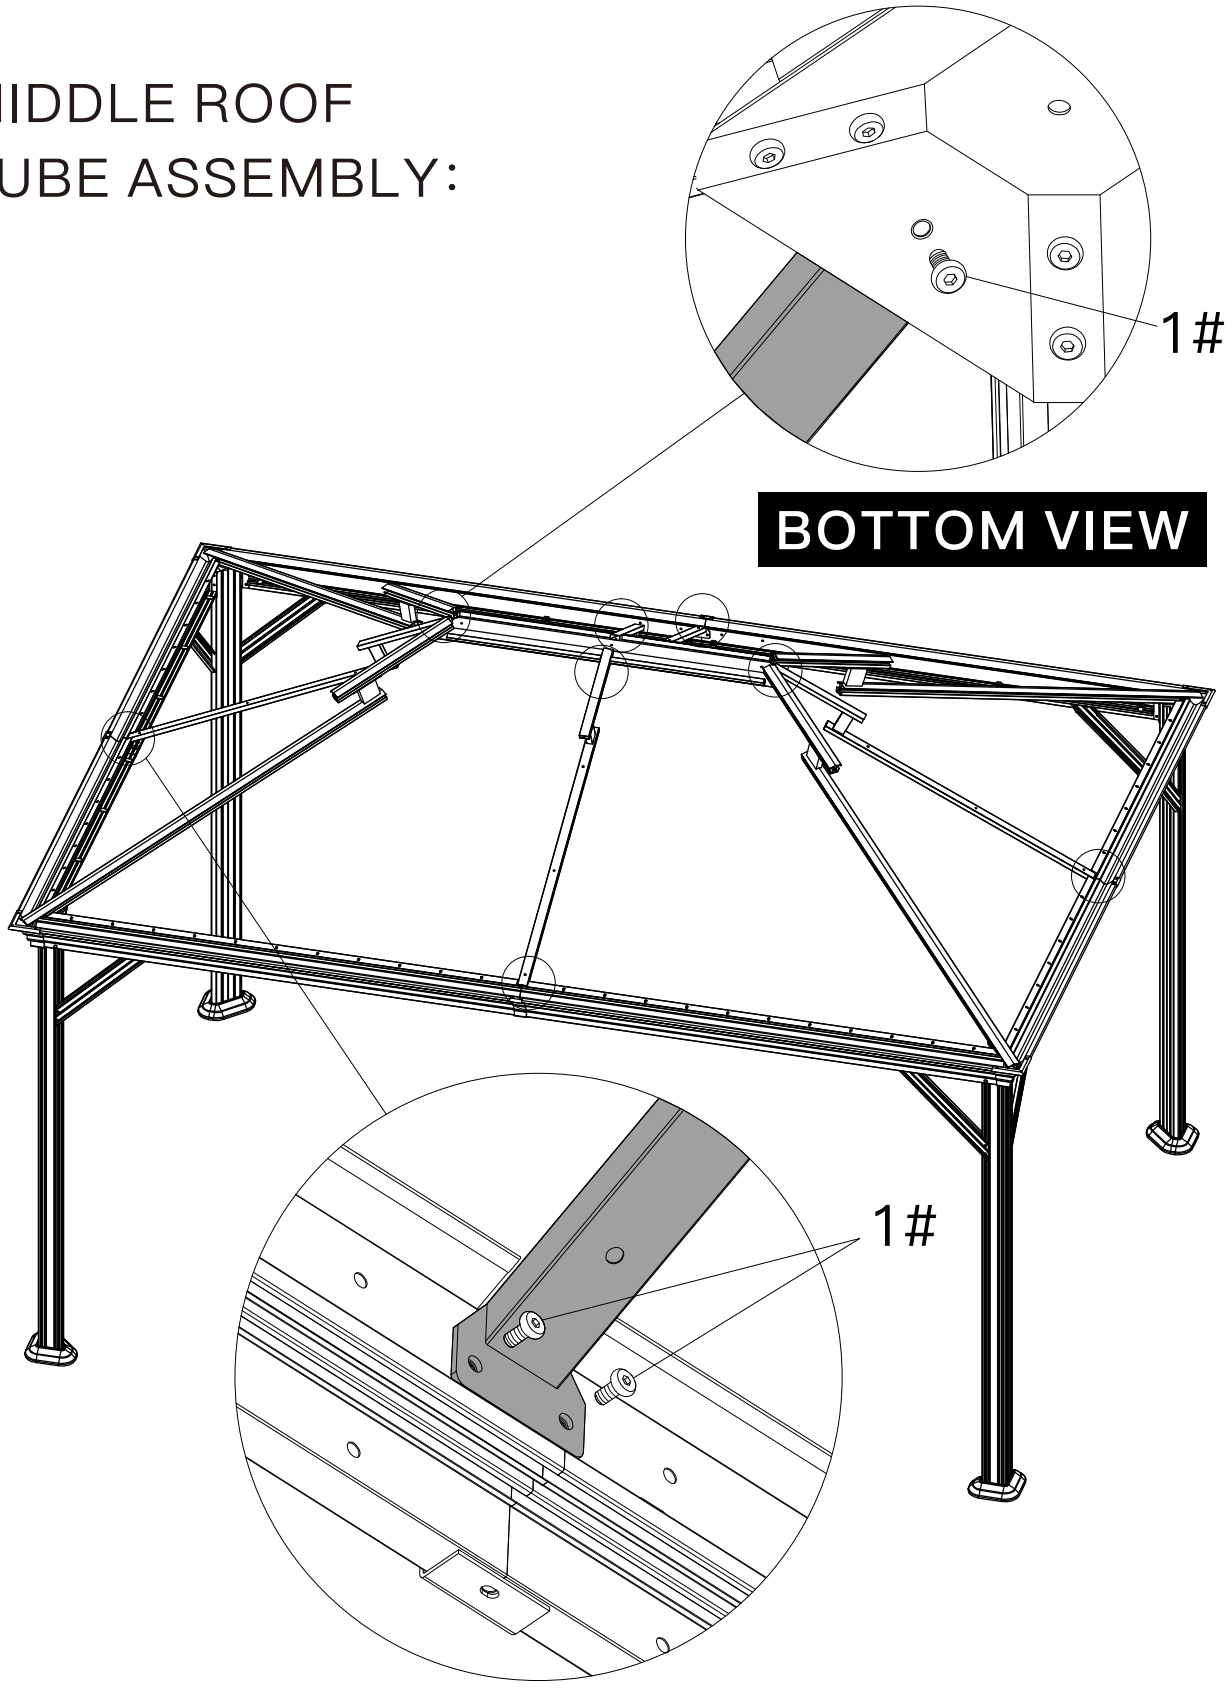


Check the the frame as pictures below shows.

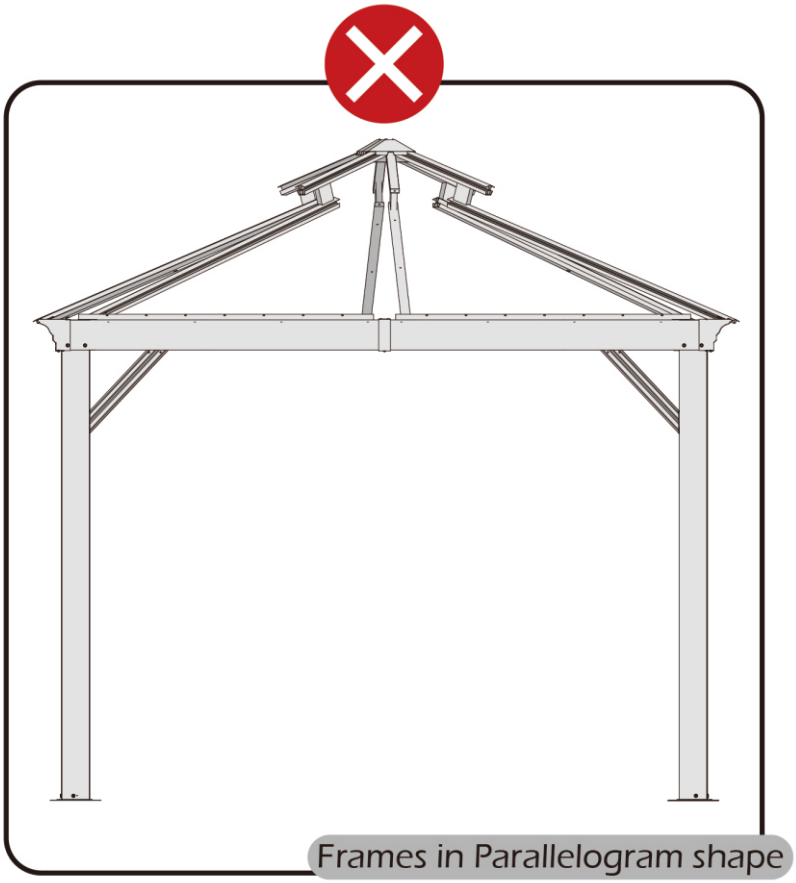


Frames in Parallelogram shape

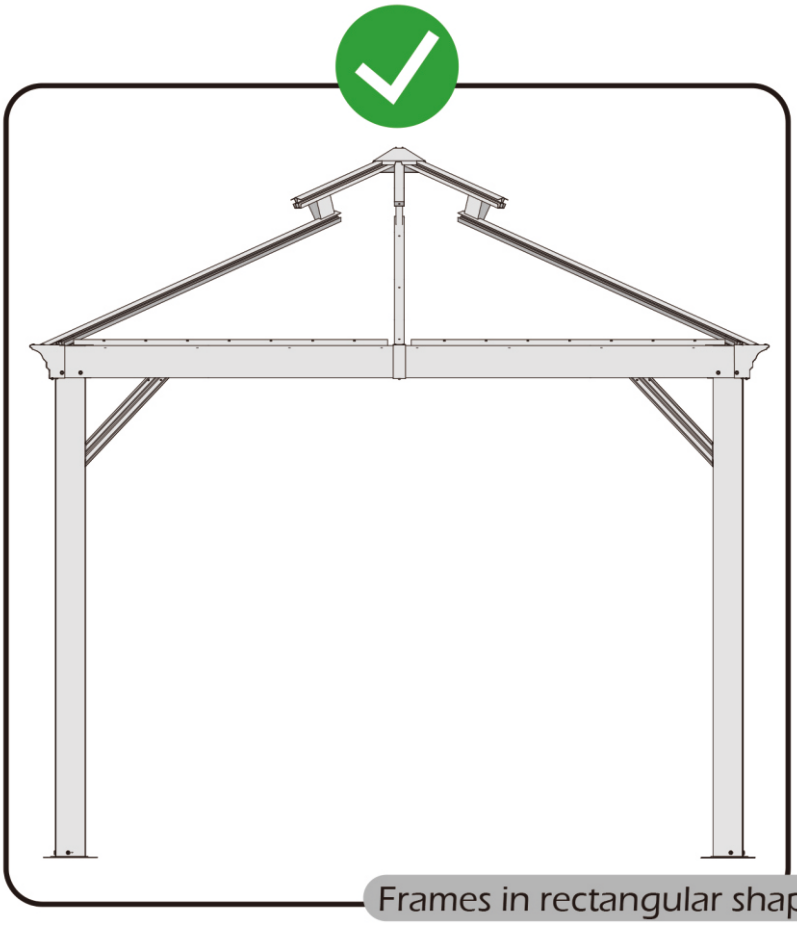


Frames in rectangular shape

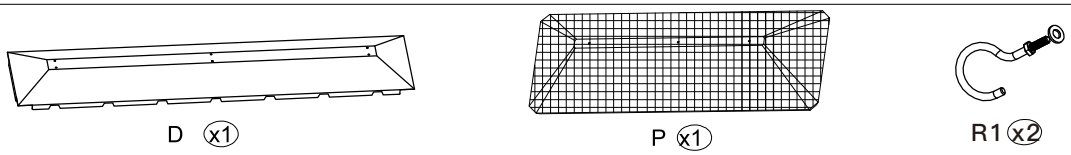



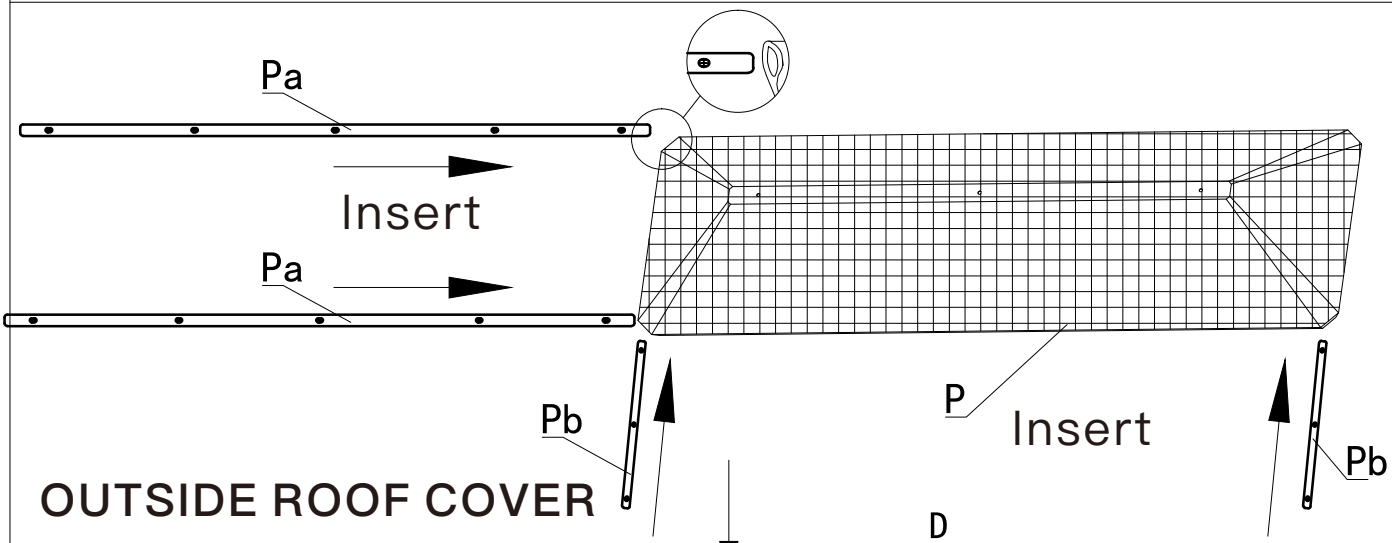



OUTSIDE ROOF COVER AND MESH ASSEMBLY :

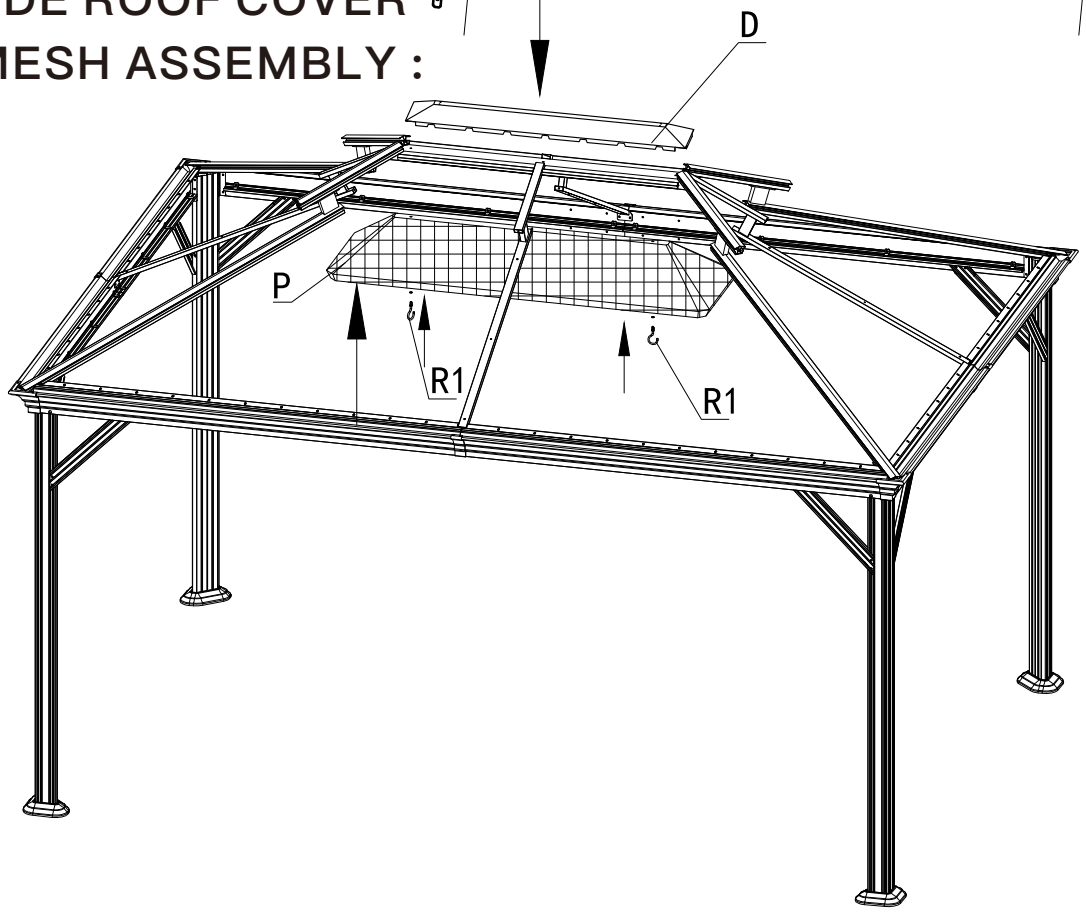



(1) Insert the Plastic Bar #Pa and #Pb to the small mesh #P.
(2) Place the Outside Roof Cover #D on the inside Roof Cover.
(3) Align the holes and use 2 Hooks #R1 to secure small mesh #P to the inside Roof Cover (From Bottom to Top).

BOTTOM VIEW

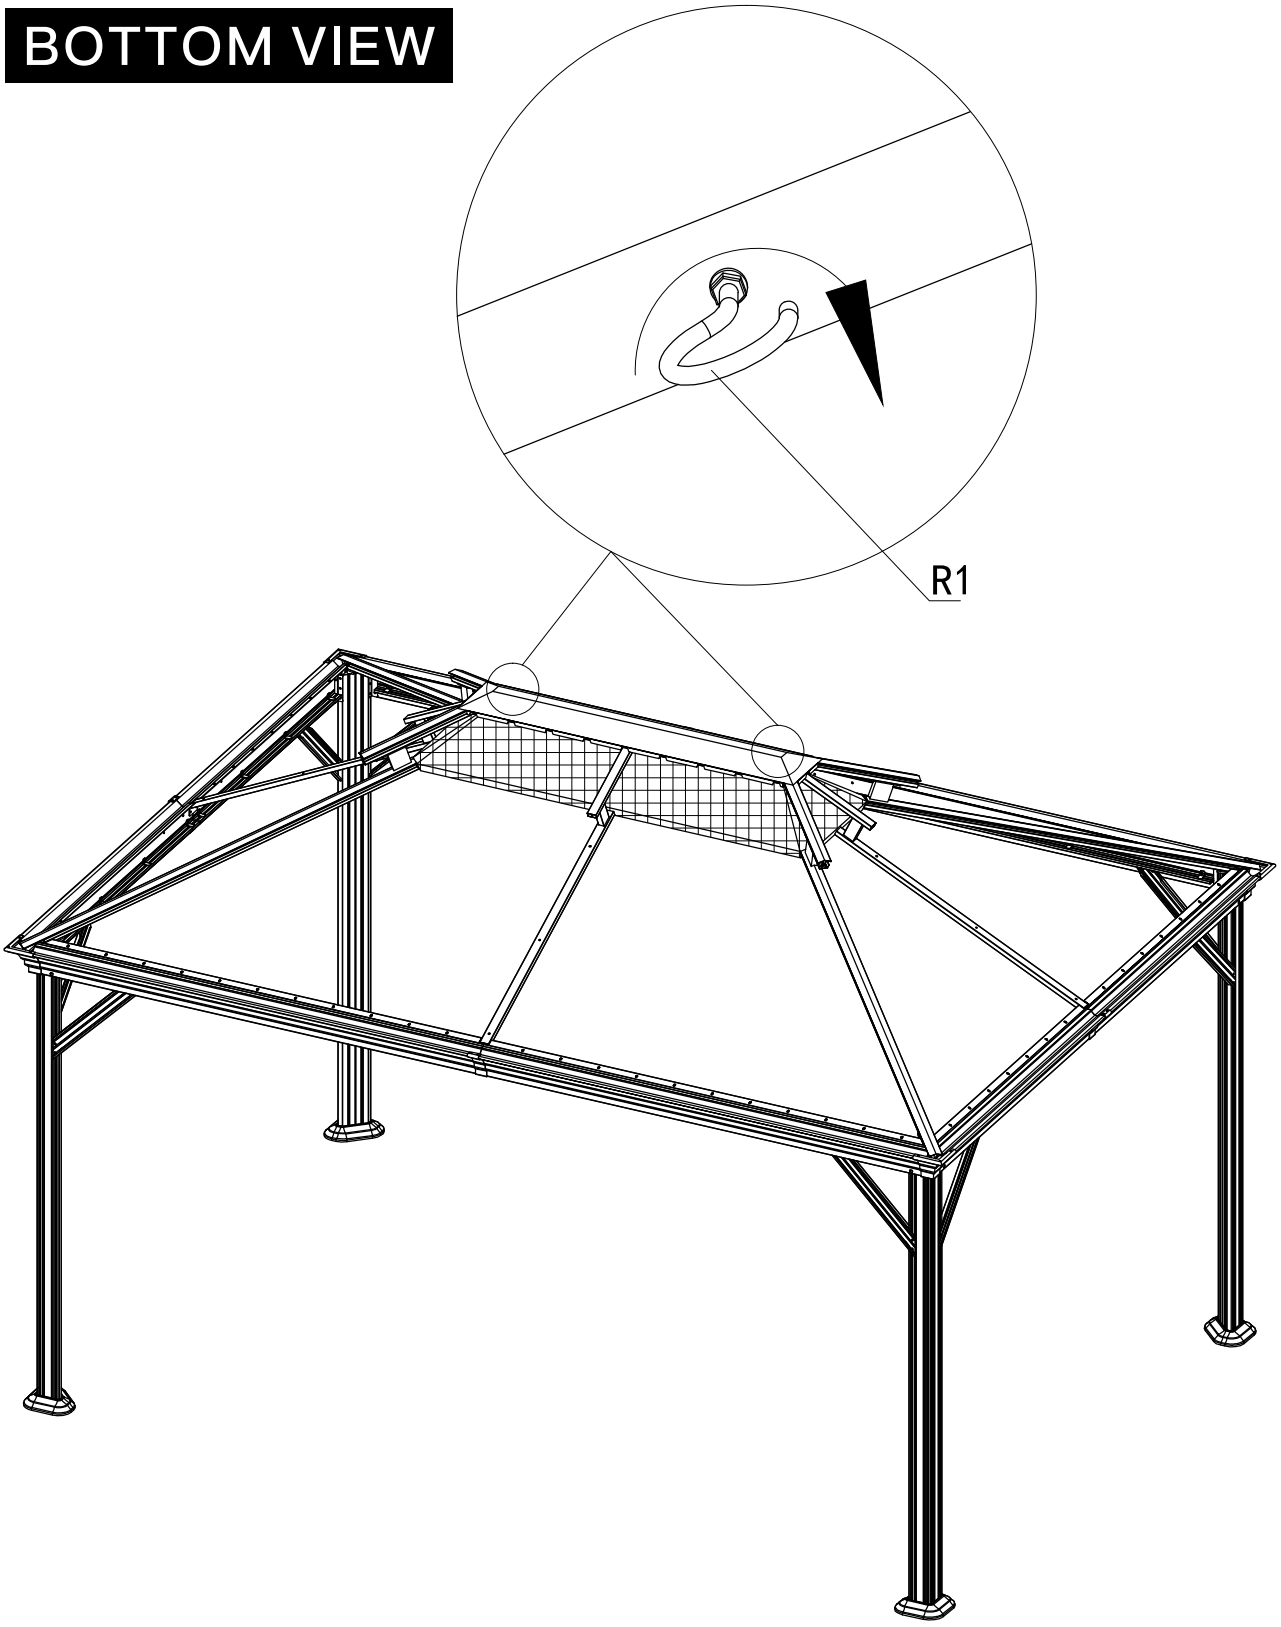

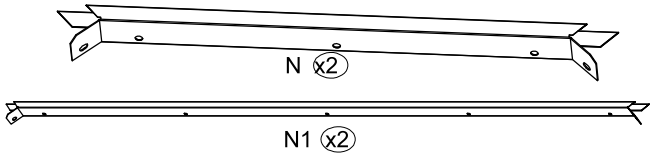




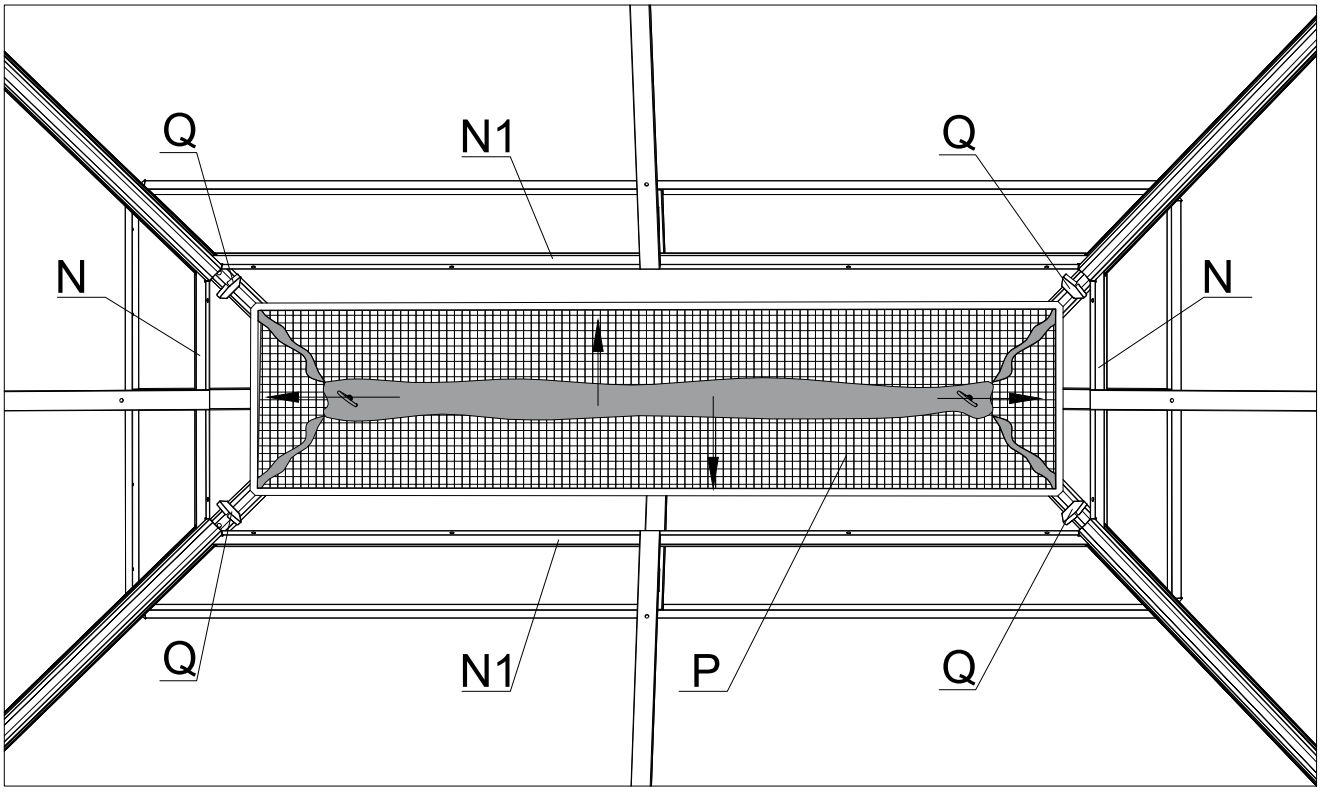


BOTTOM VIEW


EXTEND THE
SMALL MESH

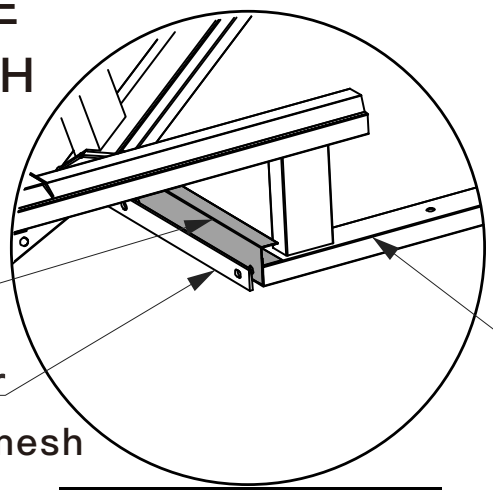


INSIDE VIEW

Please do not pull plastic bar out when installing it with #N&N1 to the middle roof tube.







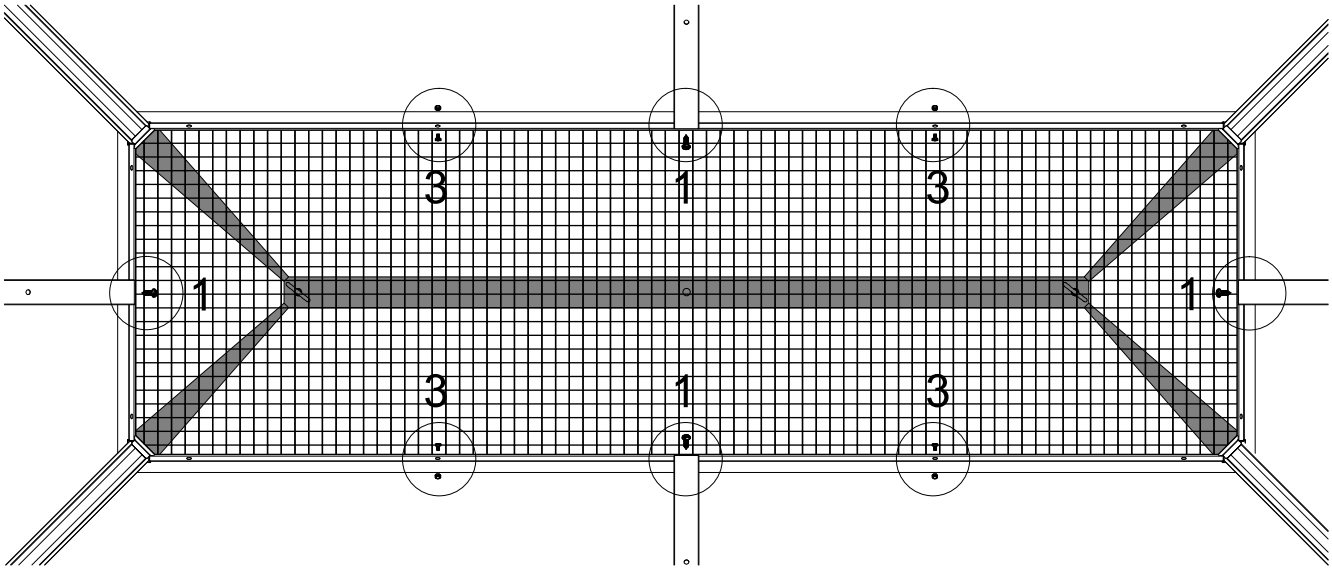


BOTTOM VIEW

(1) Extend the small mesh, then use Screw #12 to secure the plastic bar (inside the small mesh) and the finishing bar to the middle roof tube.
(2) Use 4 bolts and nuts #11 to secure the small mesh, plastic bar to finishing bar.

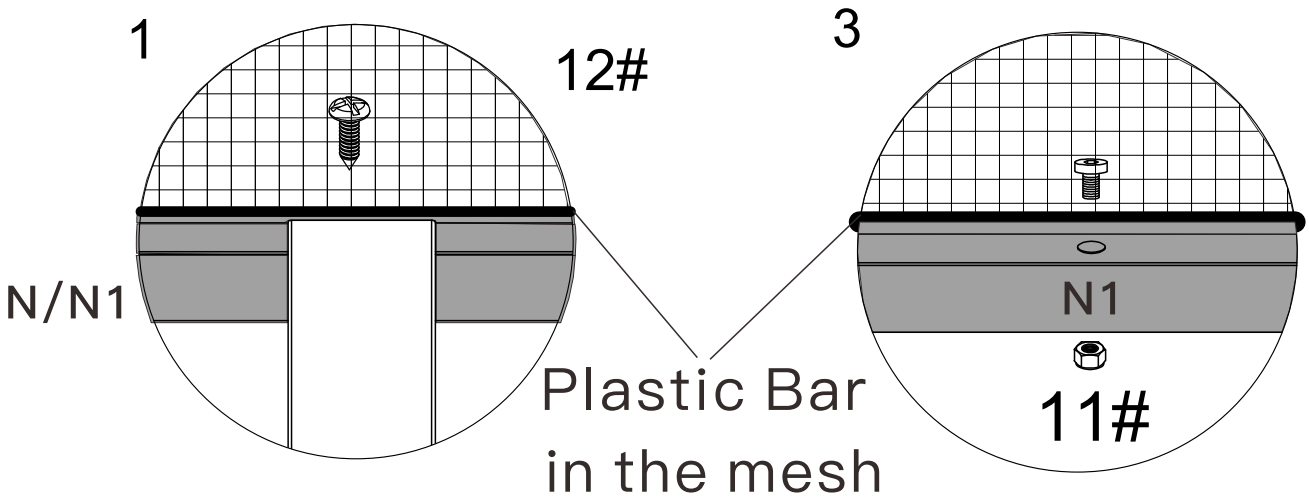





1#
x4




11#
x8



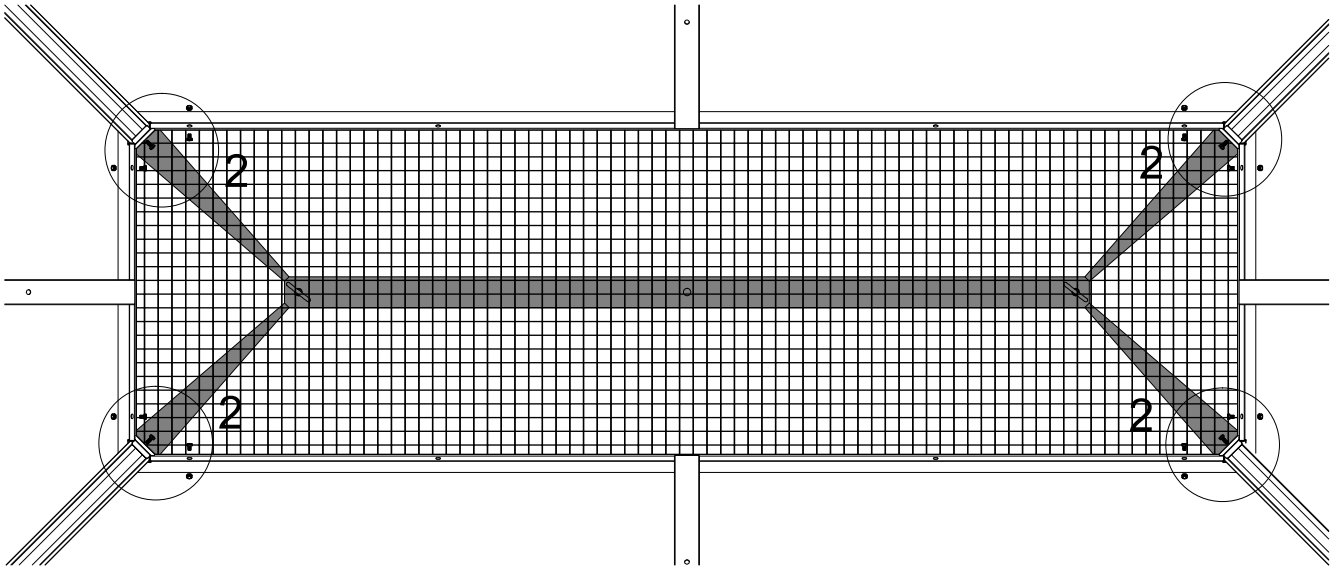


BOTTOM VIEW

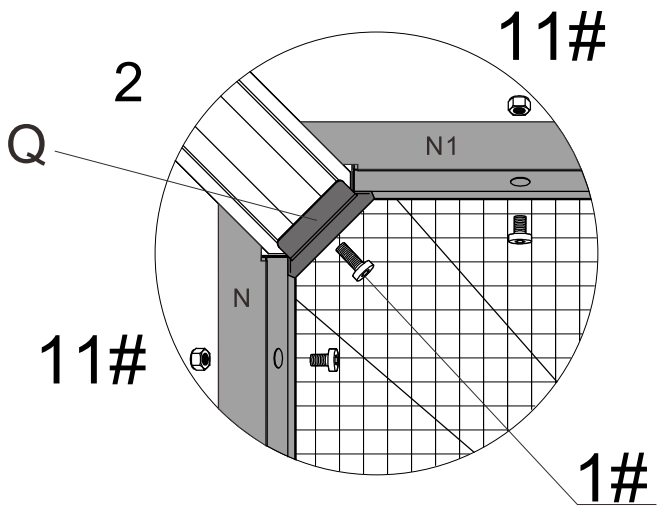



(1)Use bolt #1 to secure the small mesh and finishing end #Q to the corner roof tube.
(2)Use 2 bolts and nuts #11 to secure the small mesh, plastic bar to finishing bar.
Repeat above procedures to assemble the other 3 sides.


Plastic Bar in the mesh

#N/N1

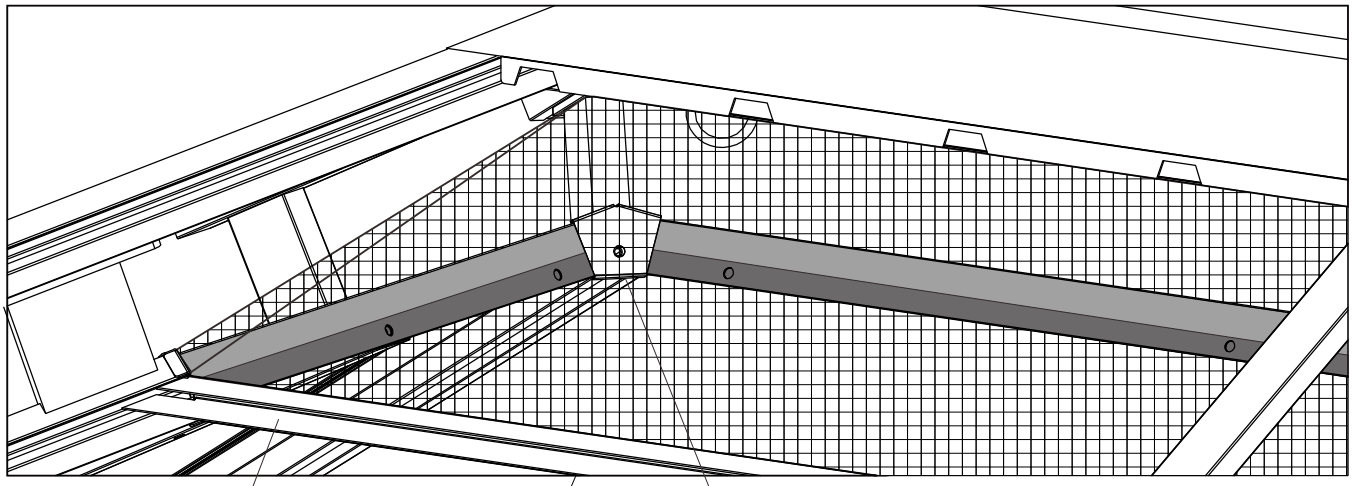

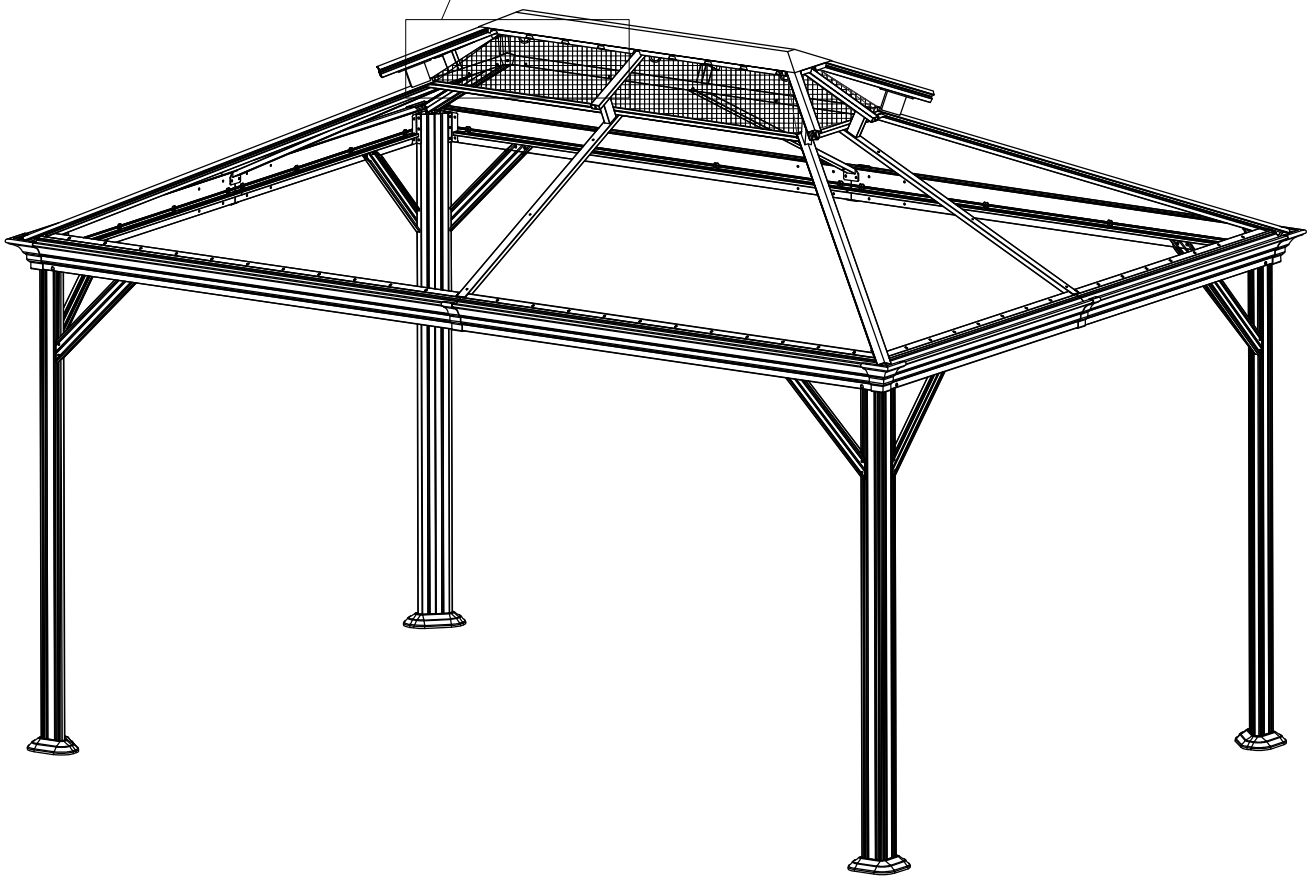


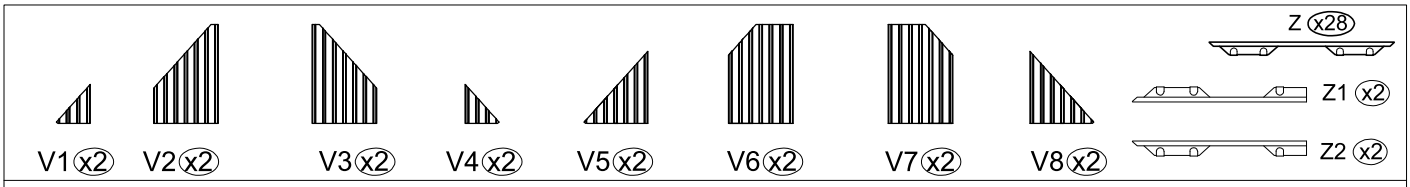


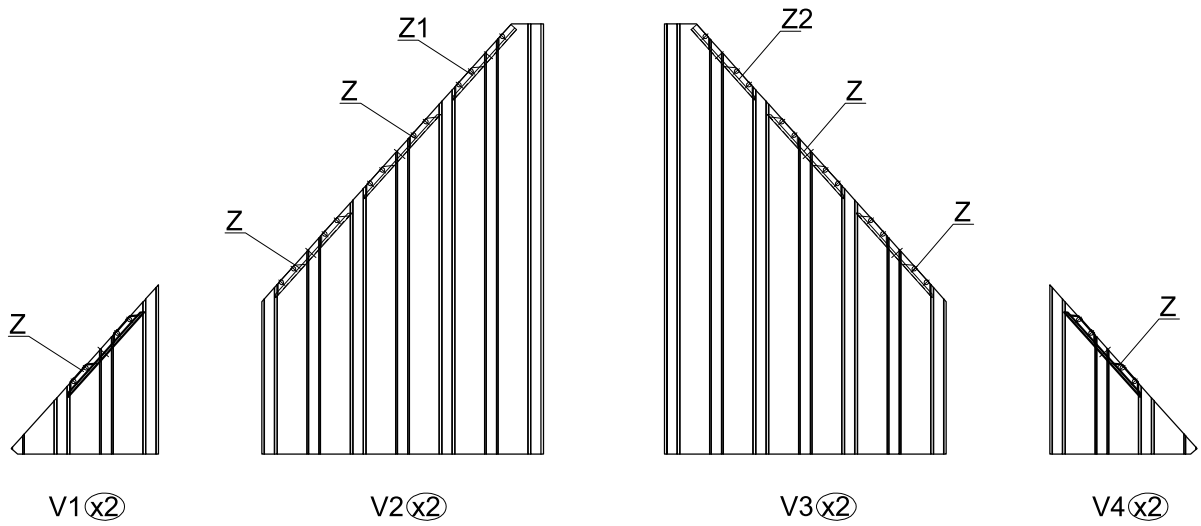


Remove the protective film of the panels before installing the roof panels.


Please install Clips in strict accordance with the instructions.

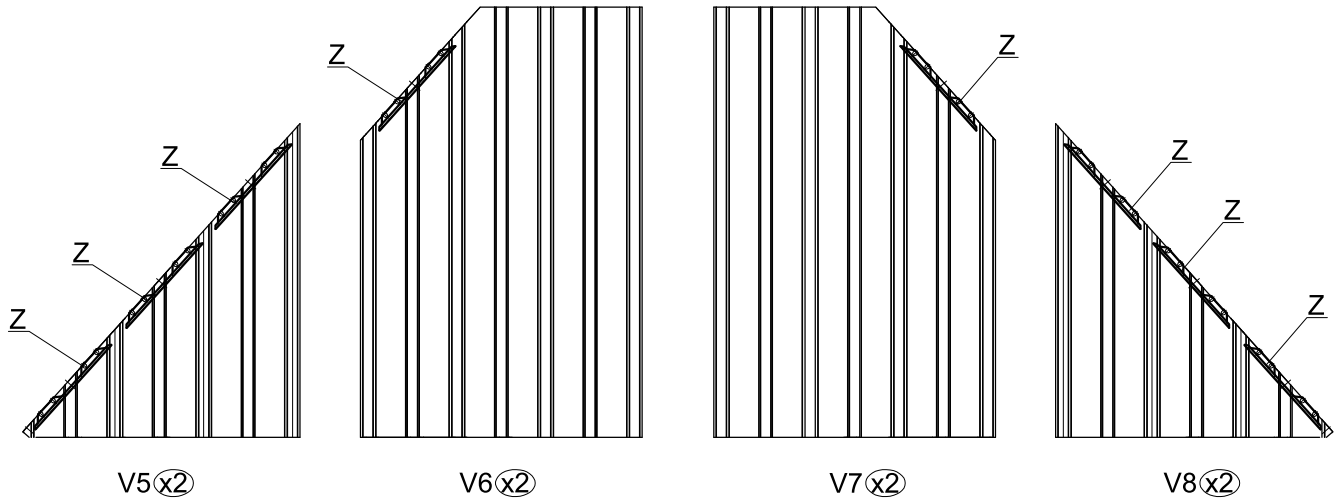

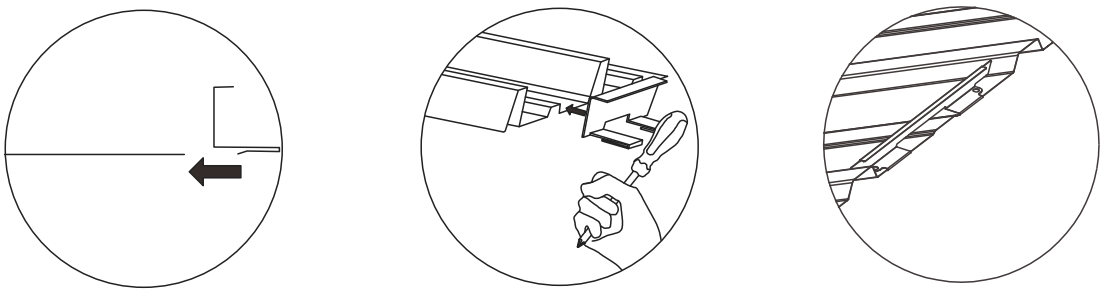


Attach Part #Z,#Z1,#Z2 by lightly tapping with screwdriver.



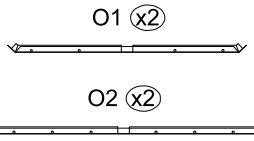






SMALL ROOF PANEL AND FINISHING BAR ASSEMBLY:

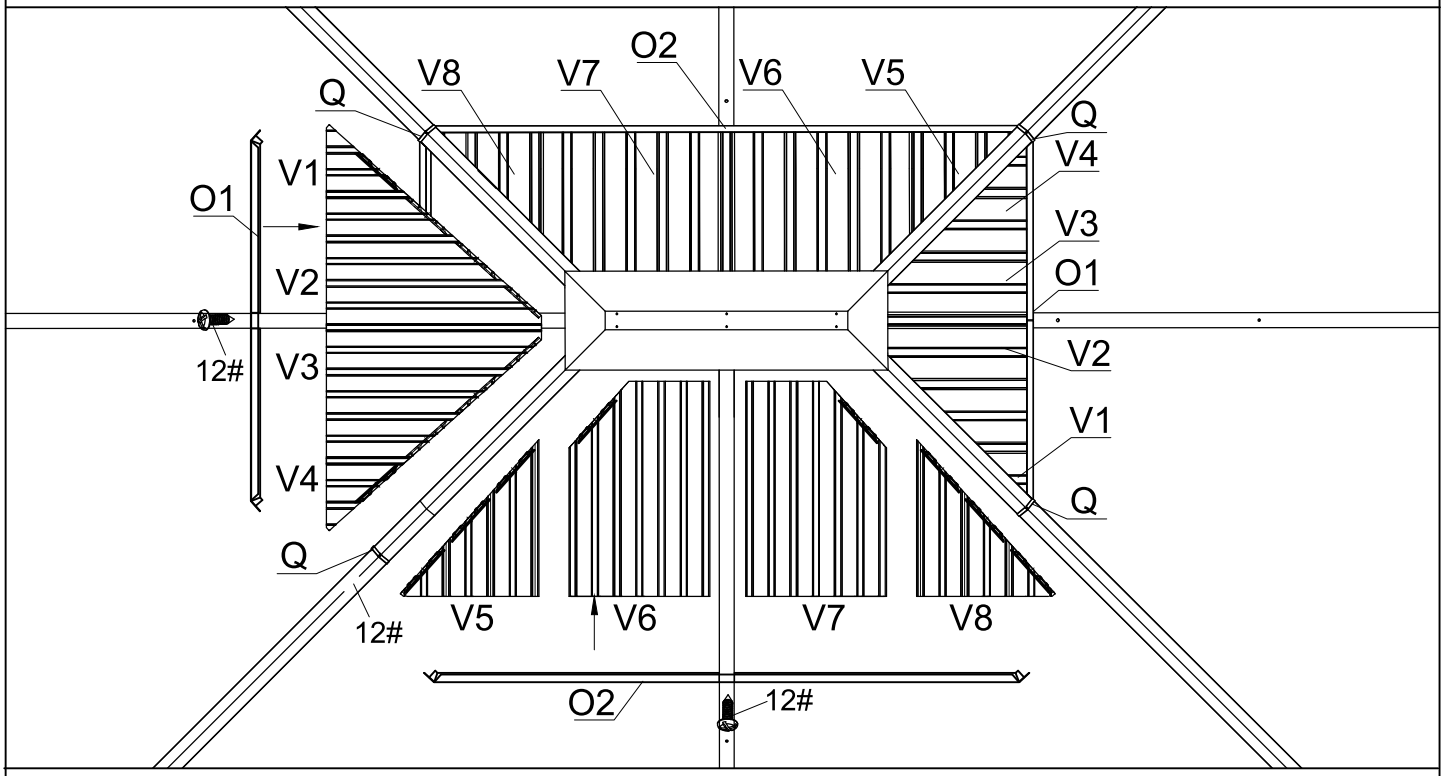

If you can't install #V6 & V7, push the Outside Roof Cover up and try to insert them again.

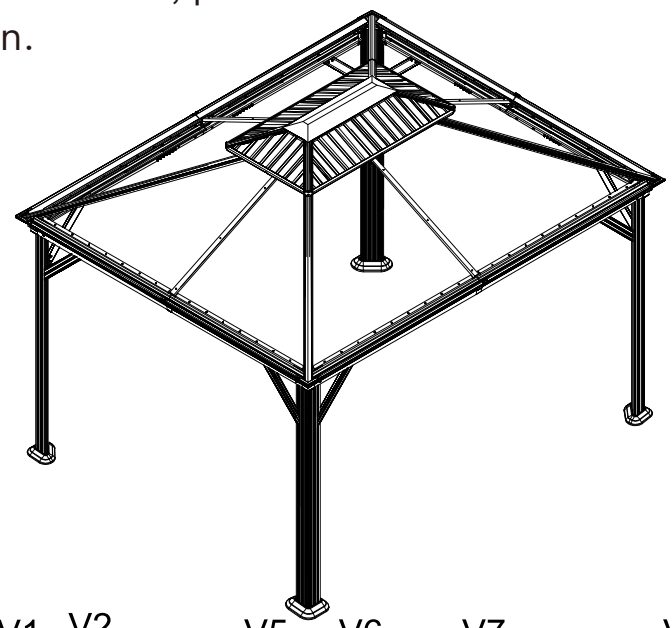


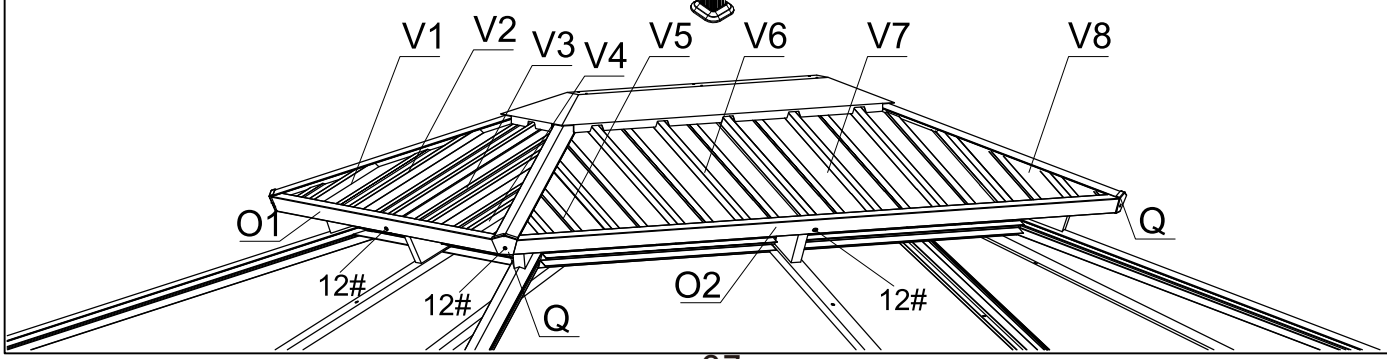

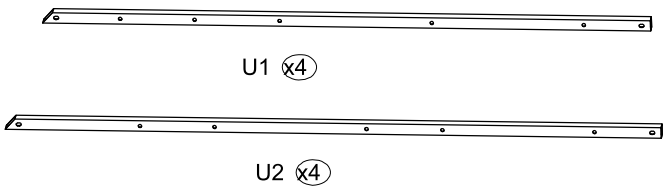



U3 x4



U4 x4



1#
x24


SOLIDIFYING BAR ASSEMBLY:

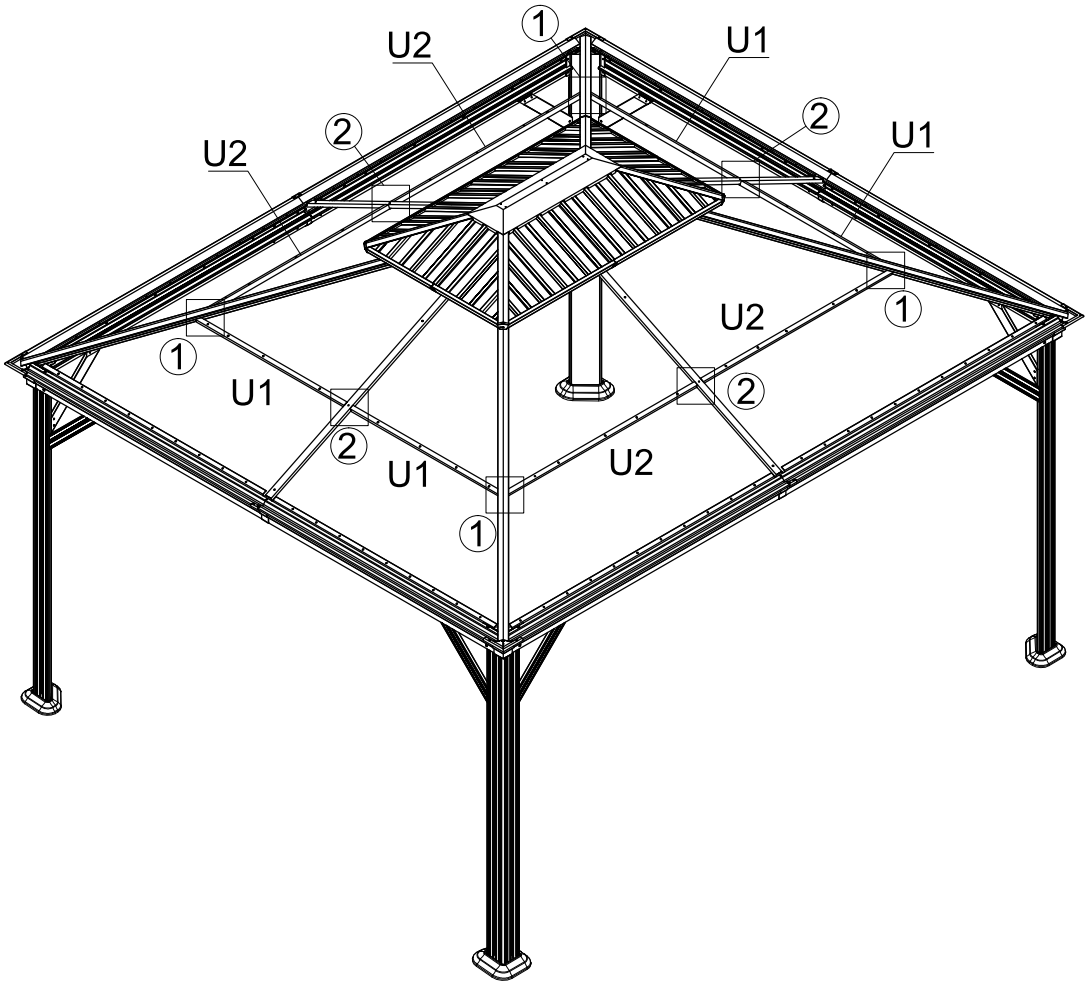


Inside View

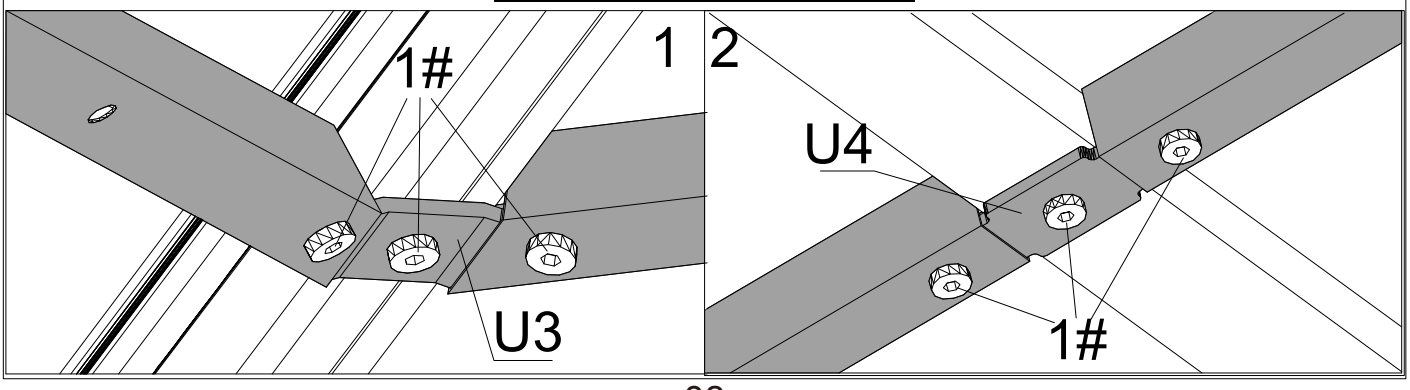


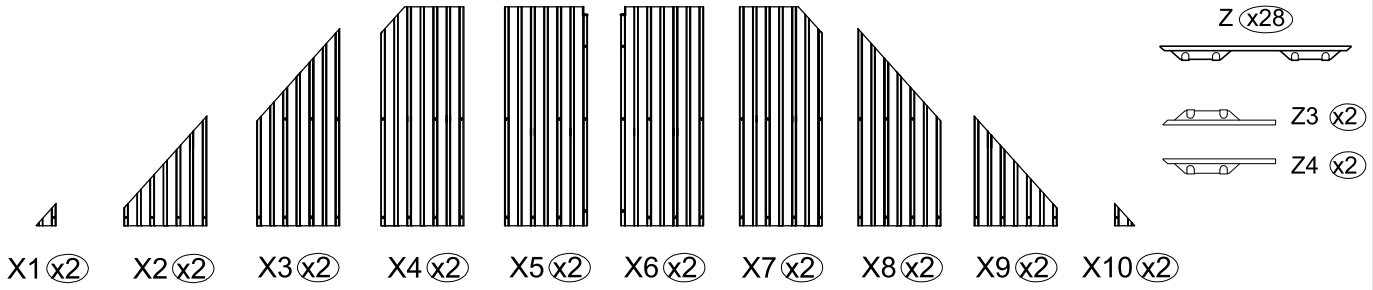


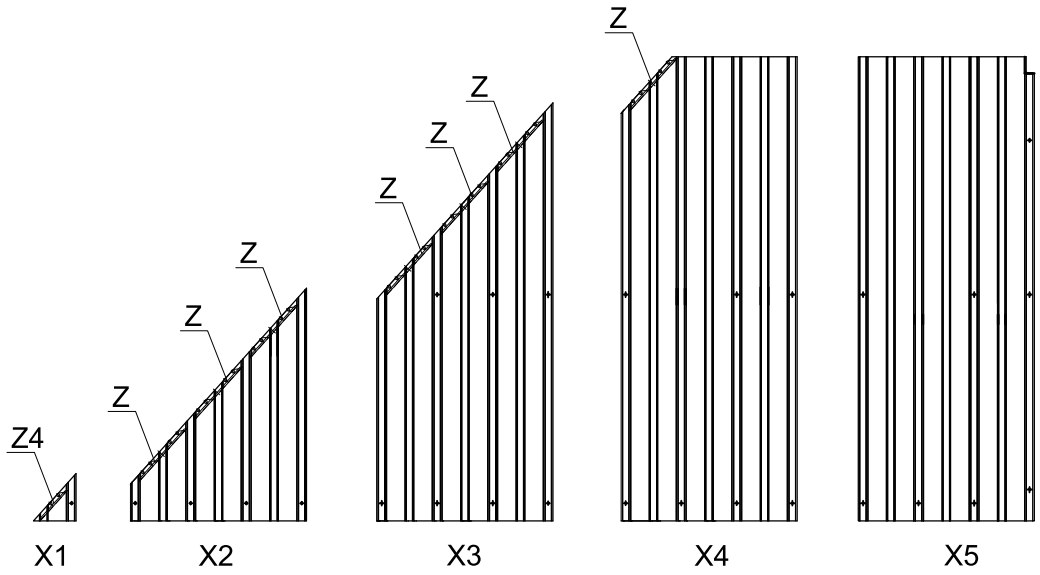

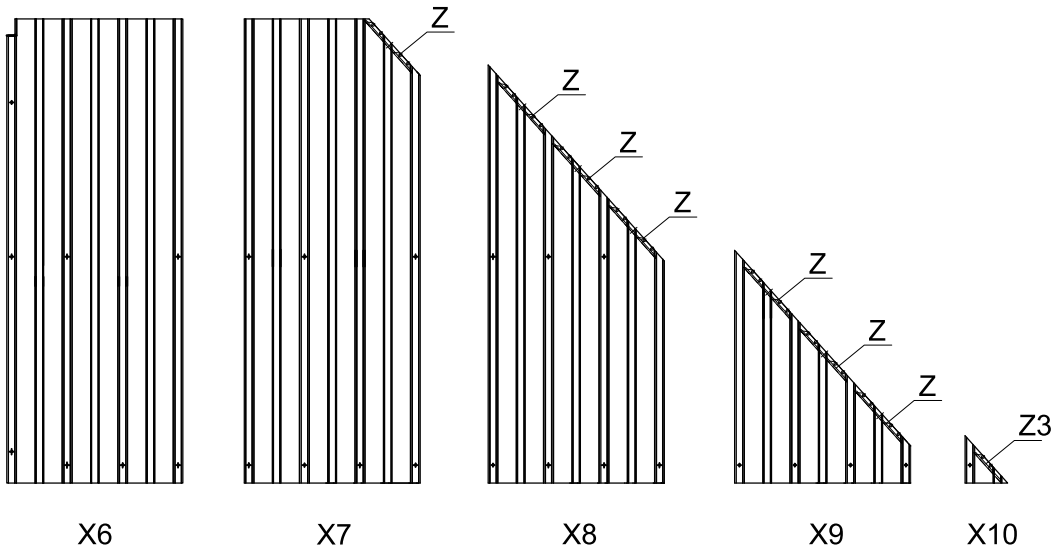


Remove the protective film of the panels before installing the roof panels.
Please install Plastic Clips in strict accordance with the instructions.

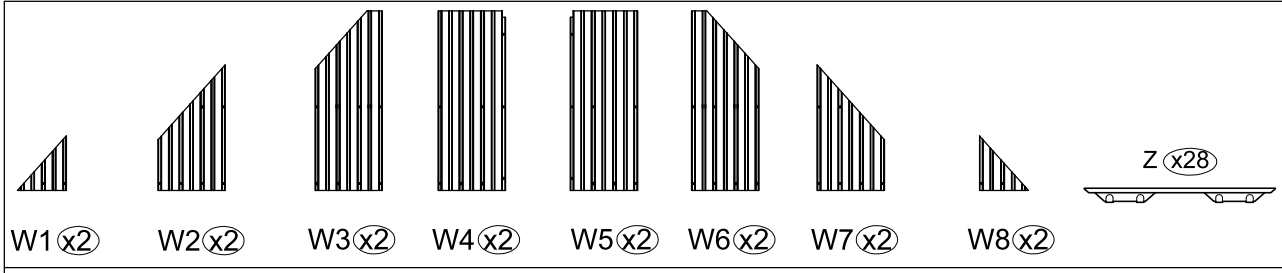

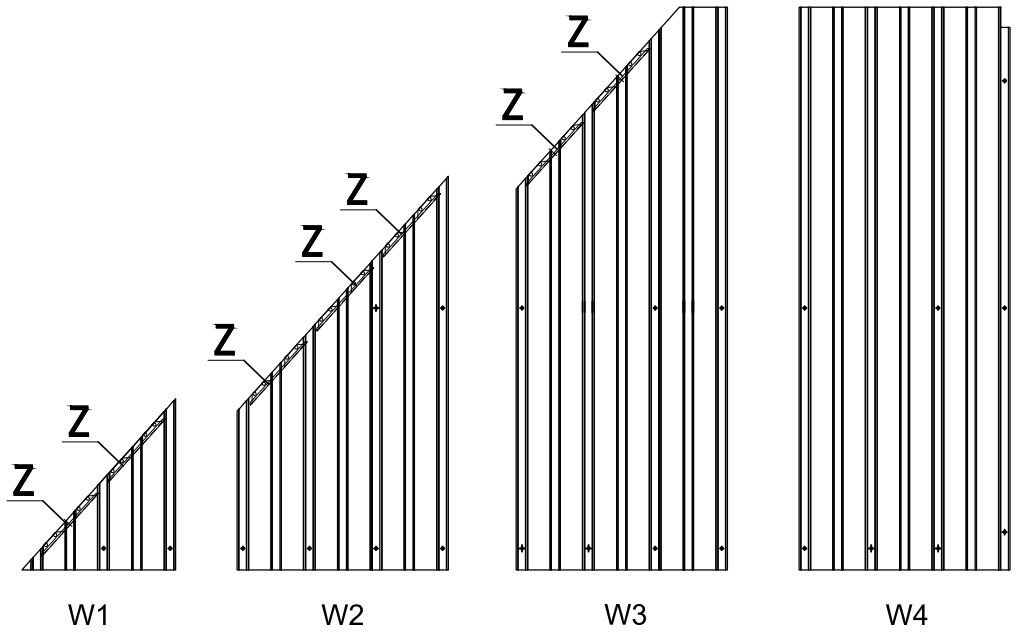


Remove the protective film of the panels before installing the roof panels.
Please install Plastic Clips in strict accordance with the instructions.

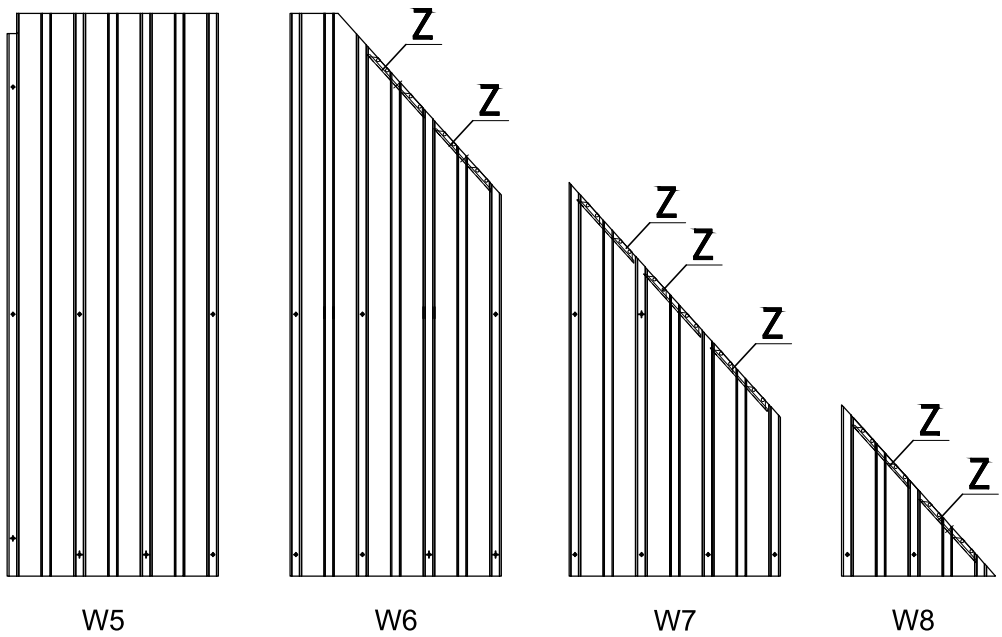


Install the Middle Panels(#W4,W5,X5,X6)first, then the small panels on the edge.


Remove the protective film of the panels before installing the roof panels.

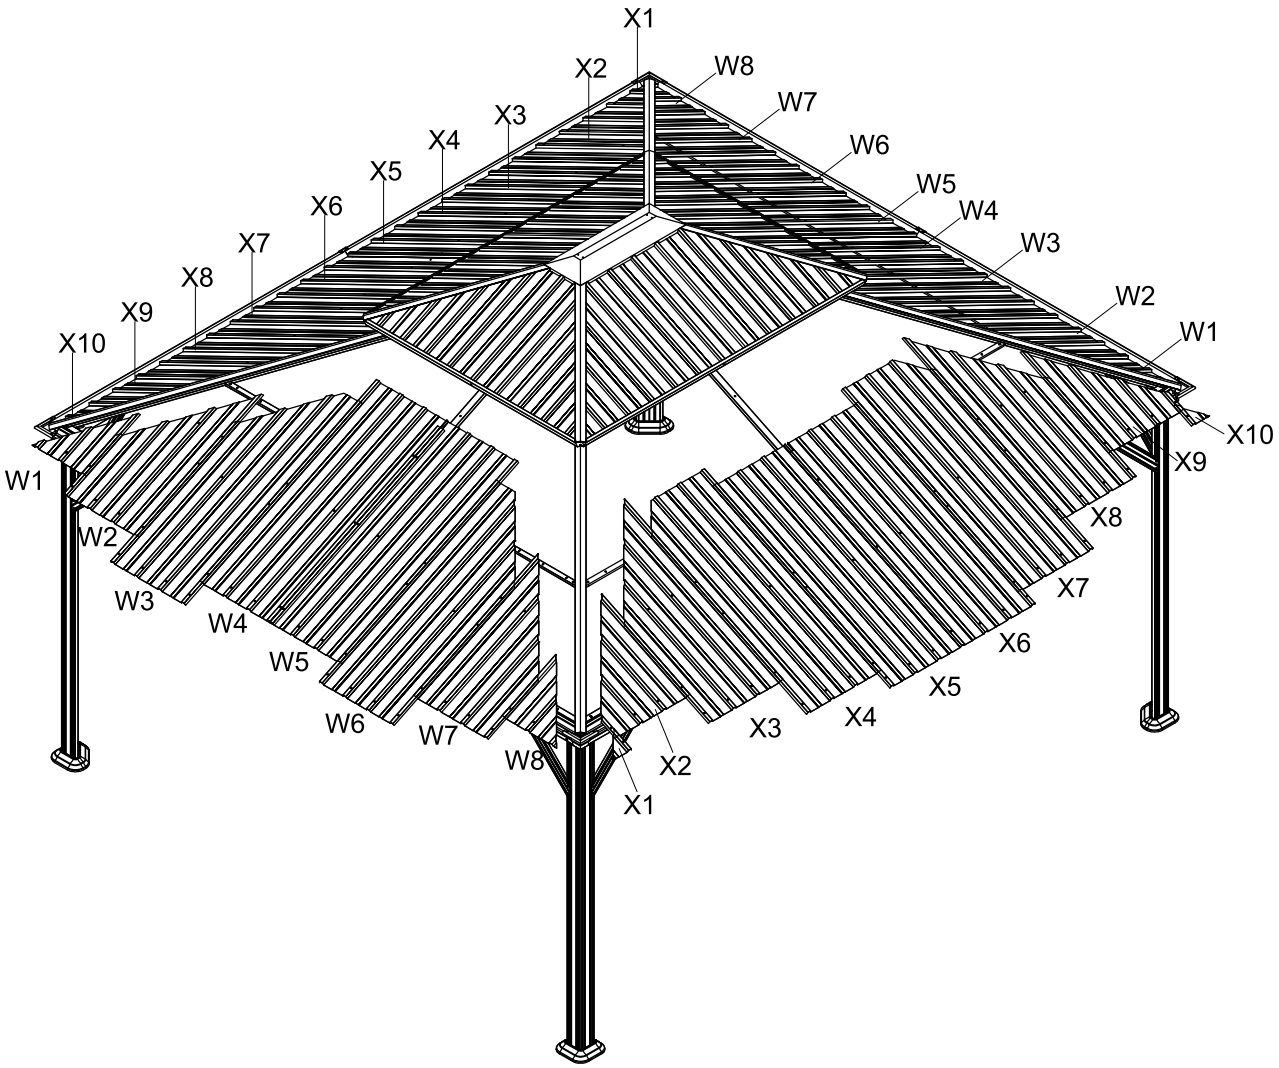



The Rubber Spacer #S should be assembled when installing the roof panels(please see the next page).

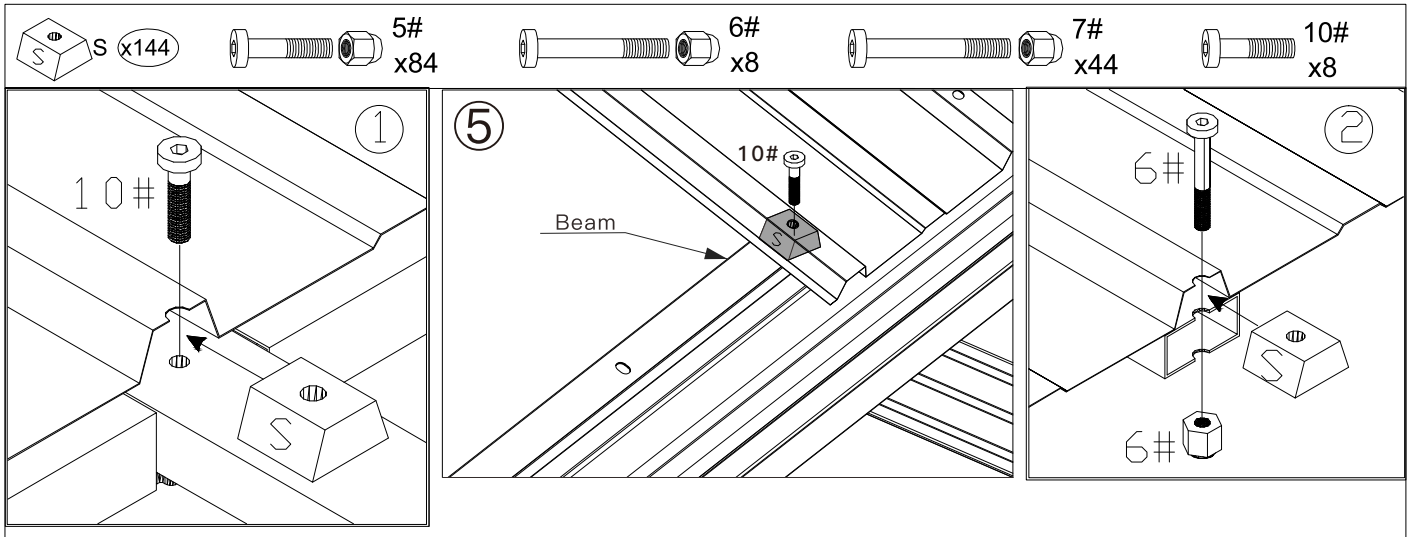



The Rubber Spacer #S should be assembled when installing the roof panels.

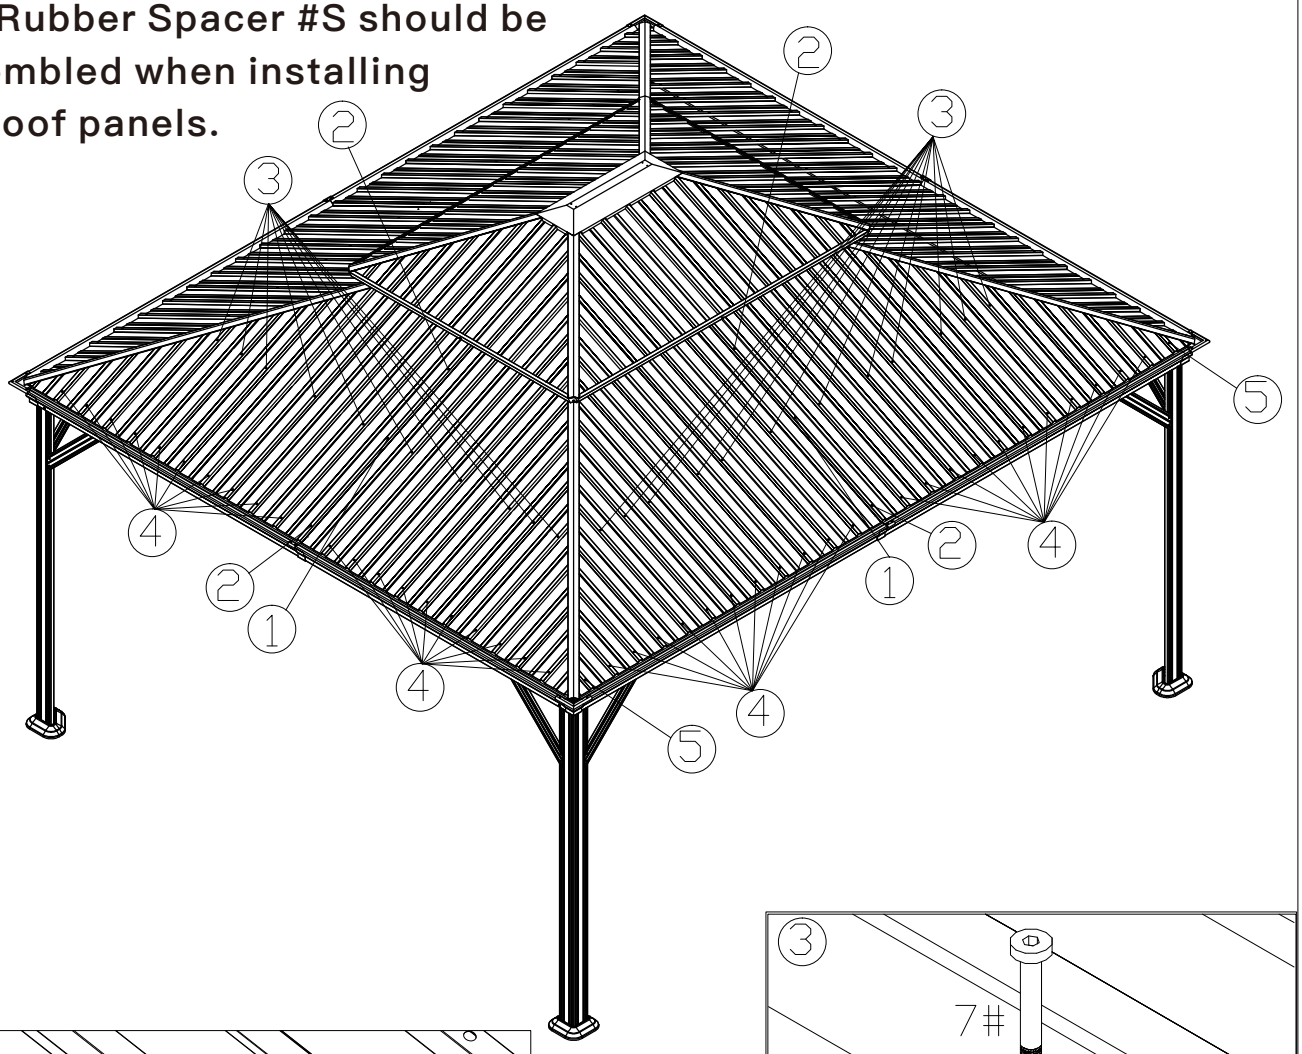


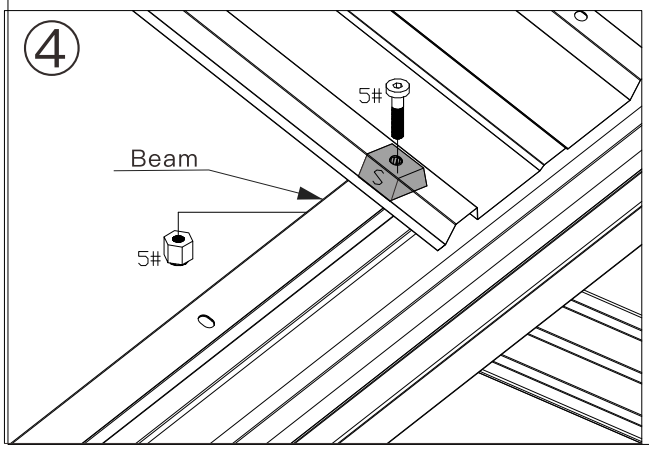

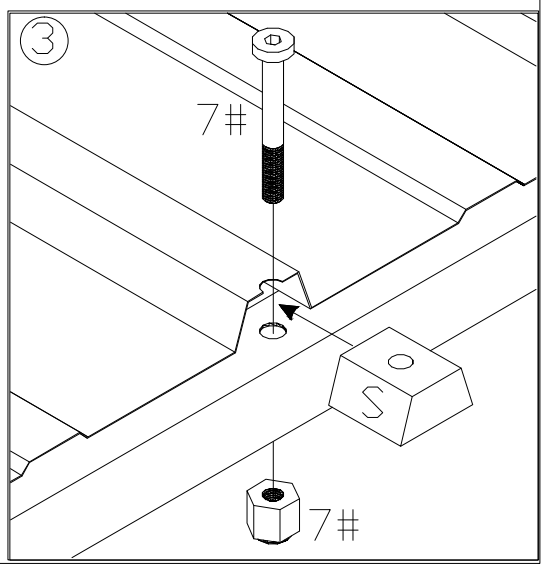







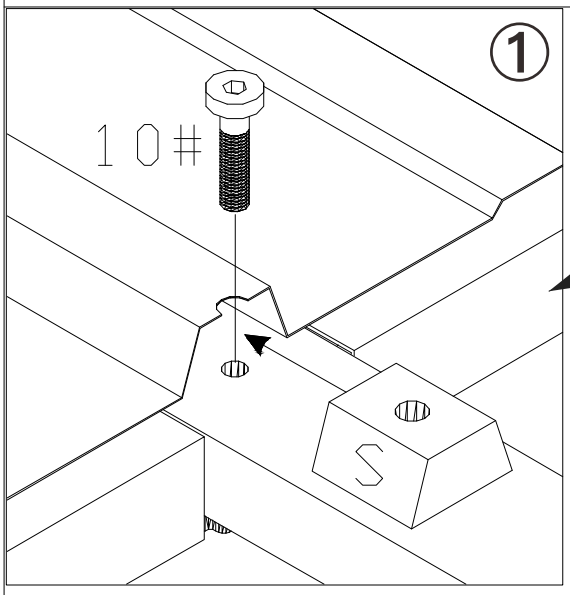



Solidifying Bar


Middle Roof Tube

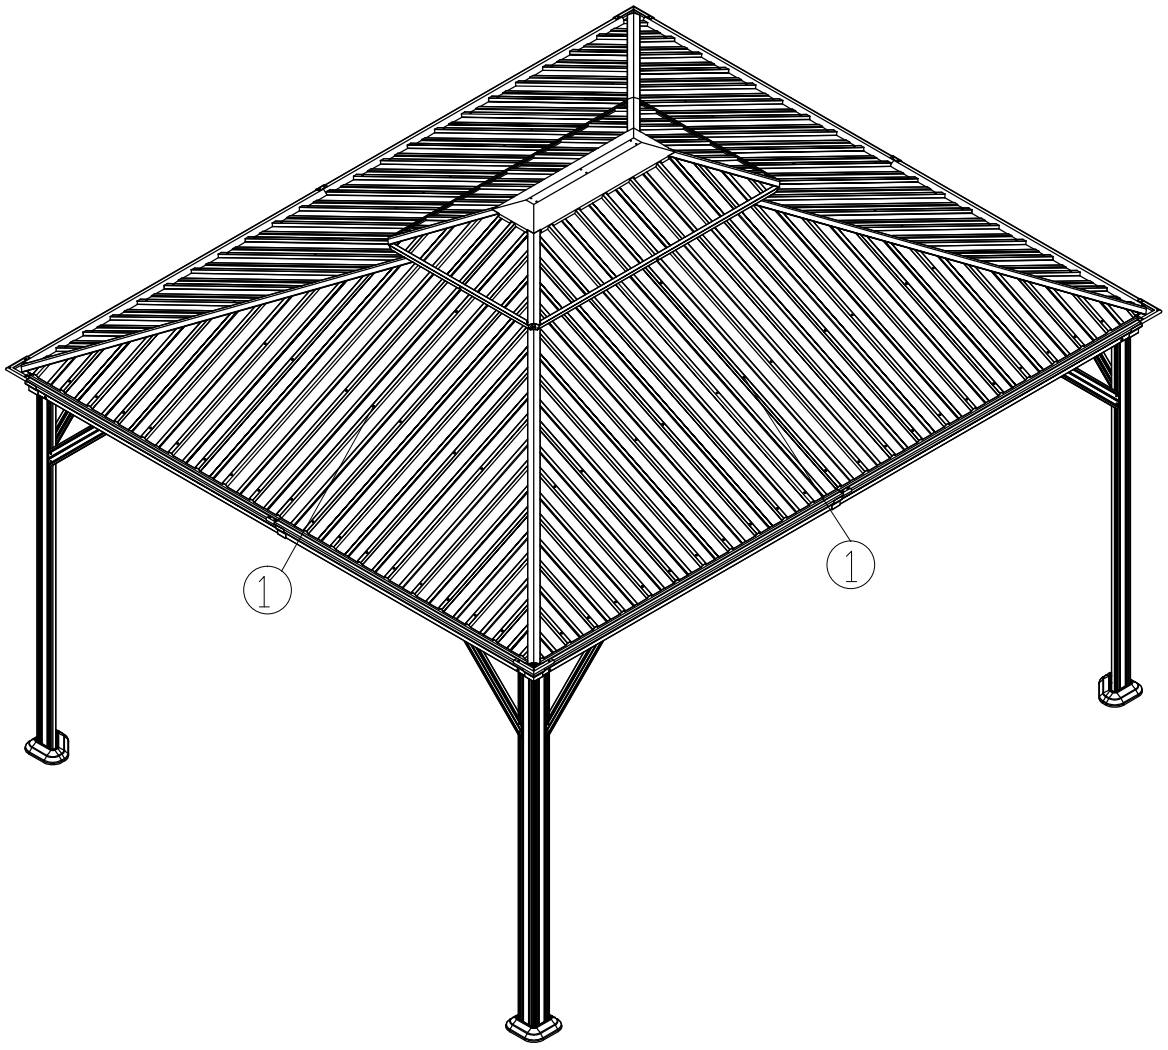




S
x8



6#
x8

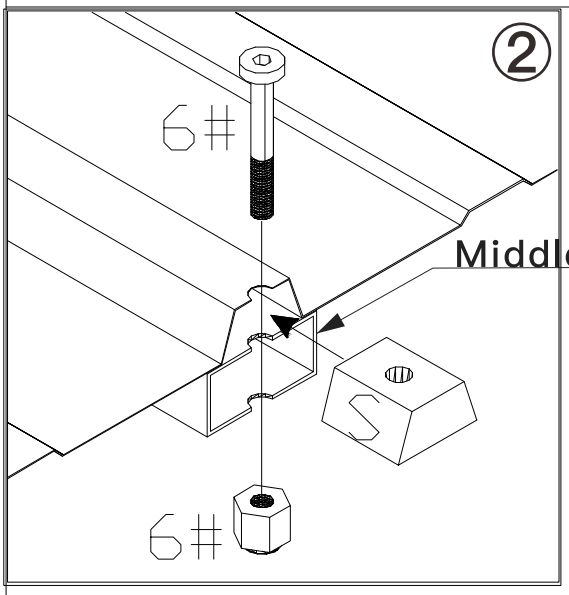
②
6#
Middle Roof Tube
S
6#

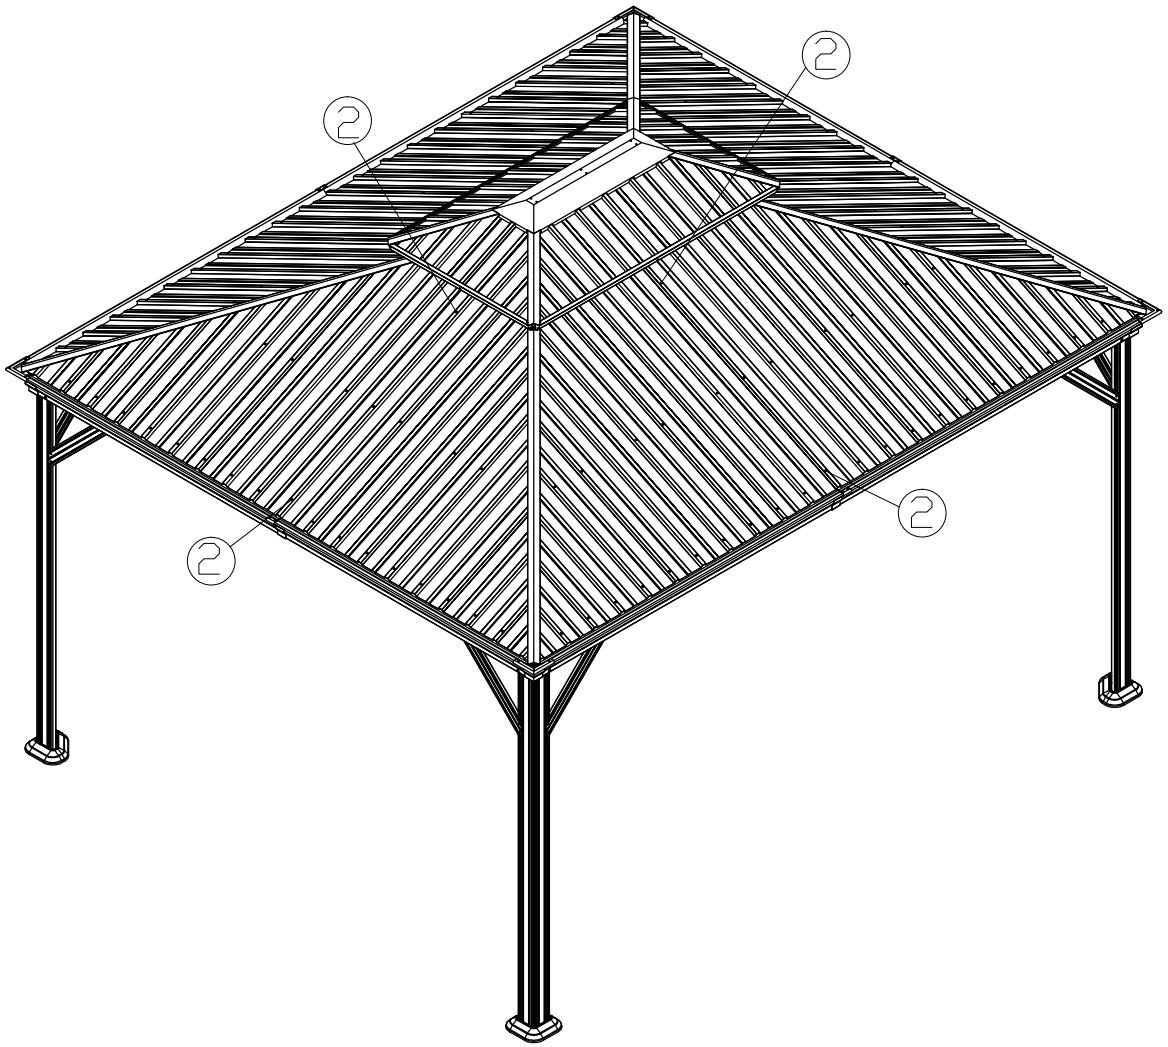

②
②
②
②







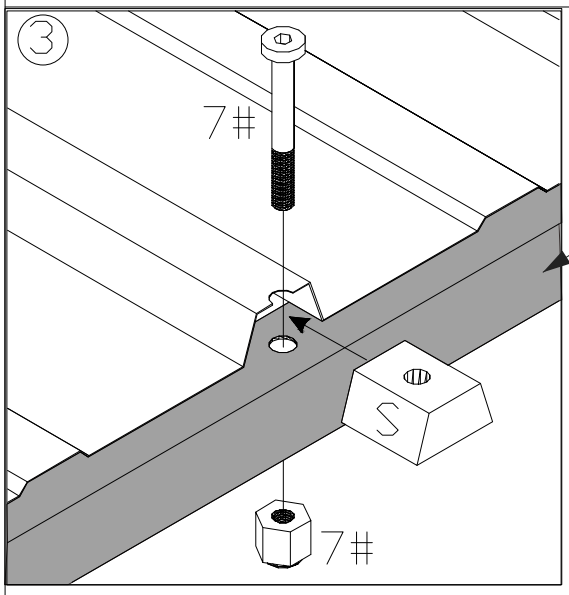



Solidifying Bar

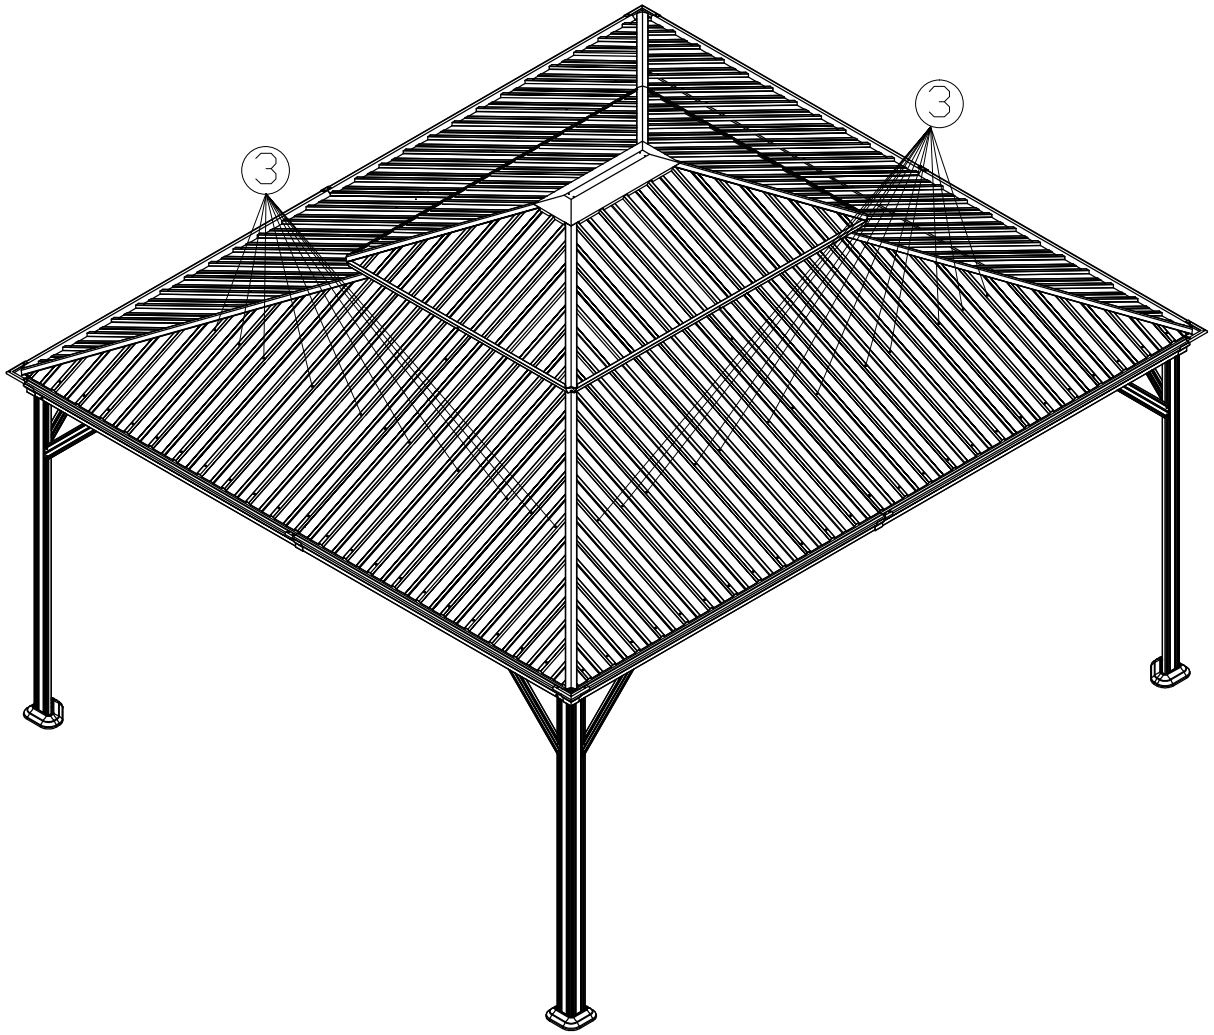




S
x84


5#
x84

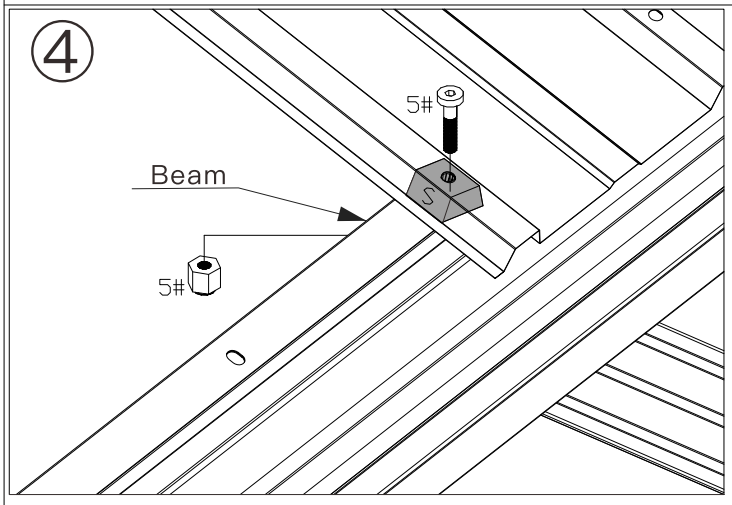

④
5#
Beam
5#

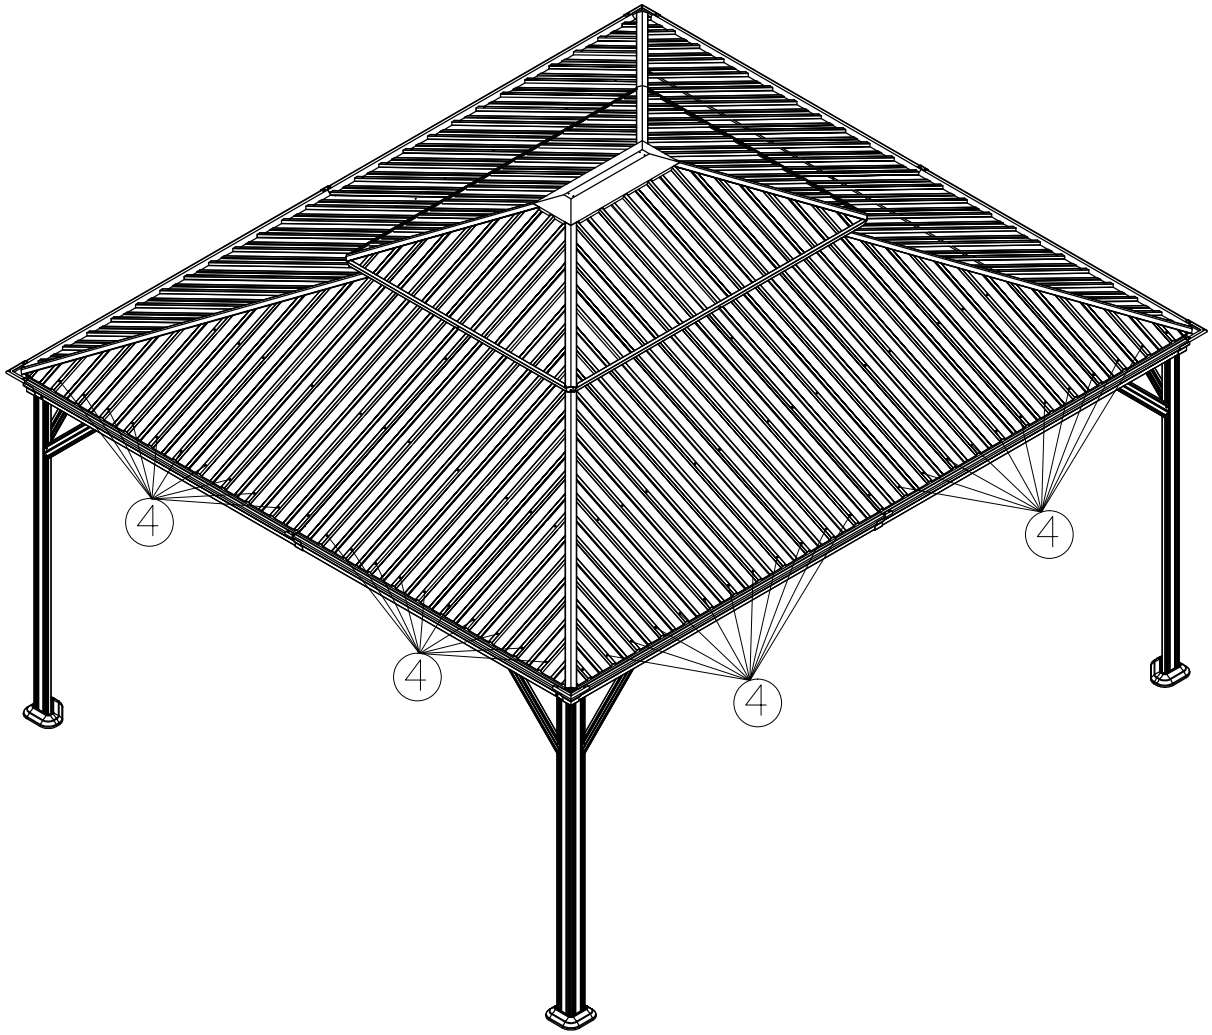

④
④
④
④







10#
x4

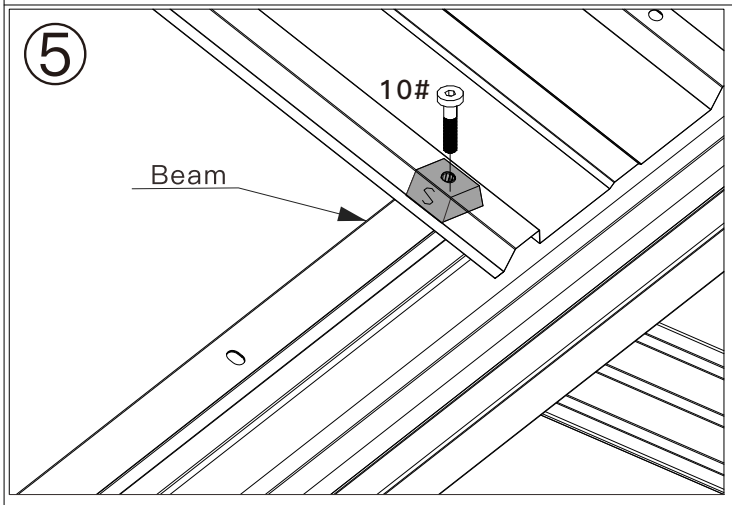


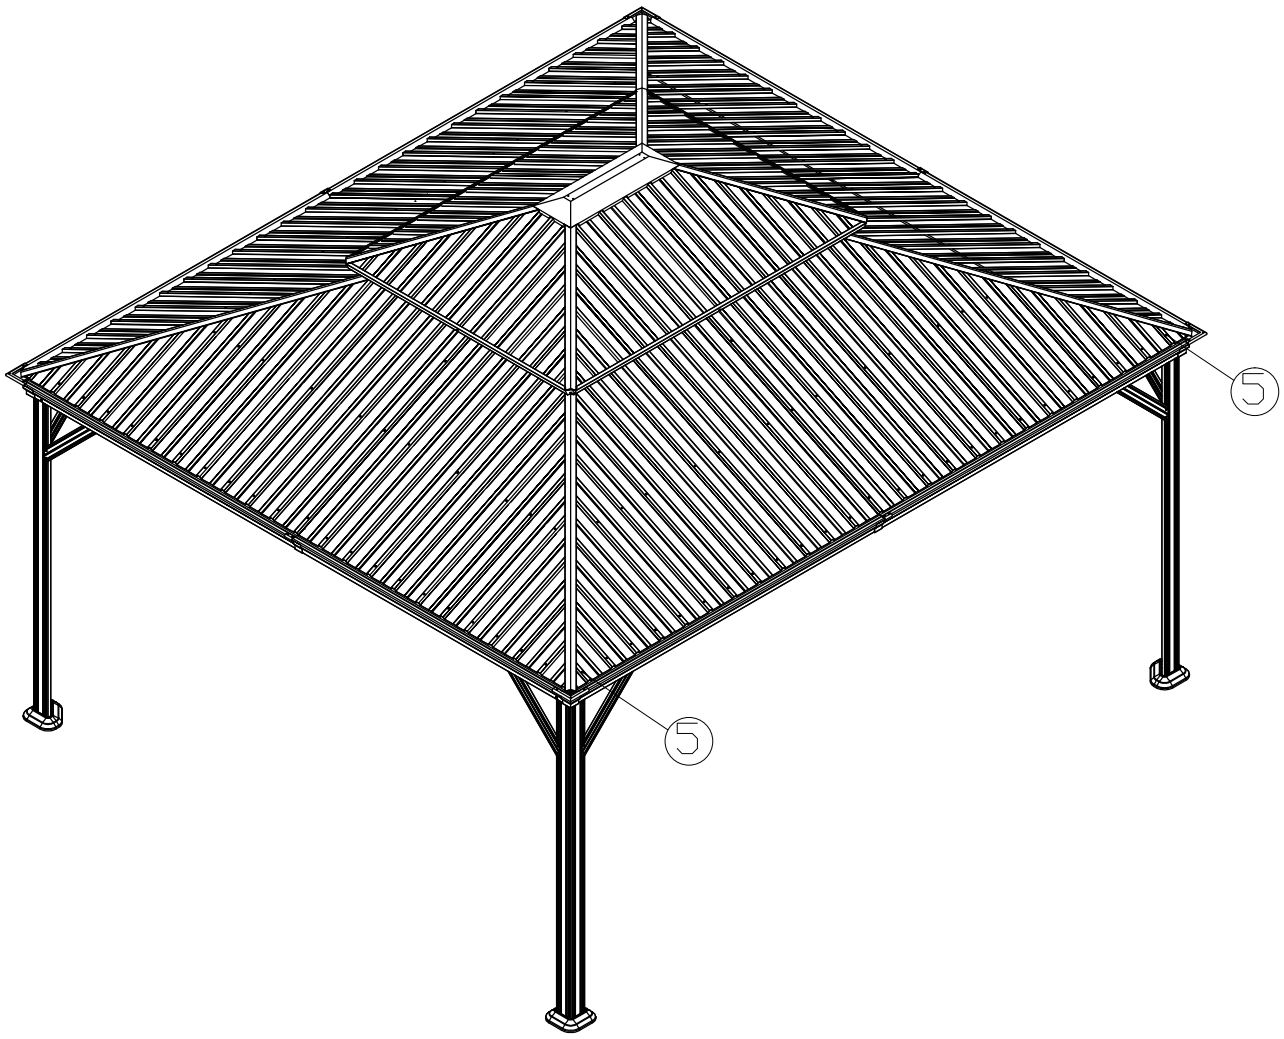


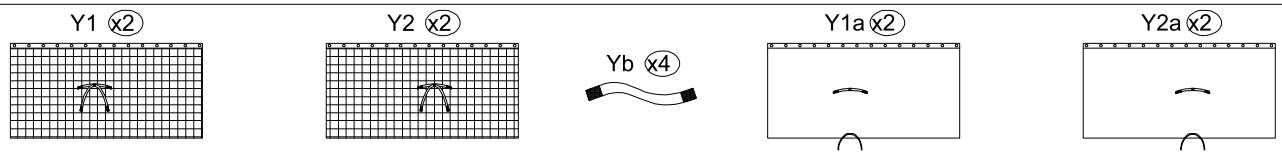


MOSQUITO NETTING AND CURTAINS ASSEMBLY:

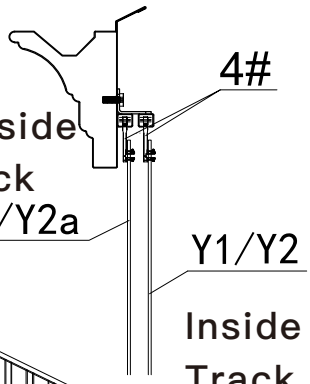


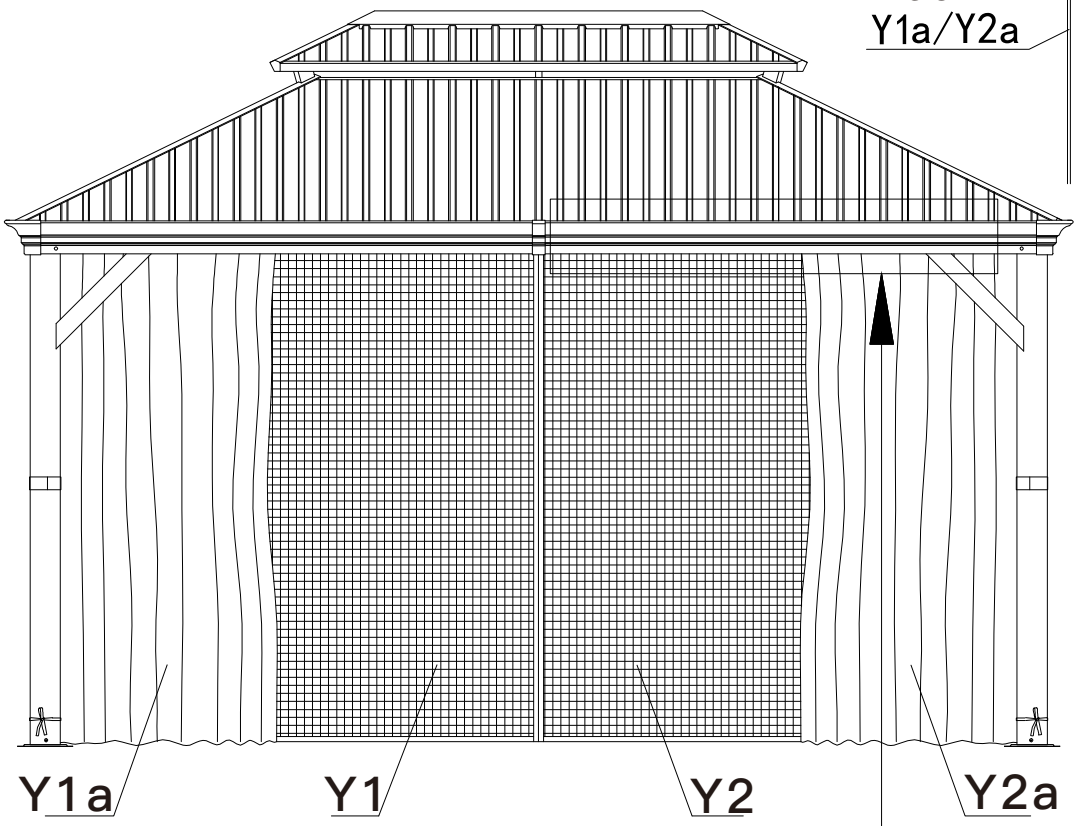


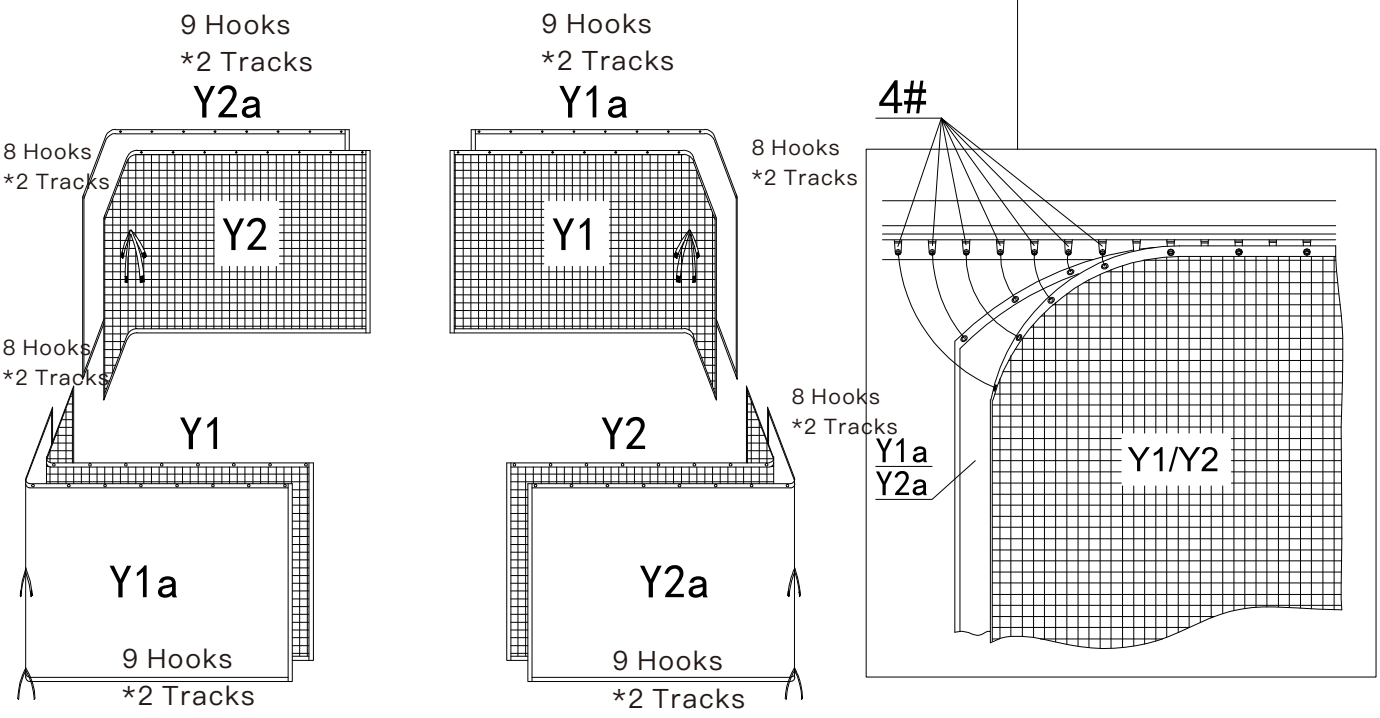

Please open your gazebo curtain when it is incoming over 30 mph wind, and tie with Strap #Yb

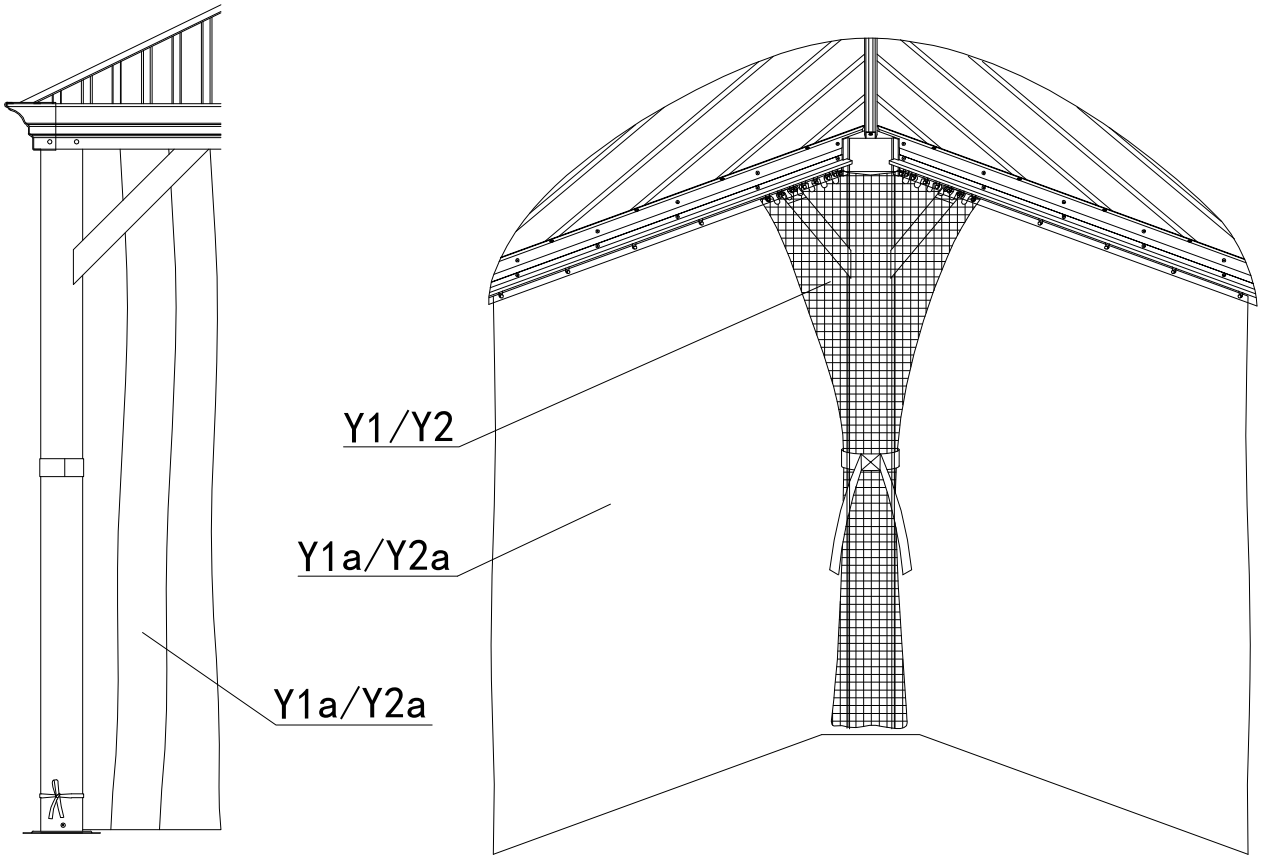

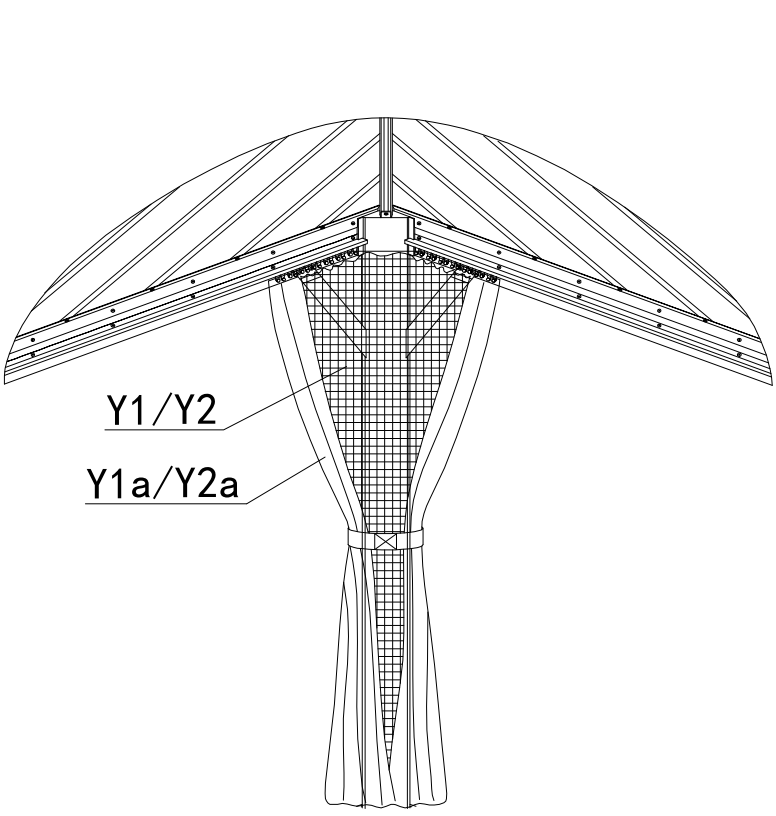

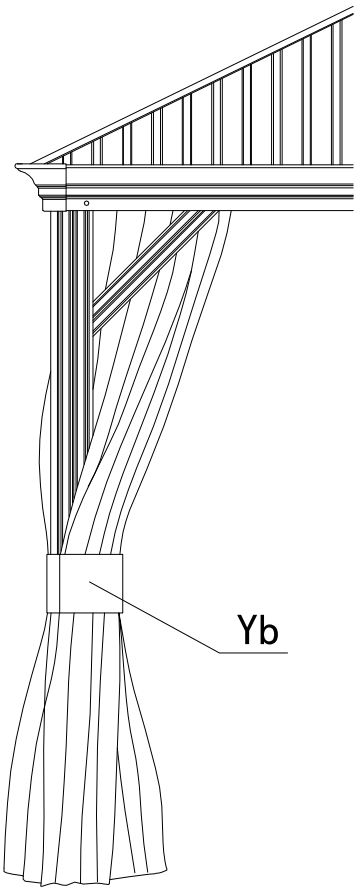

domi
outdoor living

Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So,if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:

After-sales contact email:
service@domioutdoorliving.com

Business cooperation contact email:
marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.

© Copyright 2023–2025 domi LLC. All Rights Reserved.