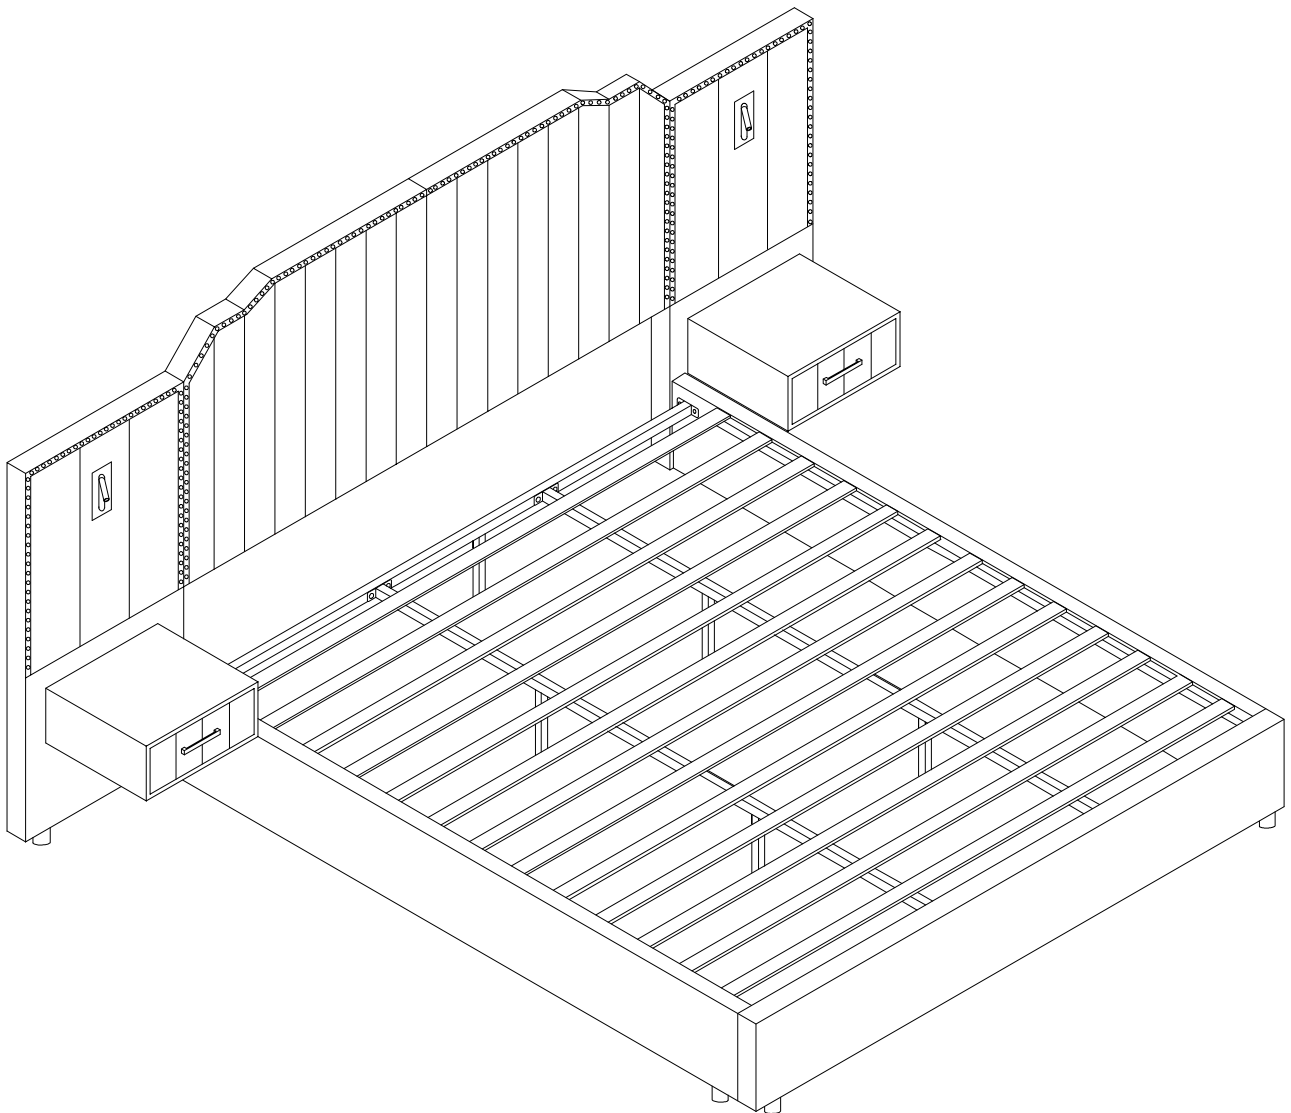
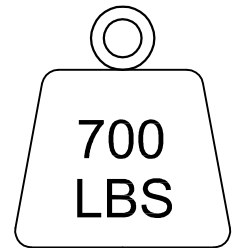


ASSEMBLY INSTRUCTIONS



2629K



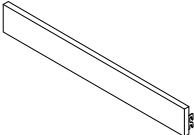
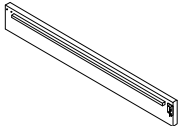





Install all screws according to the instructions, and then tighten them completely.

PACKING DETAILS:TOTAL 3 BOXES








1-3

	1-(1pc)
	15-(1pc)

3-3

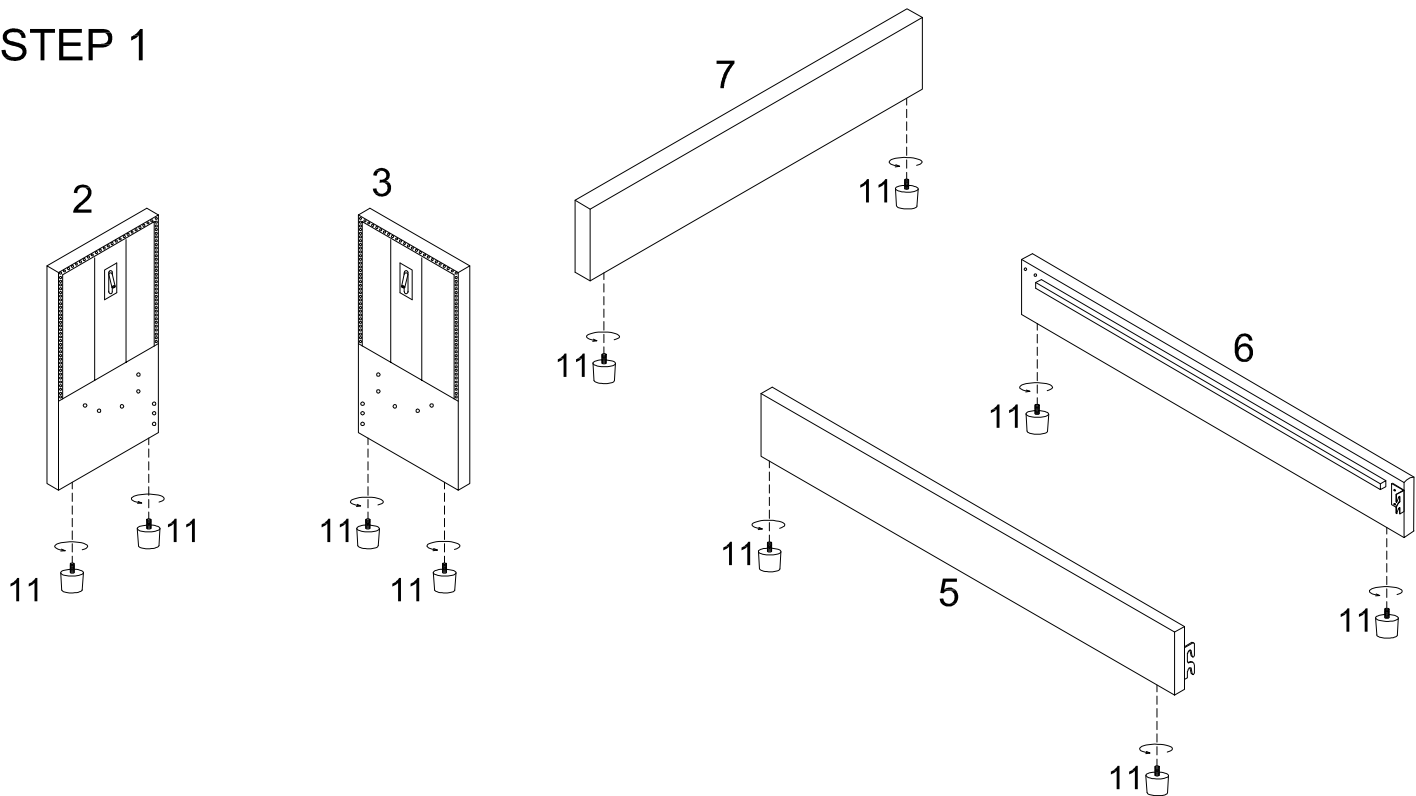
	5-(1pc)
	6-(1pc)
	7-(1pc)
	8-(1pc)
	9-(1pc)
	12-(1set)
	13-(6pcs)

2-3

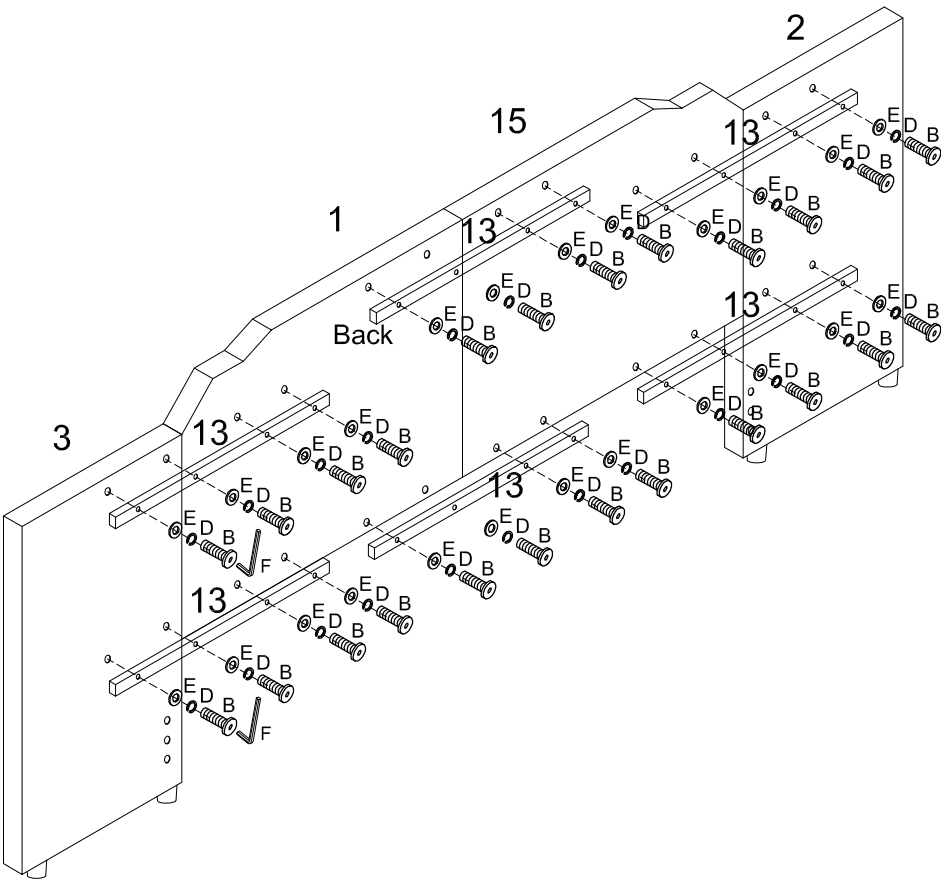
	2-(1pc)
	3-(1pc)
	4-(2pcs)
	10-(5pcs)
	11-(10pcs)
	14-(1pc)
(Hardware Packet)	
 Bolt M8*75	A-(12pcs) +1
 Bolt M8*38	B-(24pcs) +1
 Bolt M8*25	C-(26pcs) +2
 M8	D-(62pcs) +2
 M8*16	E-(62pcs) +2
 M8	F-(1pc)
 M4*25	G-(6pcs) +1
 Ø3.5X50MM  Ø3.5X25MM   Anti-fall hardware	H-(2Set)

ASSEMBLY INSTRUCTIONS

STEP 1

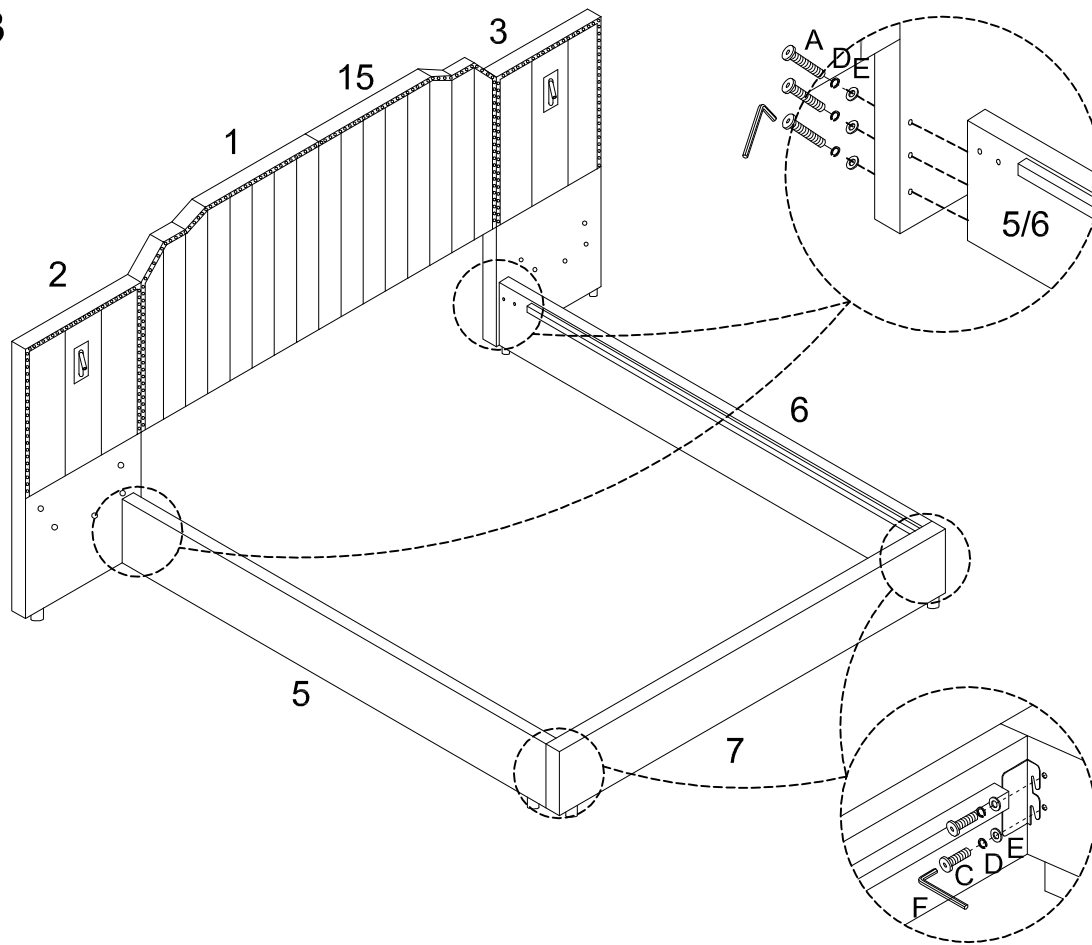


STEP 2

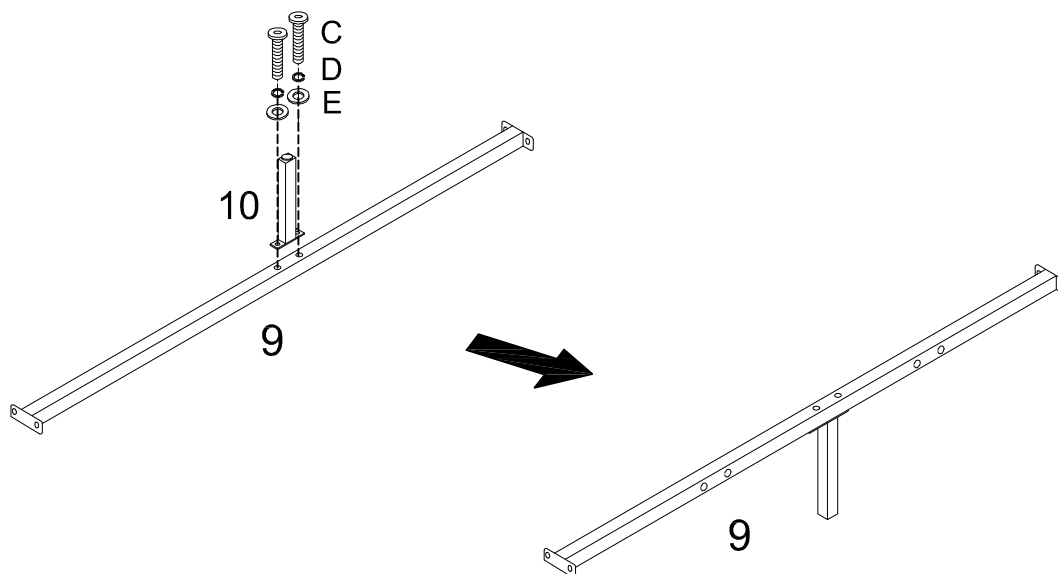


ASSEMBLY INSTRUCTIONS

STEP 3

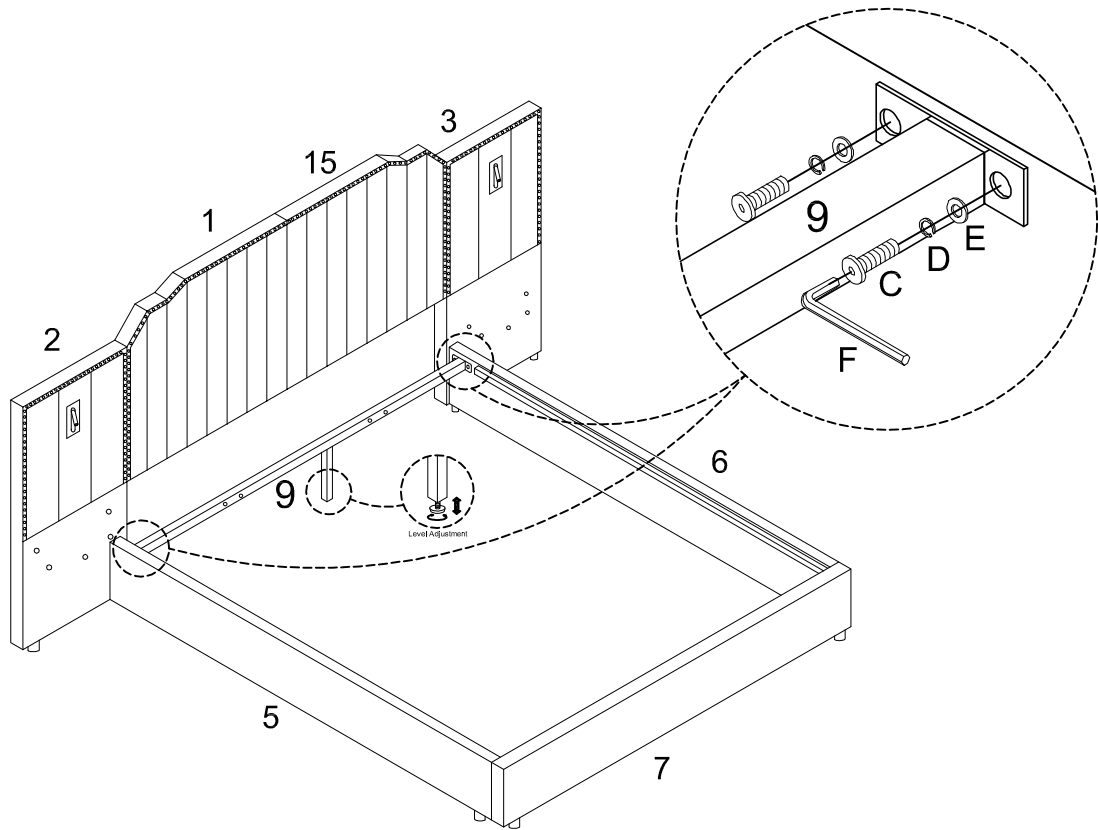


STEP 4

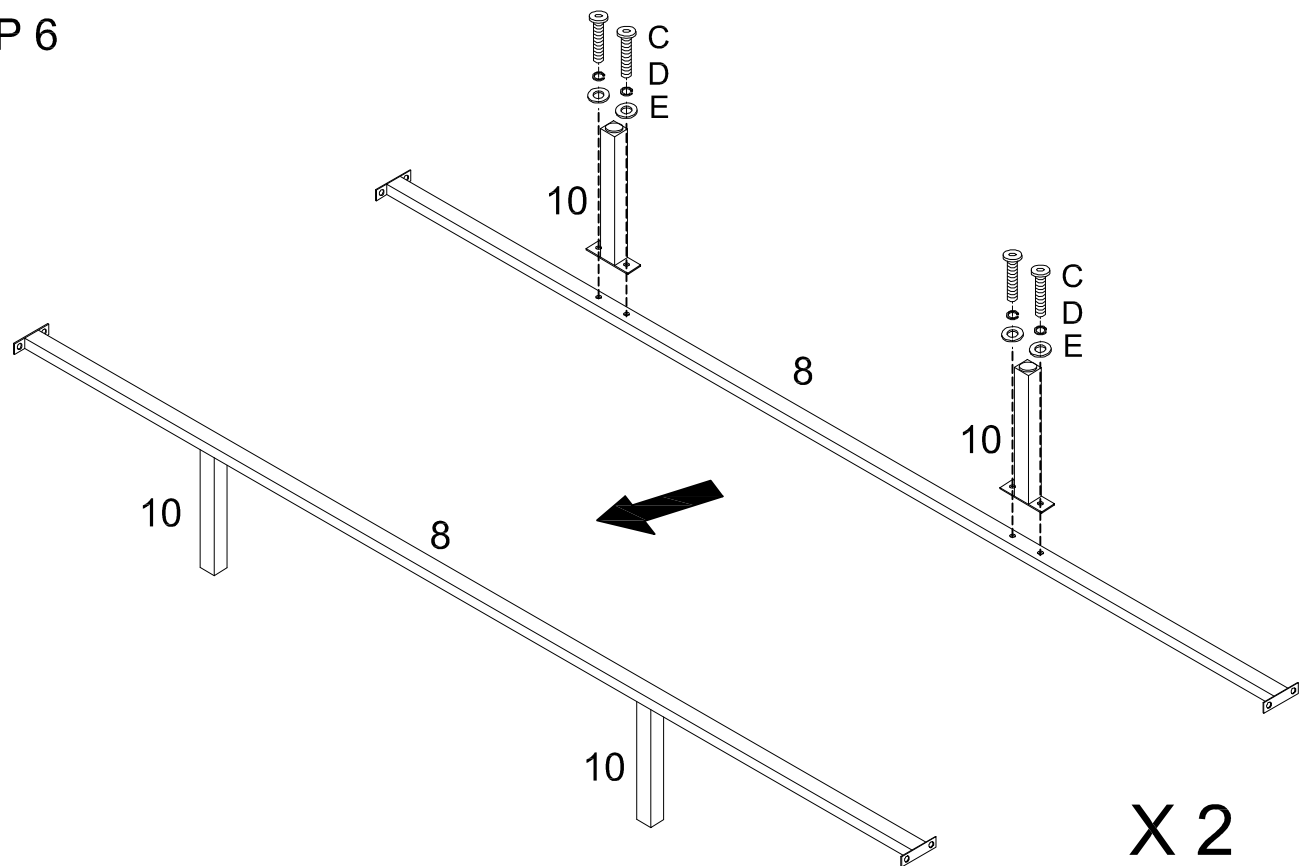


ASSEMBLY INSTRUCTIONS

STEP 5

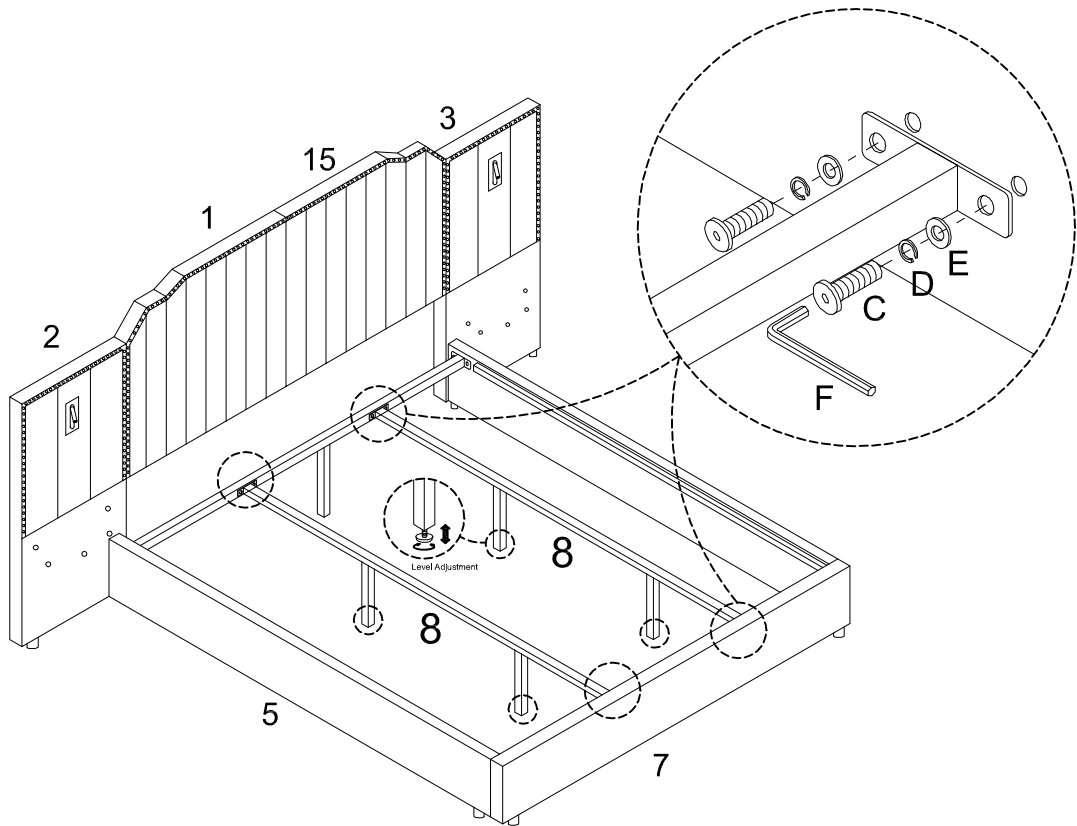


STEP 6

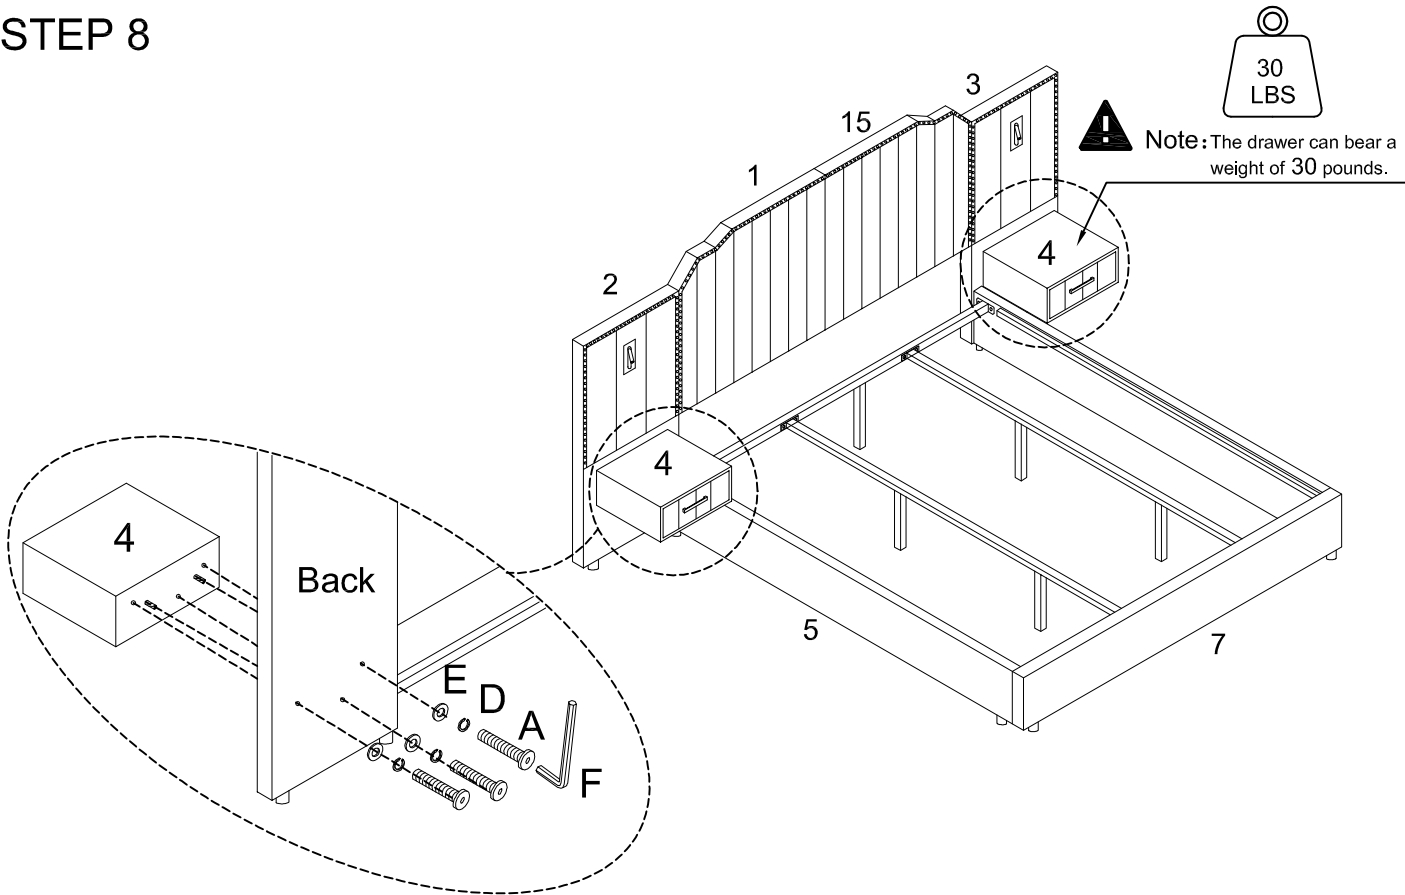


ASSEMBLY INSTRUCTIONS

STEP 7

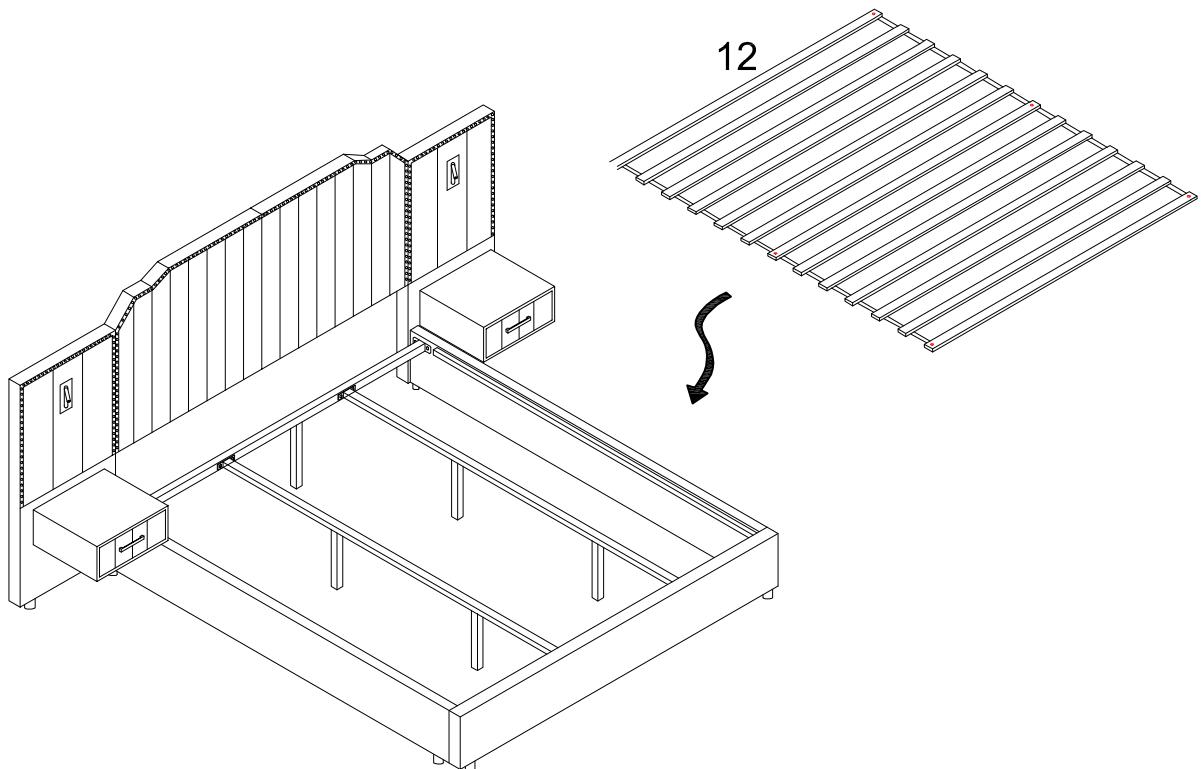


STEP 8

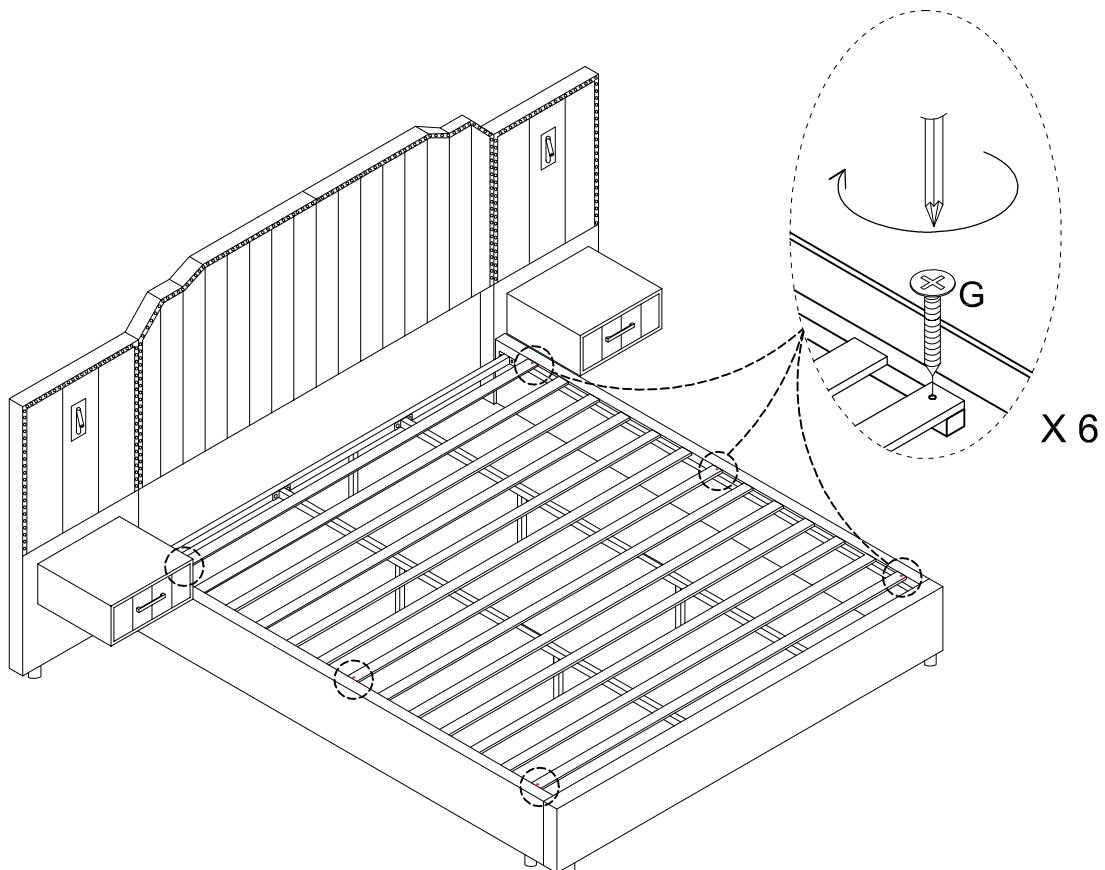


ASSEMBLY INSTRUCTIONS

STEP 9

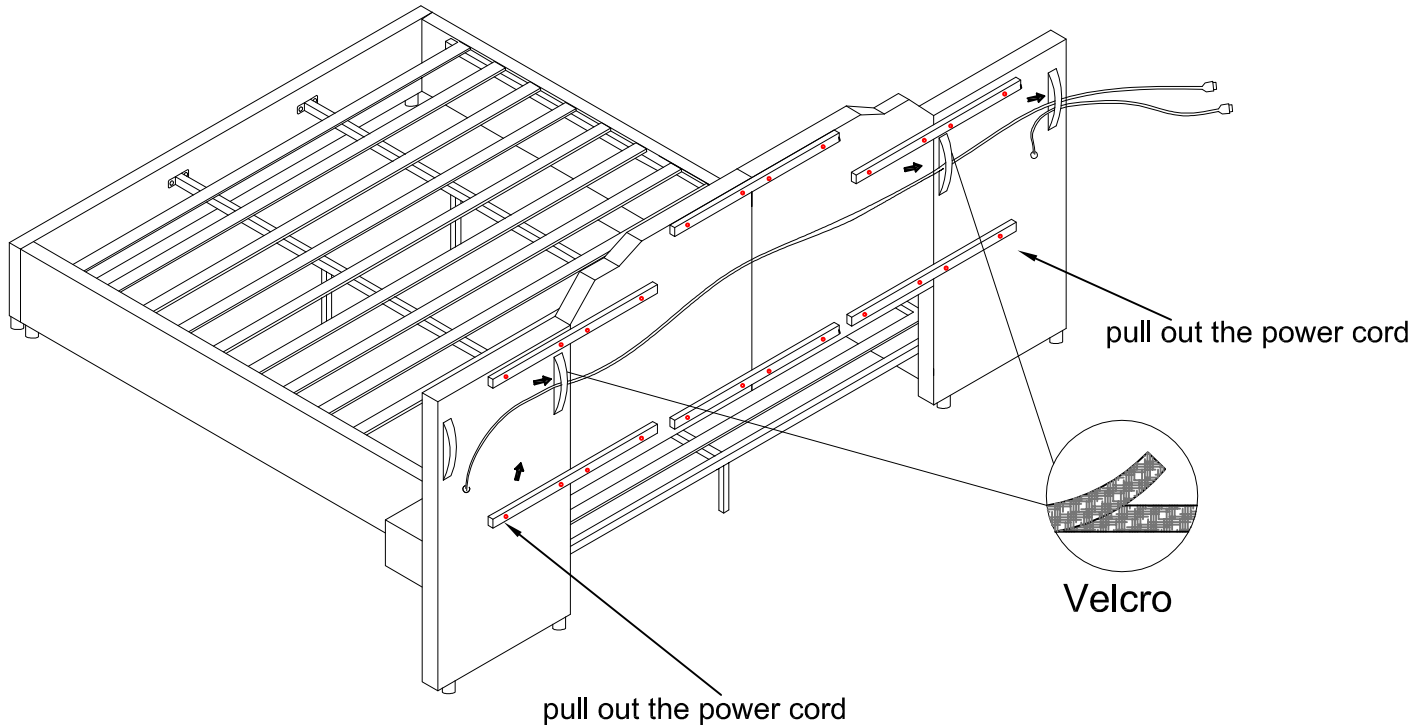


STEP 10



ASSEMBLY INSTRUCTIONS

STEP 11



STEP 12

Anti-fall hardware

