

ASSEMBLY INSTRUCTIONS


METAL VANITY SET



We are here to help!

MADE IN CHINA

PARTS IDENTIFICATION

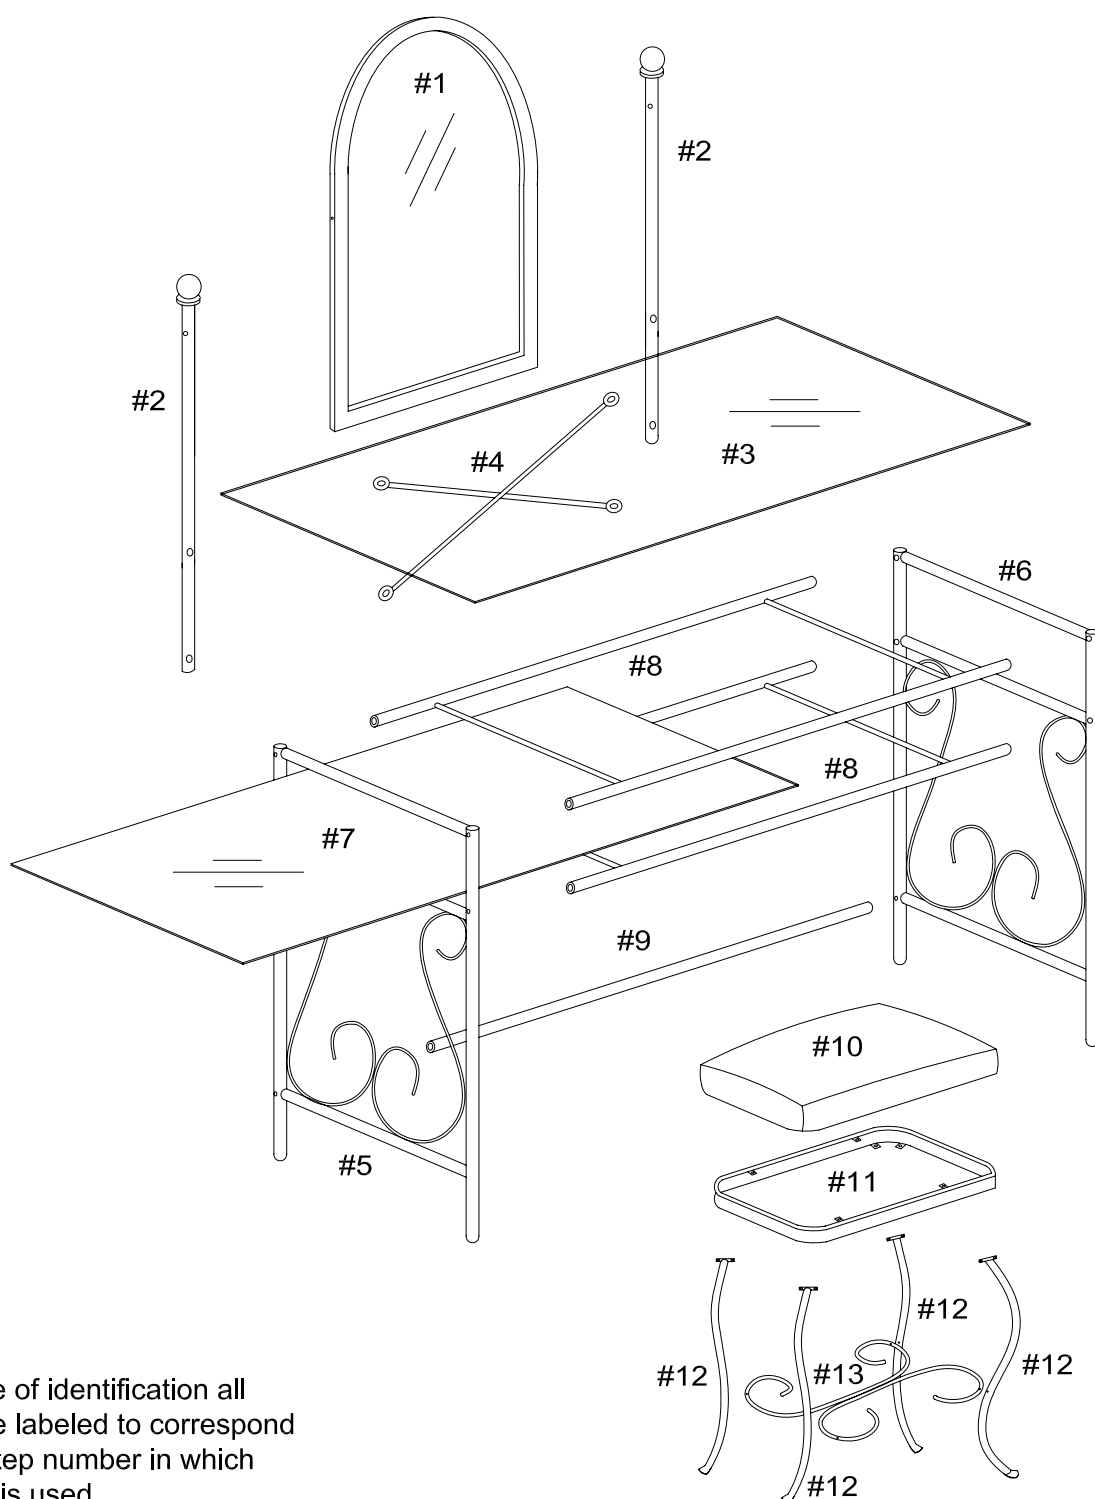










For ease of identification all parts are labeled to correspond to the Step number in which the part is used.

PARTS IDENTIFICATION


ITEM	DESCRIPTION	QTY
#1	MIRROR	01
#2	MIRROR SUPPORT	02
#3	TOP GLASS	01
#4	CROSS BRACING	01
#5	LEFT FRAME	01
#6	RIGHT FRAME	01
#7	MIRROR SHELF	01
#8	SUPPORT FRAME	02
#9	BOTTOM BRACE	01
#10	SEAT	01
#11	SEAT FRAME	01
#12	LEG	04
#13	REST	01

HARDWARE IDENTIFICATION


Please line up the hardware with the correct full size image to make sure you are installing the hardware correctly.

ITEM	PICTURE	DESCRIPTION	QTY
A	 (Ø1/4"x1-3/8"L) Full size	BOLT	10
B	 (Ø1/4"x1-3/16"L) Full size	BOLT	04
C	 (Ø1/4"x3/4"L) Full size	BOLT	04
D	 (Ø1/4"x1/2"L) Full size	BOLT	08
E	 (Ø3/16"x3/4"L) Not to Scale	SCREW	04
F	 Not to Scale	SMALL PLASTIC PIECE	10
G	 Not to Scale	LARGE PLASTIC PIECE	02
H	 Not to Scale	BOLT	02
I	 (4mm) Not to Scale	ALLEN KEY	01

Step 1.

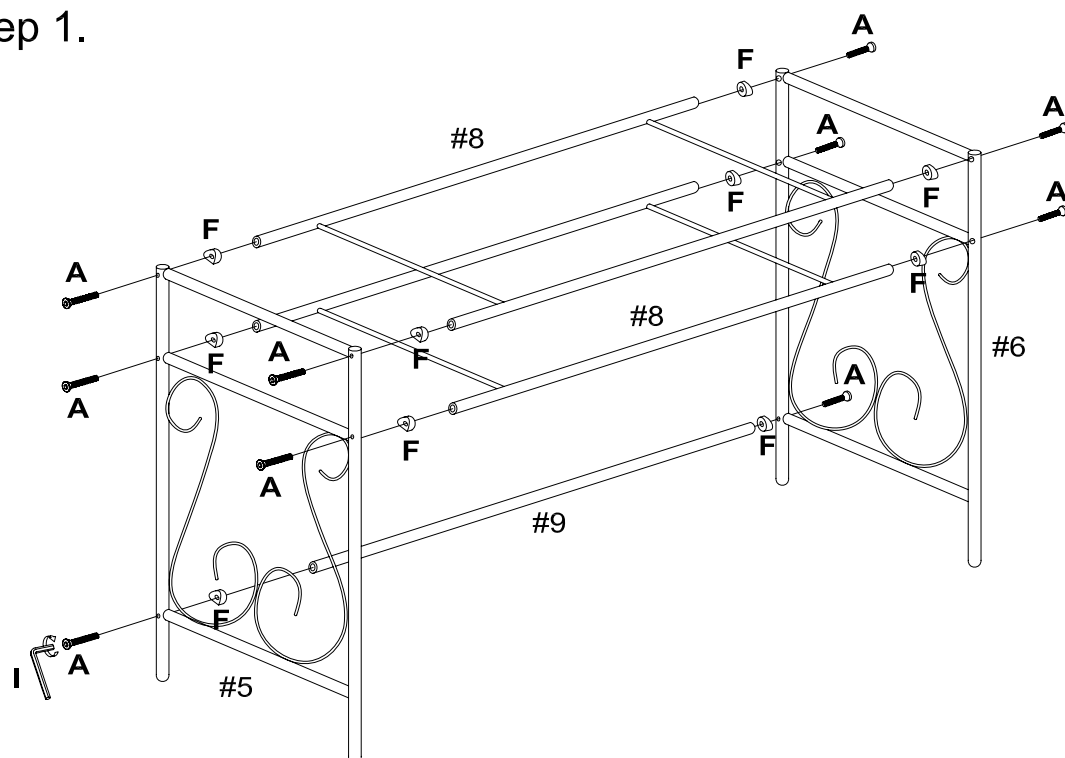


Step 2.

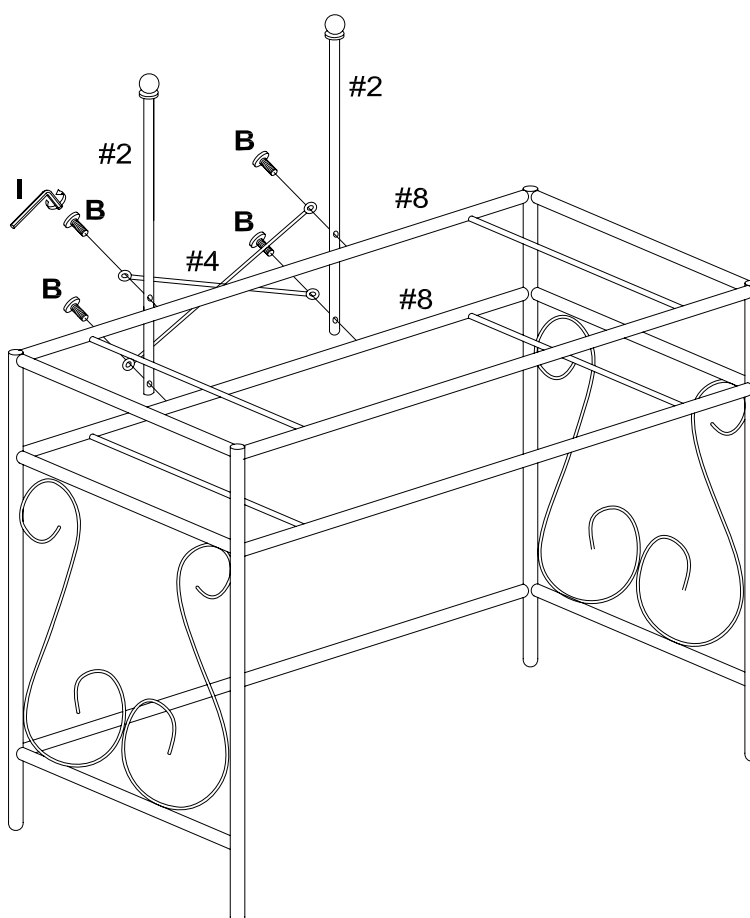
**IMPORTANT:**

1. DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ALL BOLTS ARE COMPLETELY LINED UP AND INSERTED INTO HOLES / NUTS.
2. DO NOT OVER TIGHTEN SCREWS AND BOLTS TO AVOID STRIPPING.


Step 3.

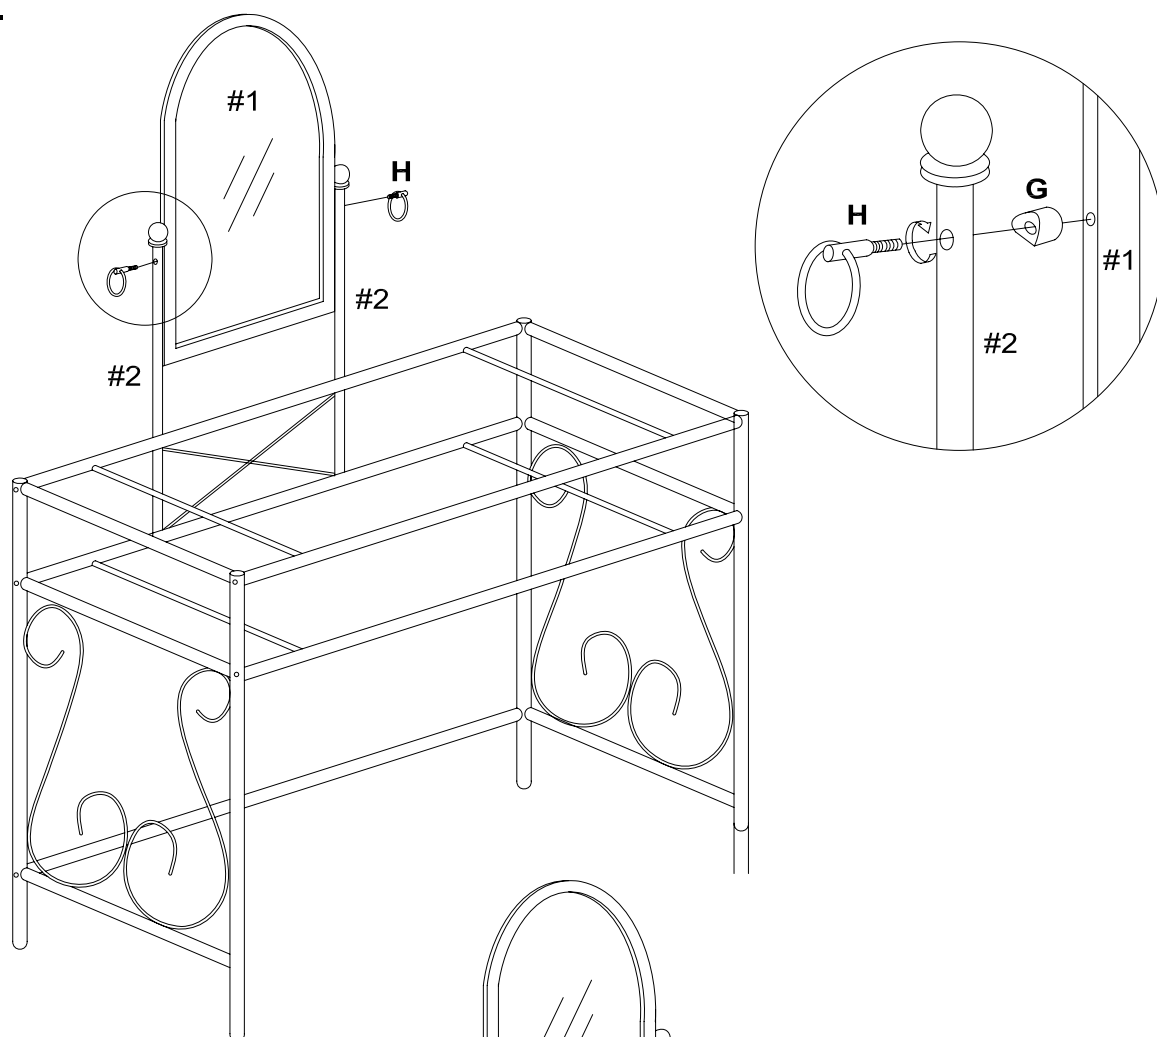


Step 4.

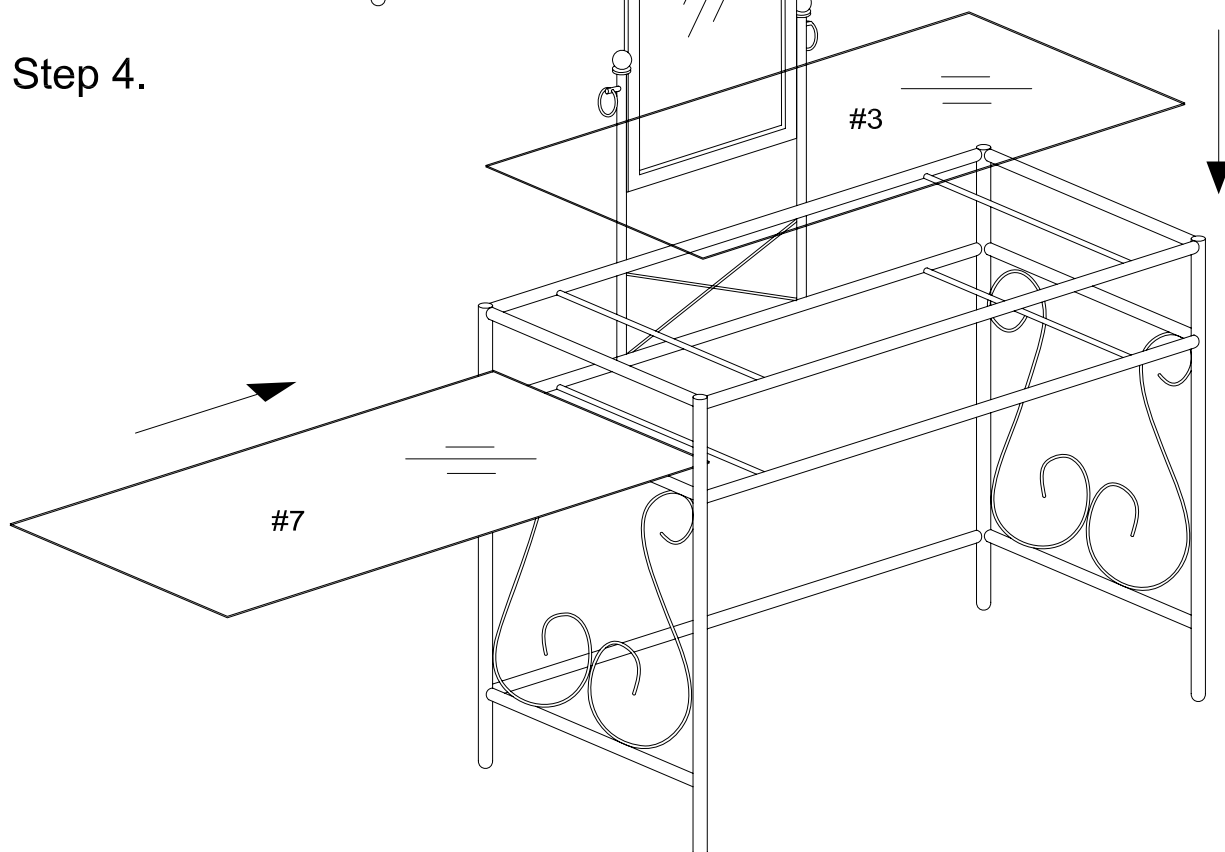


Step 5.

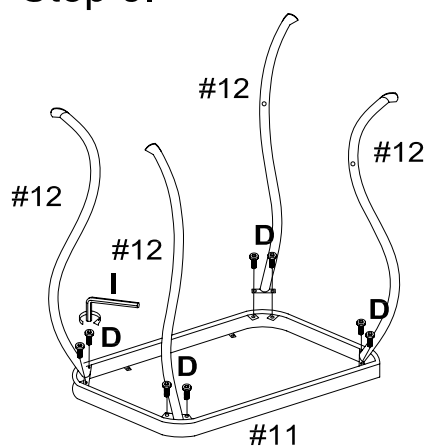


Step 6.

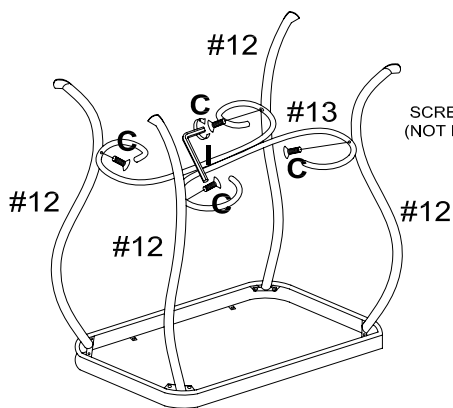


Step 7.

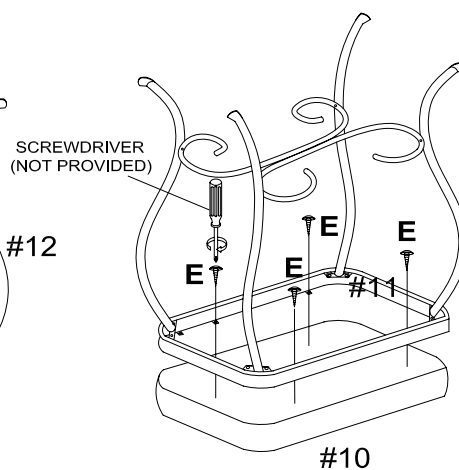

Step 8.

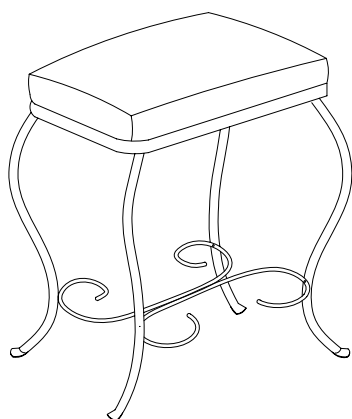

Step 9.

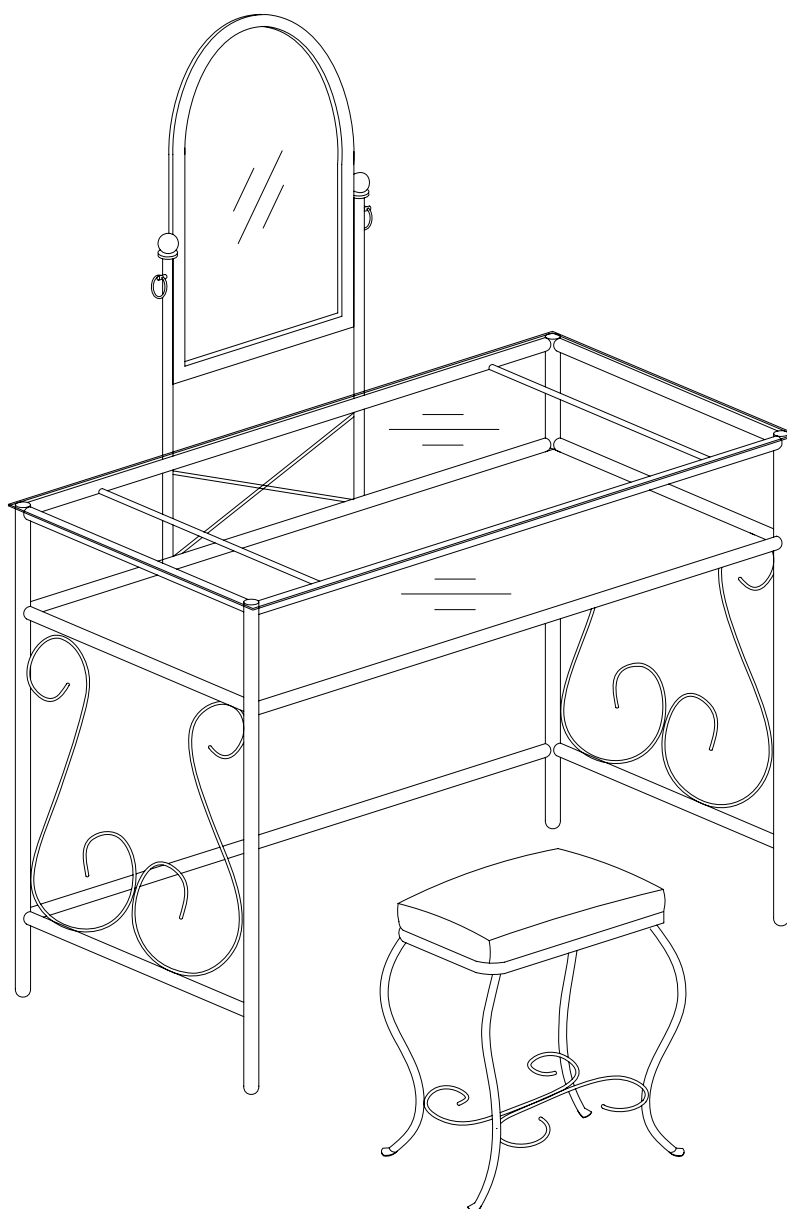

LIMITED WARRANTY

WHAT IS COVERED

WHAT IS NOT COVERED