


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THIS INSTRUCTION.


Hardware Package(inculded):

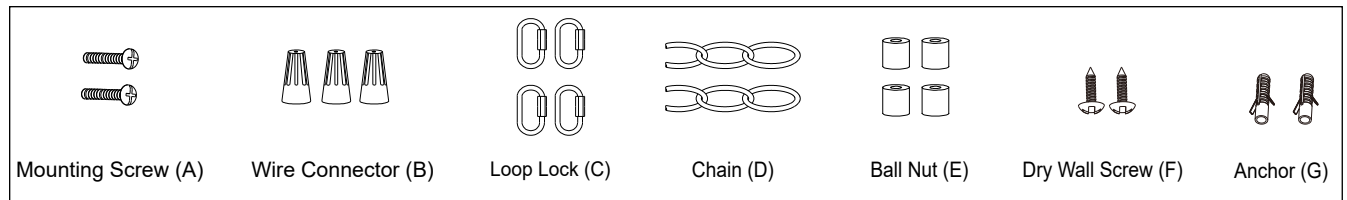

Installation Steps

Turn off the power at fuse or circuit box.

1. Attach the mounting back plate to the outlet box using two mounting screws (A).
2. Thread the anchors (G) into the holes, then attach the mounting bracket to the outlet box by using two mounting screws (A). Secure the dry wall screws (F) through the set holes into the anchors (G).
3. Attach the short tube onto the coupling and tighten it. Attach the short tube and tube cap onto the fixture by inserting the threaded pipe, then secure with the washer and loop.
4. Choose the length of the chain (D) you need, use pliers (not included) to open and remove links to short the chain, then weave the fixture wire and the fixture ground wire through the chain (D) and canopy.
5. Connect one end of the chain (D) with the loop by using a loop lock (C).
6. Connect the other end of the chain (D) by using another loop lock (C).
7. Thread the fixture wire and fixture ground wire through mounting backplate.

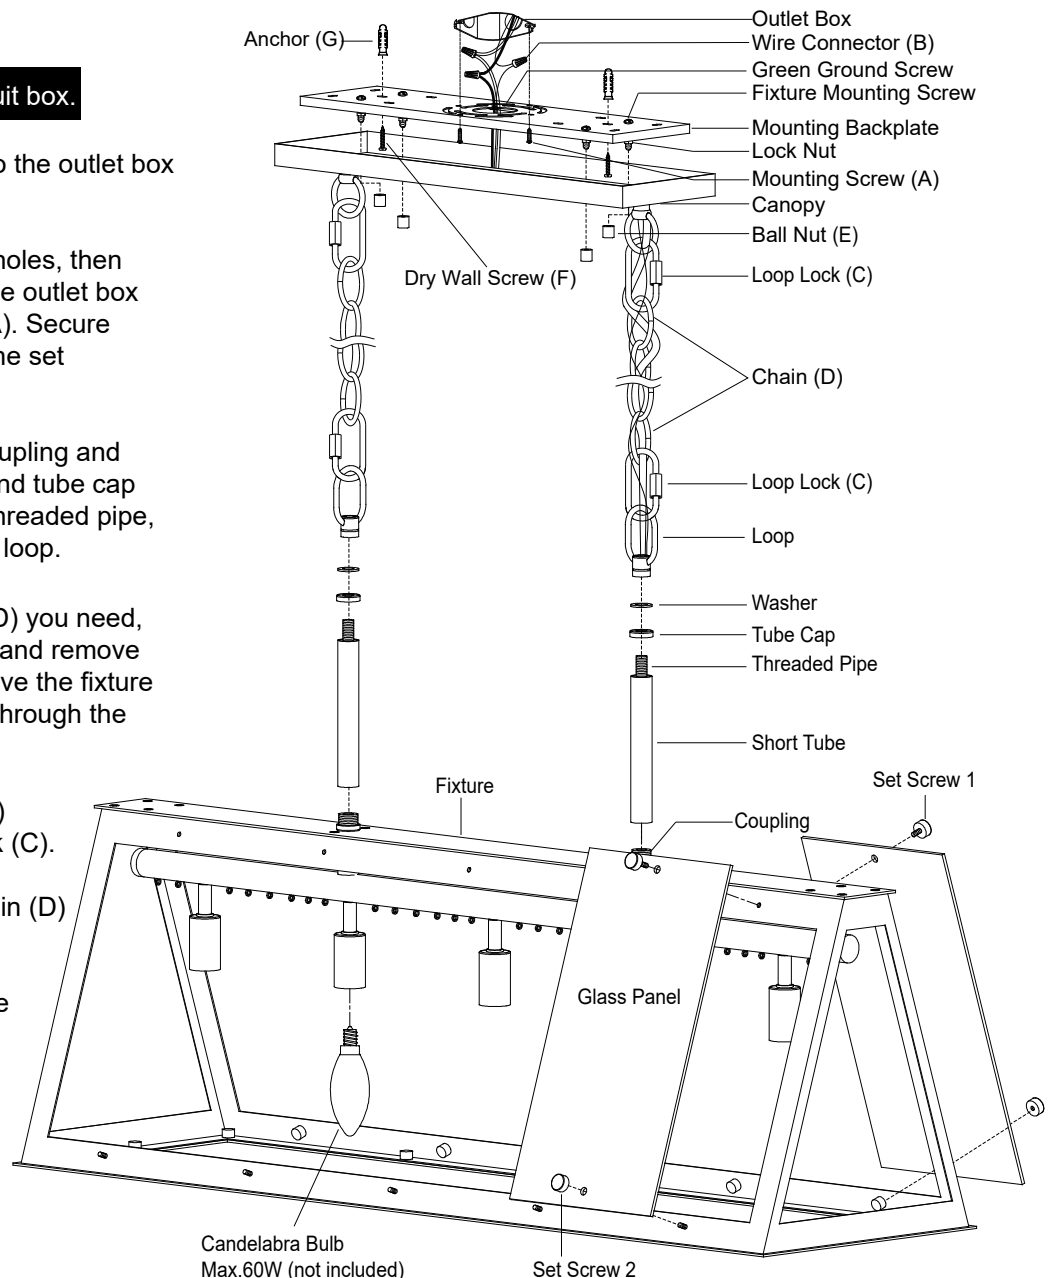

7. Pull out the outlet wires and house ground wire from the outlet box.
 Make wire connections using the wire connectors (B):
 ---The smooth wire (marked) from the fixture to the black wire from the power source.
 ---The ridged wire (unmarked) from the fixture to the white wire from the power source.
 ---Attach the fixture ground wire to the mounting back plate with the green ground screw. Then connect it to the house ground wire with a wire connector (B).
 Carefully put the wires back into the outlet box.

8. Install the crystal drops A , crystal drops B, crystal drops C, crystal drops D, crystal drops E, crystal drops F and crystal drops G as shown in diagram. (See Fig.1)

9. Attach 10pcs glass panels to fixture and lock it with set screws 1 for upper side and set screws 2 for bottom side.

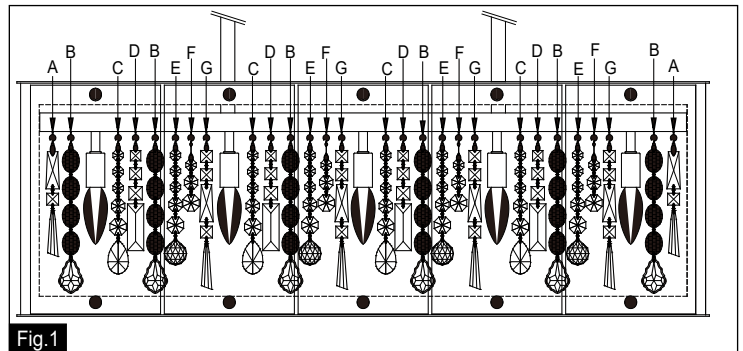


Fig.1

10. Install the bulbs (not included). Check relamping label at socket area or packaging for maximum wattage allowed .

11. Attach the canopy onto the mounting back plate and tighten it with four ball nuts (E).

Turn on the power at fuse or circuit box.


The following parts are available for re-order if damaged or missing.

Spare Parts List:

Mounting Screw (A)	Wire Connector (B)	Loop Lock (C)		A x 2	B x 6	C x 4	
Chain (D)	Ball Nut (E)	Dry Wall Screw (F)	Anchor (G)	D x 4	E x 4	F x 4	G x 4

↑ Assembly Kit 6184MM (1 SET)

5132CD

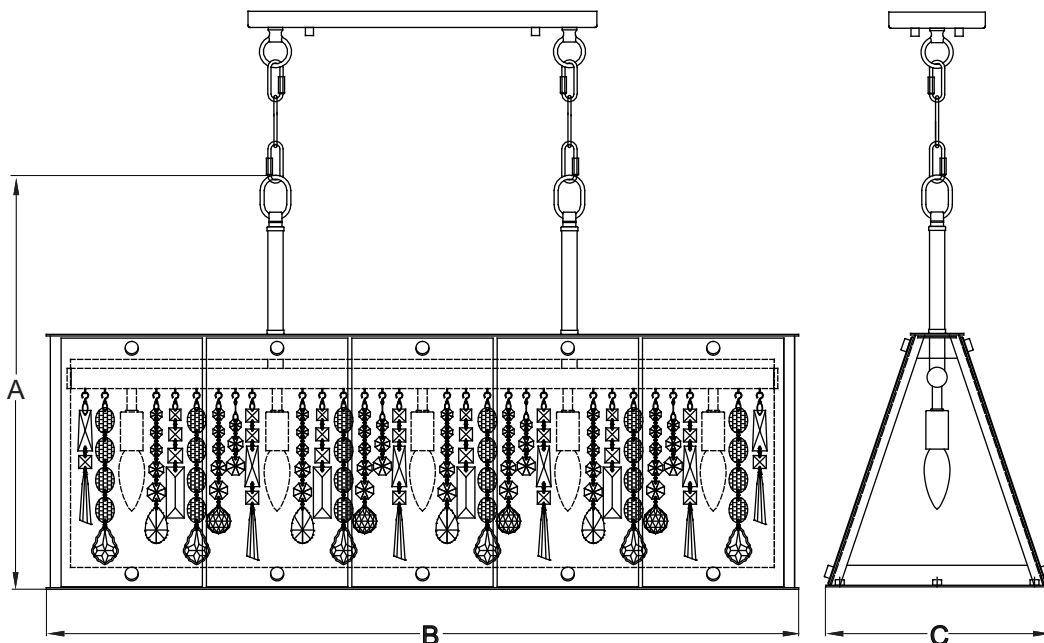

A: 20-1/4"
B: 36-5/8"
C: 10-3/4"