

BATHTUB INSTALLATION TUTORIAL

1.Tool Preparation



Hex screwdriver scissors flat-head screwdriver wrench(No.22) utility knife

2.Installation steps

(1).Check whether the accessories are complete



Two Soft polyurethane headrest,
four decorative bases,
and four screws

Water inlet faucet, Shower head、Water transferable
switch、Cold water、 Hot water、 59" shower hose, three-
tier railing, UPC water stop cover for sink

(2).Installation steps for three-tier railings

1. First, remove the original screws from the railing;
 2. Thread the screw through the stainless steel washer, the reserved hole on the bathtub, and the decorative base of the railing in order, and then insert it into the corresponding hole on the railing base;
 3. Tighten the screws, and securely fasten all screws at the four locations in this order;
 4. After all screws are tightened, the installation of the three-layer railing is completed.



(3).Installation steps for soft polyurethane headrest

1. Thread the screw through the reserved hole in the bathtub, the decorative base of the headrest, and then align it with the corresponding hole in the headrest and insert it;
2. Tighten the screws and complete the installation of the other headrest using the same method;
3. During installation, ensure that the front of the headrest is facing towards the interior of the bathtub.



(4) .Installation steps for water inlet faucet

1. First, remove the nut and waterproof gasket that come with the faucet.
2. Thread the threaded water inlet of the faucet through the waterproof rubber gasket and the reserved hole in the bathtub in order, and then use a 22-gauge wrench to tighten and secure the nut.
3. Remove the water inlet corrugated pipe and place the waterproof rubber gasket (usually tied to the corrugated pipe and can be removed with a tool) that comes with the pipe into the nut of the corrugated pipe.
4. Finally, align the corrugated pipe nut with the threaded water inlet of the faucet, and use a 22-gauge wrench to tighten and secure it.



(5).Installation steps for water inlet faucet

1. First, remove the red and blue cushions from the temperature adjustment handle.
2. Loosen the screws inside the handle with a hexagonal screwdriver to facilitate subsequent alignment and installation.
3. Insert the handle into the corresponding slot, adjust the direction according to the dial icon, and ensure that the installation position of the soft pad aligns with the scale mark.
4. After adjusting the position to the desired location, use a hexagonal screwdriver to tighten and secure the screws.
5. Replace the red and blue cushions, following the principle of "left hot, right cold". Alternatively, you can refer to the color of the water pipes at the bottom for installation (the water pipes are usually one red and one blue).
6. Friendly reminder: Please carefully check the color of the water pipes and the location of the markings before installation to avoid connecting them reversely, which may cause abnormal hot and cold water output.



(6).Installation steps for handheld shower nozzle

1. Remove the spray head and hose, and detach the protective cover at the joint. Be sure to keep the internal waterproof gasket and filter screen properly to avoid loss.
2. Remove the rubber pad of the sprayer base reserved on the bathtub. Be careful when handling to prevent scratching the surface.
3. First, place the rubber gasket with its bottom facing the nut end onto the hose. Then, thread the end of the hose with the nut through the nozzle base. Finally, reset the rubber gasket.
4. Connect the hose nut to the valve port and tighten it securely using a 22-gauge wrench.
5. Finally, place the filter screen at the joint between the nozzle and the hose, connect them and tighten. The installation is now complete.



(6) .Installation steps for cold and hot water inlet

1. Based on the on-site installation environment, determine whether it is necessary to apply glass glue in advance for waterproof sealing.
2. Cut the water pipe tie with scissors and check if the waterproof gasket inside the cold and hot water pipe interface is intact.
3. Align the hot and cold water pipes with the reserved interfaces on the wall, and tighten and fix them with a wrench.
4. Take out the telescopic drain pipe, align the pipe mouth with the reserved drainage outlet of the bathtub, insert it smoothly and fit it in place.
5. Connect the outlet of the sewer pipe to the drainage outlet of the bathtub, insert it tightly and fix it firmly.
6. Take out the drain cover with UPC logo, align it with the reserved hole of the drain at the bottom of the bathtub, and insert it firmly.
7. Rotate the manual knob to control the switch and check whether the drainage opening and closing are smooth, and whether the installation of each component is stable without looseness.



(8).Installation steps for adjusting knob handle

1. Installation steps for adjusting knob handle
2. First, remove the cushion from the adjustment handle.
3. Loosen the screws inside the handle with a hexagonal screwdriver to facilitate subsequent alignment and installation.
4. First, install the downpipe properly. Then, insert the handle into the corresponding slot and turn on the water source. Align the direction according to the dial icon, ensuring that the soft pad installation position aligns with the scale markings and the functions correspond.
5. After adjusting the position to the desired location, use a hexagonal screwdriver to tighten and secure the screws.
6. Finally, just put back the cushion.


Kind Reminder:

- The patterns on the dial correspond to: handheld shower nozzle, water inlet faucet, headrest back nozzle, and OFF position.
- When set to the "OFF" position, some massage nozzles will emit water, which is a normal occurrence. The purpose is to drain the accumulated water and sewage from the pipes. It is recommended to activate this function for about 5 minutes before and after each shower to ensure clean and hygienic water quality.



(9).Bathtub level adjustment steps

1. The level adjustment of the bathtub can be carried out either before installation or after all functional accessories have been installed.
2. After all the accessories have been installed this time, proceed with adjusting the height of the cylinder body: sequentially adjust the height of each cylinder foot to ensure the bathtub remains level and is placed stably without any noticeable shaking. Then, tighten the cylinder foot nuts upwards to make them snugly fit the steel frame, preventing them from loosening during use.

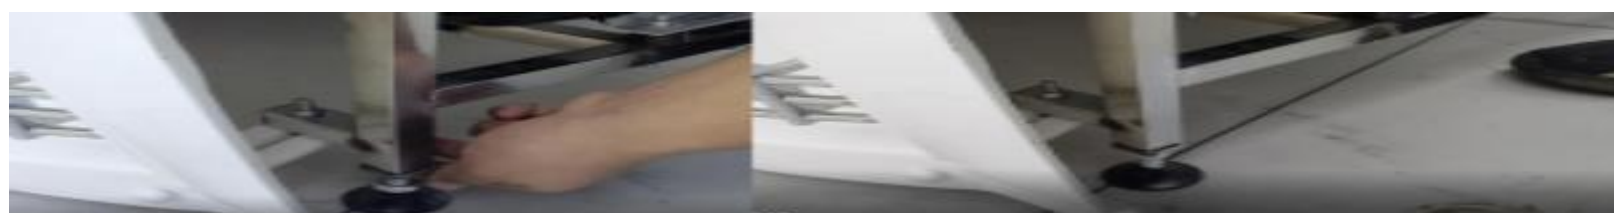

So far, the bathtub has been completely installed.

We sincerely appreciate your trust and support for our products. We will continue to provide you with a high-quality user experience as always. We wish you a pleasant experience and a comfortable life!