




User's Manual

— OFFICE DESK —

The picture is for reference only, and the actual product shall prevail.

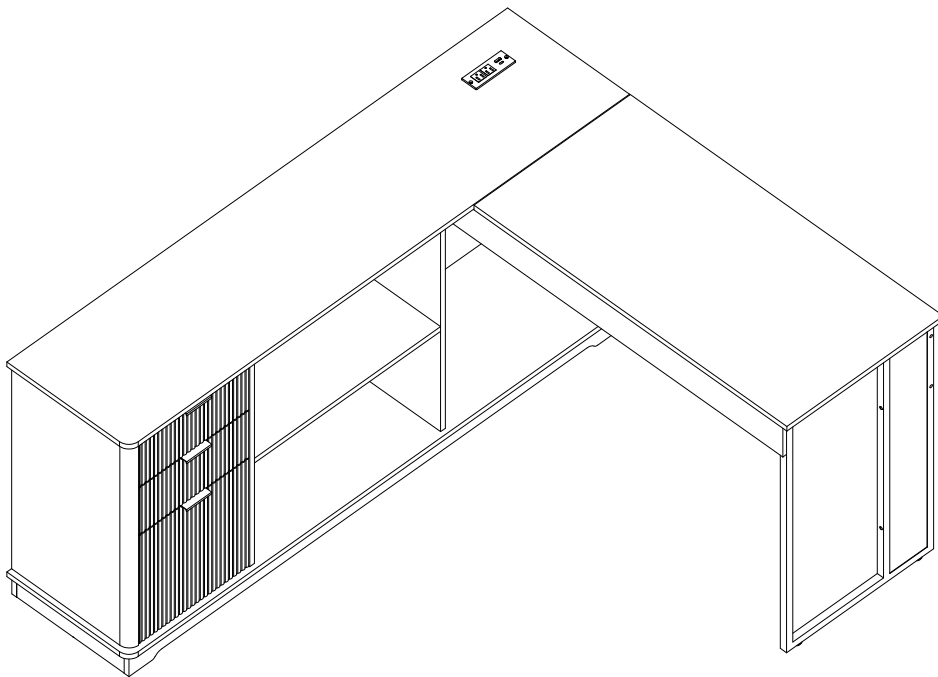

! This product is delivered in two boxes. Please ensure all accessories are complete before proceeding with installation!

<http://www.thevividwood.com/officedeskhocd005>

Contact Us

We're here to help you.



If you encounter any problems in the installation process, you can scan the QR code to watch the teaching video or contact us by email, we will reply you in time.

SAFETY WARNINGS

⚠ WARNING: HEAVY PARTS!


Lift with care. Use two people to move large panels. Dropping parts may cause injury or damage floors.

⚠ WARNING: PROTECT SURFACES!


Assemble on soft, flat flooring (e.g., carpet/blanket). Avoid dragging panels to prevent scratches.


⚠ WARNING: ROUTINE CHECK!

Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents.

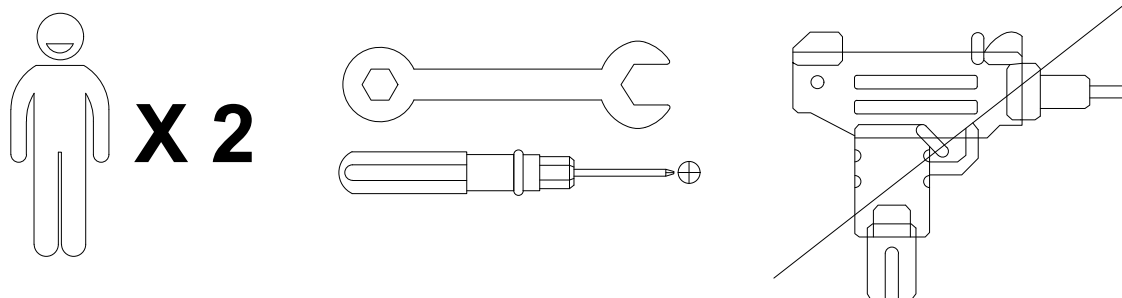













We recommend using hand tools for assembly, If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

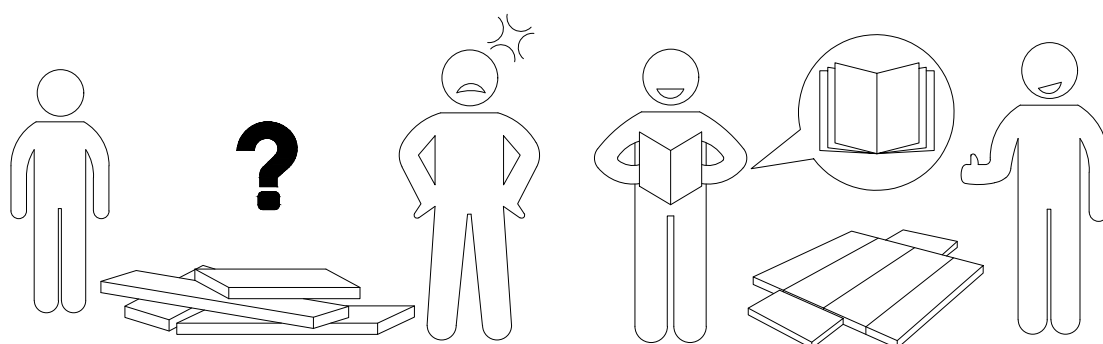

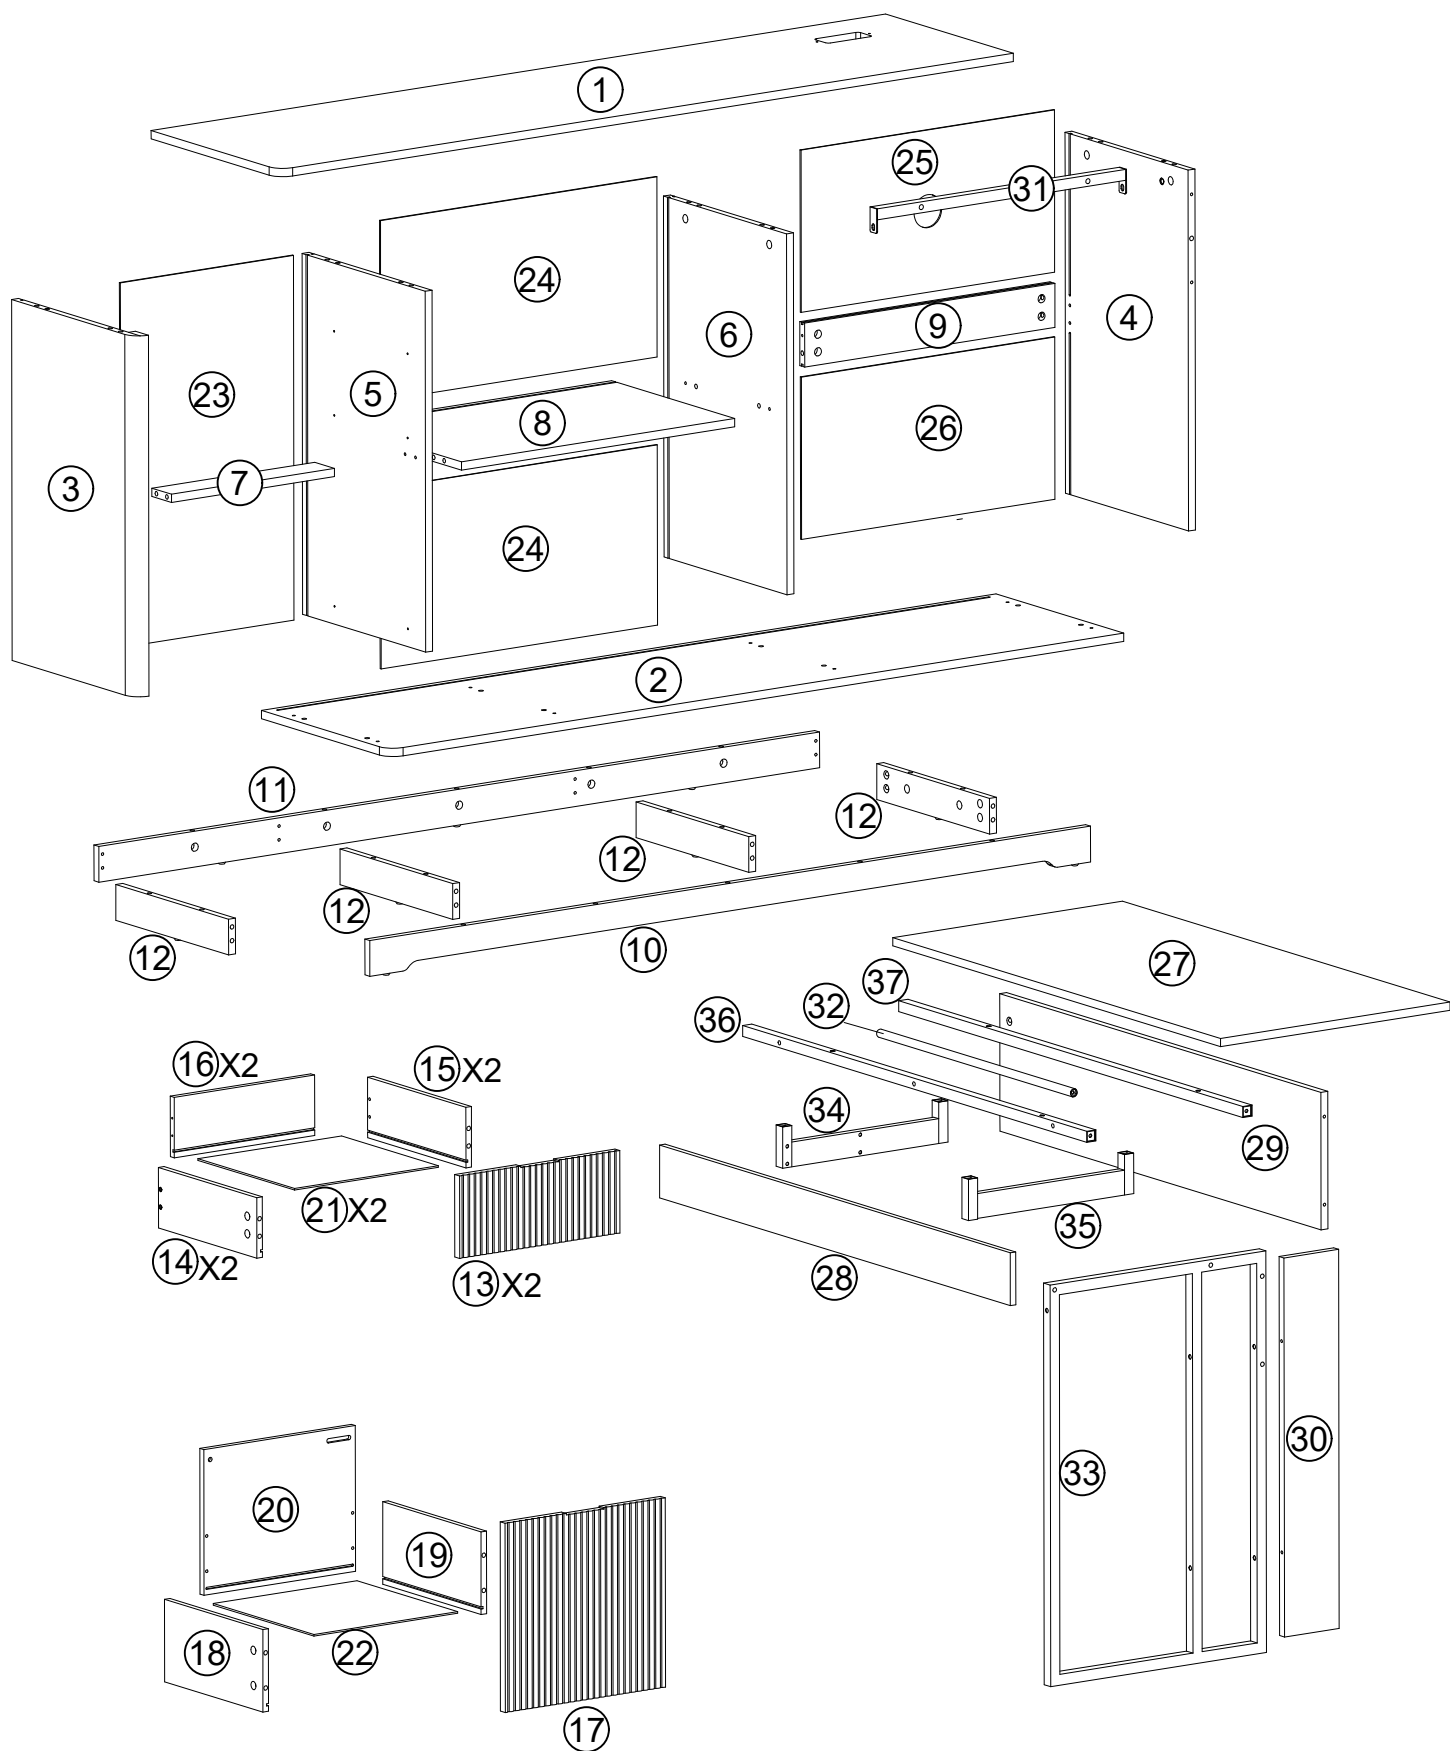

Parts List


The following accessories are in BOX NO.1/2

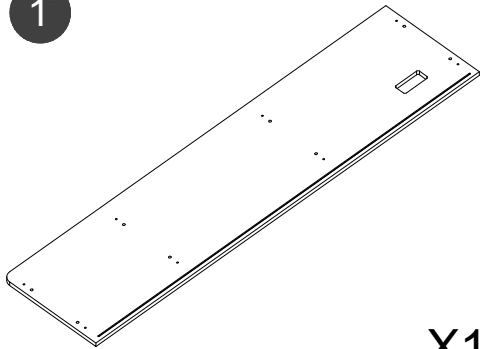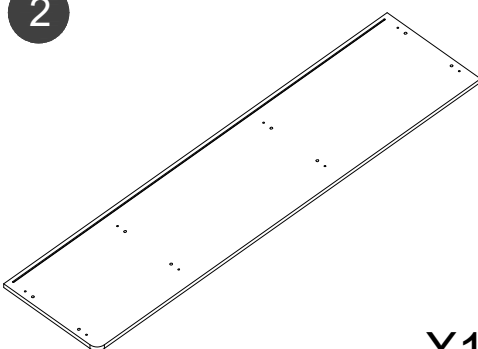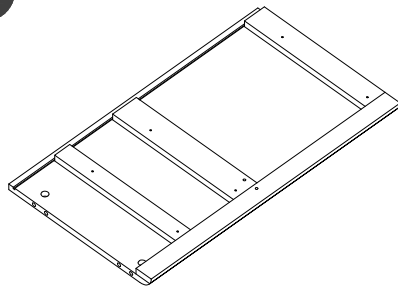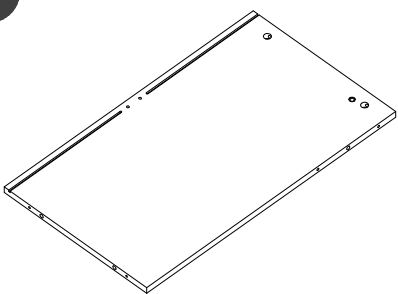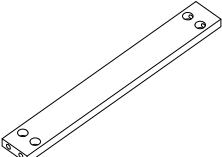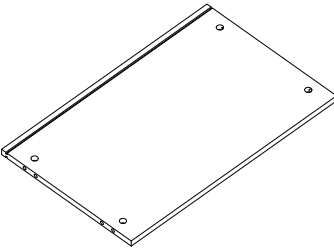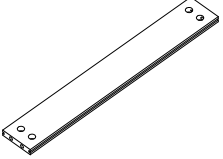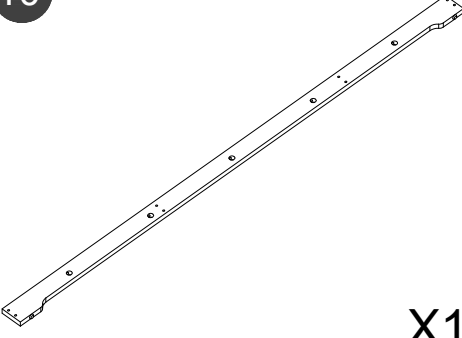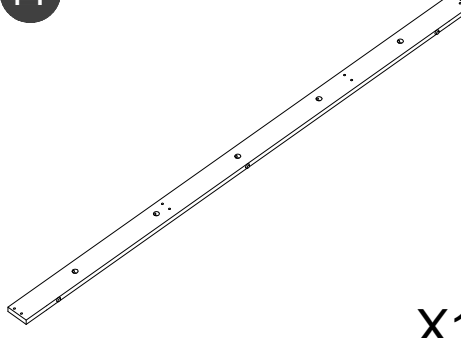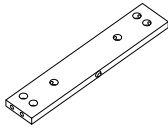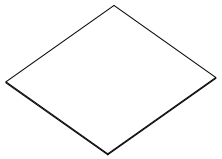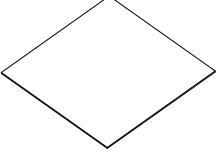1  X1	2  X1	3  X1
4  X1	7  X1	8  X1
9  X1	10  X1	11  X1
12  X4	21  X2	22  X1

Parts List


The following accessories are in BOX NO.1/2 ↓

23

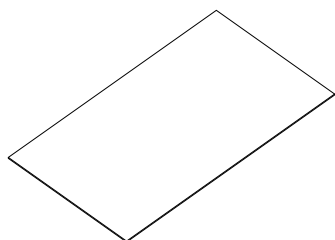


X1

24

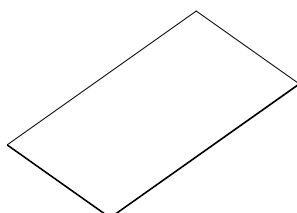


X2

25

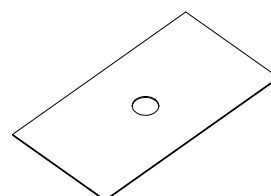


X1

26

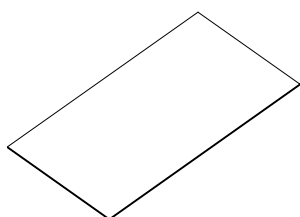


X1

27

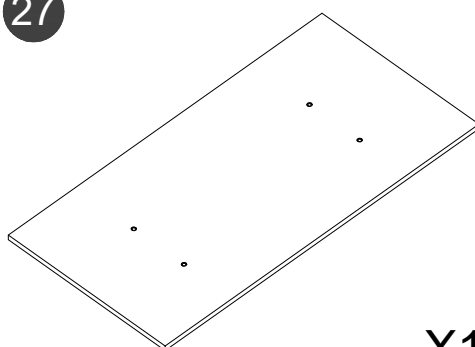


X1

28

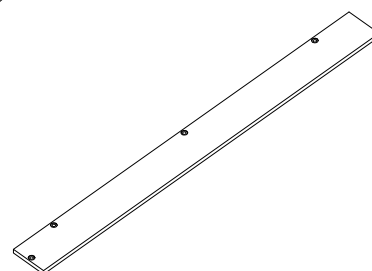


X1

29

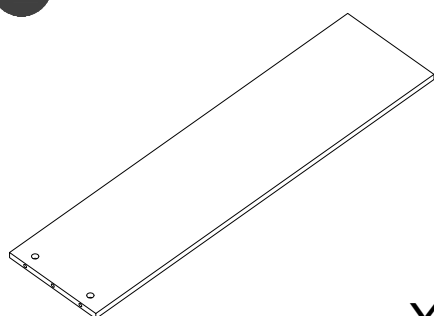

X1


















30

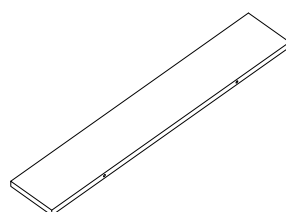


















X1

Parts List

The following accessories are in BOX NO.2/2↓

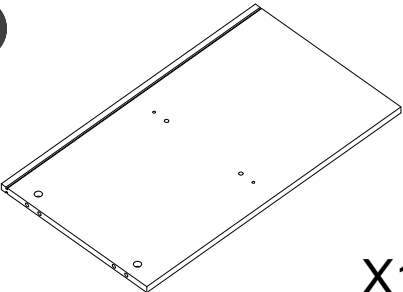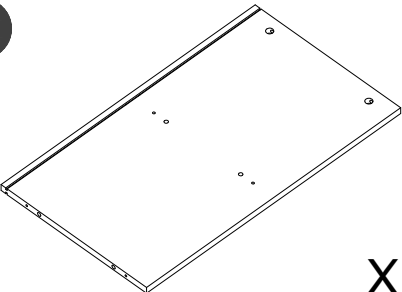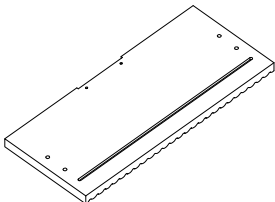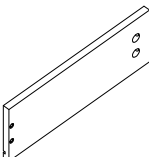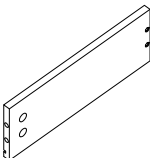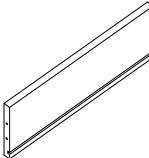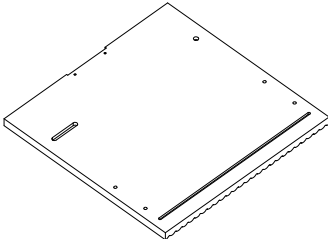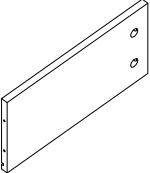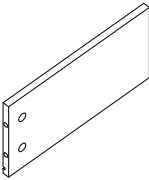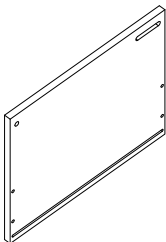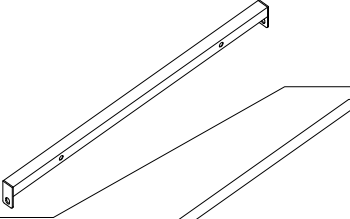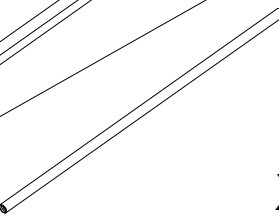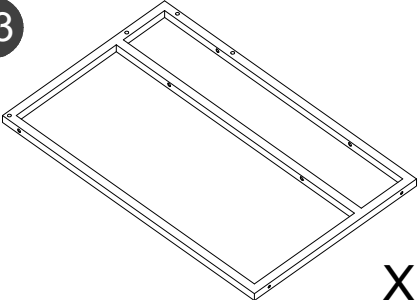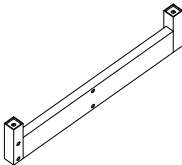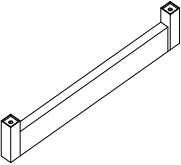
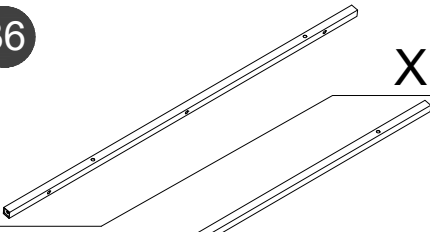
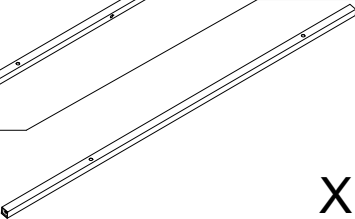
5  X1	6  X1	13  X2
14  X2	15  X2	16  X2
17  X1	18  X1	19  X1
20  X1	31  X1	
	32  X1	33  X1
34  X1	35  X1	36  X1
		37  X1





Hardware are in BOX NO.2/2

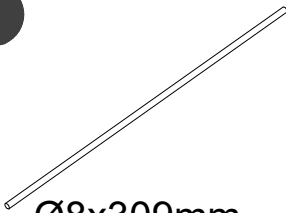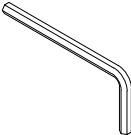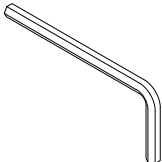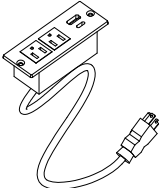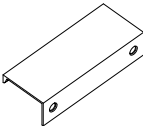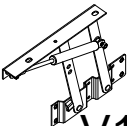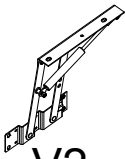A  M6x35mm X68	B  Φ15mm X68	C  Φ8x30mm X21	D  M3x12mm X6
E  M3.5x14mm X46	F  X20	G  M5x48mm X8	H  M7x48mm X6
I  Ø8x309mm X2	J  3# X1	K  4# X1	L  Ø20mm X24
M  M4x35mm X12	N  X2	O  M6x12mm X16	P  M6x28mm X4
Q  M6x40mm X4	R  M6x40mm X4	S  X1	T  X1
U  X3	V  V1 X3	CL  X3	DL  X3
	V2  V2 X1	CR  X3	DR  X3


Using your own screwdriver will make assembly easier.

Step 1

A	x6	E	x12	CL	x3	CR	x3
							
M6x35mm		M3.5x14mm					

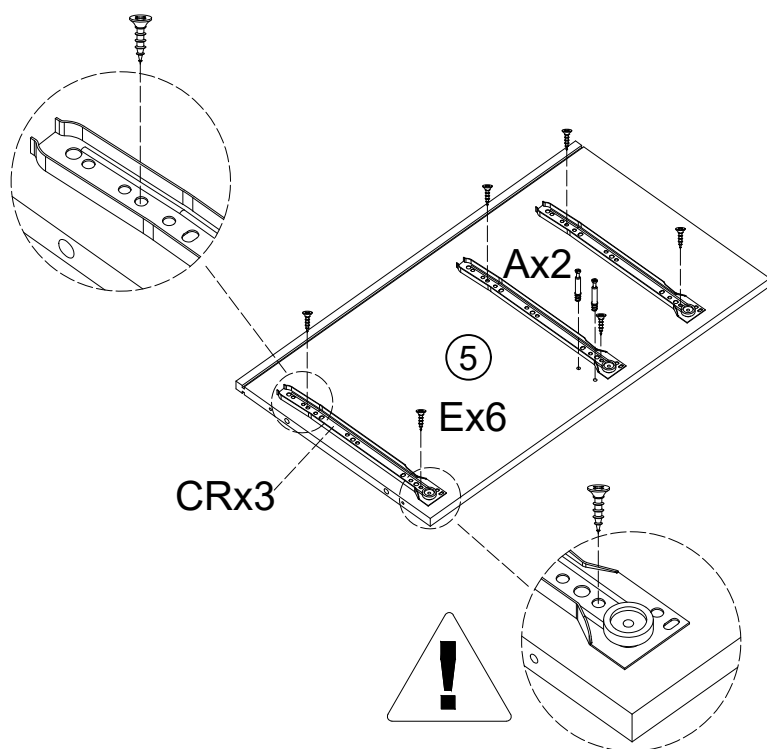
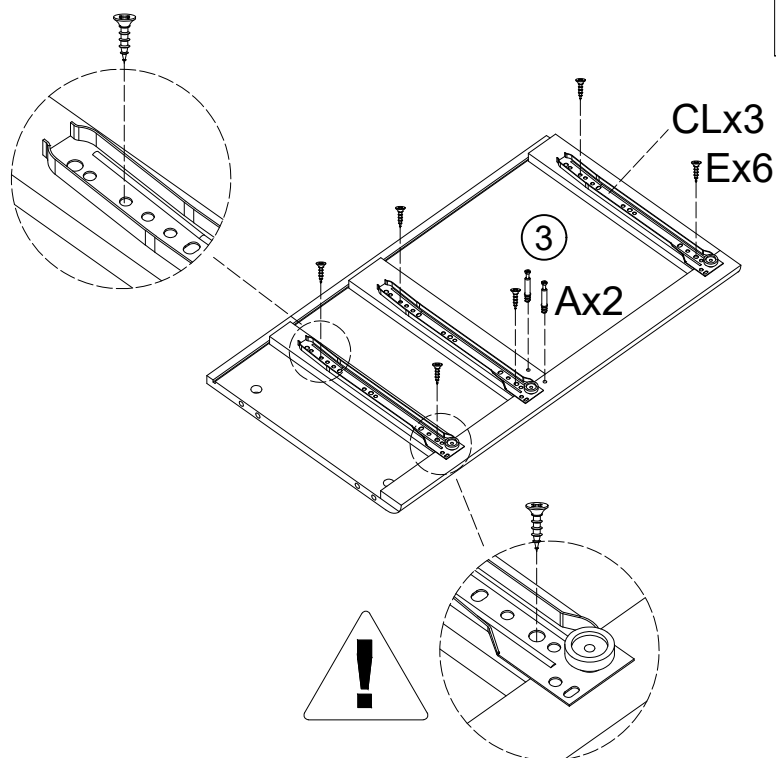
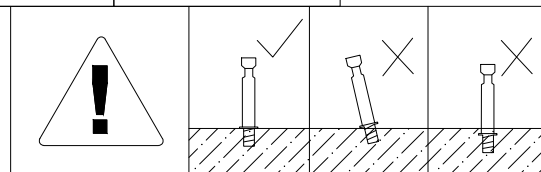
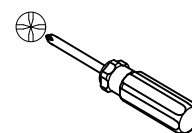


rotate 180°

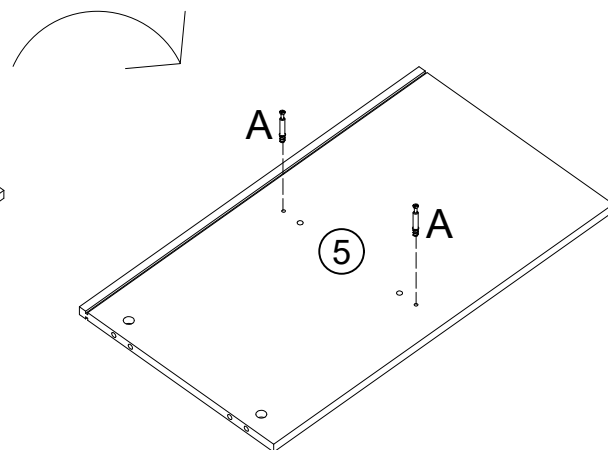

Step 2




B	x6	C	x2
			
$\Phi 15\text{mm}$		$\Phi 8 \times 30\text{mm}$	

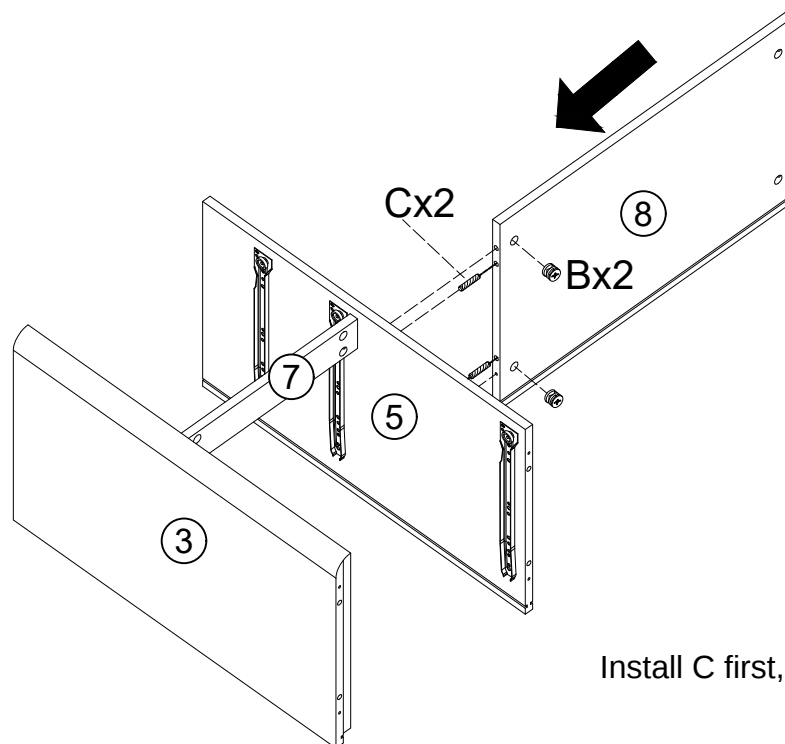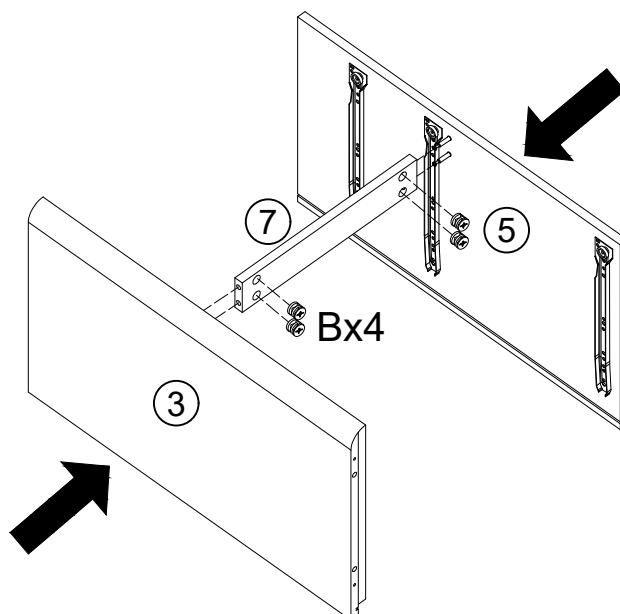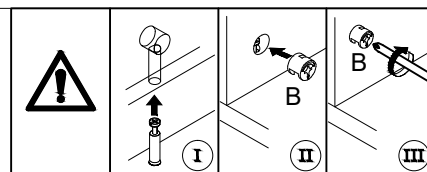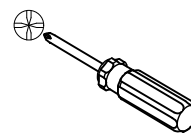

Install C first, then install B.





Step 3

A	x4	B	x2	C	x2
					
M6x35mm		Φ15mm		Φ8x30mm	

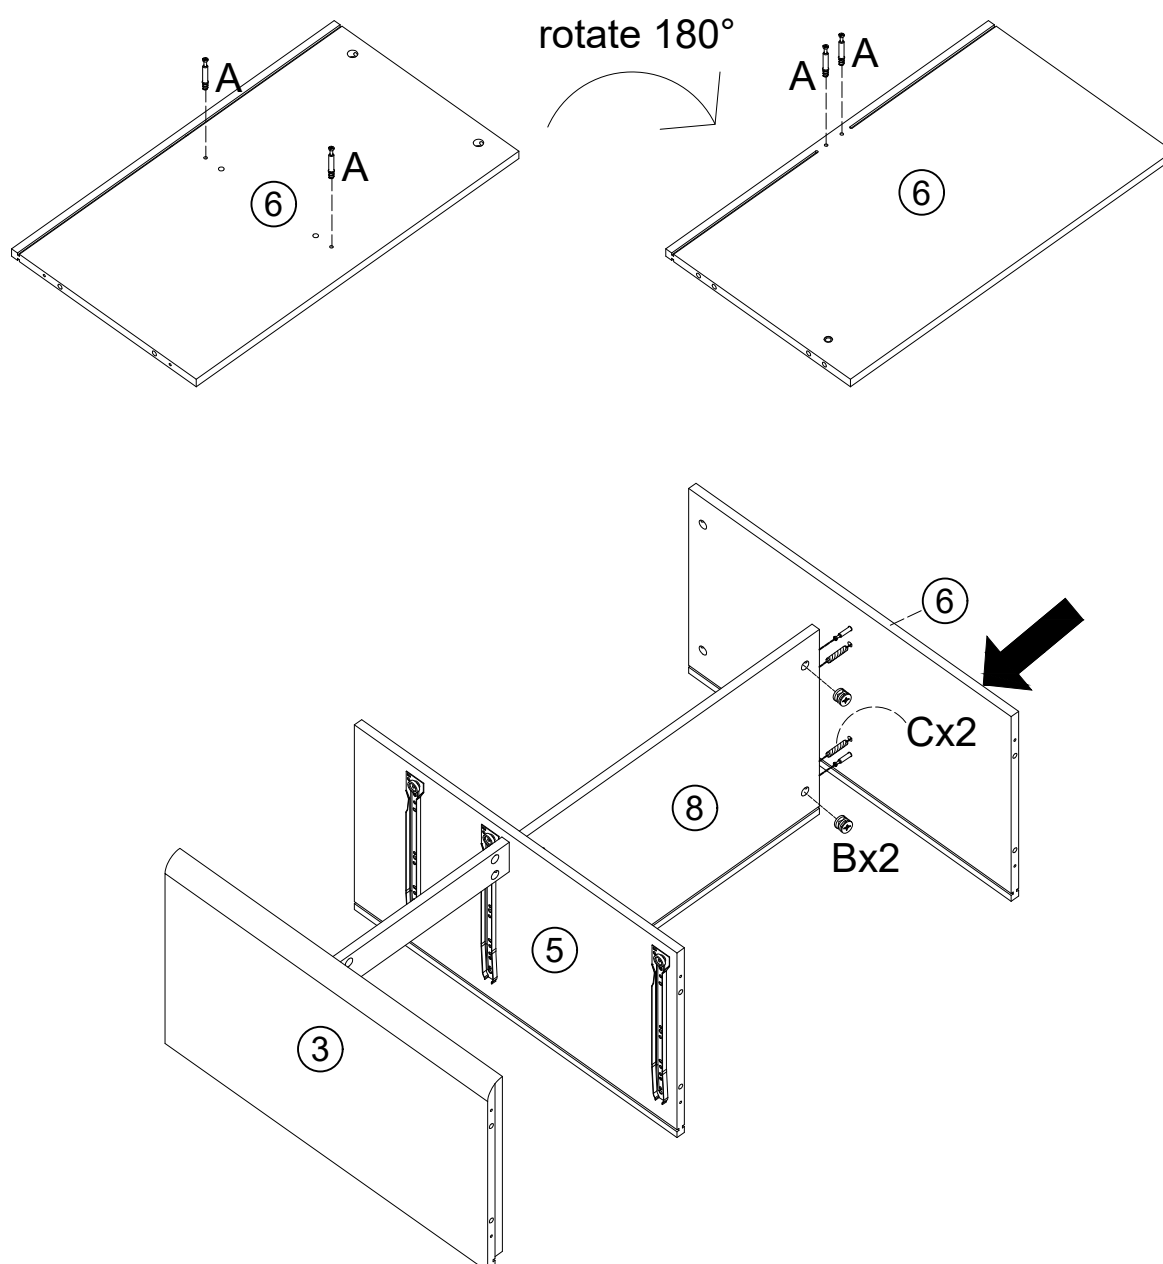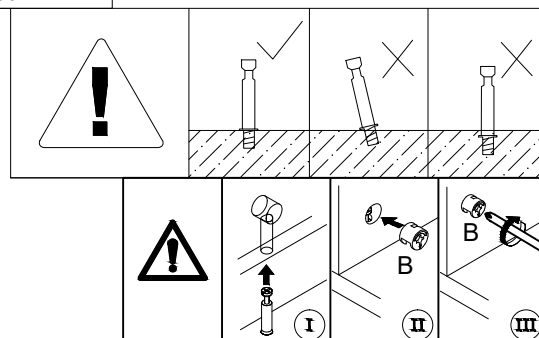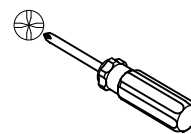





Step 4

A	x2	B	x4	L	x4
					
M6x35mm		Φ15mm		Ø20mm	

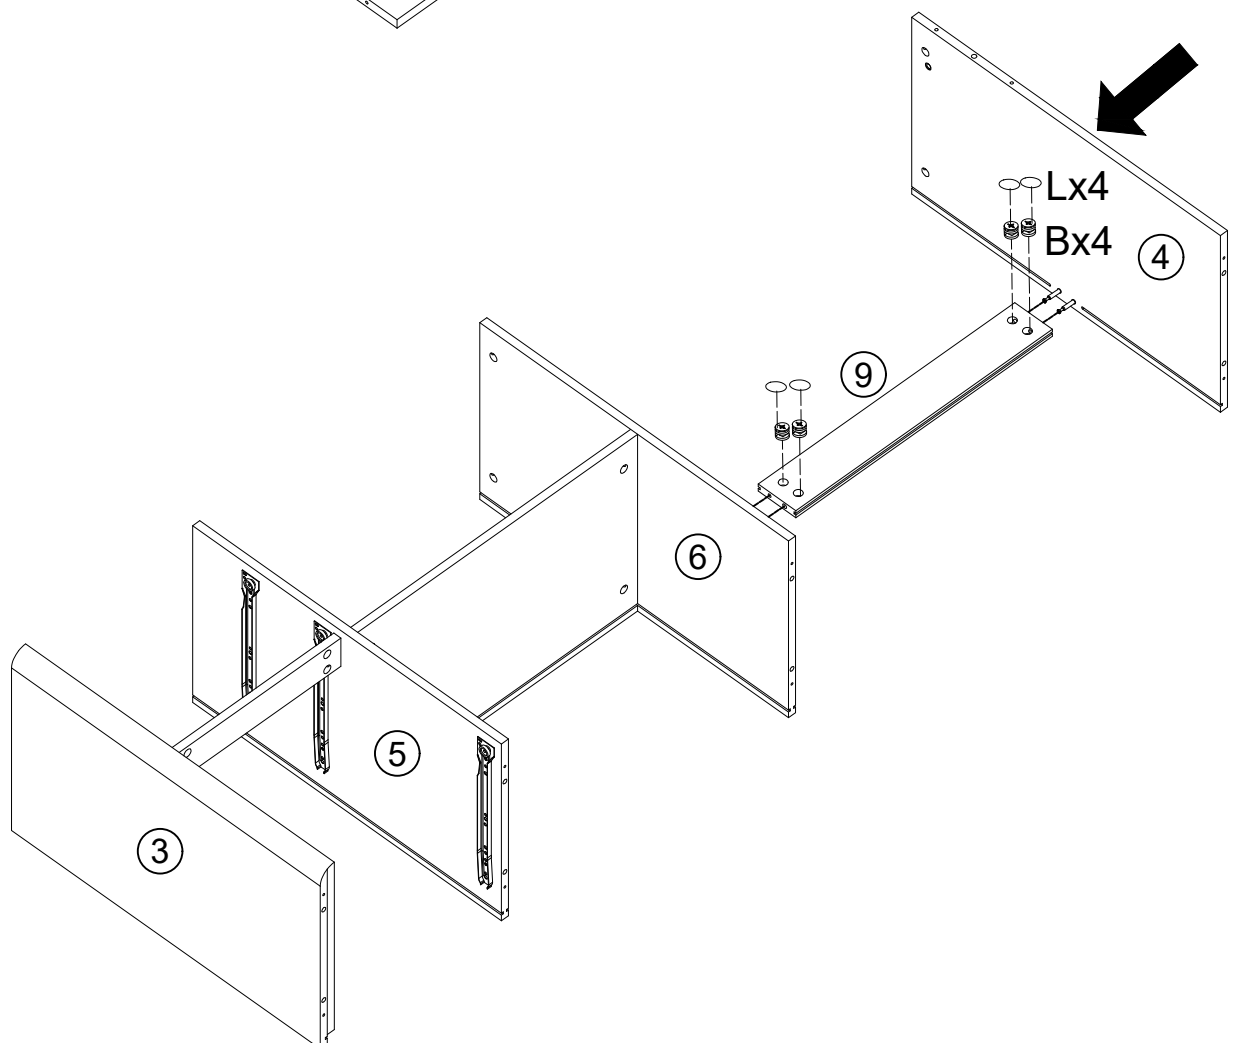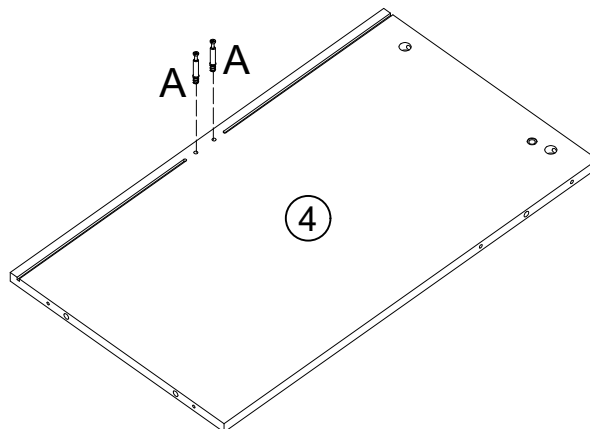
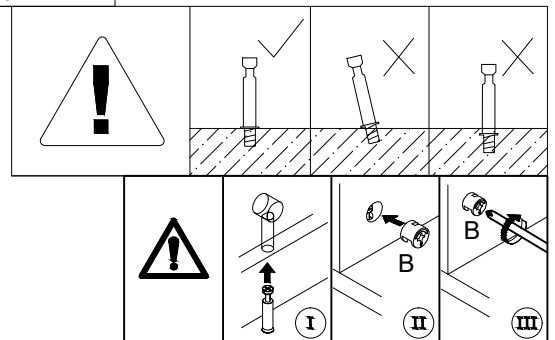
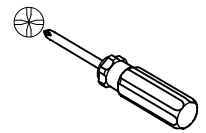





Step 5

A	x18
	
M6x35mm	

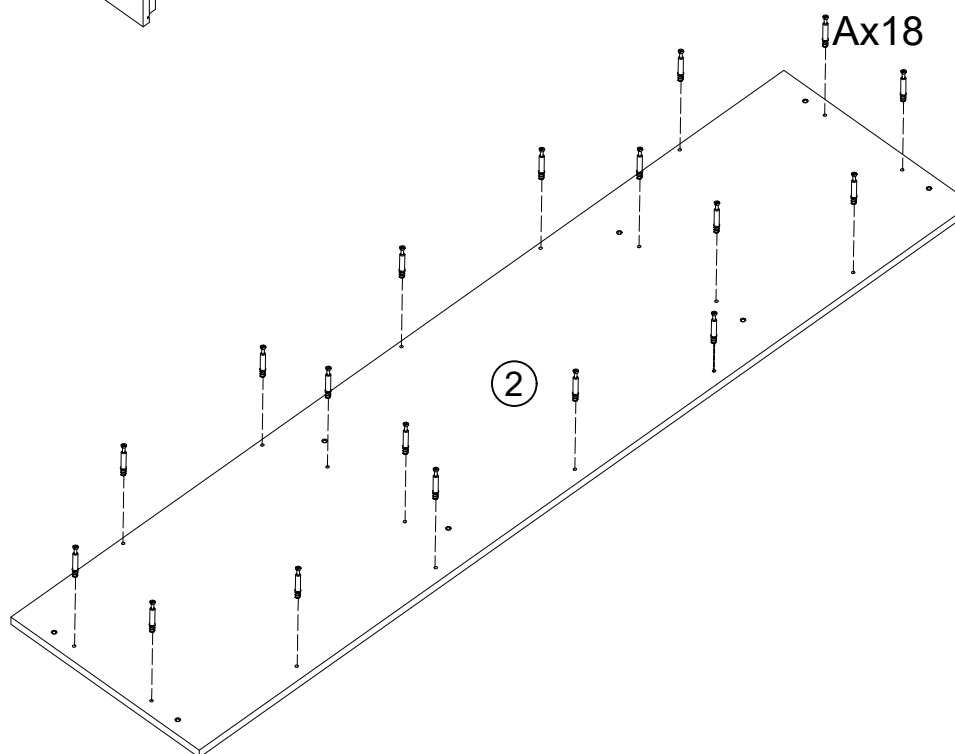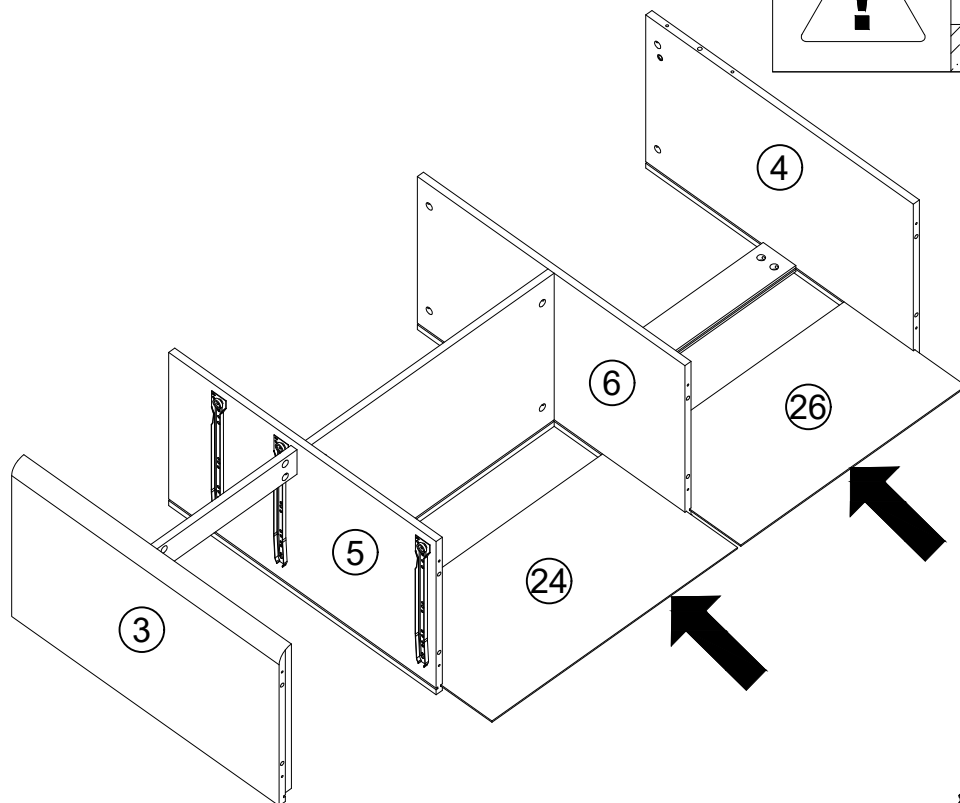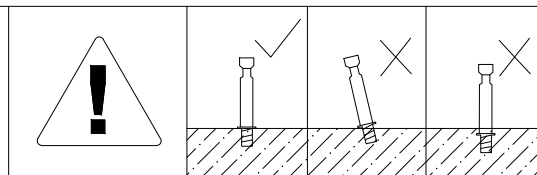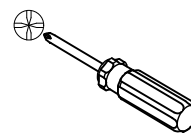





Step 6

A	x16	G	x8	C	x8
					
M6x35mm		M5x48mm		Ø8x30mm	

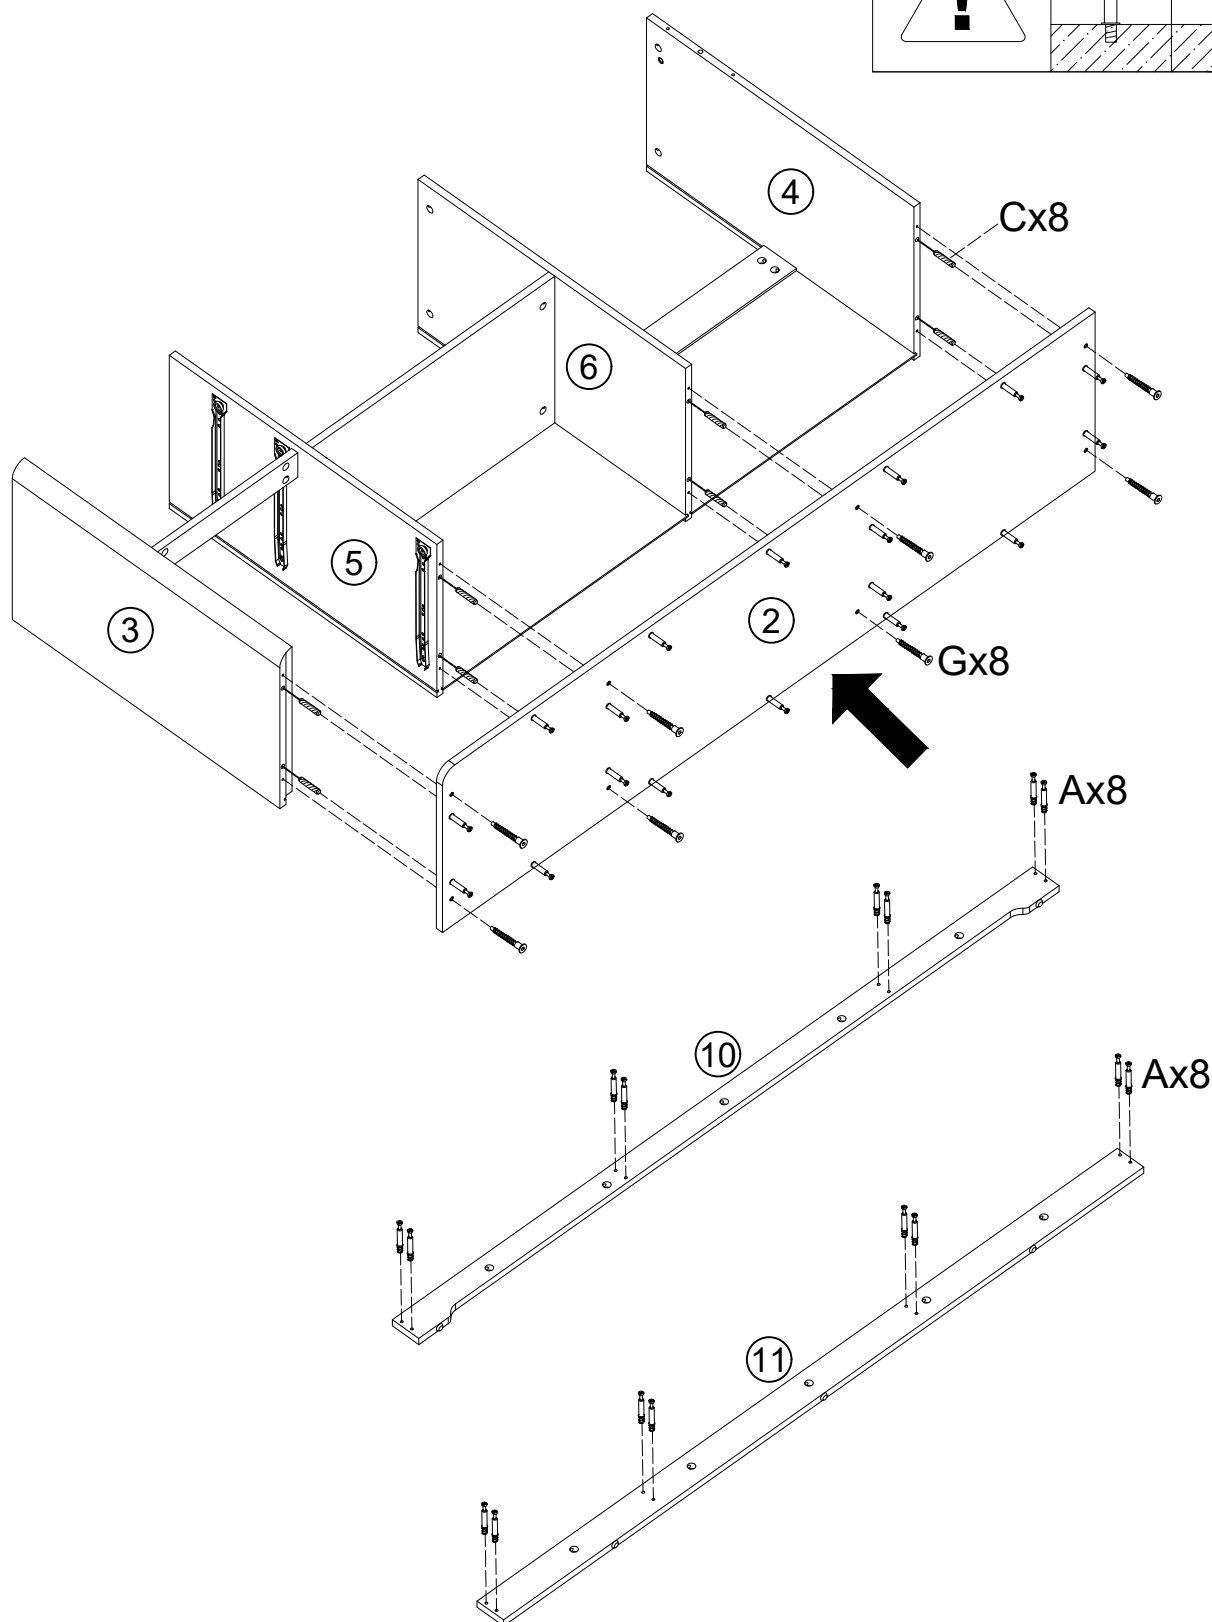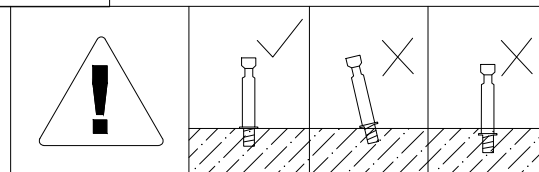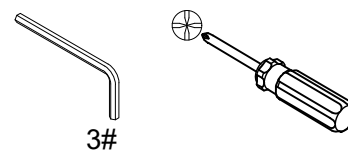


Step 7

B	x34
	
Φ15mm	

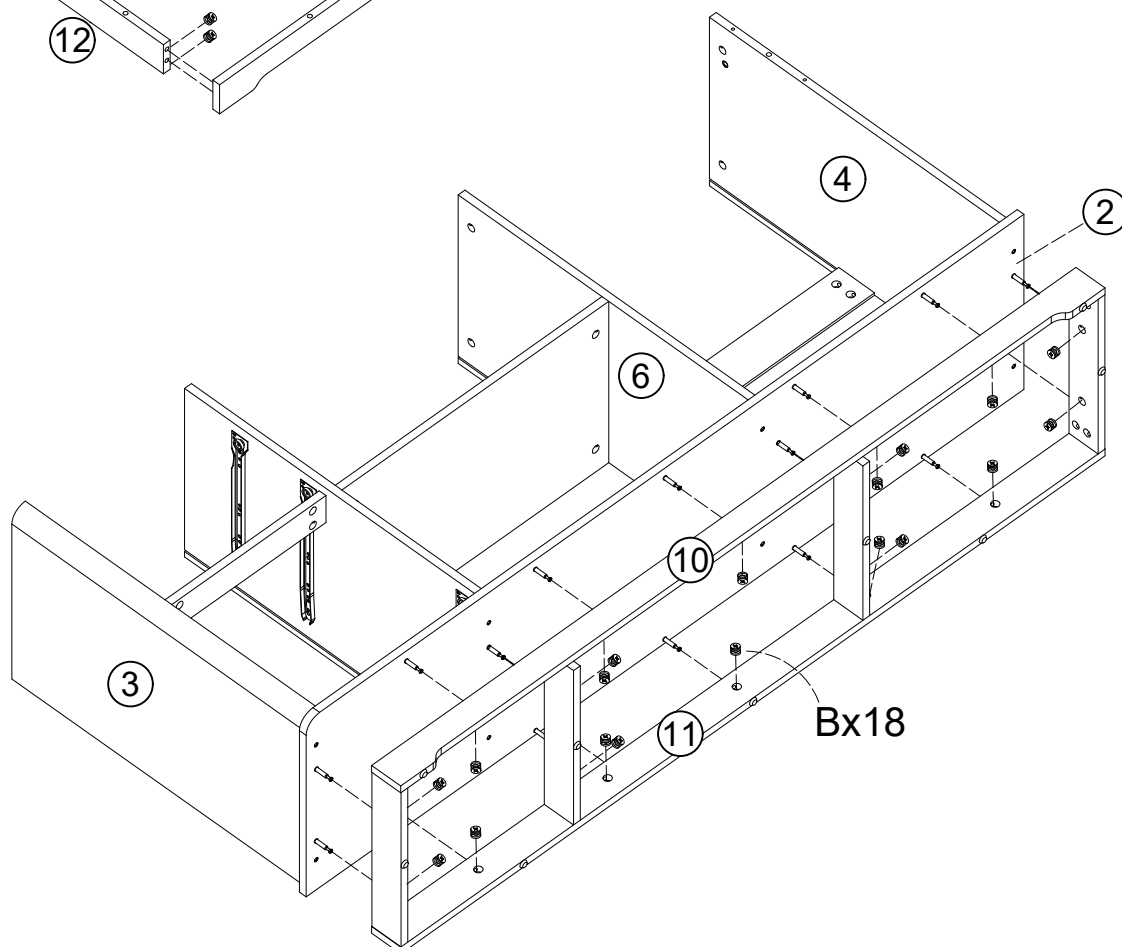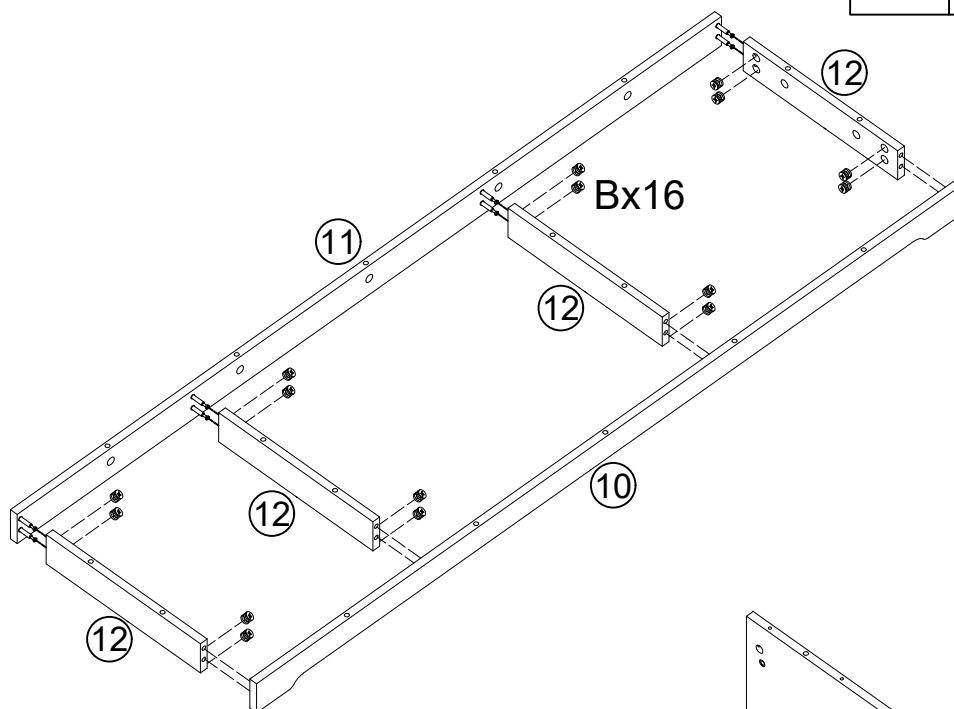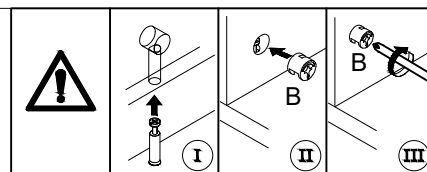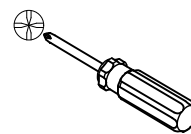






Step 8

O	x2
	
M6x12mm	


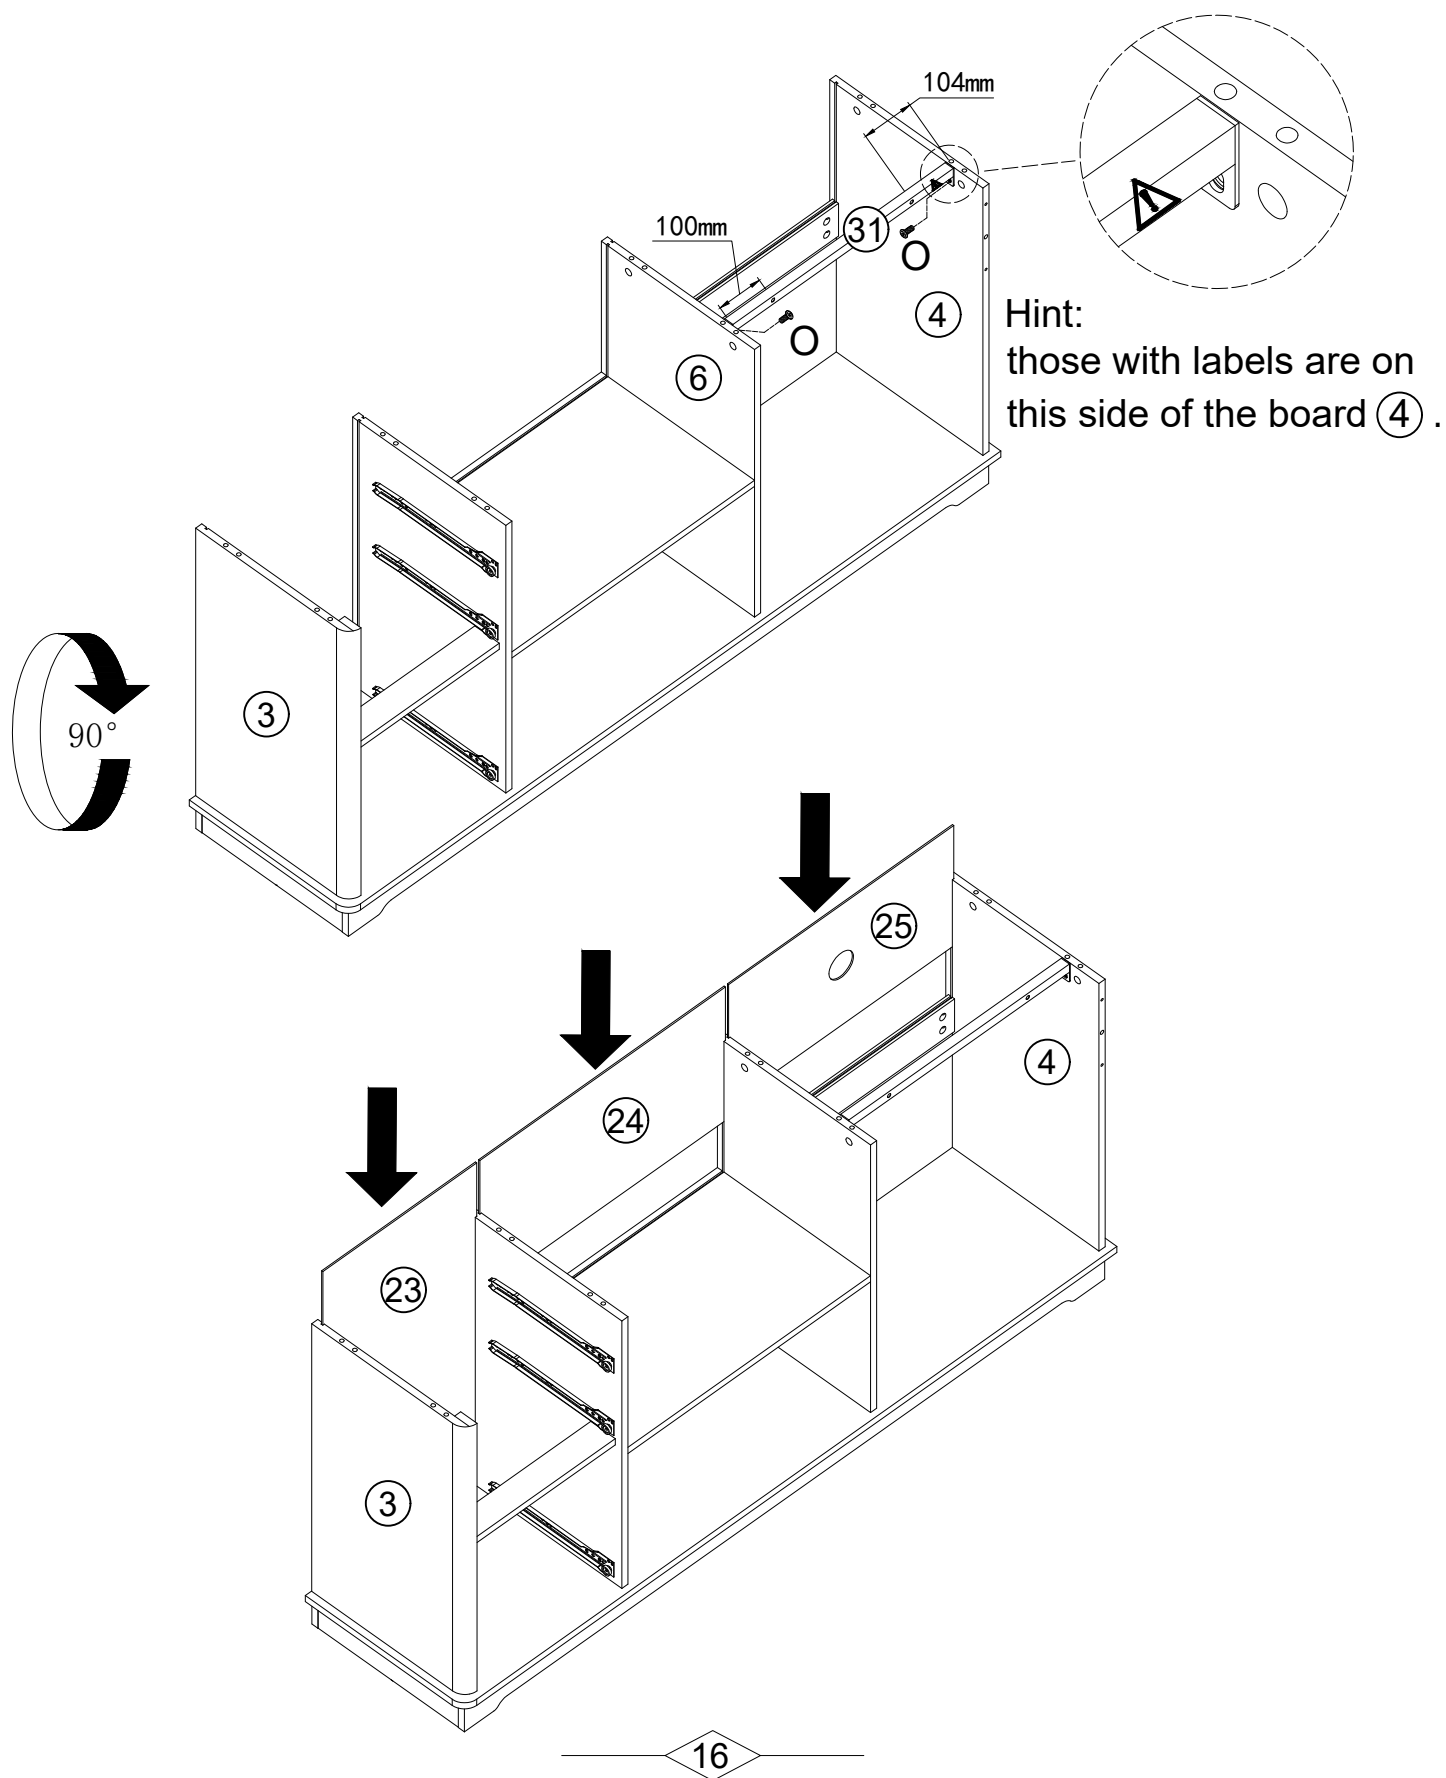










Step 9

A	x8	B	x8	C	x8	L	x6
							
M6x35mm		Φ15mm		Φ8x30mm		Ø20mm	

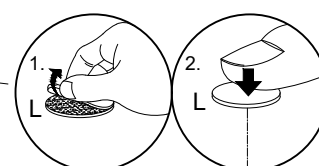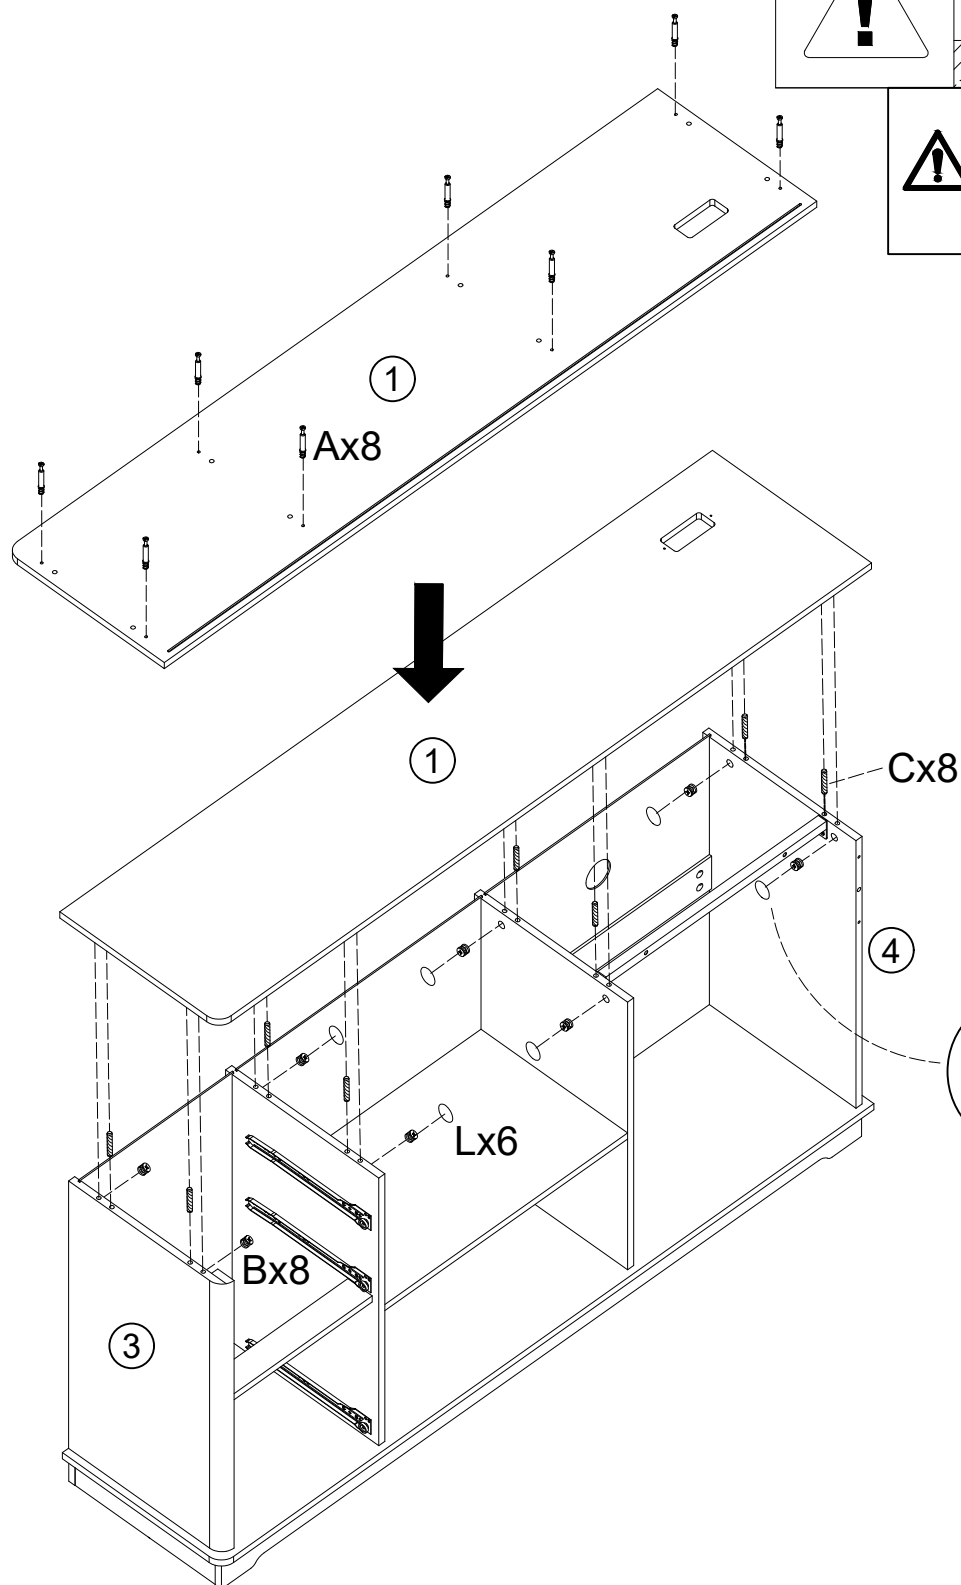
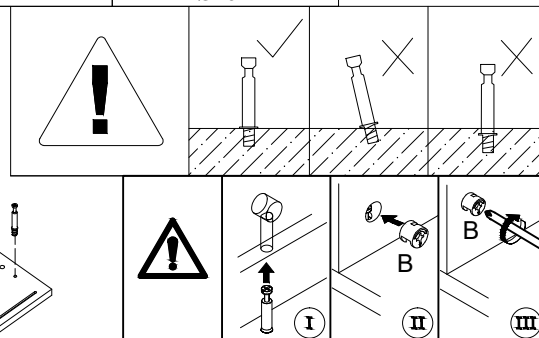
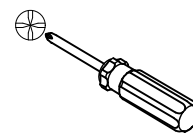







Step 10

D	x6	U	x3				
							
M3x12mm							
A	x12	B	x4	M	x8	L	x4
							
M6x35mm		Φ15mm		M4x35mm		Ø20mm	

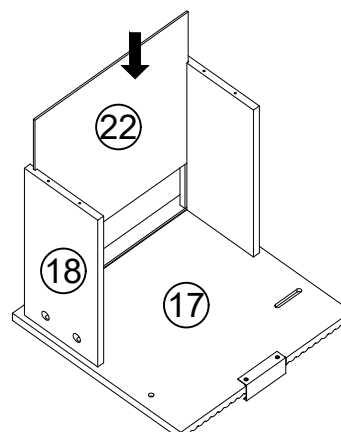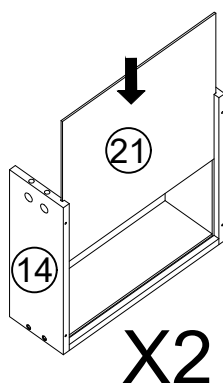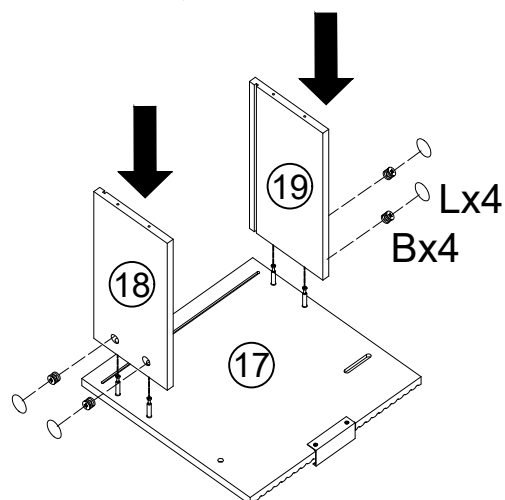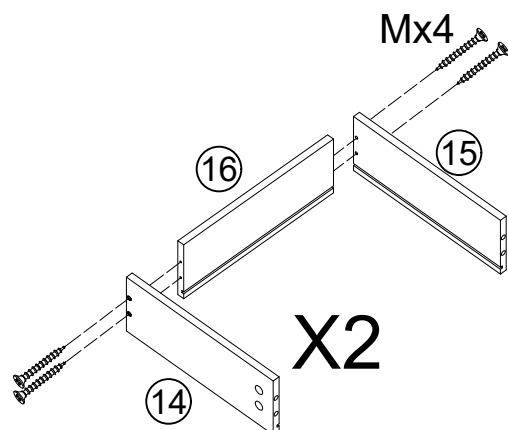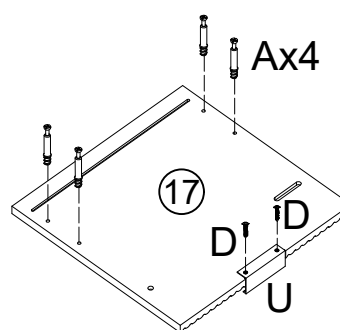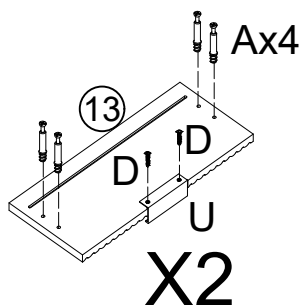
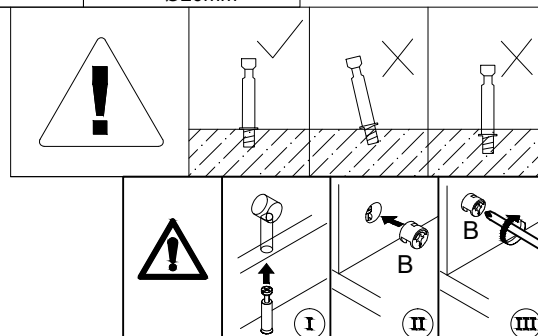
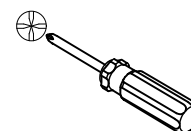








Step 11

I	x2	DL	x3	DR	x3		
							
Ø8x309mm							
B	x8	E	x12	M	x4	L	x8
							
Φ15mm		M3.5x14mm		M4x35mm		Ø20mm	

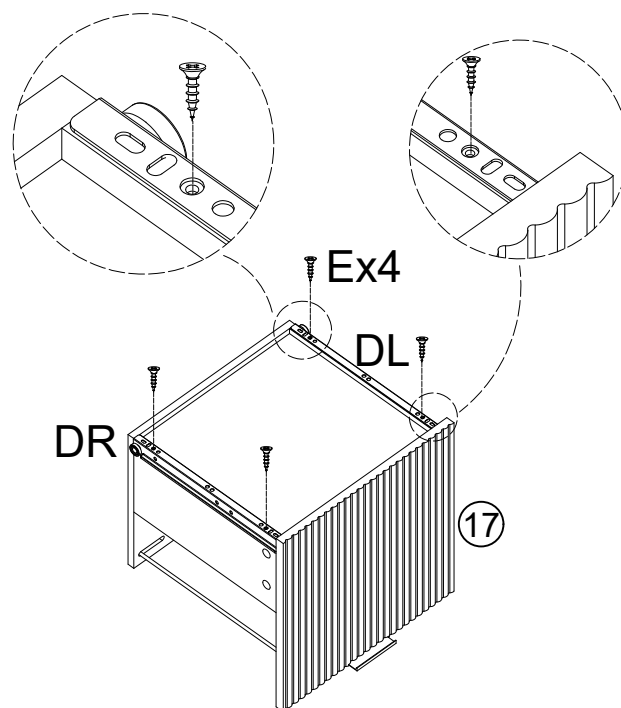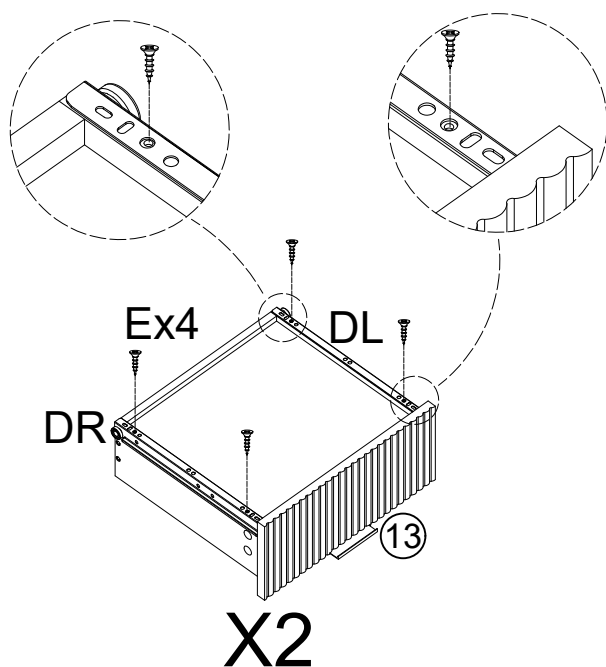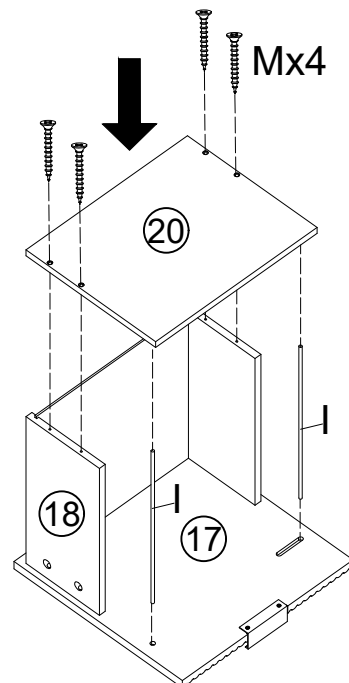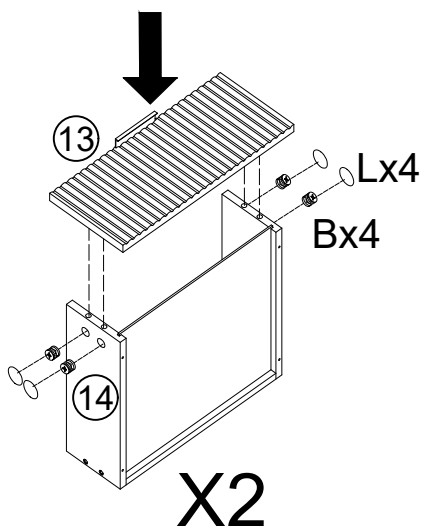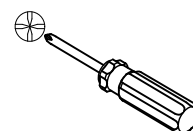



Step 12

A	x2	E	x2	T	x1
					
M6x35mm		M3.5x14mm			

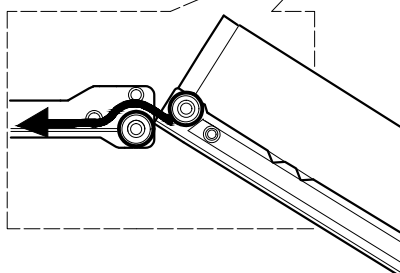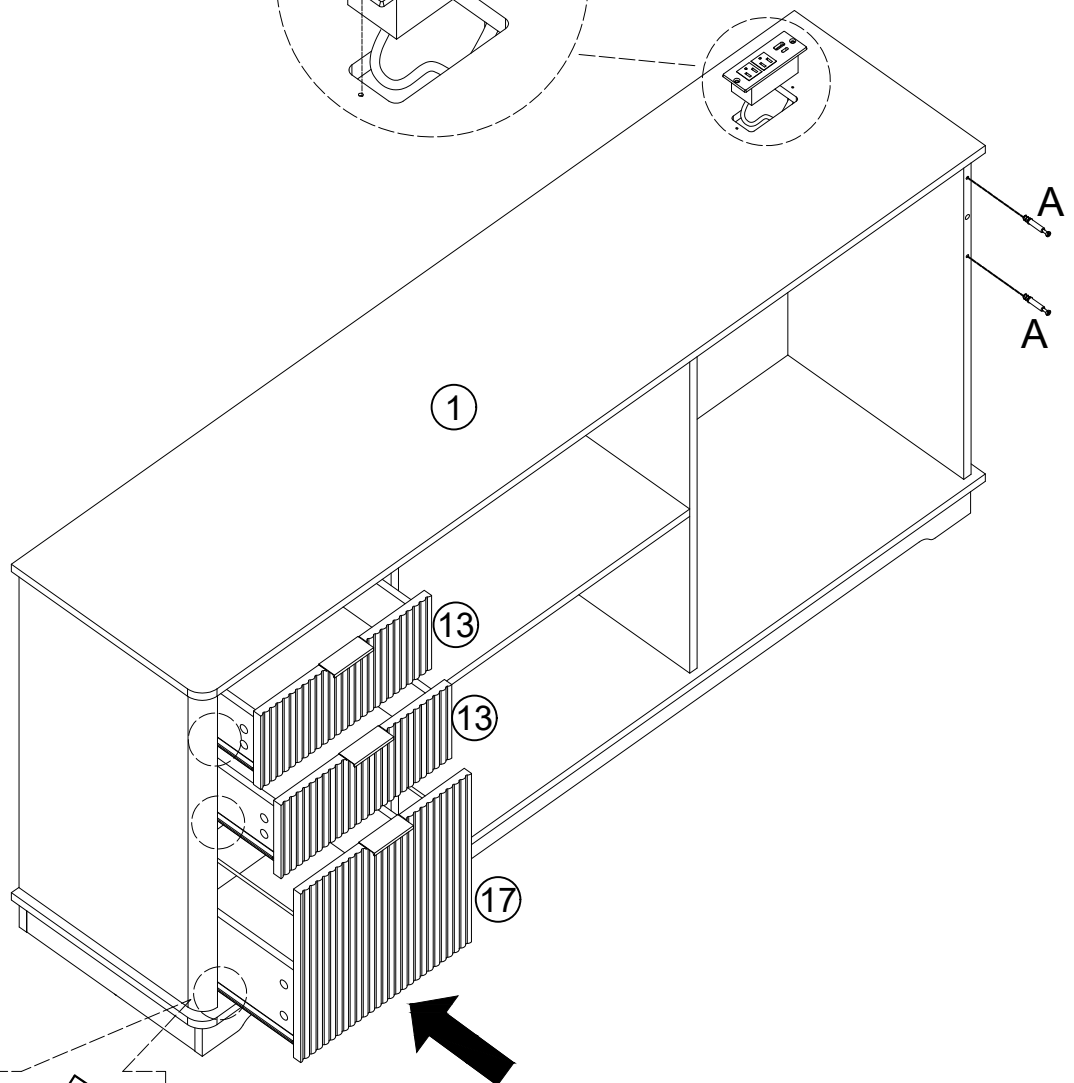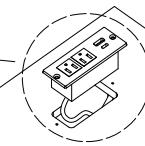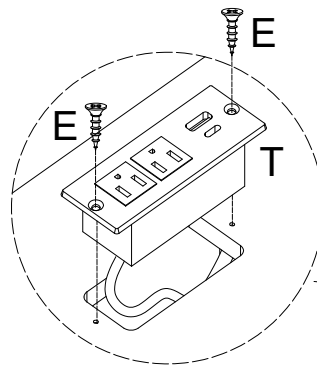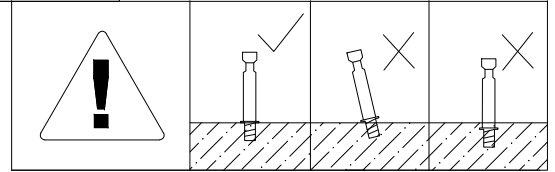
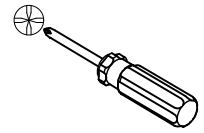


Step 13


N	x2	H	x4
			
		M7x48mm	


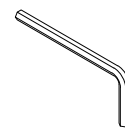


4#

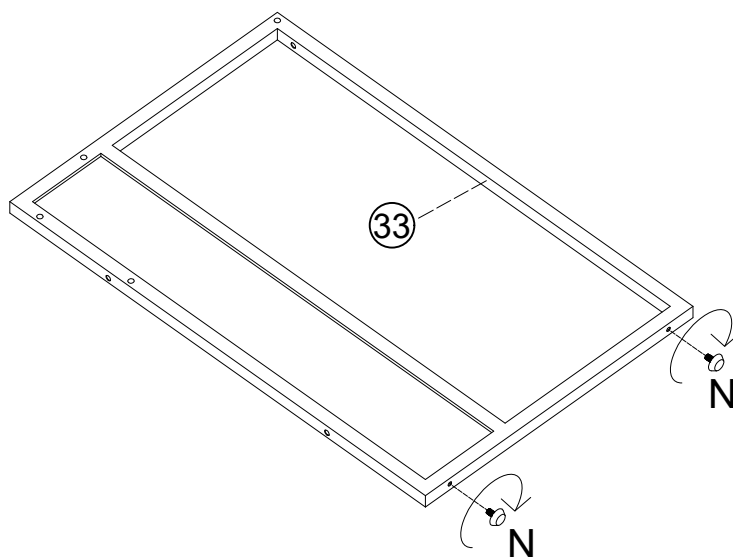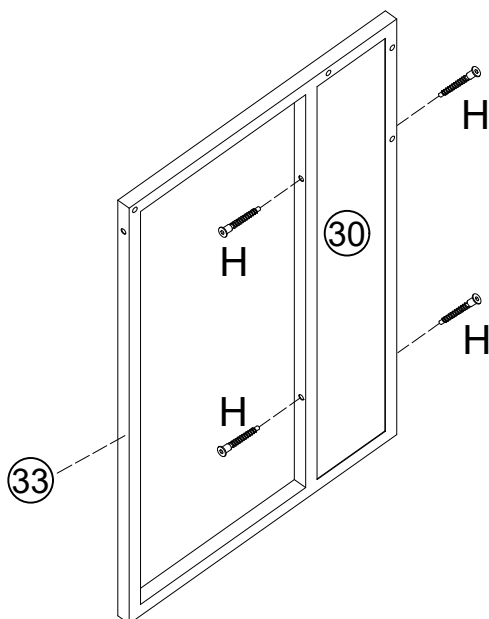



Step 14

L	x2				
					
Ø20mm					
B	x2	C	x1	H	x2
					
Φ15mm		Φ8x30mm		M7x48mm	

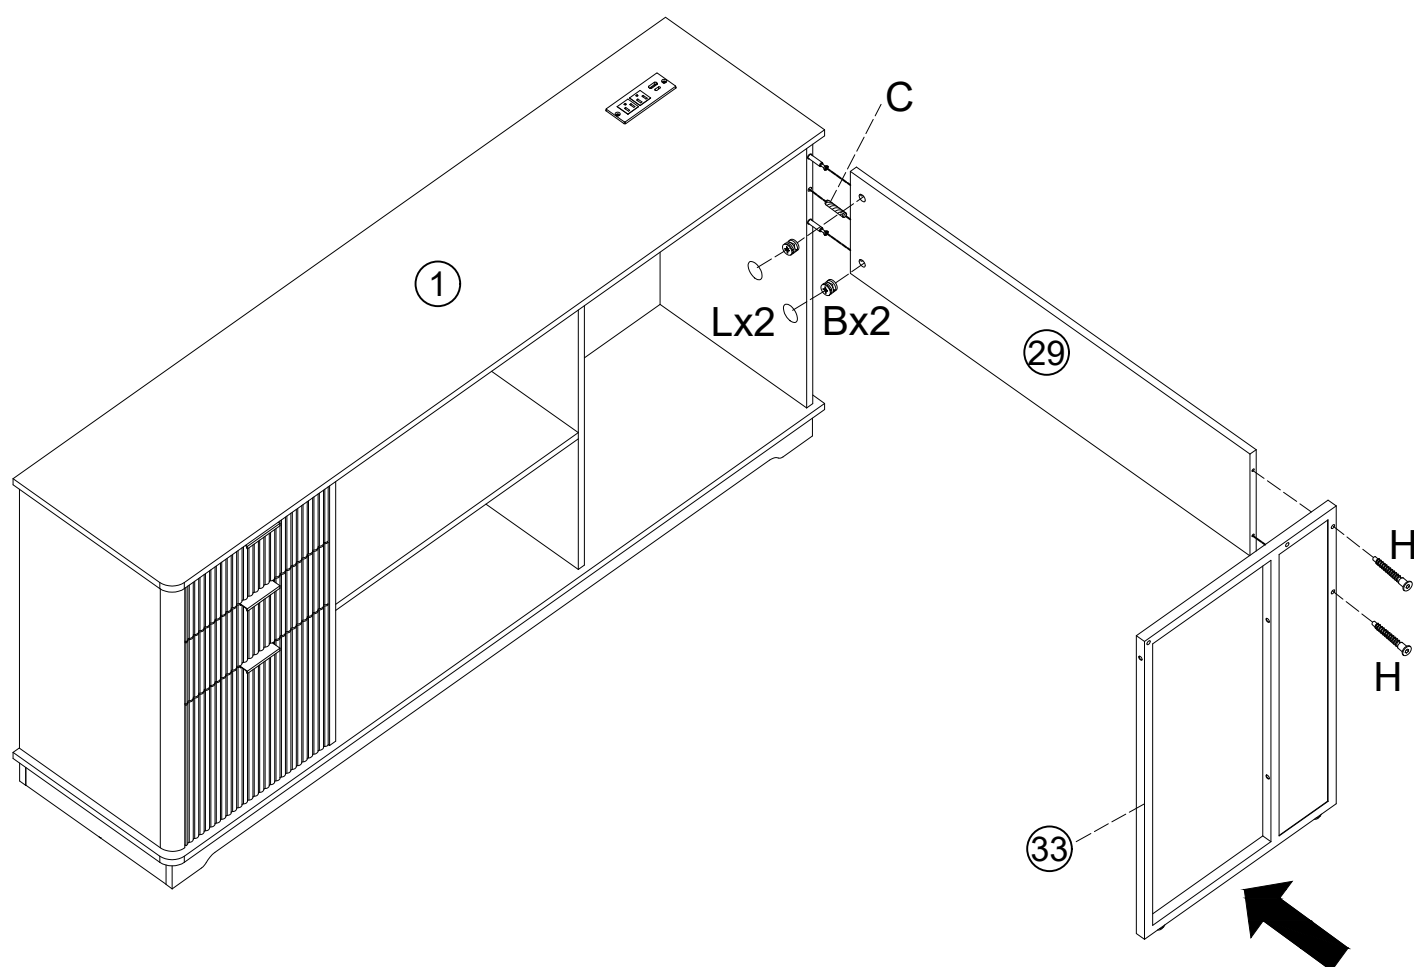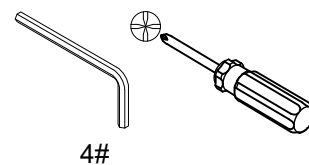


Step 15

Q	x4
	
M6x40mm	

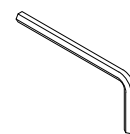



4#

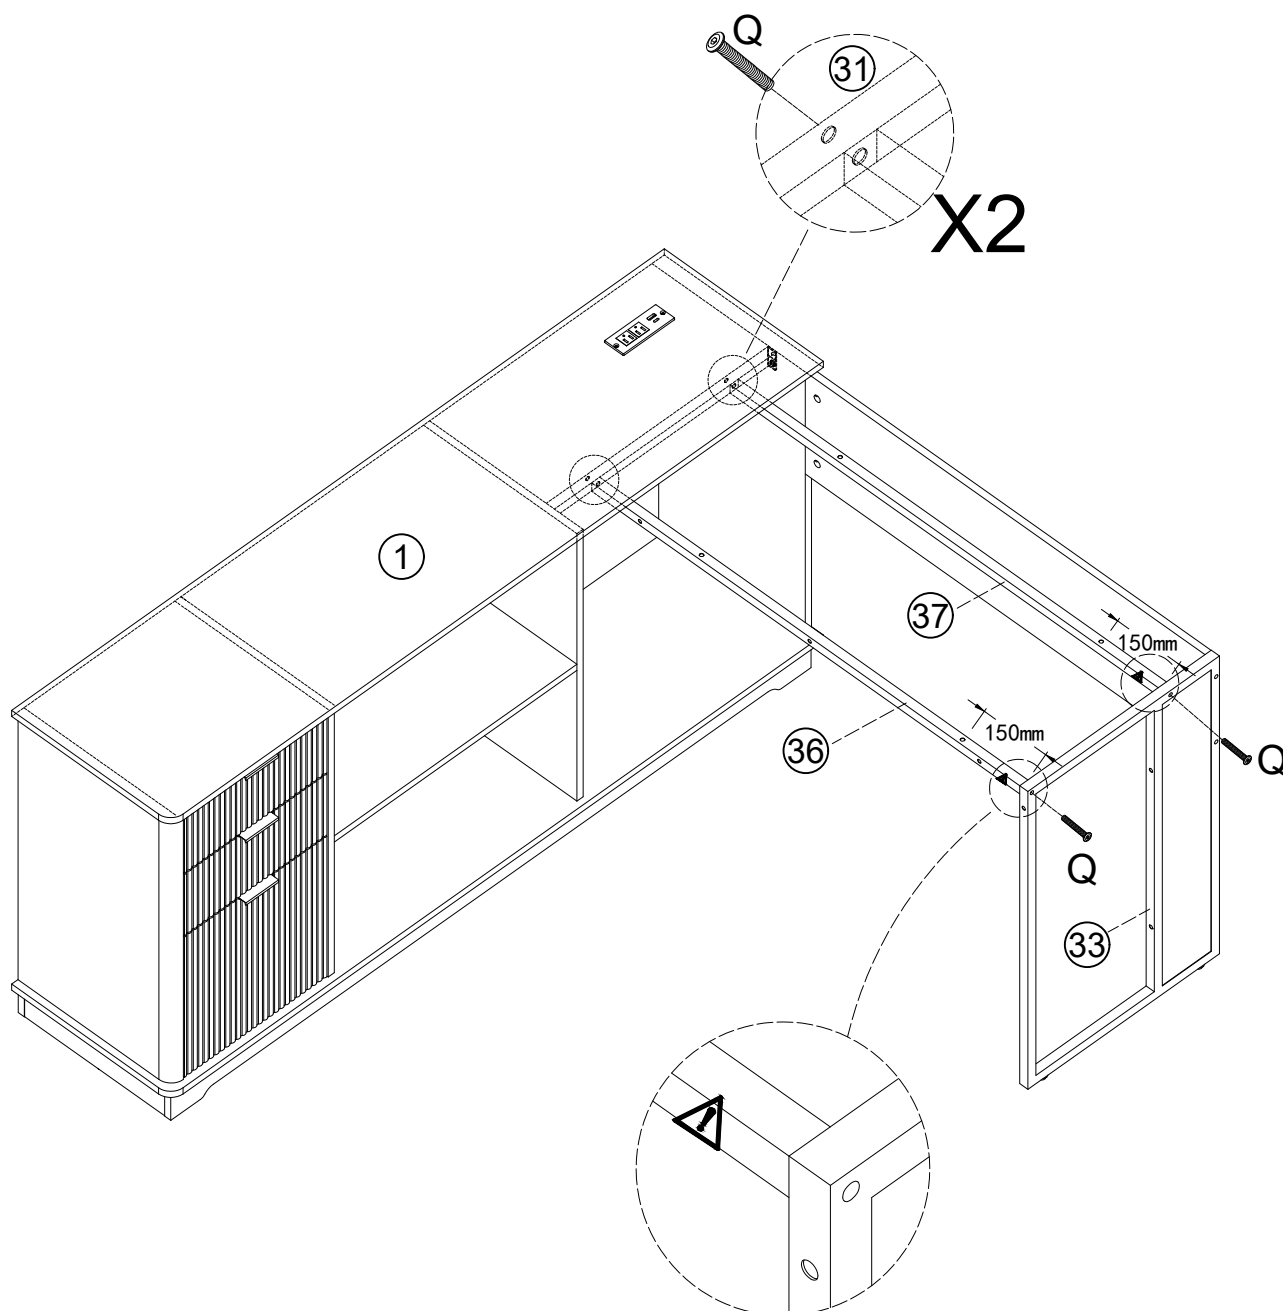


Hint:
with the labelled side on the 33rd tube

Step 16


R	x4
	
M6x40mm	

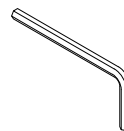


4#

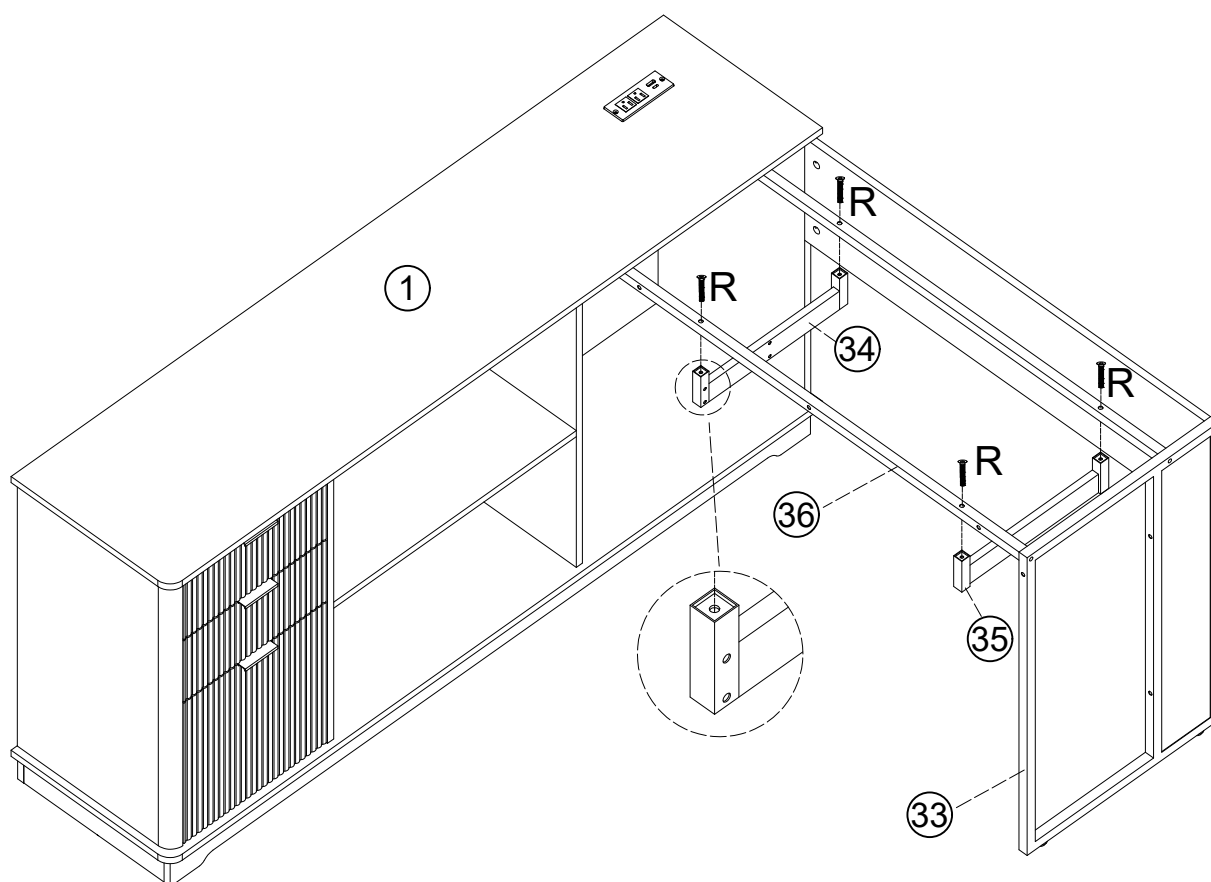


Step 17

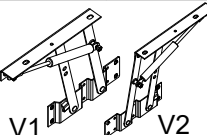O	x8	V	x1
			
M6x12mm		V1 V2	

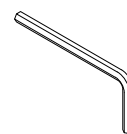


4#

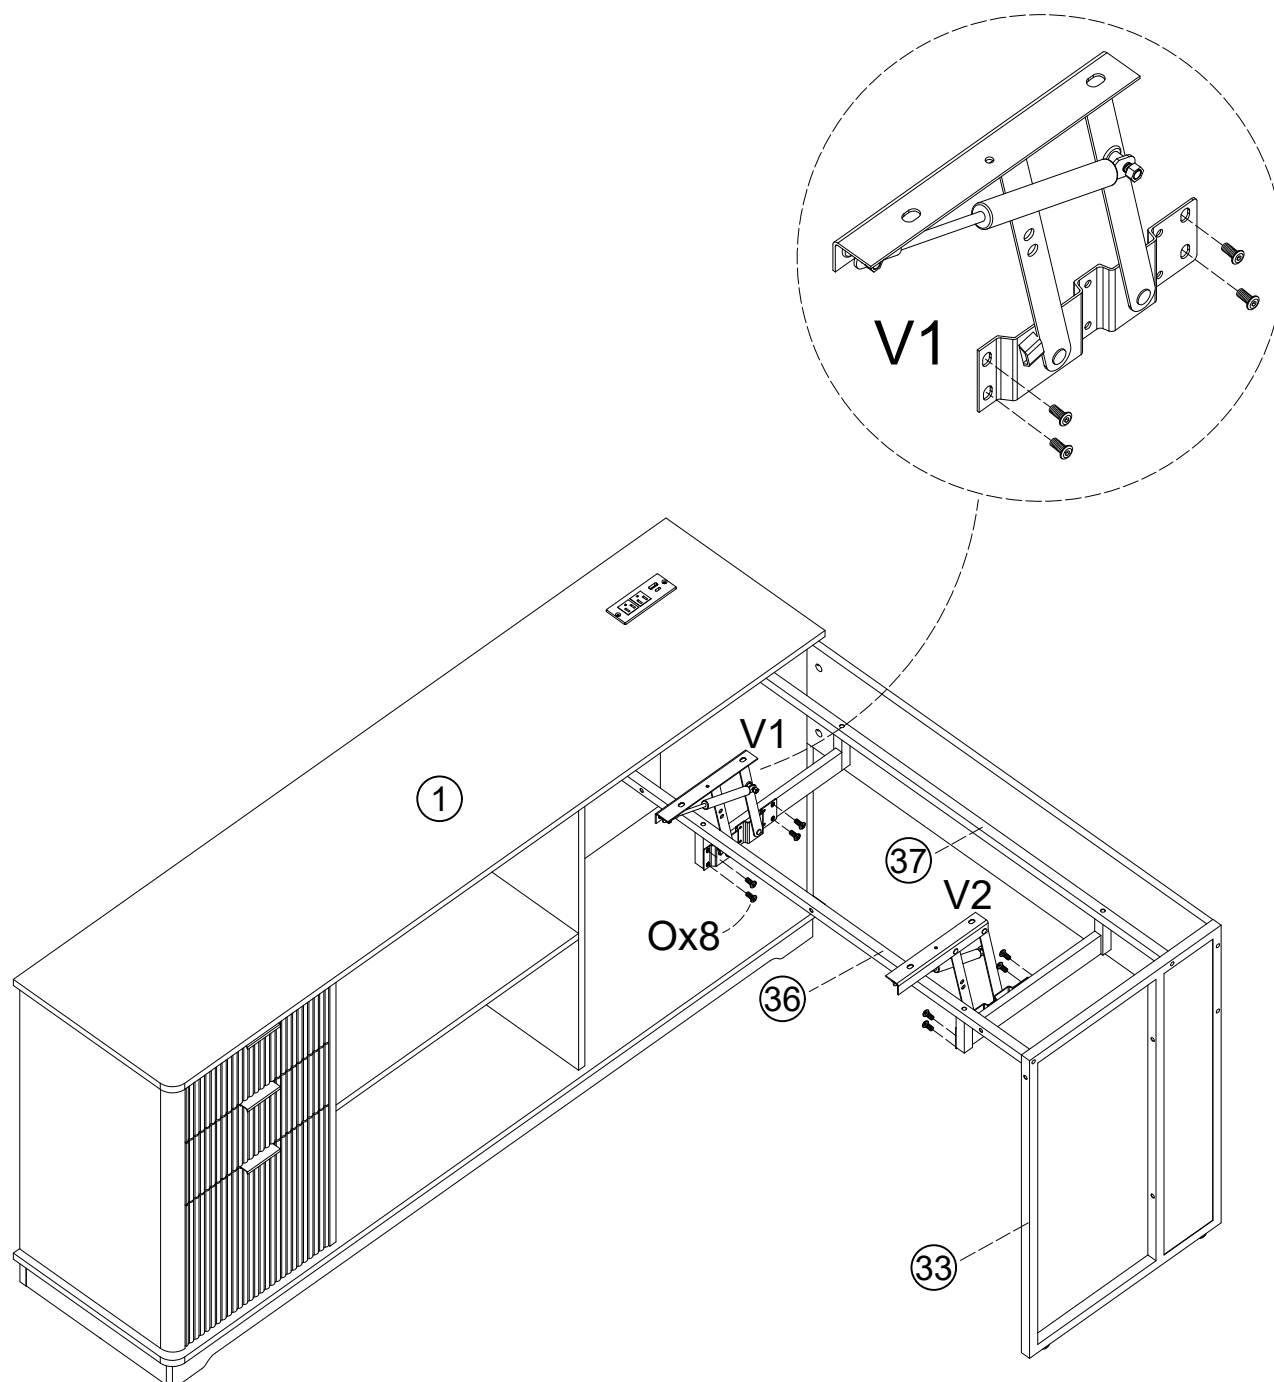


Step 18


O	x2
	
M6x12mm	

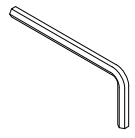


4#

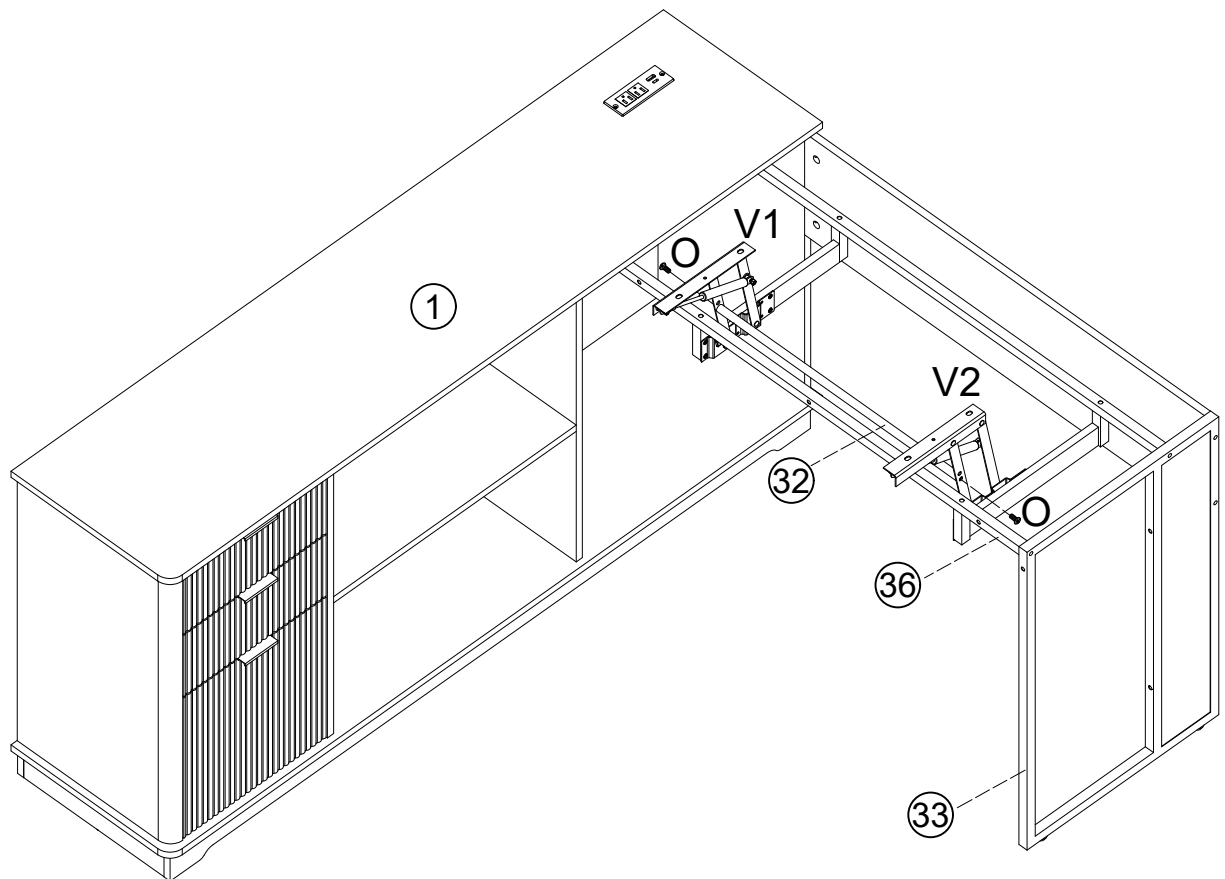


Step 19

P	x4
	
M6x28mm	


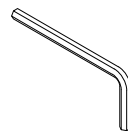


4#

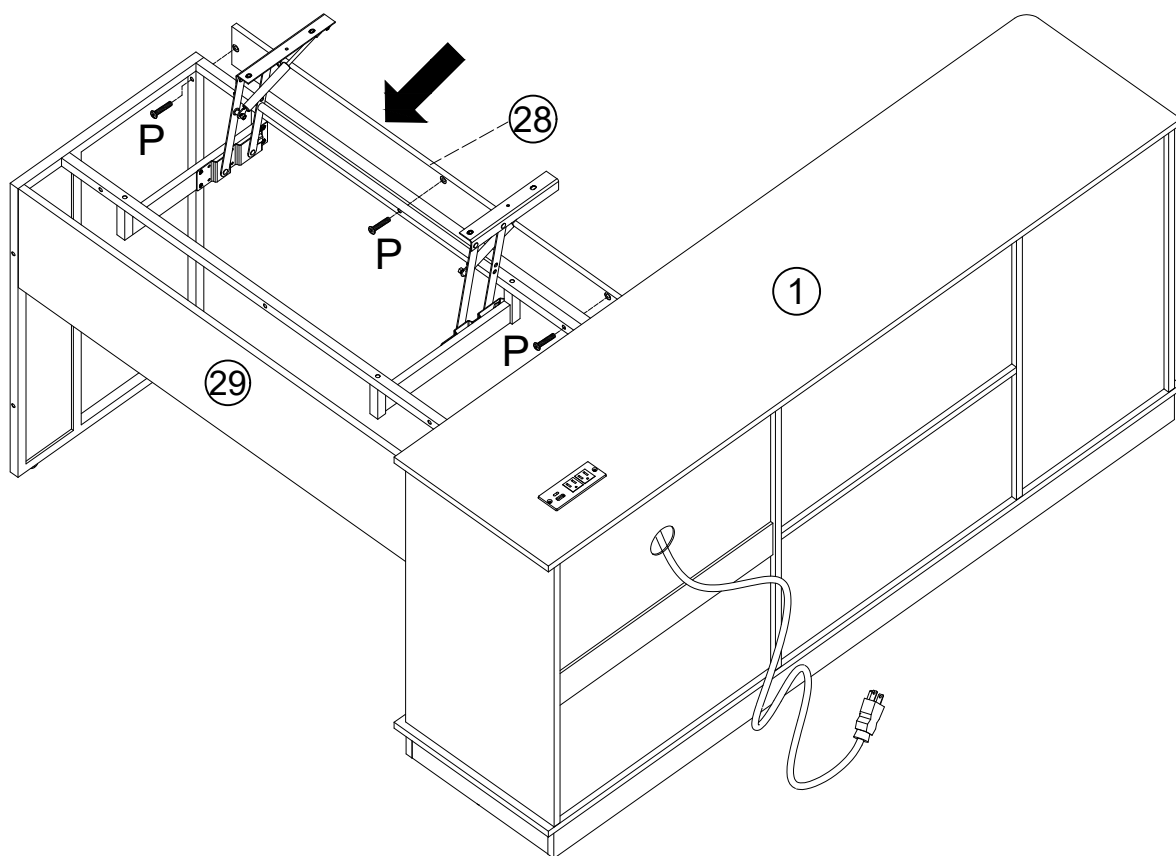


Step 20

O	x4
	
M6x12mm	

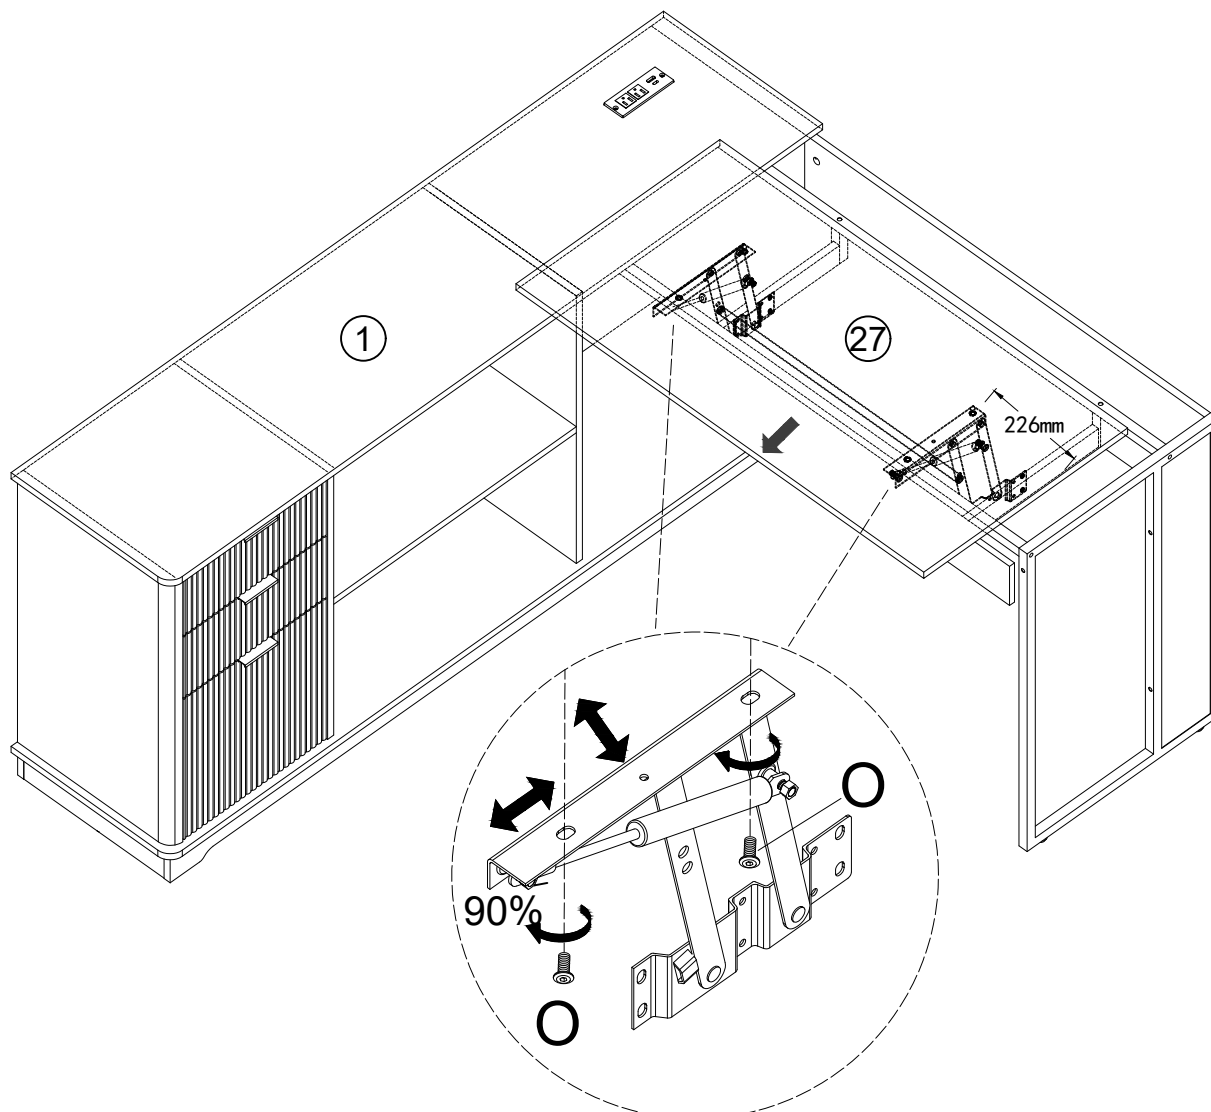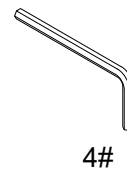


V1/V2

Diagram of the bottom view of plate 27.

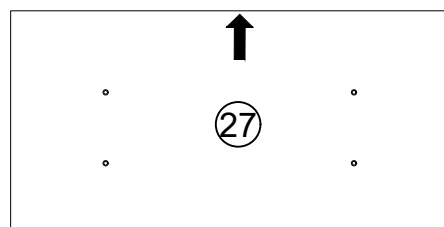


- Step 1: Lock accessory O to 90%, and put down plate 27 parallel to plate 1!
- Step 2: After 1 and plate 27 are closed, adjust the left and right gaps between 2-3MM.
- Step 3: After confirming the above steps, lift up 27, and lock accessory O to 100%.



Step 21

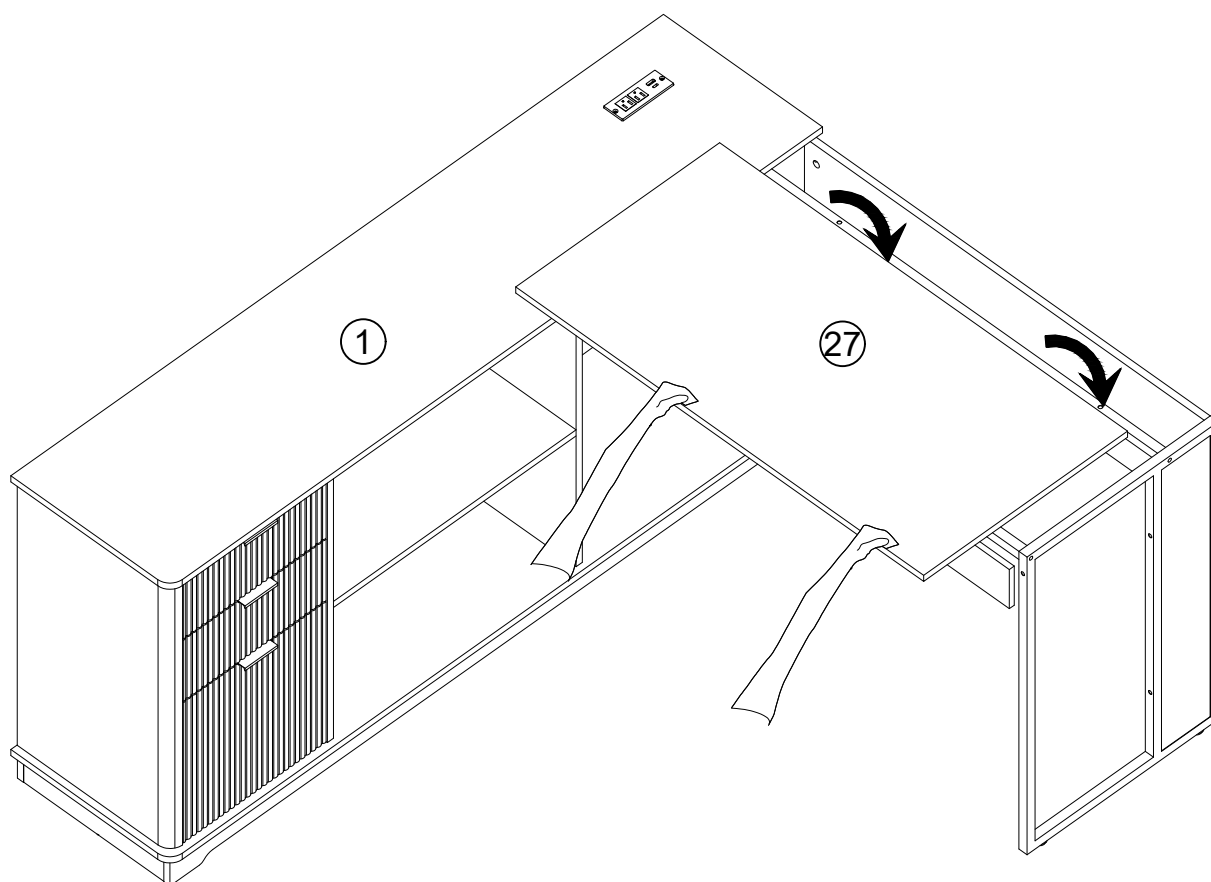

Caution: Handle with care, watch out for pinching your fingers.

Step 22

E	x20	F	x20
			
M3.5x14mm			

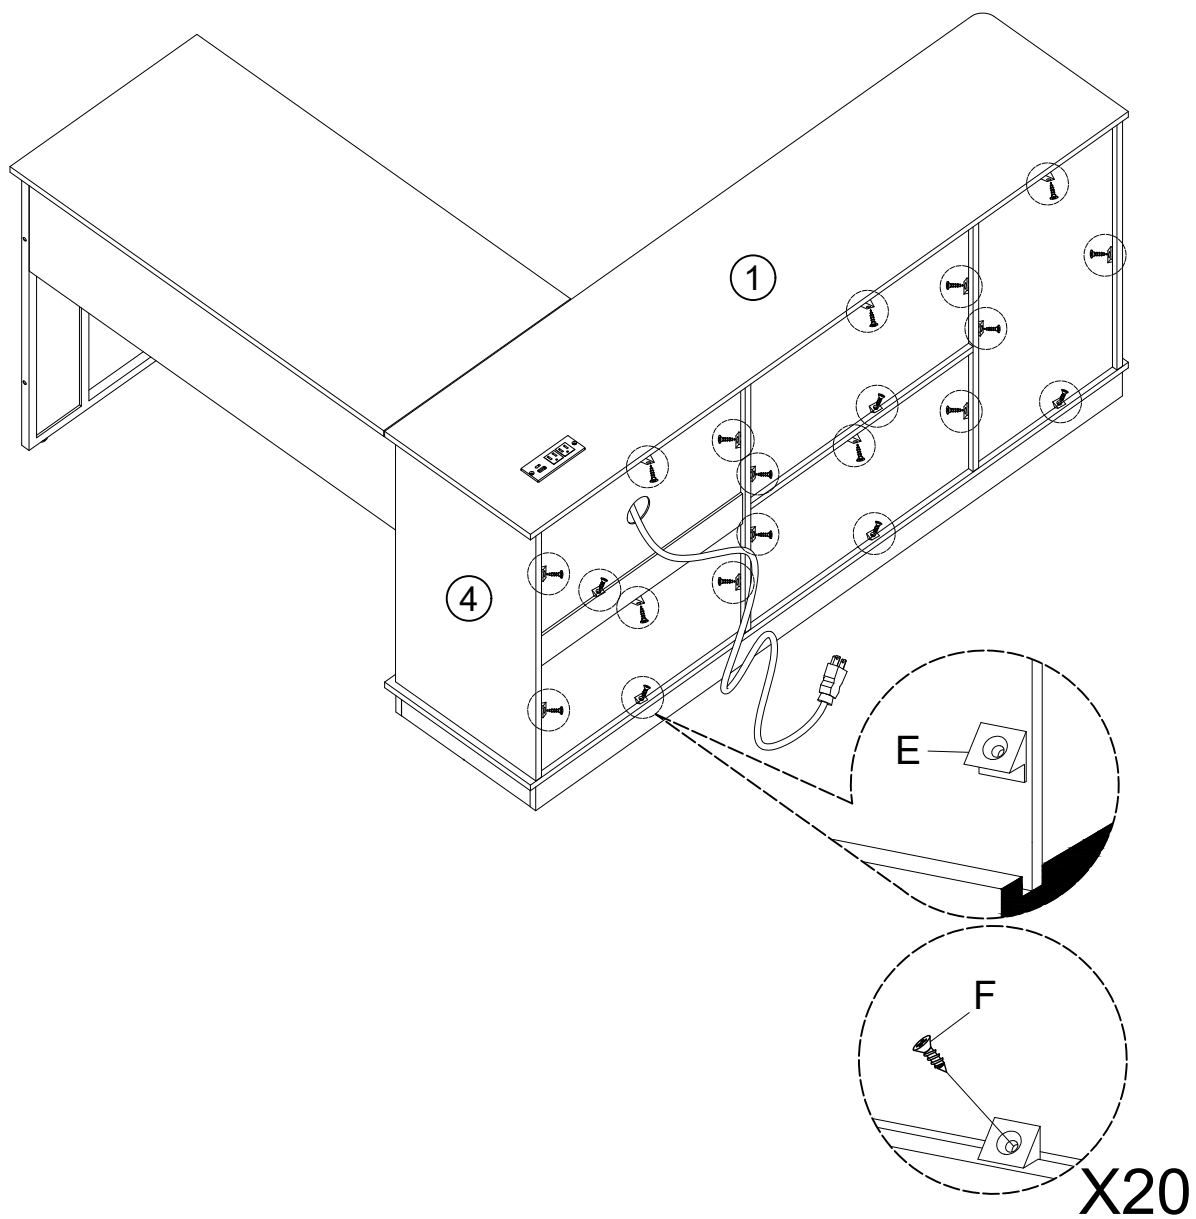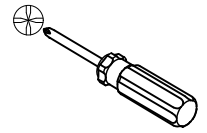

Installation Completed

