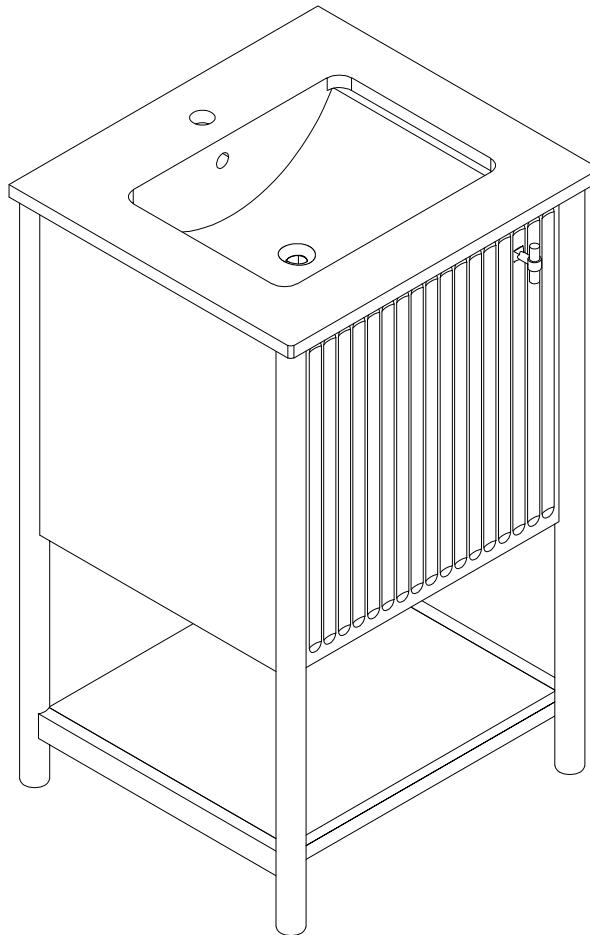


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET

SKU - N710P330975


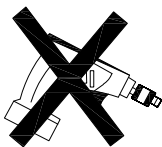


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


***Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**



Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY










Before Installation

Important- Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions








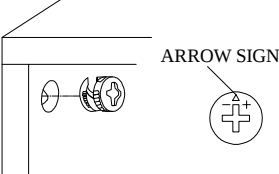
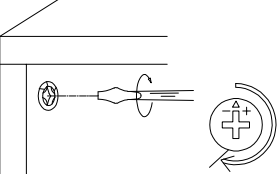
		Diagram A Insert Cam Ball into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

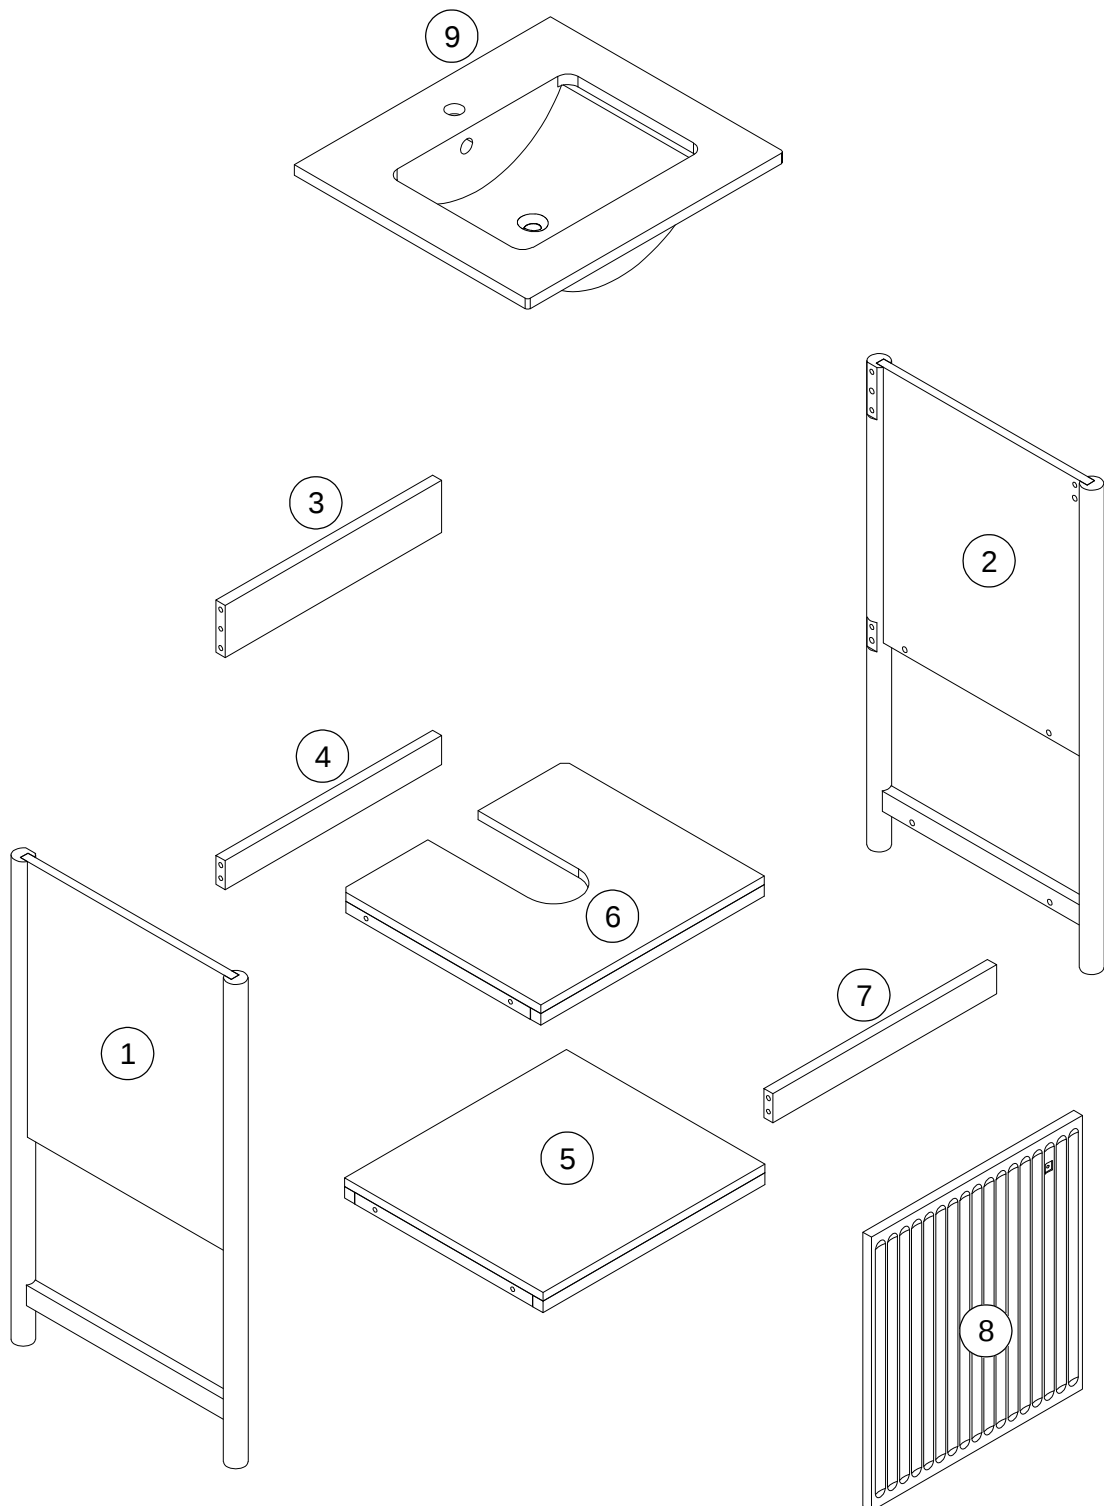Detail View






Identifying the Hardware-Identify the hardware using the illustrations below.

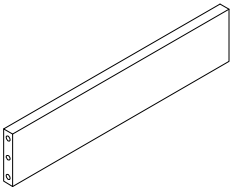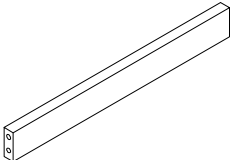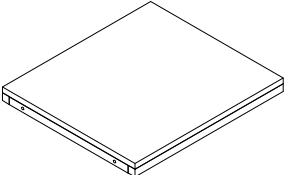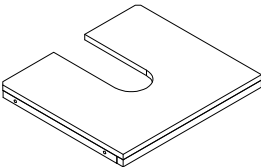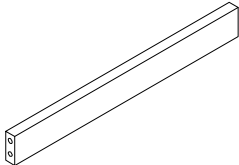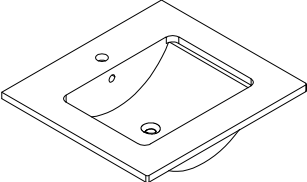
SKU - N710P330975


1		2		3	
Side Frame (L) - 1pc		Side Frame (R) - 1pc		Top Rear Crossbar - 1pc	
4		5		6	
Bottom Rear Crossbar - 1pc		Bottom Frame - 1pc		Middle Frame - 1pc	
7		8		9	
Top Front Crossbar - 1pc		Door Panel - 1pc		Sink - 1pc	

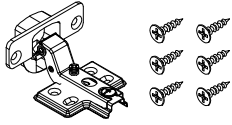Hardware Lists N710P330975


A  Ø8x30mm	B 	C  M6x30mm
Wood dowel (8pcs)	Damping hinge (2 sets)	Hex-Head bolt (14pcs)
D 	E 	F  M4x15mm
Washers (6pcs)	Handle (1pc)	Handle screw (1pc)
G 	H  K4mm	I 
Plastic shock absorber (1pc)	Allen key (2pcs)	Anti fall Hardware (2 sets)

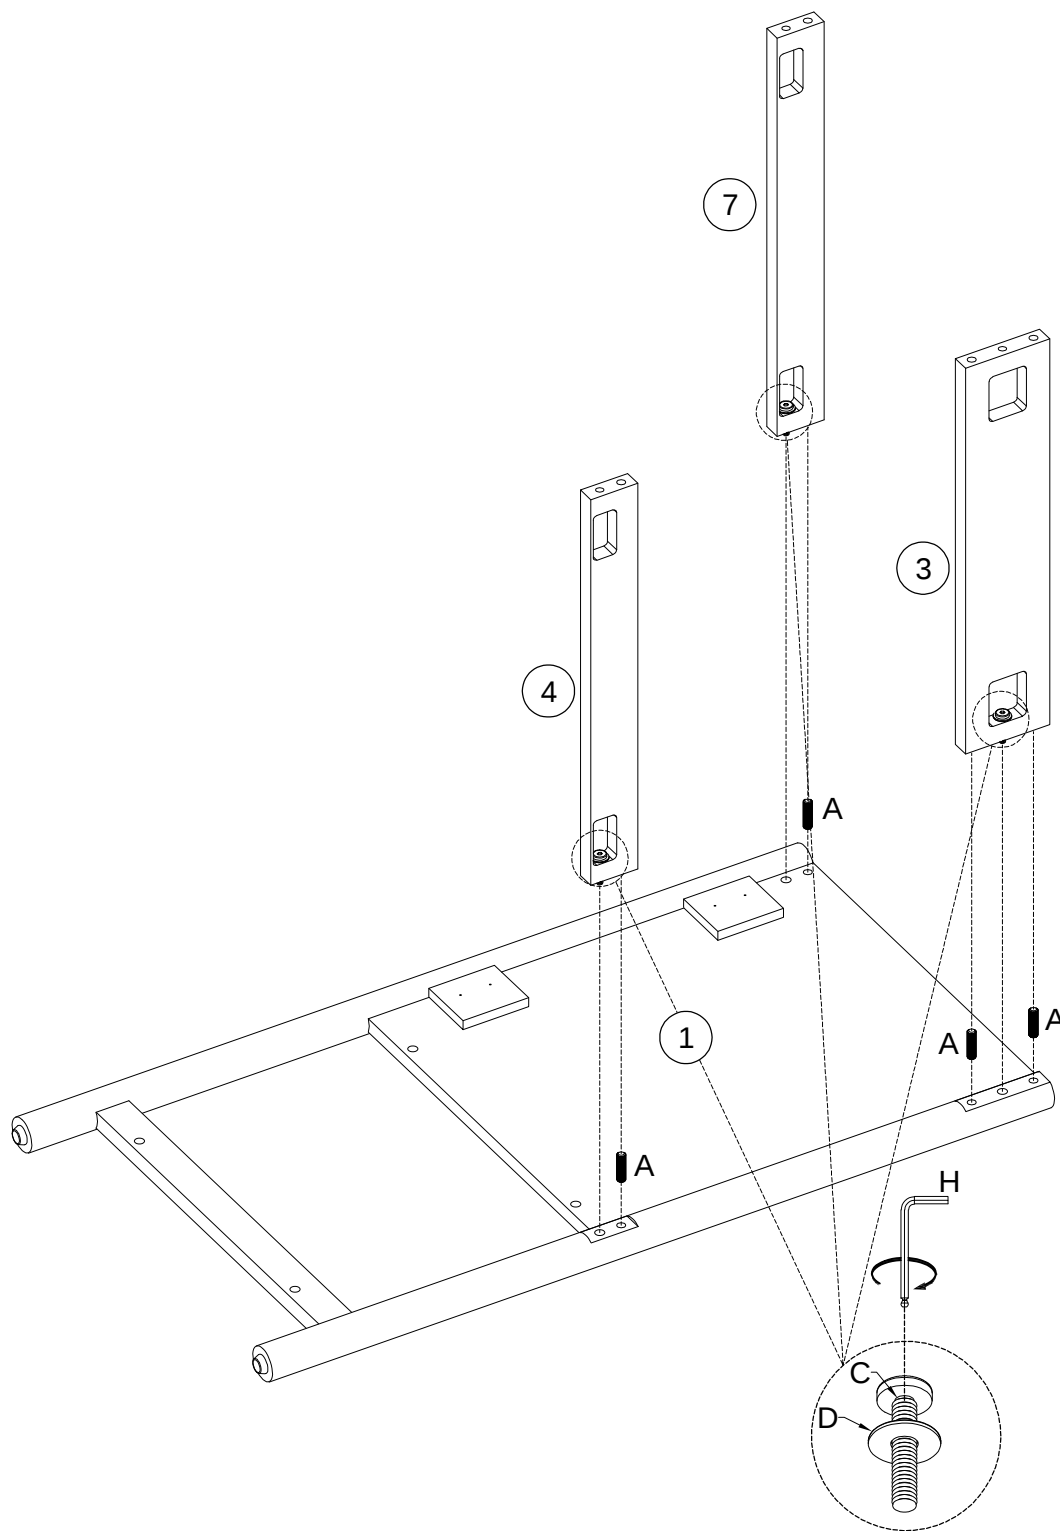STEP:1




H		A	
		4pcs	
C		3pcs	
D		3pcs	

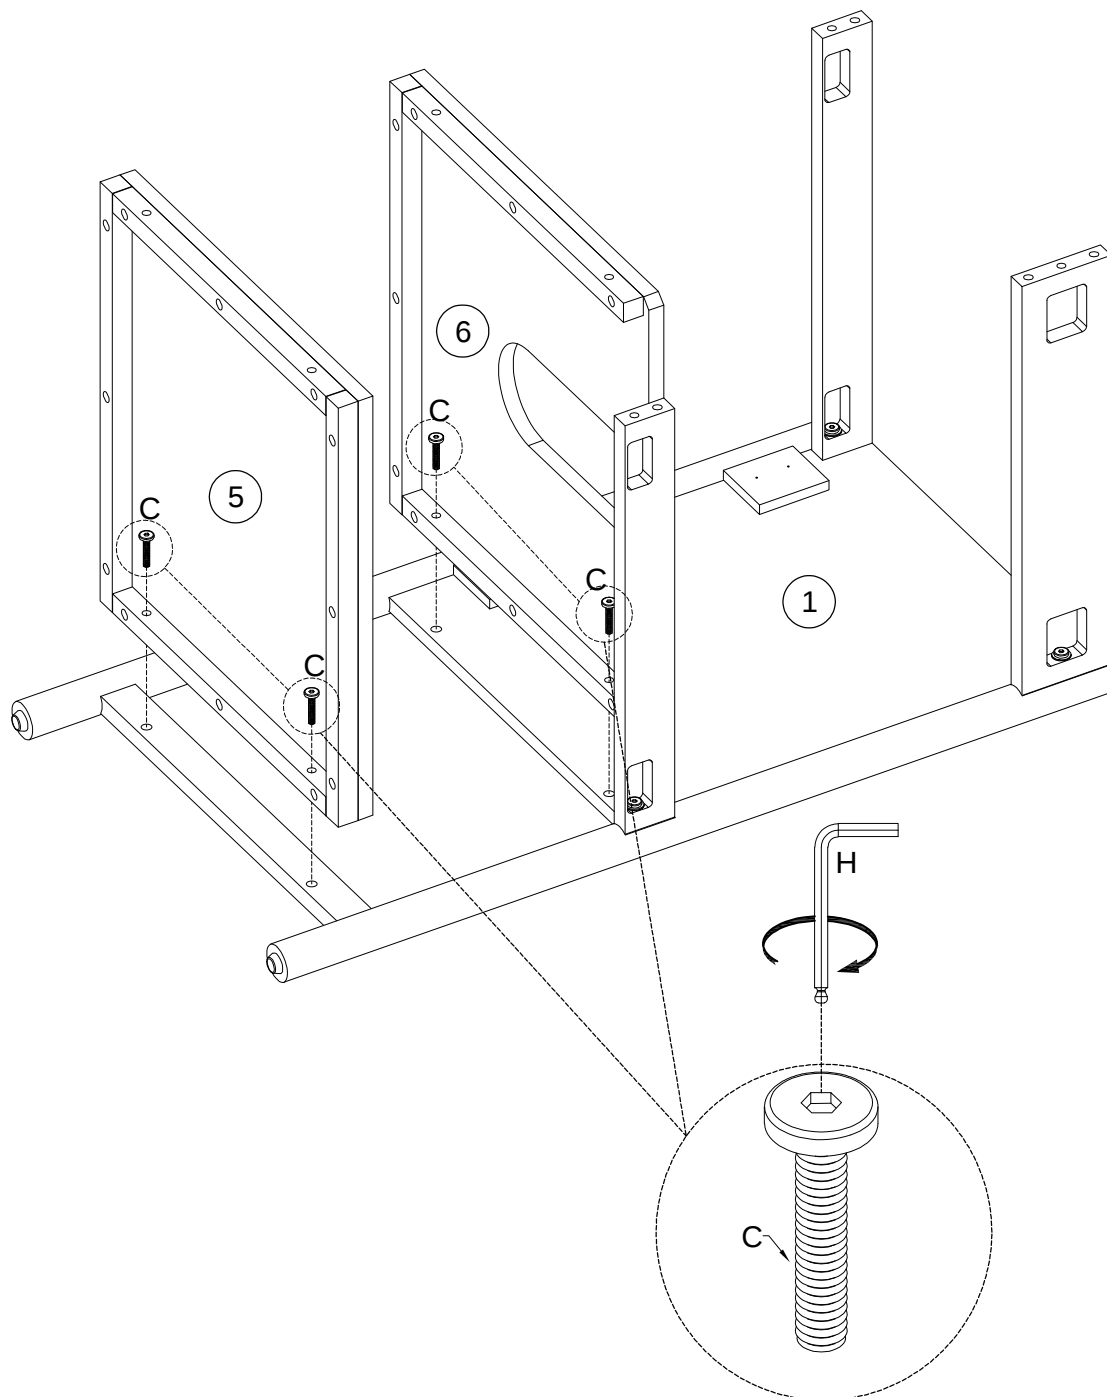STEP:2



C




4pcs

H



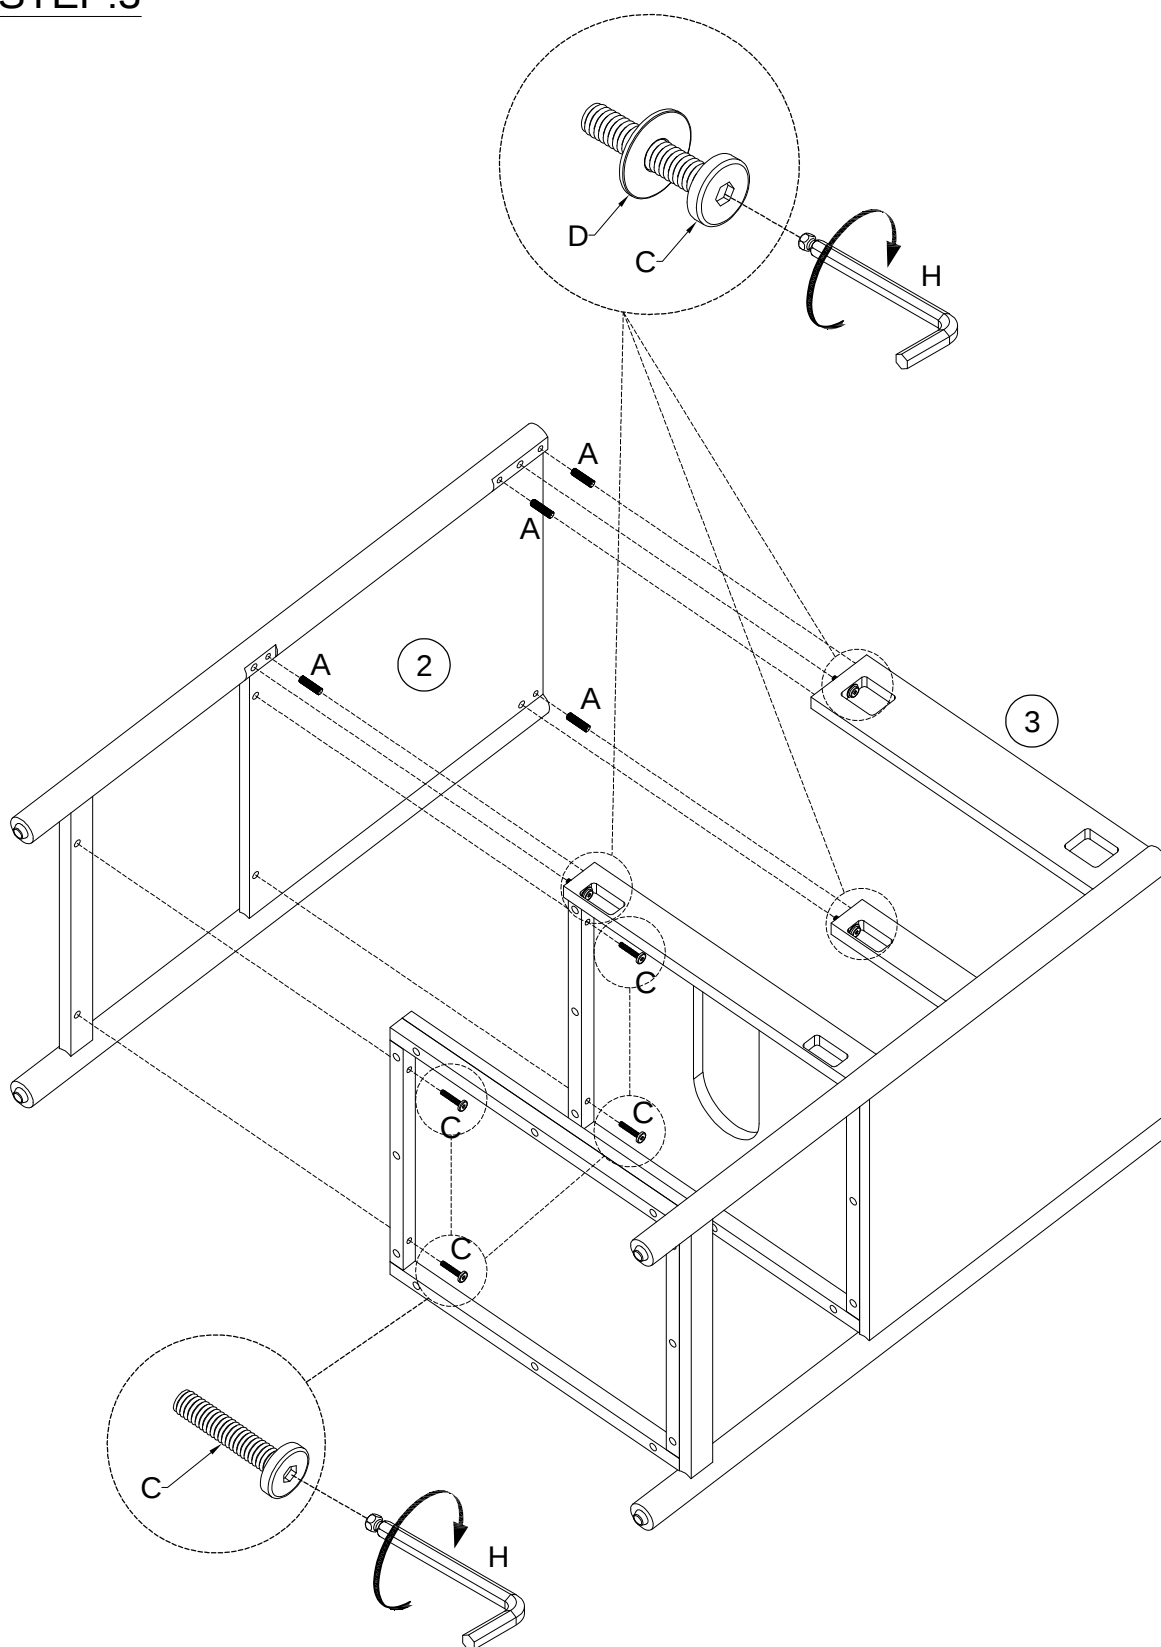STEP:3




A



4pcs

C



7pcs

D

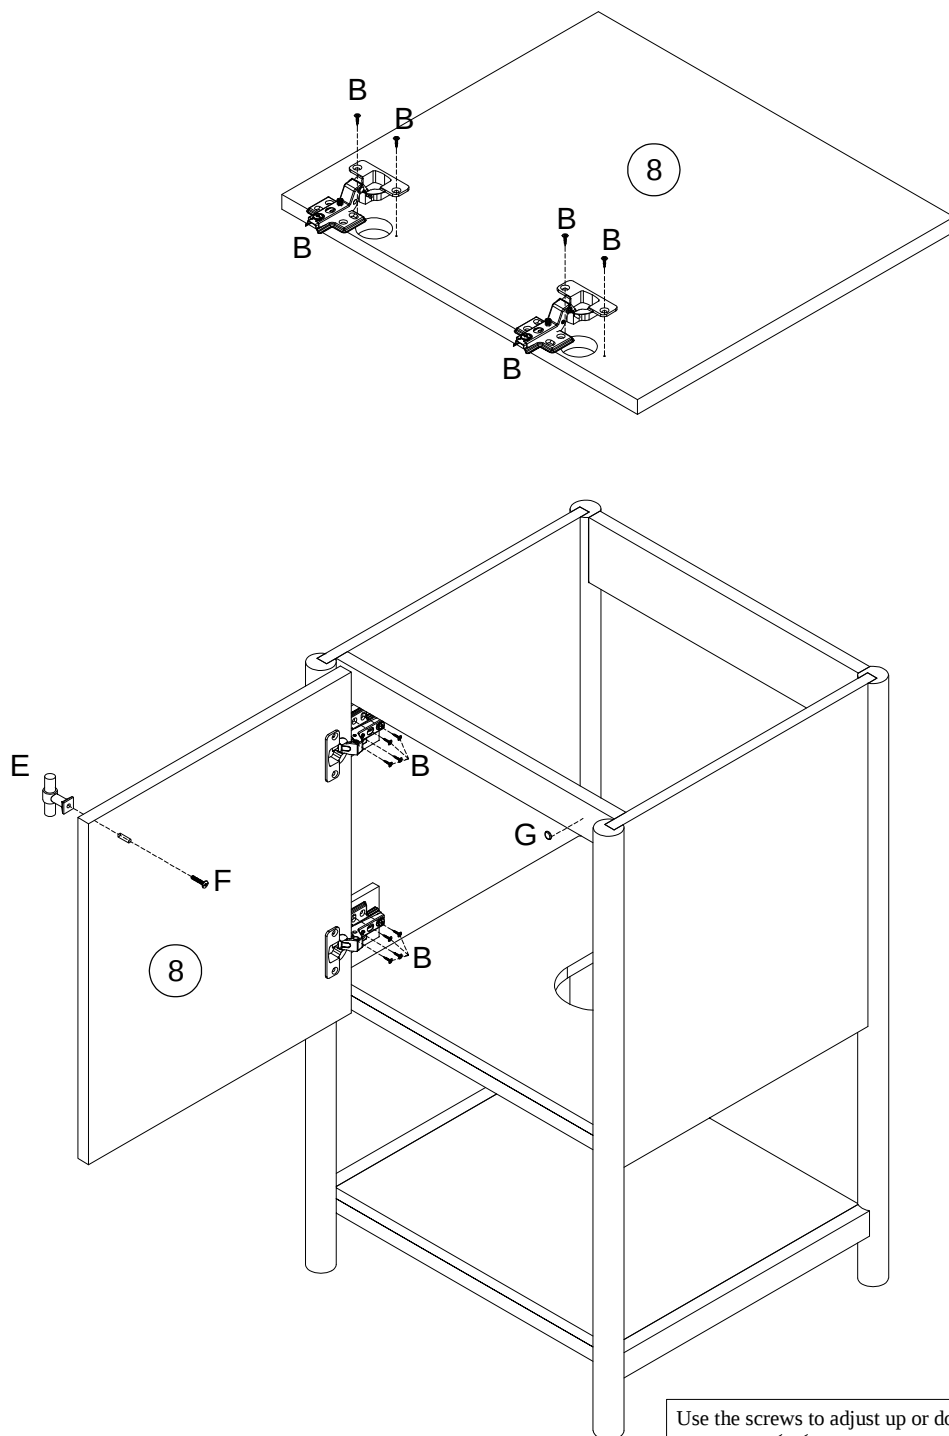





3pcs

H




STEP:4




B	
12pcs	
B	
2pcs	
G	
1pc	
E	
1pc	
F	
1pc	

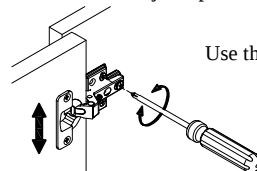
Use the screws to adjust up or down




Use the screws to adjust in or out

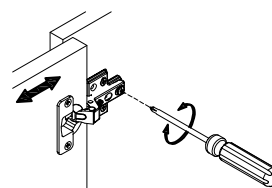

Use the screws to adjust left or right

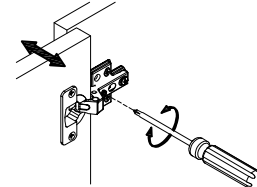


STEP:5


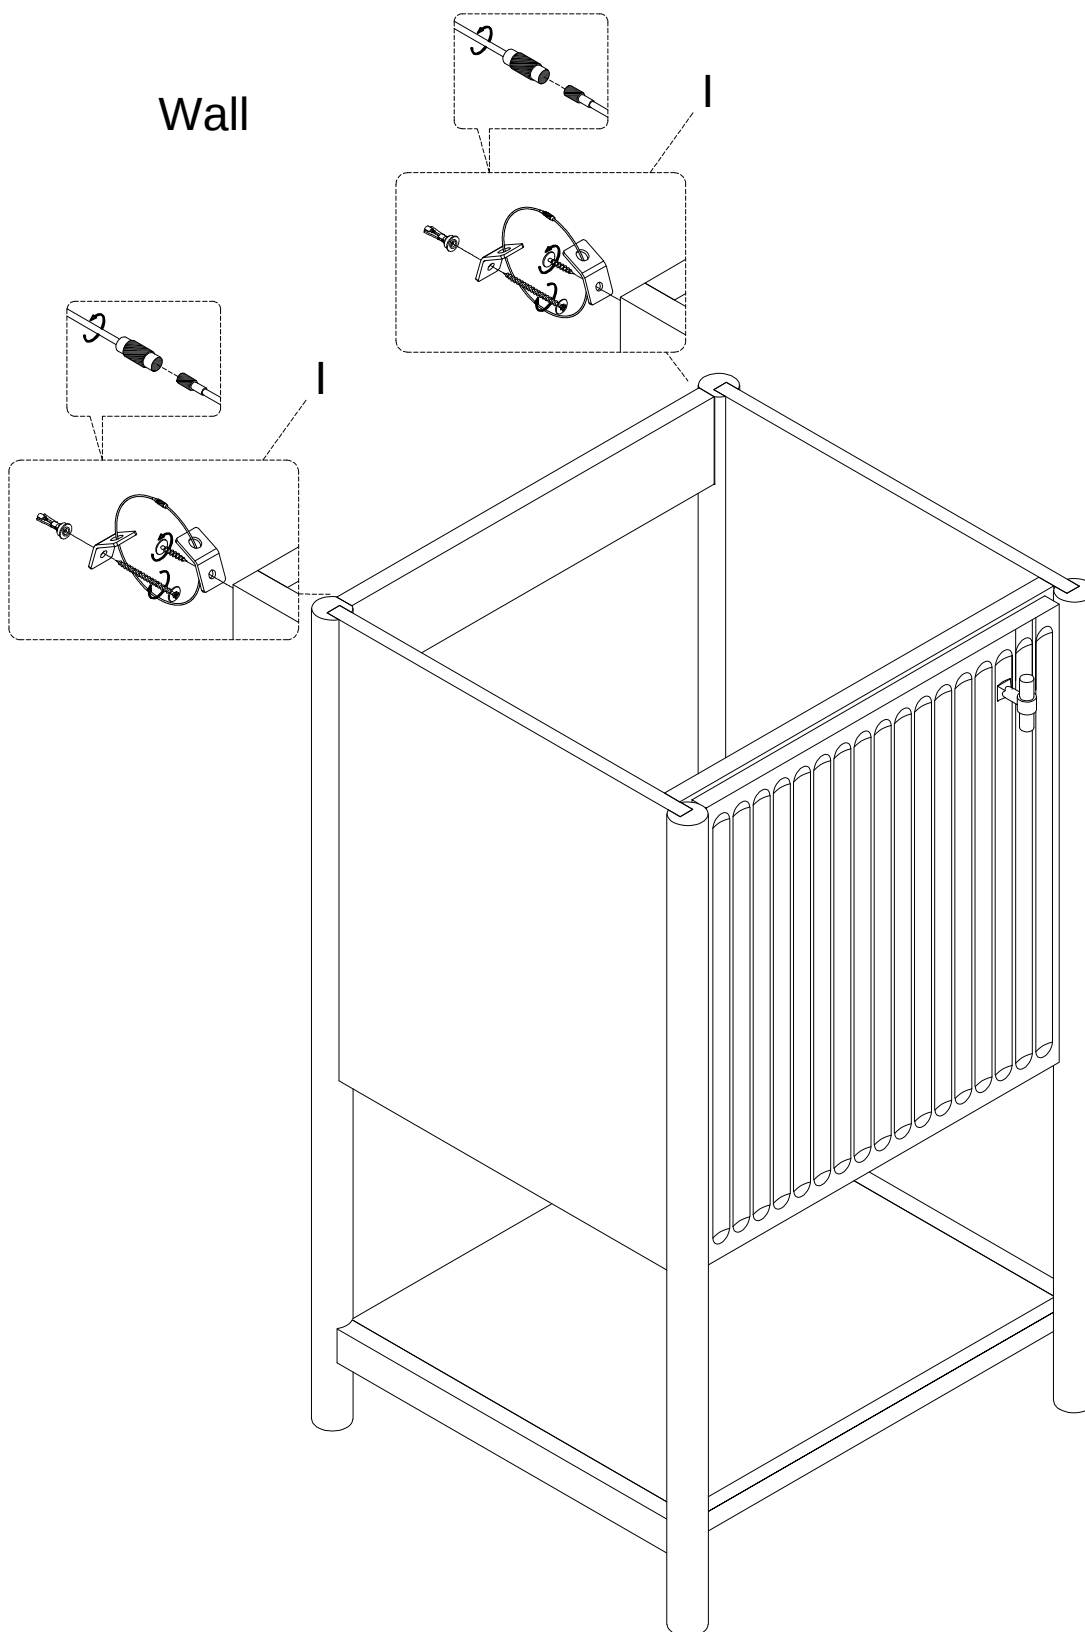


STEP:6

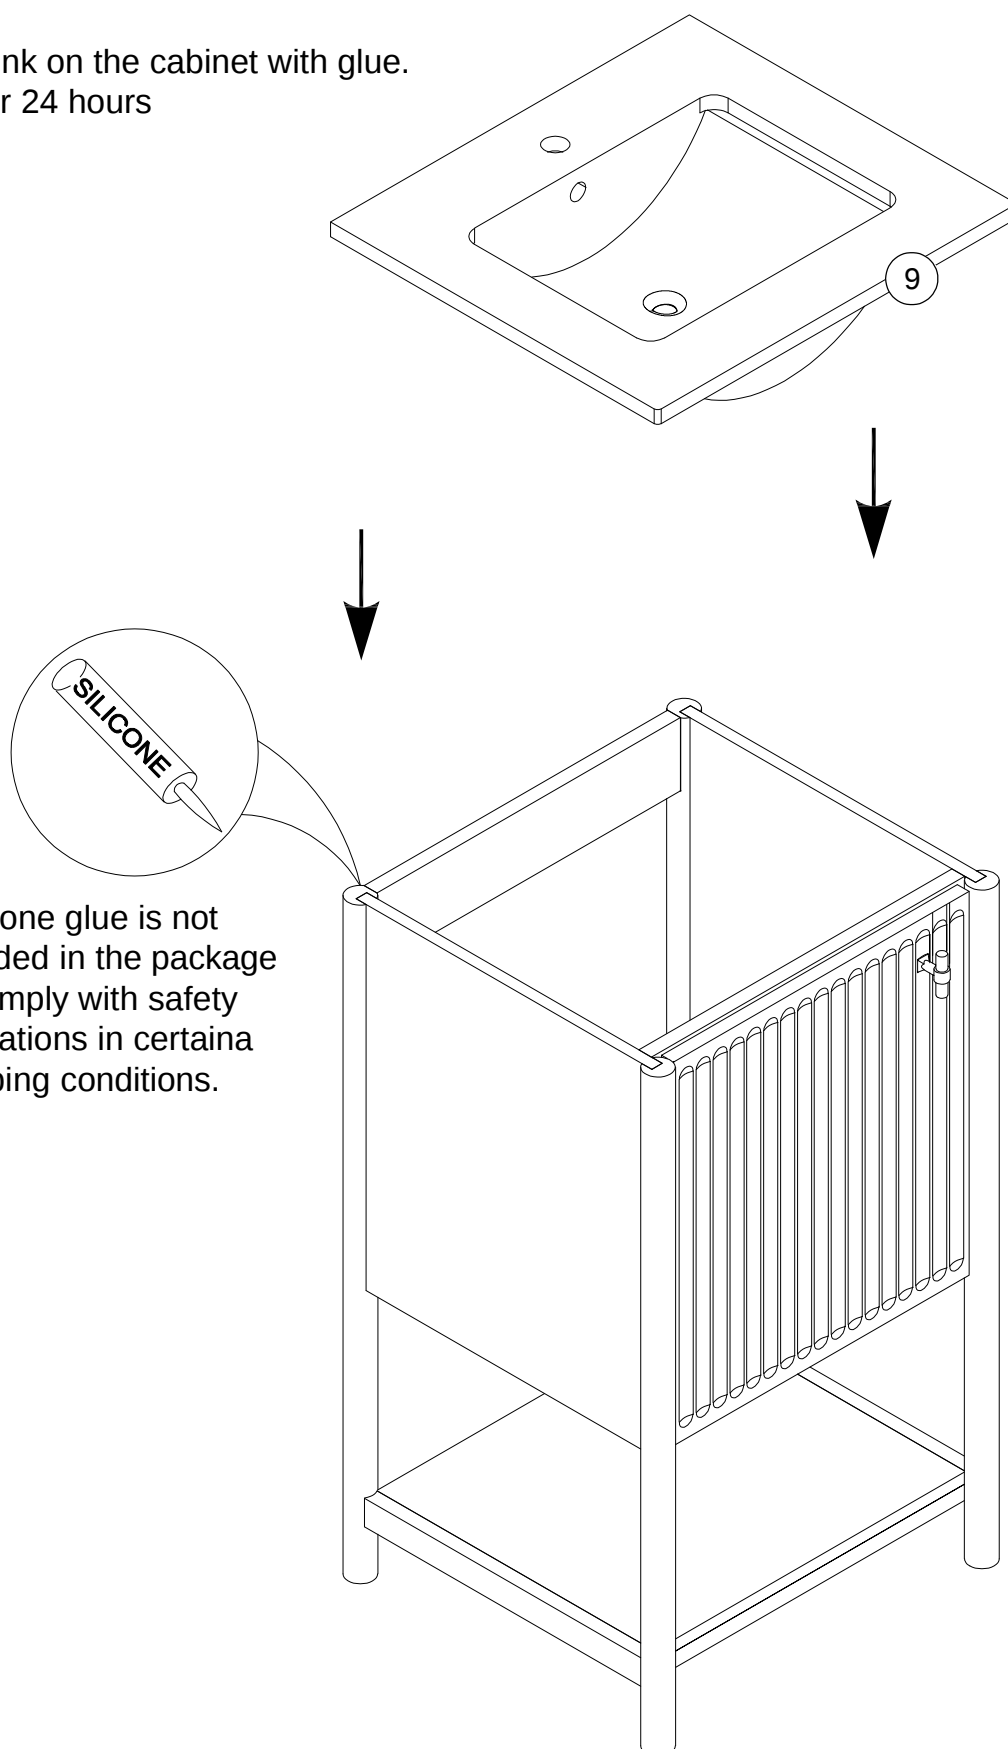
Install the sink on the cabinet with glue.
Let stand for 24 hours



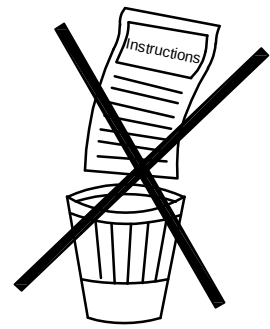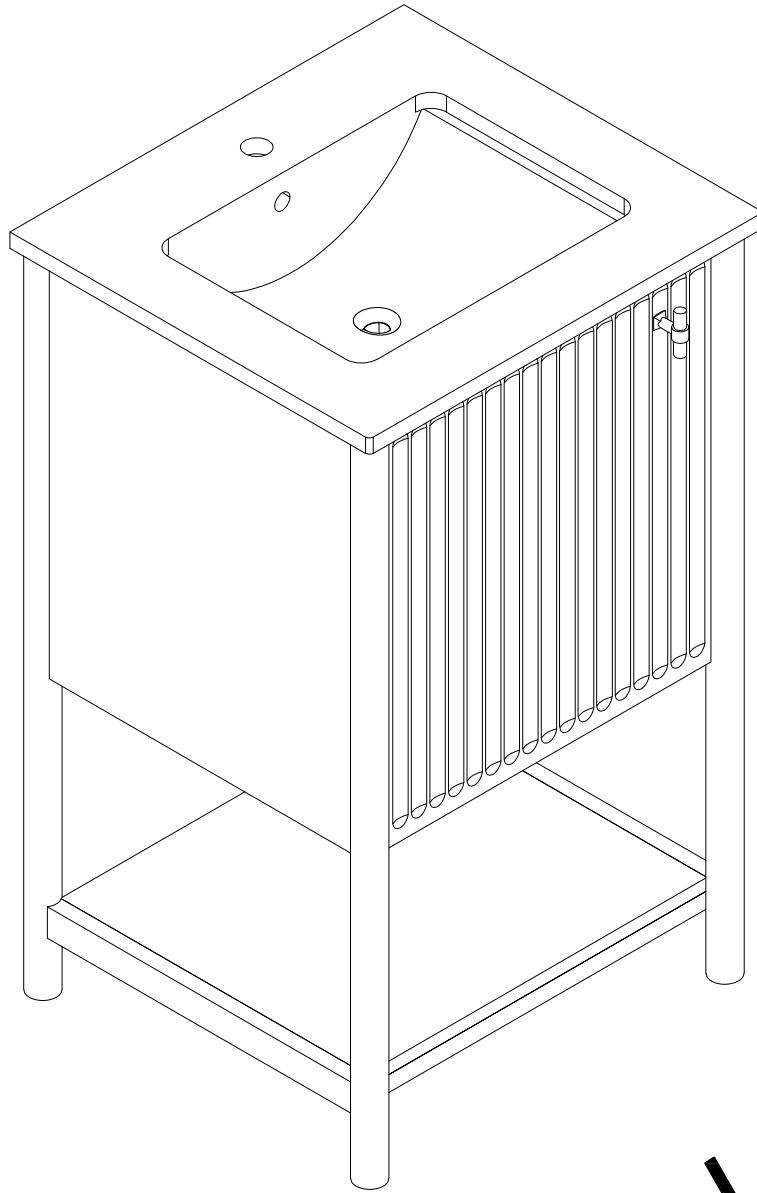*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.



HINGE ADJUSTMENTS

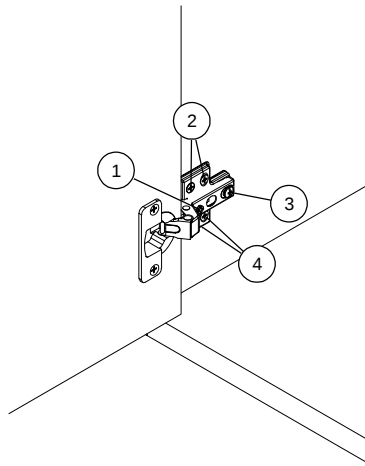


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

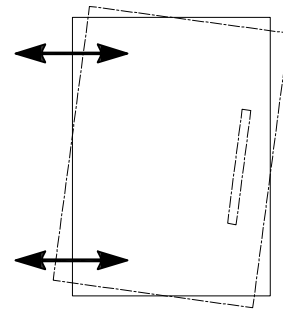anticlockwise to move the door closer to the side of the cabinet




② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

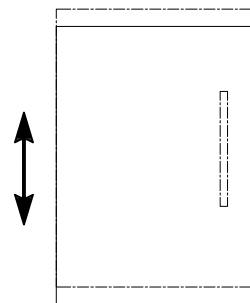anticlockwise to move the door down



③ Forward and back adjustment

