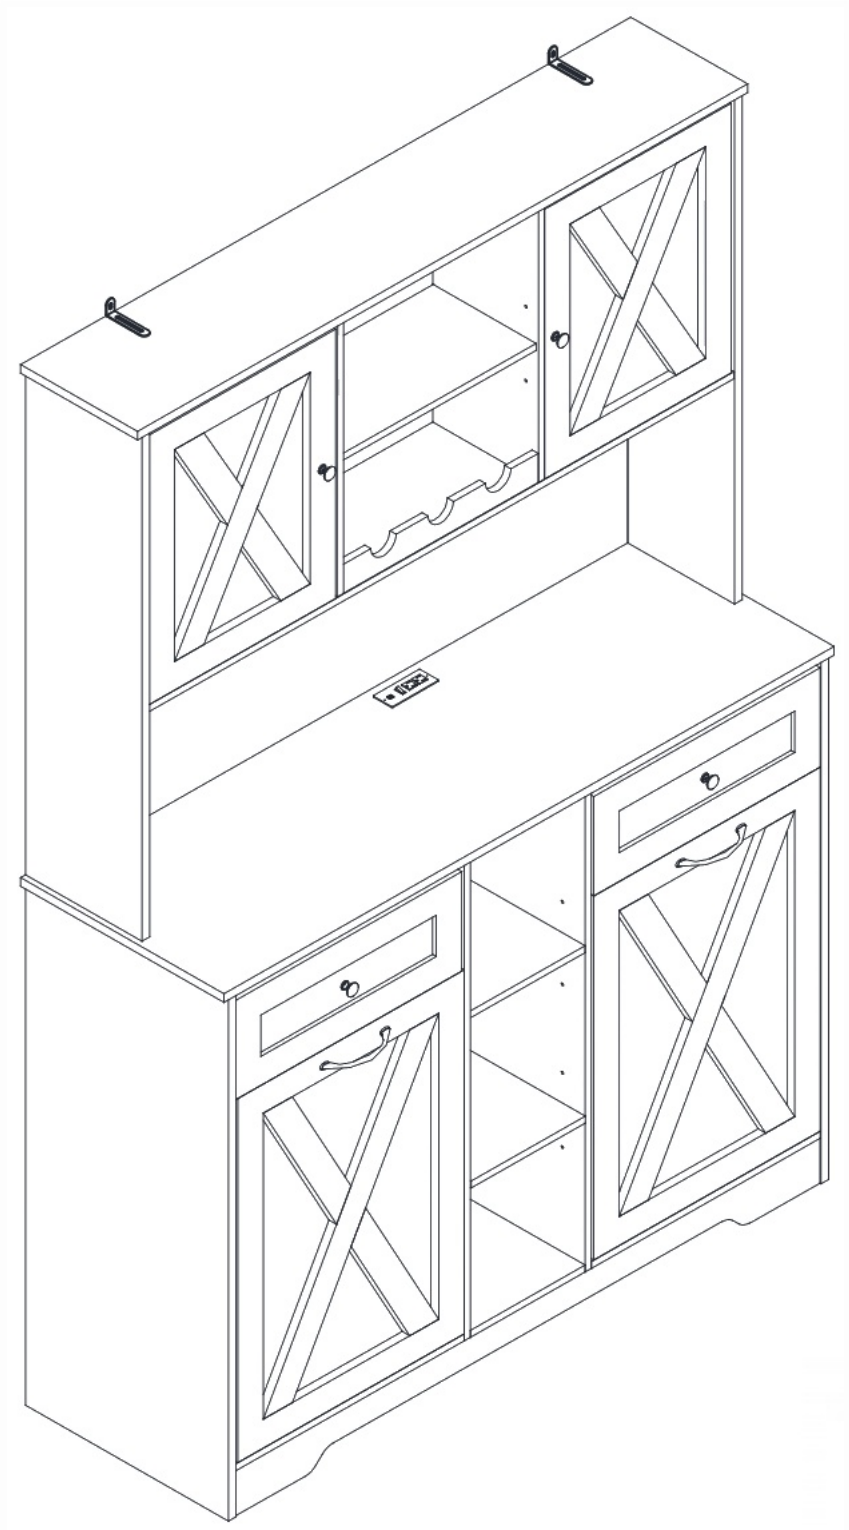
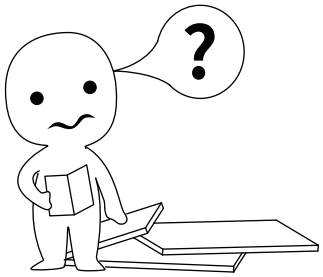
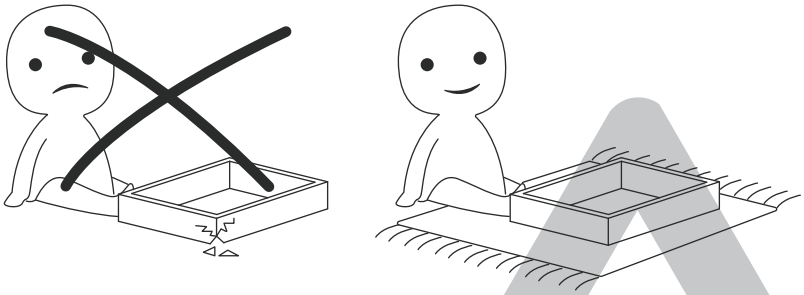
Kitchen Pantry Cabinet





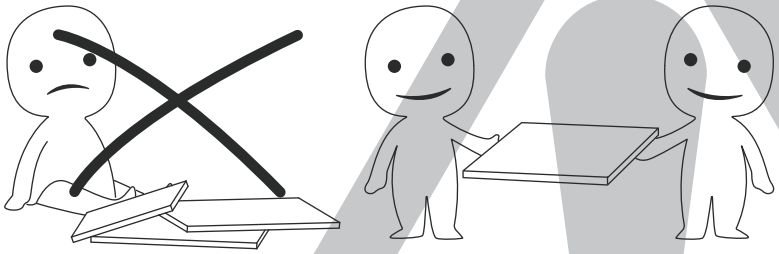
IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.



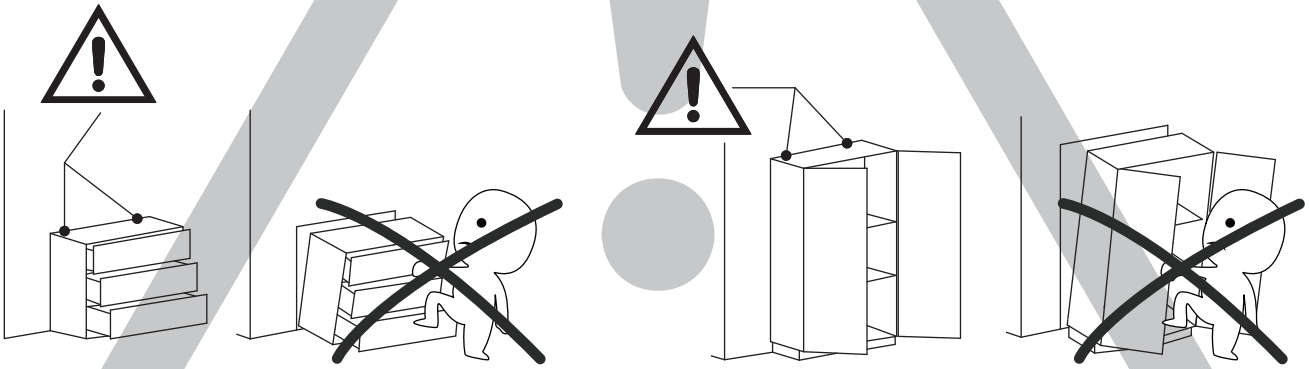
AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

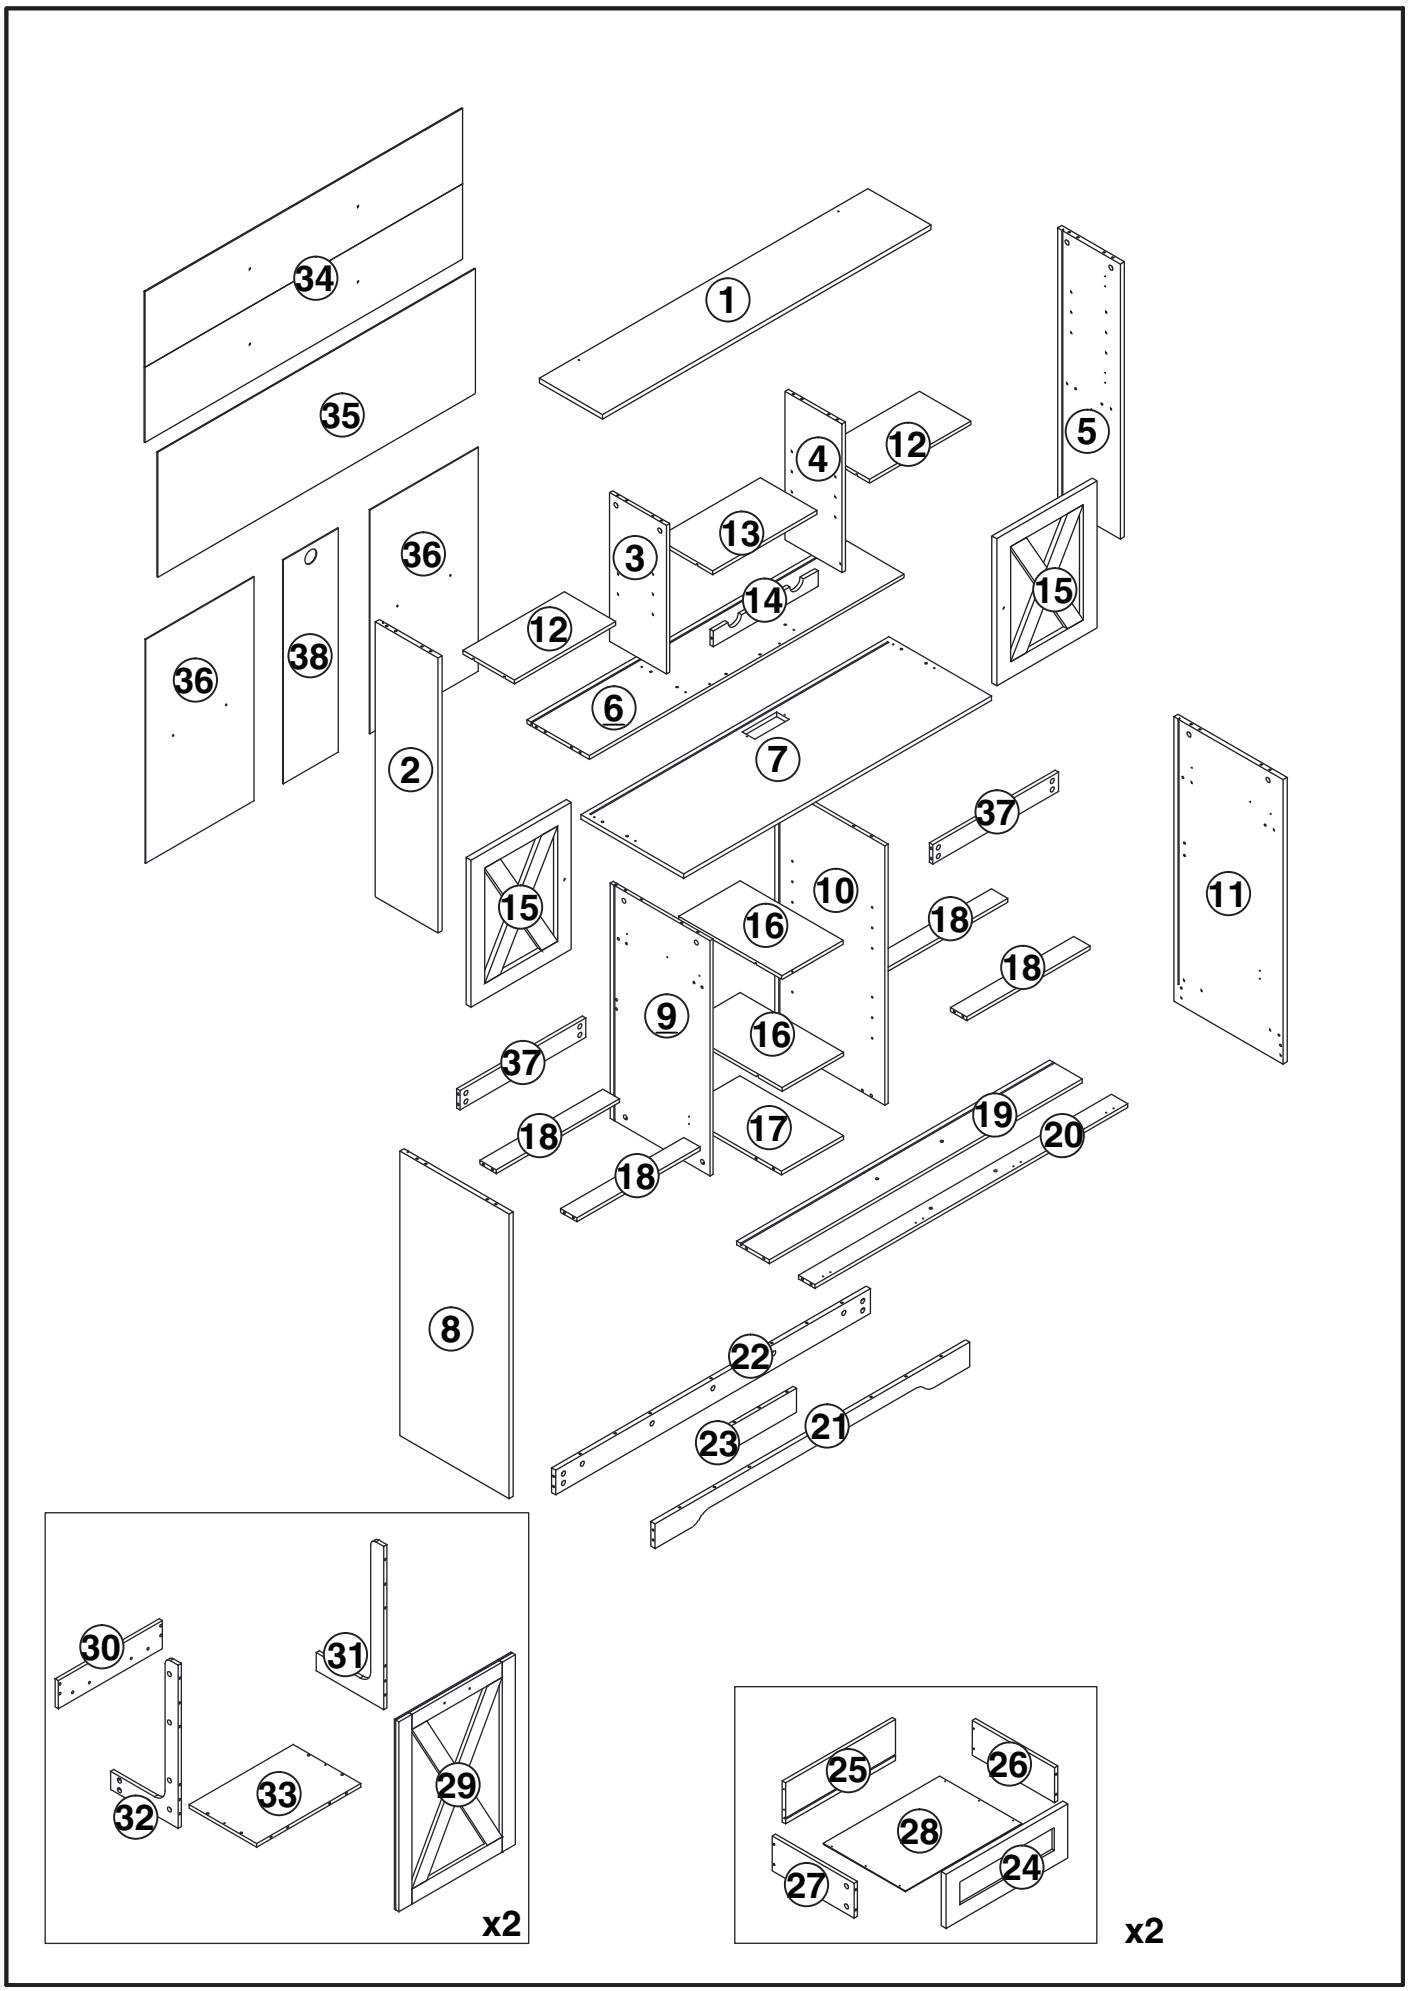
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

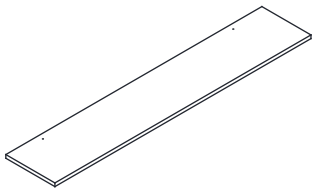
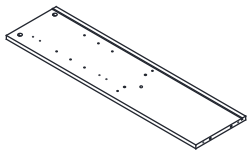


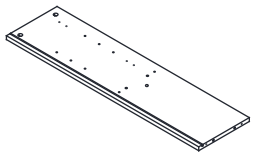
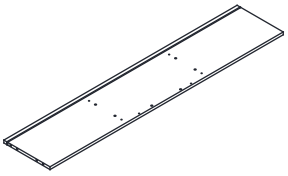
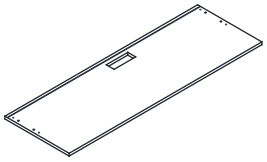
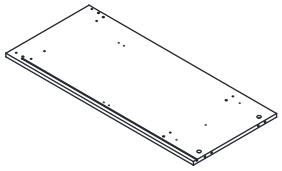
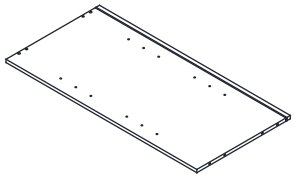
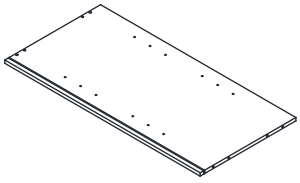
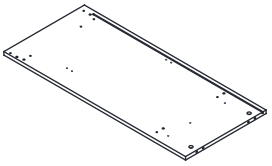
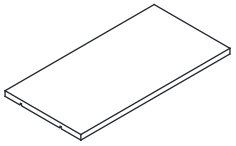
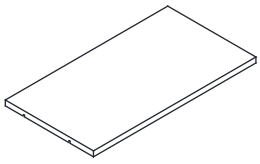
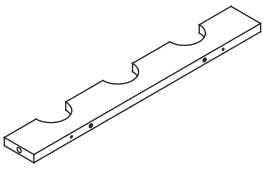
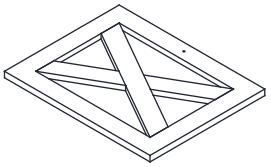
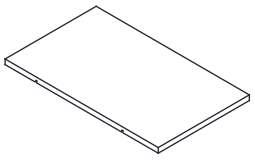
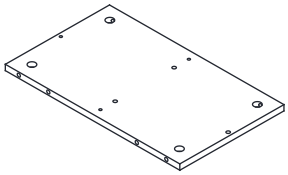
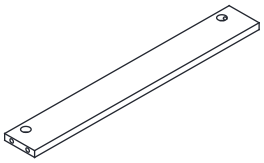
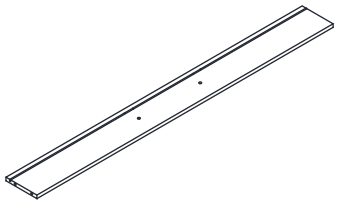
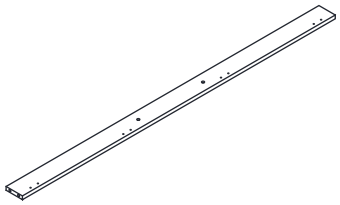
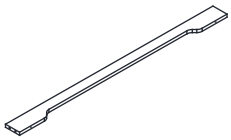
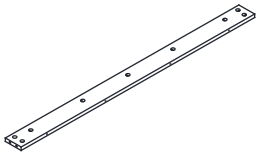

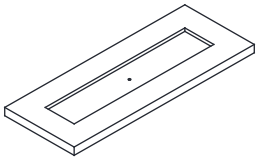
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 mo ths - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

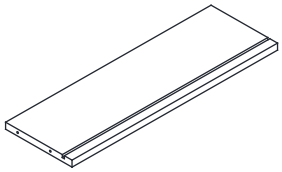
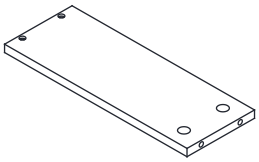
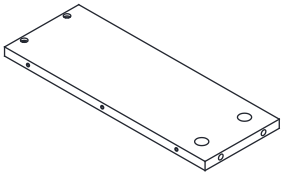
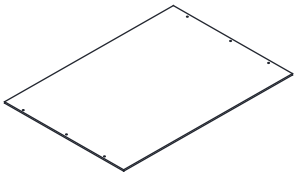
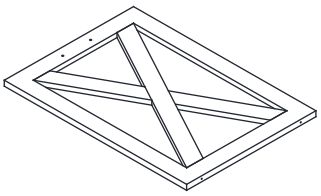
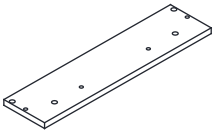
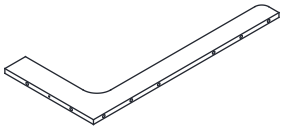
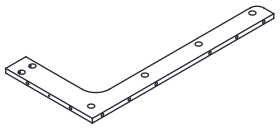
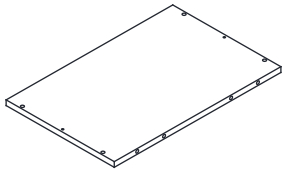
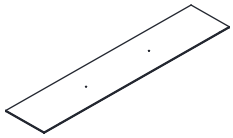
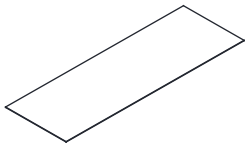
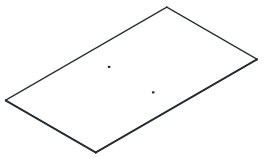
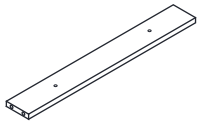
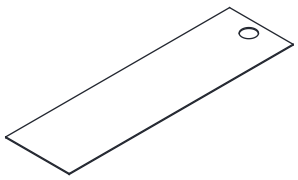
Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


34
1
35
4
12
5
36
13
3
14
15
36
38
12
6
2
7
37
11
15
10
16
18
18
9
16
37
18
17
19
20
18
8
22
23
21
30
31
29
33
32
x2
25
26
28
24
27
x2






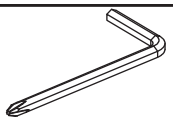


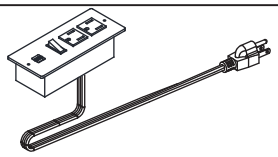

Parts and Operation Elements

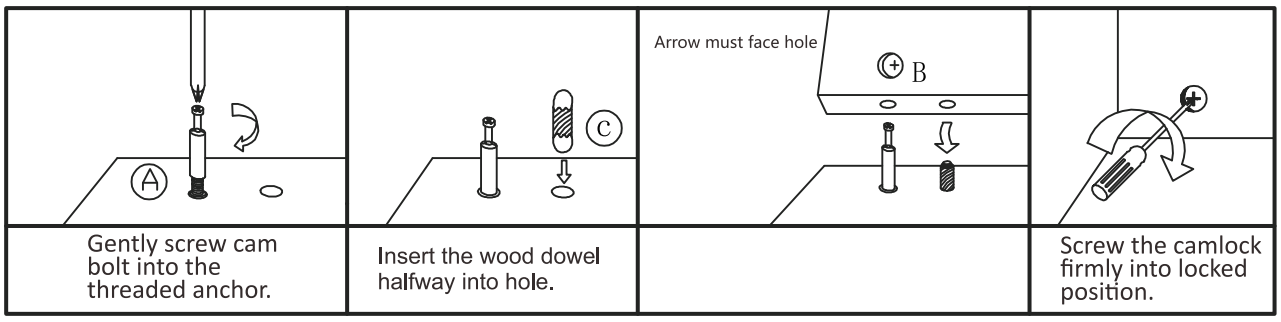
			
① 1pc	② 1pc	③ 1pc	④ 1pcs
			
⑤ 1pc	⑥ 1pc	⑦ 1pc	⑧ 1pc
			
⑨ 1pc	⑩ 1pc	⑪ 1pc	⑫ 2pcs
			
⑬ 1pc	⑭ 1pc	⑮ 2pcs	⑯ 2pcs
			
⑰ 1pc	⑱ 4pcs	⑲ 1pcs	⑳ 1pcs
			
㉑ 1pc	㉒ 1pc	㉓ 2pcs	㉔ 2pcs

Parts and Operation Elements







			
㉕ 2pcs	㉖ 2pcs	㉗ 2pcsa	㉘ 2pcs
			
㉙ 2pcs	㉚ 2pcs	㉛ 2pcs	㉜ 2pcs
			
㉝ 2pcs	㉞ 1pcs	㉟ 1pc	㊱ 2pcs
			
㊲ 2pcs	㊳ 1pc		

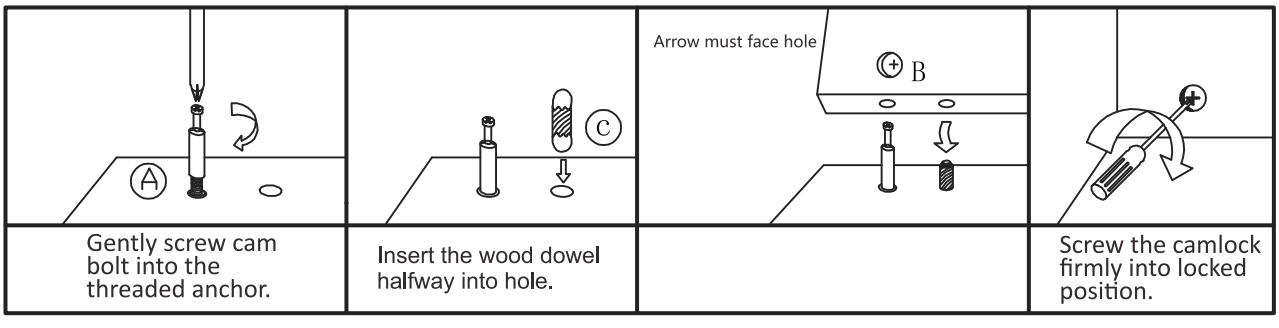
Hardware

 Cam bolt	 Cam Lock	 Wood dowel	 5x40mm screw
A 110+2pcs	B 110+2pcs	C 75+2pcs	D 8pcs
 4x30mm screw	 6x30mm	 3.5X12mm screw	
E 10+2pcs	F 4pcs	G 24+2pcs	H 1pc
 Dual-purpose screwdriver		 Sticker	
I 1pc	J 20+2pcs	K 110+2pcs	L 4pcs
 3.5x14mm screw		 Handle	 Handle
M 20+2pcs	N 4pcs	P 4pcs	Q 2pcs
	 3x16mm screw	 Unti-dumping device	
R 2pcs	S 4pcs	T 2set	
 3x12mm screw	 6x10mm screw	 4x22mm	 Power socket
U 2pcs	V 2pc	W 6pcs	X 1pc
 4x6mm	 4X14mm	 350mm Slide Rail	 350mm
Y 2pcs	Z 40+2pcs	DR 2pcs	DL 2pcs

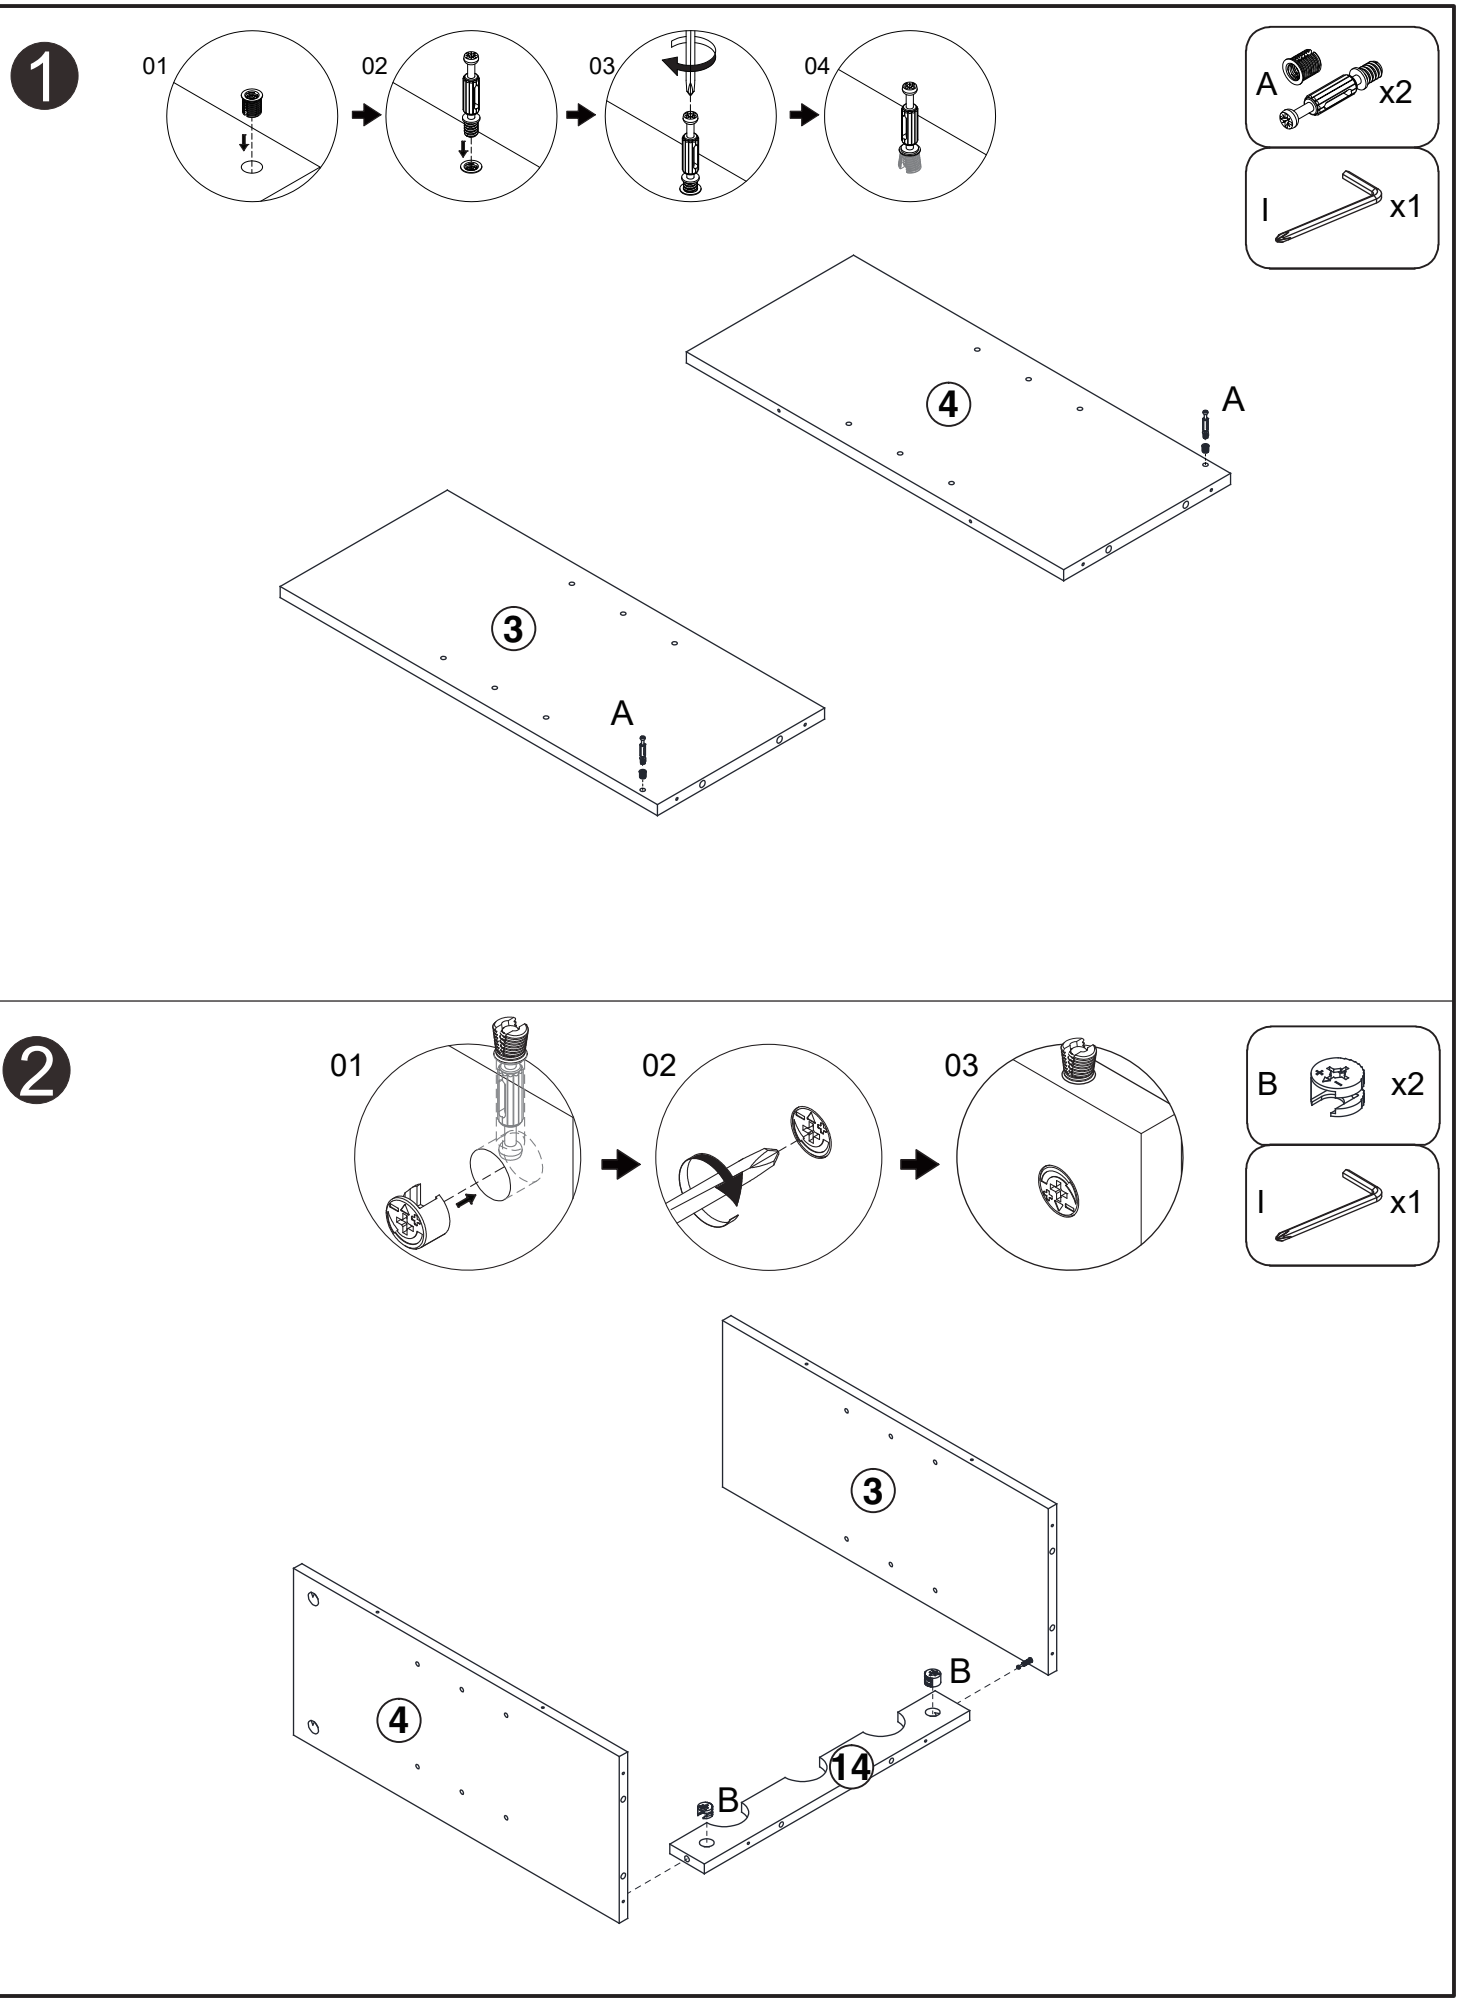


Hardware

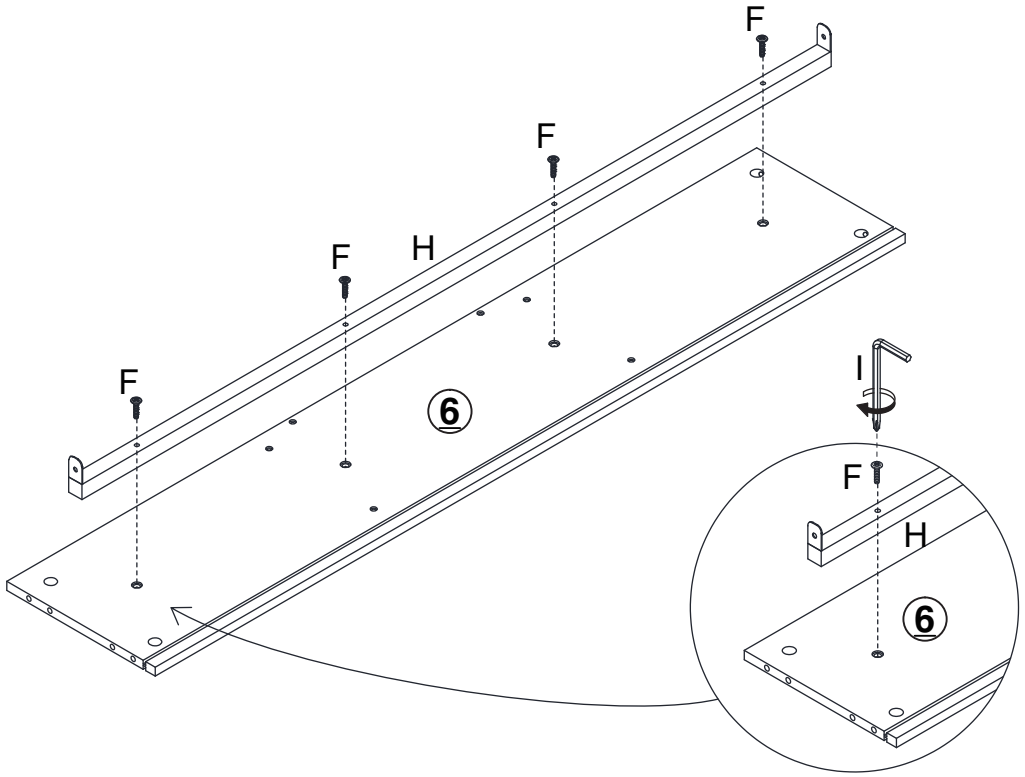
 350mm Slide Rail		 350mm Slide Rail		 3x14mm screw		 3x14mm screw	
CL	2pcs	CR	2pcs	a	4pcs	b	44+2pcs
 Plastic buckle		 4x40mm screw		 Magnetic contact		 Two-hole magnetic sheet	
c	40+2pcs	d	4pcs	e	2pcs	f	2pcs
 3x16mm screw				 SPARE BAG			
g	4pcs	h	2pcs	Please put the hardware of +2 in this self sealing bag			



Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.


1
01
02
03
04
A x2
I x1
4
A
3
A
2
01
02
03
B x2
I x1
3
4
B
14
B

3

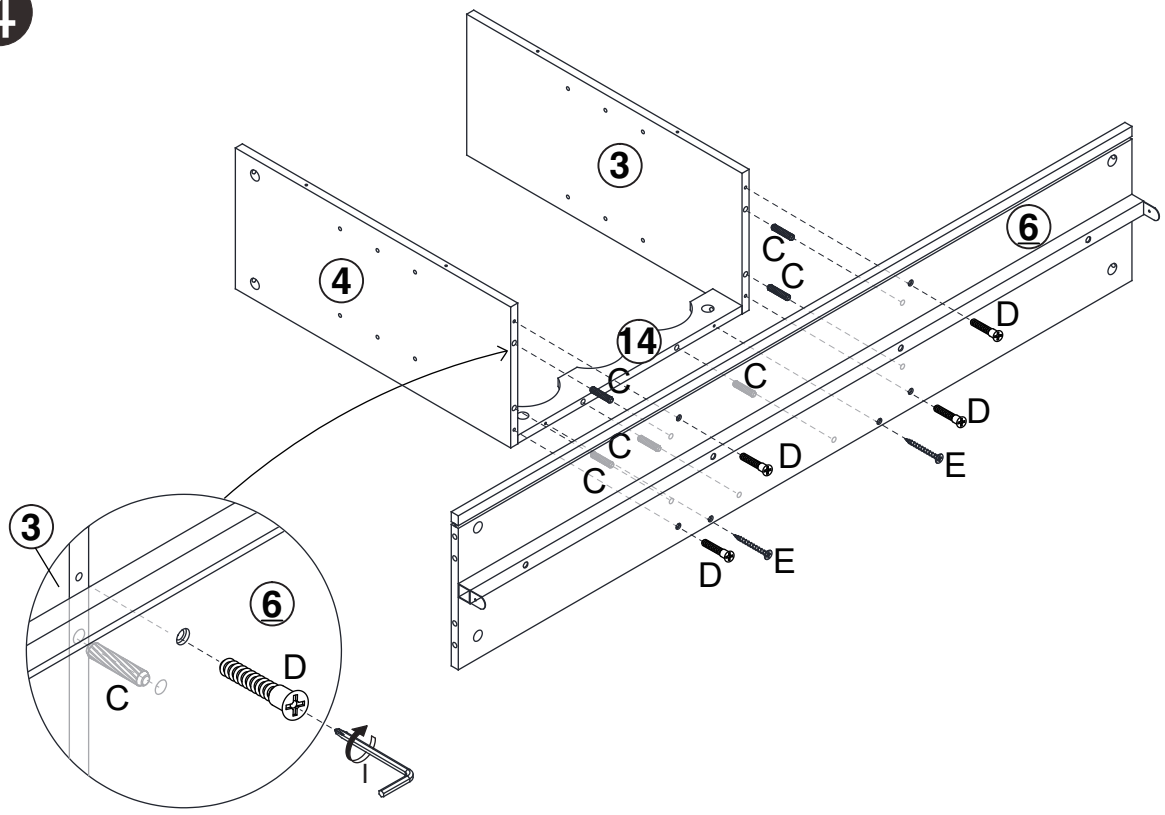


F x4

H x1

I x1

4



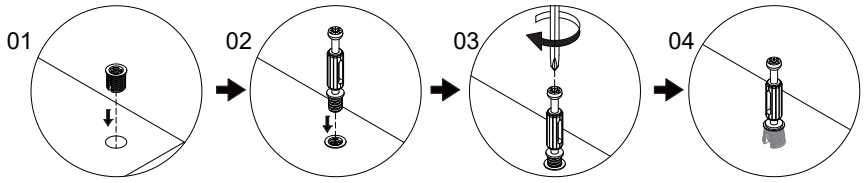
C x6

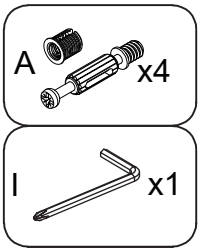
E x2

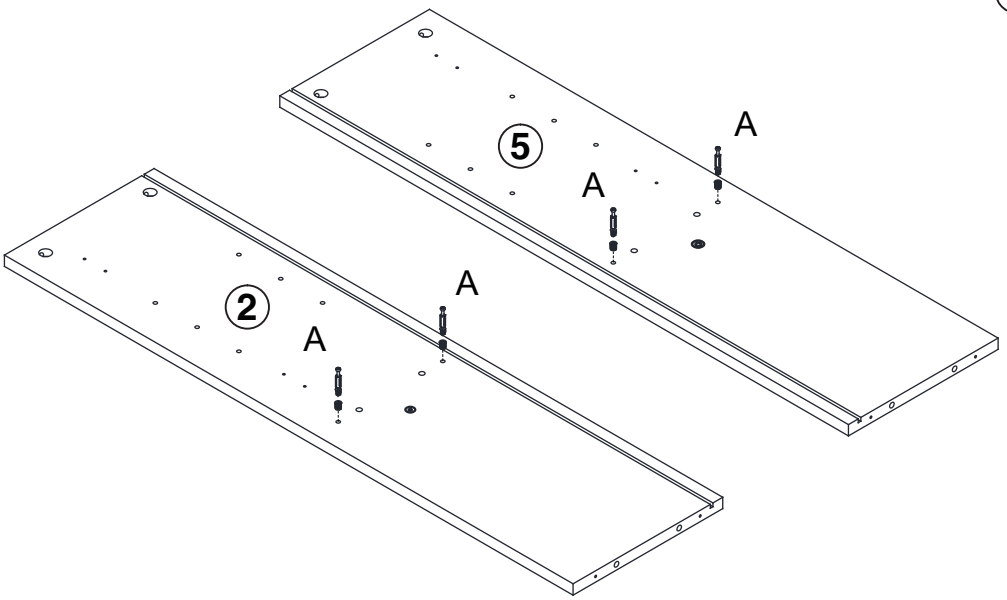
I x1

D x4

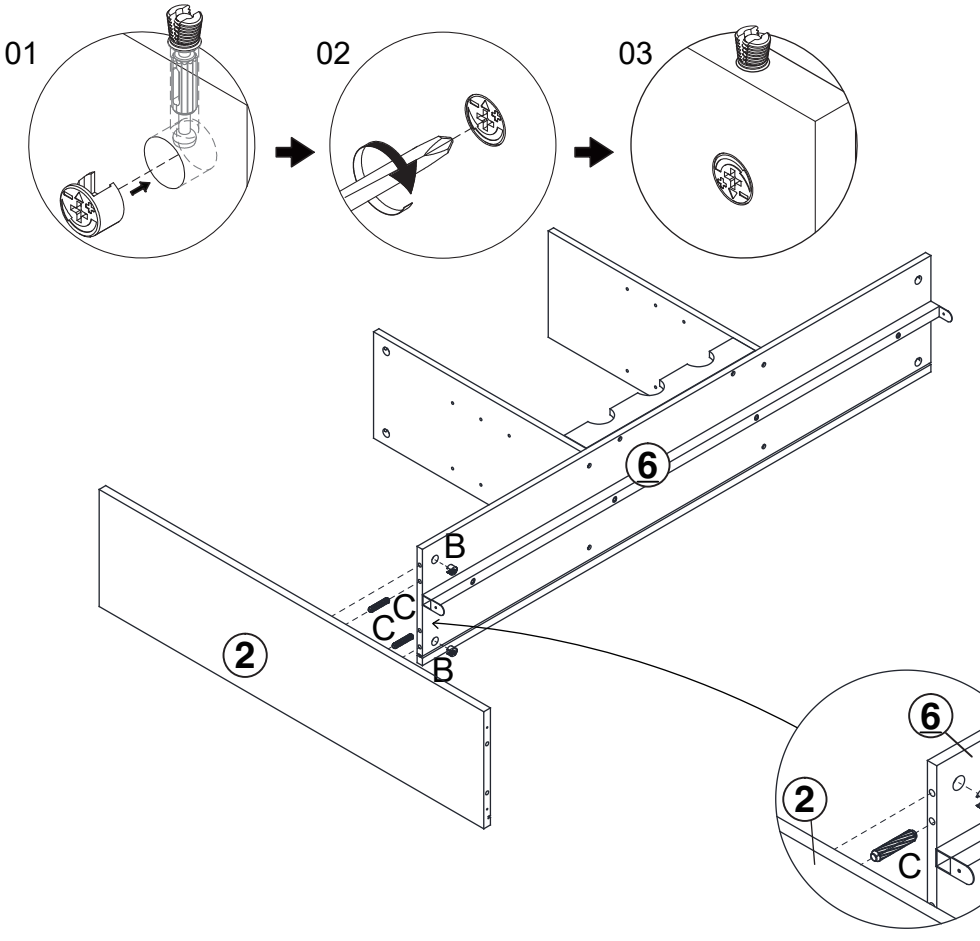
5

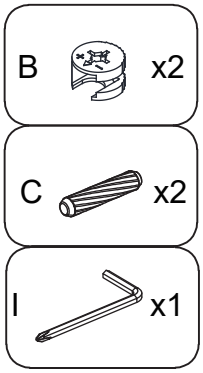




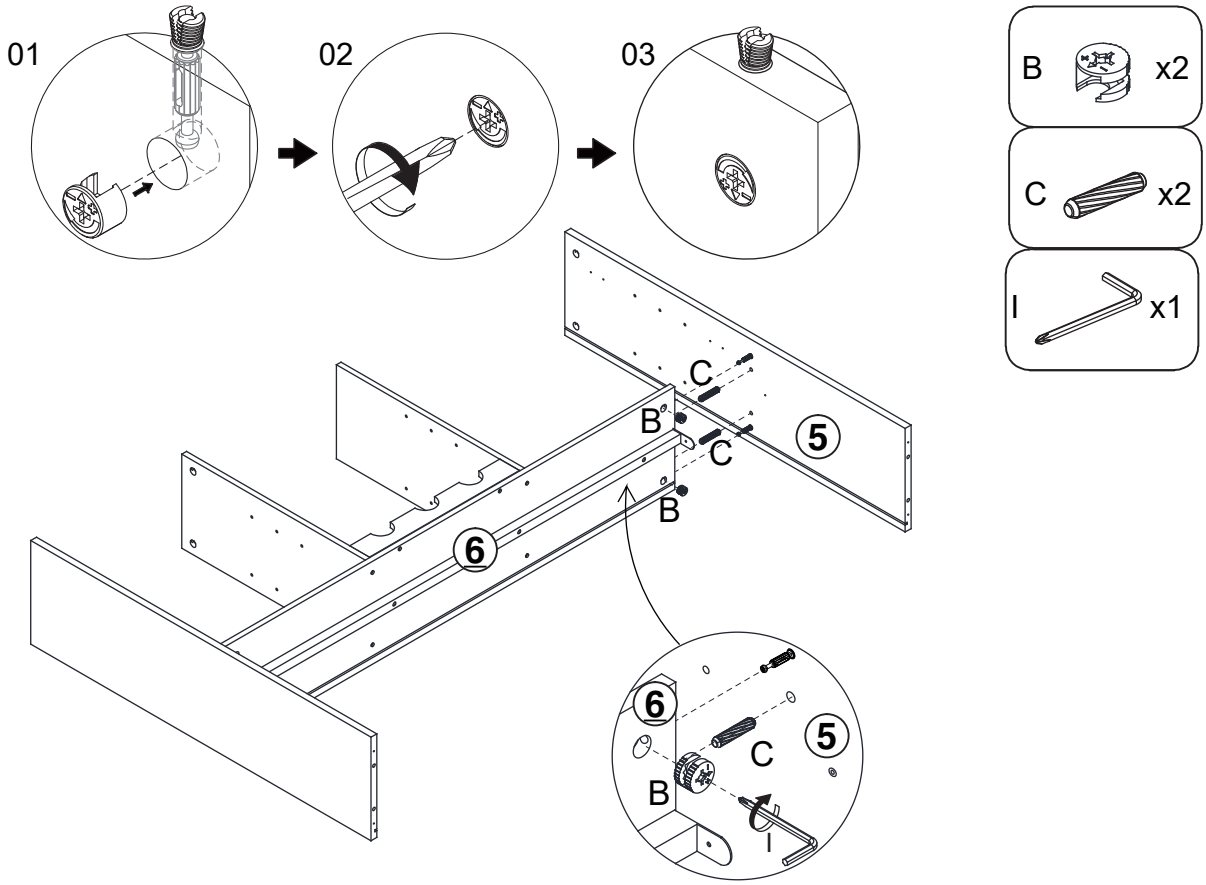


6

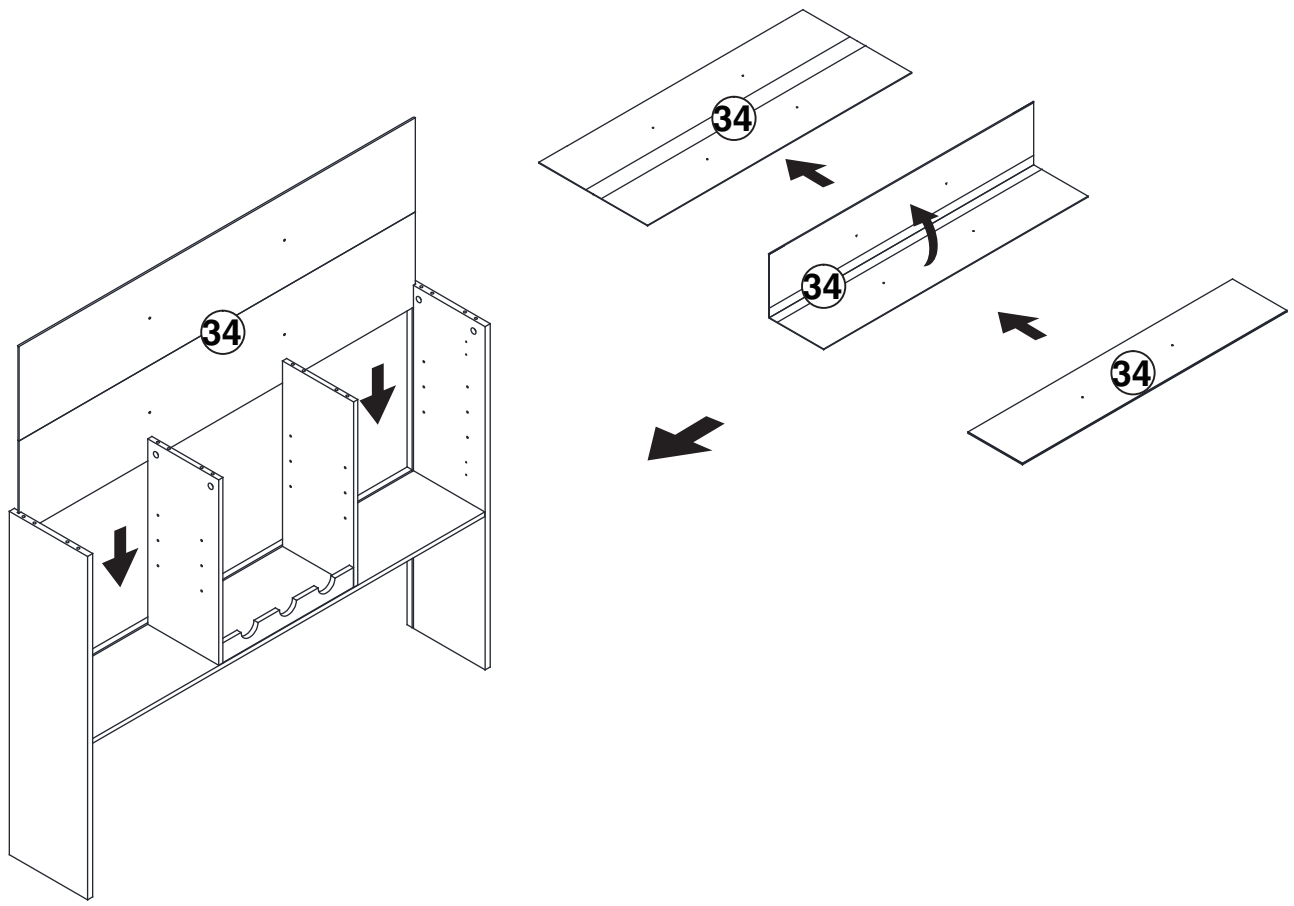




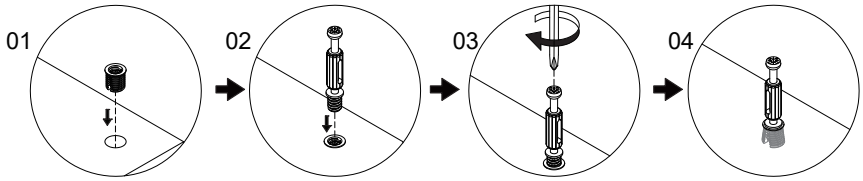
7

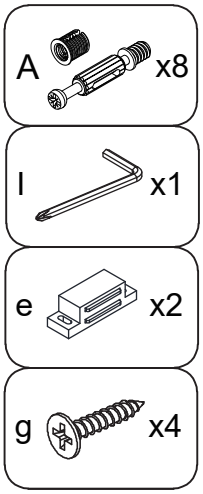


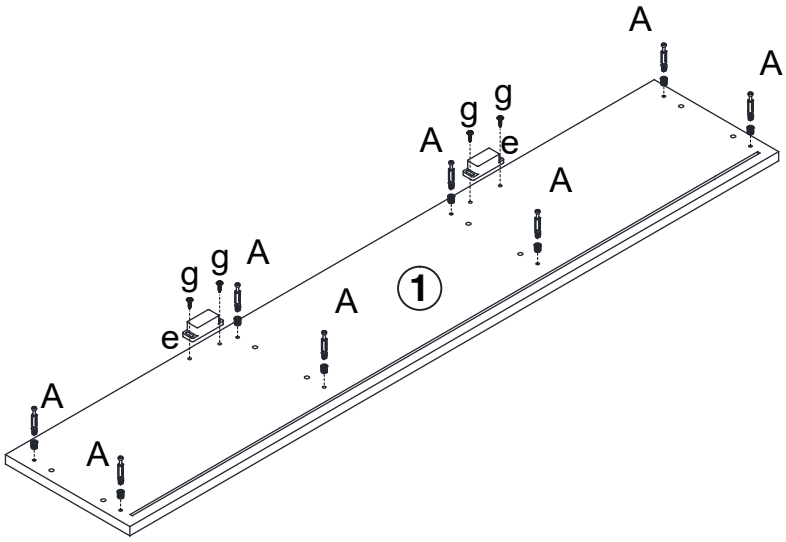
8



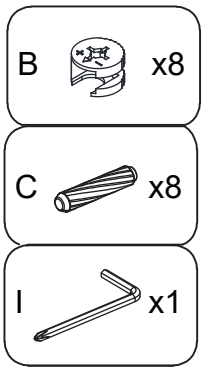
9

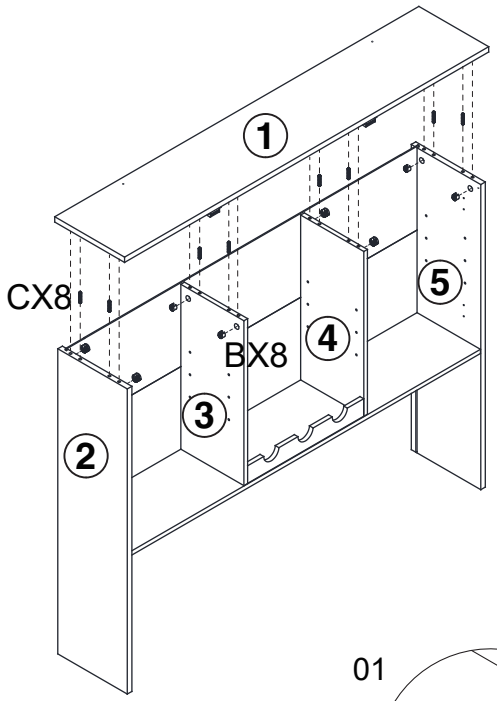

01
02
03
04

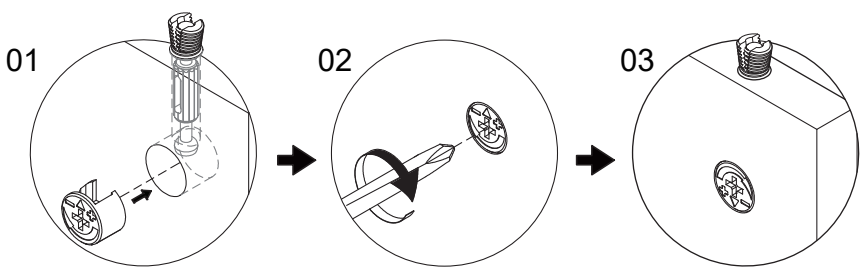

A x8
I x1
e x2
g x4


A
A
g
g
e
A
A
g
g
A
e
A
A
1

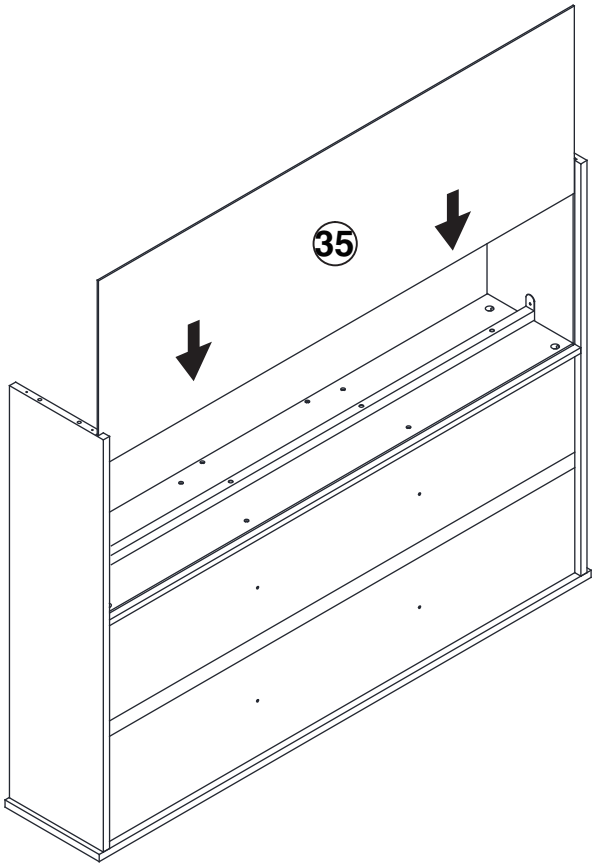
10


B x8
C x8
I x1

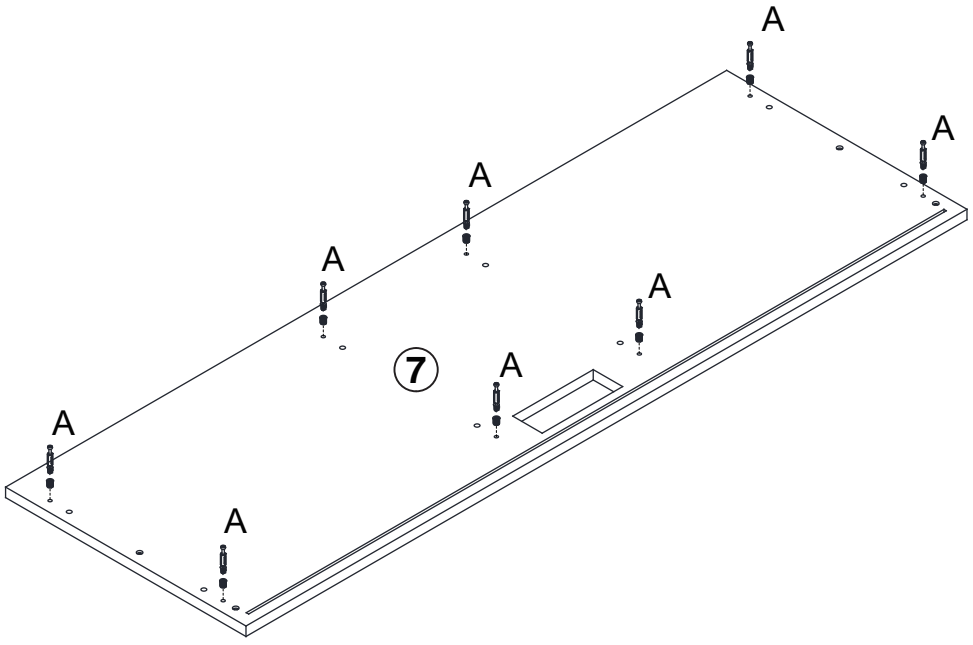

1
CX8
5
4
BX8
3
2

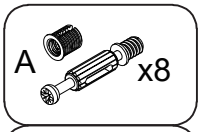

01
02
03

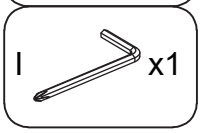
11

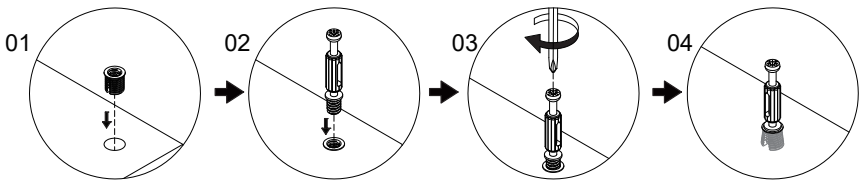


12

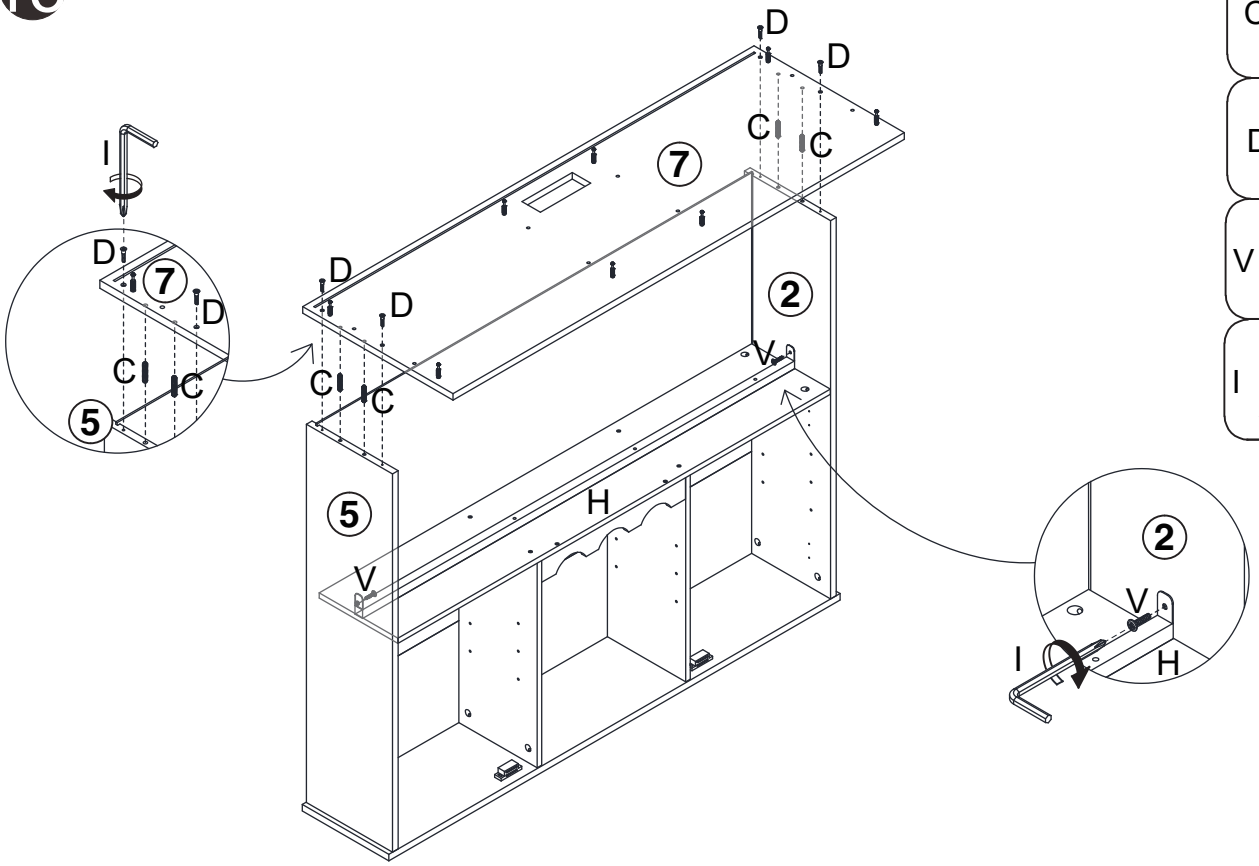


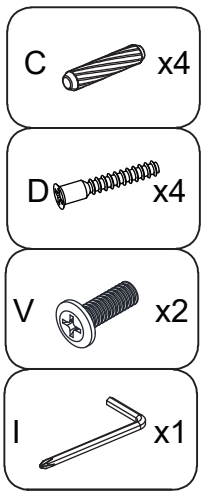




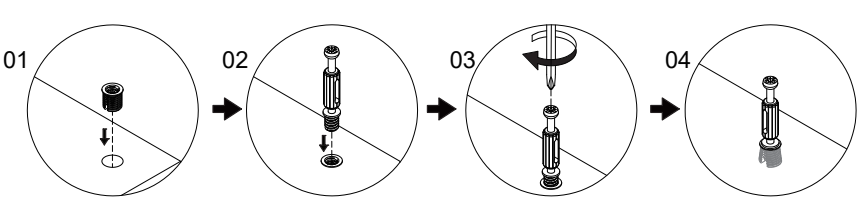


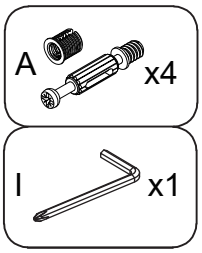
13

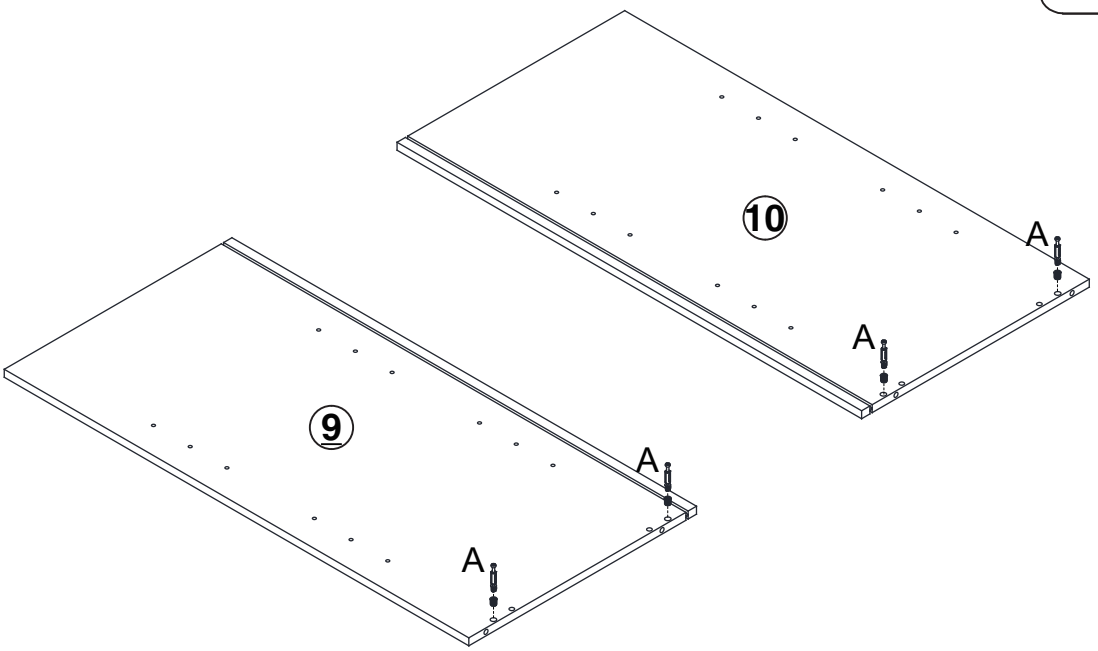

D
D
C
C
7
I
D
7
D
C
C
5
D
D
C
C
2
V
5
H
V
2
V
I
H

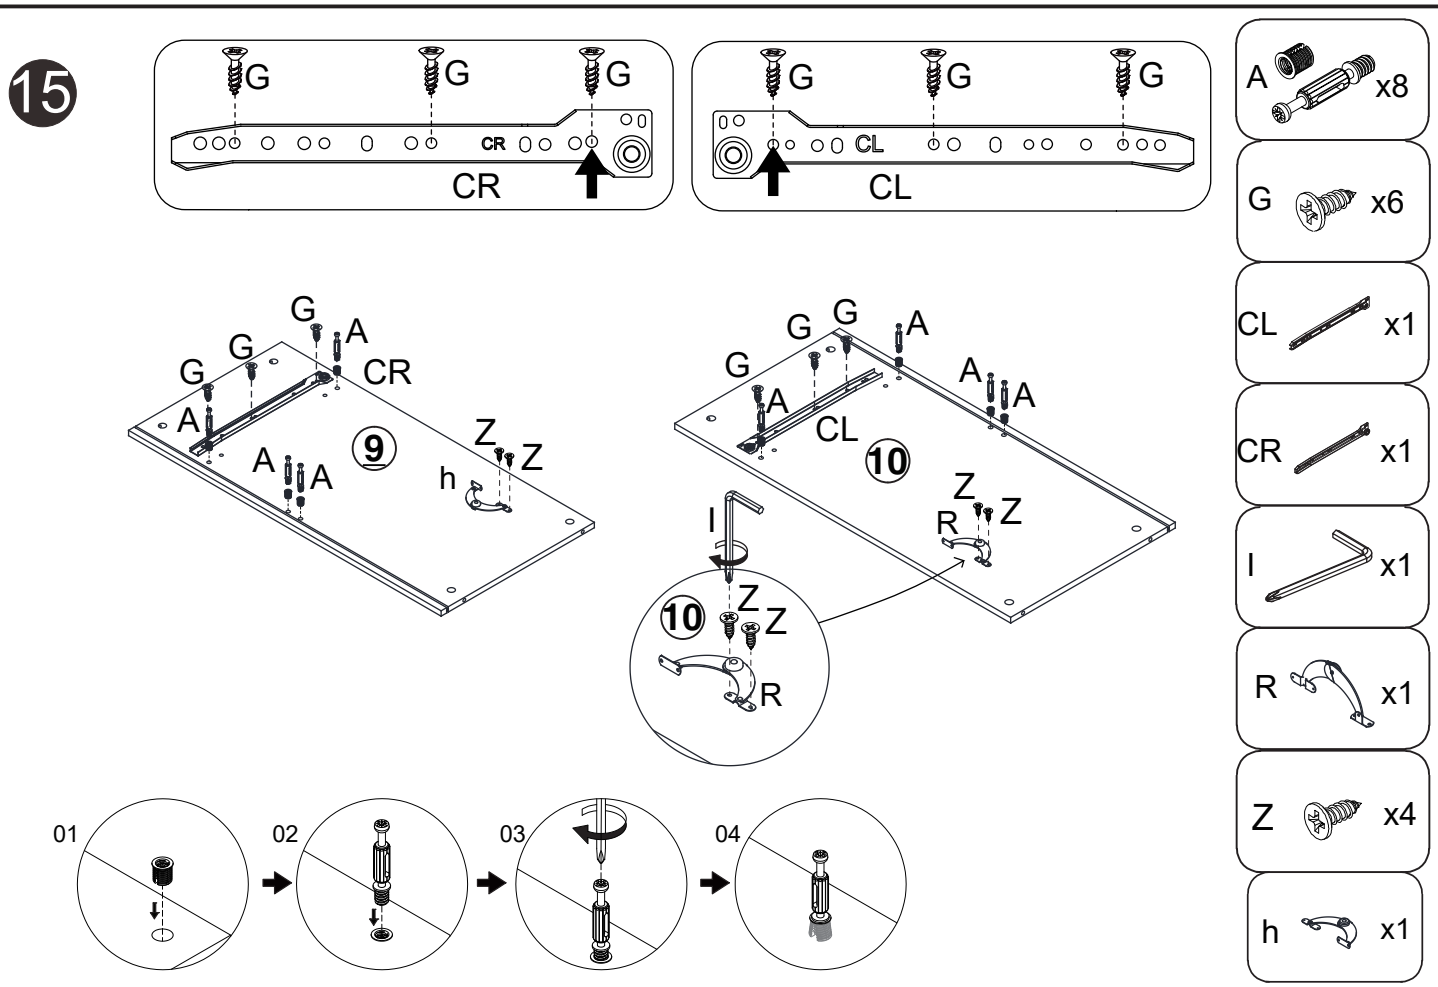

C x4
D x4
V x2
I x1

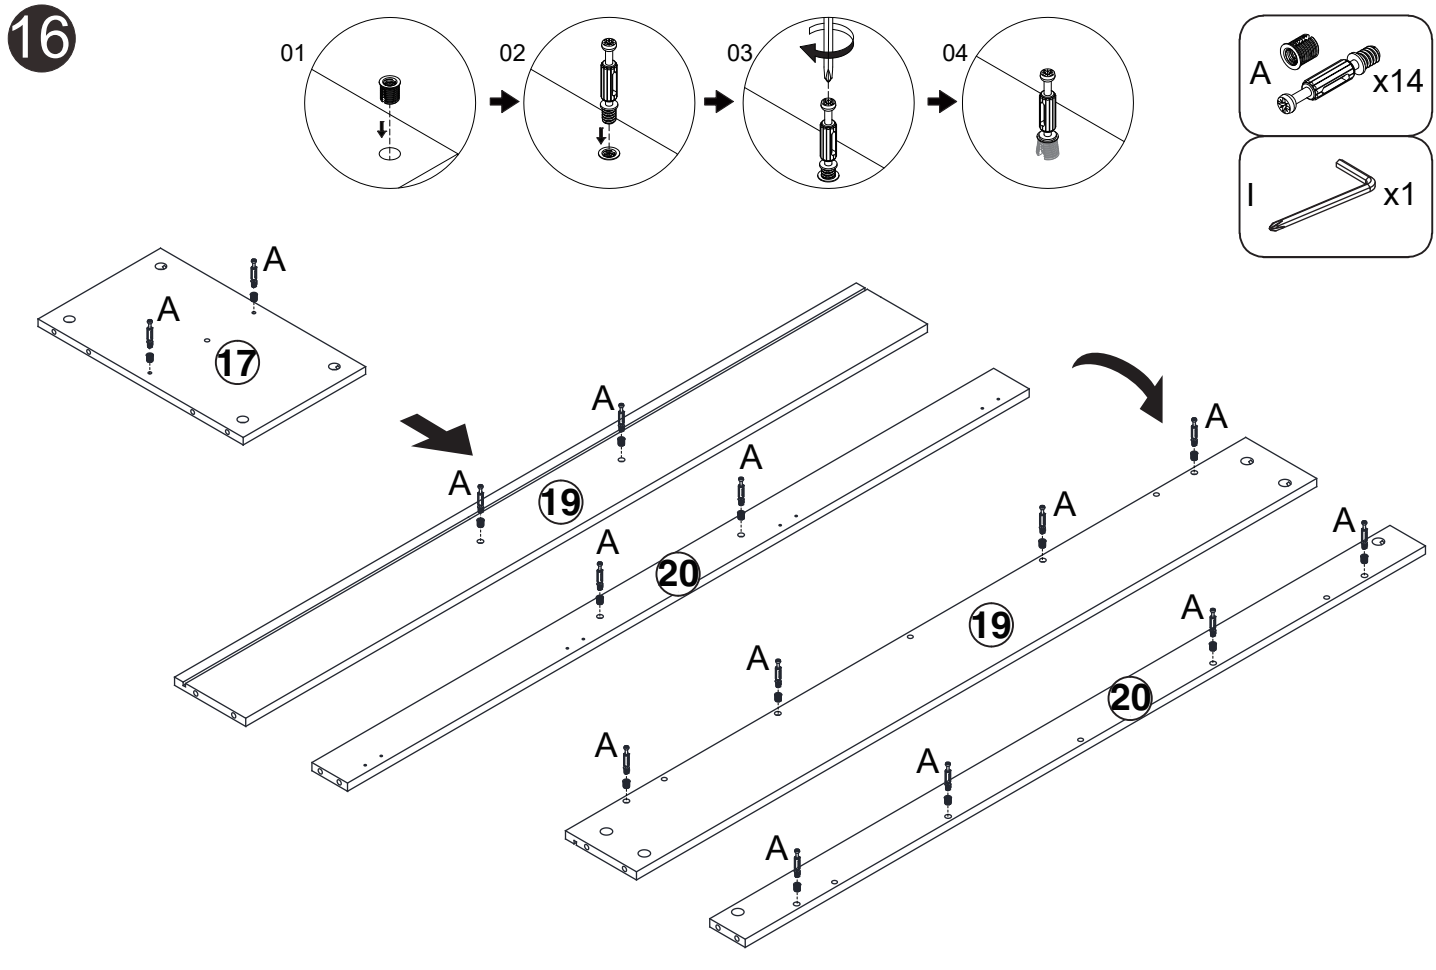
14


01
02
03
04

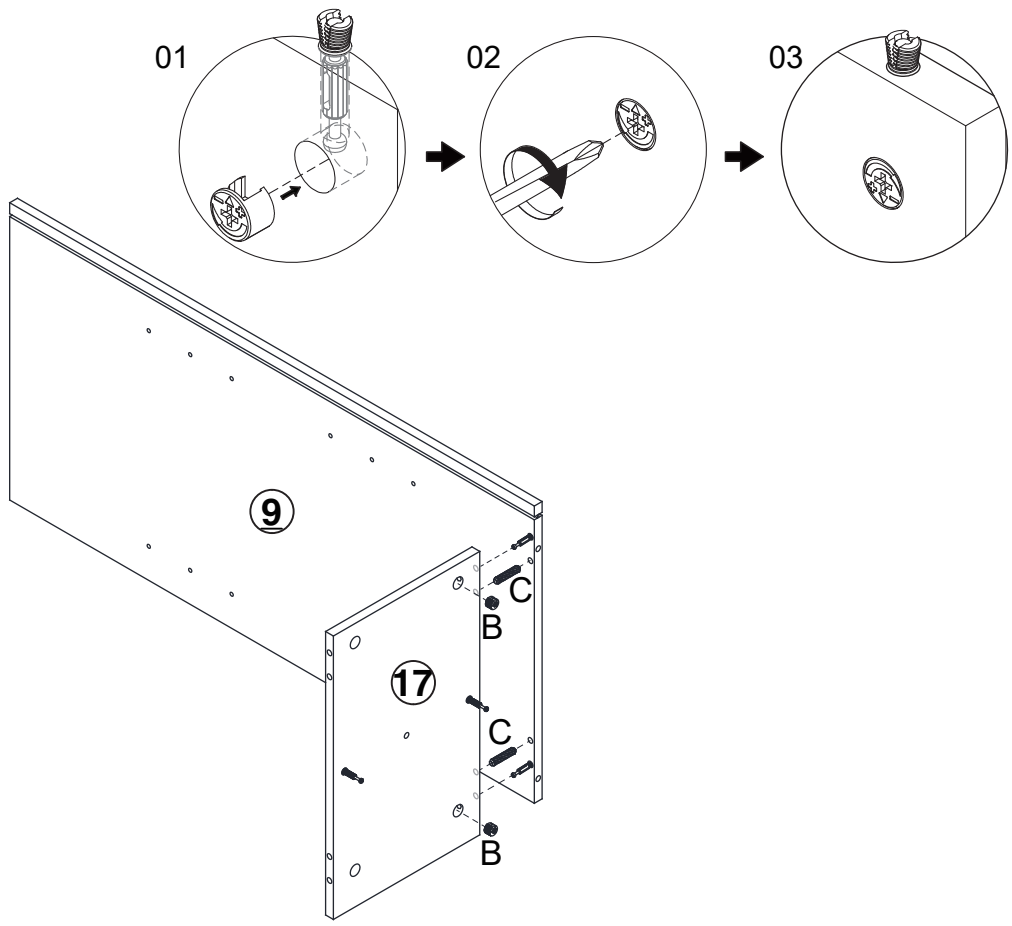

A x4
I x1

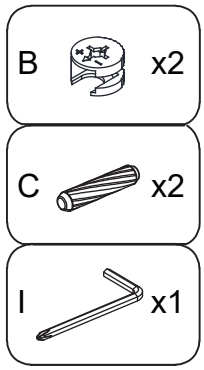

10
A
A
9
A
A


15
G
G
G
CR
CR
G
G
G
CL
CL
A x8
G x6
CL x1
CR x1
I x1
R x1
Z x4
h x1
G
G
A
CR
G
A
A
A
9
Z
Z
h
G
G
A
G
A
A
A
CL
10
Z
Z
R
I
10
Z
Z
R
01
02
03
04

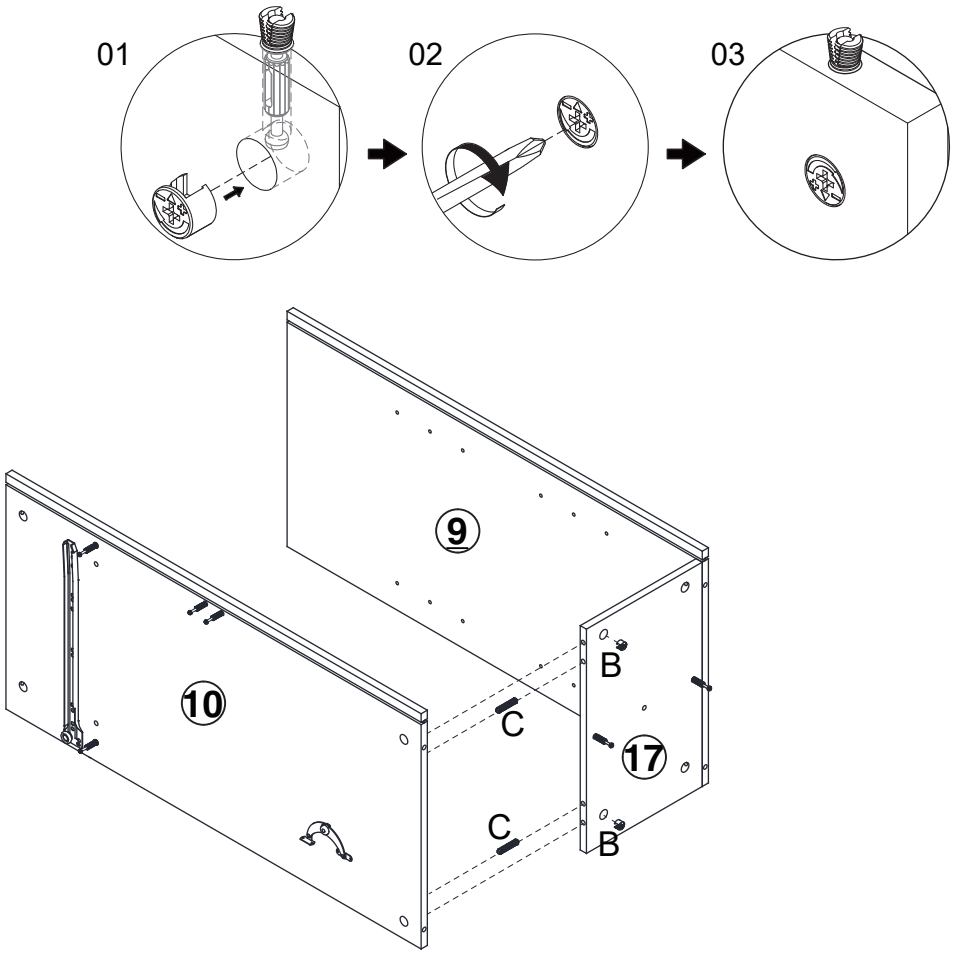

16
01
02
03
04
A x14
I x1
A
A
17
A
A
19
A
A
20
A
A
19
A
A
20
A
A
A
A

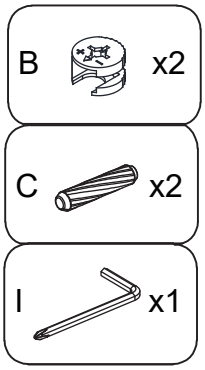
17

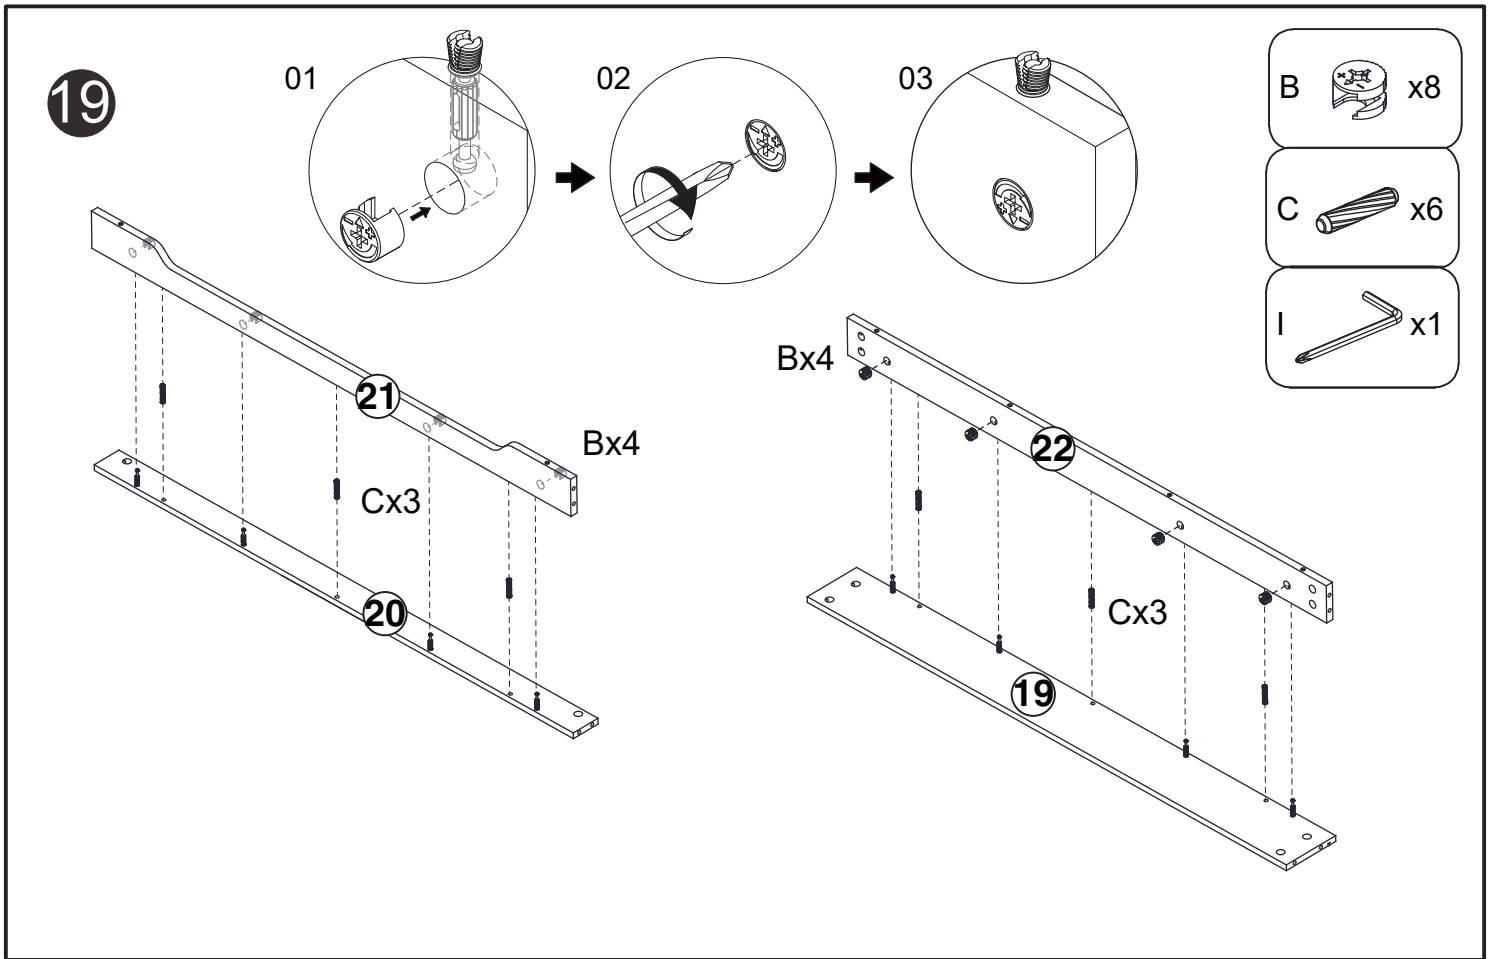


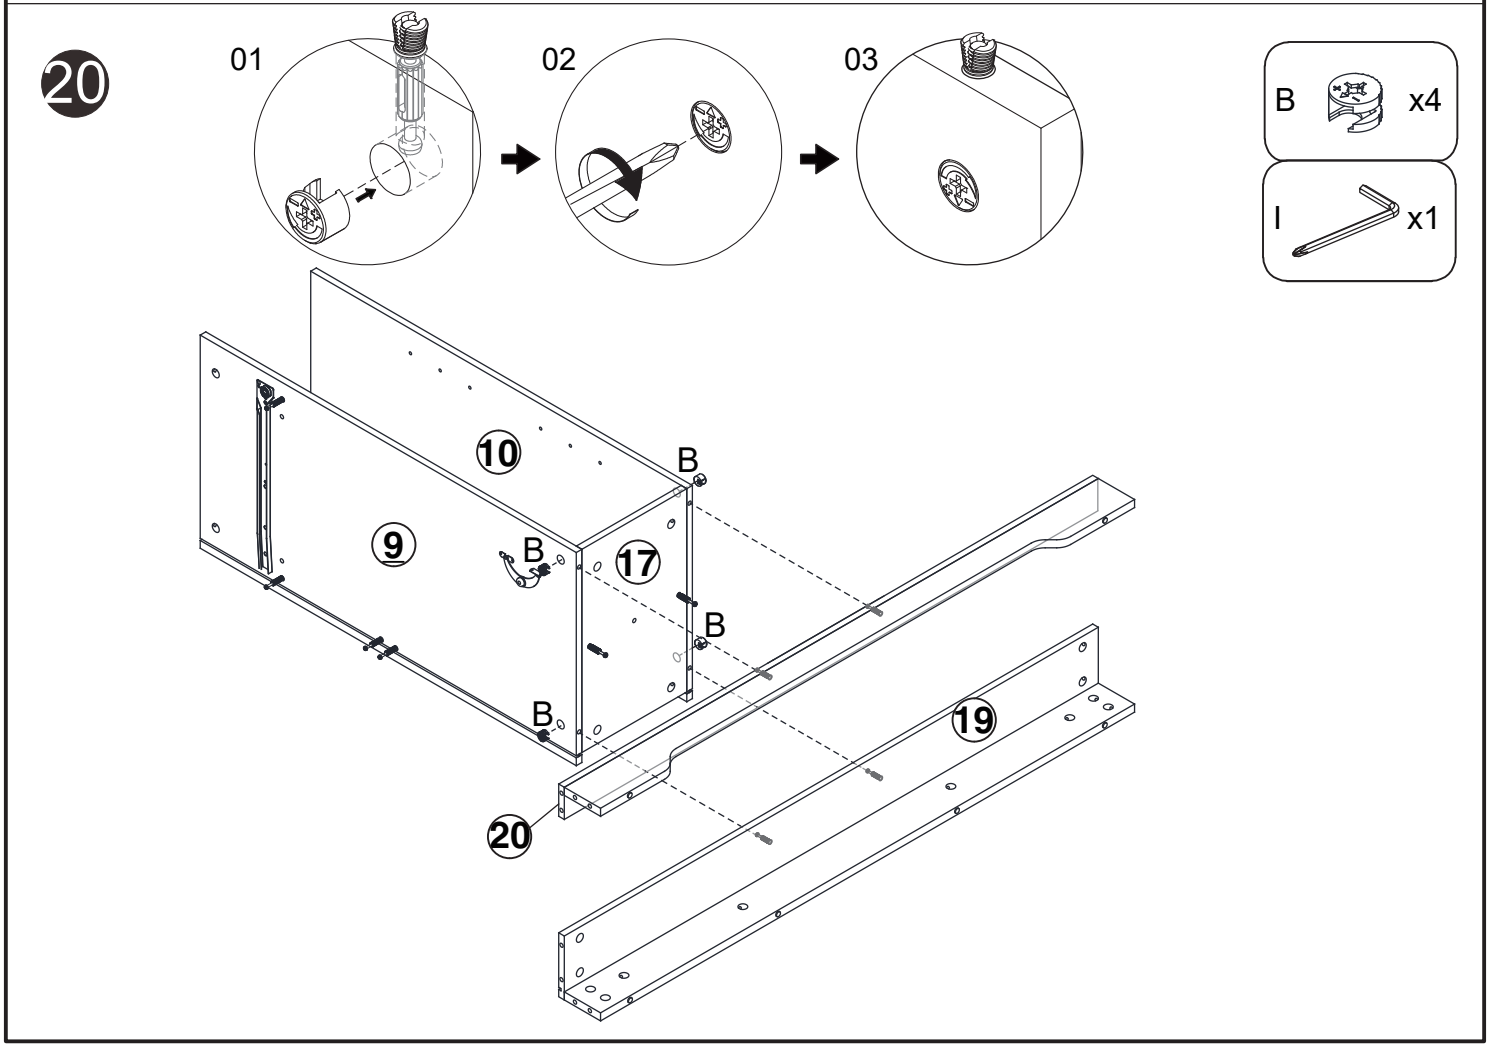


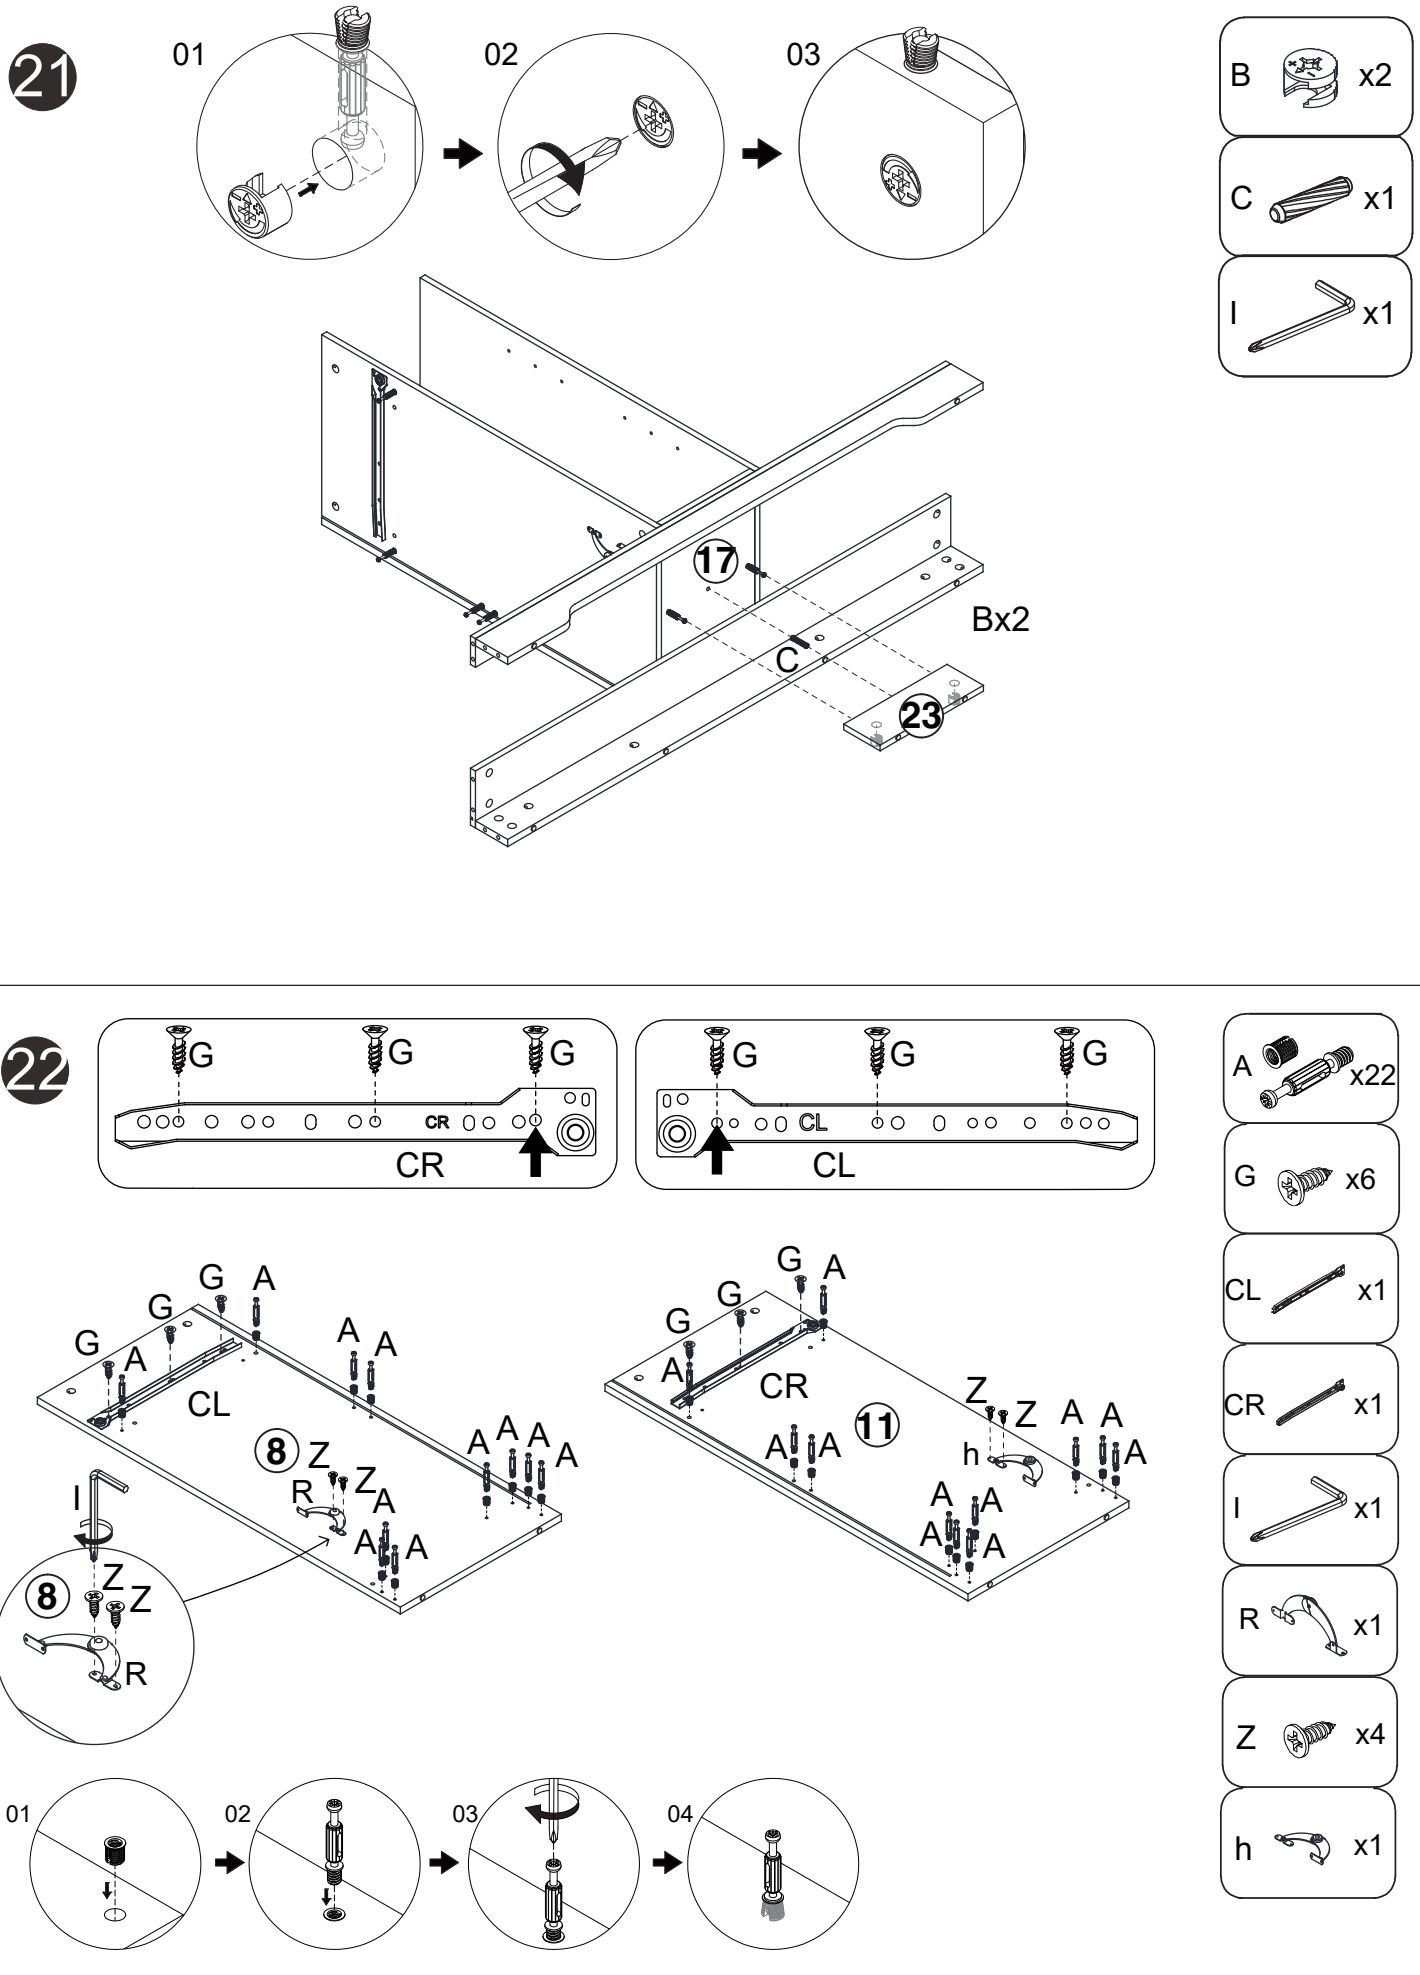
18



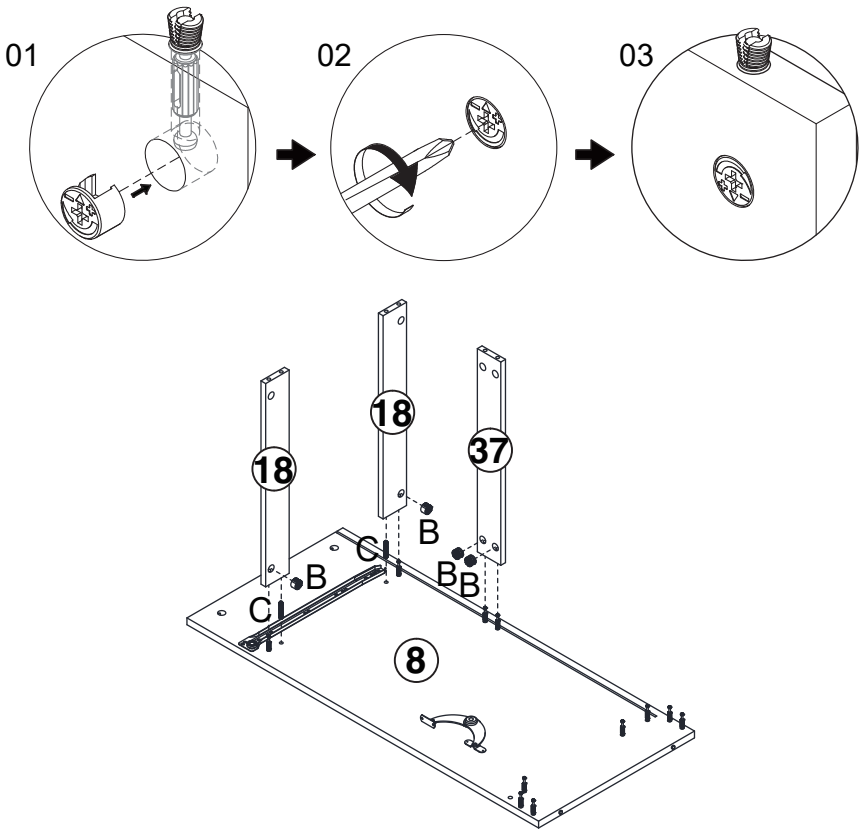



19
01
02
03
B x8
C x6
I x1
21
Bx4
Cx3
20
Bx4
22
Cx3
19


20
01
02
03
B x4
I x1
10
B
9
B
17
B
B
19
20


21
01
02
03
B x2
C x1
I x1
17
Bx2
C
23
22
G
CR
CL
A x22
G x6
CL x1
CR x1
I x1
R x1
Z x4
h x1
8
11
Z
R
h
01
02
03
04

23

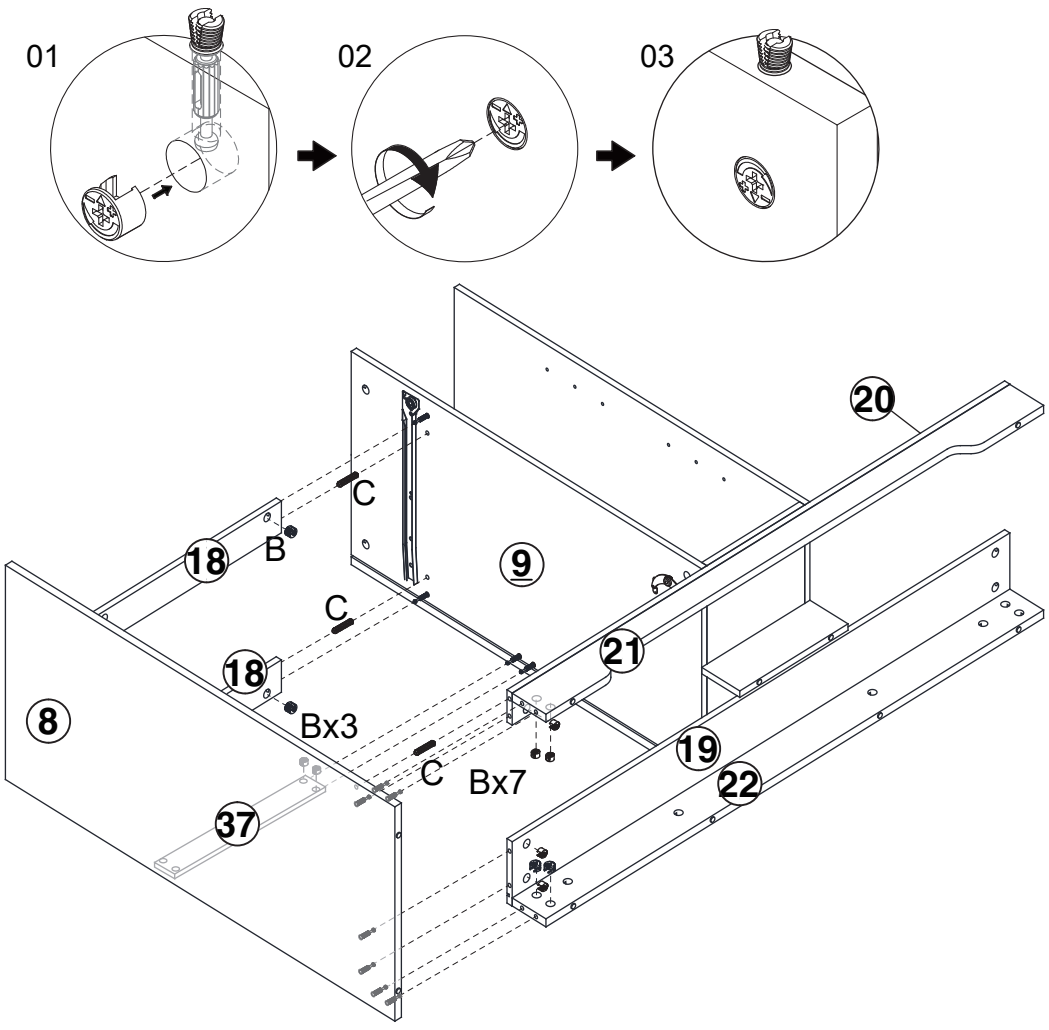


B x4

C x2

I x1

24

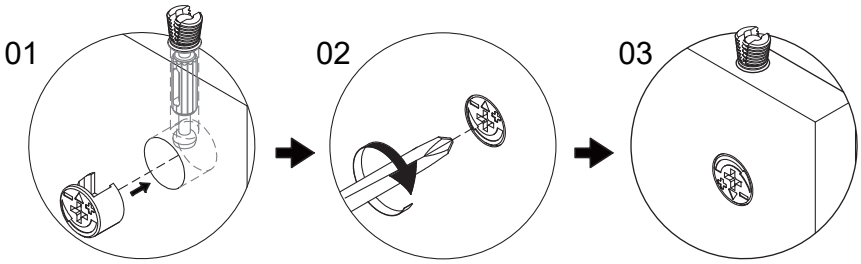


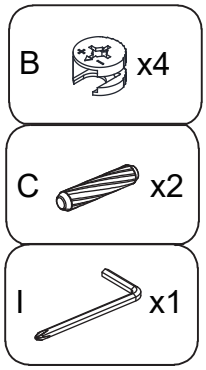
B x11

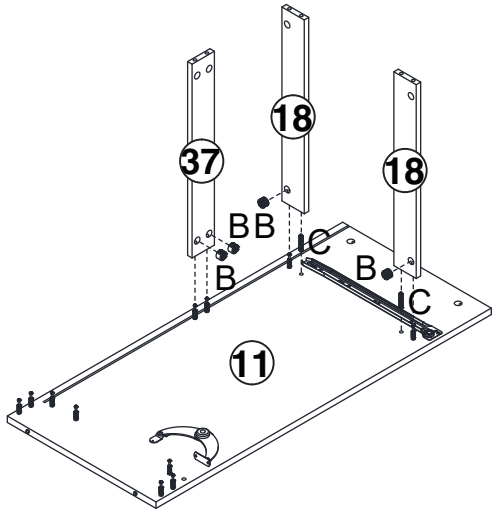
C x3

I x1

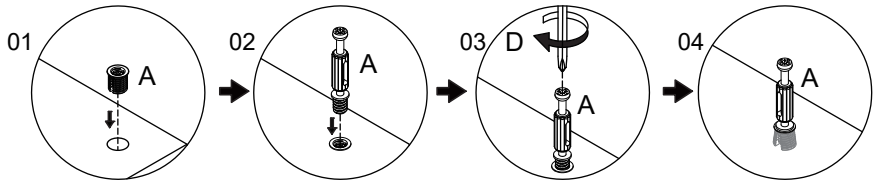
25

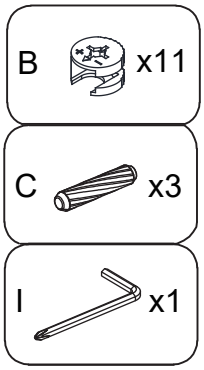

01
02
03

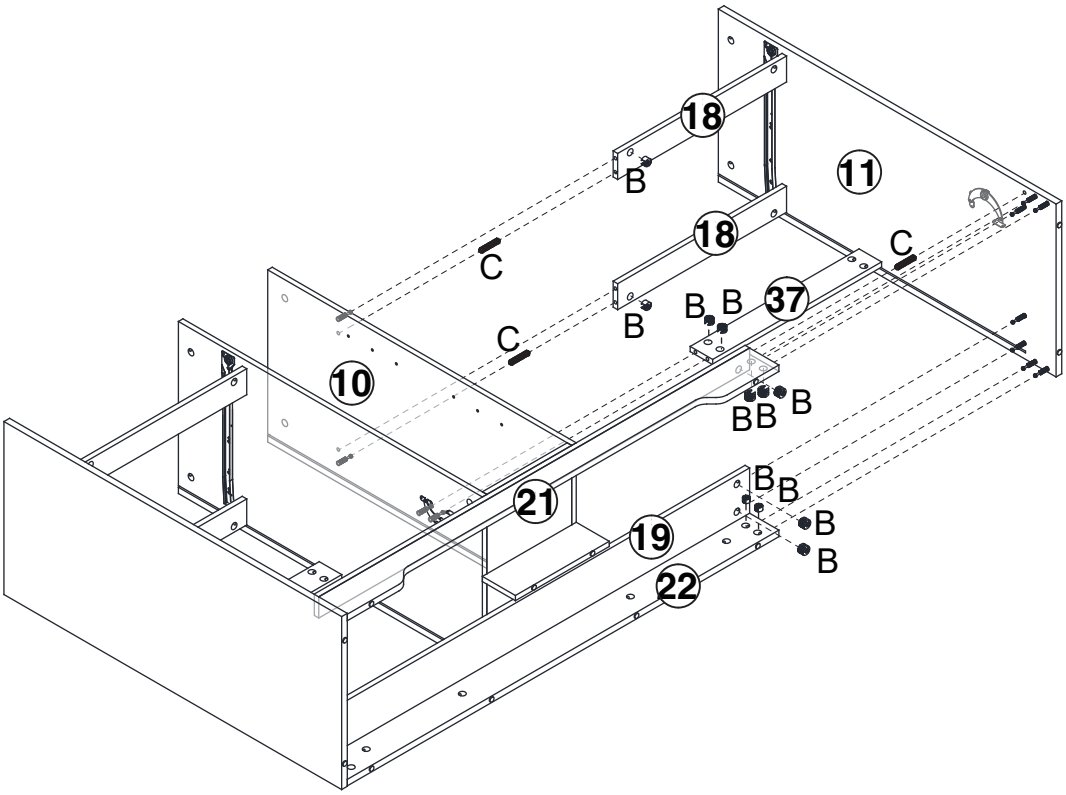

B x4
C x2
I x1

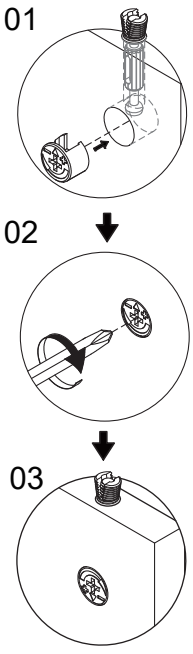

18
37
18
B B
C
B
B
C
11

26

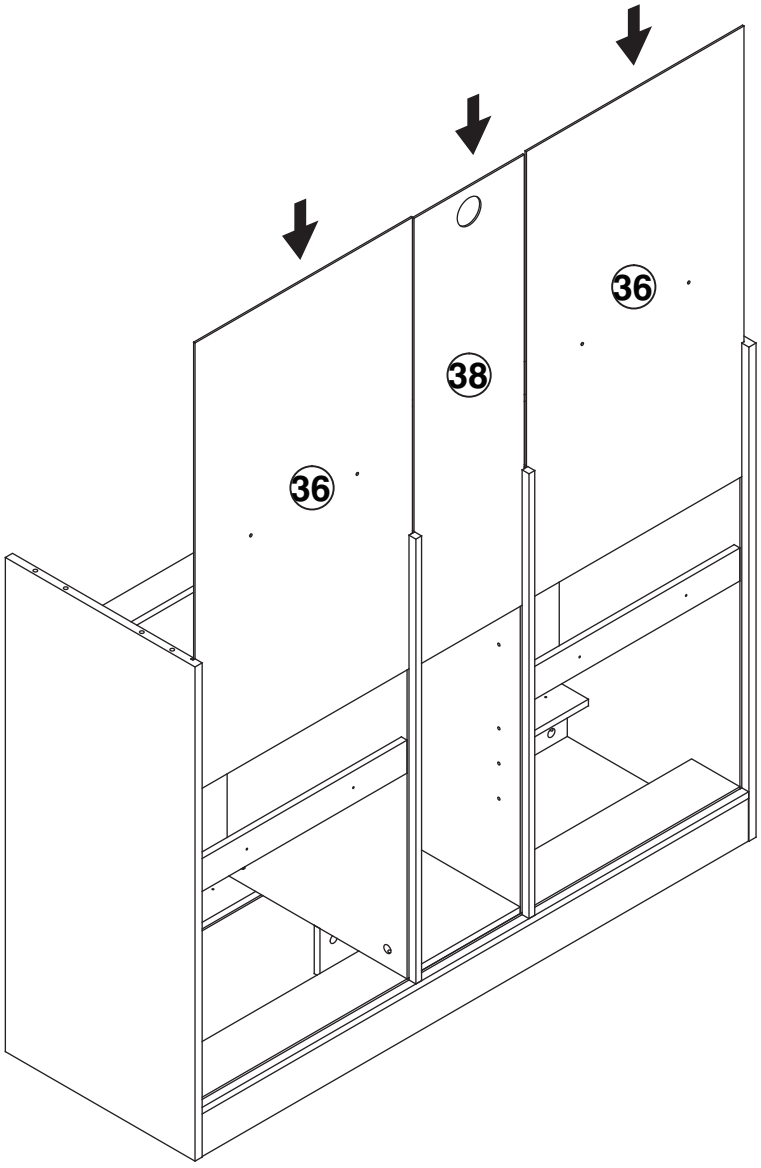

01
A
02
A
03
D
A
04
A


B x11
C x3
I x1


18
B
11
18
C
C
B
B B
37
C
10
B B B
21
B B
19
B
B
22


01
02
03

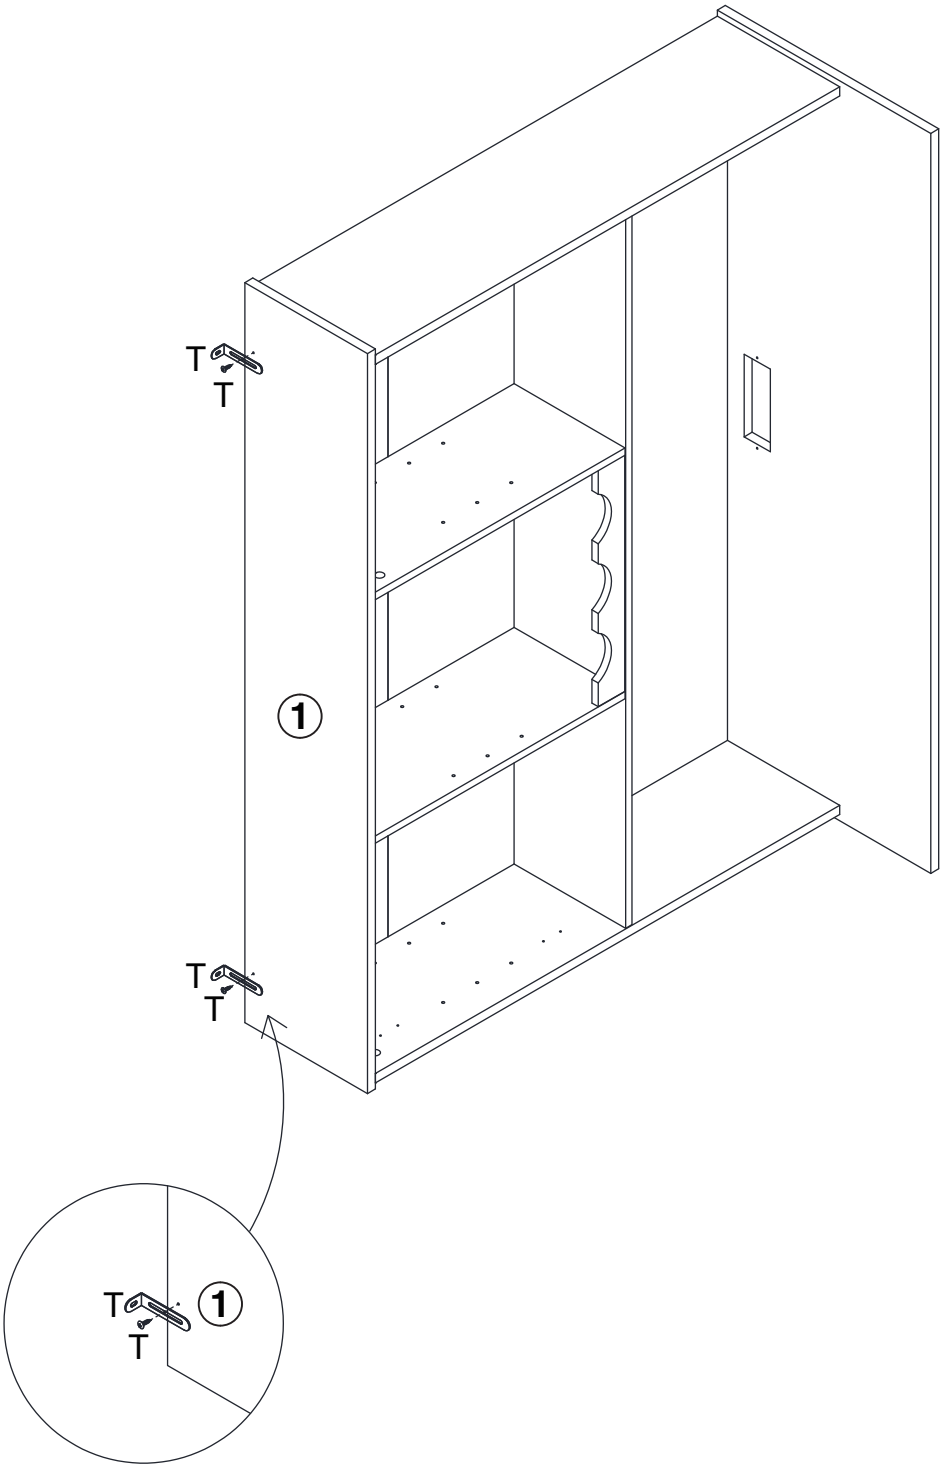
27



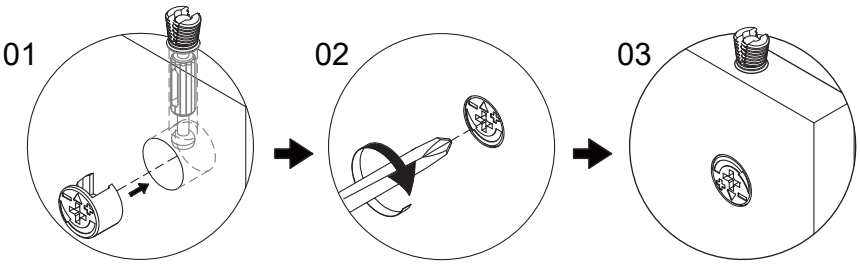
28

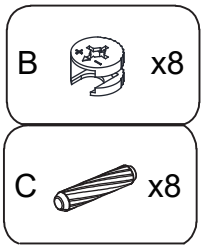
T x2

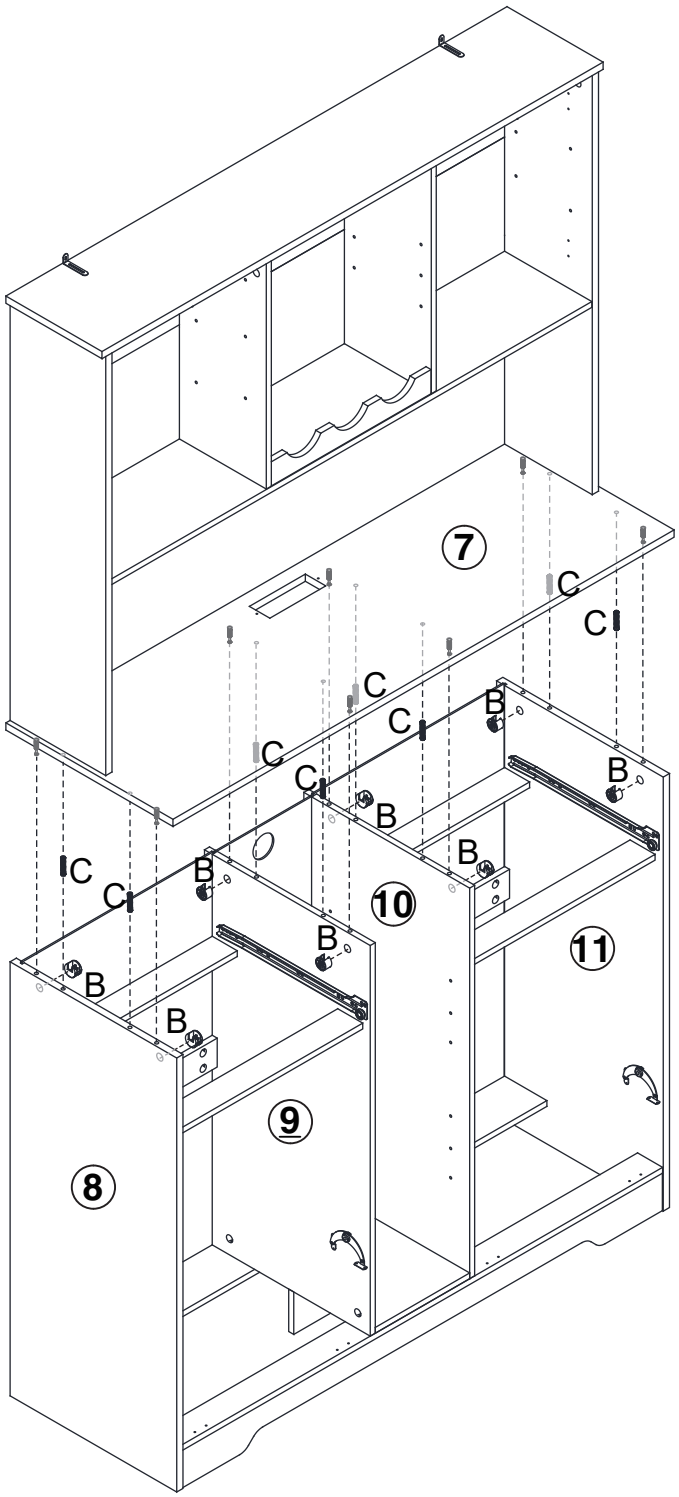
I x1



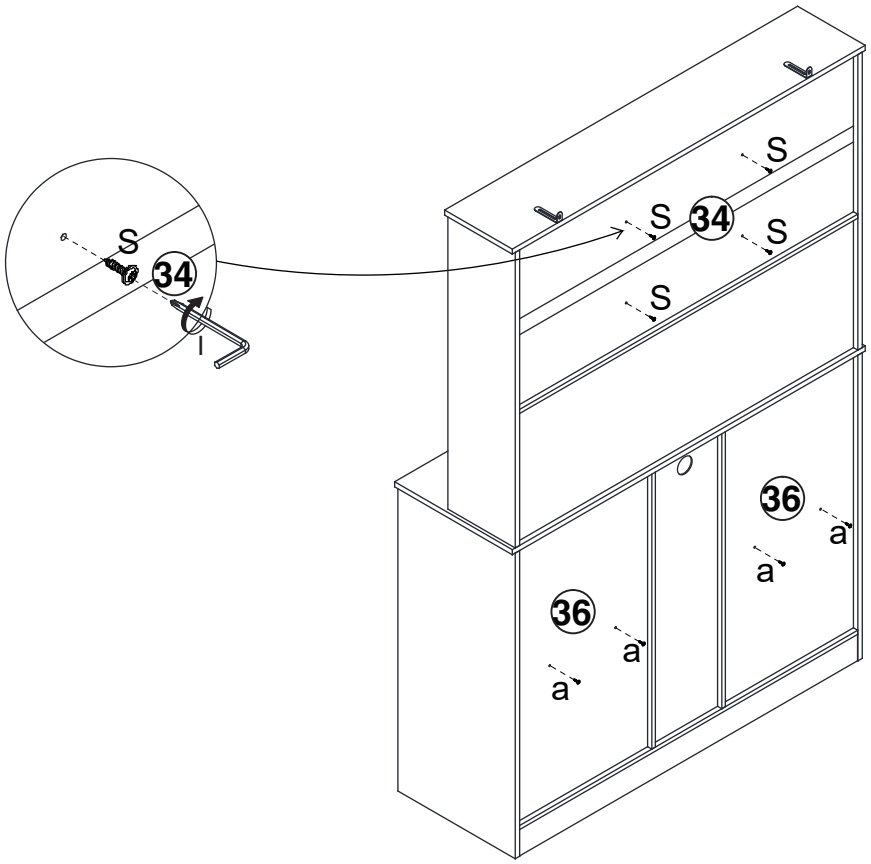
29

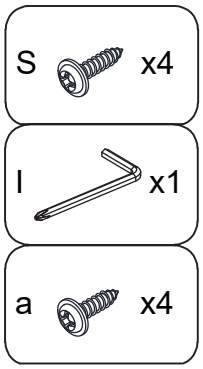




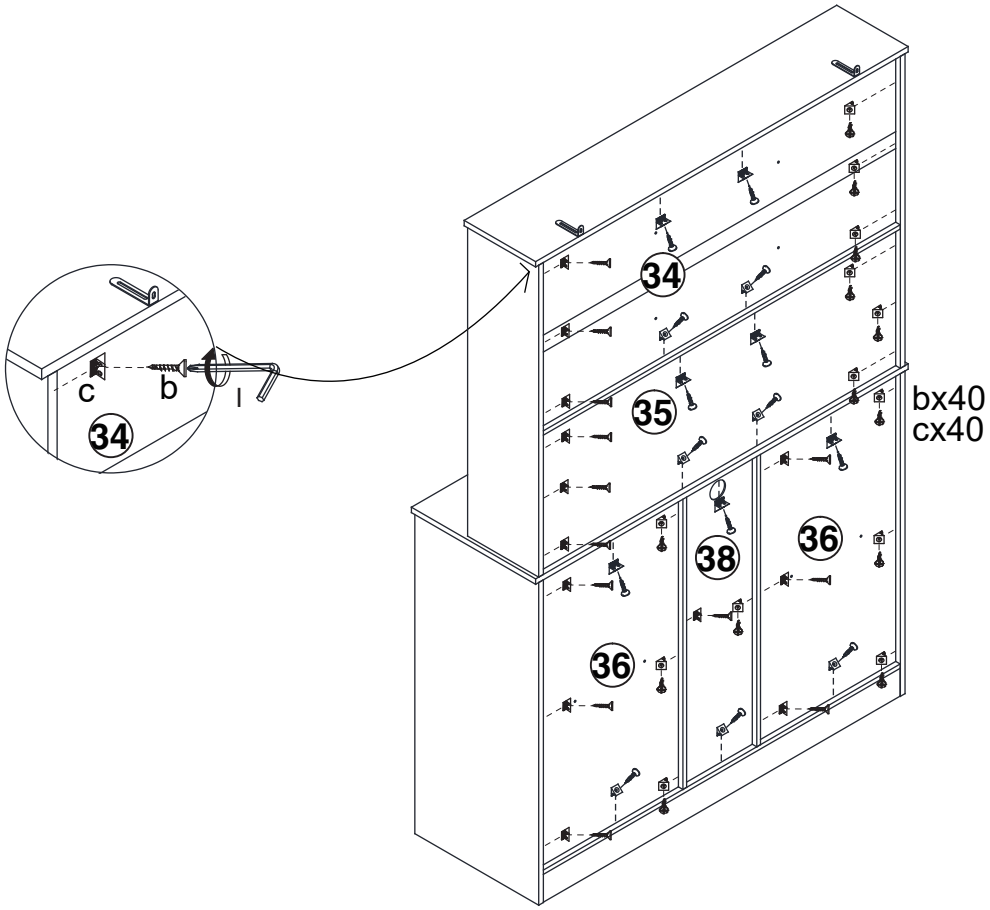


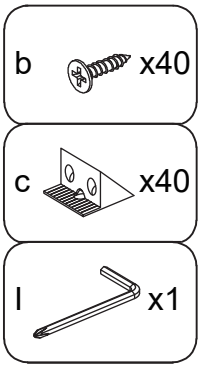
30


S
34
l
S
S
34
S
S
36
a
a
36
a
a

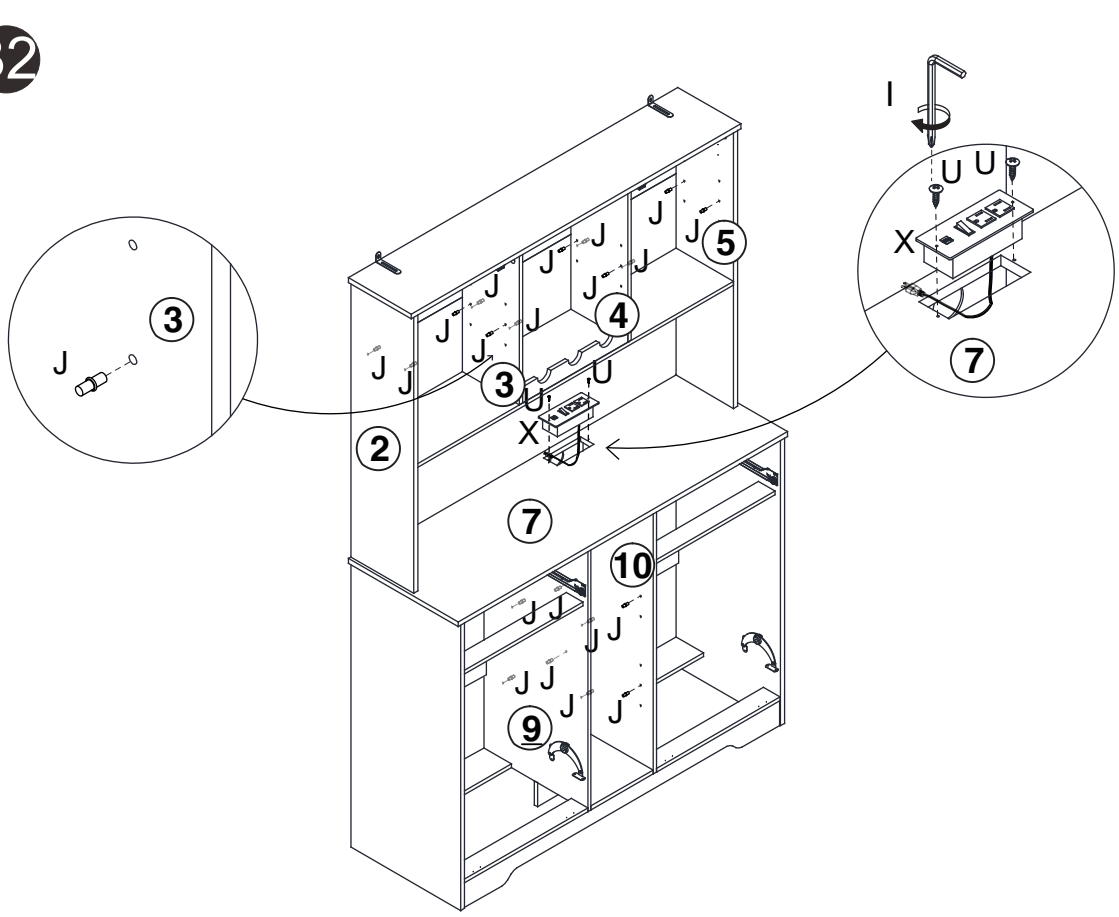

S x4
l x1
a x4

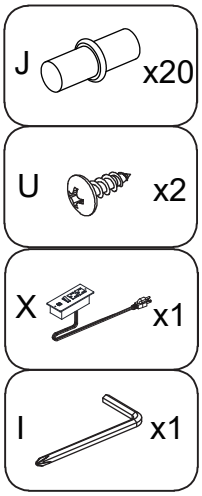
31


c
b
l
34
34
35
bx40
cx40
38
36
36

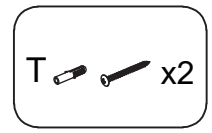

b x40
c x40
l x1

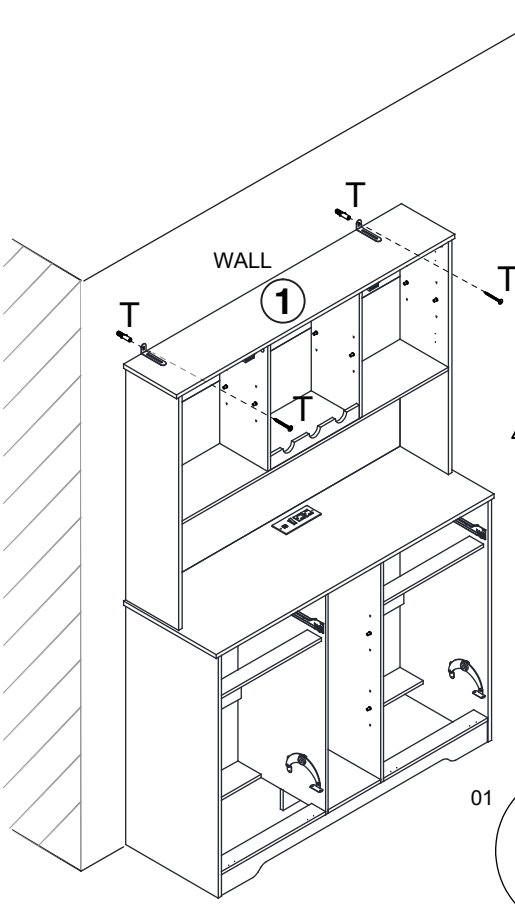
32

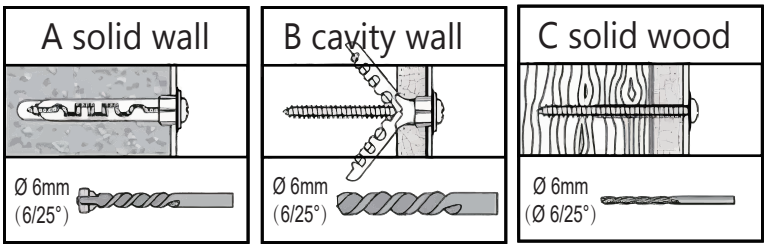




33

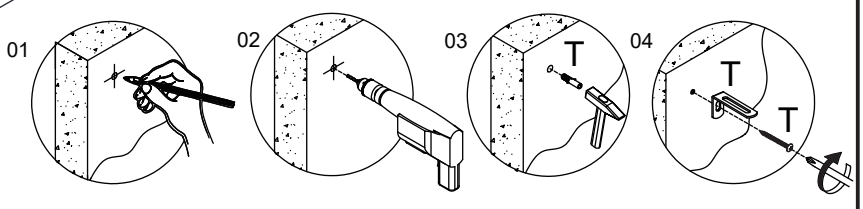




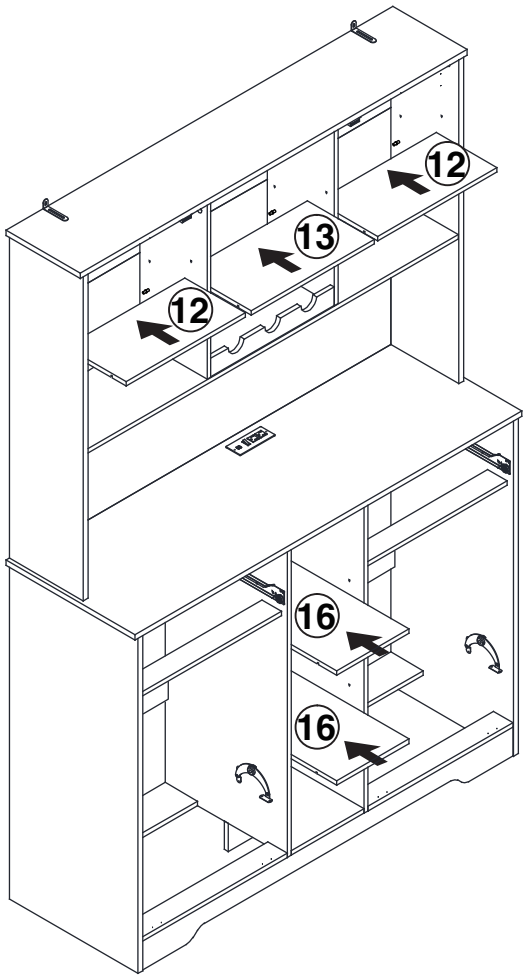


⚠ Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

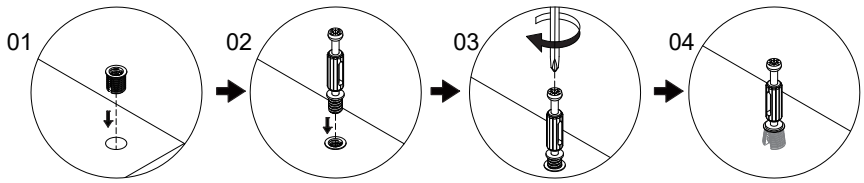
1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

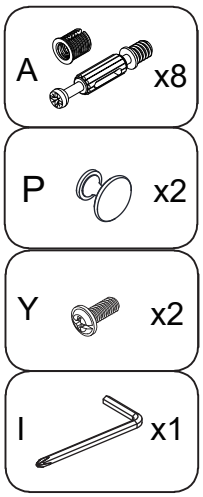


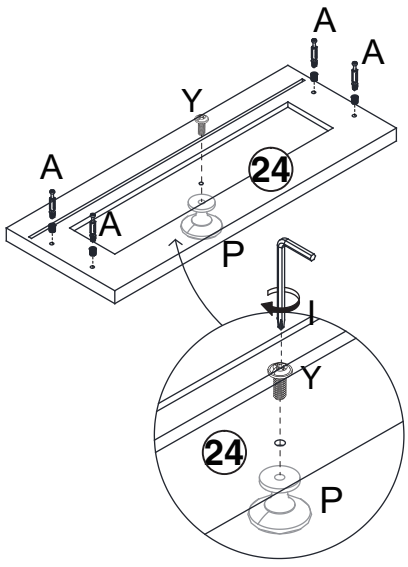
34



35

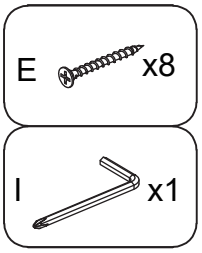






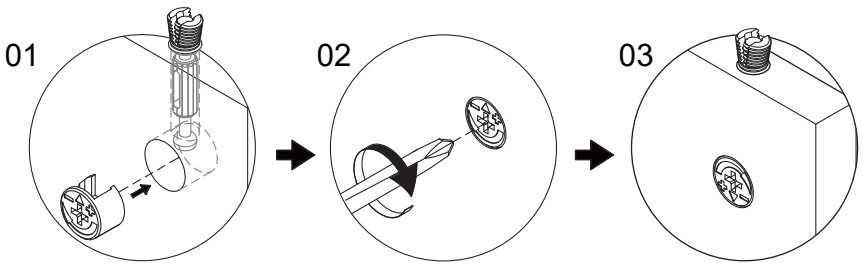
X2

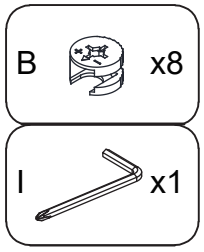
36

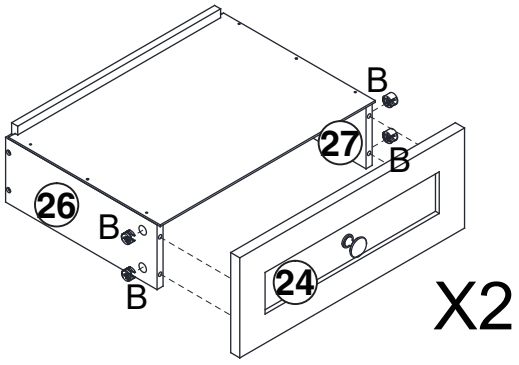

E
x8
I
x1

E
E
27
25
E
E
26
X2
28
25
E
E
26
I
28
28
X2

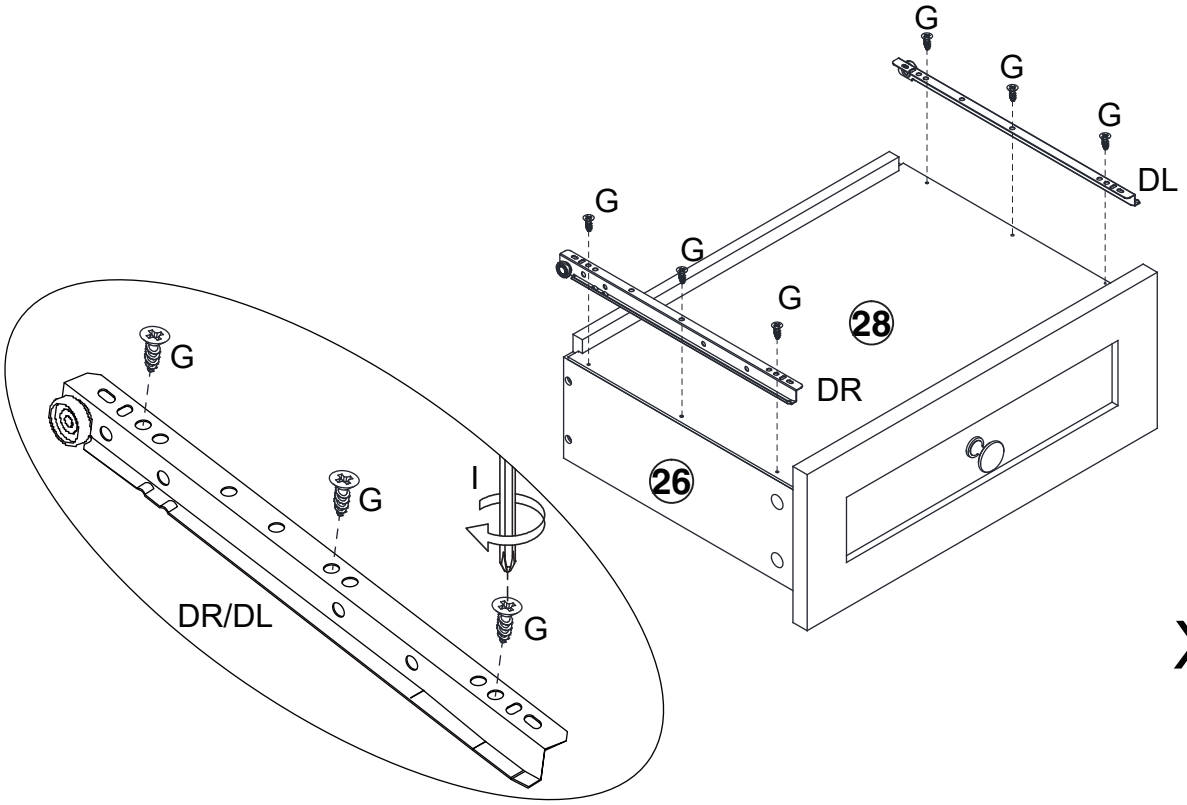
37

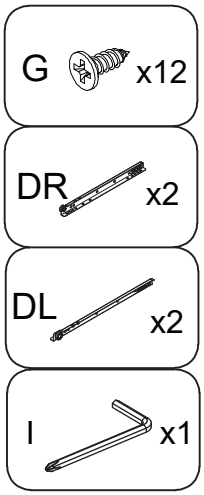

01
02
03


B
x8
I
x1


B
27
B
26
B
B
24
X2

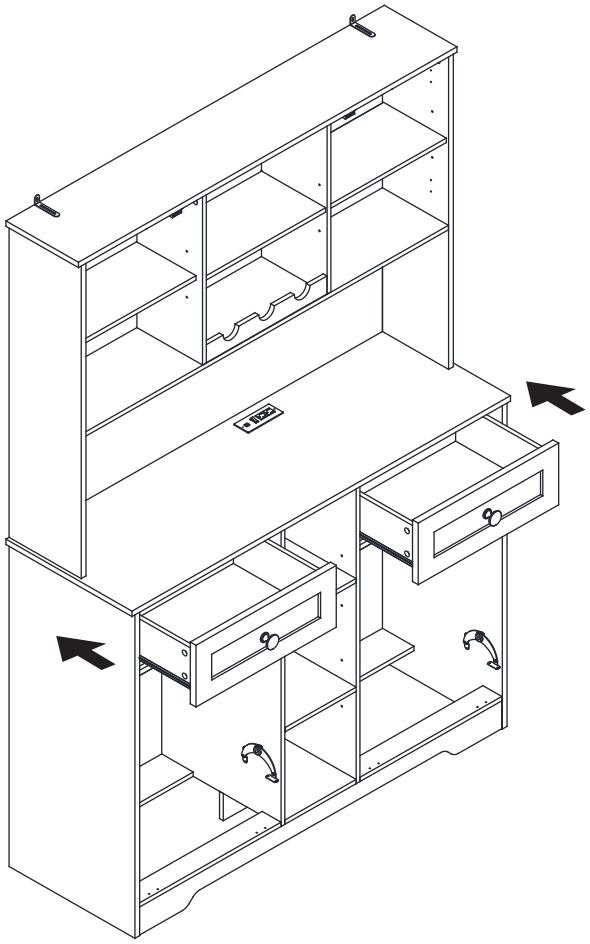
38



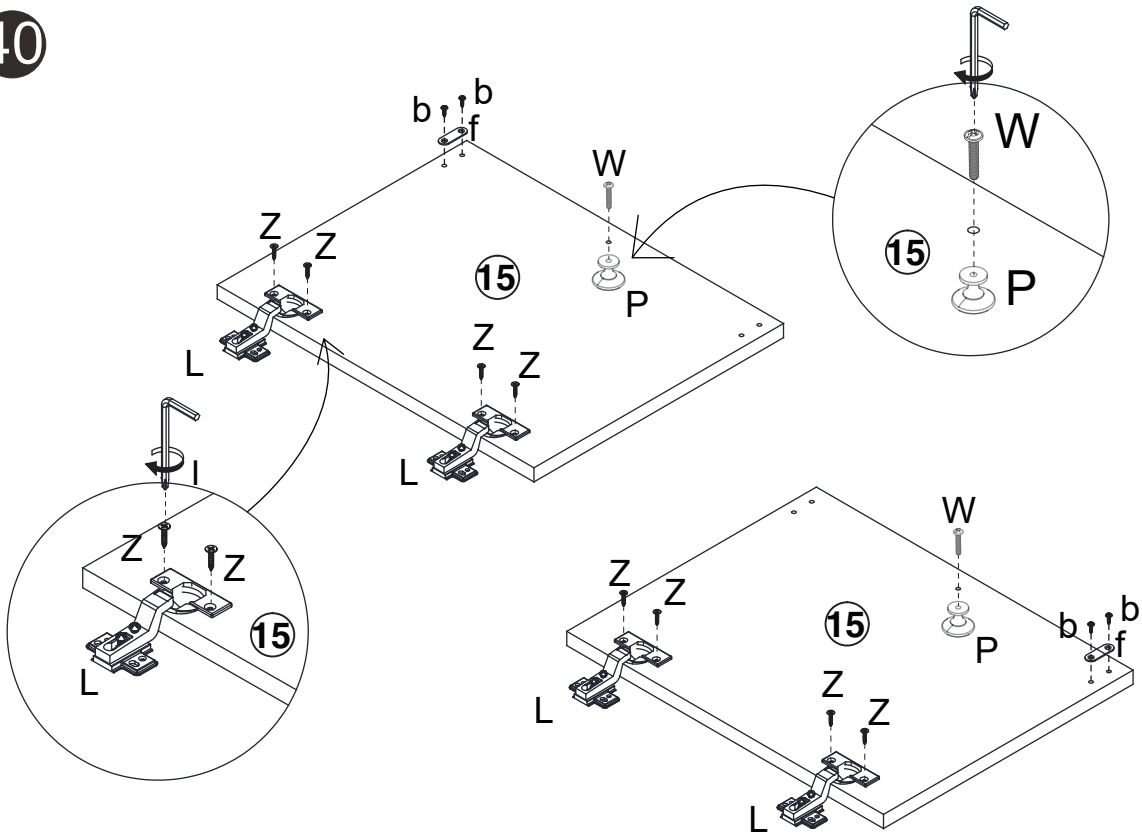


X2

39



40



Z x8

L x4

P x2

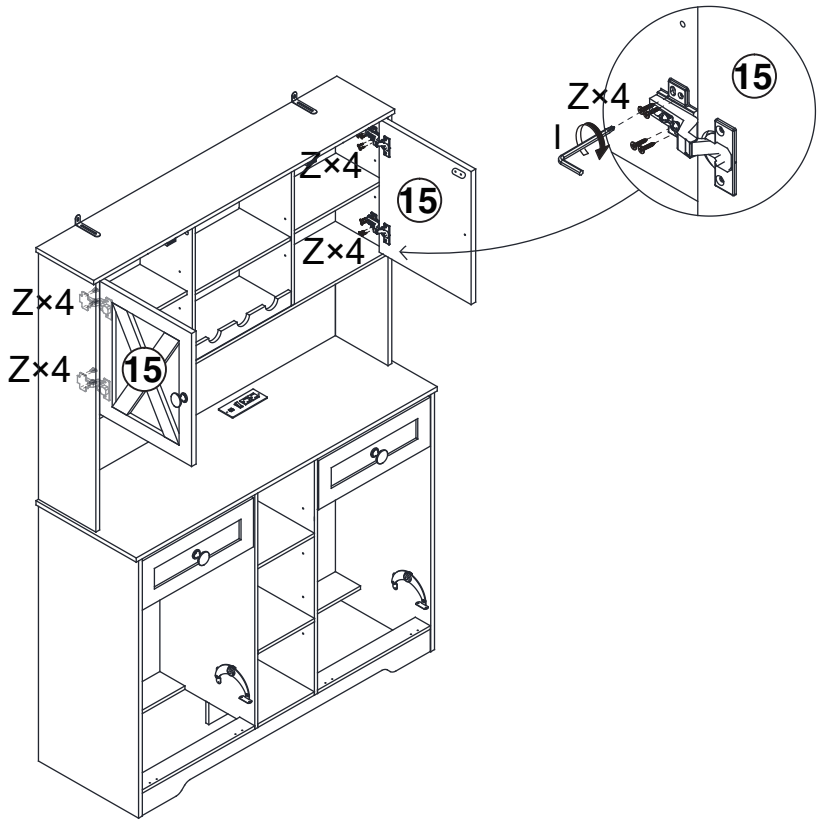
W x2

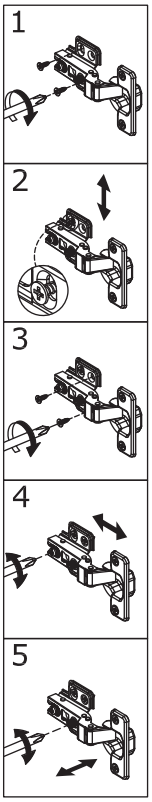
I x1

f x2

b x4

41

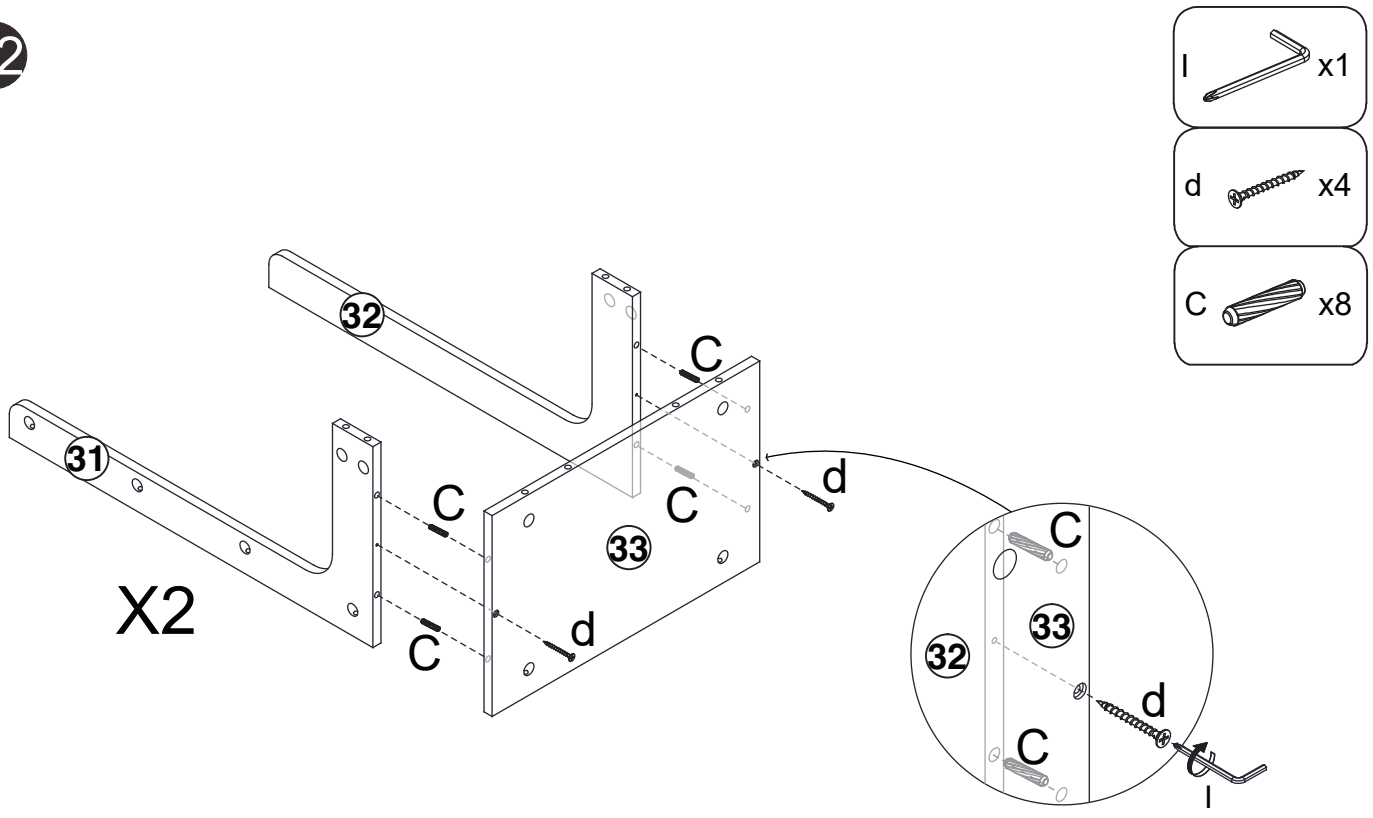




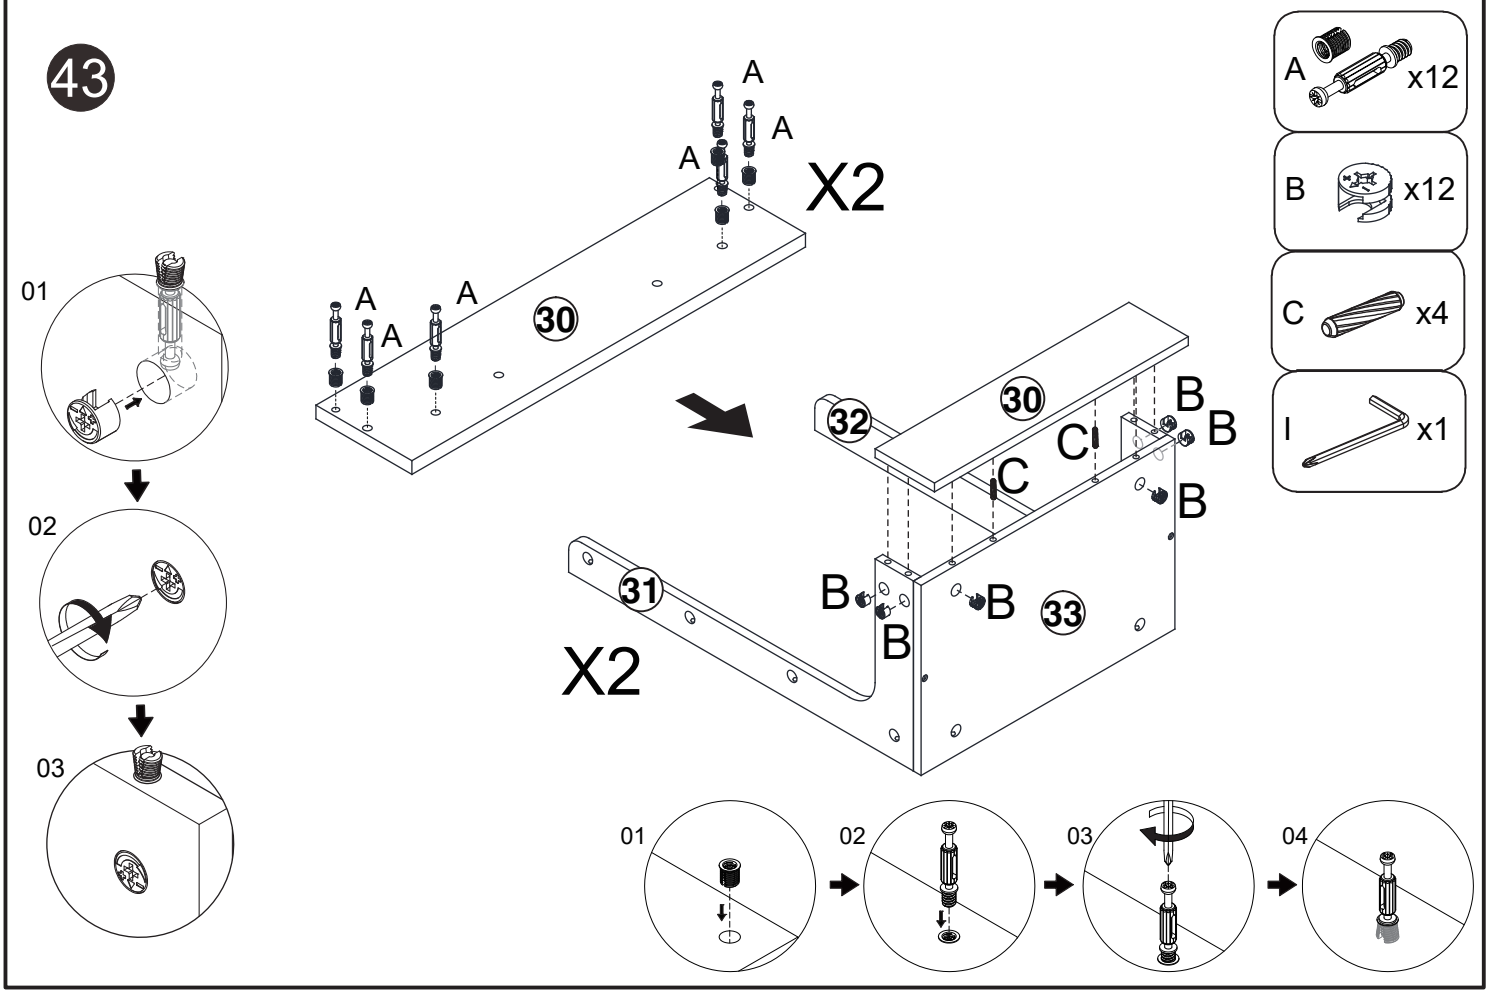
Z x16

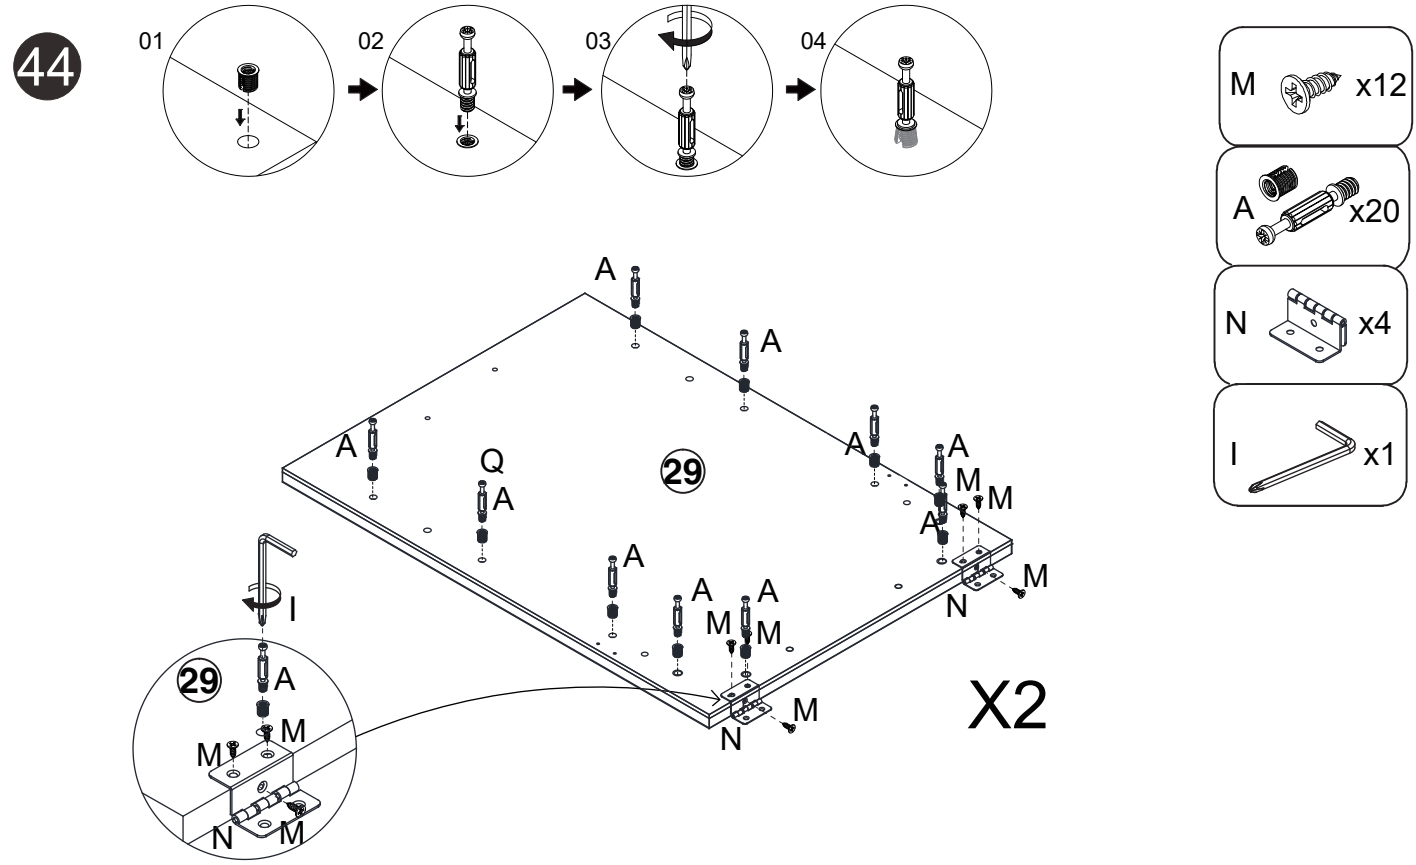
I x1

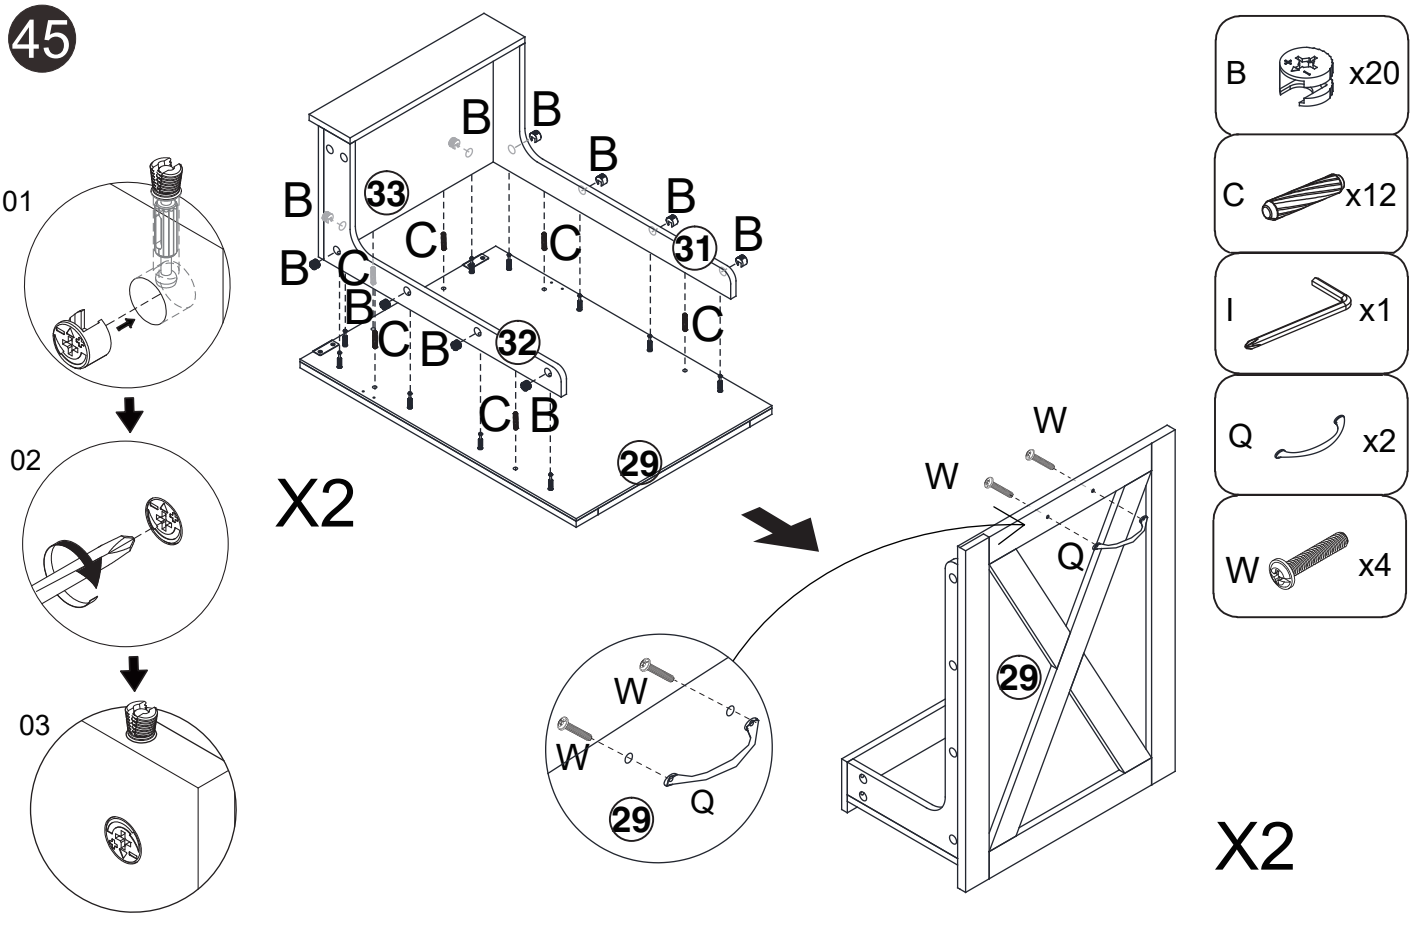
42


I x1
d x4
C x8
32
31
33
C
d
X2

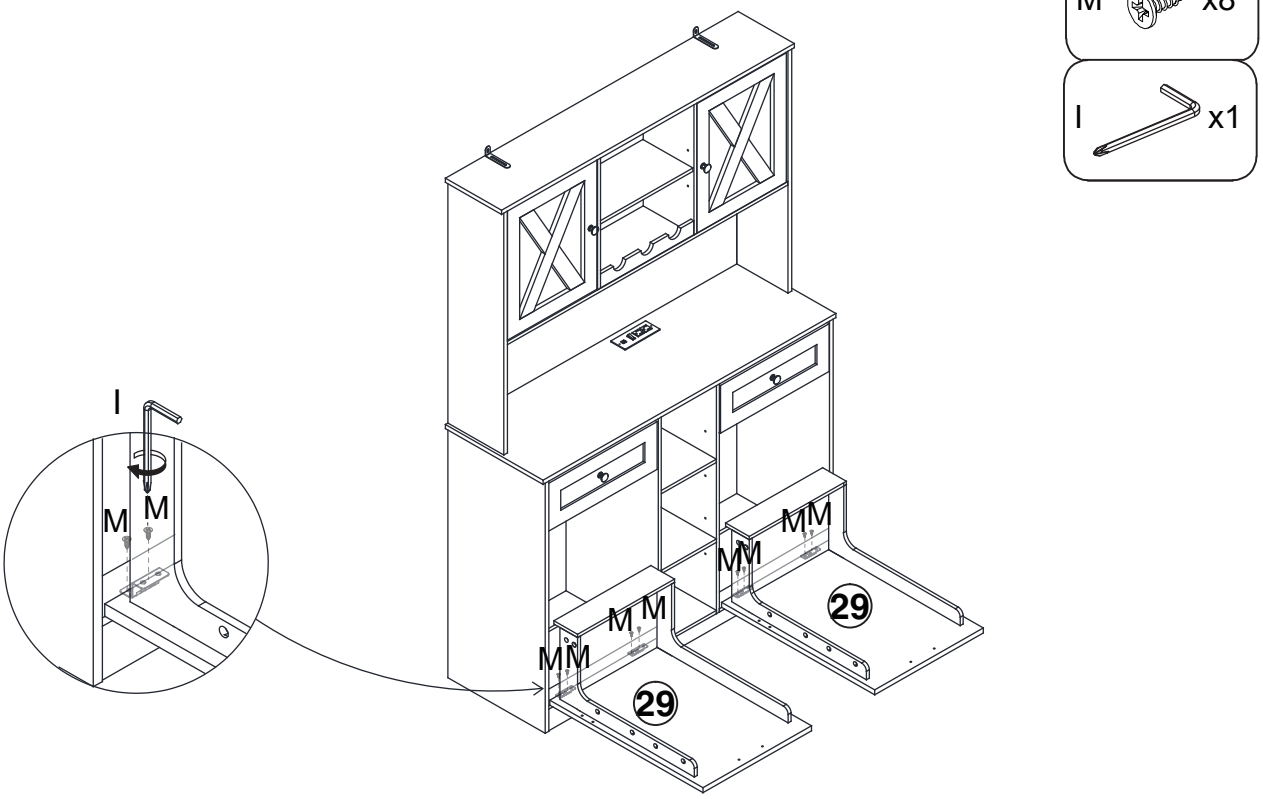
43


A x12
B x12
C x4
I x1
A
X2
30
32
31
33
B
C
01
02
03
04

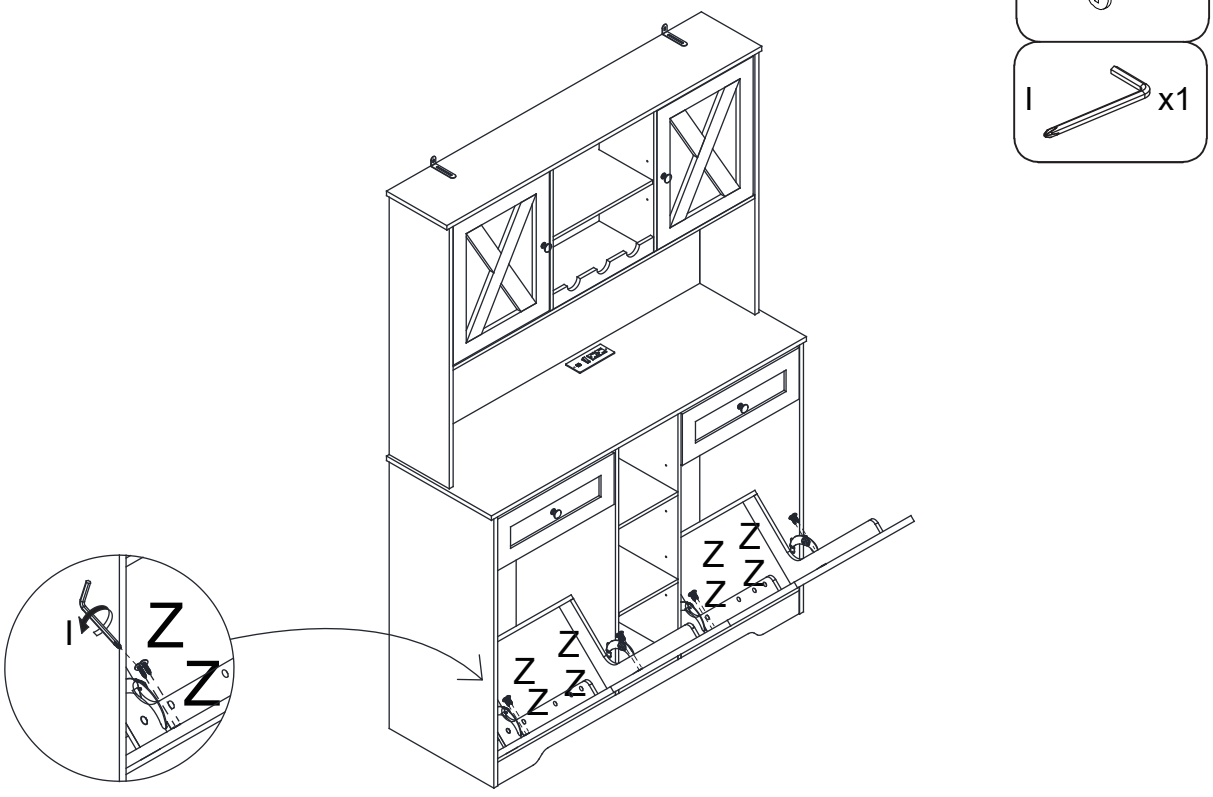

44
01
02
03
04
M x12
A x20
N x4
I x1
A
Q
29
I
M
N
X2


45
01
02
03
B x20
C x12
I x1
Q x2
W x4
B
33
C
31
32
29
X2
W
Q

46

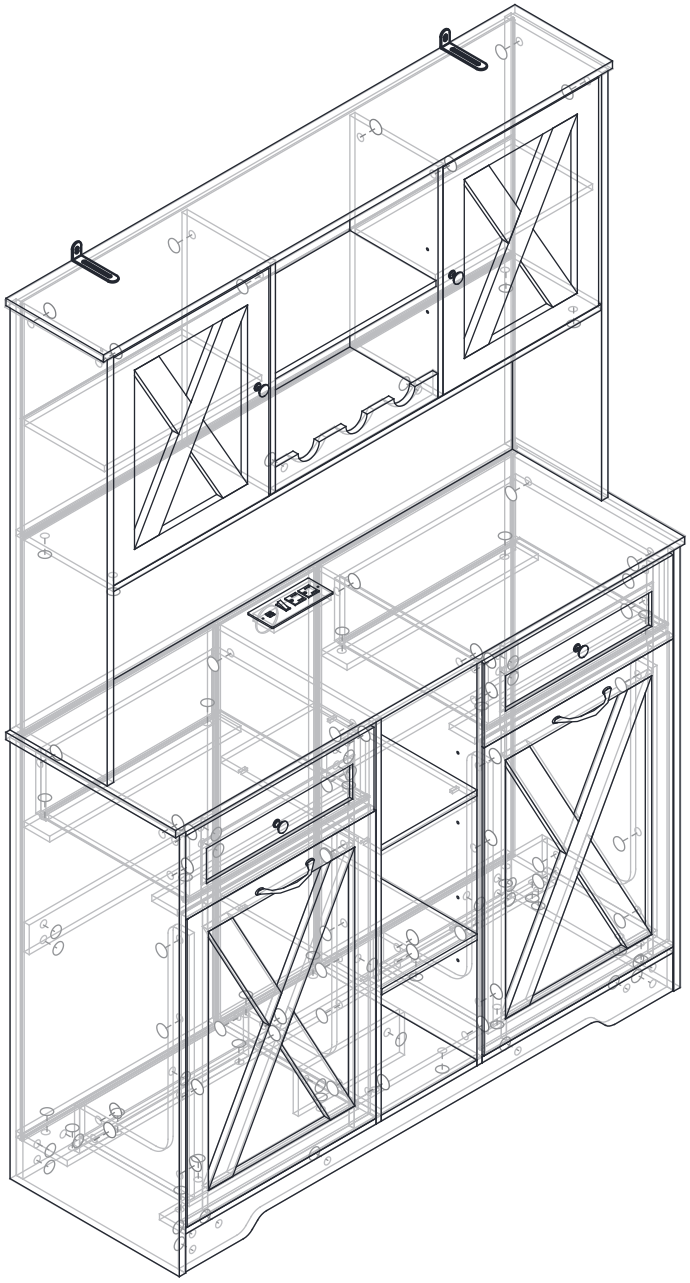


47



48

K x110



K×110