








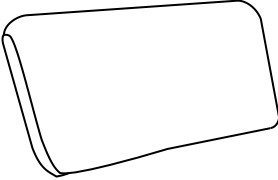
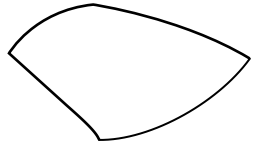
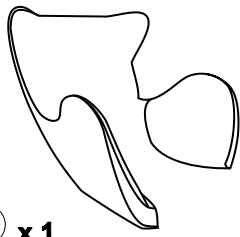


# Assembly instruction

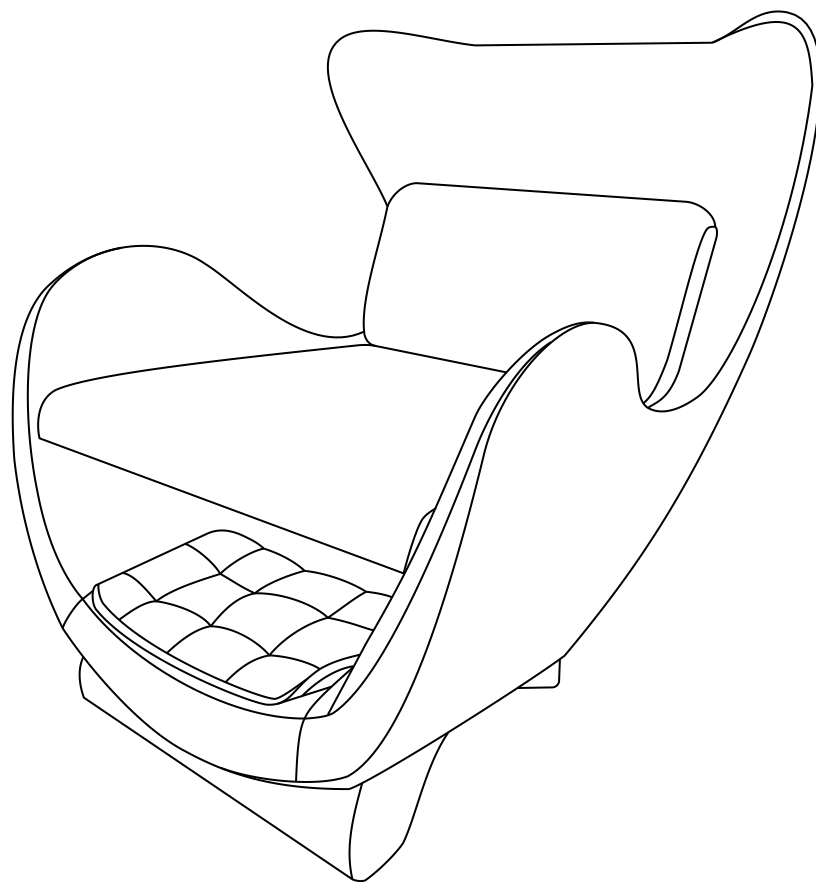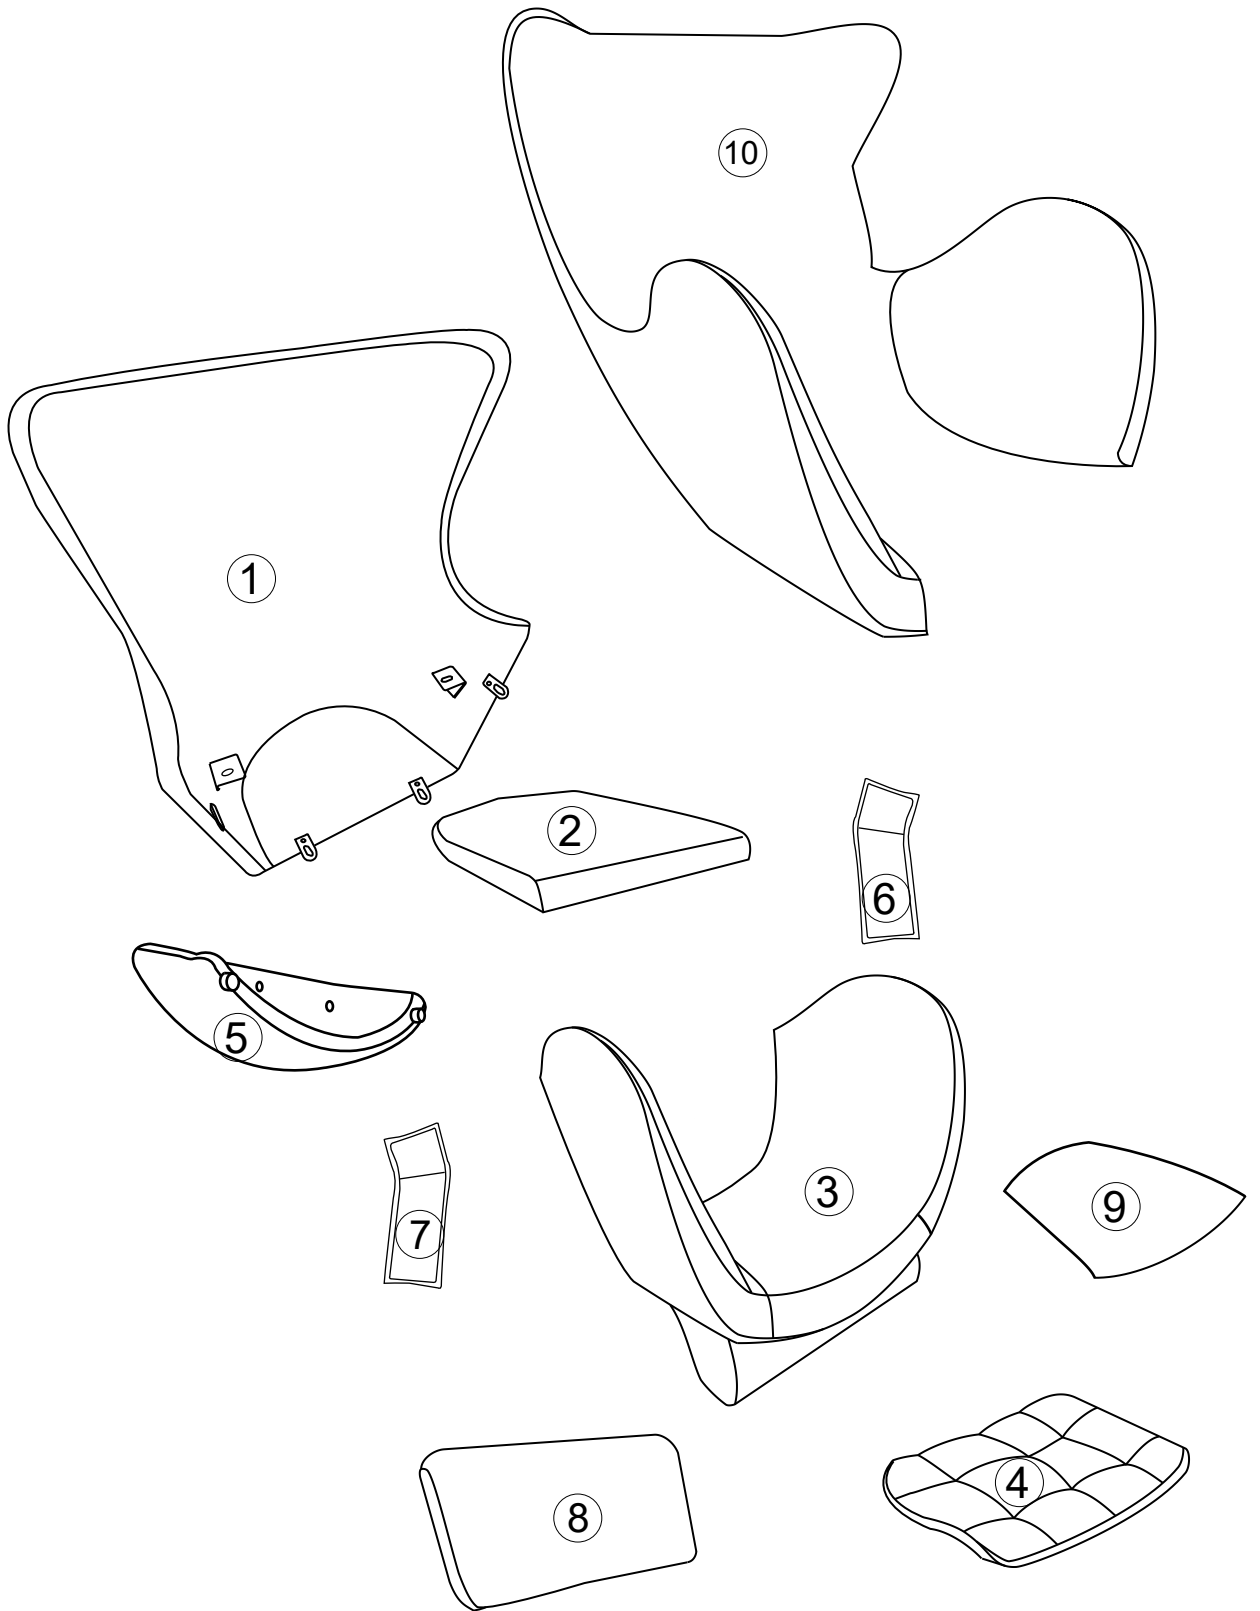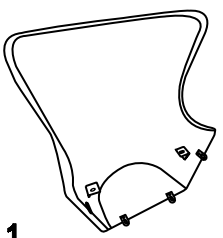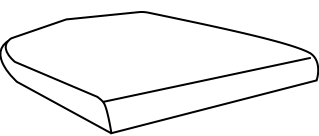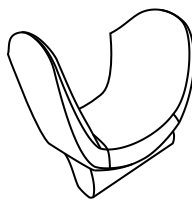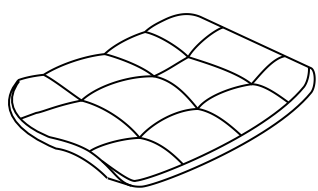



# Parts List

 <p>① x1</p>	 <p>② x1</p>	 <p>③ x1</p>	 <p>④ x1</p>
 <p>⑤ x1</p>	 <p>⑥ x1</p>	 <p>⑦ x1</p>	 <p>⑧ x1</p>
 <p>⑨ x1</p>	 <p>⑩ x1</p>		

# Hardware

**A x 4**



M 6\*16mm

**B x 2**




M 6\*20mm

**C x 6**



**E x 4**



**F x 1**



**G x 4**



M8\*40mm

**H x 4**




**STEP1**

**A x 4**



**F x 1**

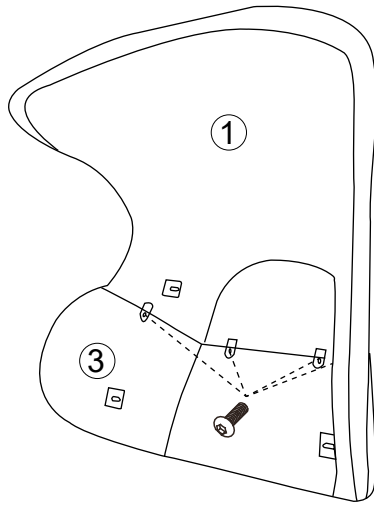

**STEP2**



**B x 2**



**C x 2**





**F x 1**

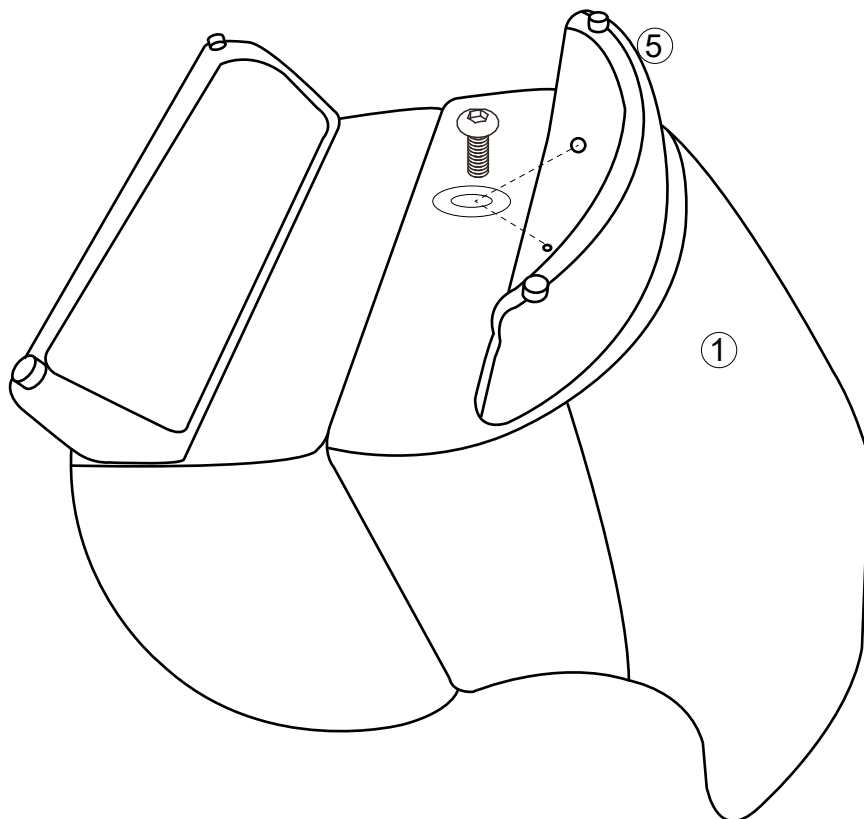

# STEP3

G x 4

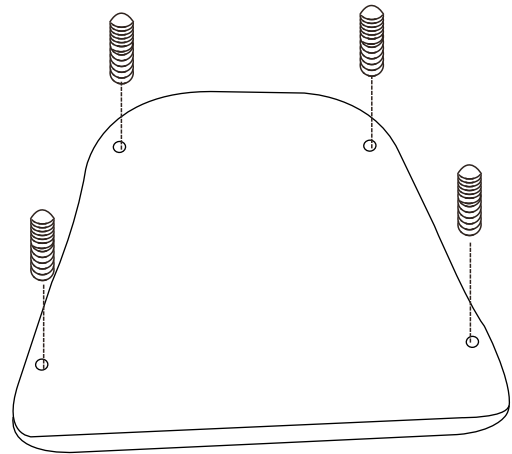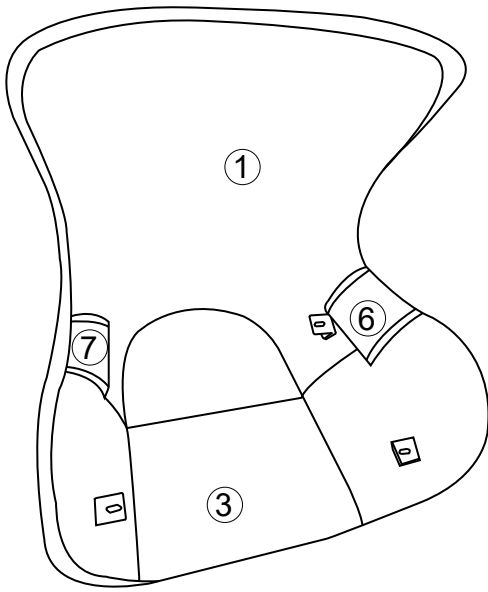

Do not lock the double headed screw too deeply, it should be installed 15-18 mm around the middle position.

# STEP4


E x 4




H x 4



C x 4

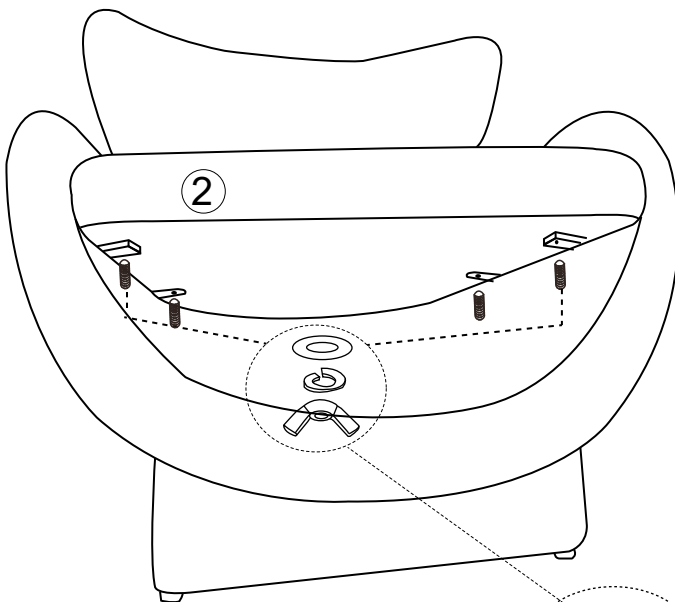


50% first

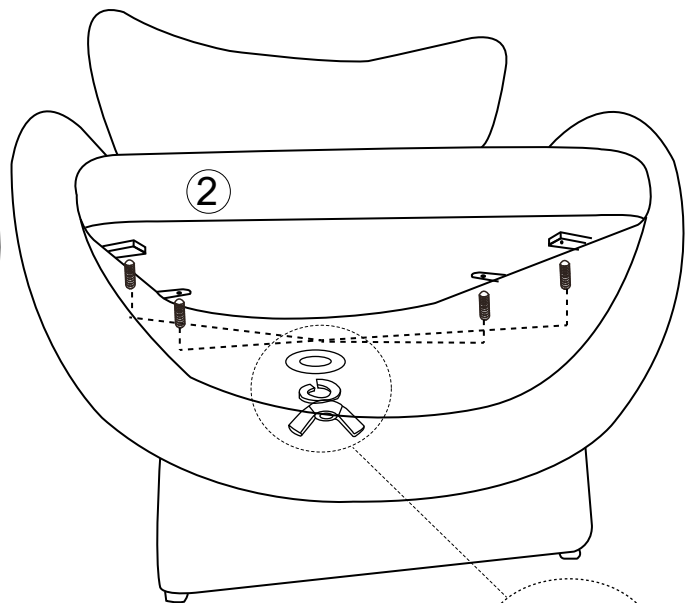

100% finally!

# STEP 5

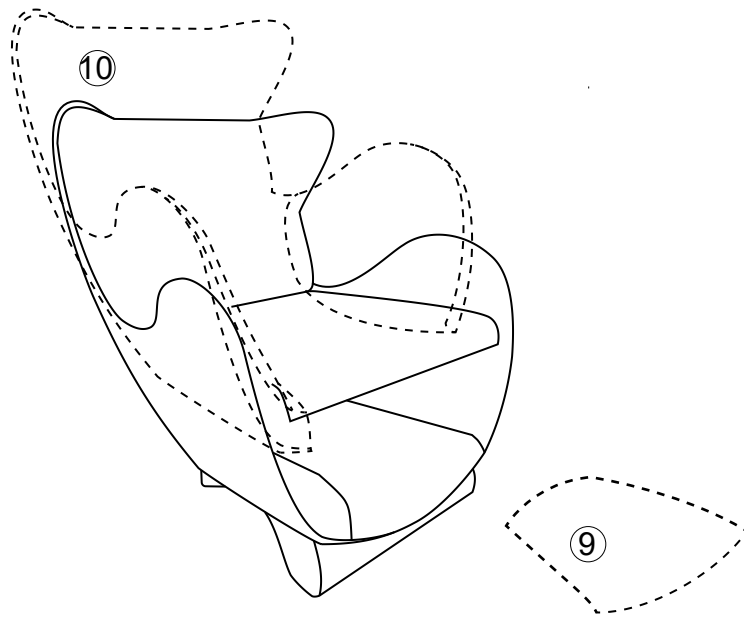

# STEP 6

