



ASSEMBLY INSTRUCTION




① x12
Bolt M6x15





② x12
Washer M6



③ x1

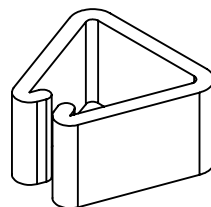


④ x2

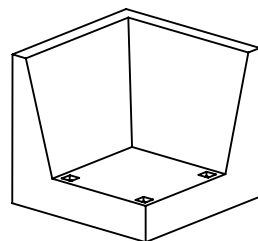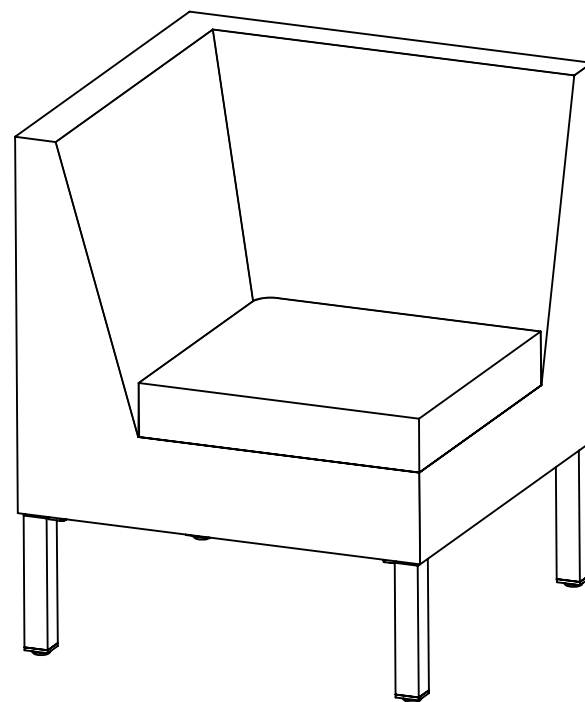

Ⓐ x1




Ⓑ x4

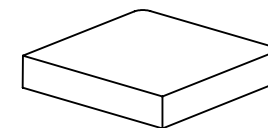


Ⓒ x1

ASSEMBLY INSTRUCTION

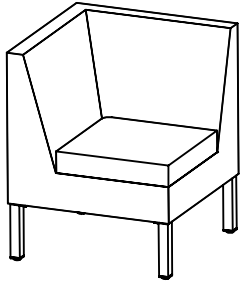


X1

Step 1

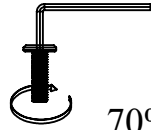



70%

Step 2


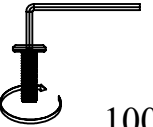


100%


X4

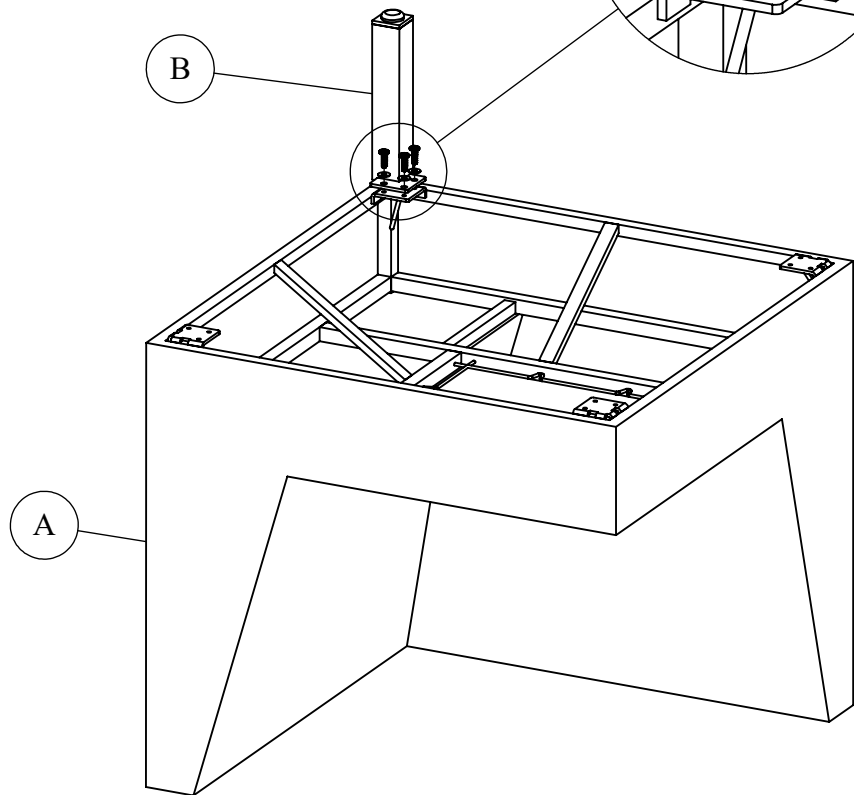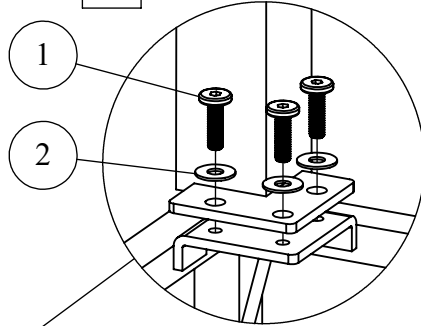

X4

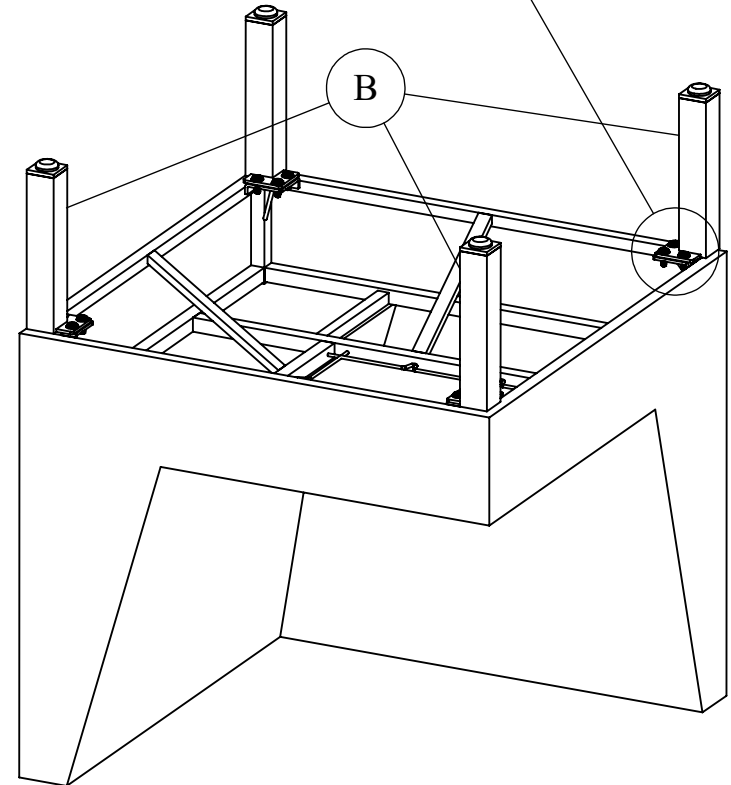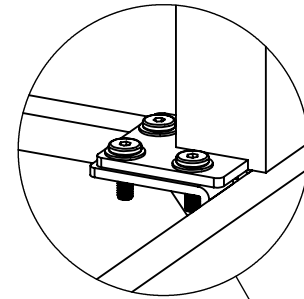

ASSEMBLY INSTRUCTION

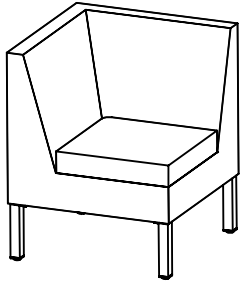

X1

Step 3

Step 4

