



INSTRUCTIONS FOR TWIN/FULL PREMIUM BED RAILS

1. Open cross rails as far as possible.

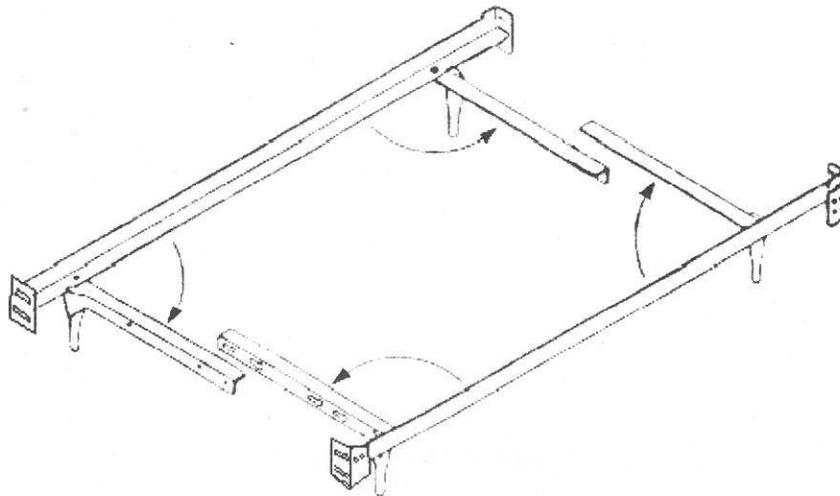

2. Insert the shoulder rivets into the keyhole slots for either the twin or full setting and pull apart to hold in place.

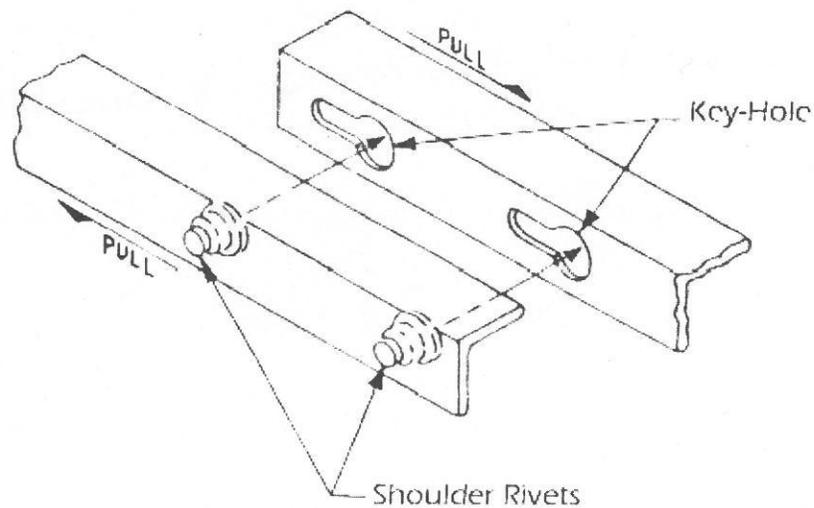

3. Put the brass sleeve over the top of each plastic glide and then push glides onto the legs.

