








# Assembly instruction

- S1**  3.5\*30mm 14pcs  
**S2**  3.5\*25 mm 8pcs  
**S3**  3\*10mm 12pcs  
**S4**  2.5\*10mm 20pcs  
**S5**  2pcs  
**S6**  2pcs  
**S7 spare screw** 3\*14mm 10pcs





**A 1pc**


- 1** **S2\*8pcs**  
**B\*2pcs/G\*4pcs**

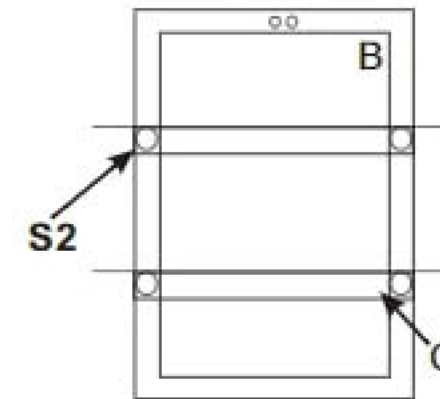

- 2** **S1\*6pcs**  
**A\*1pc/B\*2pcs**

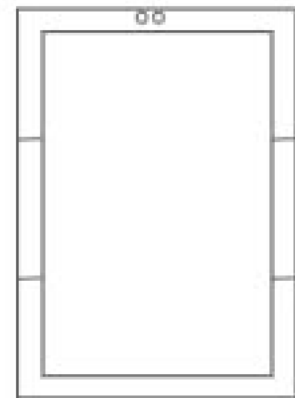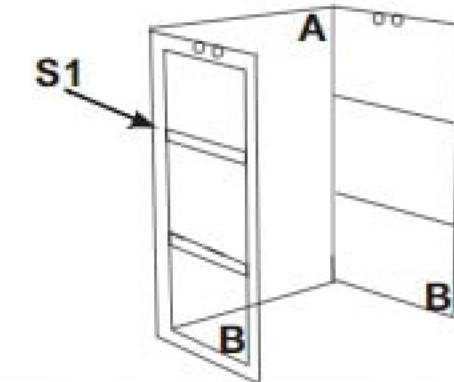


**B 2pcs**

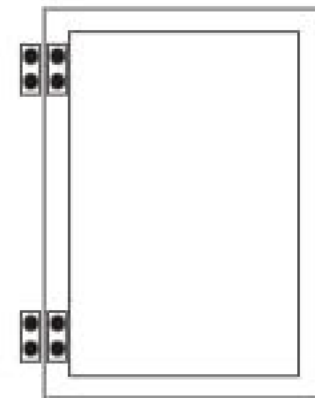


**C 2pcs**


- 3** **S1\*8pcs**  
**F\*2pcs**

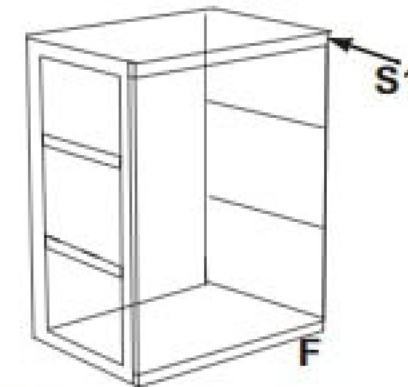

- 4** **S3\*12pcs**  
**D\*1pc/C\*2pcs**


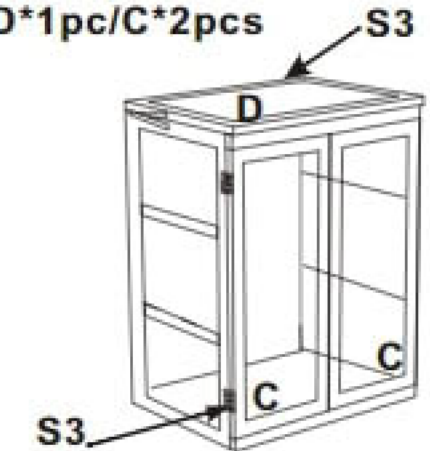


**D 1pc**

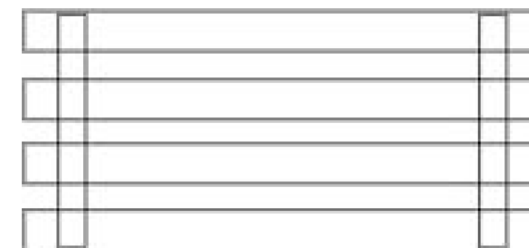

**E 2pcs**

- 5** **S4\*20pcs**  
**S5\*2pcs**

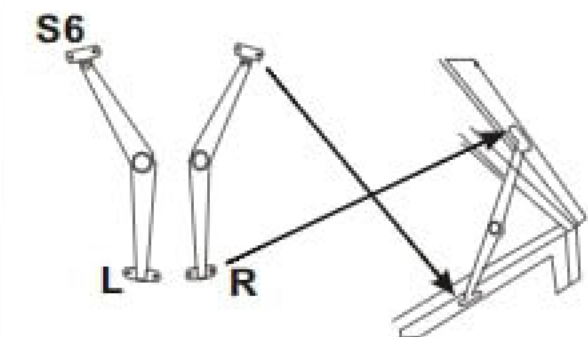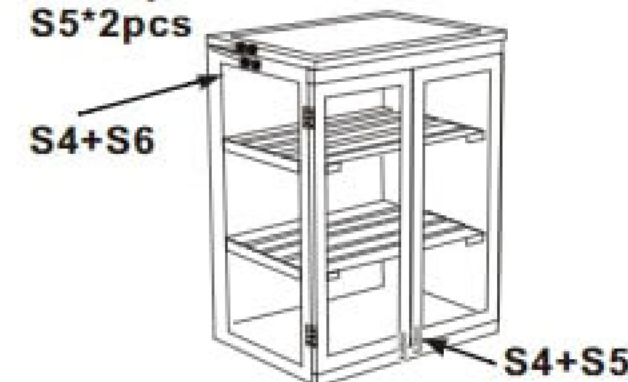

**F 2pcs**




**G 4pcs**

## SOFTLY REMIND

Make sure screws are accurately inserted. Avoid the points of nails sticking into the warm room; they could cause injury.

## SOFTLY REMIND

Frame sections may be broken when in transport, if you happen to meet this problem do two steps as follow:  
 1. repair: using "S6" to reassemble the damaged parts.  
 2. assembly: reference the manual step by step.

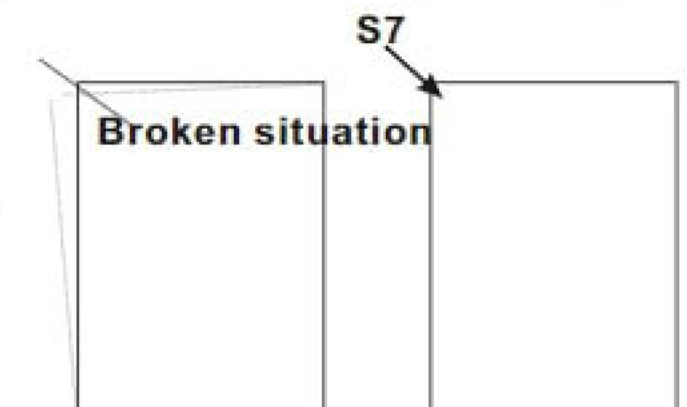

thank you