



ASSEMBLY INSTRUCTIONS

Computer Desk


Installation Option I

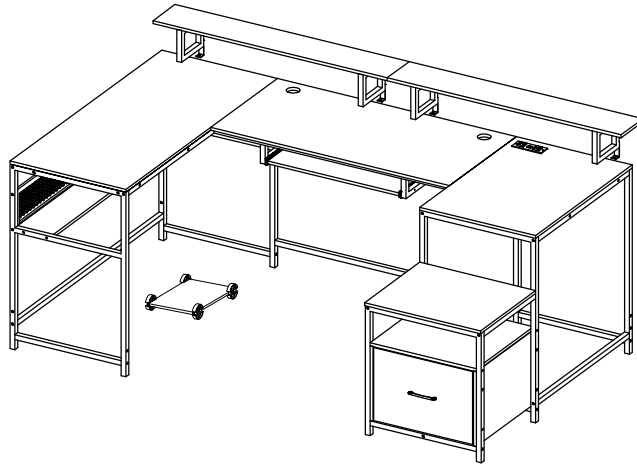


Installation Option II

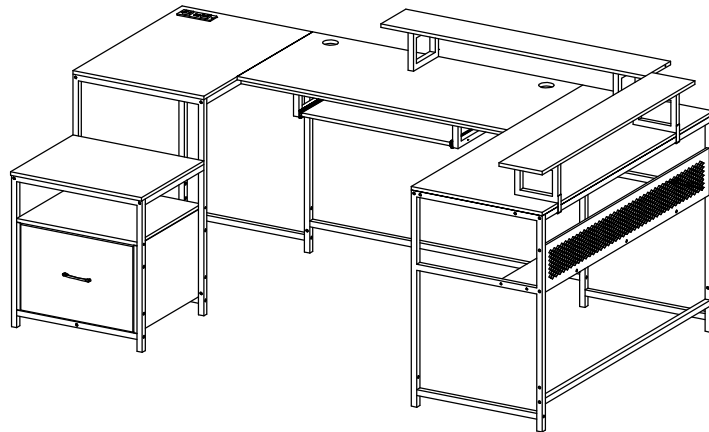

Installation Option III

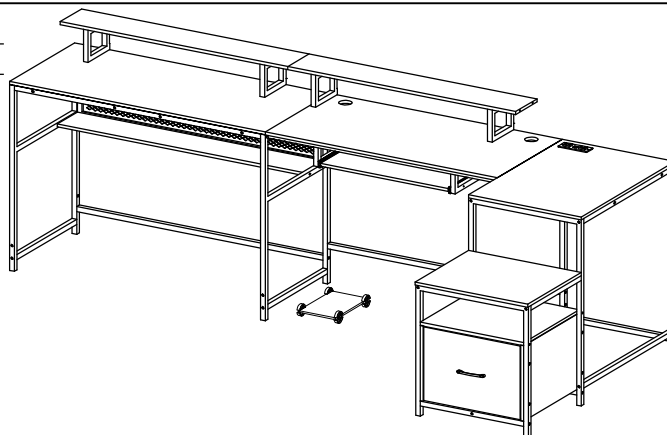



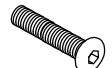


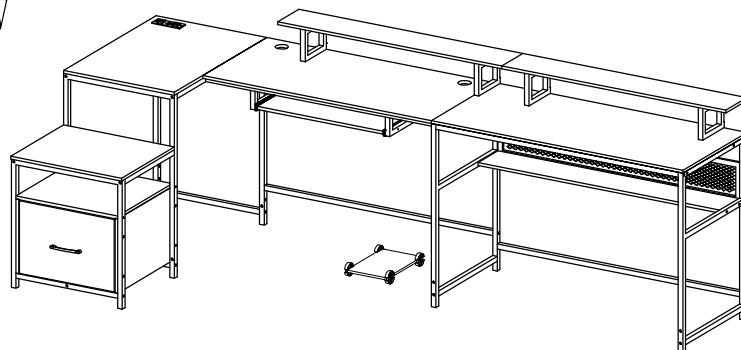






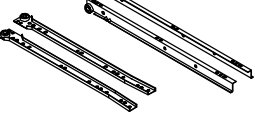


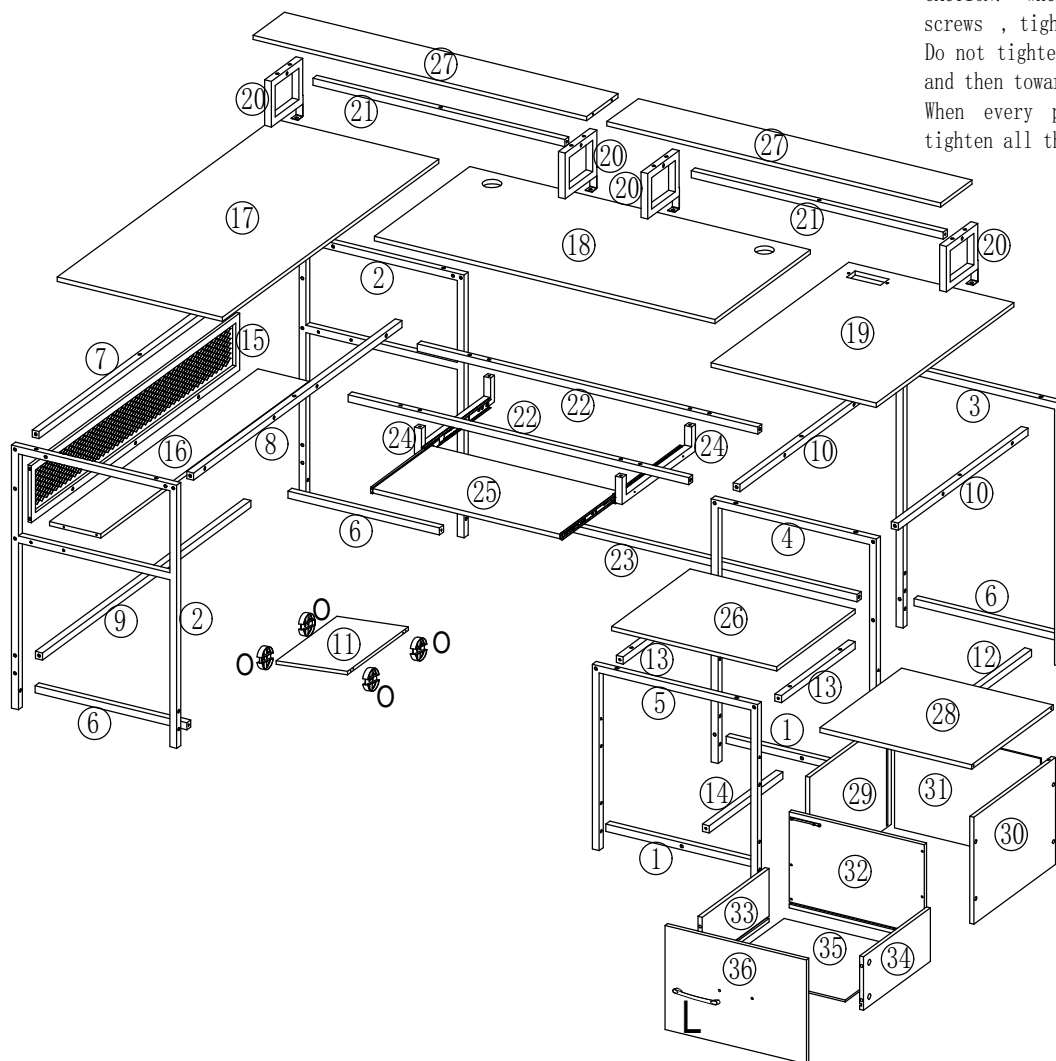


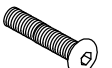



Installation Option IV

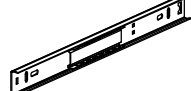







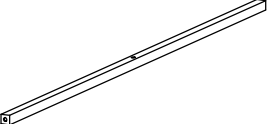
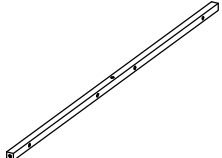
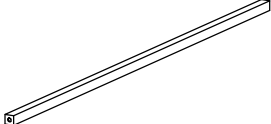
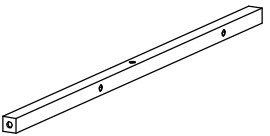
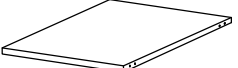
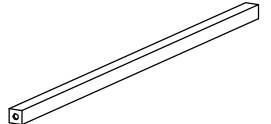
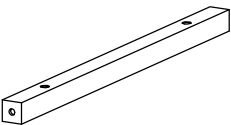
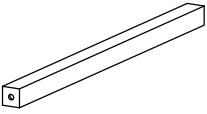
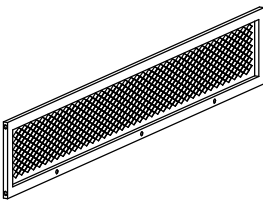
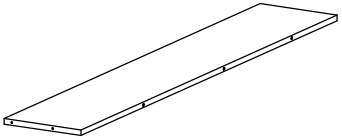
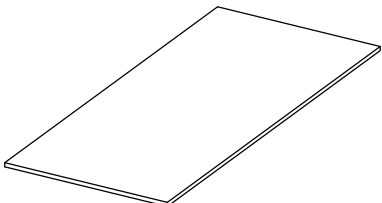
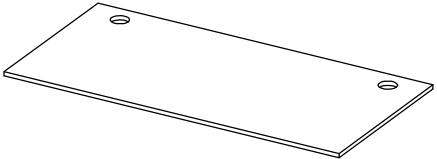
ASSEMBLY INSTRUCTIONS

GAUTION: When Tightening the screws , tighten sequentially. Do not tighten any screws fully and then towards the next one. When every part is OK, then tighten all the screws.

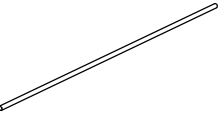
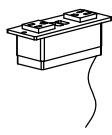


















A	x15+1	B	x46+2	C	x10	D	x2	E	x40+2
									
M5x38mm		M6x35mm						M6x28mm	
F	x2	G	x24+1	H	x2	I	x2	J	x4
									
6X30mm		ST3.5x12mm							
K	x4	R	x2	S	x4	T	x1	L	x1
									
		350MM		ST3.5x12mm		M3 M4		L1	L2
M	x2	N	x1	O	x4	P	x4	Q	x4
									
								M6X30mm	

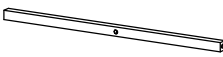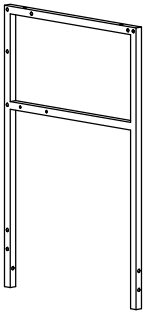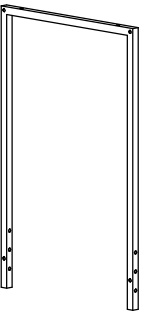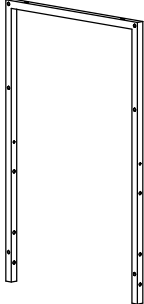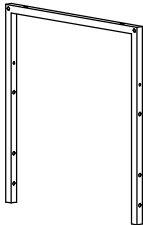ASSEMBLY INSTRUCTIONS


<p>①</p>  <p>X2</p>	<p>②</p>  <p>X2</p>	<p>③</p>  <p>X1</p>
<p>④</p>  <p>X1</p>	<p>⑤</p>  <p>X1</p>	<p>⑥</p>  <p>X3</p>
<p>⑦</p>  <p>X1</p>	<p>⑧</p>  <p>X1</p>	<p>⑨</p>  <p>X1</p>
<p>⑩</p>  <p>X2</p>	<p>⑪</p>  <p>X1</p>	<p>⑫</p>  <p>X1</p>
<p>⑬</p>  <p>X2</p>	<p>⑭</p>  <p>X1</p>	<p>⑮</p>  <p>X1</p>
<p>⑯</p>  <p>X1</p>	<p>⑰</p>  <p>X1</p>	<p>⑱</p>  <p>X1</p>

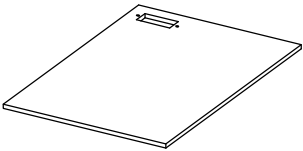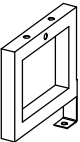ASSEMBLY INSTRUCTIONS

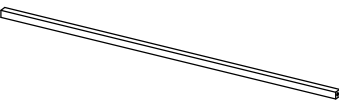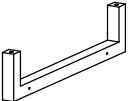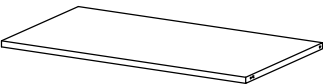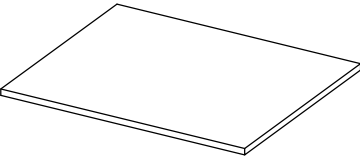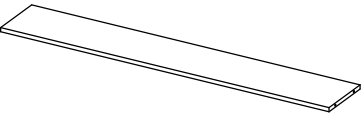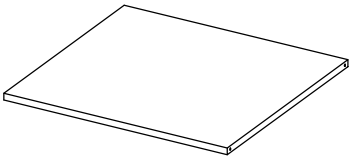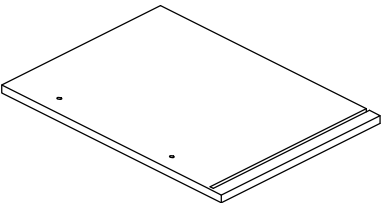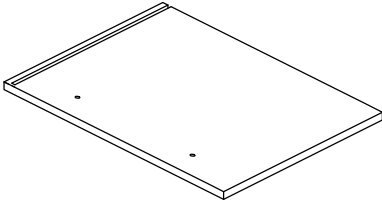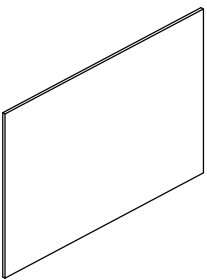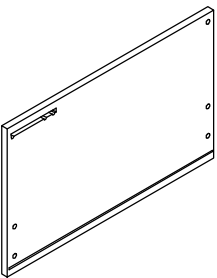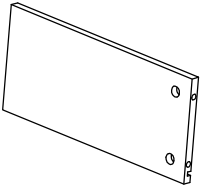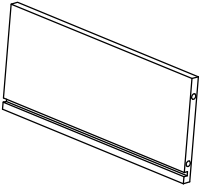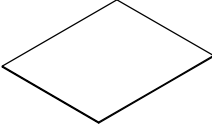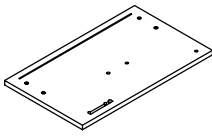
<div>19</div> <div></div> <div>X1</div>	<div>20</div> <div></div> <div>X4</div>	<div>21</div> <div></div> <div>X2</div>
<div>22</div> <div></div> <div>X2</div>	<div>23</div> <div></div> <div>X1</div>	<div>24</div> <div></div> <div>X2</div>
<div>25</div> <div></div> <div>X1</div>	<div>26</div> <div></div> <div>X1</div>	<div>27</div> <div></div> <div>X2</div>
<div>28</div> <div></div> <div>X1</div>	<div>29</div> <div></div> <div>X1</div>	<div>30</div> <div></div> <div>X1</div>
<div>31</div> <div></div> <div>X1</div>	<div>32</div> <div></div> <div>X1</div>	<div>33</div> <div></div> <div>X1</div>
<div>34</div> <div></div> <div>X1</div>	<div>35</div> <div></div> <div>X1</div>	<div>36</div> <div></div> <div>X1</div>

ASSEMBLY INSTRUCTIONS


1. Matters needing attention

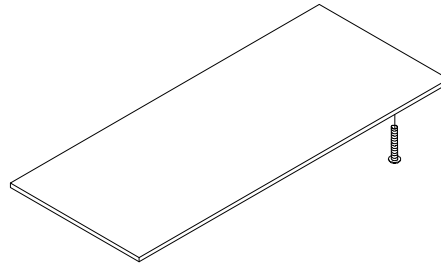

Be sure to use the proper screws to avoid damaging the parts

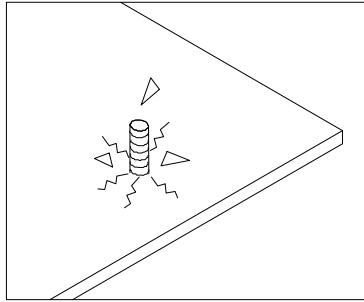


Wrong screws can cause the plank to crack


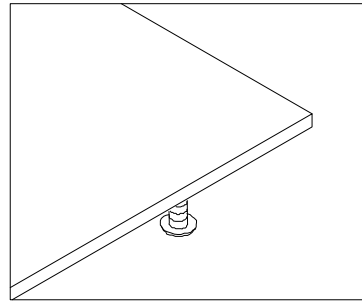


The right screw is the right size


2. Matters needing attention

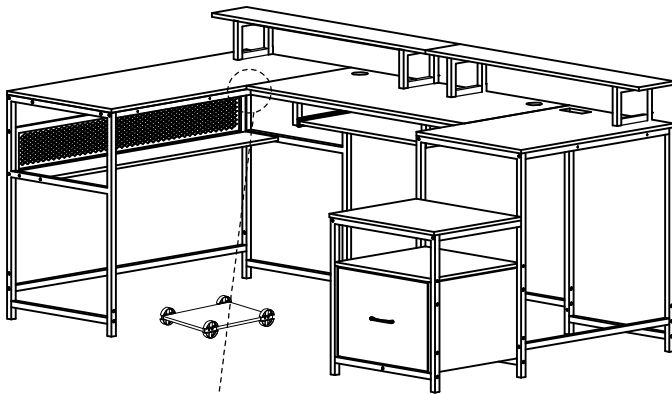

Perfect

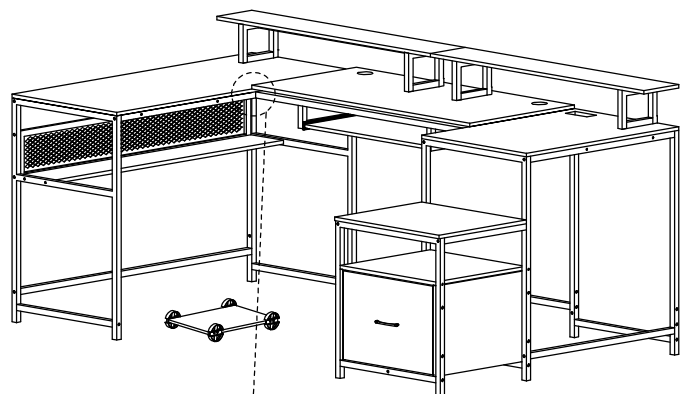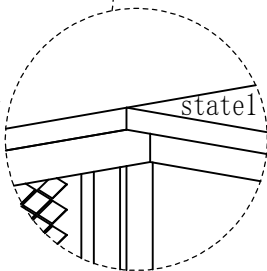


Flawed

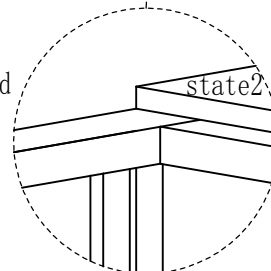


If you encounter "state 2" during the installation process,
Please loosen the corresponding screws of each part in time,
Adjust slowly, and then slowly tighten all the screws after adjustment is completed.

ASSEMBLY INSTRUCTIONS

STEP 1

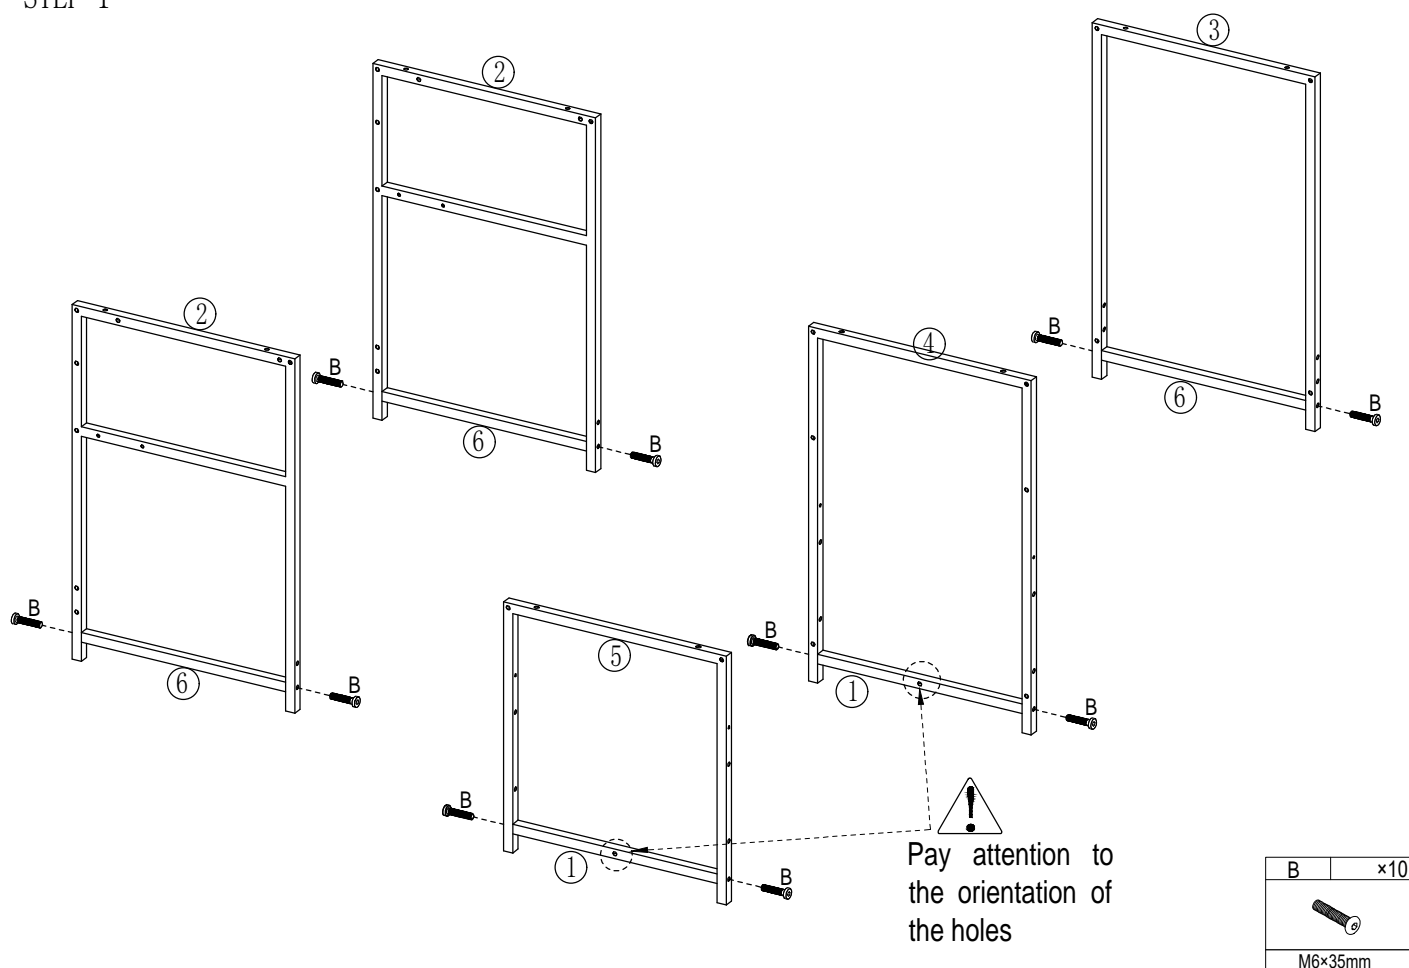


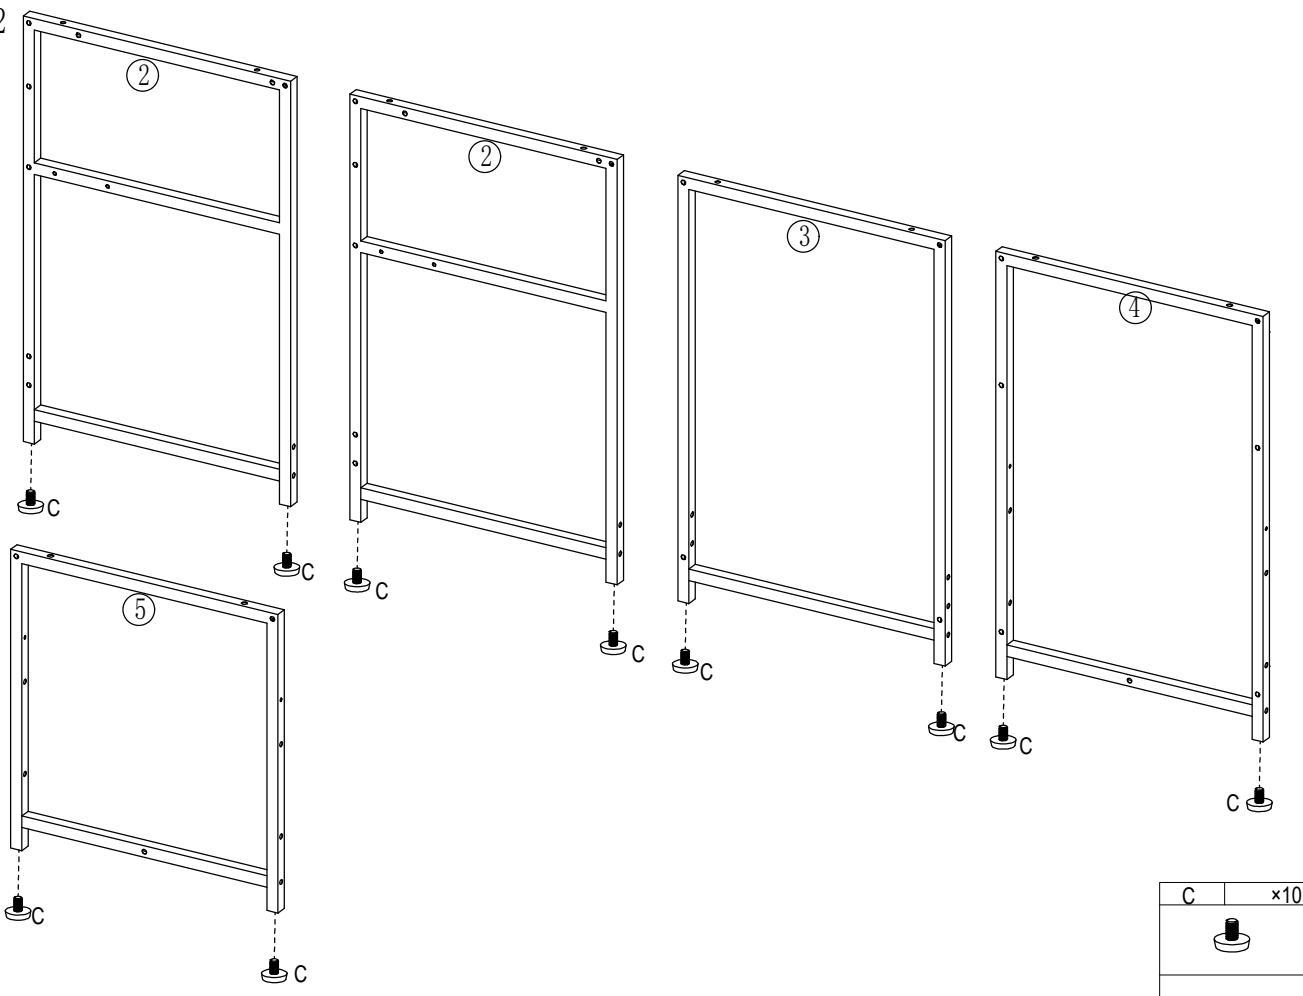

STEP 2




ASSEMBLY INSTRUCTIONS

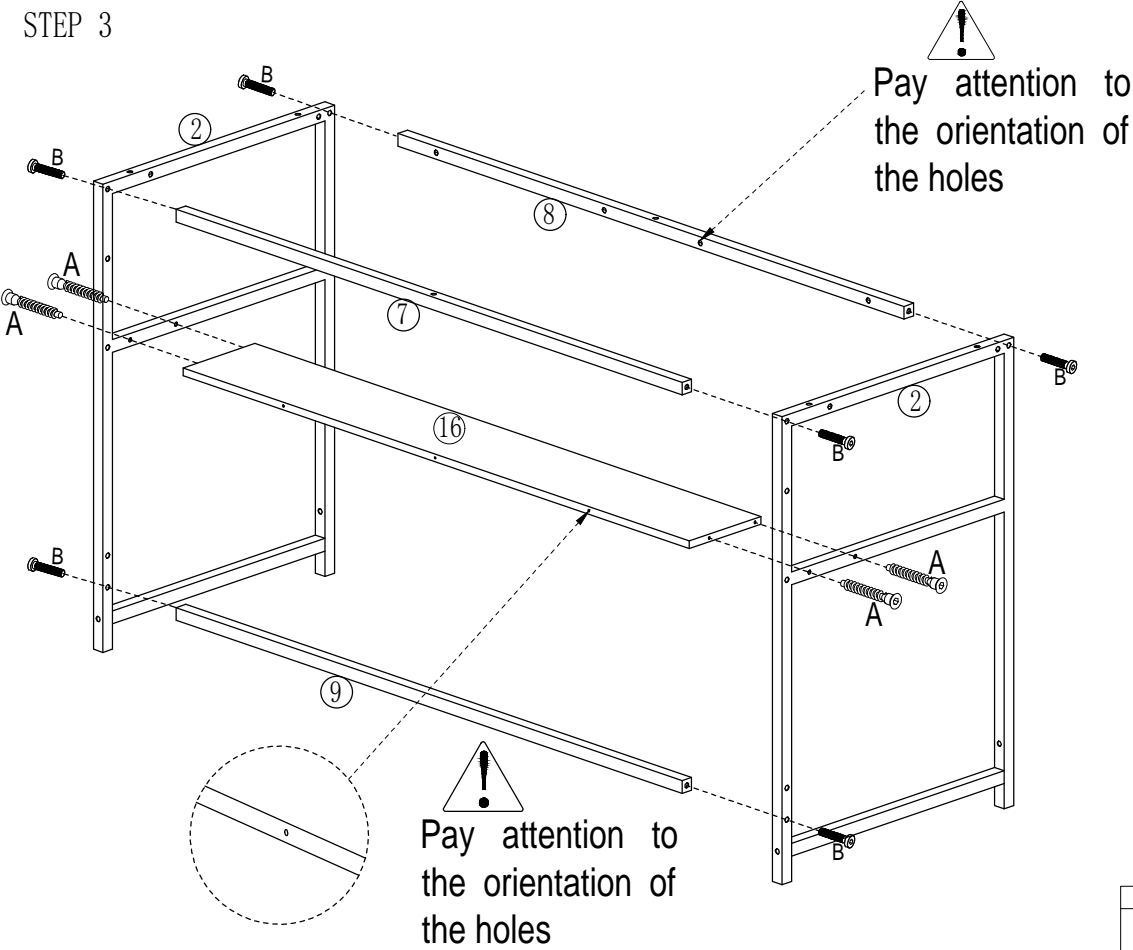

STEP 3



A	x4	B	x6
			
M5x40mm		M6x35mm	

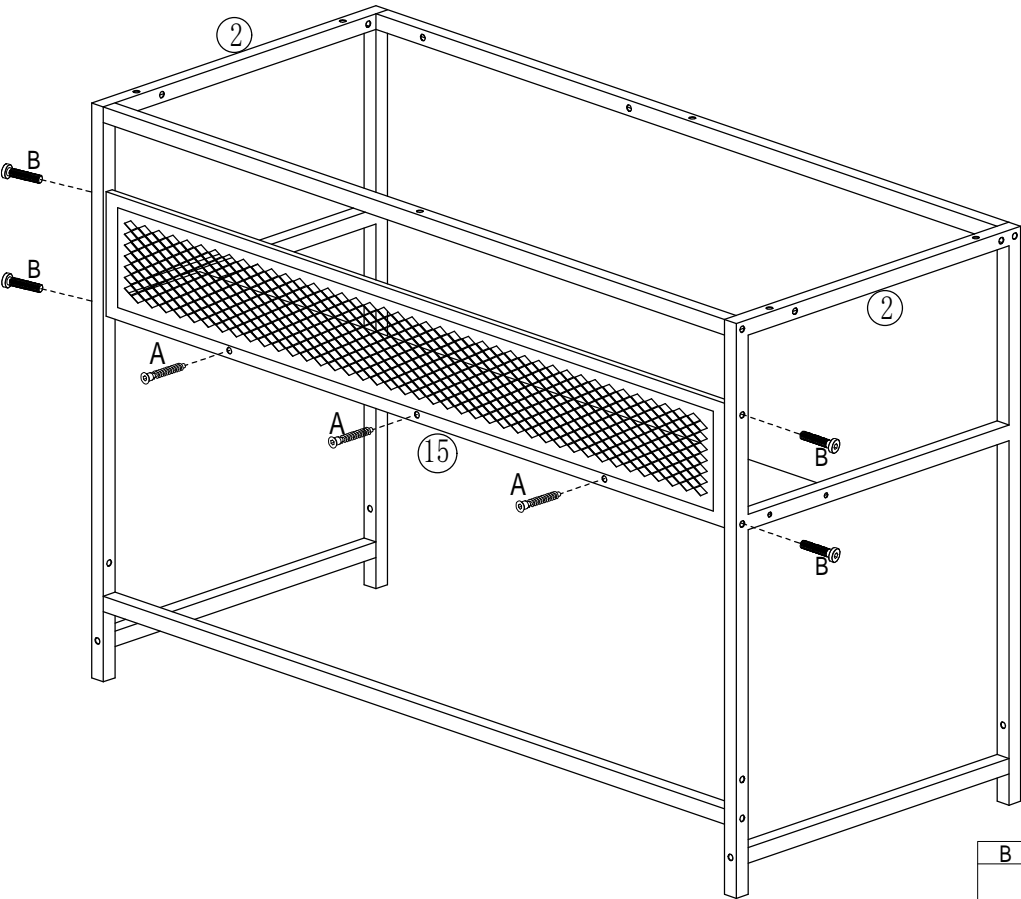
STEP 4




B	x4	A	x3
			
M6x35mm		M5x38mm	

ASSEMBLY INSTRUCTIONS

STEP 5

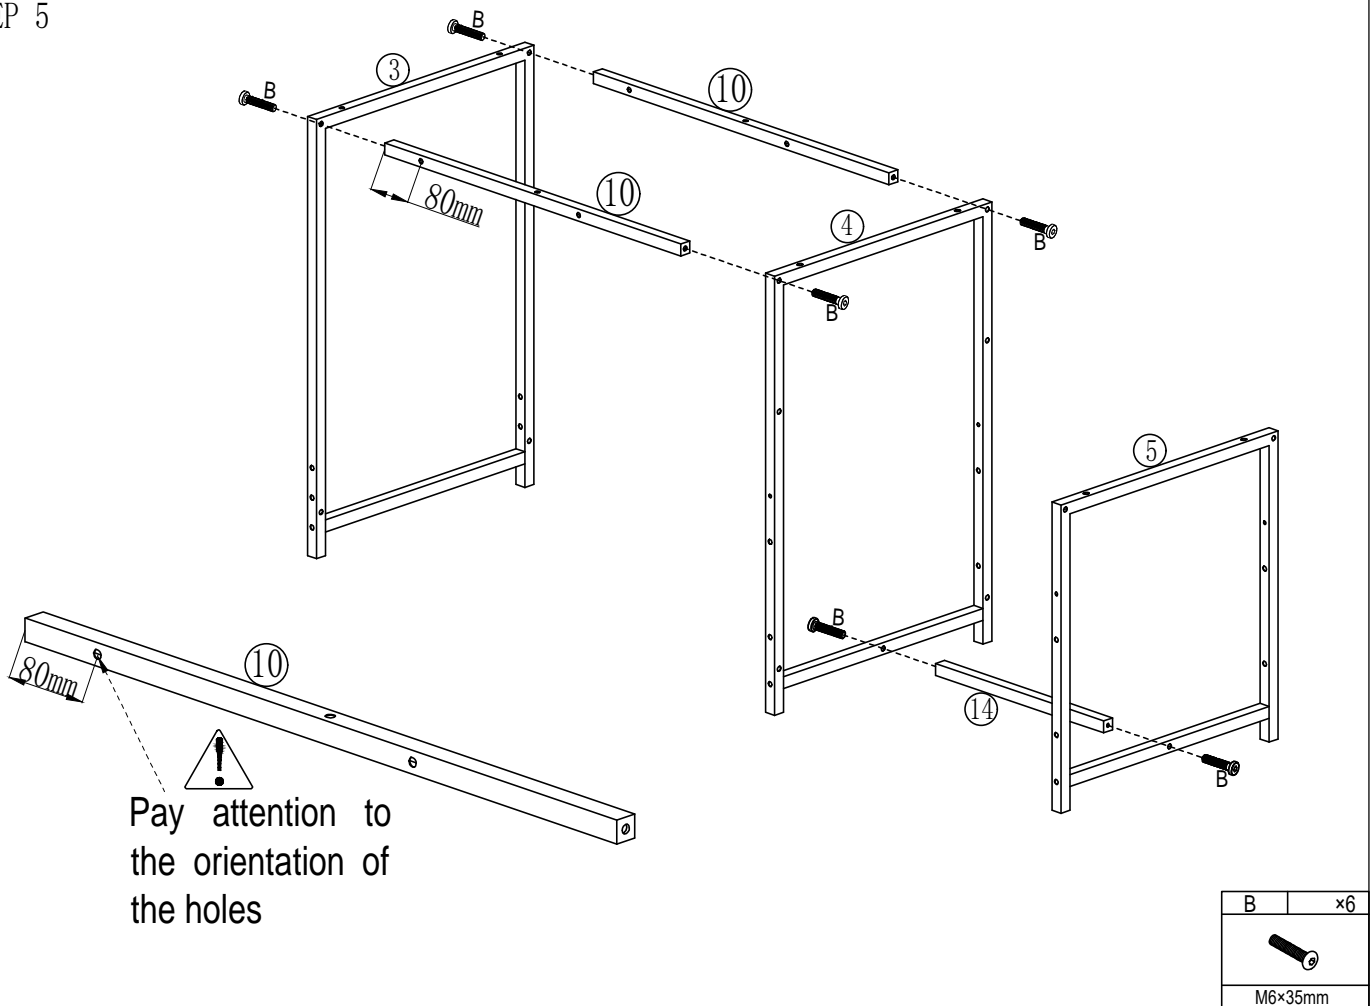



STEP 6

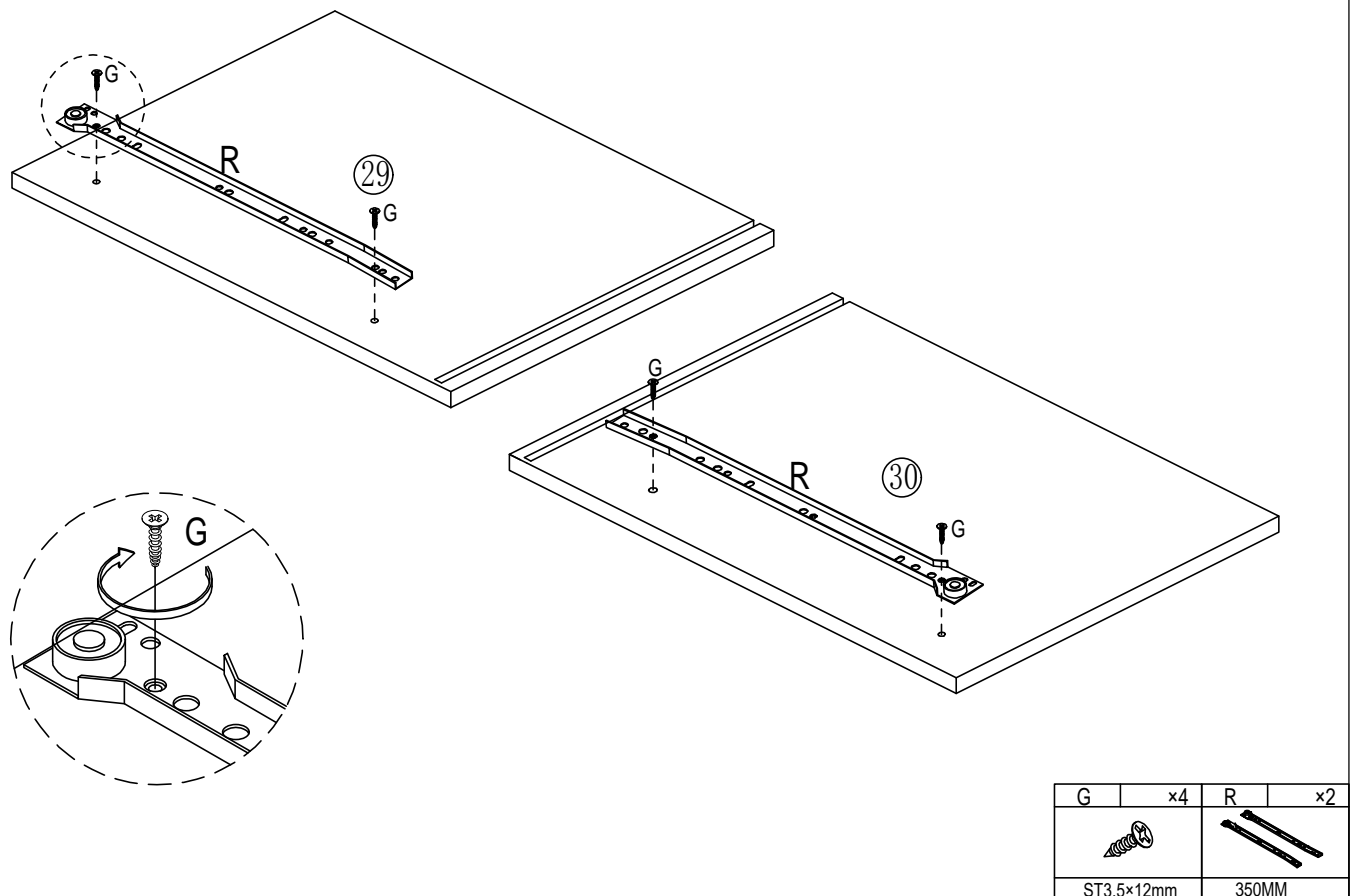


ASSEMBLY INSTRUCTIONS

STEP 7

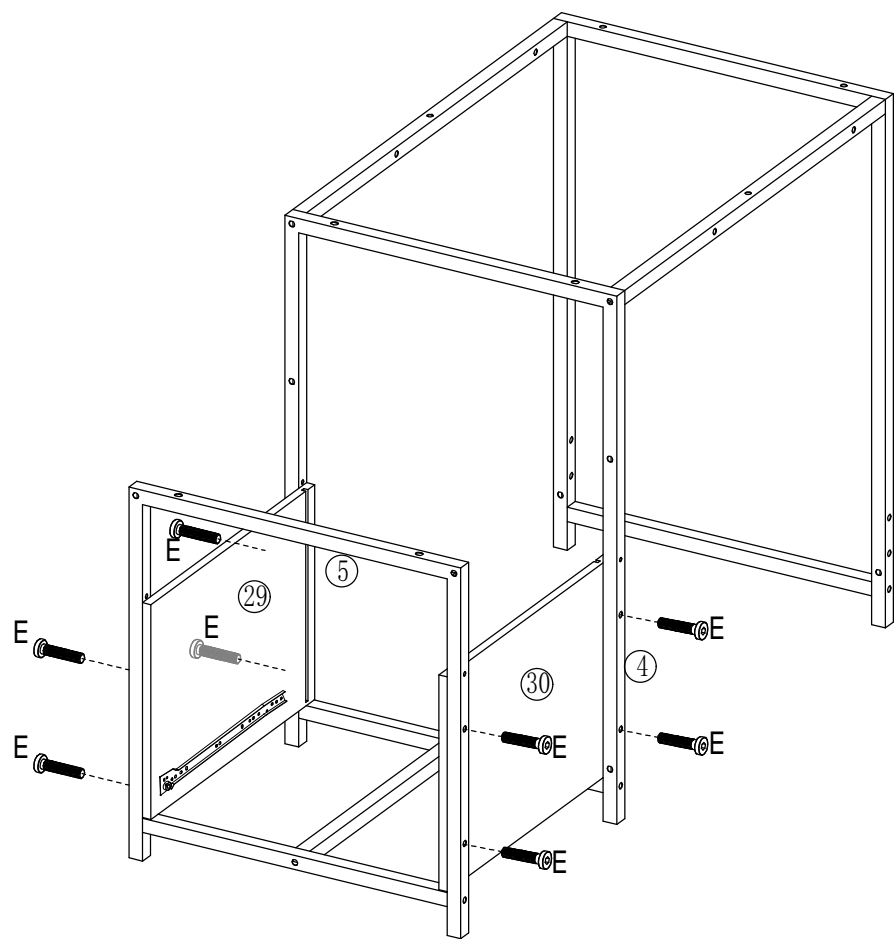


E	x8
	
M6x28mm	


STEP 8

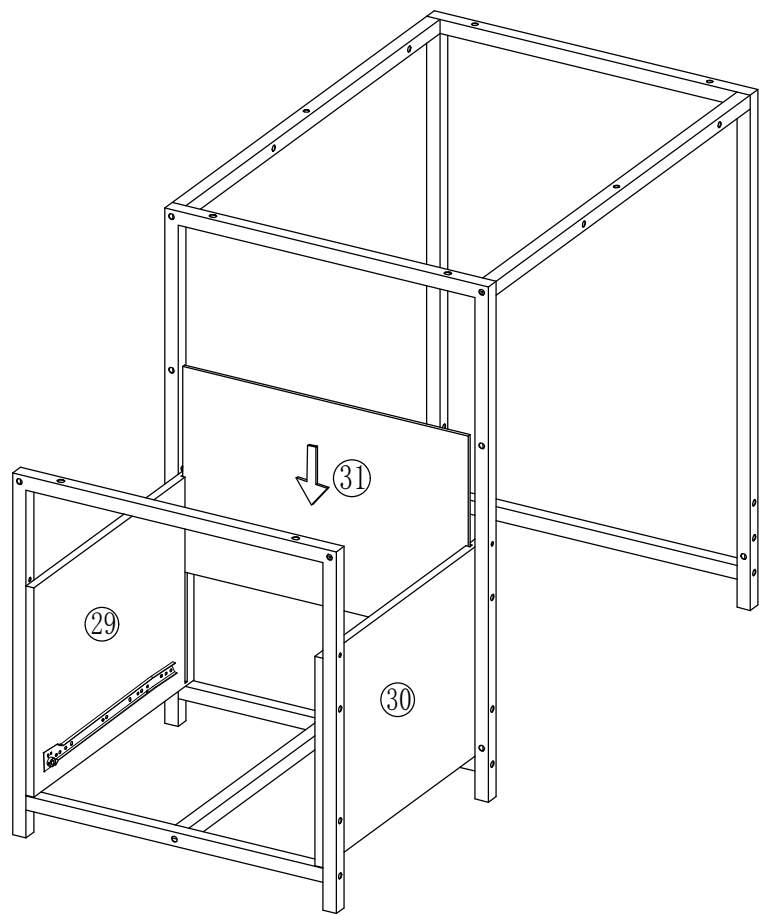


ASSEMBLY INSTRUCTIONS


STEP 9

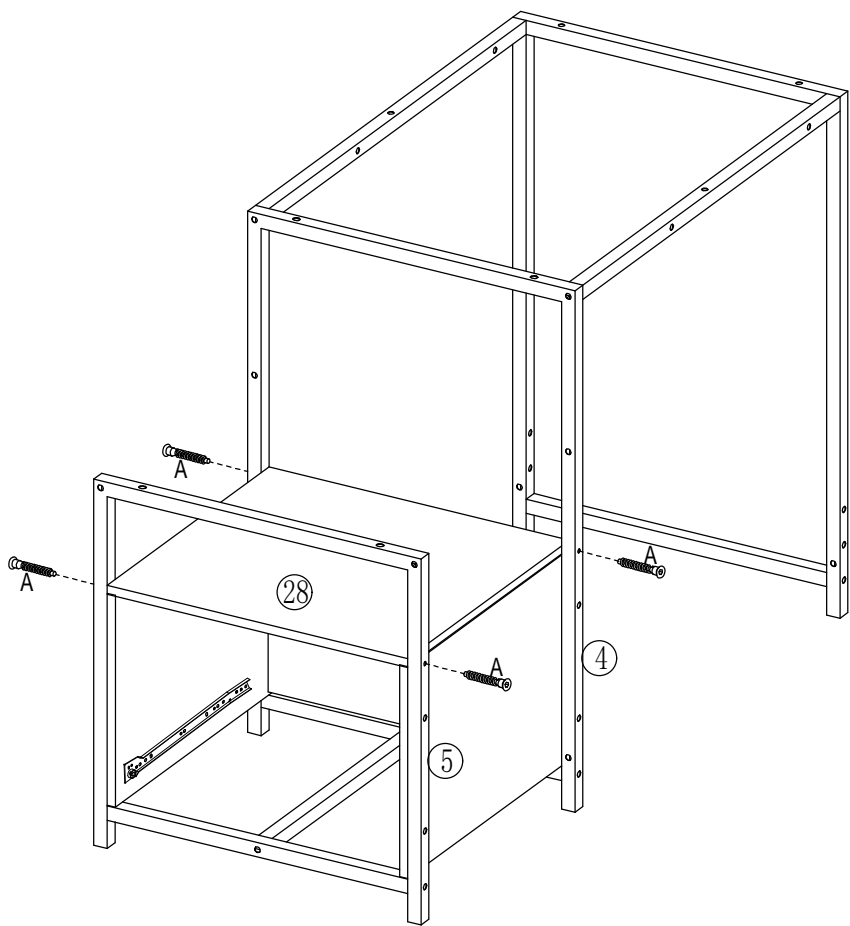

A	x4
	
M5x38mm	


STEP 10

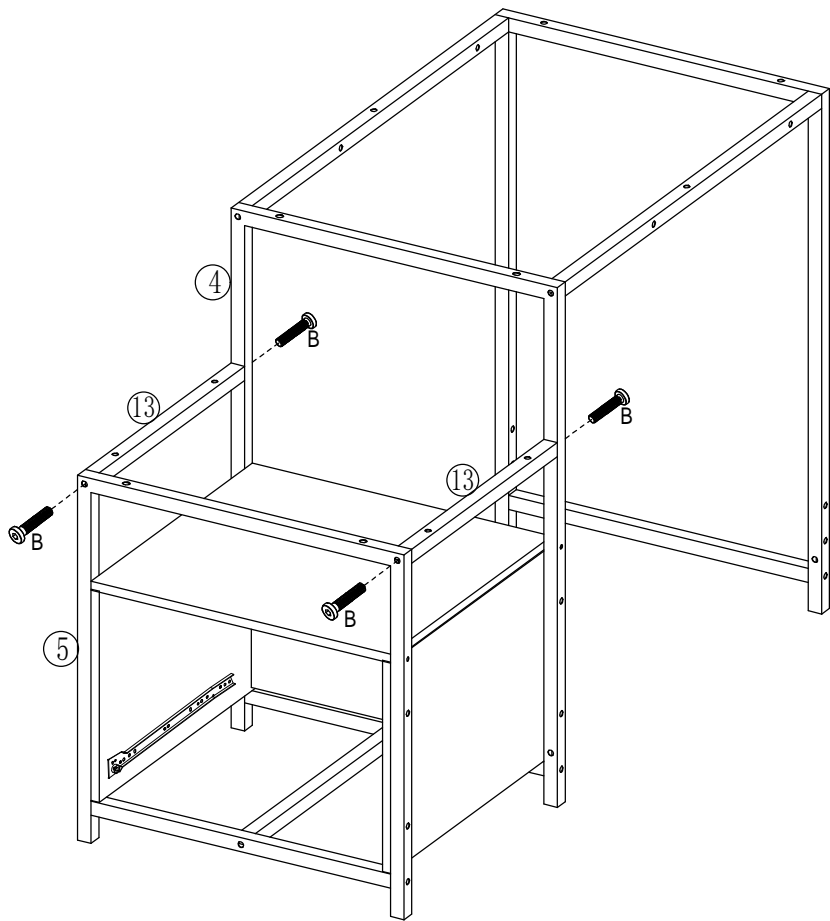


B	x4
	
M6x35mm	


ASSEMBLY INSTRUCTIONS



STEP 11

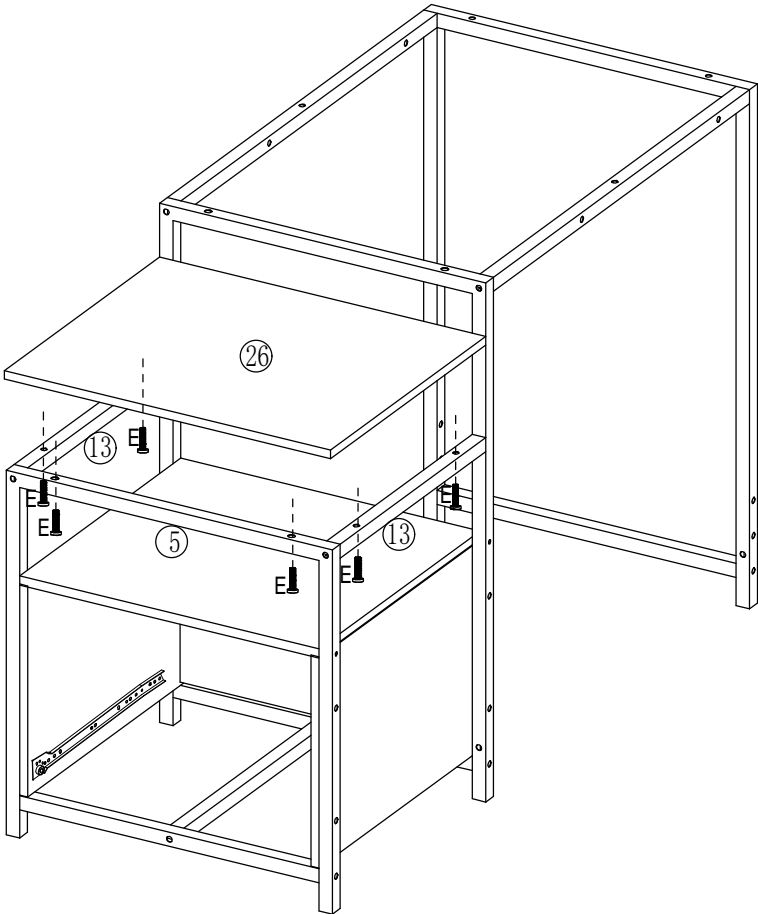

E	x6
	
M6x28mm	


STEP 12

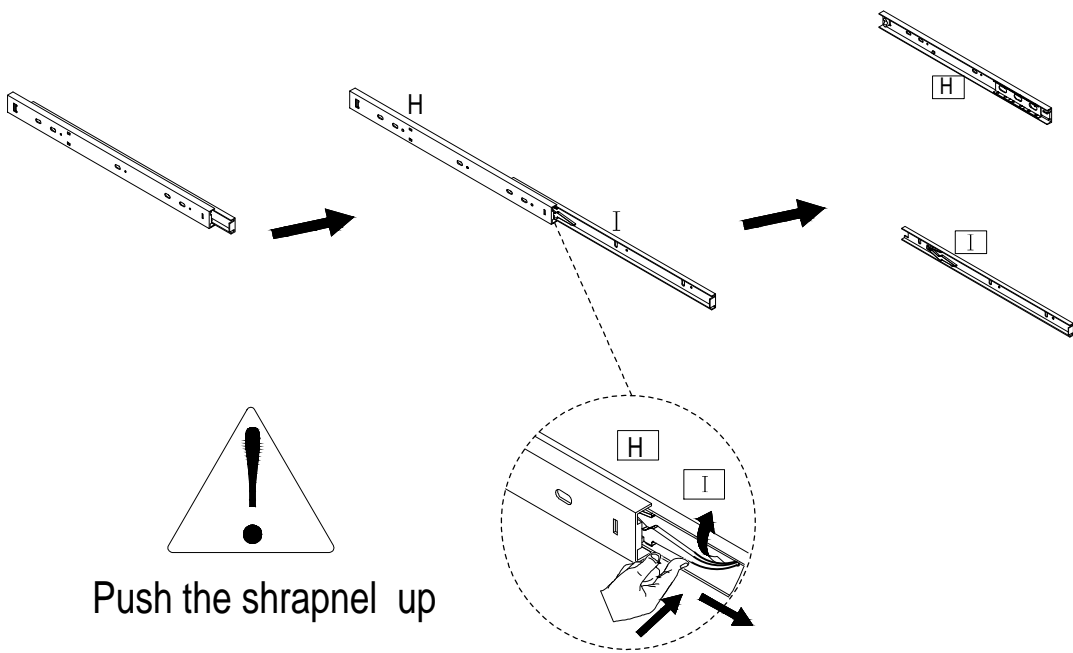


H	x2	I	x2
			


ASSEMBLY INSTRUCTIONS

STEP 13

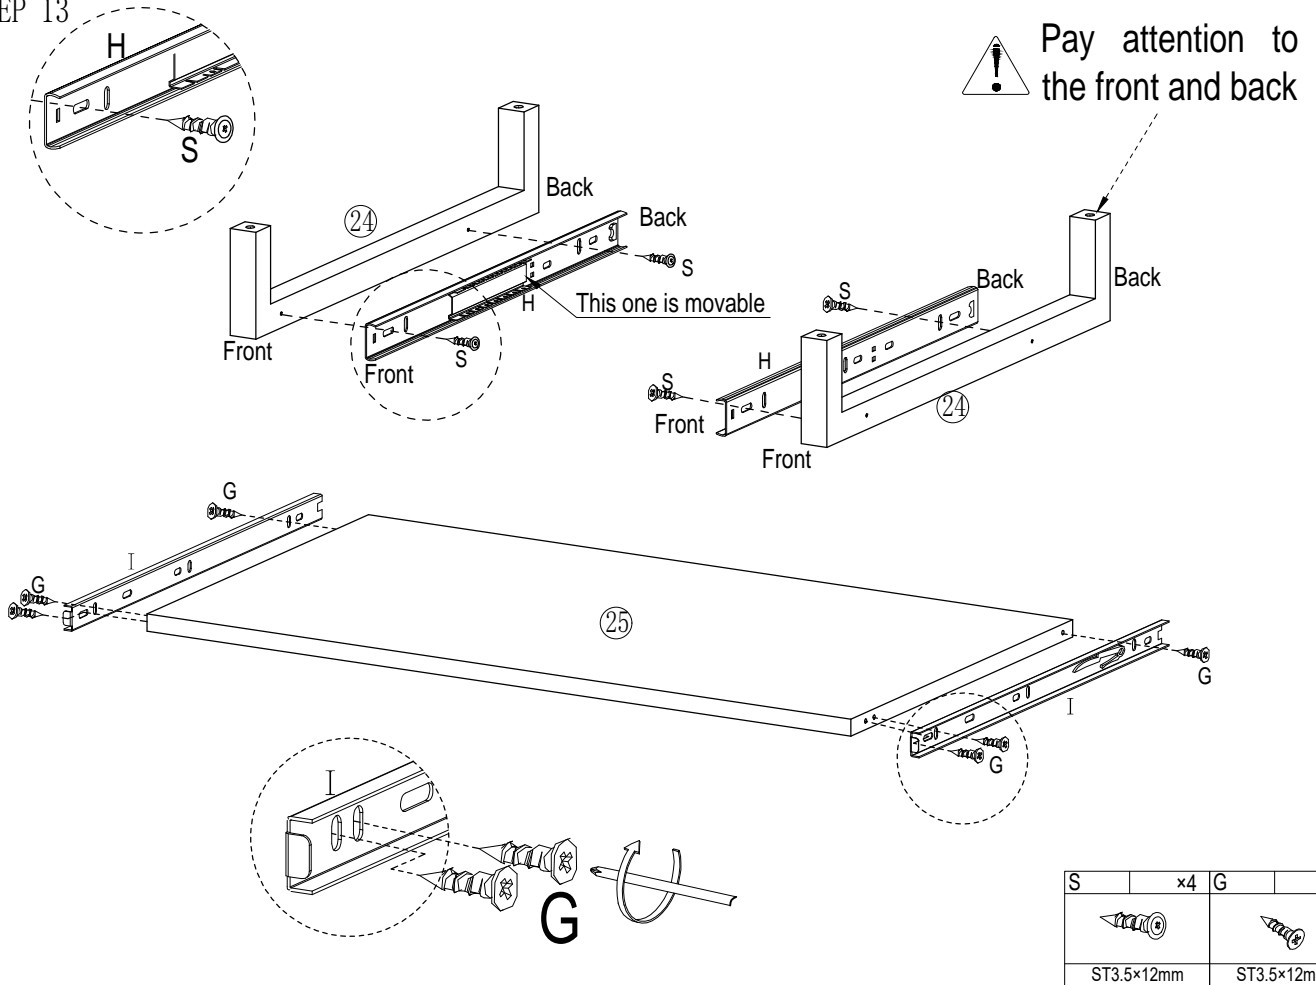


STEP 14

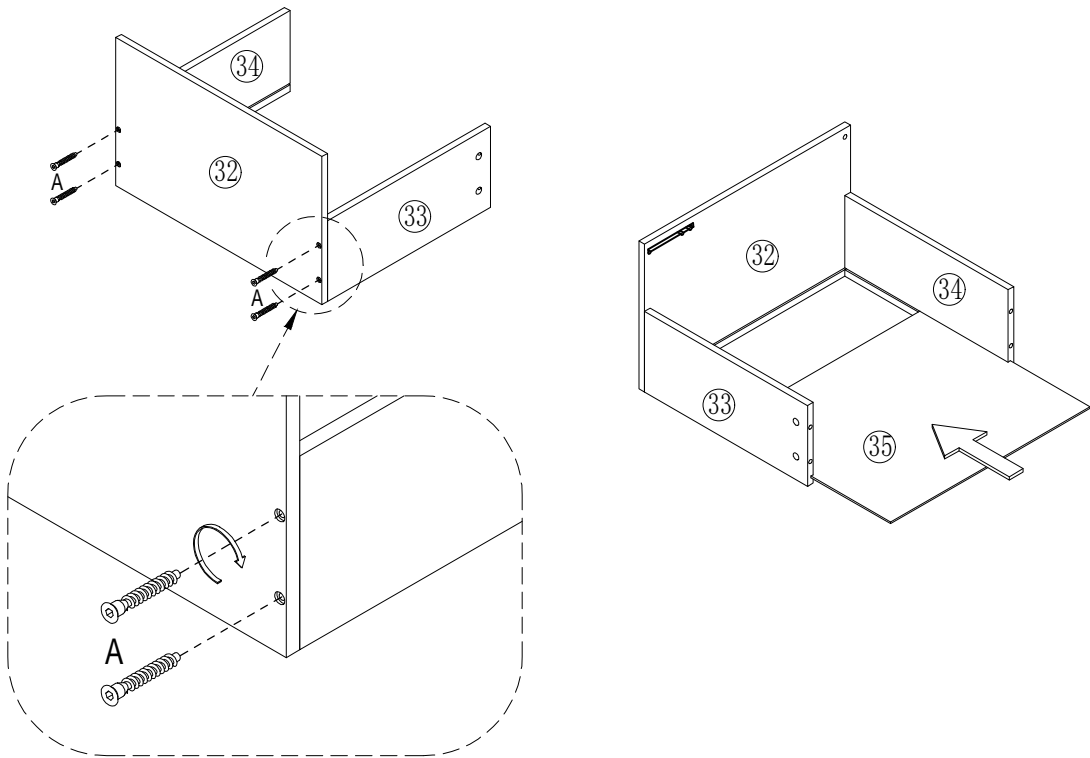




A	x4
	
M5x38mm	

ASSEMBLY INSTRUCTIONS



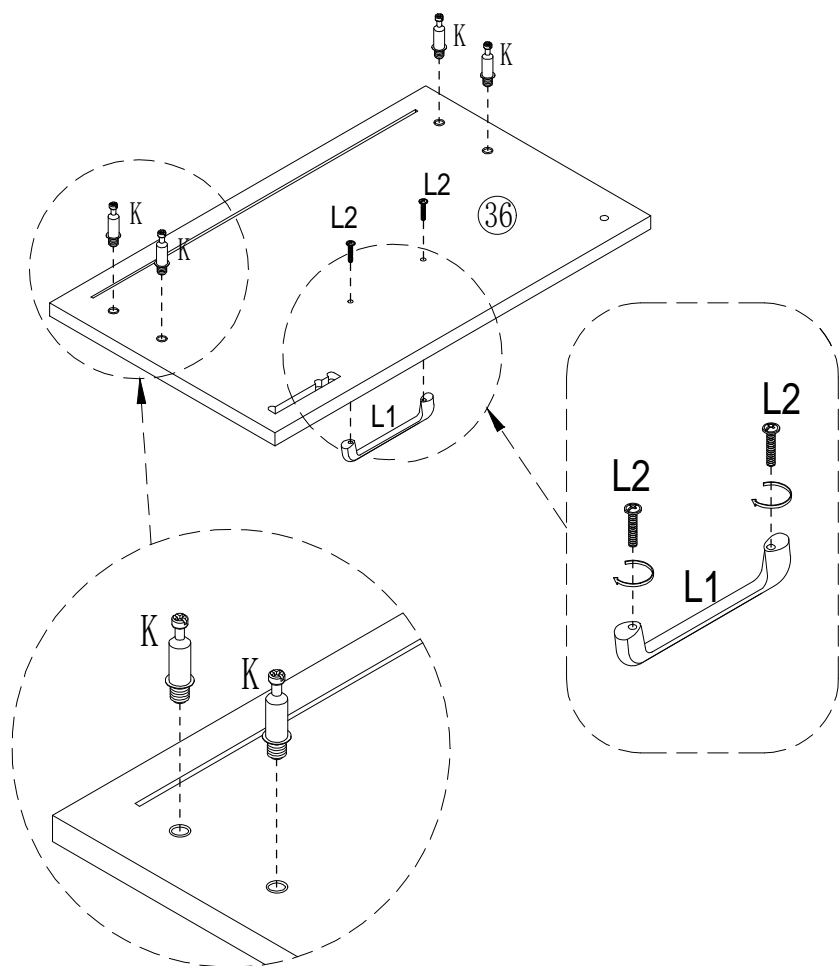
STEP 15





L	x1	K	x4
			
L1	L2		

STEP 16

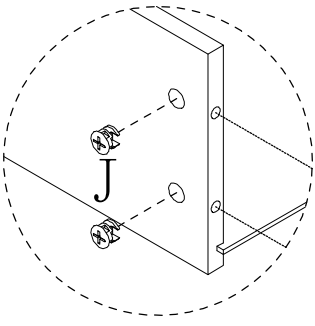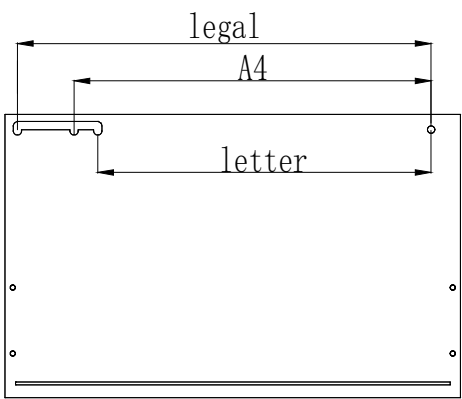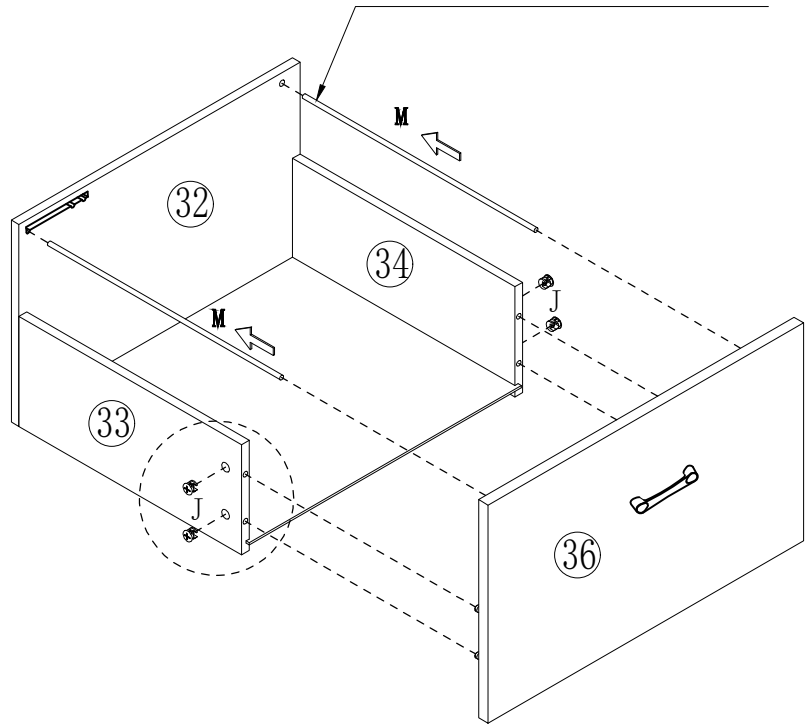
Pay attention to the placement of the pull tube to prevent it from falling





J	x4	M	x2
			


ASSEMBLY INSTRUCTIONS

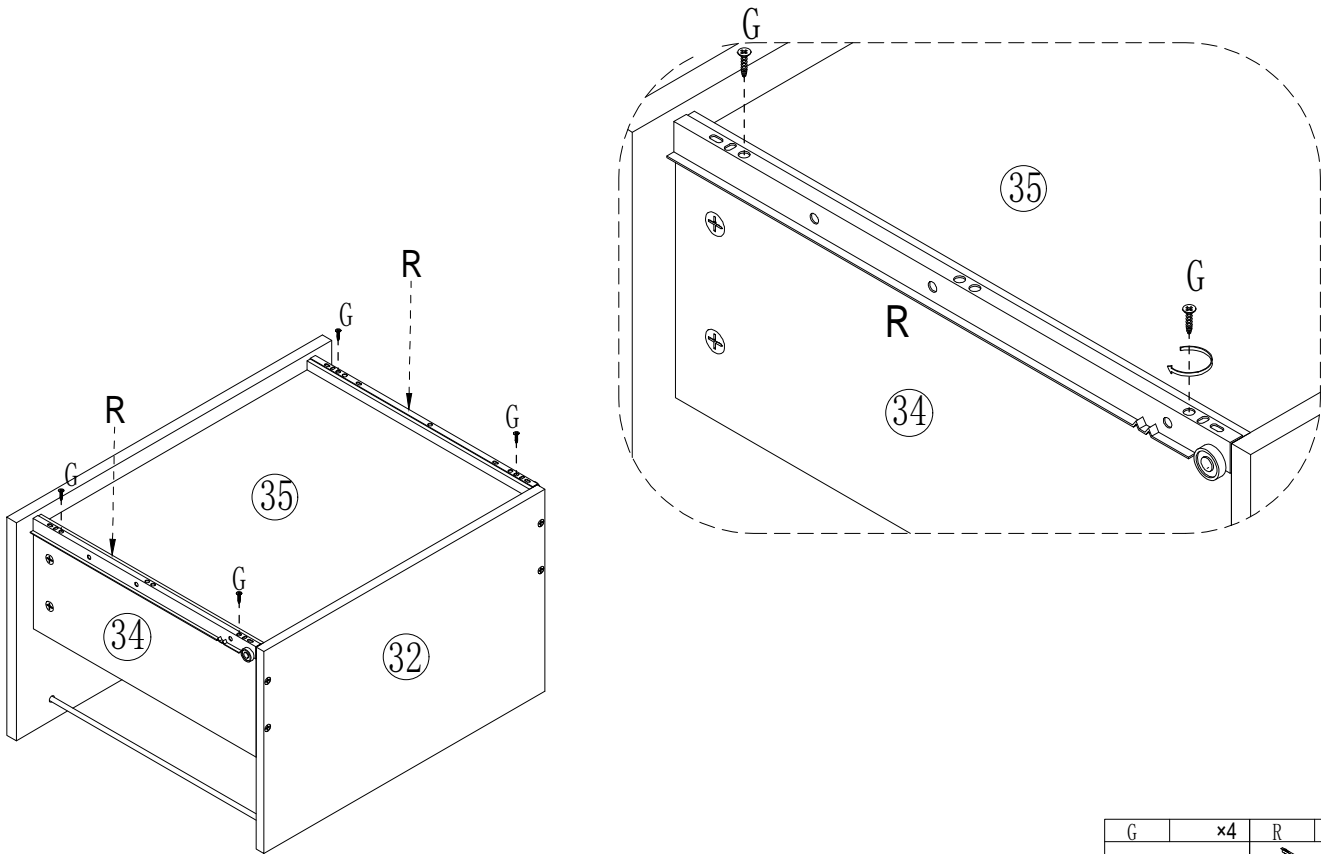

STEP 17



G	×4	R	×2
			
ST3.5×12mm		350MM	

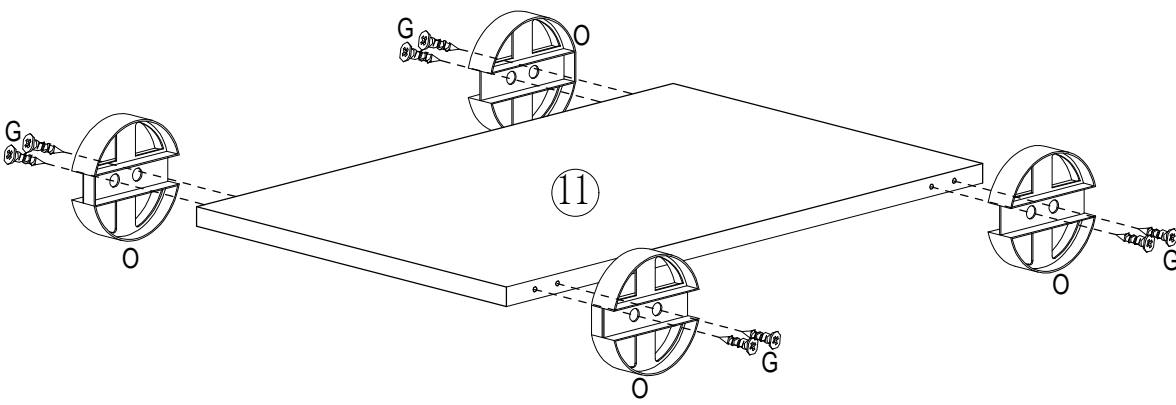
STEP 18




G	×8	O	×4
			
ST3.5×12mm			

ASSEMBLY INSTRUCTIONS

STEP 19

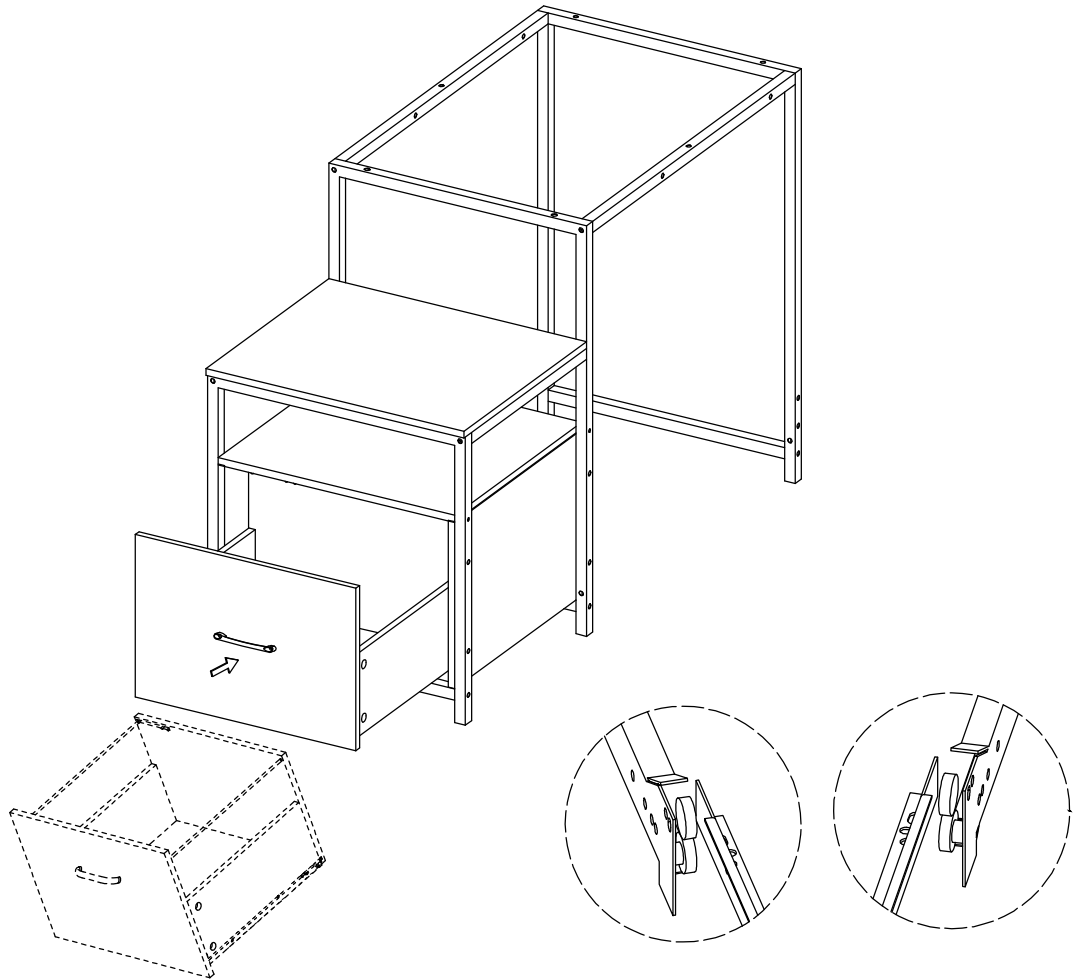



STEP 20

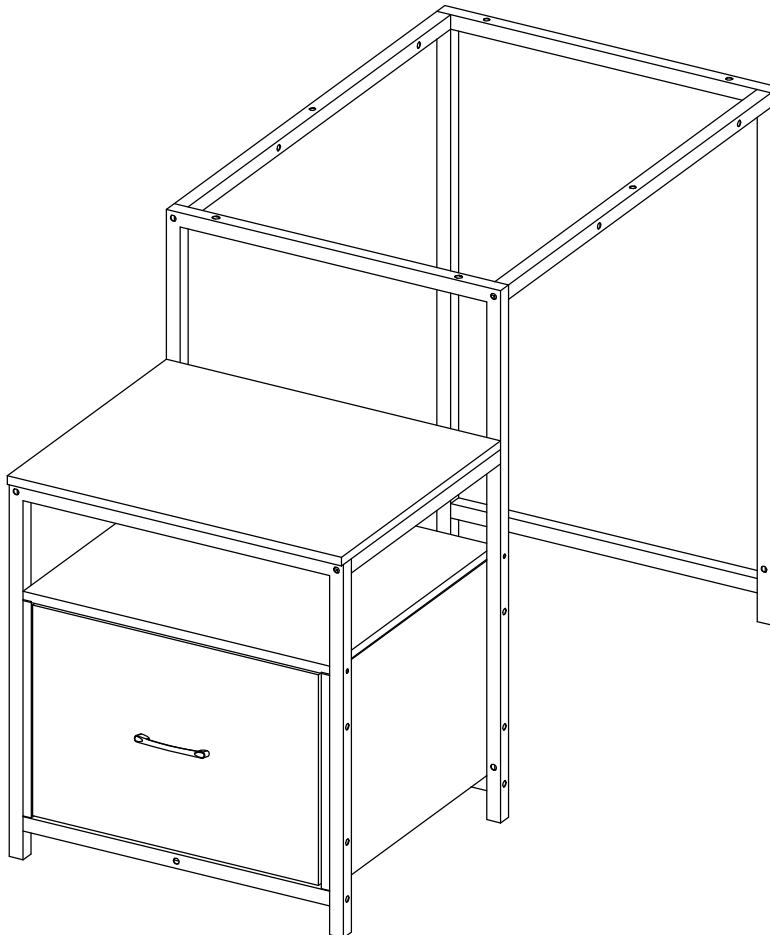


ASSEMBLY INSTRUCTIONS


STEP 21

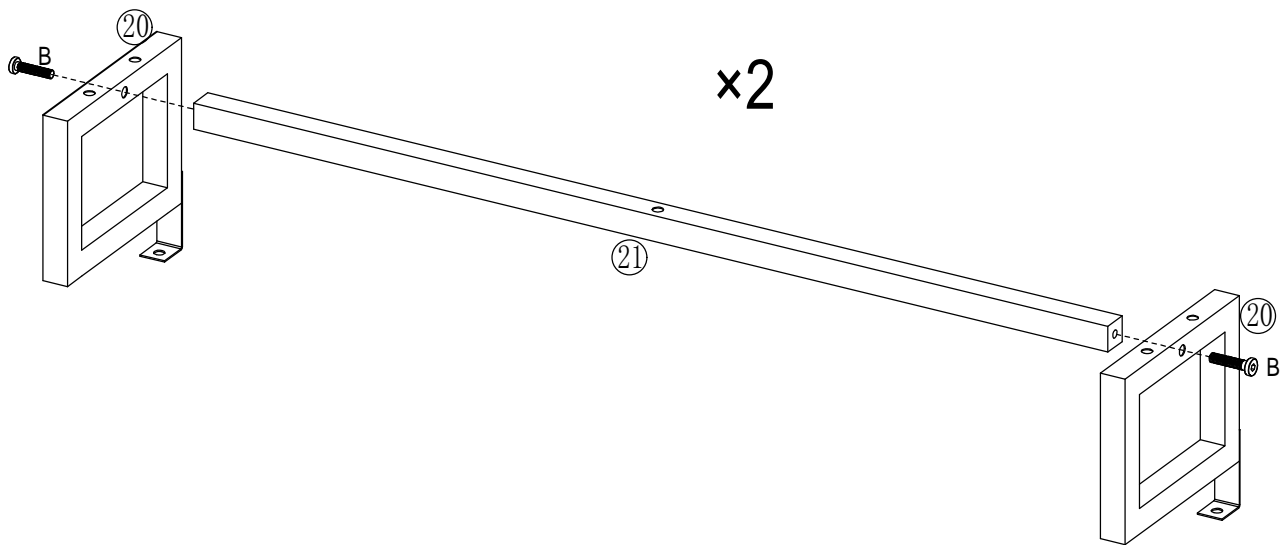

B	x4
	
M6x35mm	


STEP 22

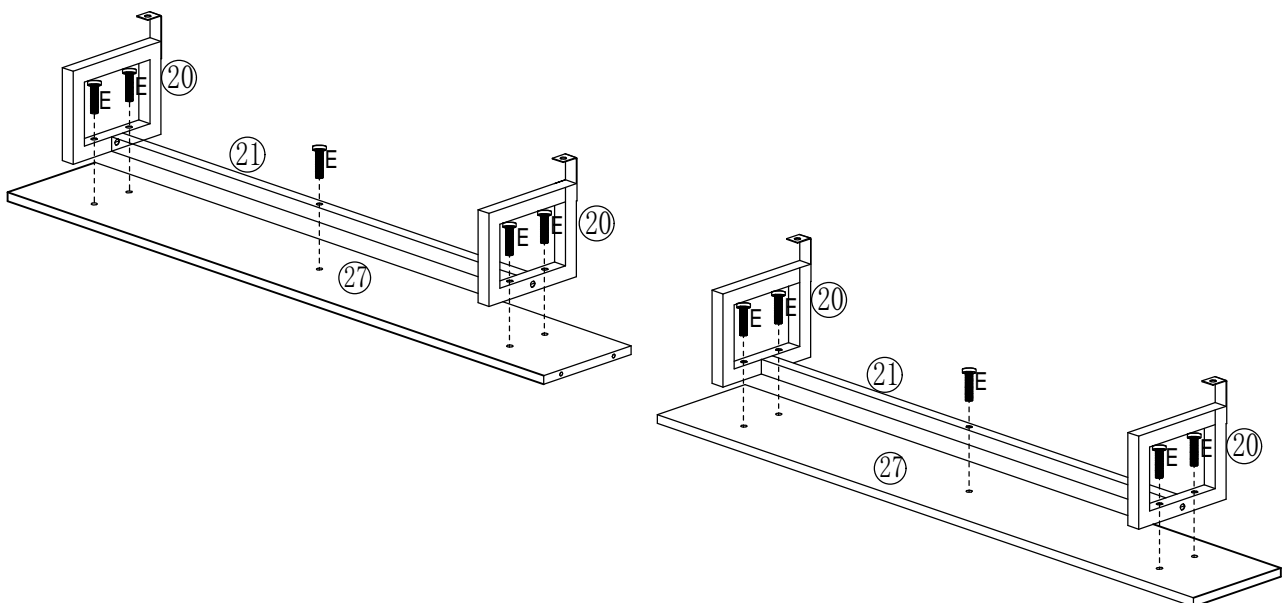

E	x10
	
M6x28mm	

ASSEMBLY INSTRUCTIONS


Installation Option I

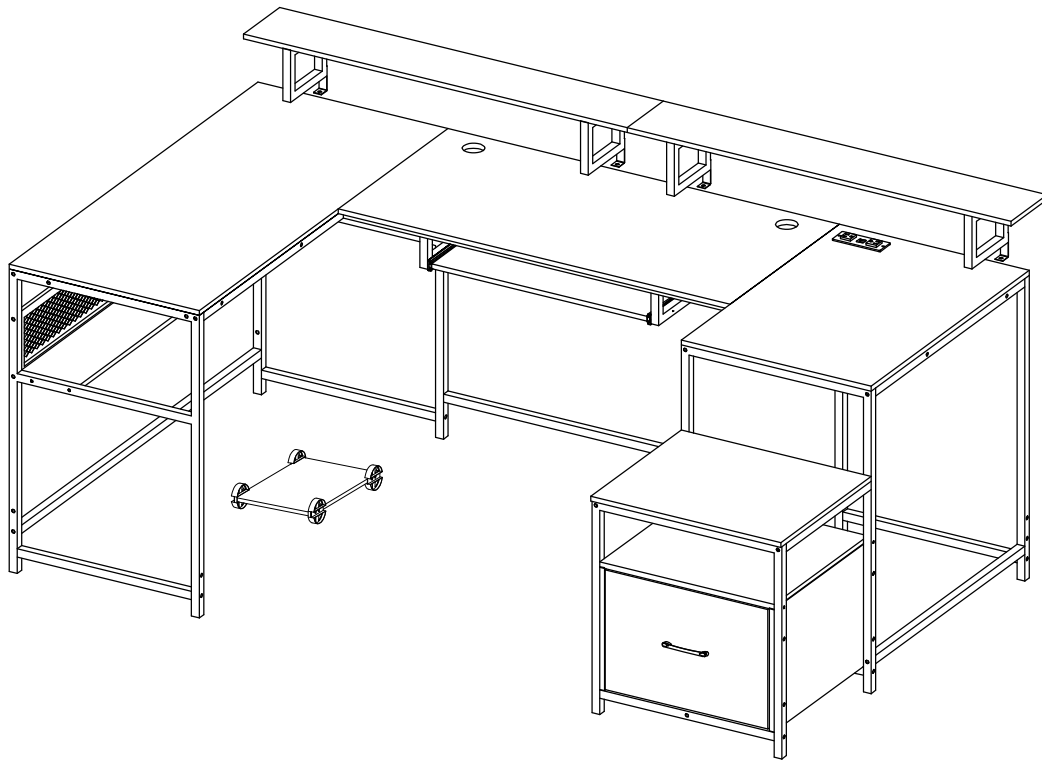


With the basic components of Step1-step22,
the following installation method is the first.


ASSEMBLY INSTRUCTIONS


STEP 23-1

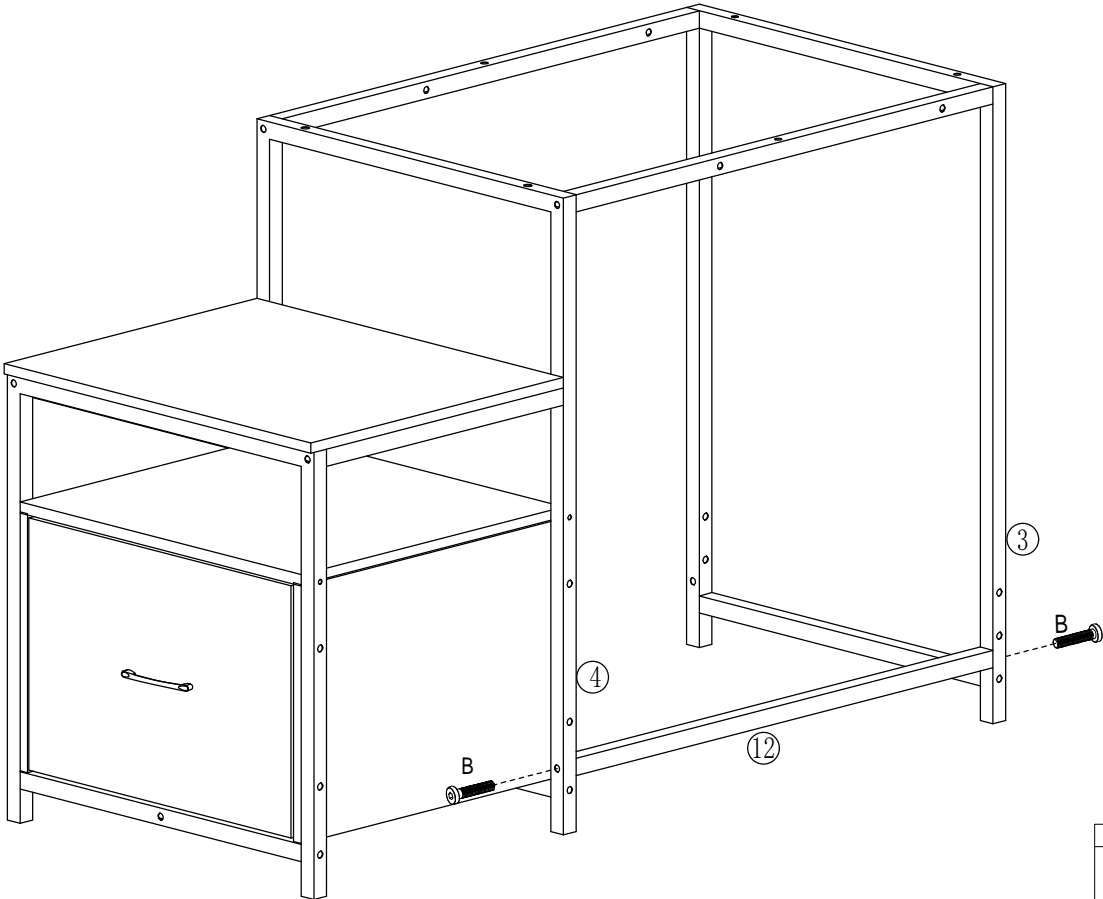

B	×2
	
M6×35mm	


STEP 24-1

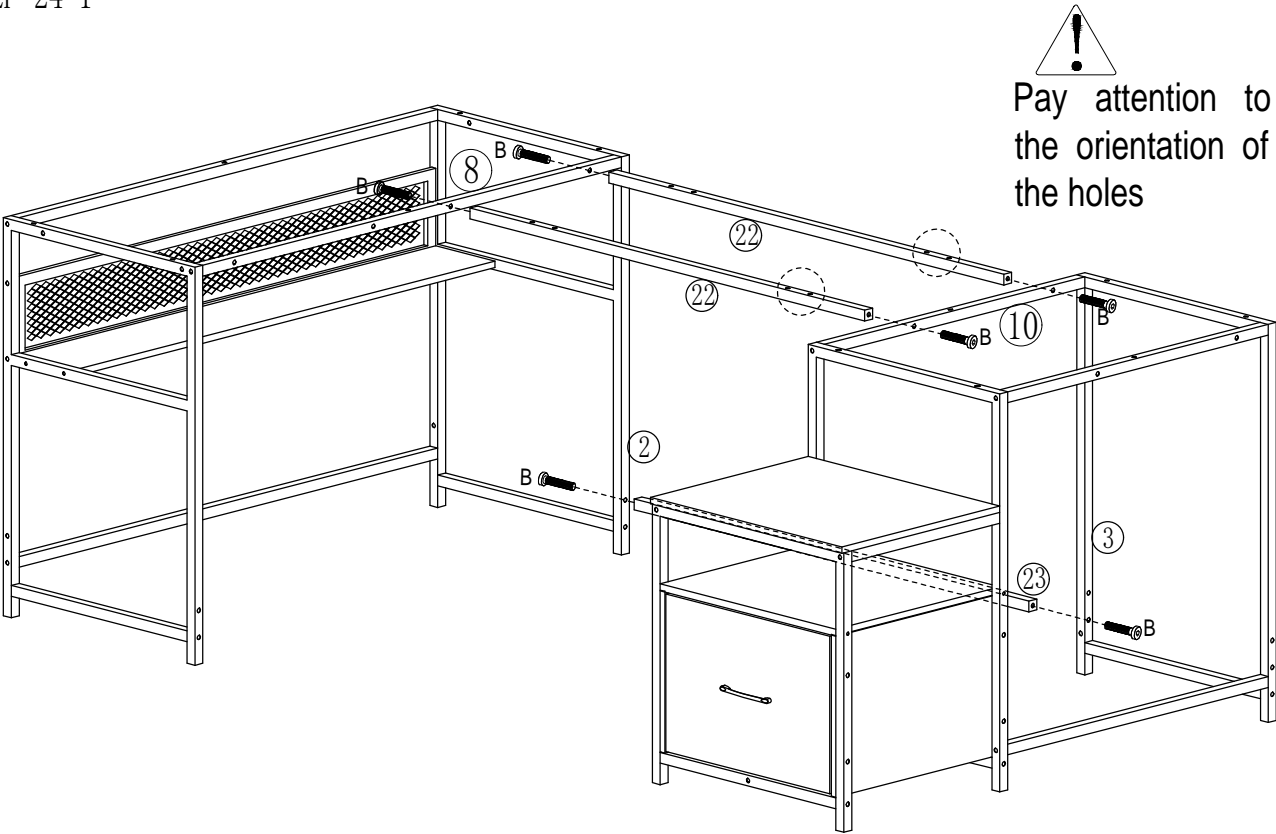


B	×6
	
M6×35mm	



ASSEMBLY INSTRUCTIONS

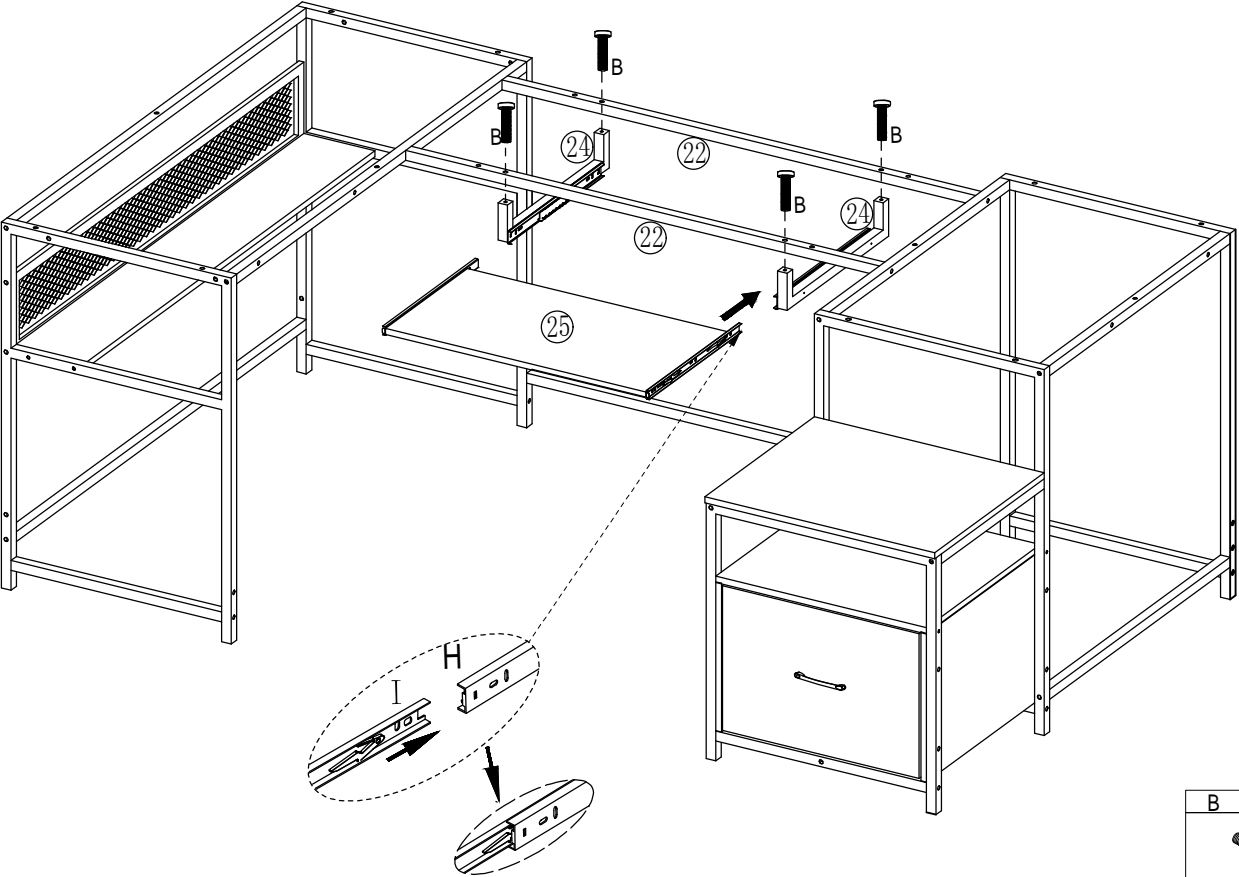



STEP 25-1



B	x4
	
M6×35mm	

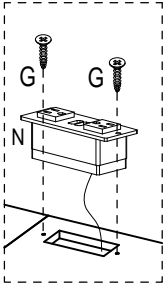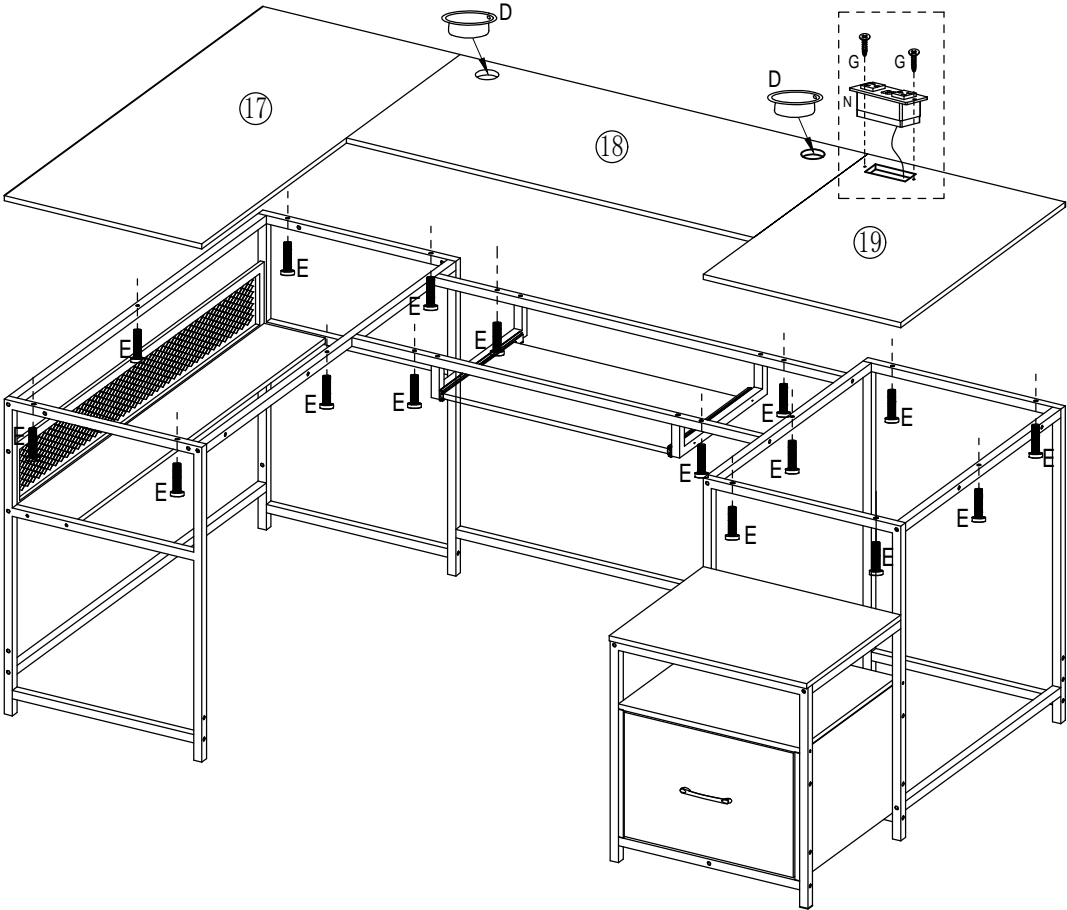
STEP 26-1




E	x16	D	x2
			
M6×28mm			
G	x2	N	x1
			
ST3.5×12mm			

ASSEMBLY INSTRUCTIONS

STEP 27-1 A dowel joint must be inserted between the two boards

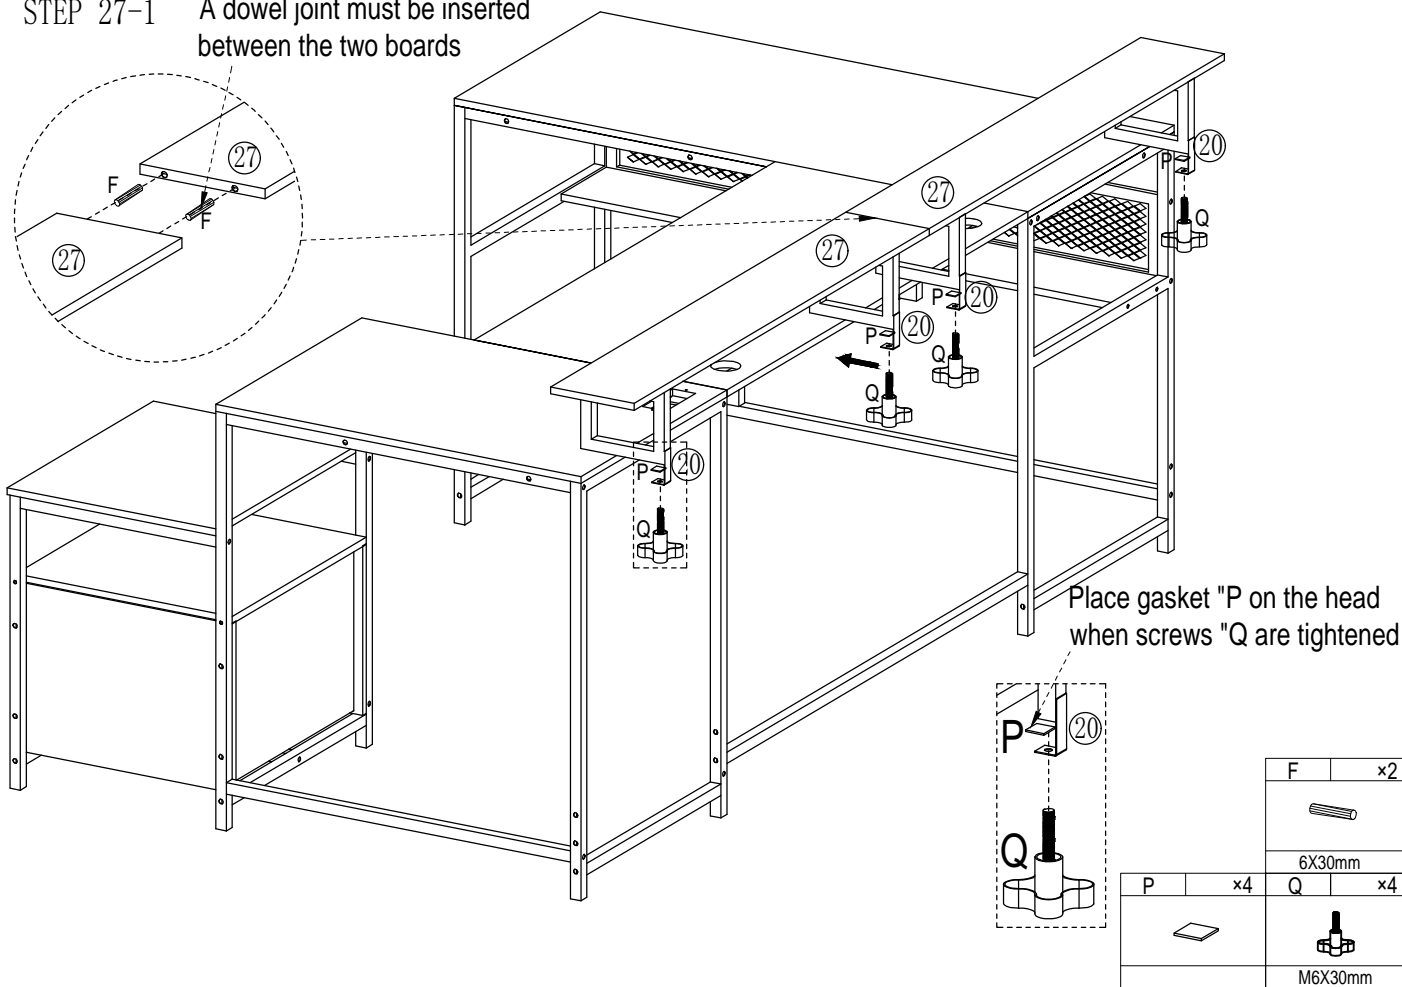


STEP 28-1

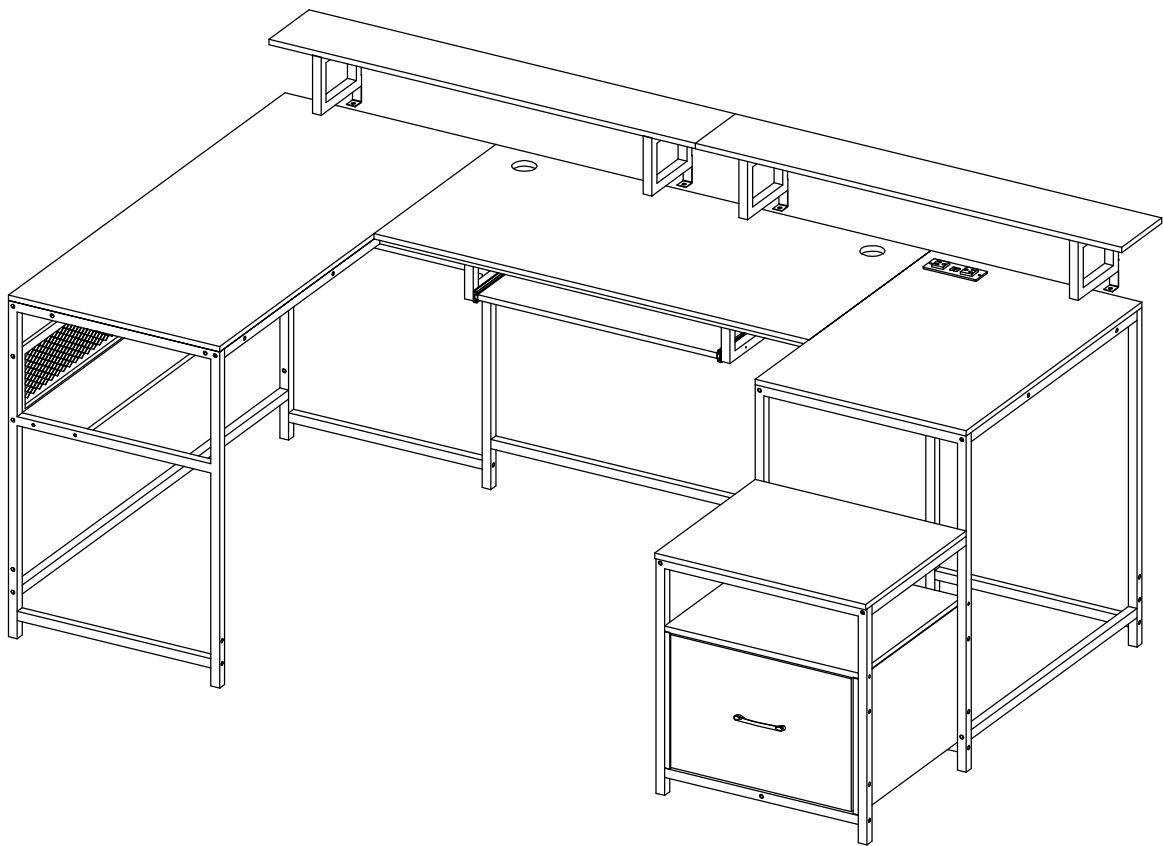

ASSEMBLY INSTRUCTIONS


Installation Option II

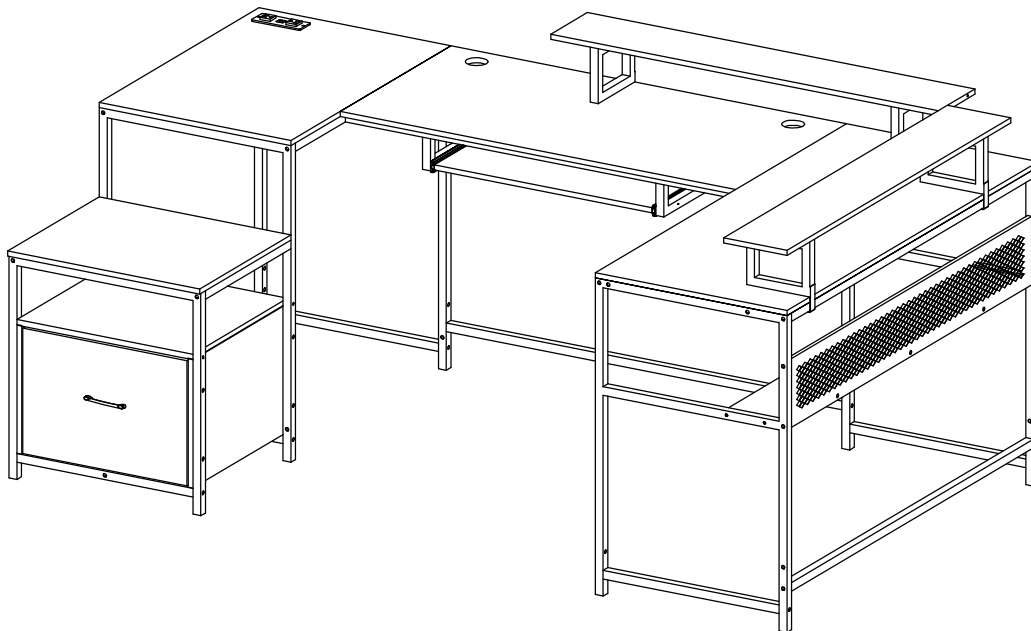


With the basic components of Step1-step22,
the following installation method is the second.


ASSEMBLY INSTRUCTIONS


STEP 23-2

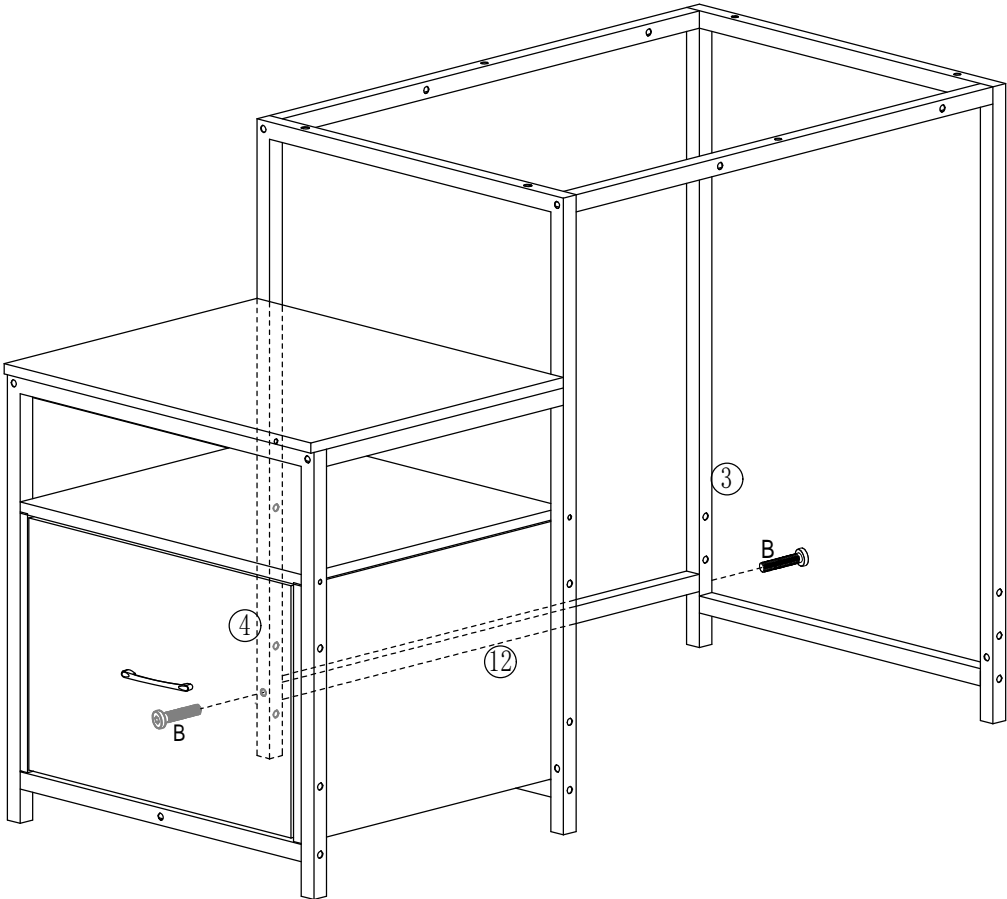

B	×2
	
M6×35mm	


STEP 24-2

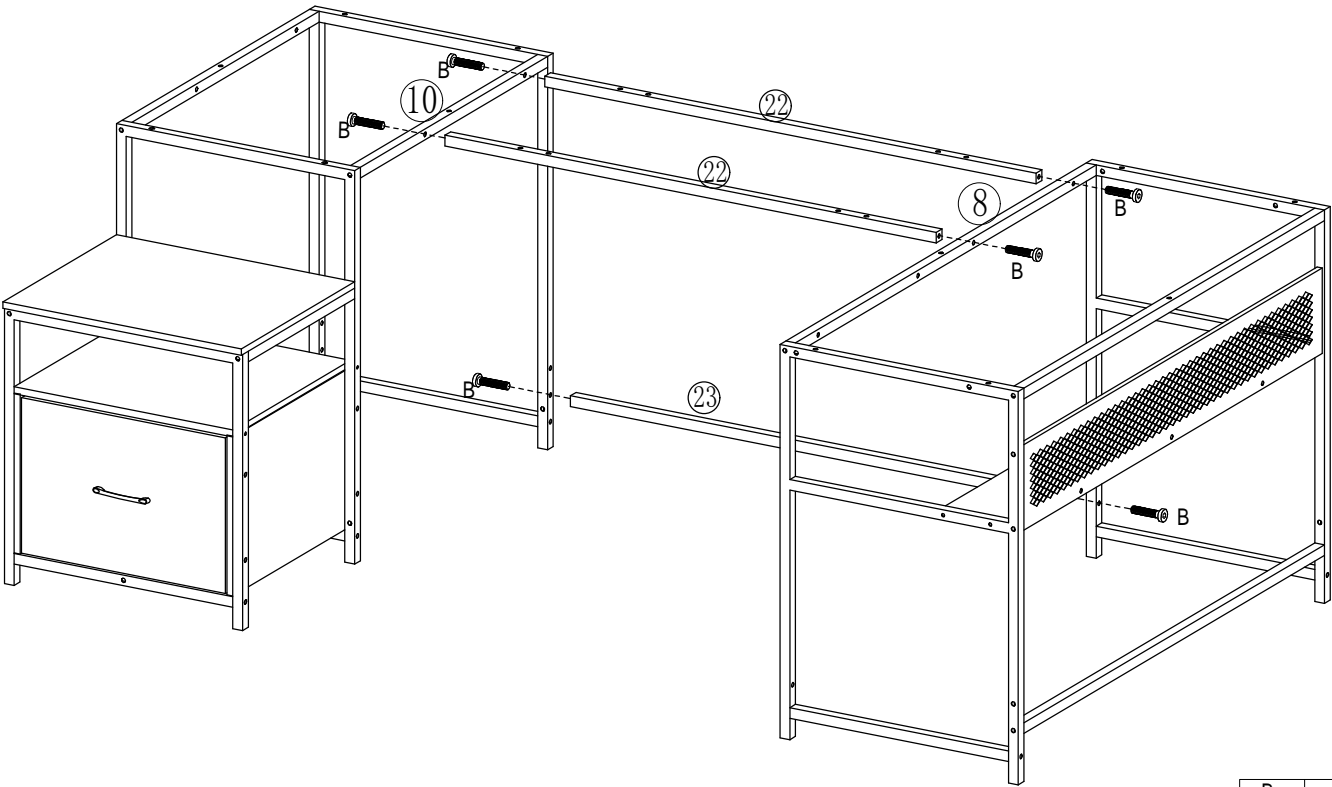


B	×6
	
M6×35mm	



ASSEMBLY INSTRUCTIONS

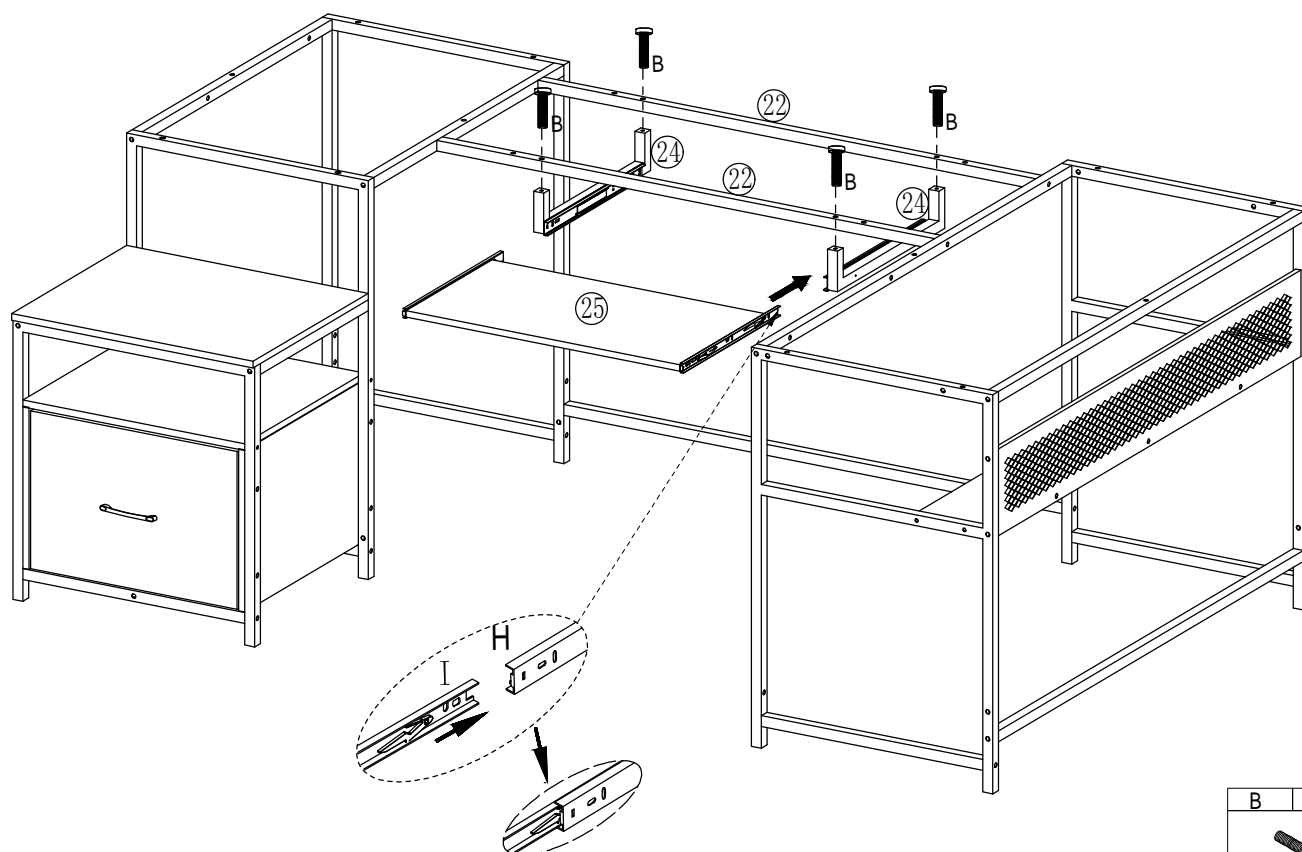



STEP 25-2



B	x4
	
M6×35mm	

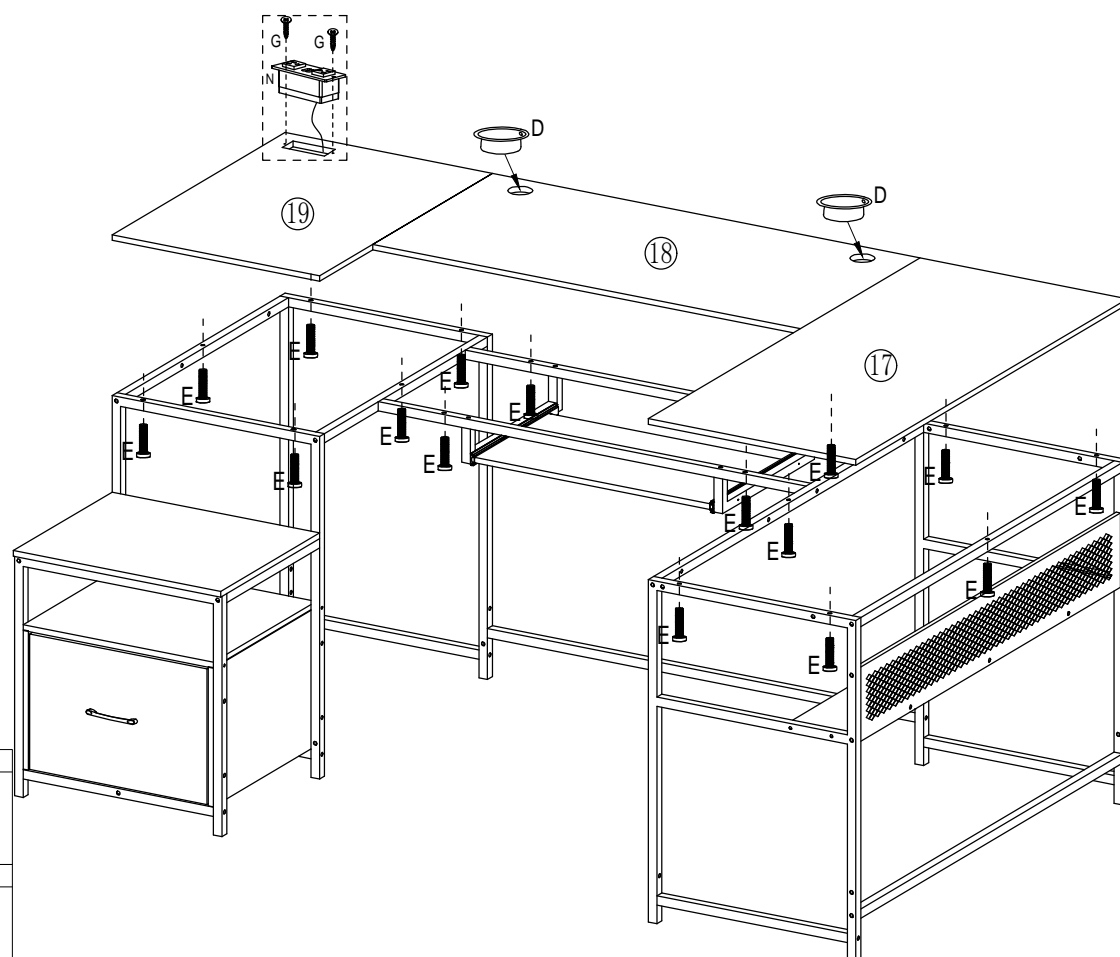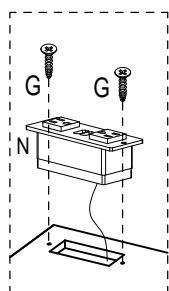
STEP 26-2




E	x16	D	x2
			
M6×28mm			
G	x2	N	x1
			
ST3.5×12mm			

ASSEMBLY INSTRUCTIONS

STEP 27-2

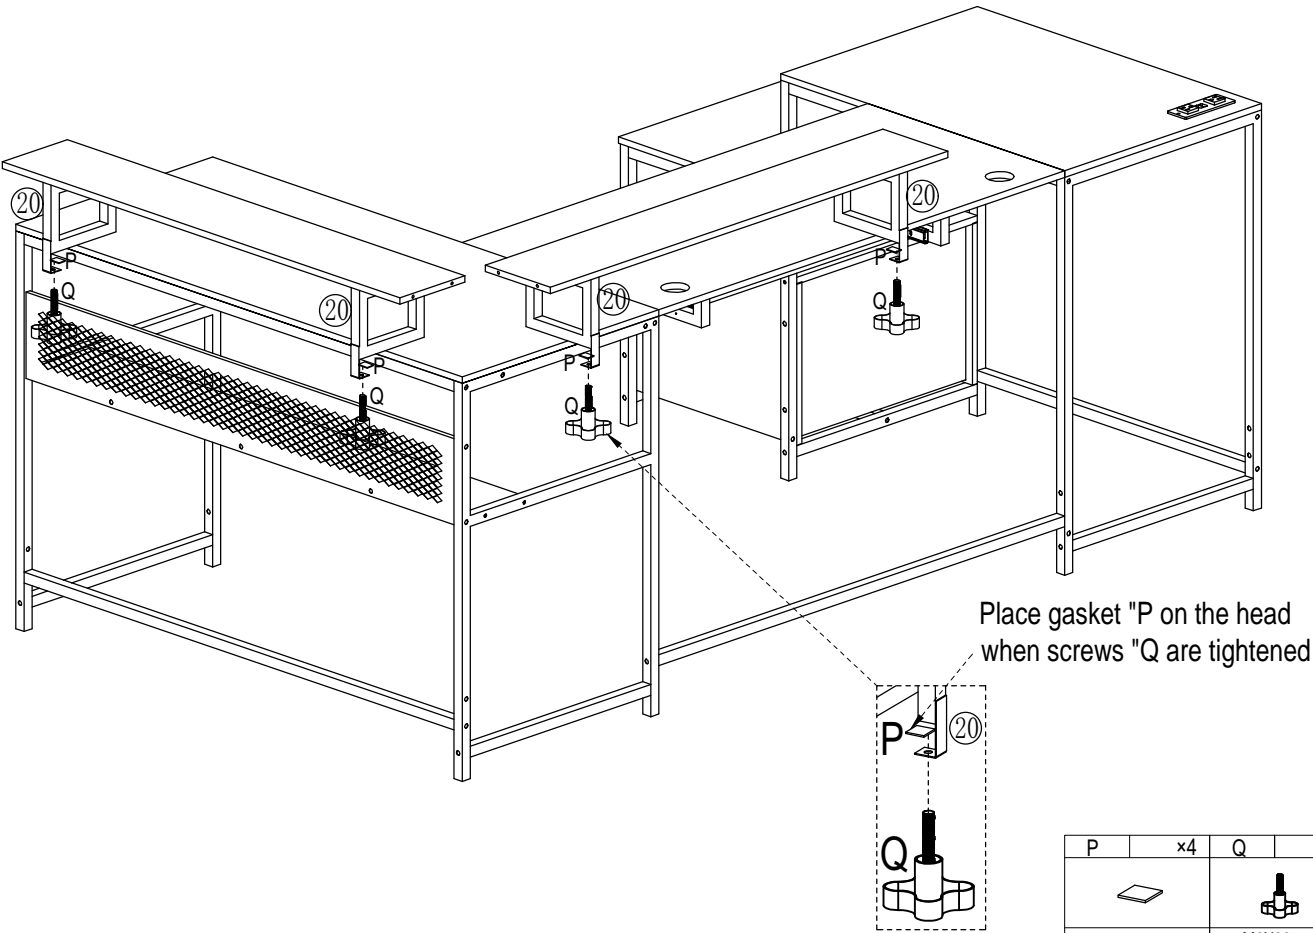


STEP 28-2

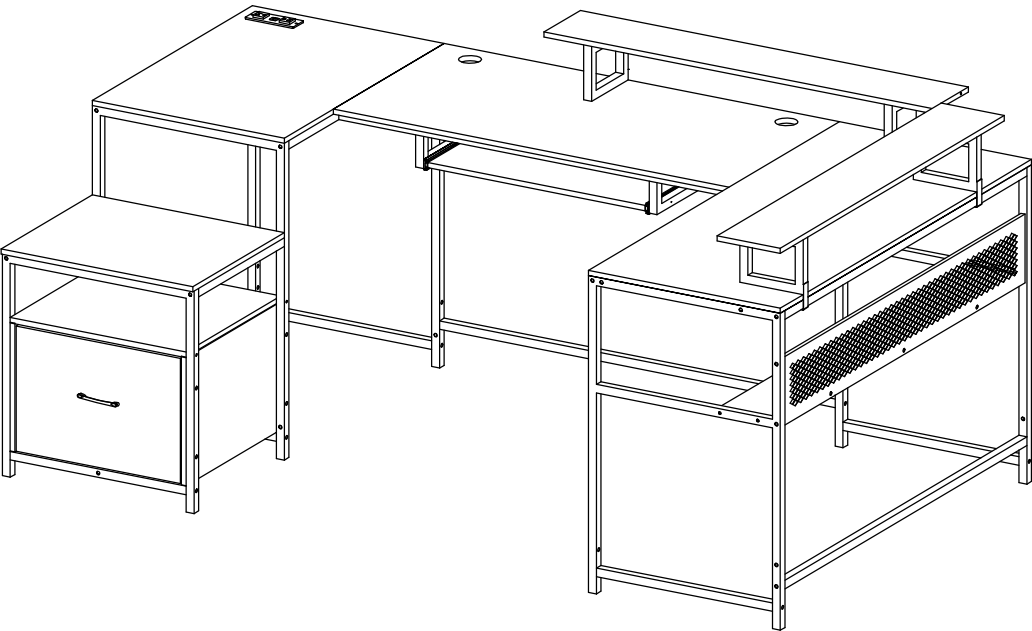

ASSEMBLY INSTRUCTIONS


Installation Option III

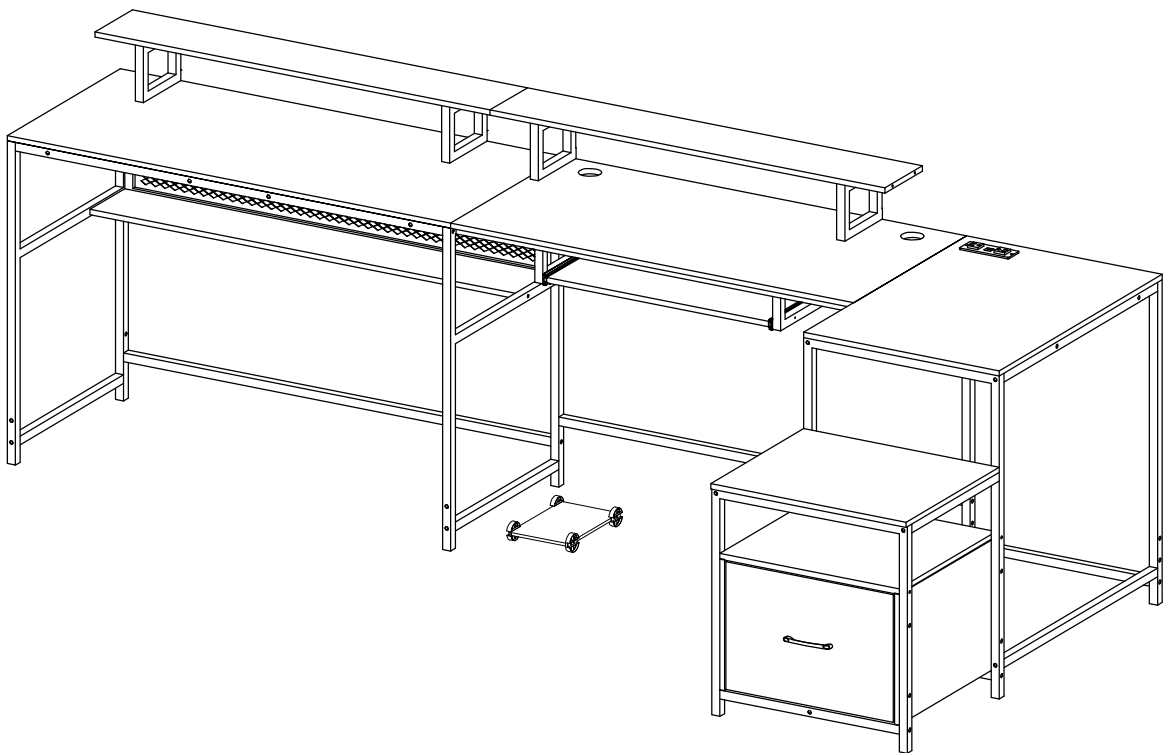


With the basic components of Step1-step22,
the following installation method is the third.


ASSEMBLY INSTRUCTIONS


STEP 23-3

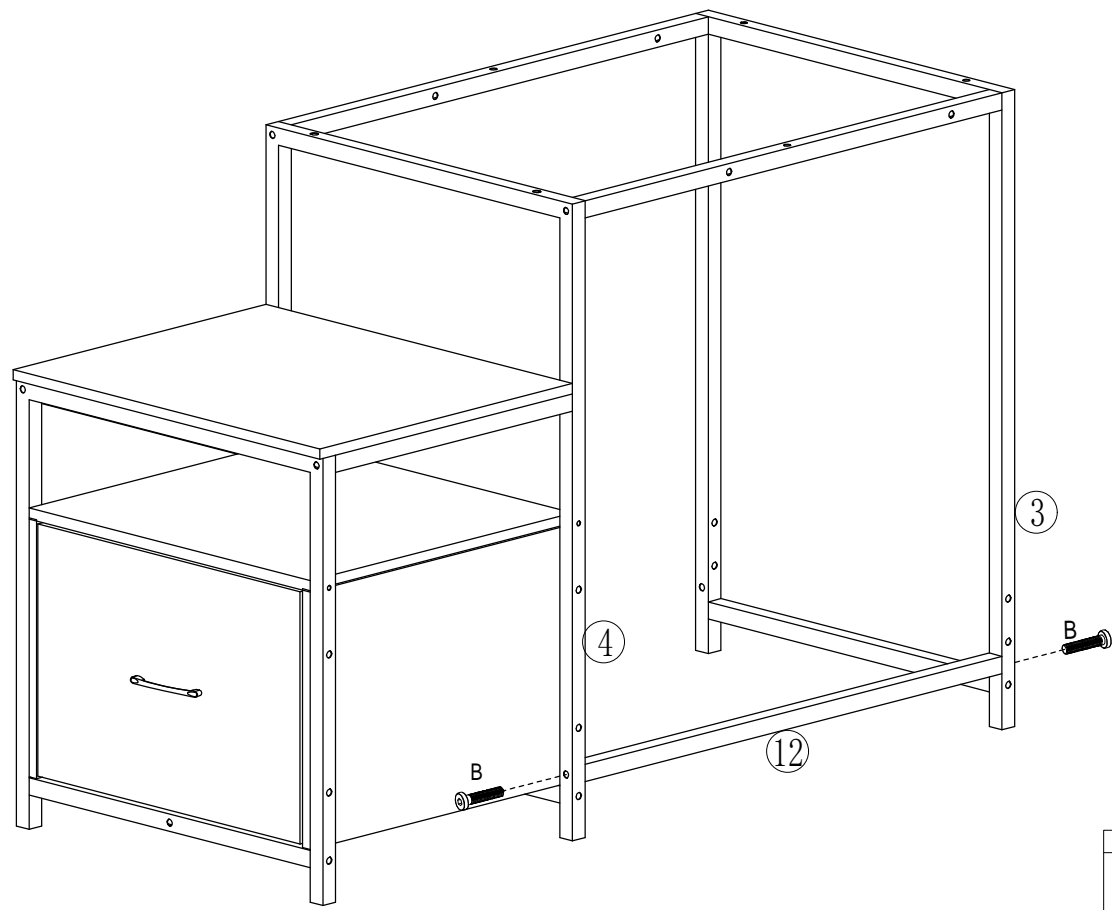

B	×2
	
M6×35mm	


STEP 24-3

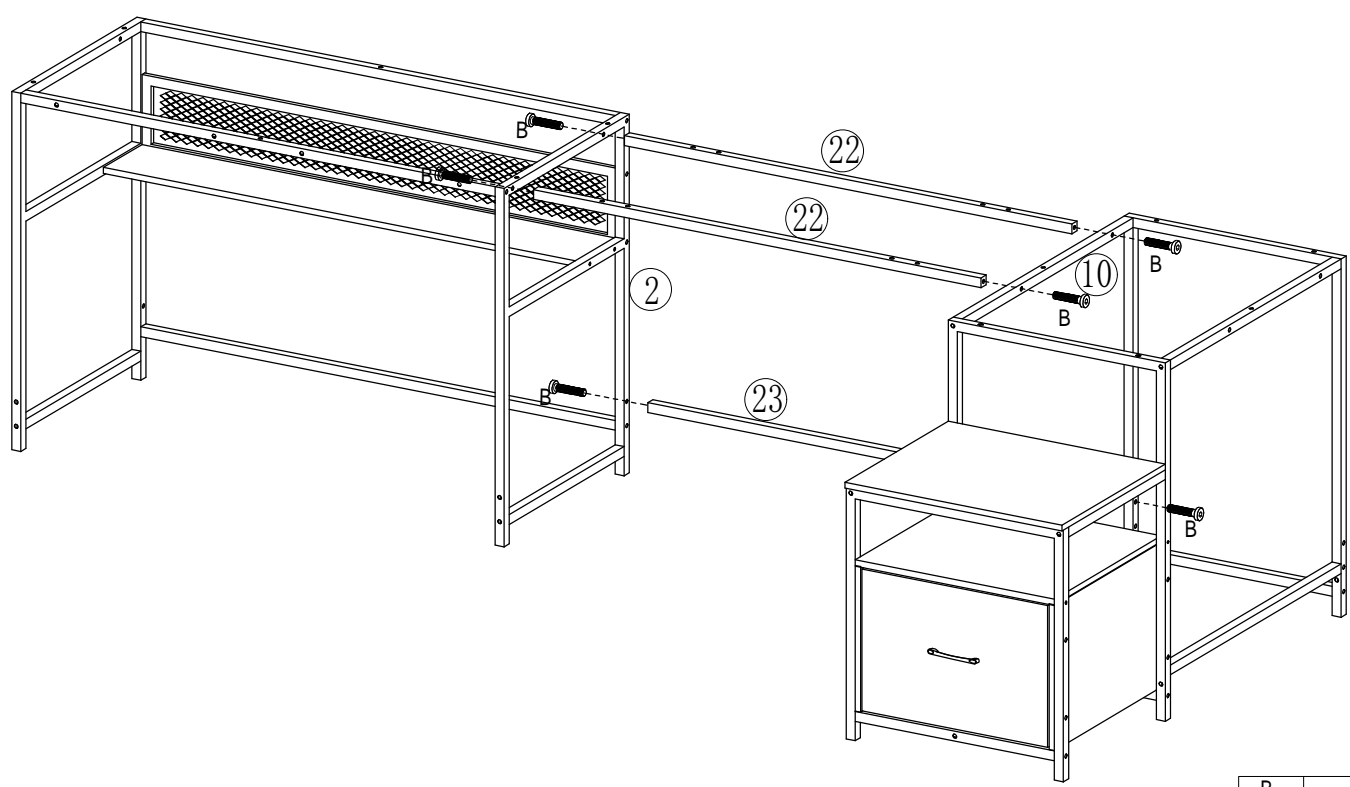


B	×6
	
M6×35mm	

ASSEMBLY INSTRUCTIONS

STEP 25-3

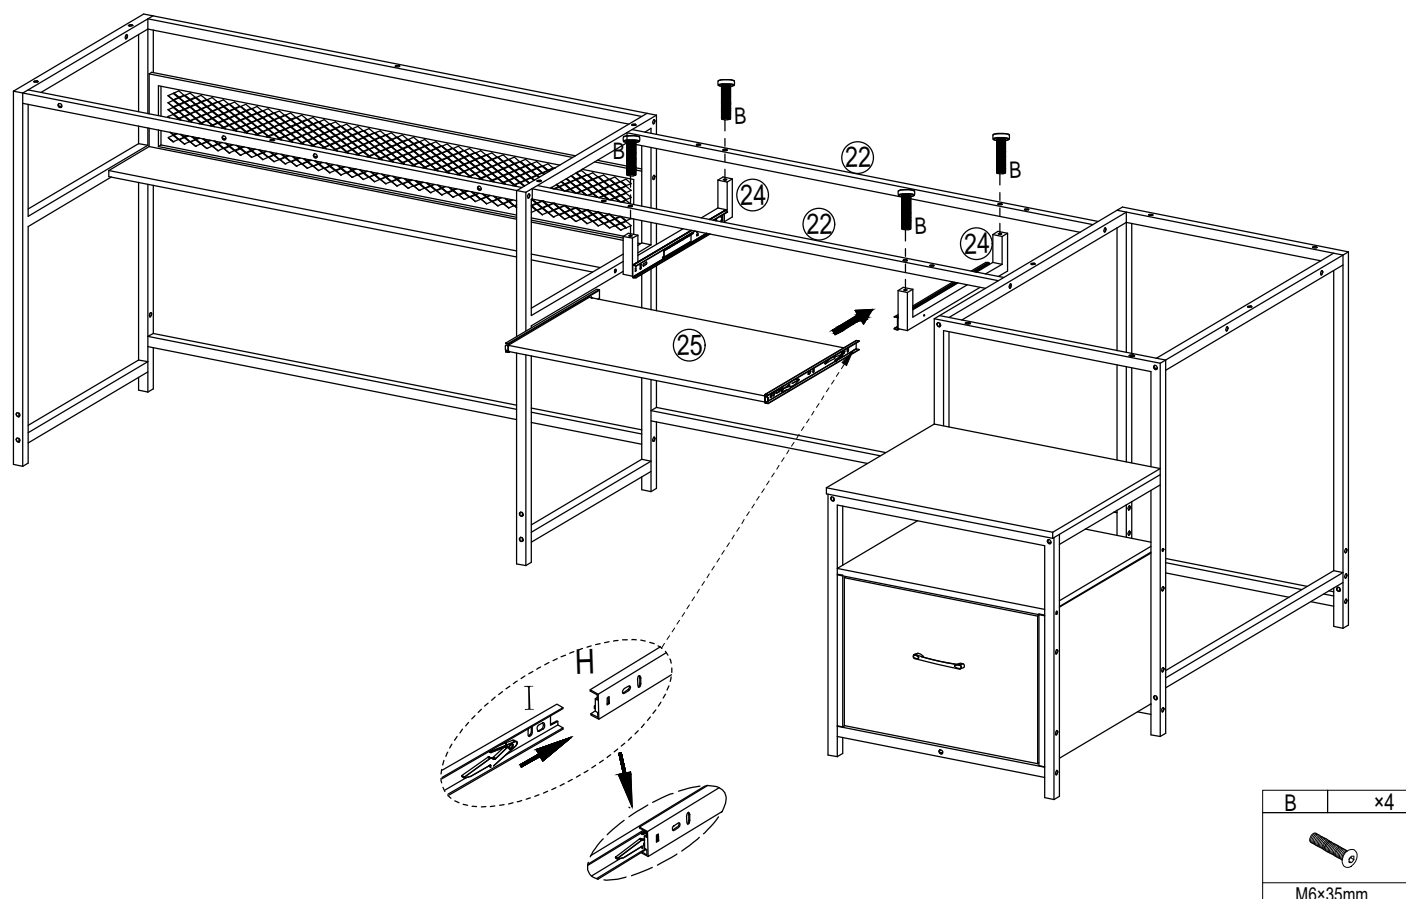


STEP 26-3

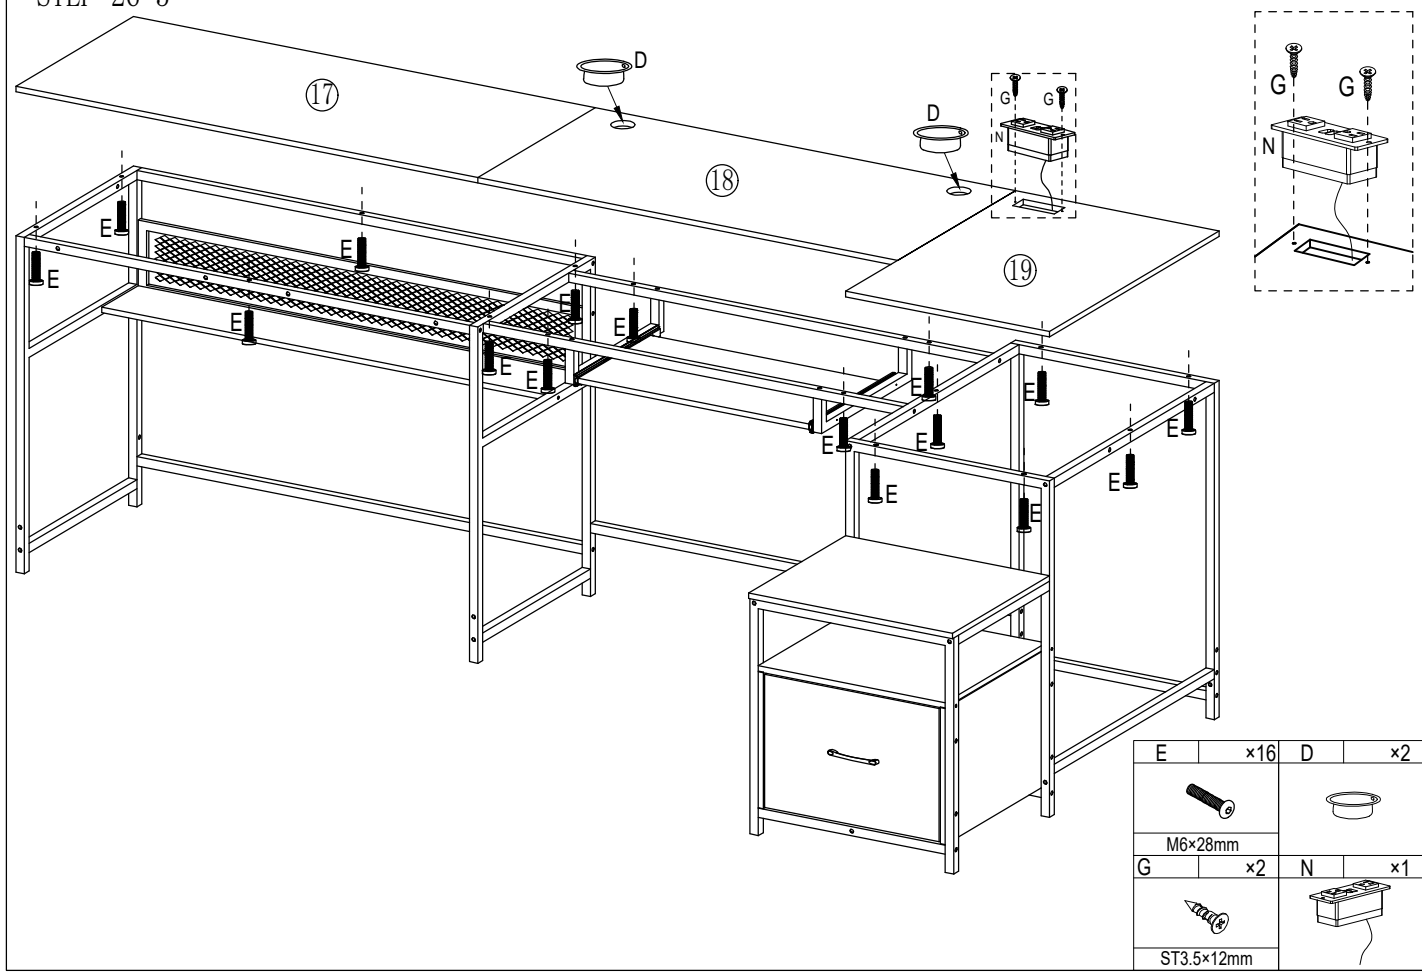

ASSEMBLY INSTRUCTIONS


STEP 27-3

A dowel joint must be inserted between the two boards

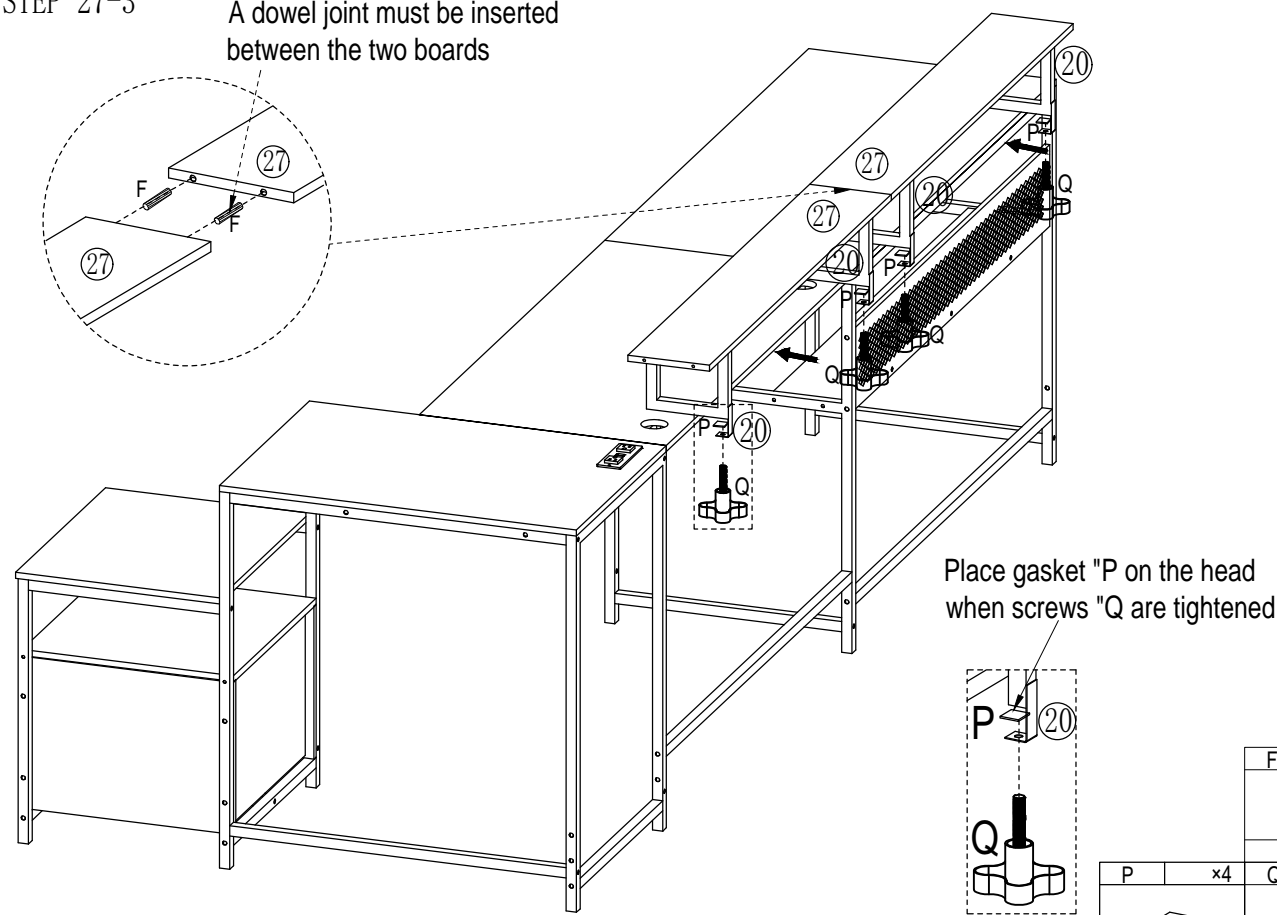


F	x2
6X30mm	
P	x4
Q	x4
M6X30mm	

STEP 28-3

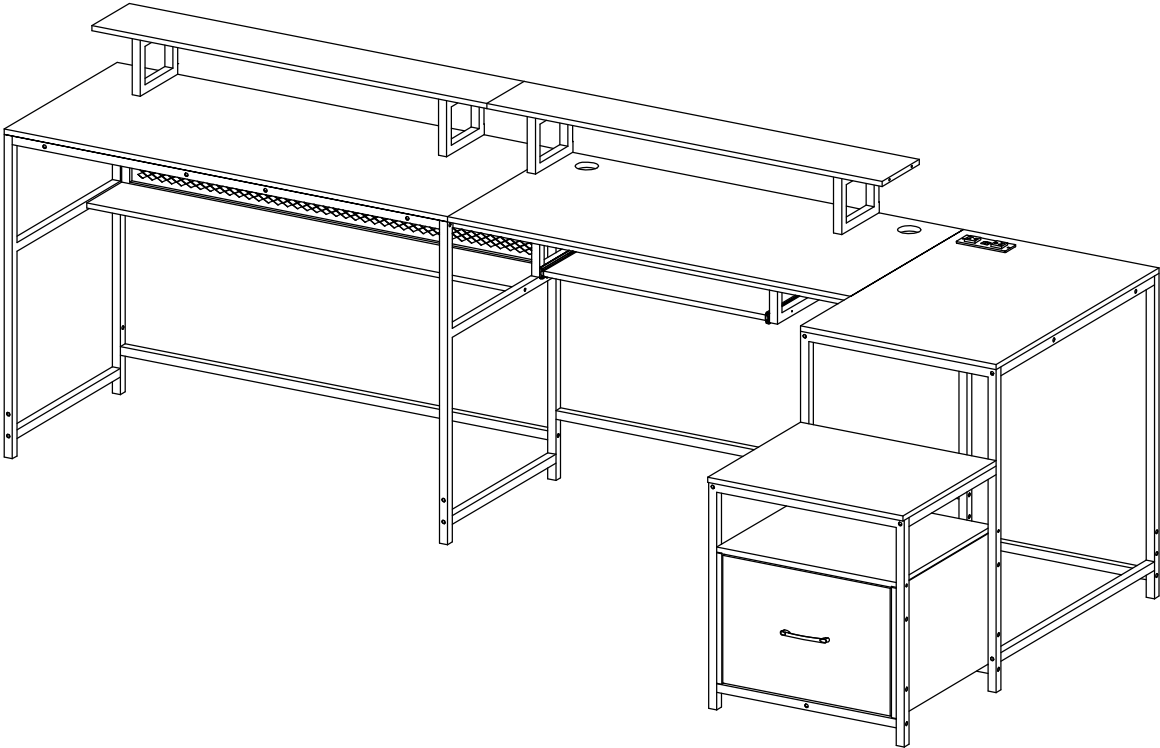

ASSEMBLY INSTRUCTIONS


Installation Option IV

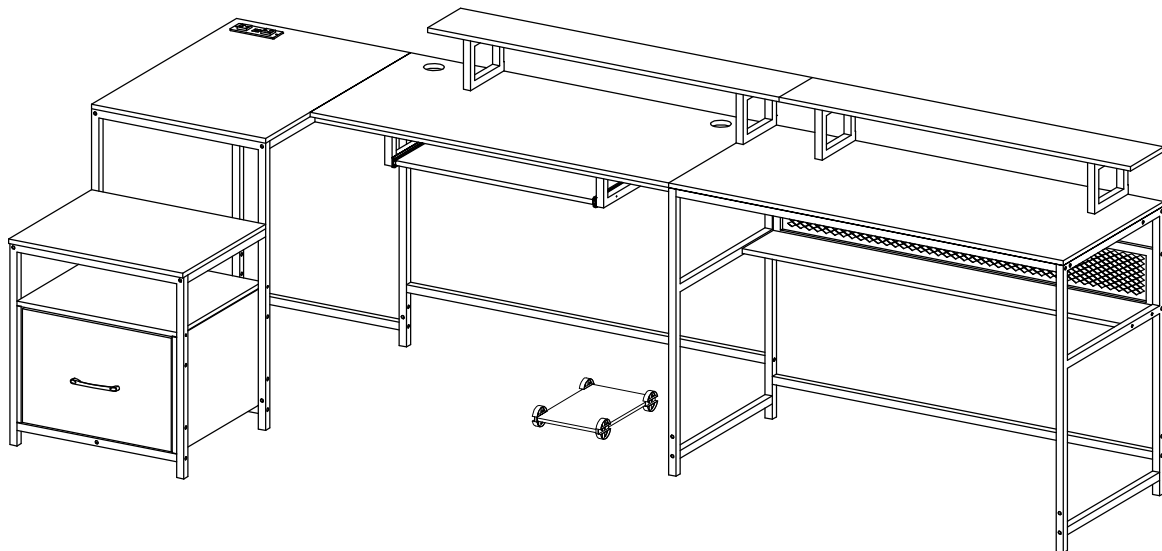


With the basic components of Step1-step22,
the following installation method is the fourth.


ASSEMBLY INSTRUCTIONS


STEP 23-4

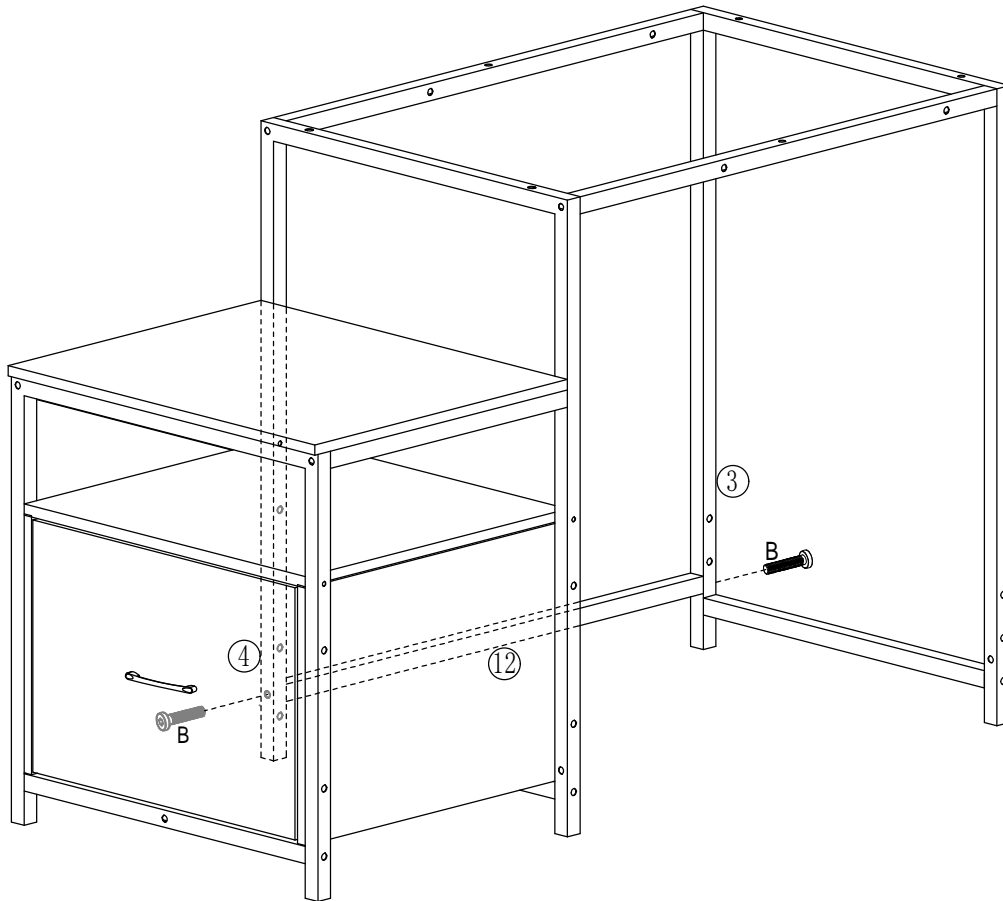

B	×2
	
M6×35mm	


STEP 24-4

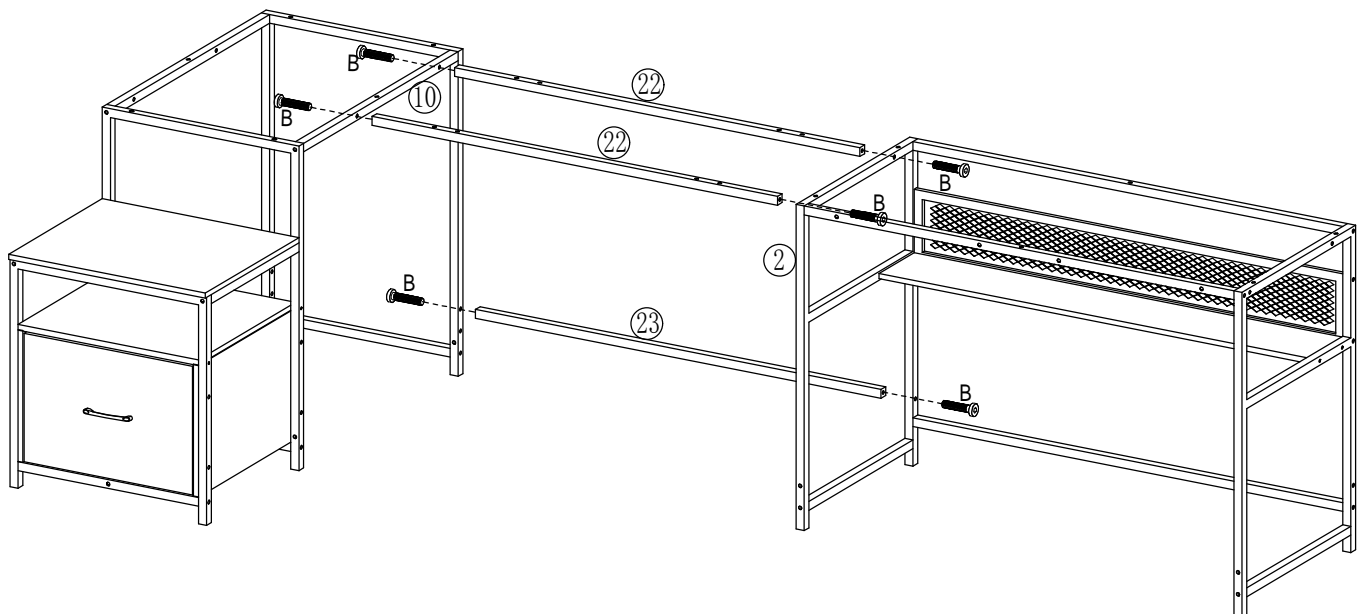


B	×6
	
M6×35mm	


ASSEMBLY INSTRUCTIONS



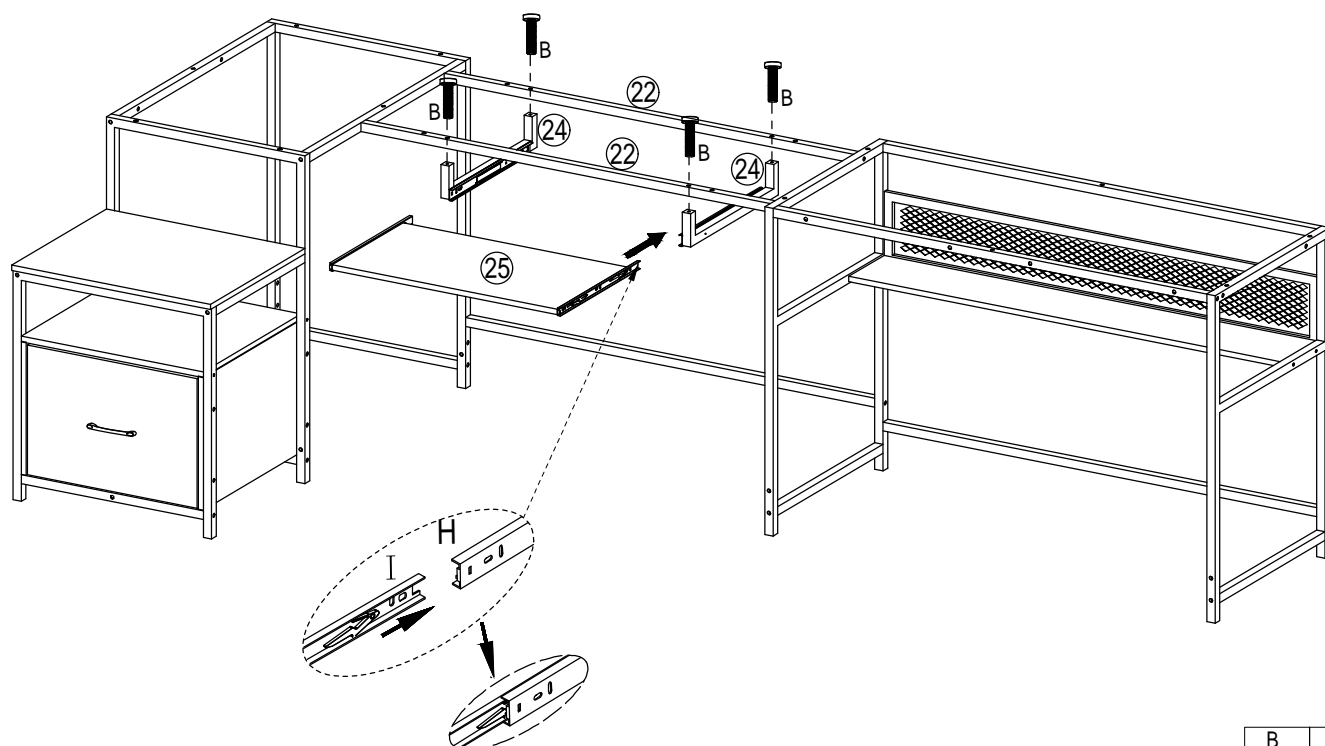

STEP 25-4

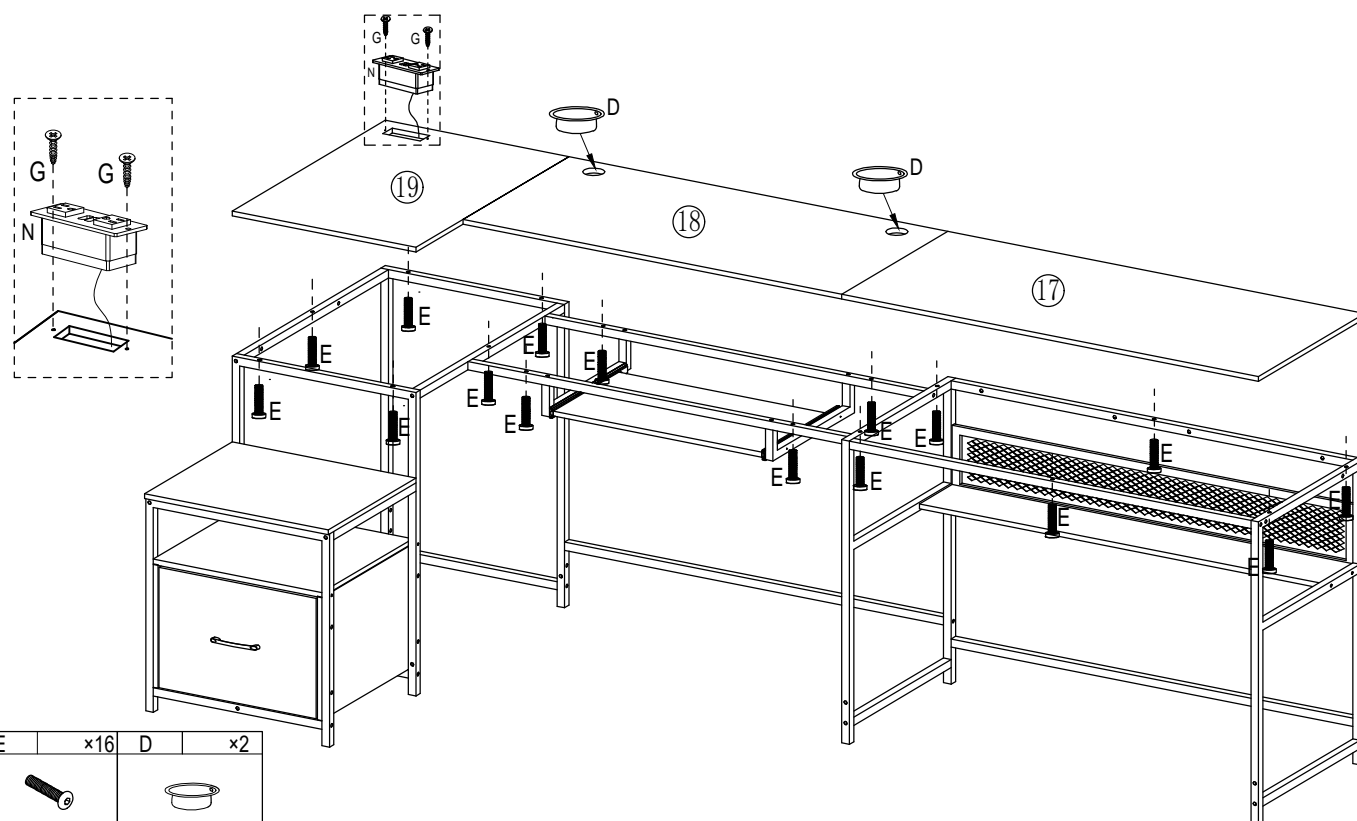

B	x4
	
M6×35mm	



STEP 26-4




E	x16	D	x2
			
M6×28mm			
G	x2	N	x1
			
ST3.5×12mm			




ASSEMBLY INSTRUCTIONS

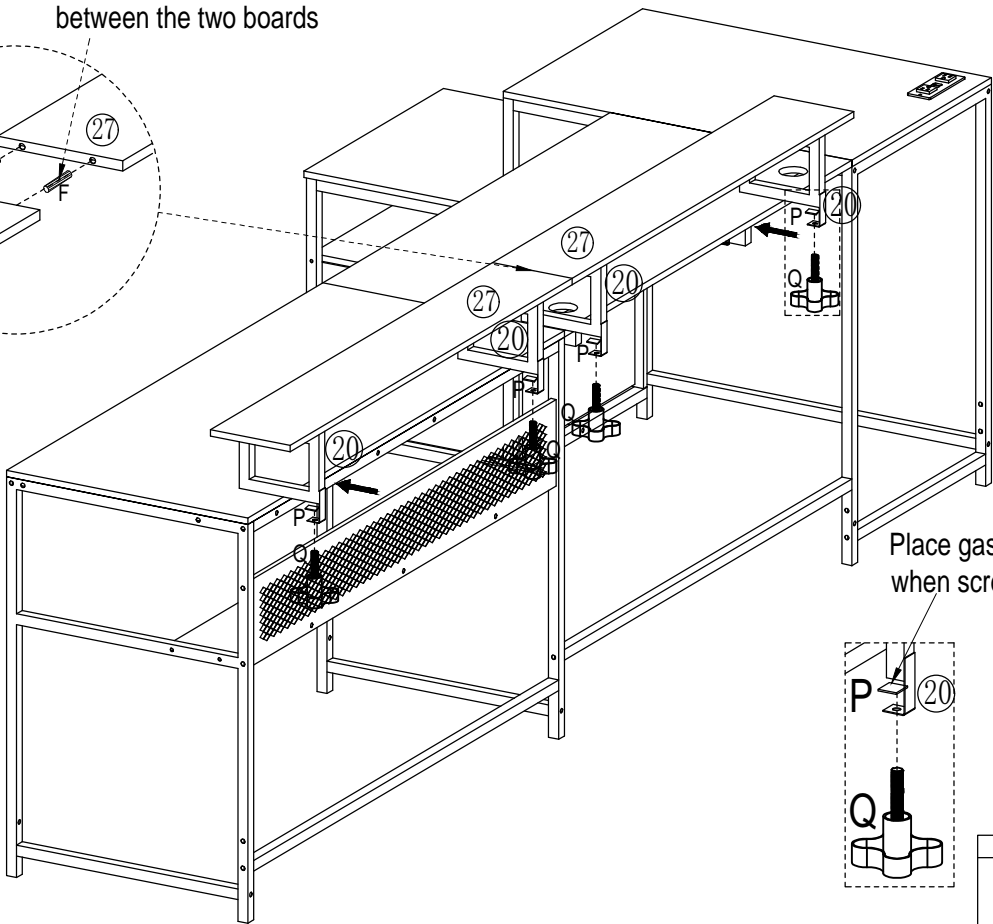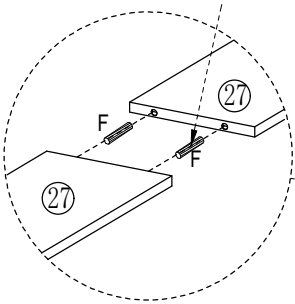STEP 27-4 A dowel joint must be inserted between the two boards



Place gasket "P" on the head when screws "Q" are tightened



F	x2
	
6X30mm	
P	x4
Q	x4
	
	
M6X30mm	

STEP 28-4

