













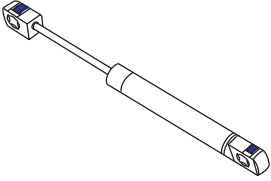

# INSTRUCTION MANUAL ENCLOSED

## CUSHION BOX CUSHION BOX ASSEMBLY INSTRUCTION

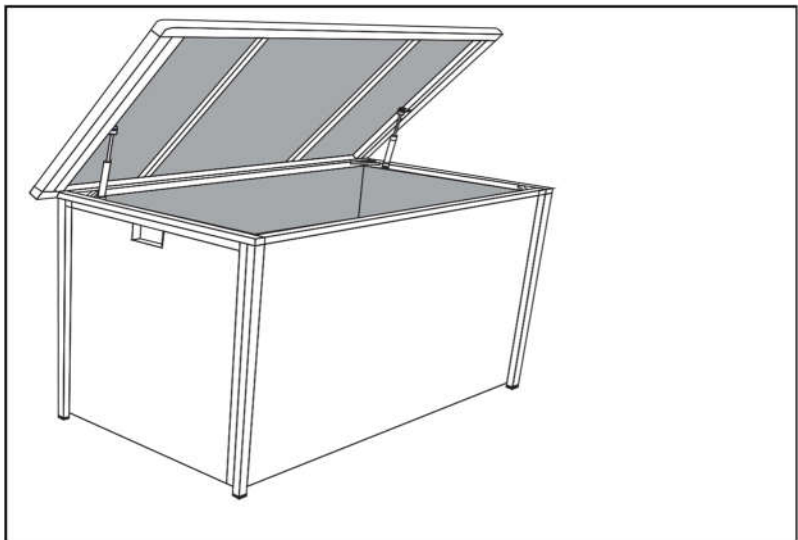

### PARTS LIST

Part	Description	Quantity
<i>PARTS</i>		
A	Front & Back Frame	2
B	Side Frame	2
C	Bottom	1
D	Middle Frame	1
E	Cover	1
F	Canvas	1
<i>HARDWARE</i>		
G	Bolt M6x35mm	12
H	Bolt M6x25mm	16
I	Bolt M6x15mm	12
J	Metal Washer	40
K	Hinge	3
L	Gas Spring	2
M	Allen Key	2
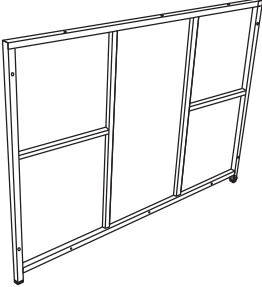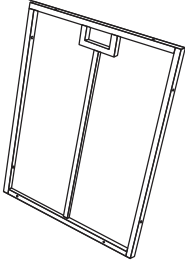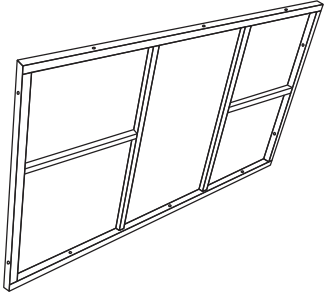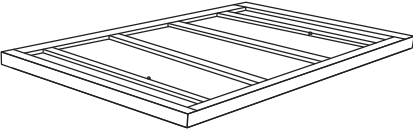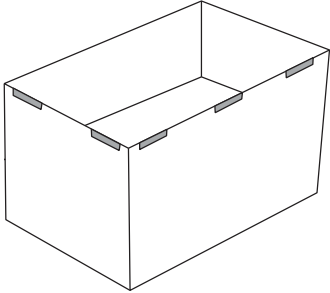
<p>Ax2</p> 	<p>Bx2</p> 	<p>Cx1</p> 
<p>Dx1</p> 	<p>Ex1</p> 	<p>Fx1</p> 
<p>Gx12</p>  <p>M6x35mm</p>	<p>Hx16</p>  <p>M6x25mm</p>	<p>Ix12</p>  <p>M6x15mm</p>
<p>Jx40</p>  <p>M2x6x16</p>	<p>Kx3</p>  <p>M2x37x62</p>	<p>Lx2</p> 
<p>Mx2</p>  <p>M4</p>		

## PLEASE READ AND FOLLOW ALL SAFETY TIPS


### GETTING STARTED

1. Before assembly, CAREFULLY use scissors or utility knife to cut and unwrap all parts. Make sure you do not discard the hardware.
2. Make sure that you have all the parts listed. If you are missing any parts, please call Customer Service.


### Warm Tips:

1. The plastic covers on some metal parts are just for product protection, Please remove it before assembly.
2. Please follow the sequence of AI during assembly.
3. Do not tighten the screws until all of them are in right positions.


1. Position front & back frame (A) and the side frame (B) by the pre-drilled threads. Use Allen Key (M) to fasten Bolts (G) with Washers (J). Each frame should have 2 bolts fastened. (Photo 1&2), Do not tighten bolts.

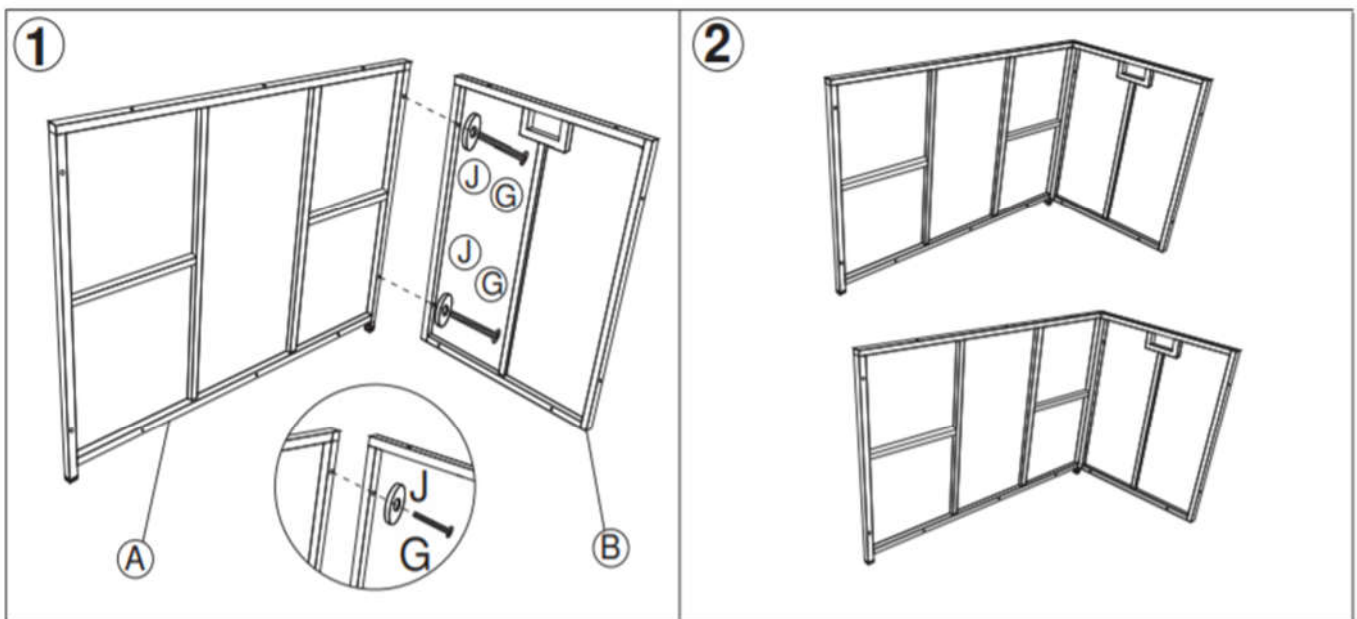


2. Align frame (1) to frame (2) by the pre-drilled threads. Use Allen Key (M) to fasten Bolts (G) with Washers (J). Each frame should have 2 bolts fastened. (Photo 3&4), Do not tighten bolts.

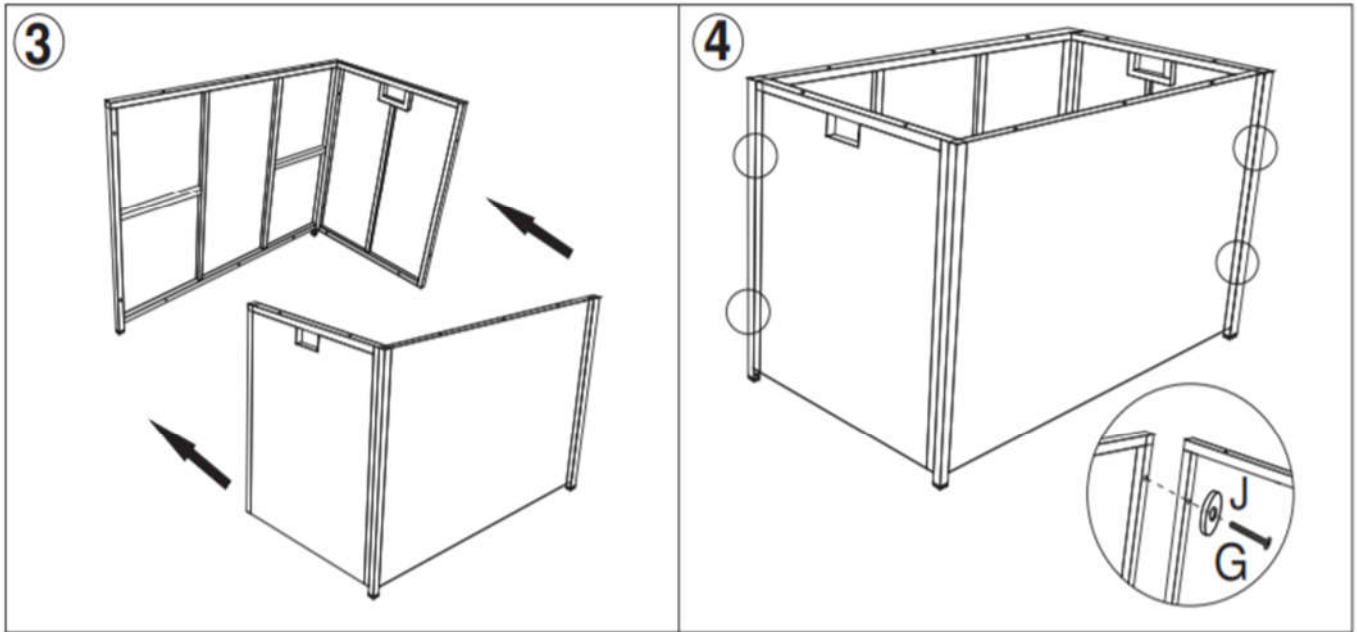


3. Plug bottom frame (C) onto the frame body (4) (photo 5), Do not tighten bolts.

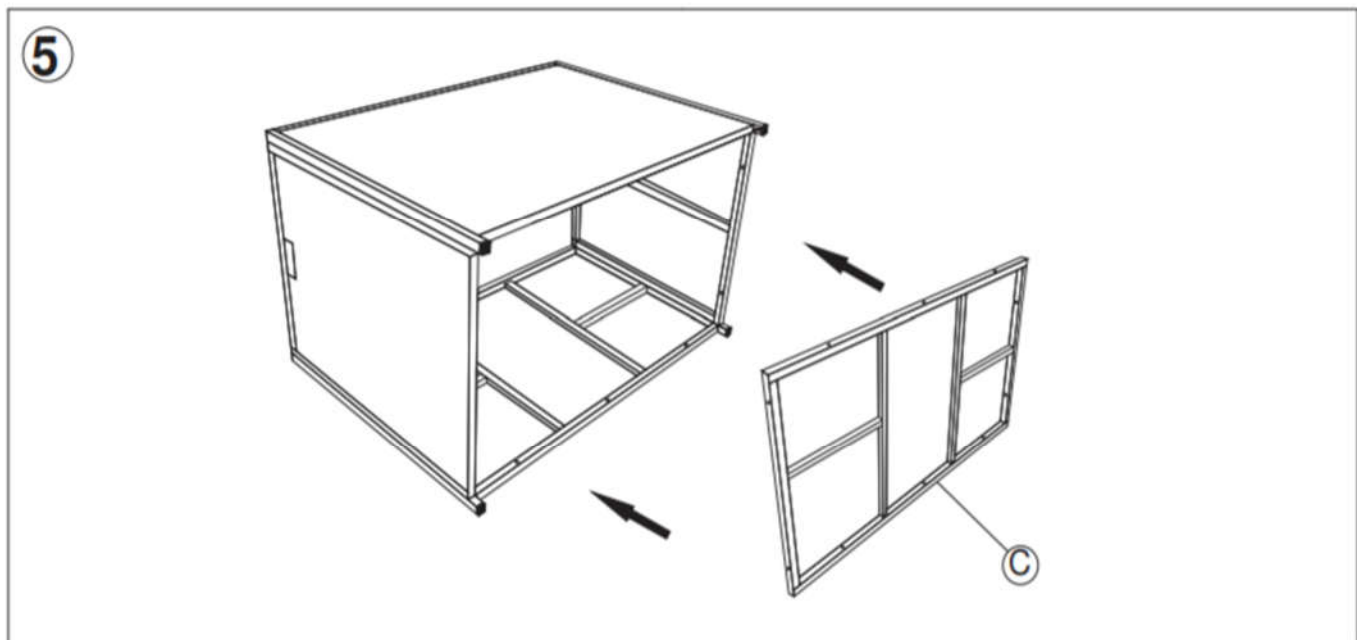


4. Use Allen Key (M) to fasten Bolts with Washers (J). Long side should have 6 bolts (H) fastened and the short side should have 4 bolts (G) fastened. (Photo 6), Do not tighten bolts.

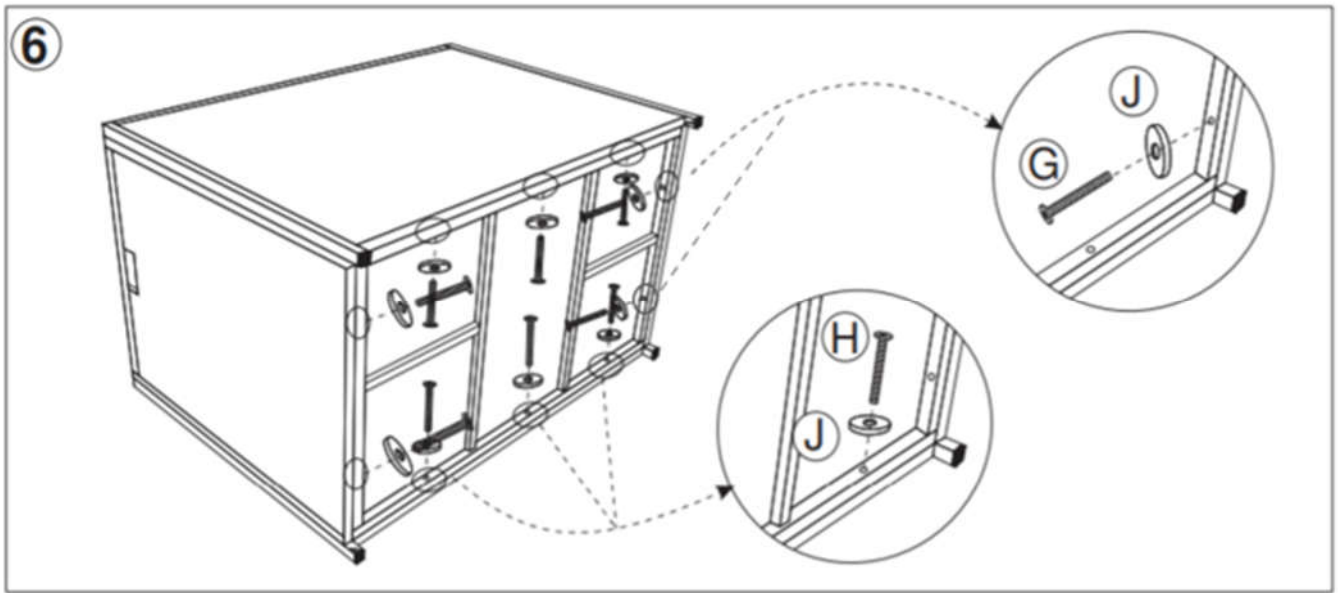


5. Plug the Middle Frame (D) onto the frame body (6) (photo 7). Use Allen Key (M) to fasten Bolts with Washers (J). It should have 10 bolts (H) fastened. (Photo 8), Do not tighten bolts.

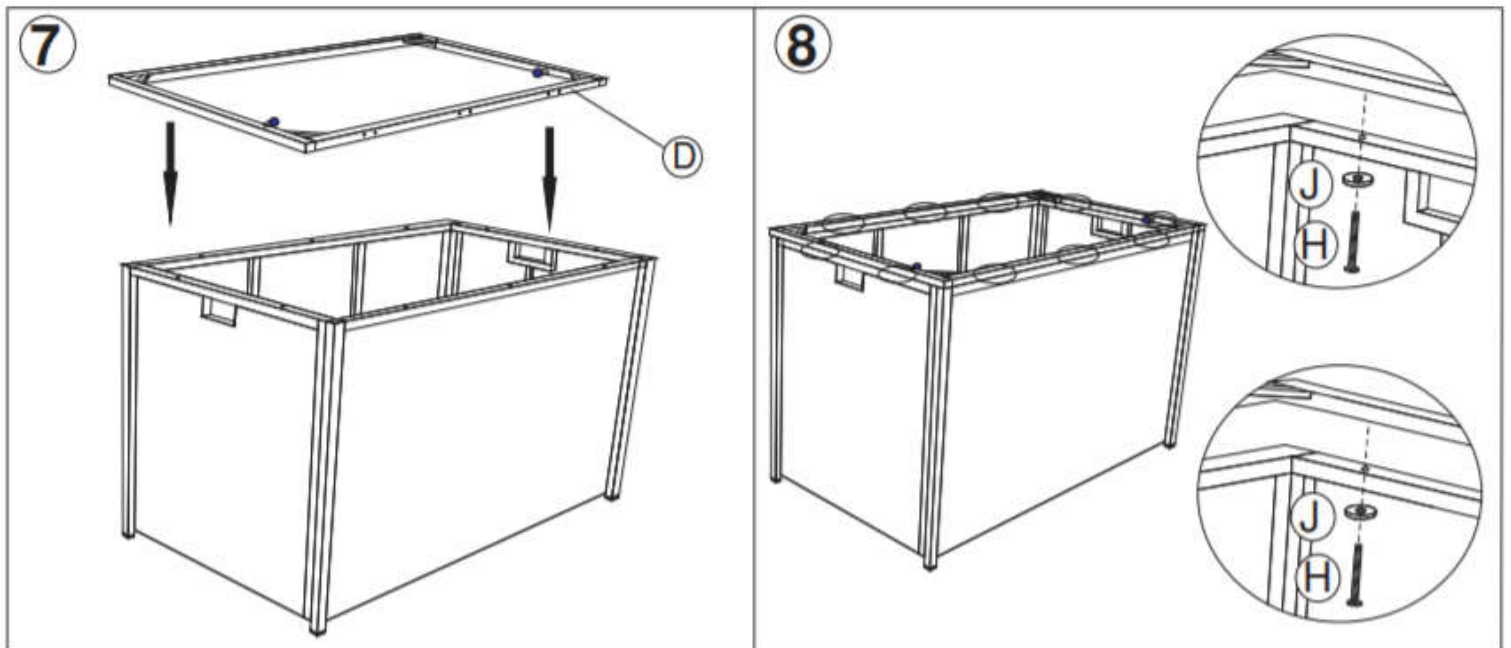



6. Attach the hinge (3pcs) onto the side of the cover (E) (photo 9) and then the long side of frame body. (photo 10), Do not tighten bolts.

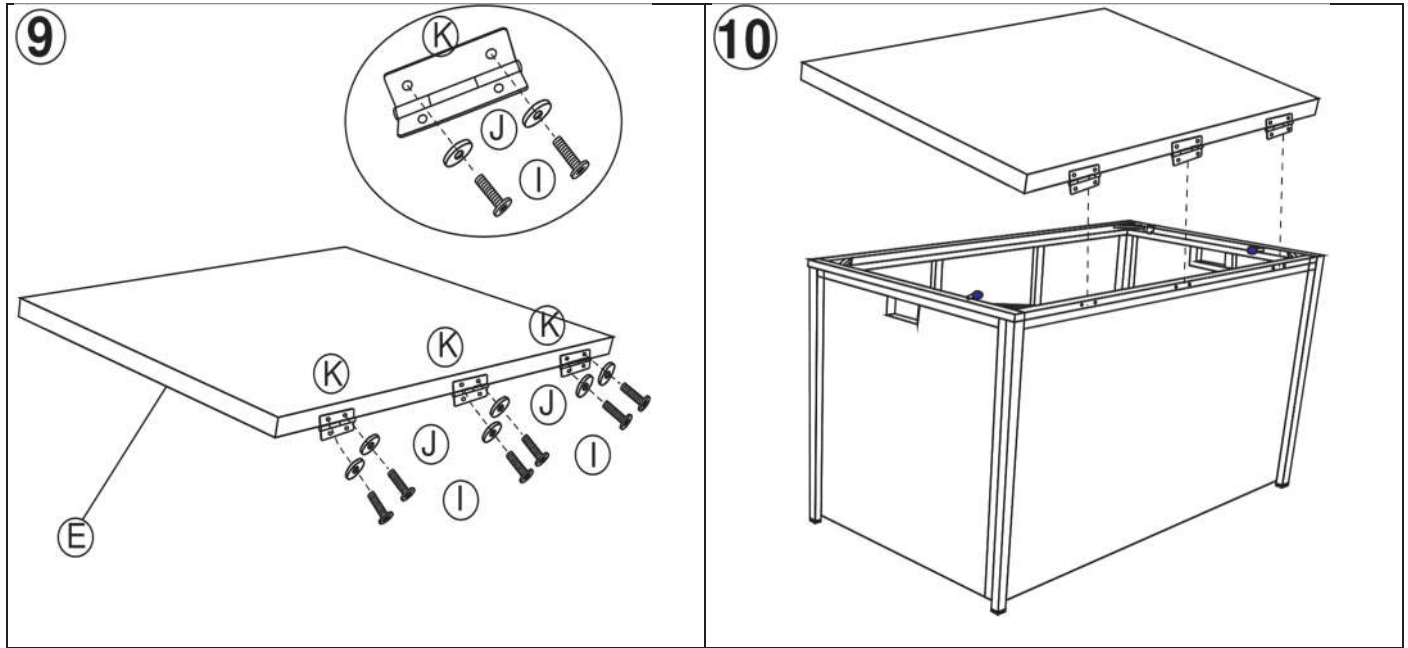

7. Use Allen Key (M) to fasten Bolts (I) with Washers (J) (photo 11), Do not tighten bolts.



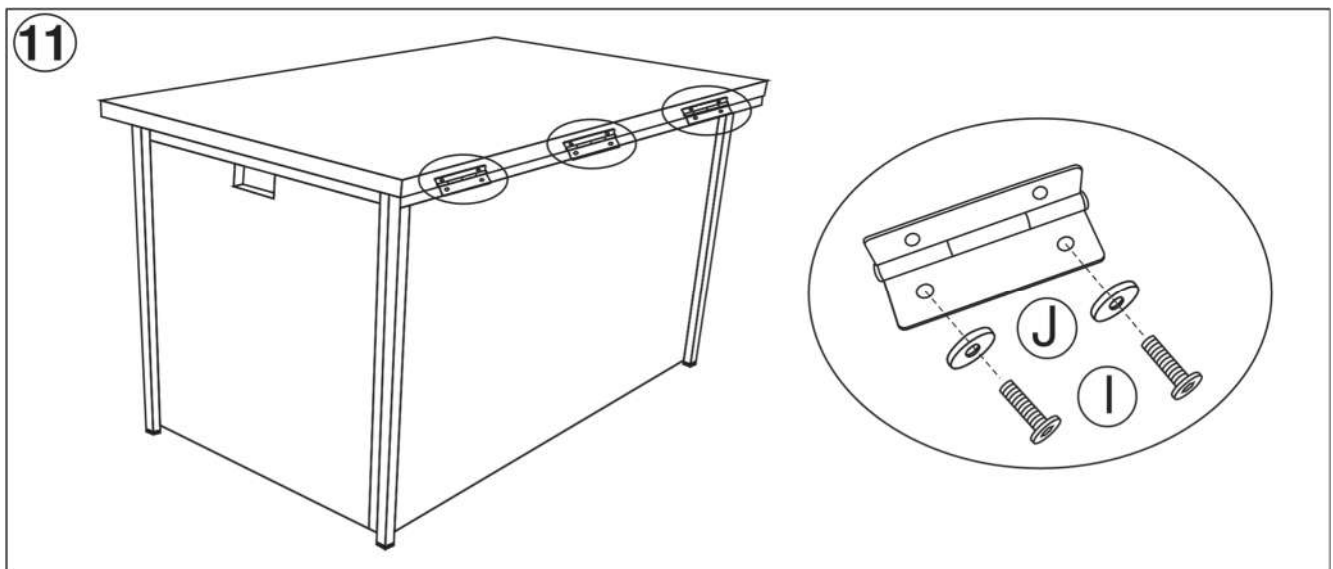


8. Plug Gas spring (2pcs) inside the cover and the frame body (photo 12 & 13). Now Tighten all bolts.

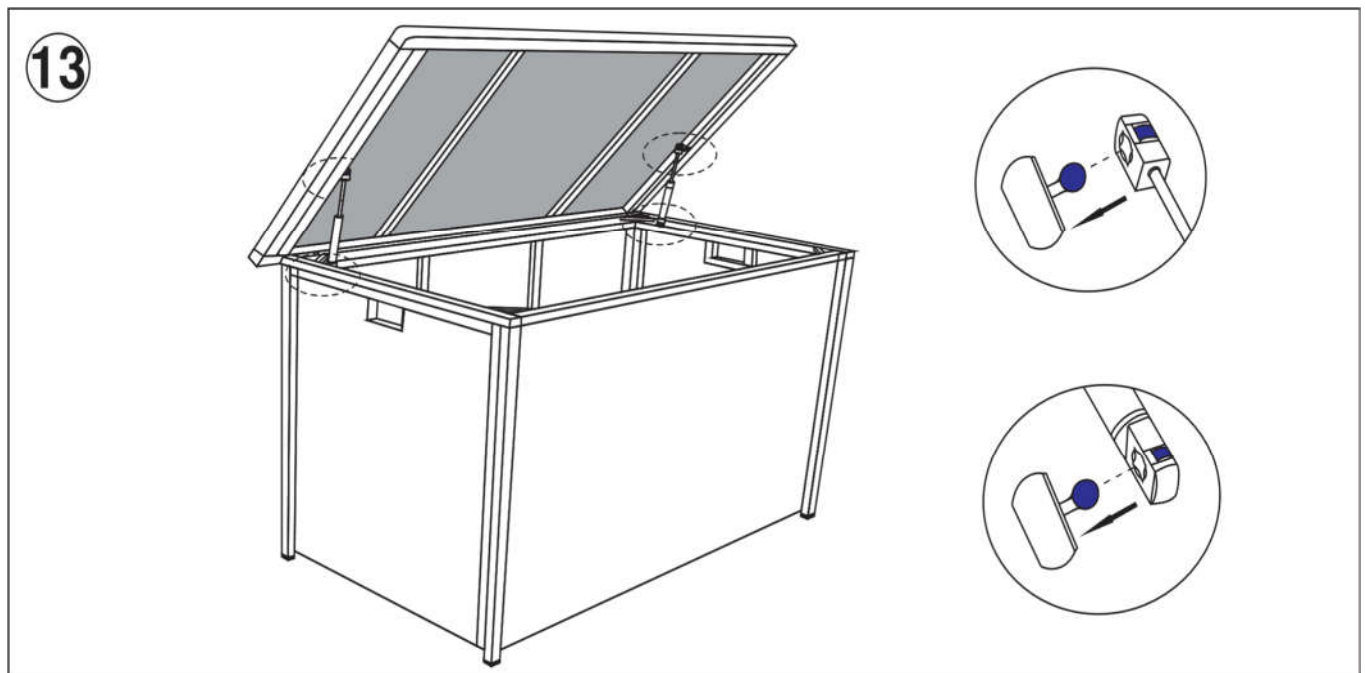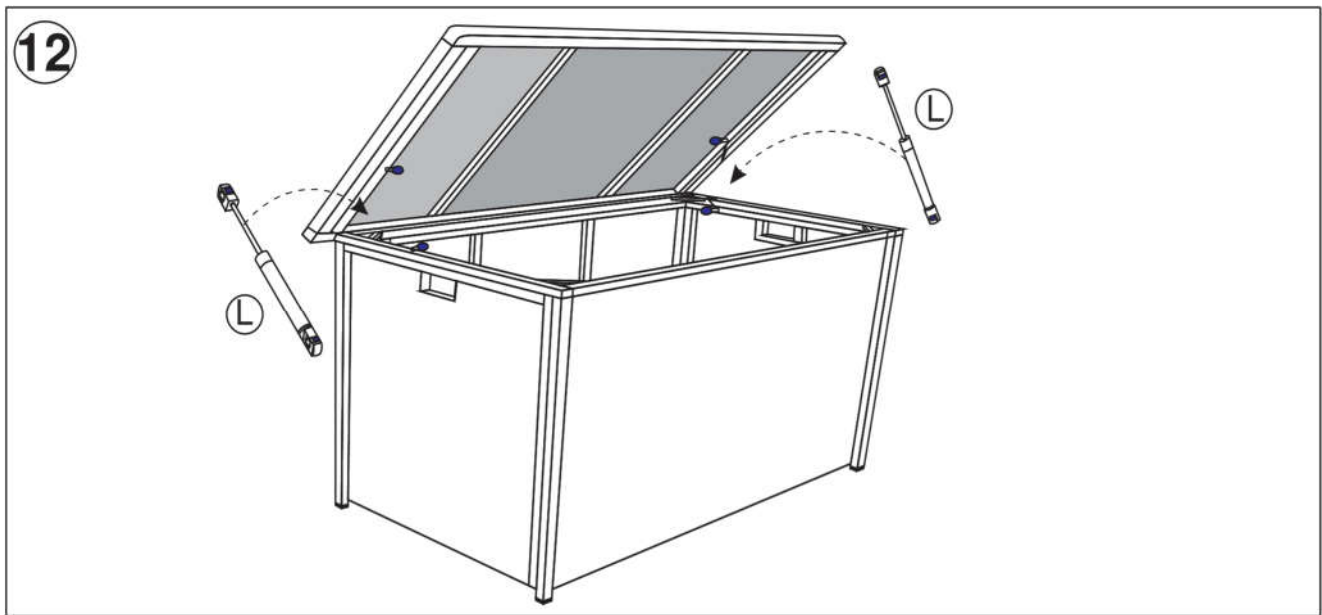



9. Align canvas (F) inside the box. (photo 14 & 15)

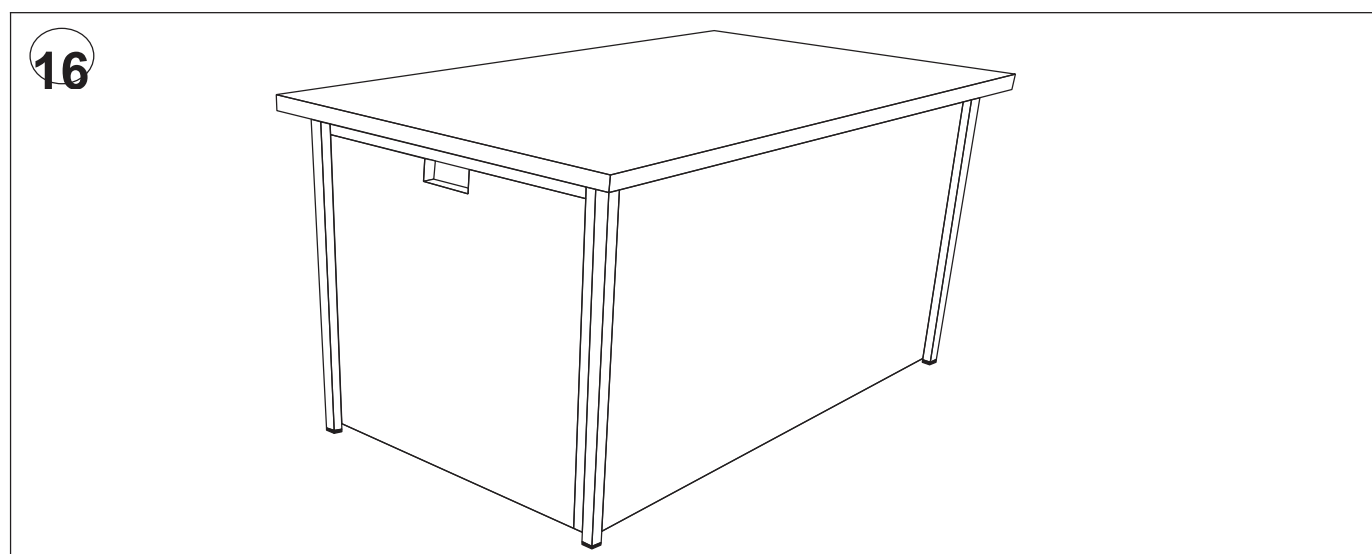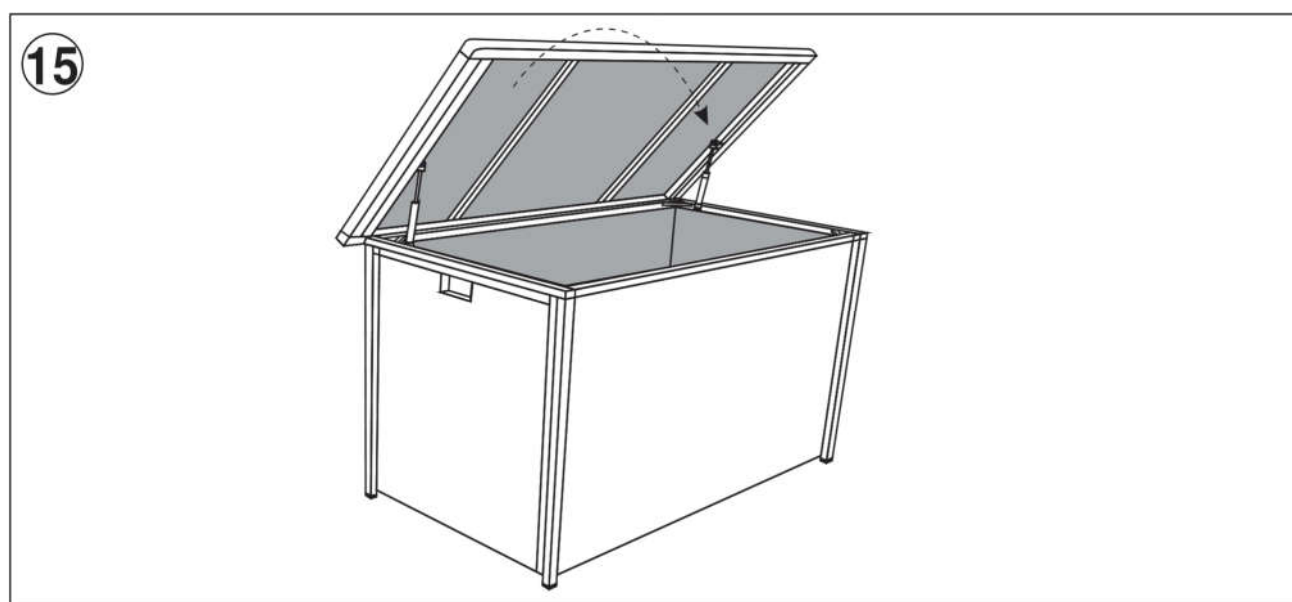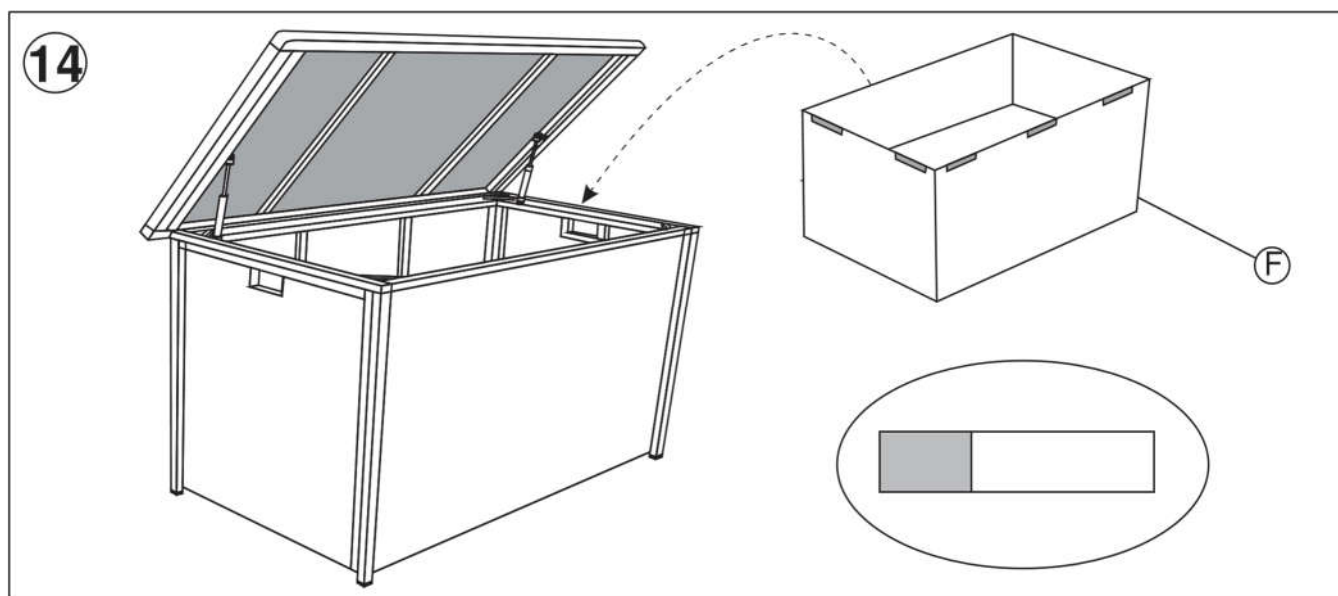

You have completed assembling the furniture – enjoy!