

ASSEMBLY INSTRUCTIONS

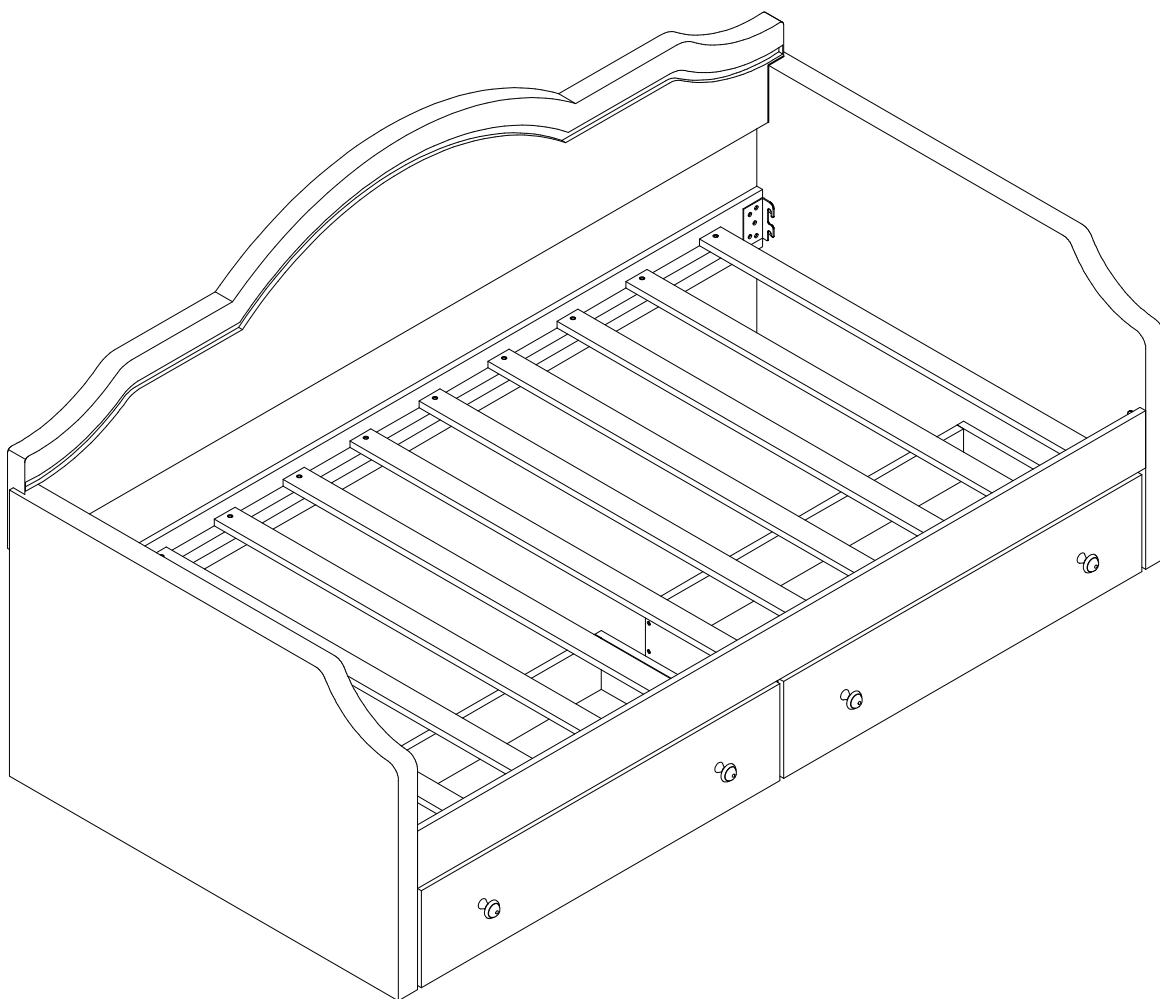
INSTRUCTIONS DE MONTAGE

TWIN BED

LIT JUMEAU

This set included 2 boxex if do not receive full 2 boxex. Please contact our customer service team


Cet ensemble comprenait 2 boxex si vous ne recever pas 2 boxex complets. veuillez contacter notre service client



N709P323196 / N709P323197





Detail View

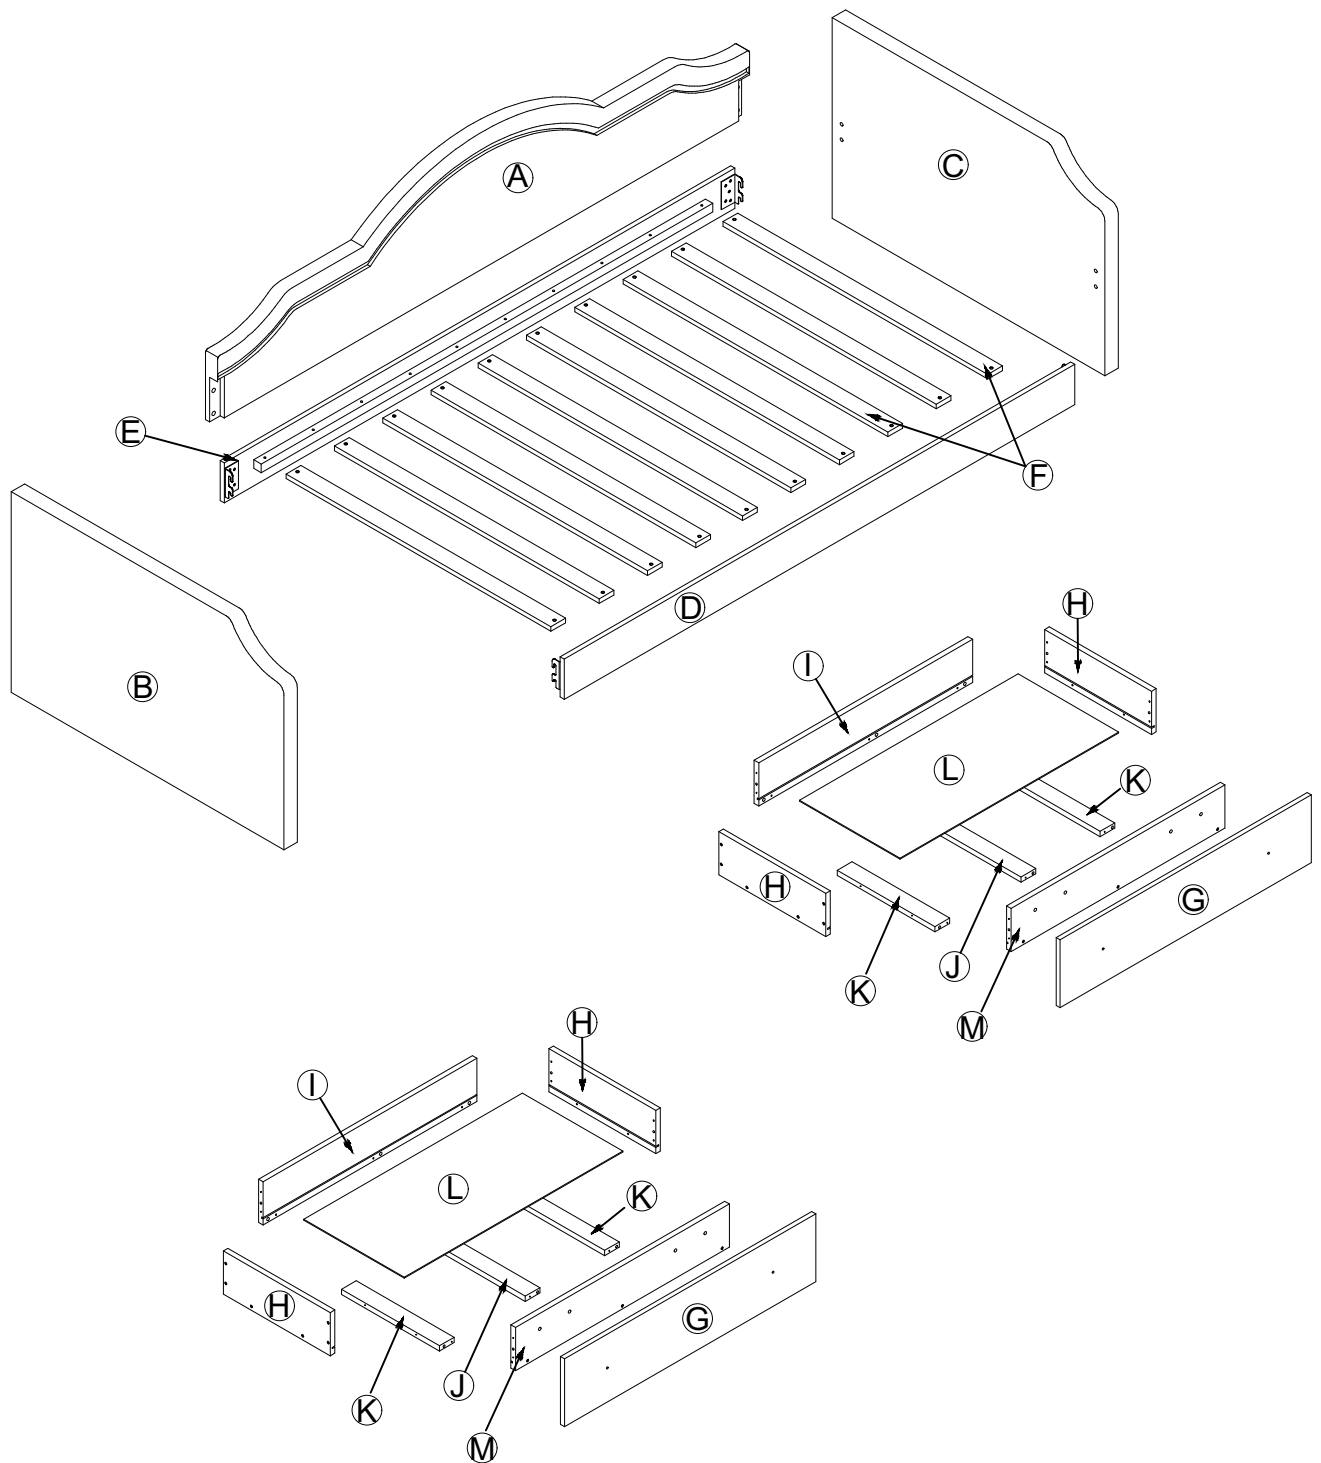Vue Détaillée










Part List for(N709P323197)

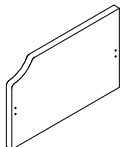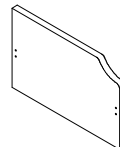Liste des Pièces

B  Left Panel - 1PC Panneau gauche	C  Right Panel - 1PC Panneau droit	F  Slats - 10PCS Lattes
L  Drawer Bottom Panel - 2PCS Panneau inférieur du tiroir	G  Drawer Front Panel - 2PCS Façade de tiroir	





Part List for(N709P323196)

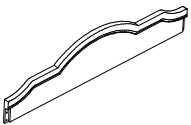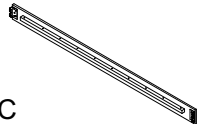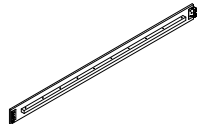Liste des Pièces

A  Back Panel - 1PC Panneau arrière	D  Front Panel - 1PC Panneau avant	E  Back Rail - 1PC Traverse arrière
M  Drawer Front Panel - 2PCS Façade de tiroir	H  Drawer Side Panel - 4PCS Panneau latéral du tiroir	I  Drawer Back Panel - 2PCS
J  Drawer Support Mid Strip - 2PCS Bande de support centrale du tiroir	K  Drawer Support Strip - 4PCS Bande de support du tiroir	


Hardware List (N709P323196)

Liste des Accessoires

1	 5/16*20mm Hex-Head bolts (8pcs) Boulons à tête hexagonale	2	 5/16*30mm Hex-Head bolts (4pcs) Boulons à tête hexagonale	3	 5/16*50mm Hex-Head bolts (4pcs) Boulons à tête hexagonale
4	 5/16 Lock washer (16pcs) Rondelle élastique	5	 5/16*19mm Flat washer (16pcs) Rondelle plate	6	 4mm Allen Key (1pc) Clé hexagonale
7	 Ø4*30mm Screw (20pcs) Vis	8	 Ø4*15mm Screw (20pcs) Vis	9	 Wheel (8pcs) Roue
10	 5/32*20mm Screw (4pcs) Vis	11	 Handle (4pcs) Poignée	12	 Ø4*40mm Screw (36pcs) Vis
13	 Ø8*30mm Wooden Dowel (20pcs) Cheville en bois	14	 50*20*4mm Drawer stopper (4pcs) Butée de porte		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

OUTILS D'ASSEMBLAGE REQUIS (NON INCLUS)



(Phillip head screwdriver)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

NE PAS UTILISER DES OUTILS ÉLECTRIQUES POUR ASSEMBLER CE PRODUIT !


Step 1 :

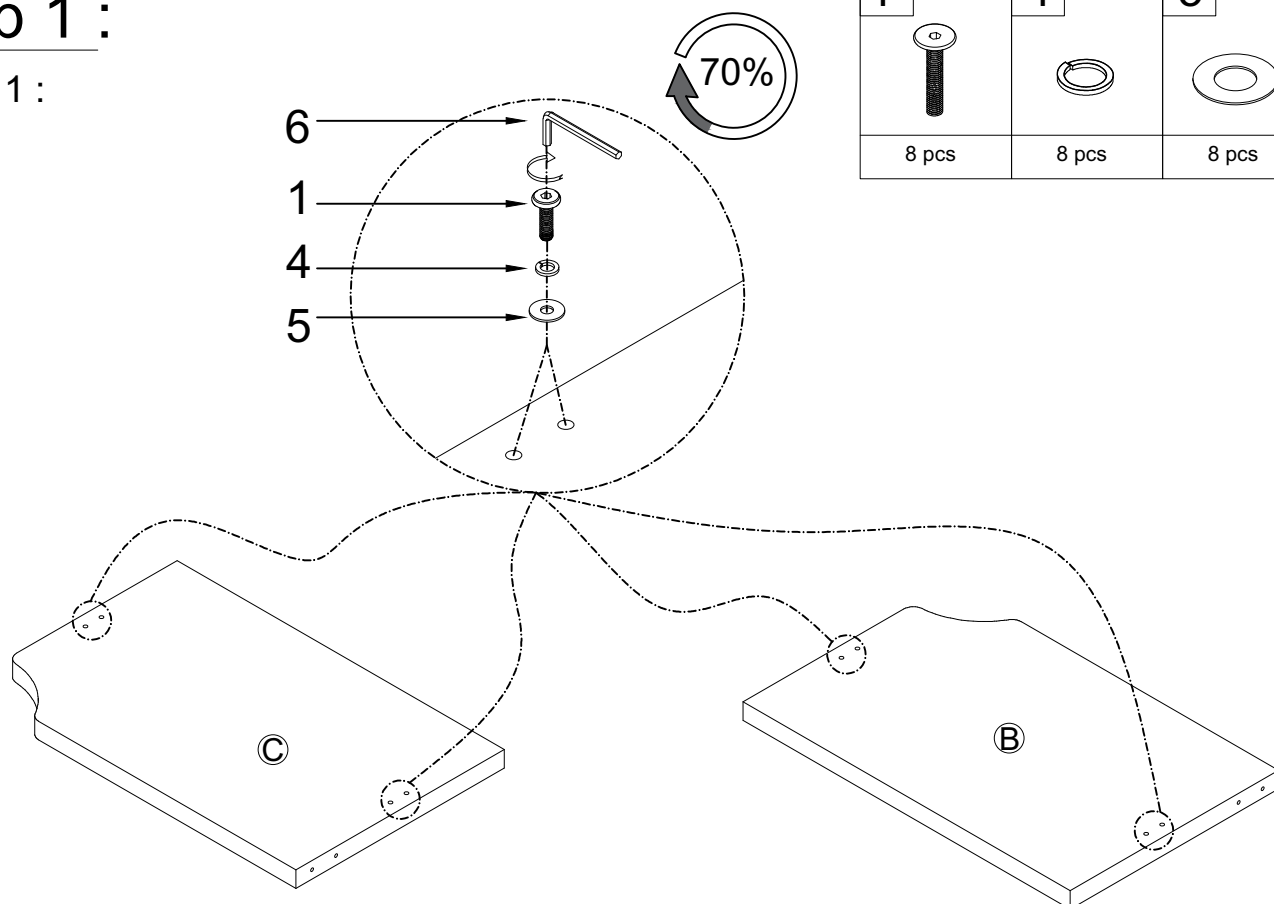Étape 1 :




Step 2 :

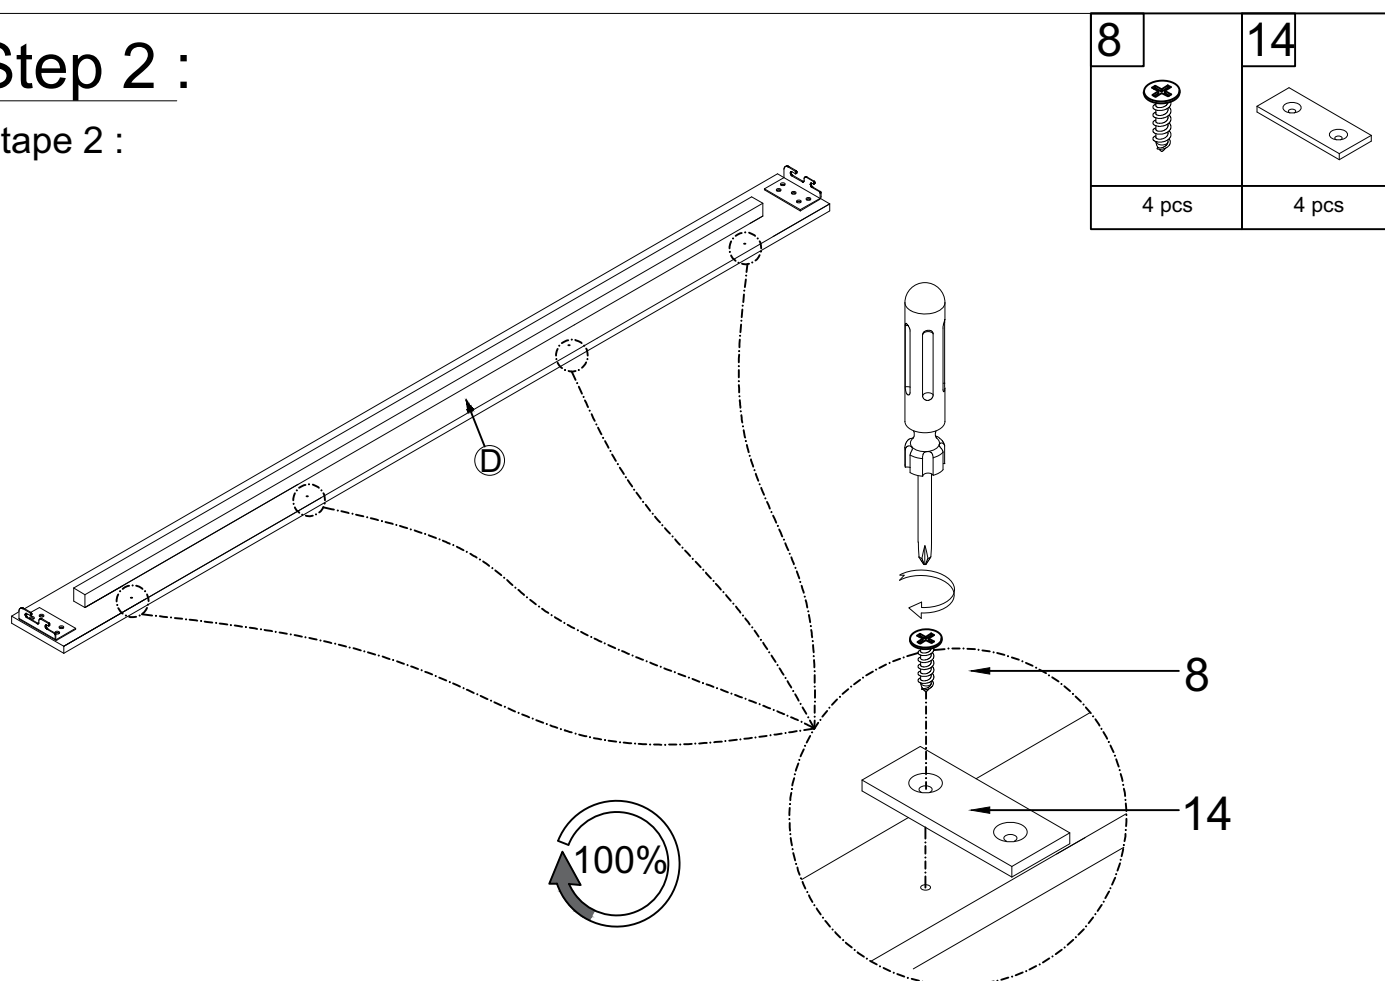Étape 2 :



Step 3 :

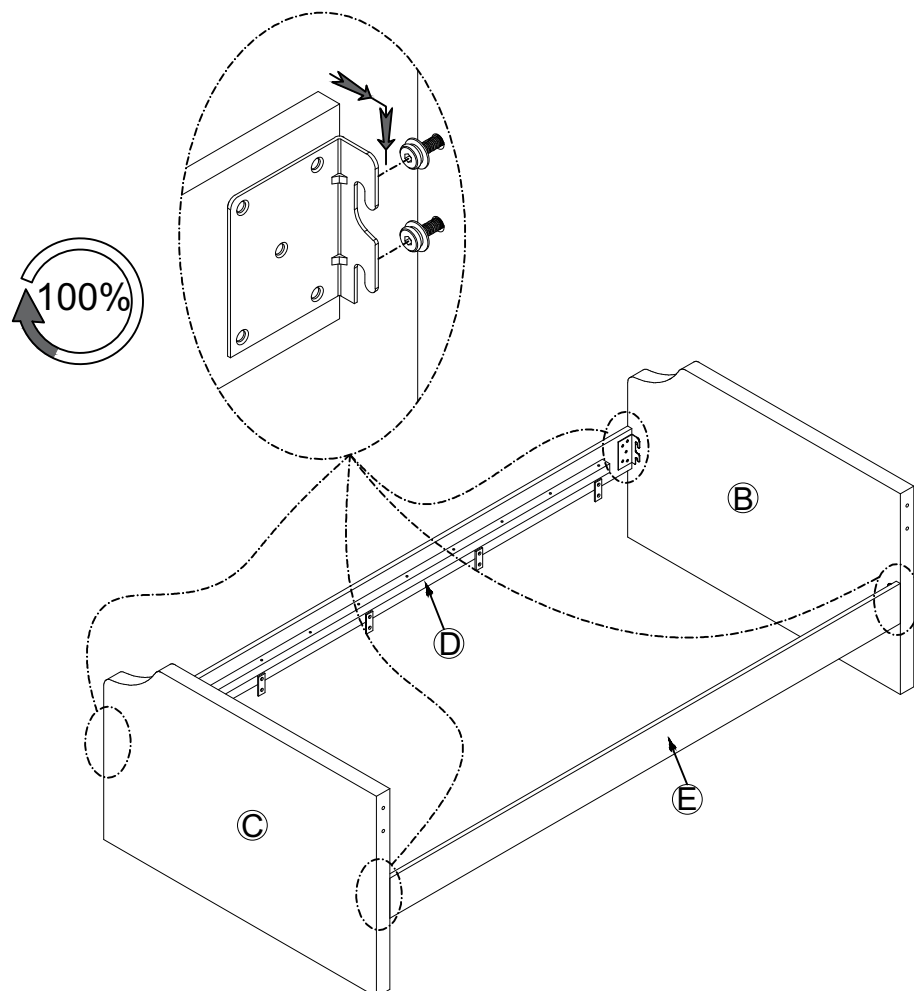
Étape 3 :



Step 4 :

Étape 4 :

3	4	5
		
4 pcs	4 pcs	4 pcs

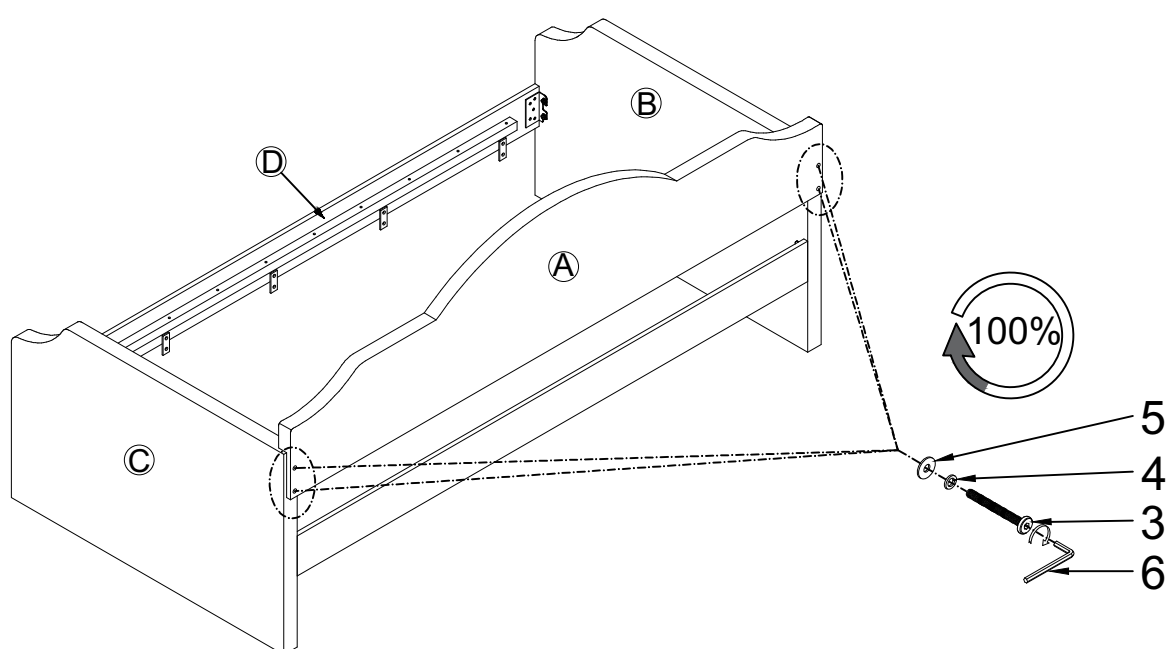


Step 5 :

Étape 5 :

7



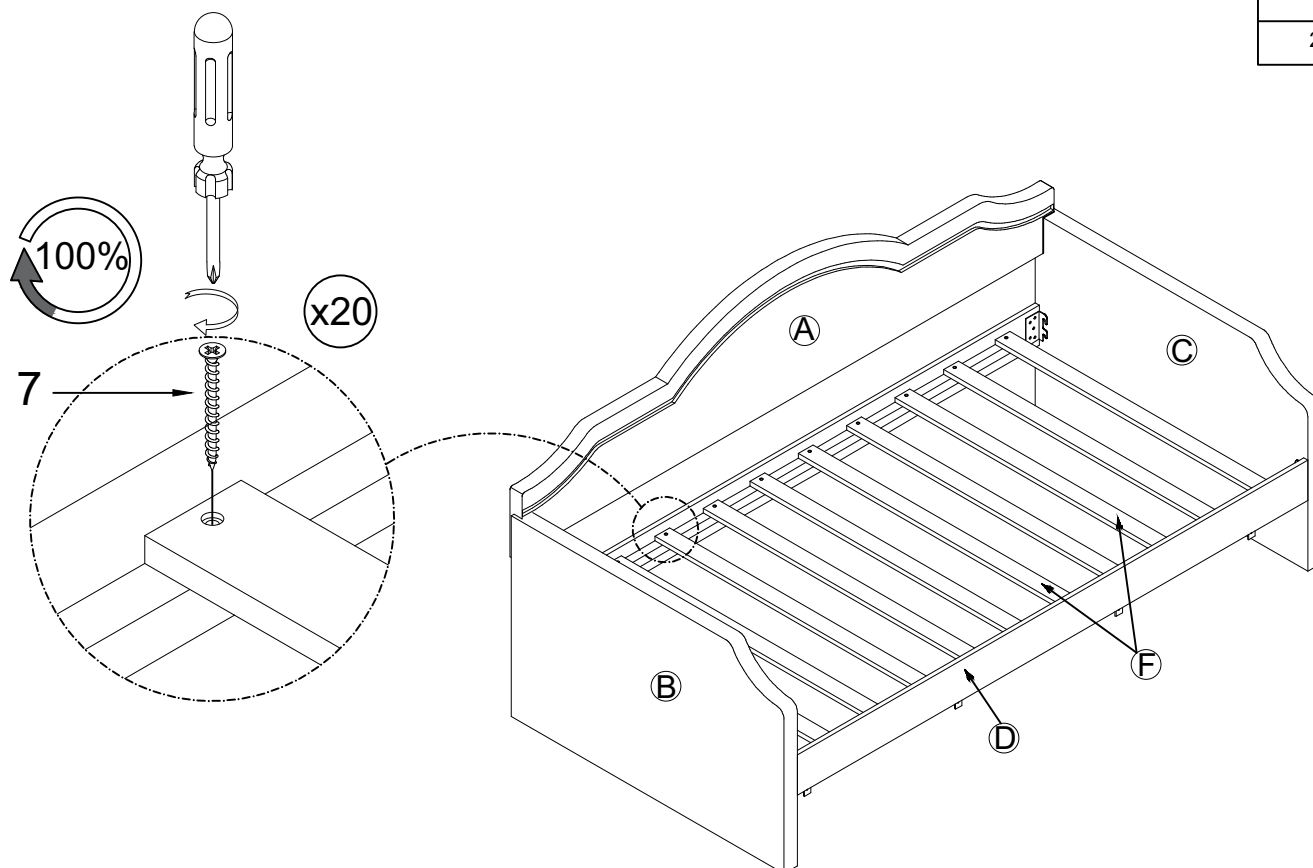20 pcs



Step 6 :

Étape 6 :

10

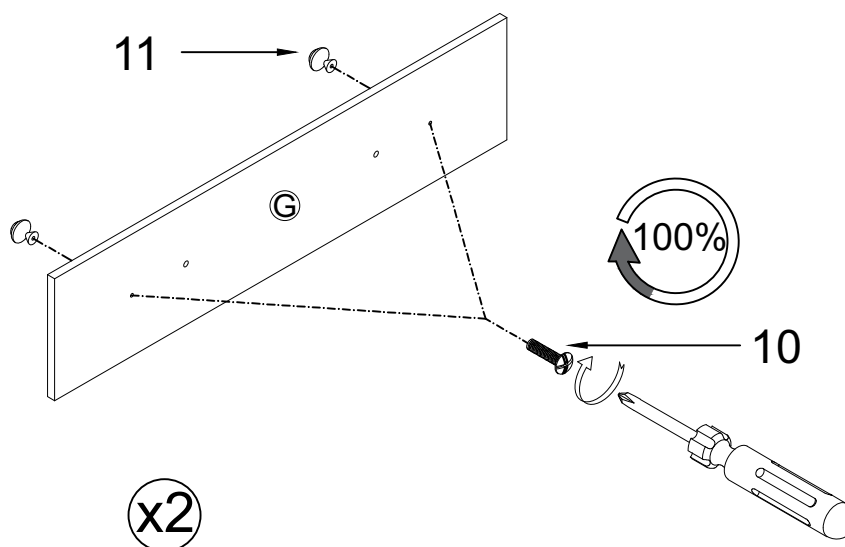


4 pcs

11




4 pcs



Step 7 :

Étape 7 :


13	12
	
12 pcs	12 pcs

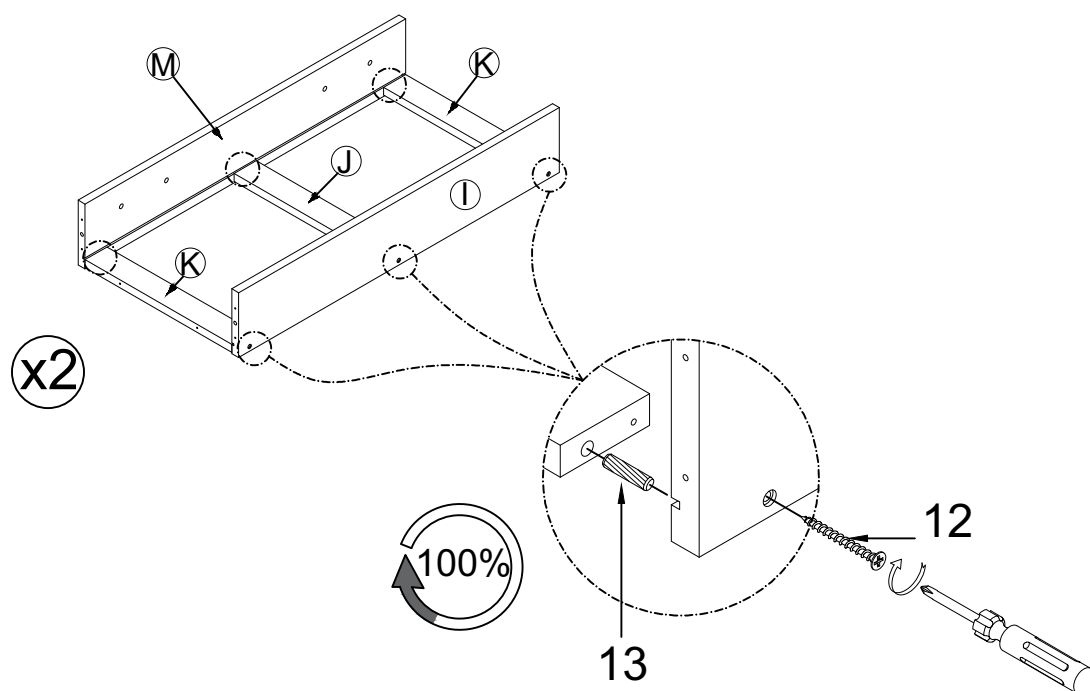

Step 8 :


Étape 8 :

13	12
	
8 pcs	24 pcs

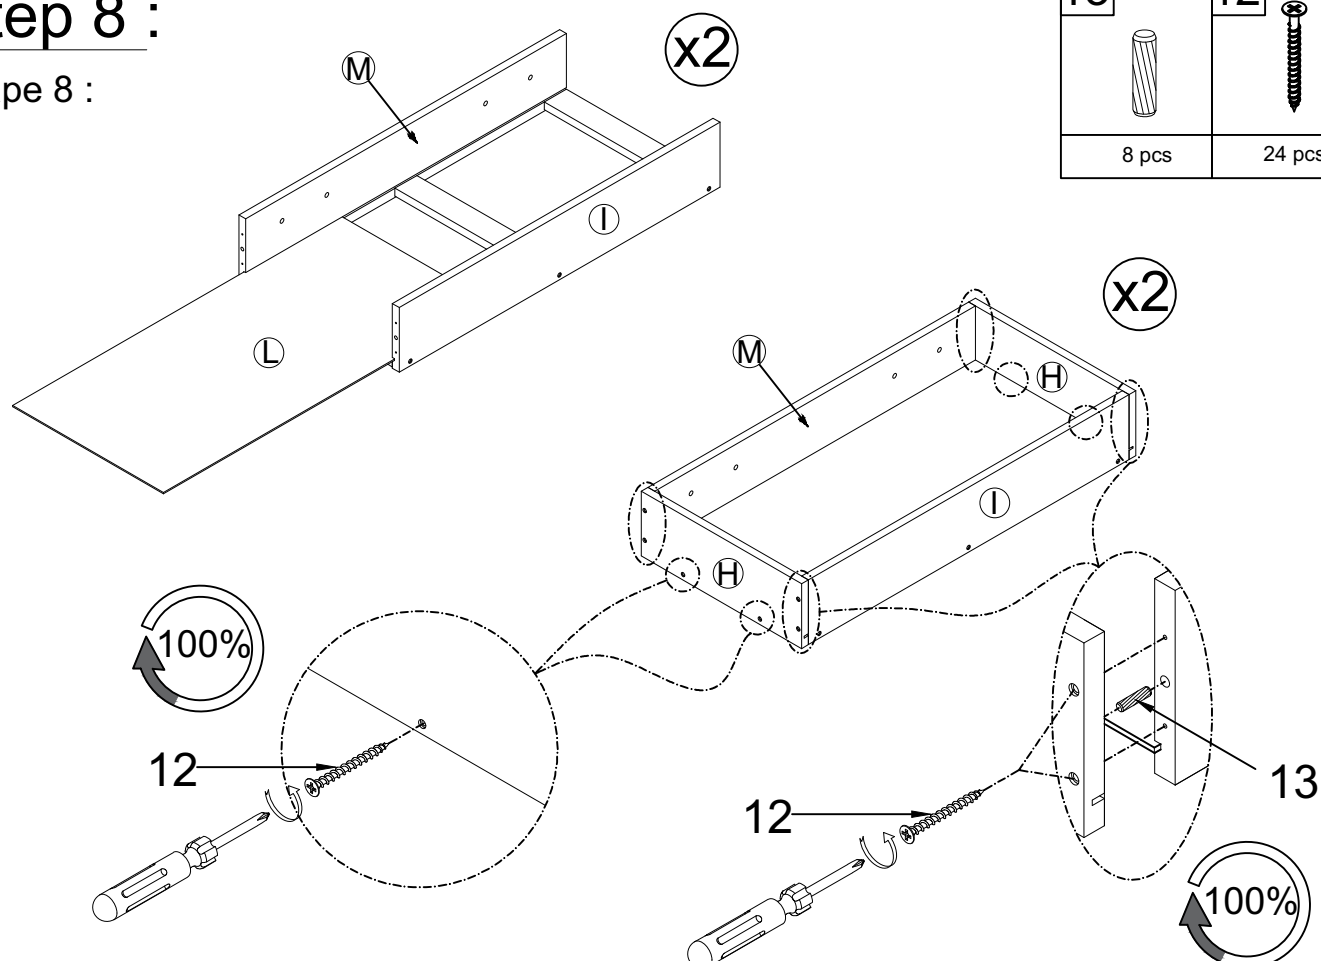


Step 9 :

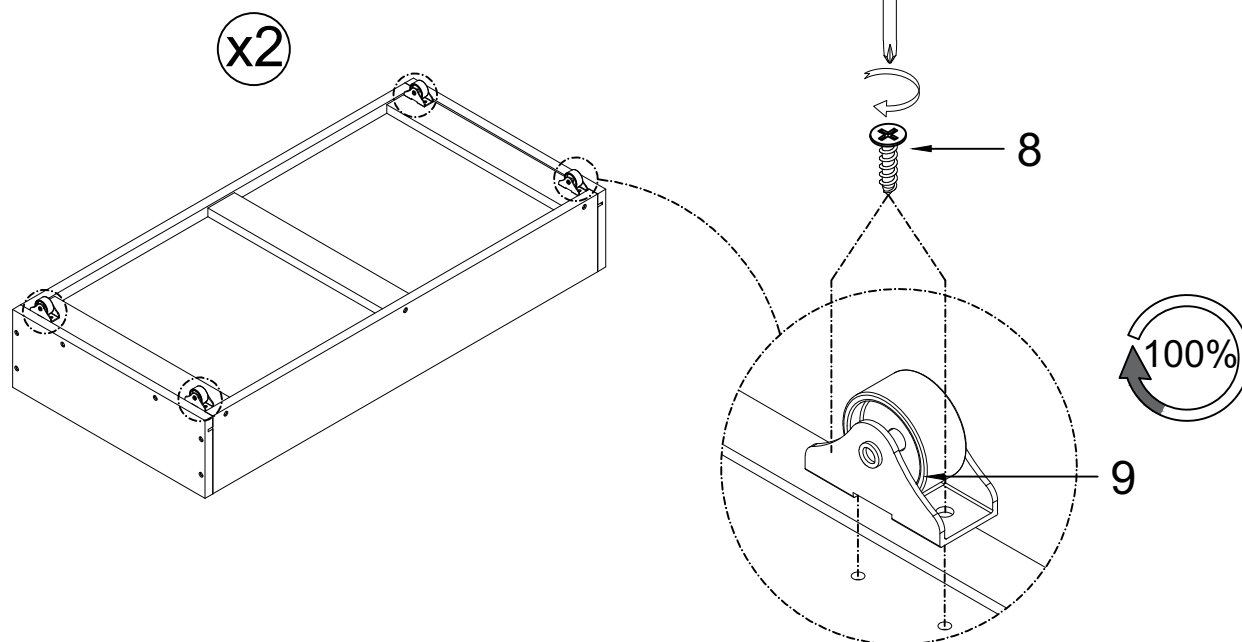Étape 9 :



Step 10 :

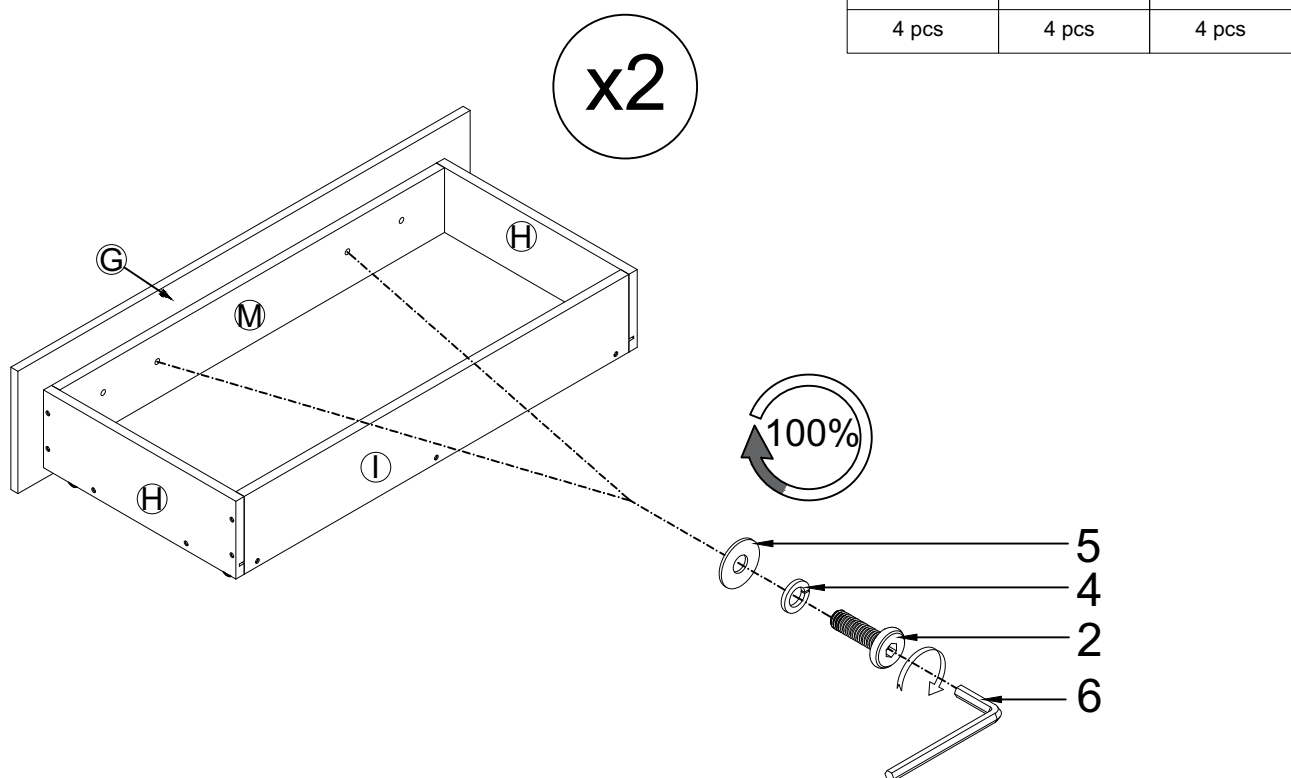Étape 10 :



Step 11 :

Étape 11 :

