

Assembly Instruction

MODEL : NP732P515150 / NP732P515151

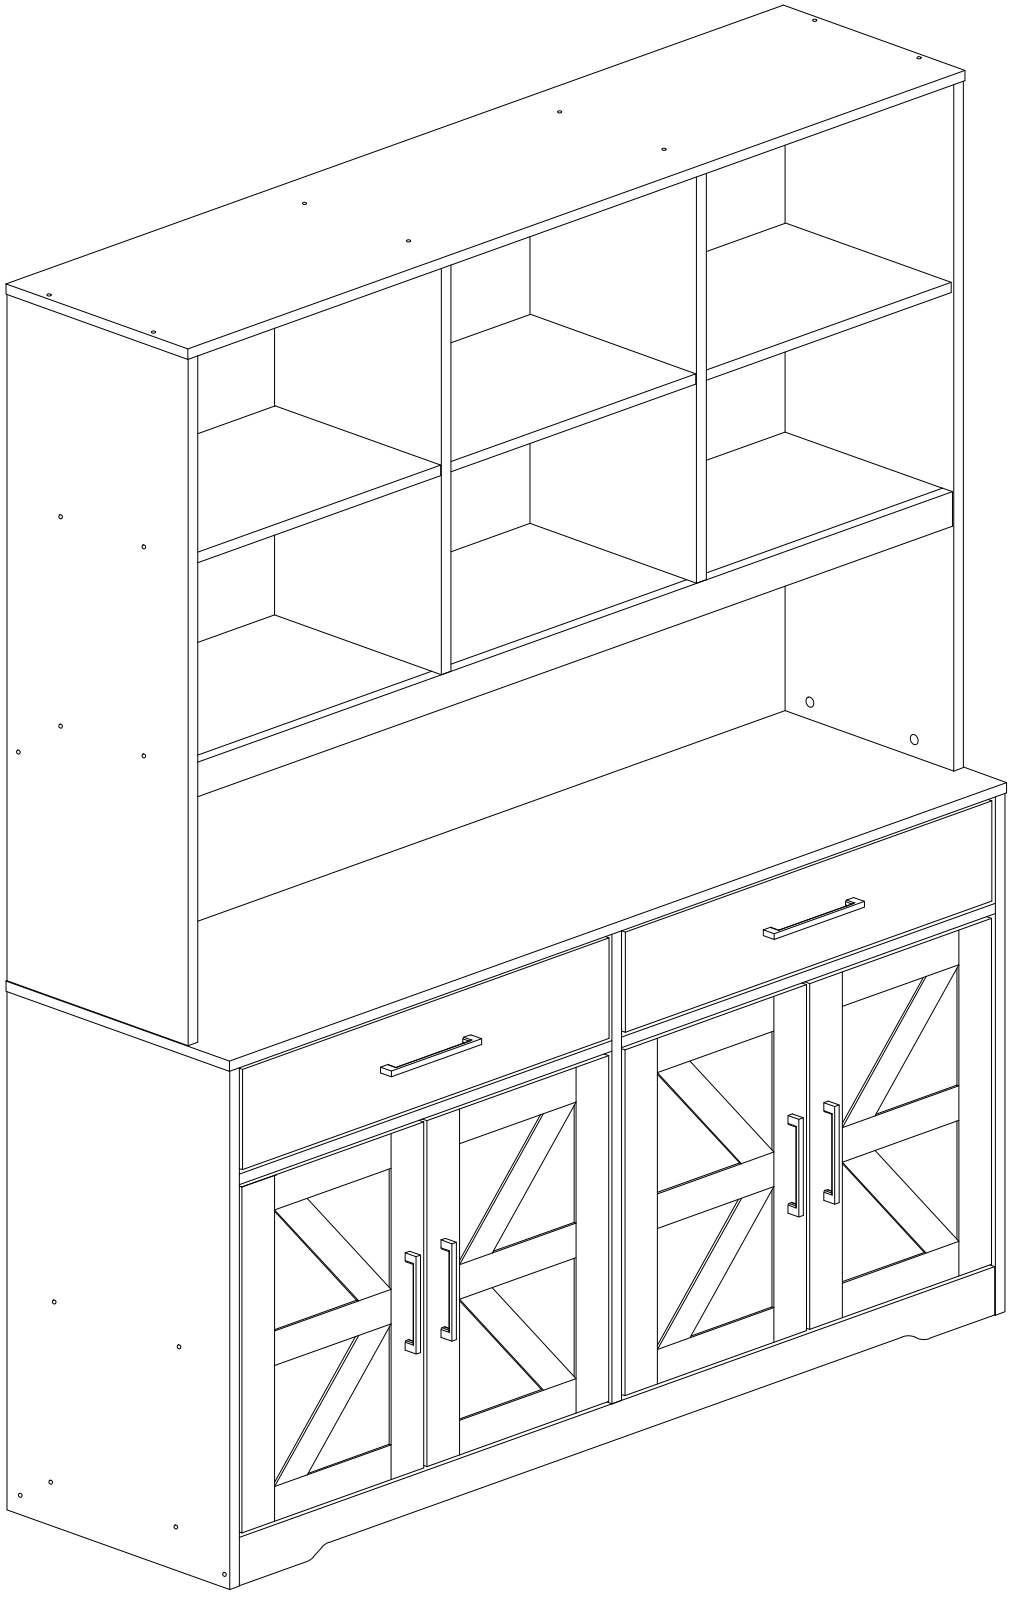

Assembly Instruction


Detail :

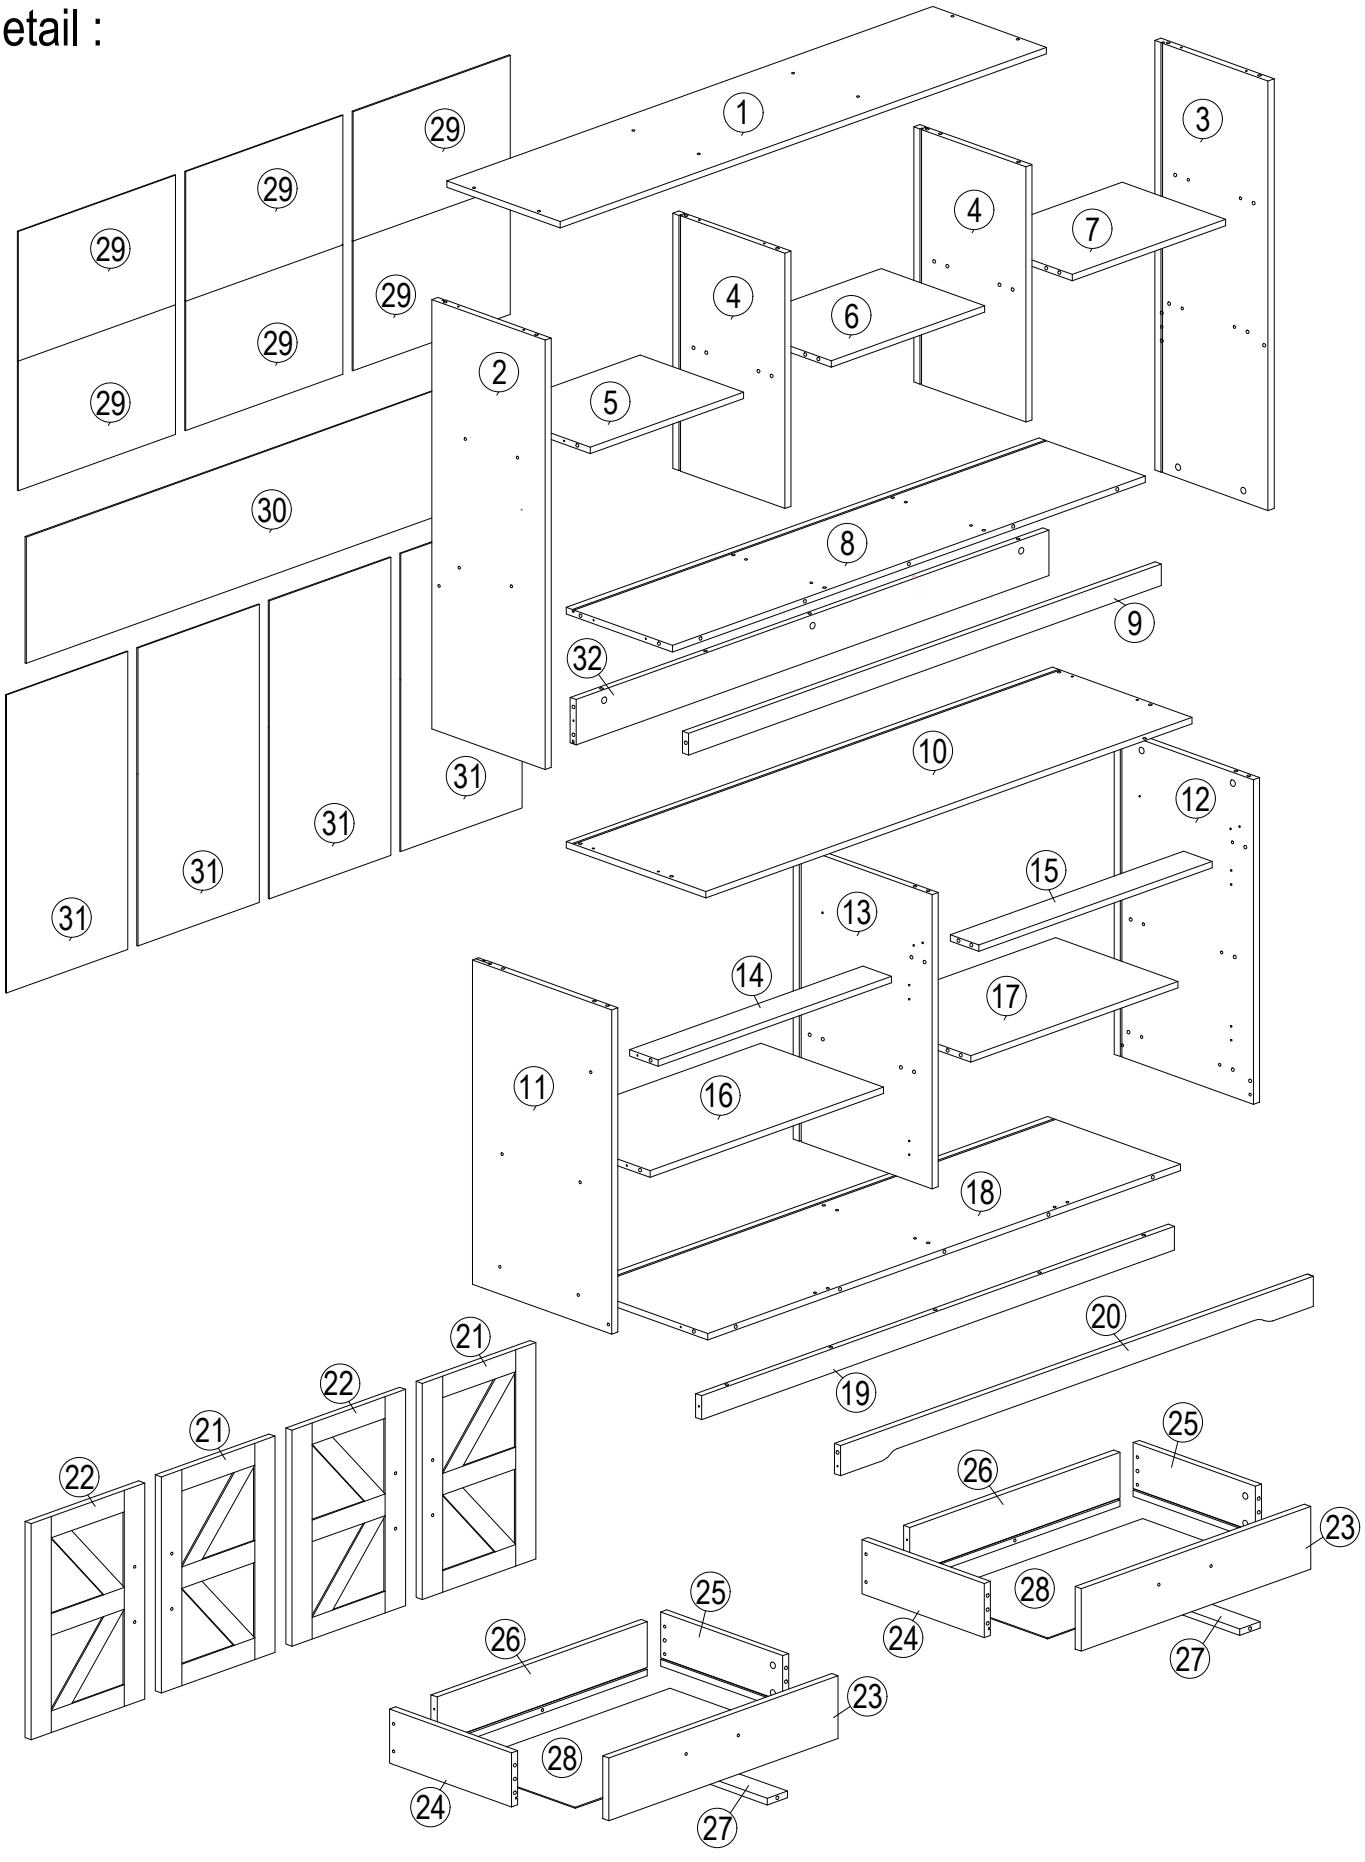

Assembly Instruction


Part List (NP732P515150)

① X 1

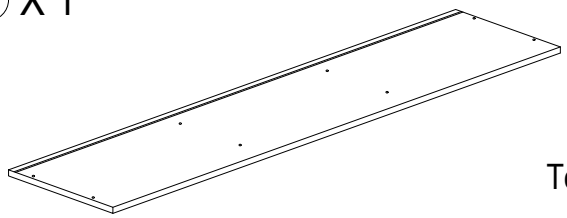


Top Panel (Small)

② X 1

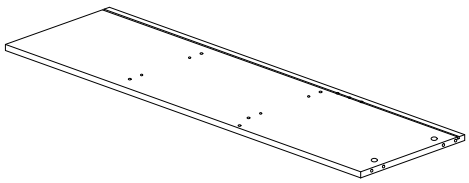


Side Left Panel (Upper)

③ X 1

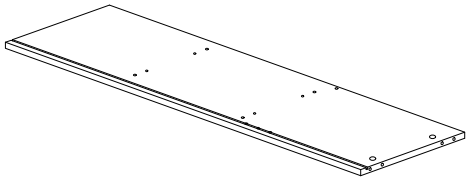


Side Right Panel (Upper)

④ X 2

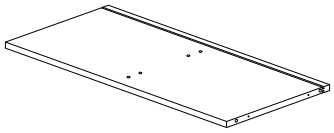


Middle Stand Panel (Upper)

⑤ X 1




Fixed Panel Small Left (Upper)

⑥ X 1




Fixed Panel Small Middle (Upper)

⑦ X 1




Fixed Panel Small Right (Upper)

⑧ X 1

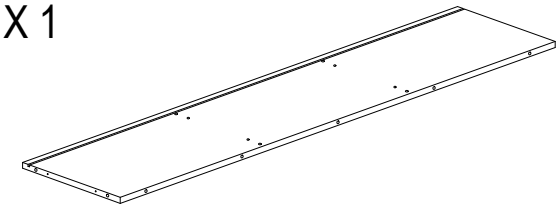


Fixed Panel Big

㉑ X 2

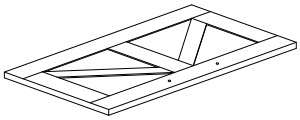


Door Panel-Right (Lower)

㉒ X 2

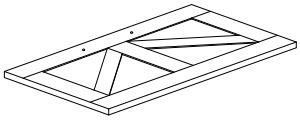


Door Panel-Left (Lower)

㉓ X 2




Drawer Front Panel

㉔ X 2




Drawer Side Left Panel

㉕ X 2



Drawer Side Right Panel

㉖ X 2



Drawer Back Panel

㉗ X 2




Drawer Support Panel

Assembly Instruction


Part List (NP732P515151)

⑨ X 1

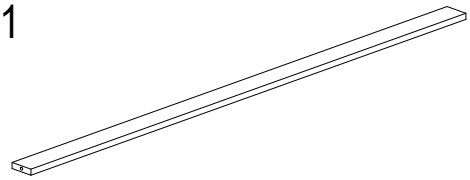


Front Panel

⑩ X 1

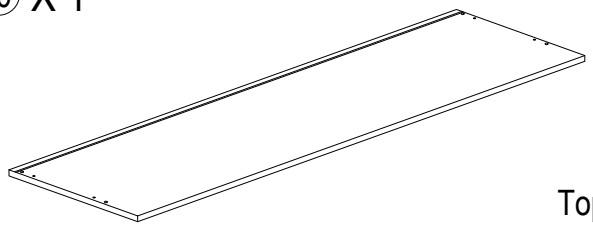


Top Panel
(Big)

⑪ X 1

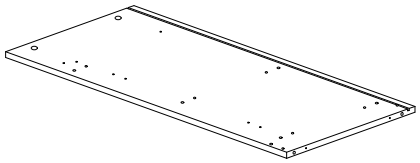


Side Left Panel (Lower)

⑫ X 1

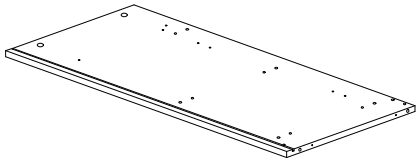


Side Right Panel (Lower)

⑬ X 1

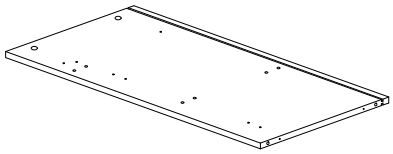


Middle Stand Panel (Lower)

⑭ X 1




Front support Panel
Left (Lower)

⑮ X 1




Front support Panel
Right (Lower)

⑯ X 1

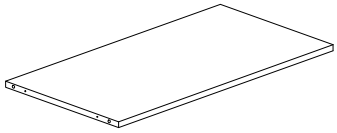


Fixed Panel
Left (Lower)

⑰ X 1

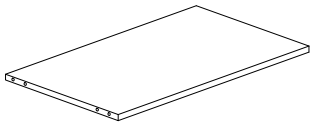


Drawer Side
Right Panel

⑱ X 1

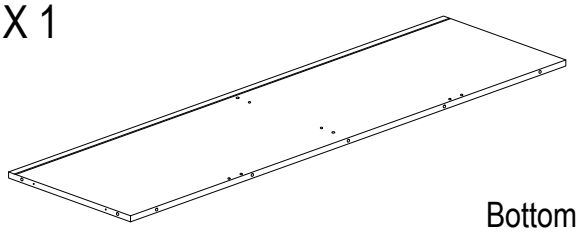


Bottom Panel

⑲ X 1

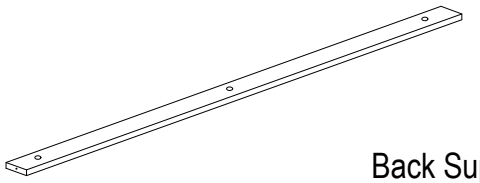


Back Support Leg

⑳ X 1

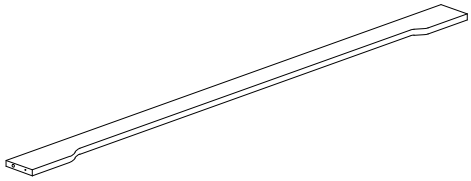


Front Leg

㉘ X 2

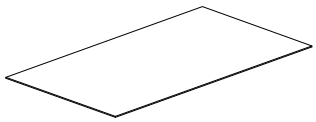


Drawer
Bottom Panel

㉙ X 6

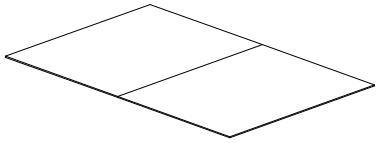


Back Panel
(Upper)

㉚ X 1

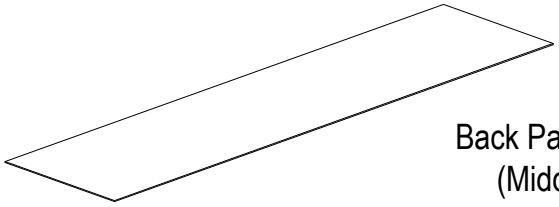


Back Panel
(Middle)

㉛ X 4

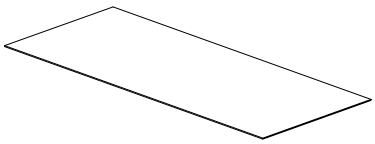

Back Panel
(Lower)








㉜ X 1

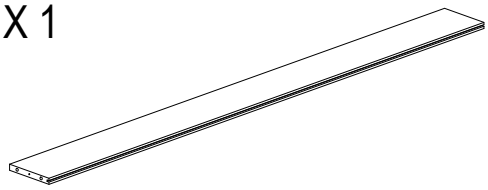


Fixed Panel
Support Rail

Assembly Instruction

Hardware List (NP732P515150)

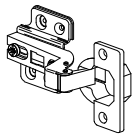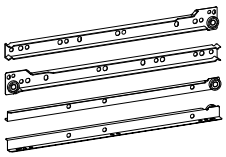
A		8x25mm Dowel (Wood)	80pcs
B		H12 Minifix	46pcs
C		33mm Myfix	32pcs
D		63mm Myfix	7pcs
E		M3.5x12mm Screw	12pcs
F		M3.5x16mm Screw	98pcs
G		M4x28mm Screw	12pcs
H		M4x45mm Screw	48pcs
I		Sticker	24pcs
J		5/8 Nail With Pin	5pcs
K		Pyramid Angle Bar Corner Block	36pcs
L		Hinges ERT Pump 7/8	8pcs
M		Handle KT1010.128	6pcs
N		Drawer Slide 300mm	2sets
O		H-Profile (678x3mm)	2pcs
P		2 Pin Stopper	2pcs

Anti Tipping Hardware


a		L-Bracket (1.2x24x90mm)	2pcs
b		M3.5 x 12mm Screw	2pcs
c		M4 x 38mm Screw	2pcs
d		Ø6x25mm Wall Plug	2pcs

Assembly Instruction

Left Drawer Silde (N)

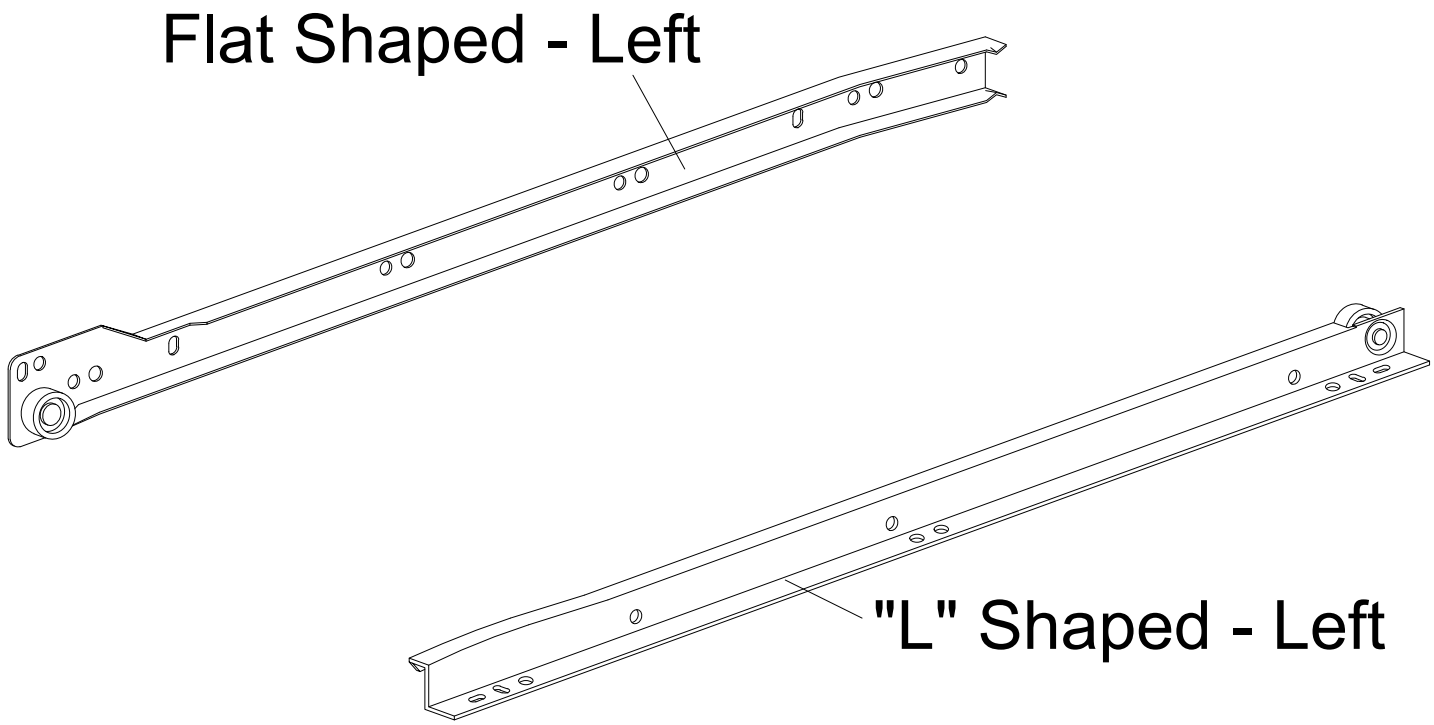


Right Drawer Silde (N)

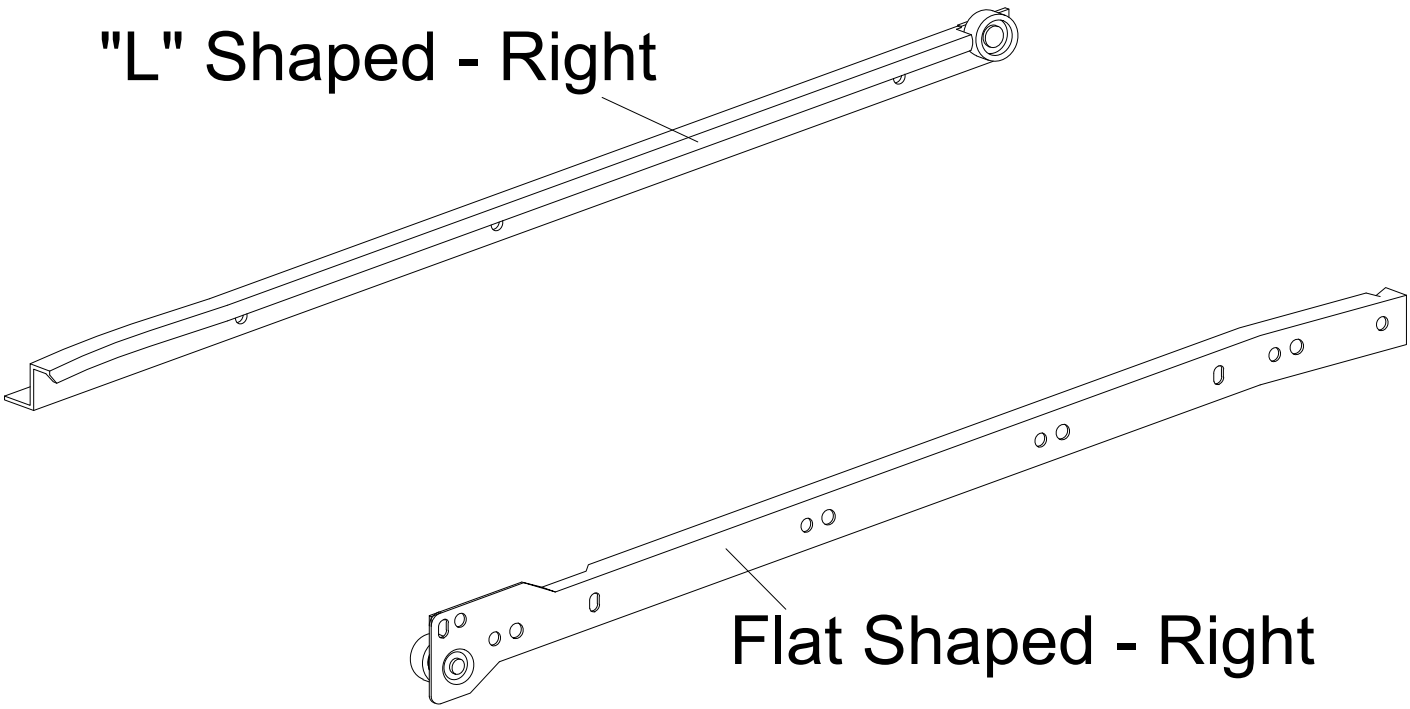

Using Cam Lock And Quickfit


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

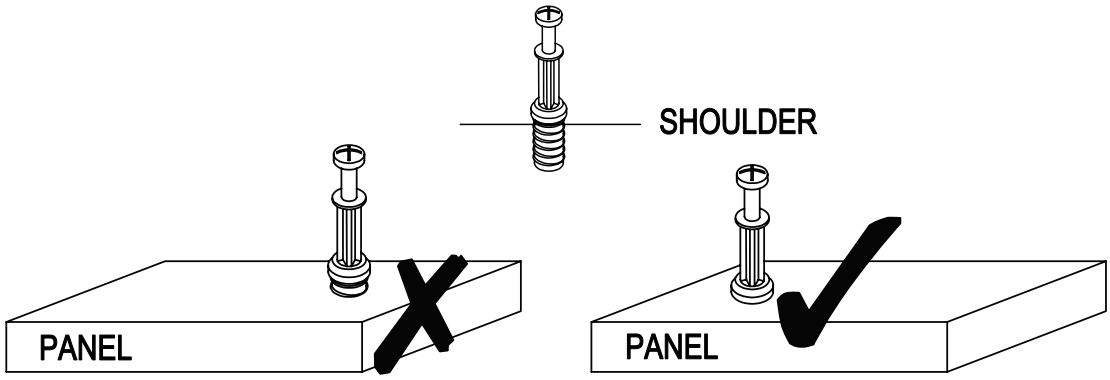

CAM LOCK


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

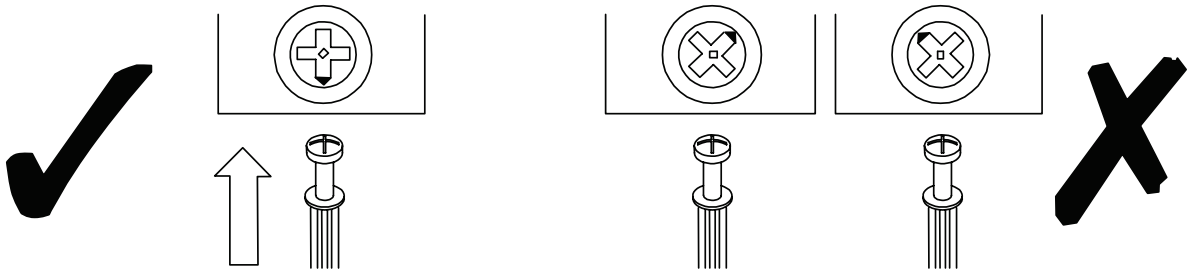


CORRECT **WRONG**

Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

Turn cam lock clockwise to tighten.

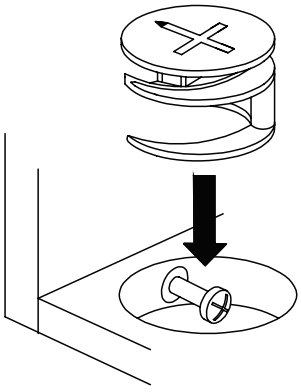


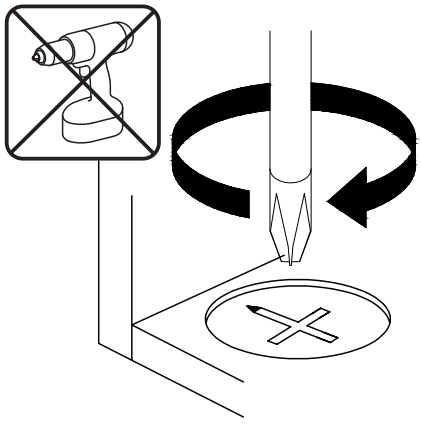

Assembly Instruction


Step 1


A		8x25mm Dowel (Wood)	6pcs

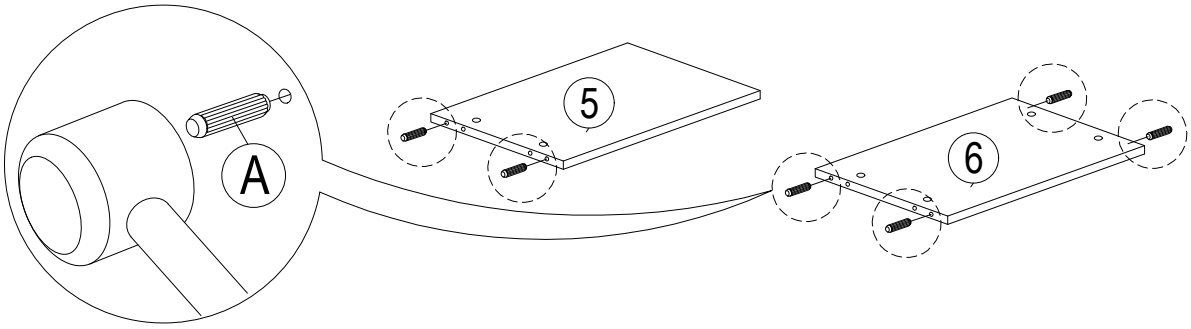

Step 2


B		H12 Minifix	4pcs

D		63mm Myfix	4pcs

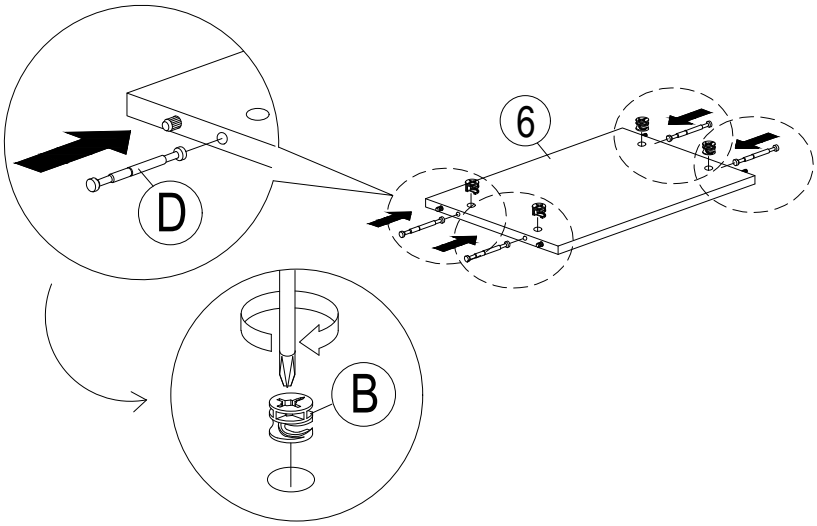


Step 3

B		H12 Minifix	2pcs

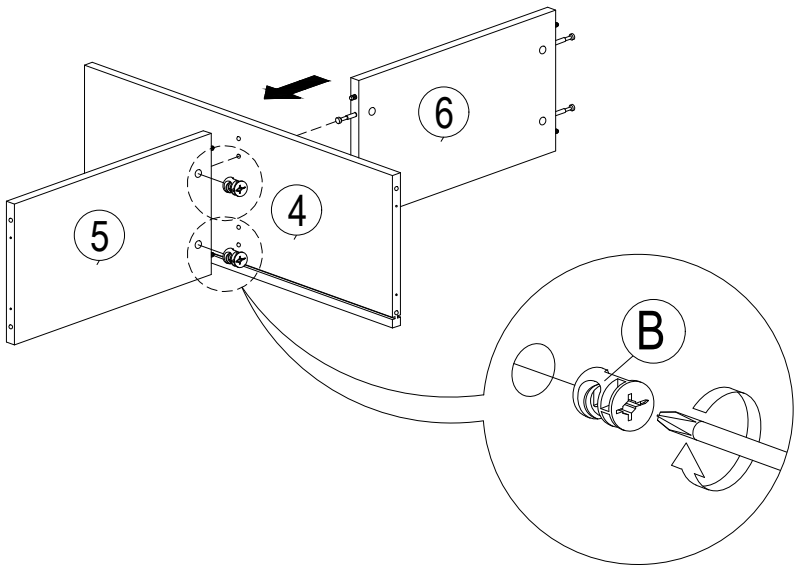


Assembly Instruction

Step 4

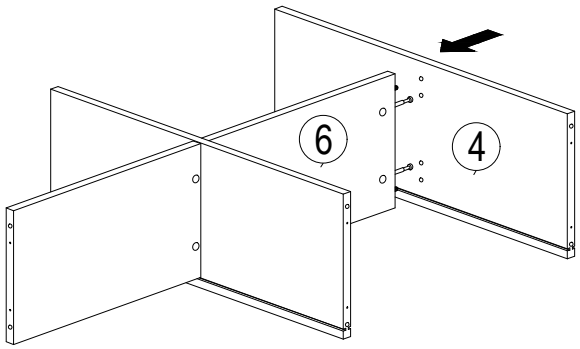


Step 5

A		8x25mm Dowel (Wood)	2pcs

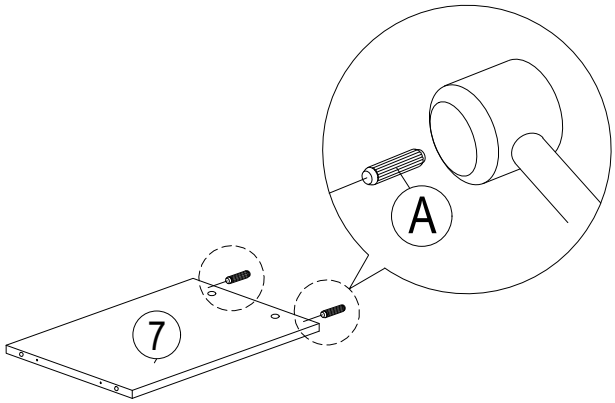


Step 6

B		H12 Minifix	2pcs

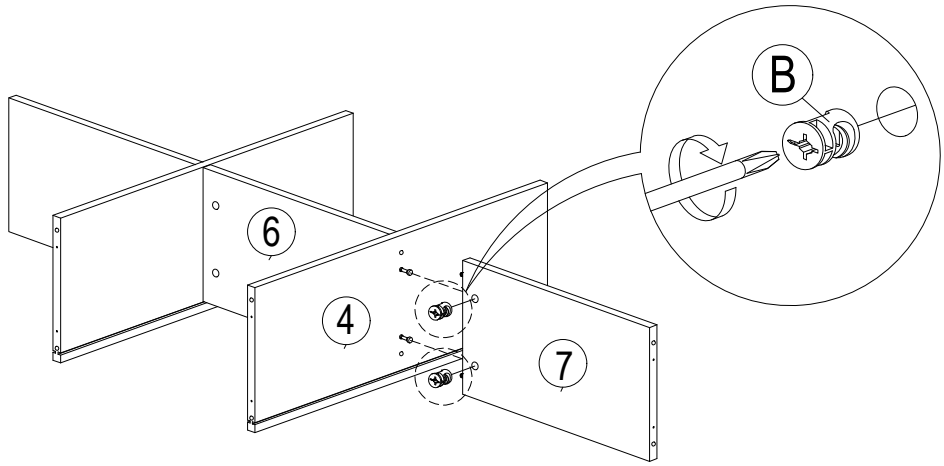


Step 7

C		33mm Myfix	3pcs

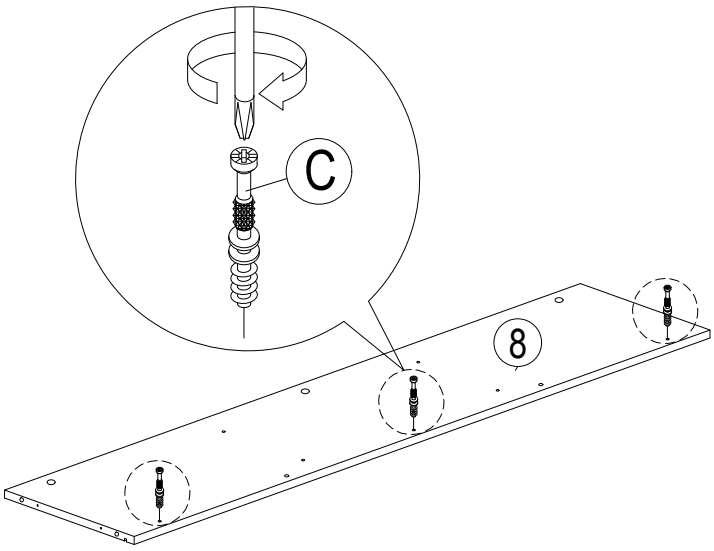

Step 8

A		8x25mm Dowel (Wood)	2pcs

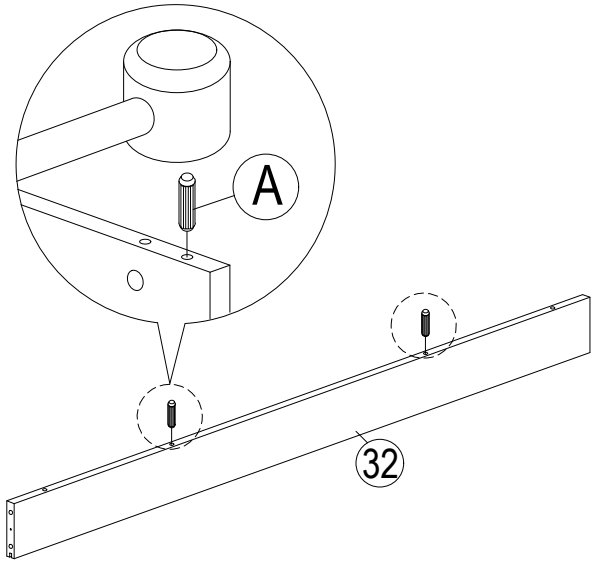


Assembly Instruction

Step 9

B		H12 Minifix	3pcs


Step 10

A		8x25mm Dowel (Wood)	4pcs
H		M4x45mm Screw	4pcs

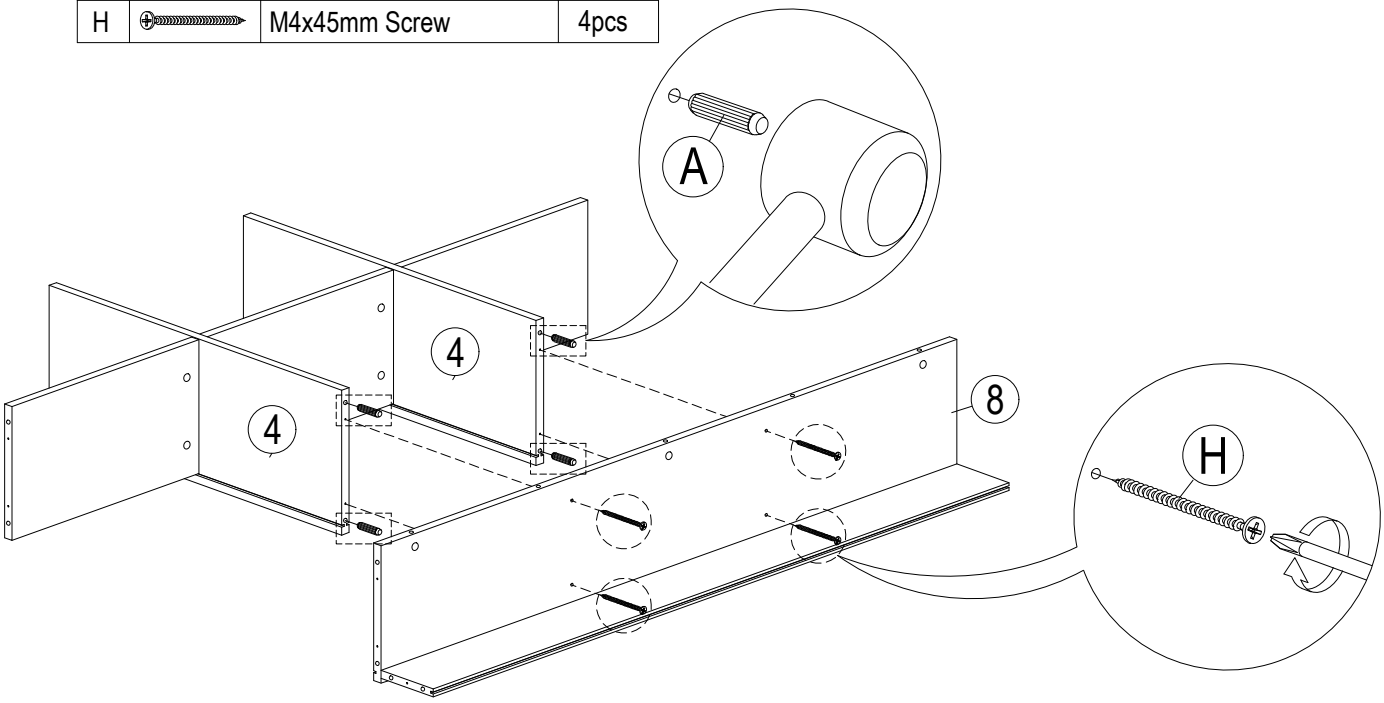

Step 11


C		33mm Myfix	3pcs

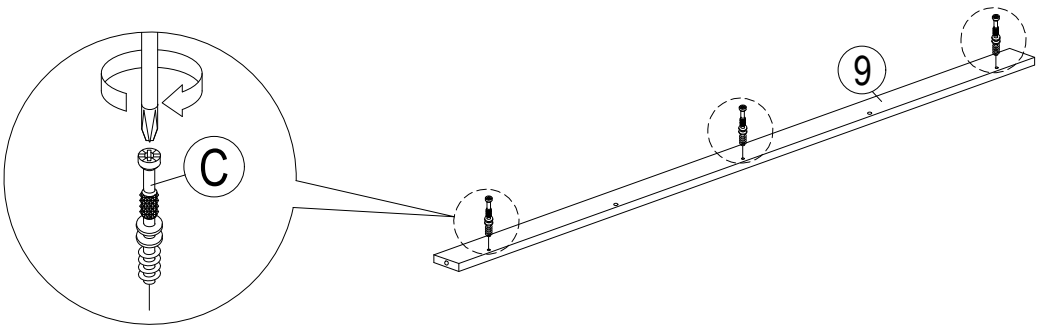

Assembly Instruction

Step 12

A		8x25mm Dowel (Wood)	2pcs
B		H12 Minifix	3pcs

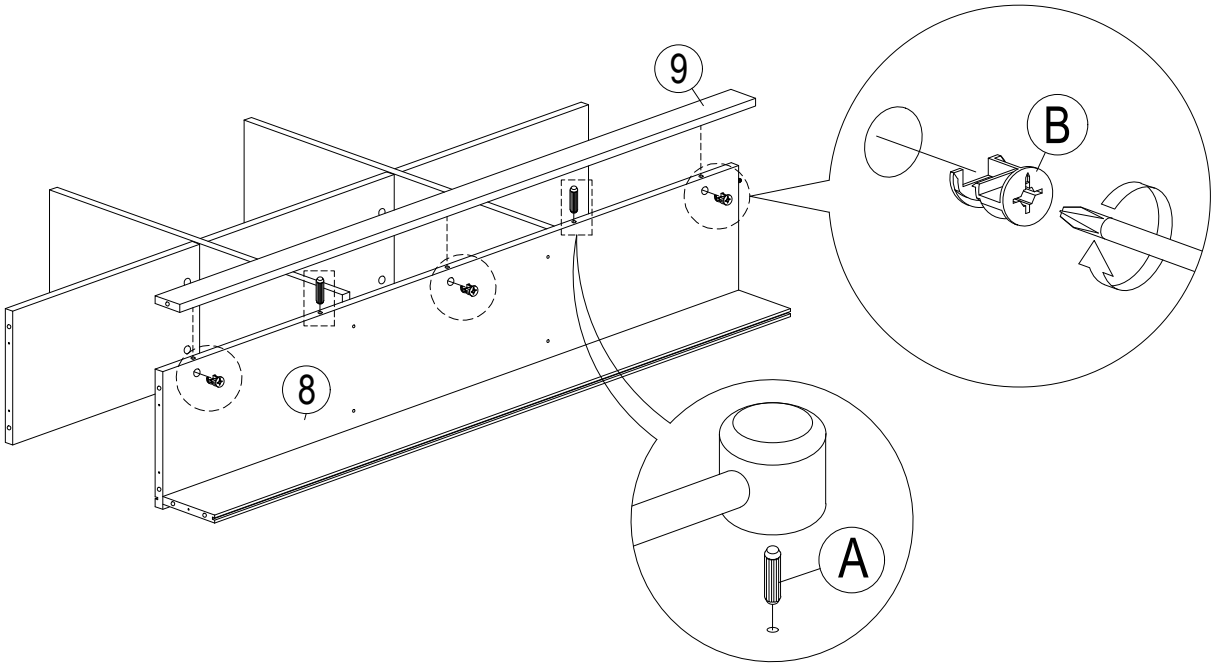

Step 13


A		8x25mm Dowel (Wood)	7pcs
H		M4x45mm Screw	5pcs
I		Sticker	5pcs

Assembly Instruction


Step 14

A		8x25mm Dowel (Wood)	7pcs

H		M4x45mm Screw	5pcs
I		Sticker	5pcs

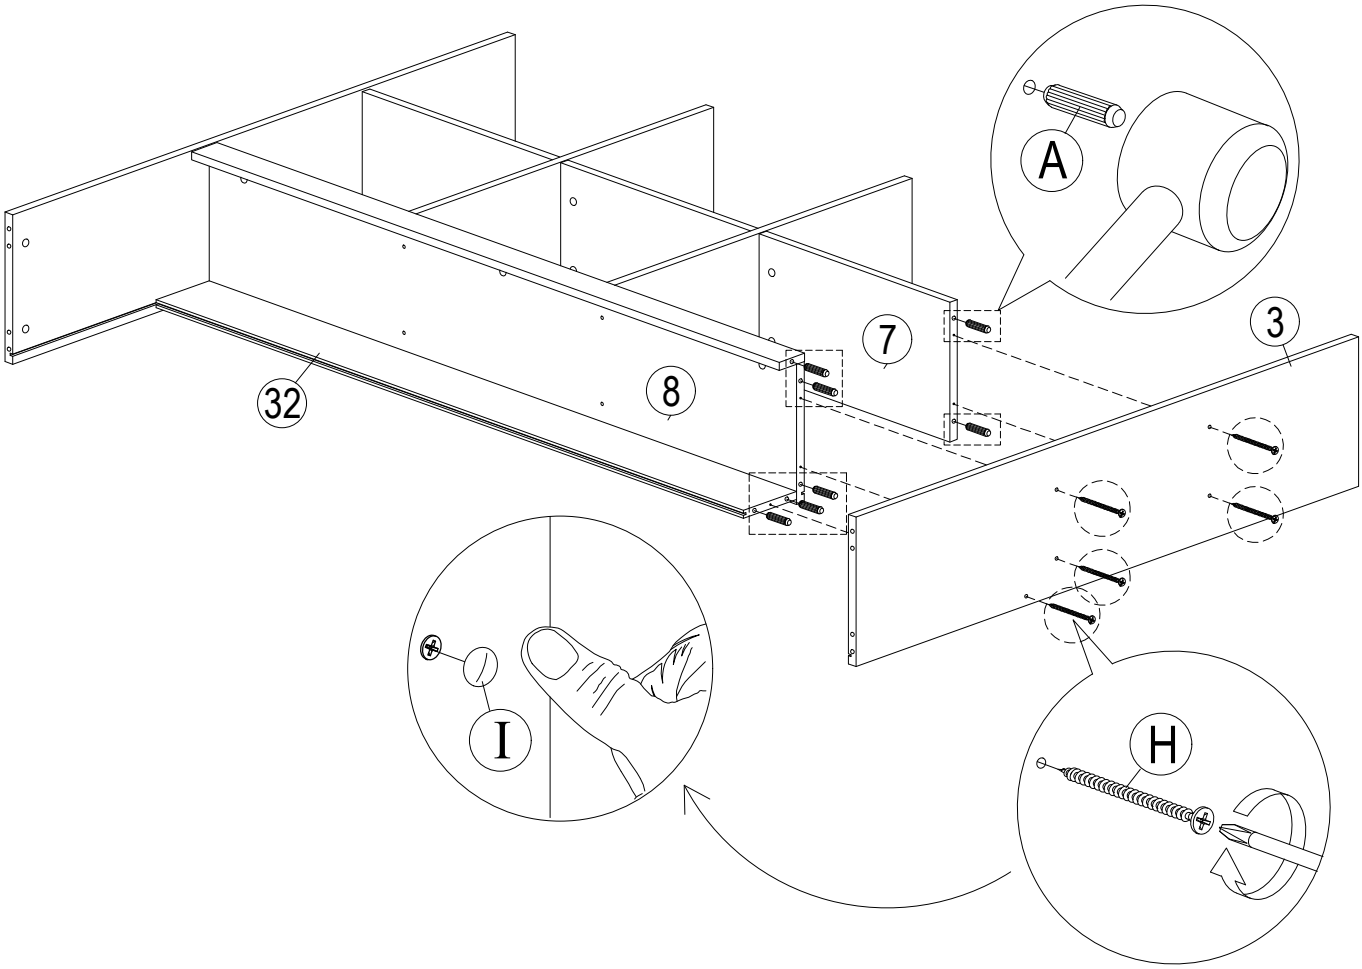


Step 15

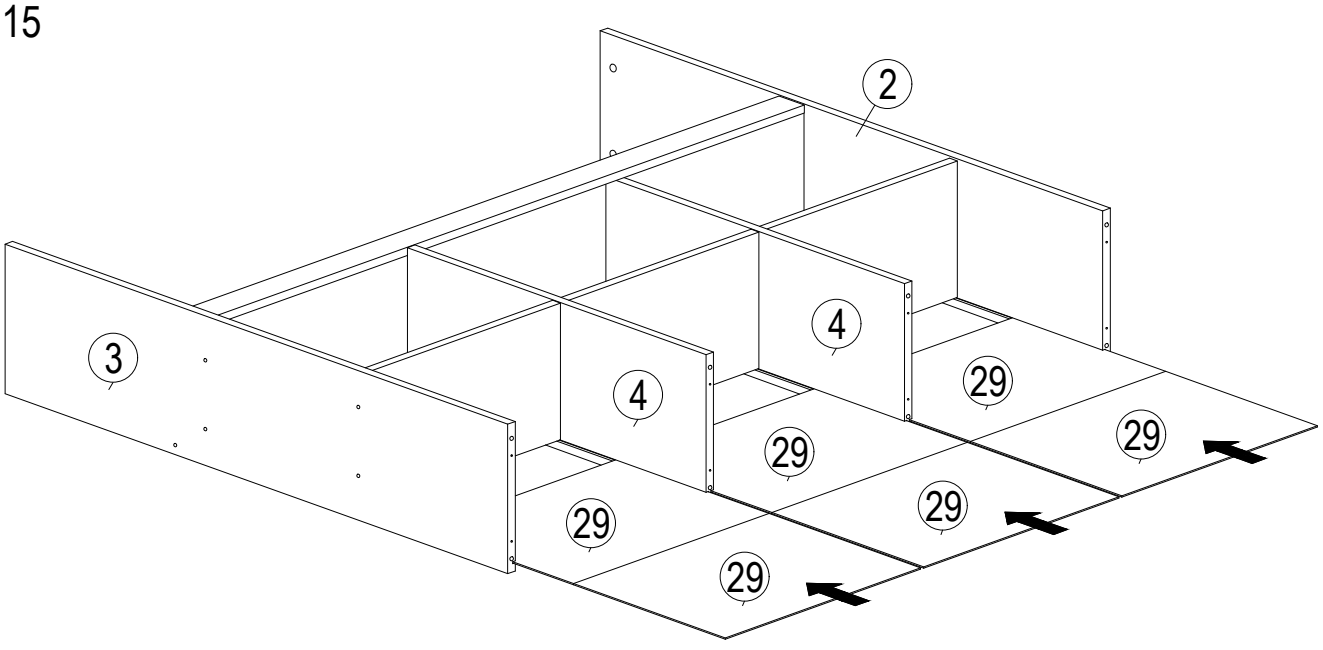


Assembly Instruction

Step 16

A		8x25mm Dowel (Wood)	8pcs
H		M4x45mm Screw	8pcs

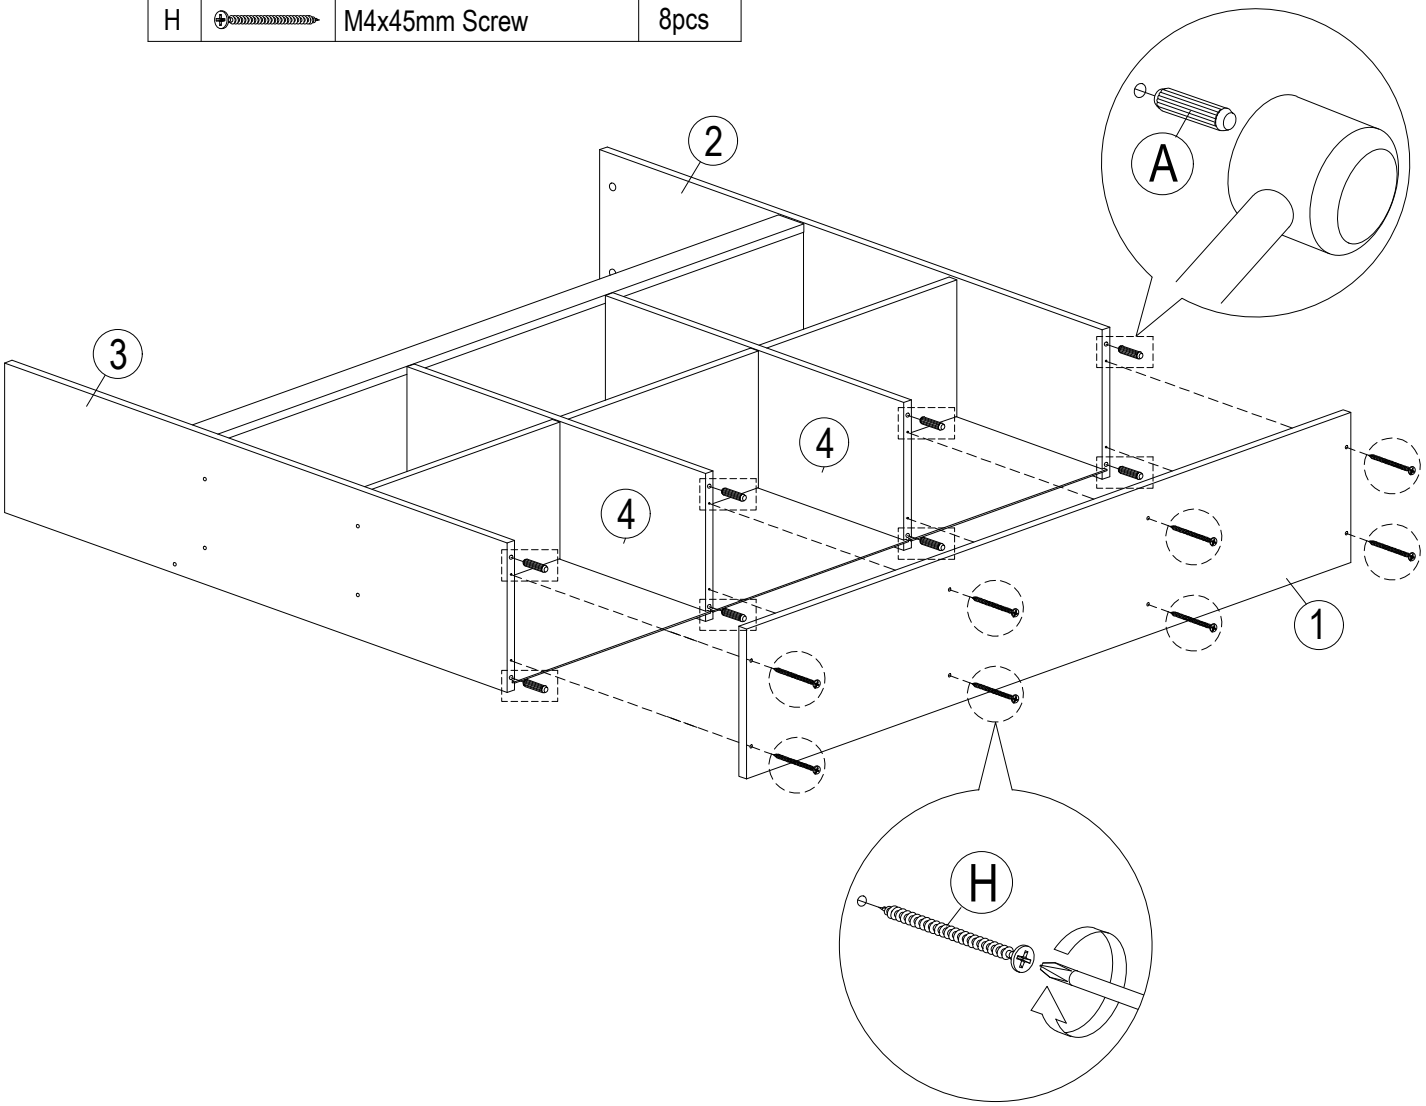


Step 17

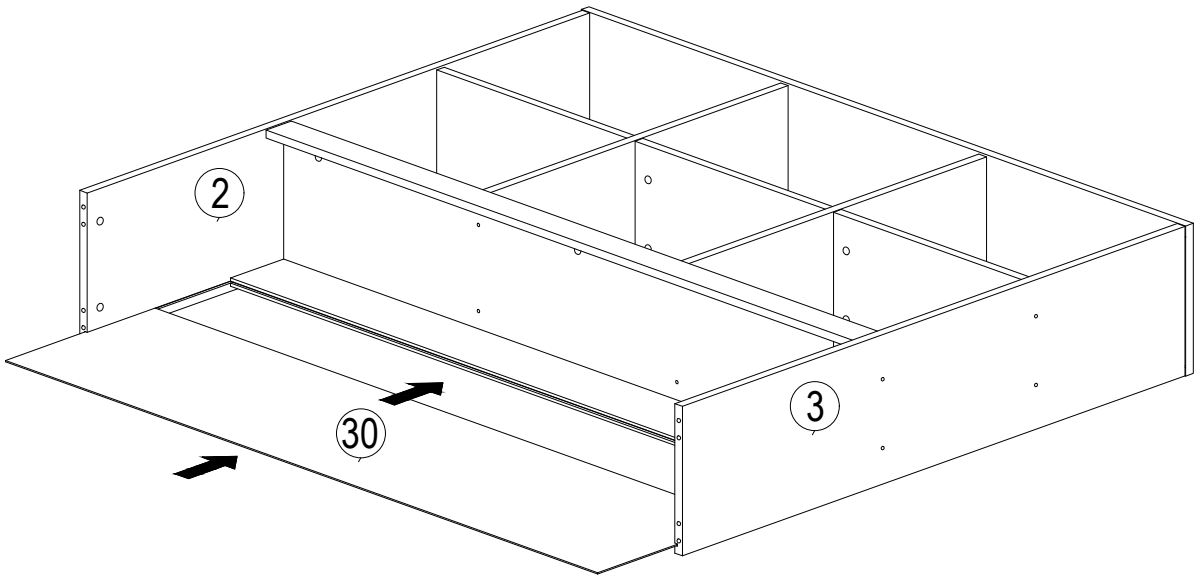

Assembly Instruction


Step 18

C		33mm Myfix	4pcs

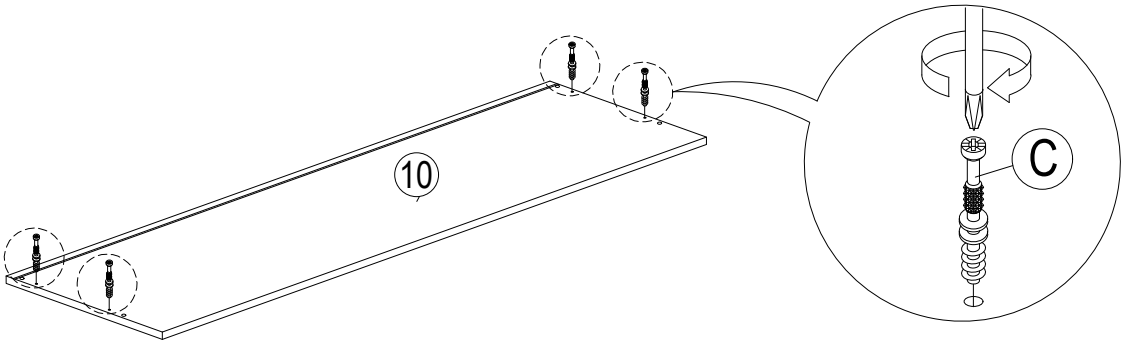


Step 19

A		8x25mm Dowel (Wood)	4pcs

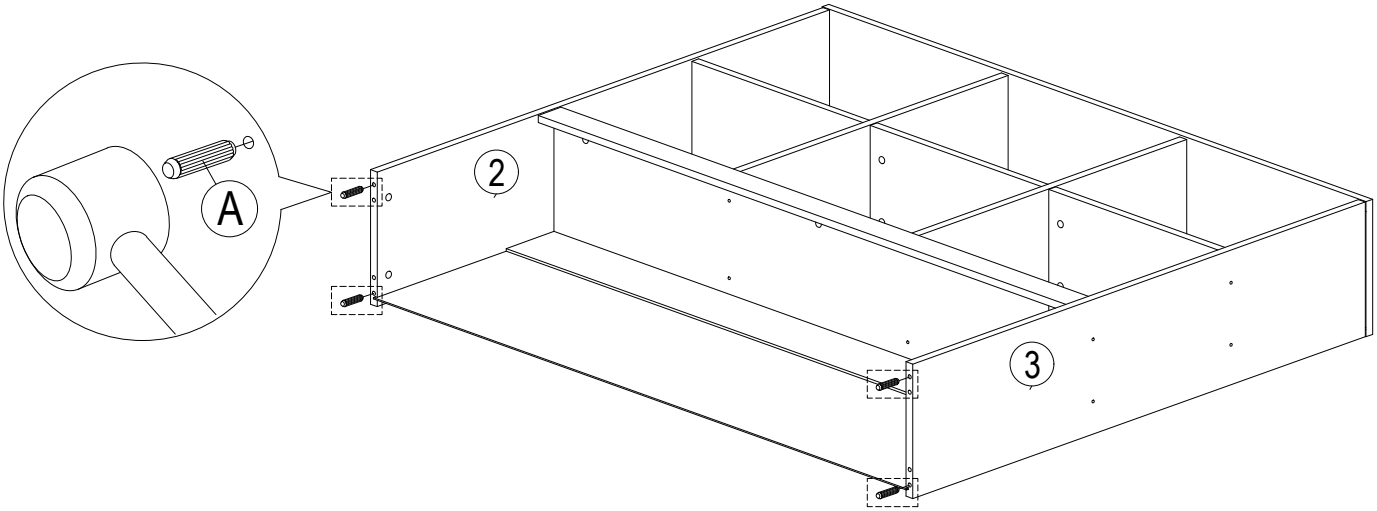

Step 20


B		H12 Minifix	4pcs

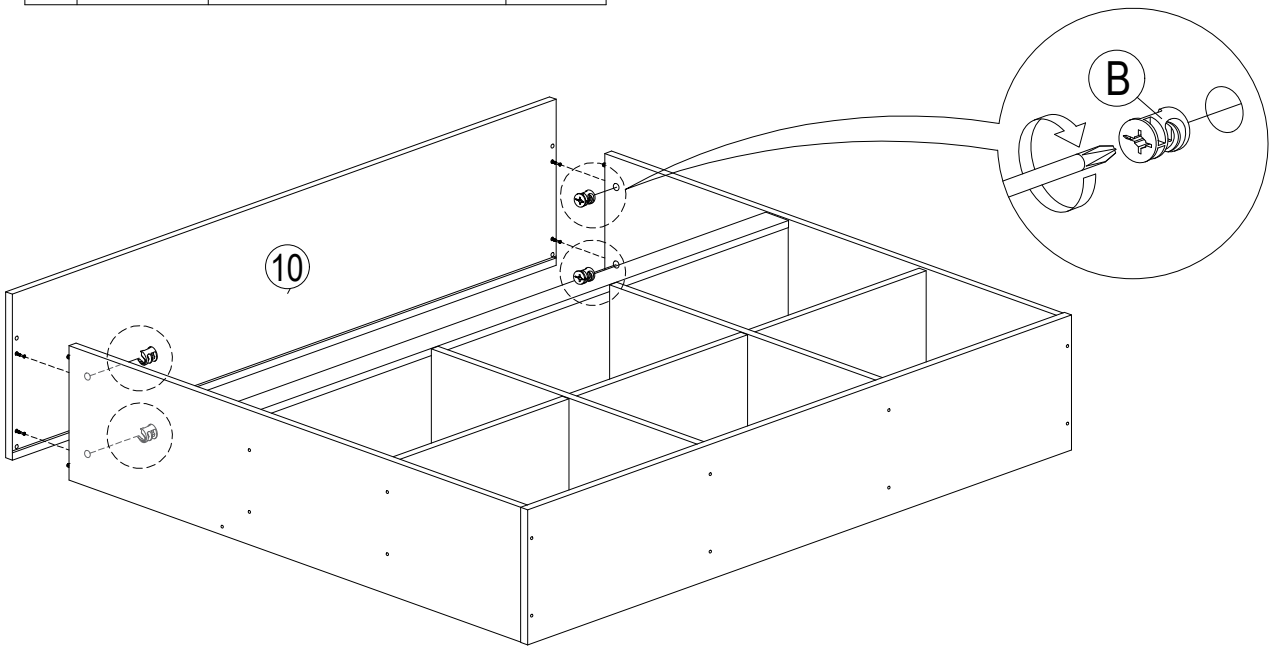


Assembly Instruction

Step 21

A		8x25mm Dowel (Wood)	6pcs

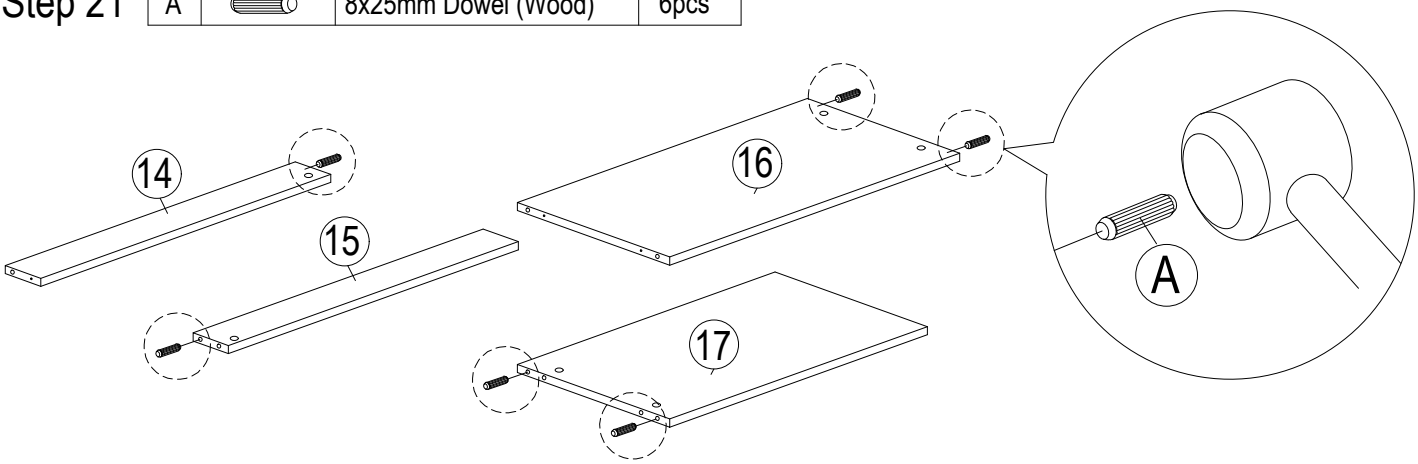


Step 22

B		H12 Minifix	3pcs
D		63mm Myfix	3pcs


Step 23

E		M3.5x12mm Screw	3pcs
N		Drawer Slide 300mm - L	1pc

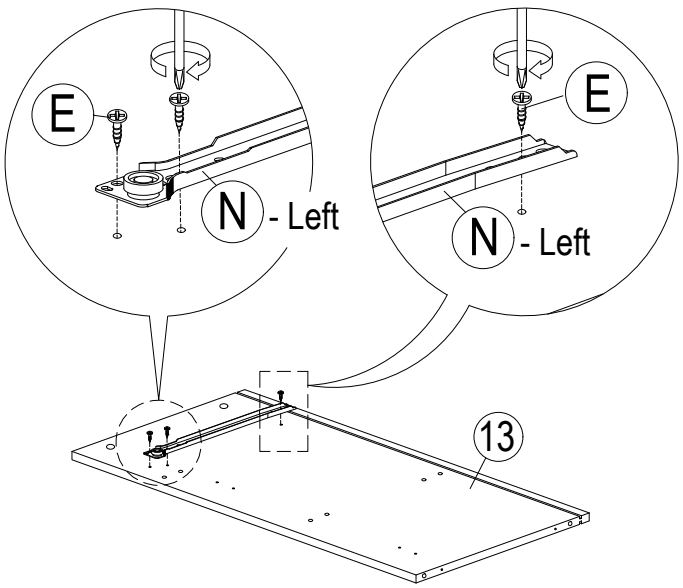

Step 24


E		M3.5x12mm Screw	3pcs
N		Drawer Slide 300mm - R	1pc

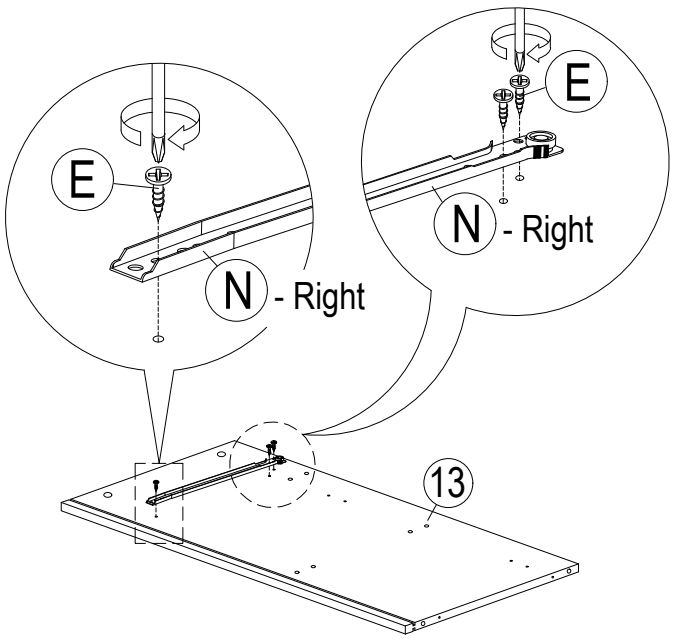

Assembly Instruction


Step 25

B		H12 Minifix	3pcs

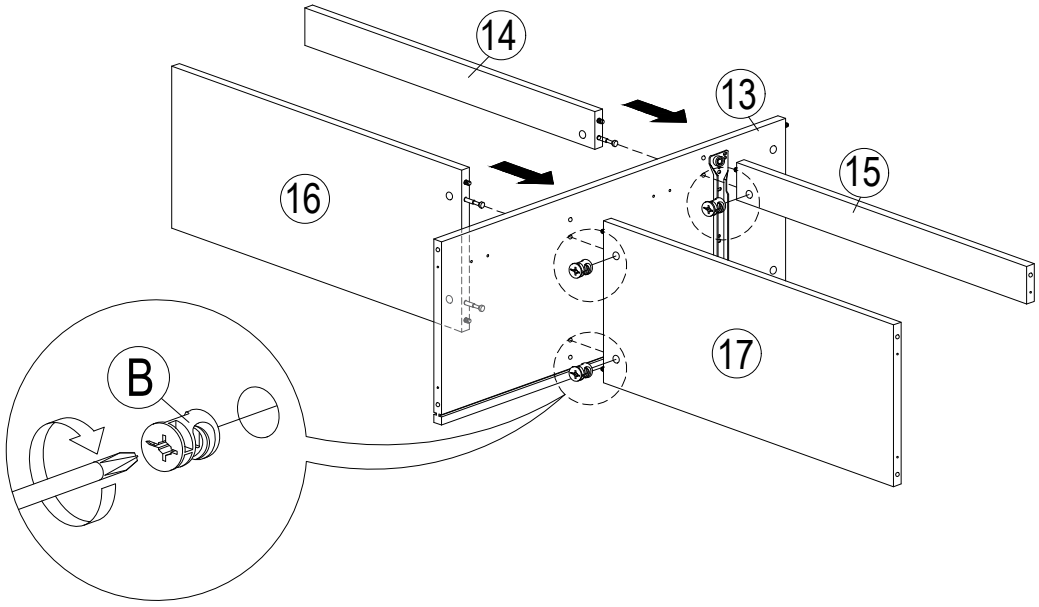


Step 26

A		8x25mm Dowel (Wood)	2pcs

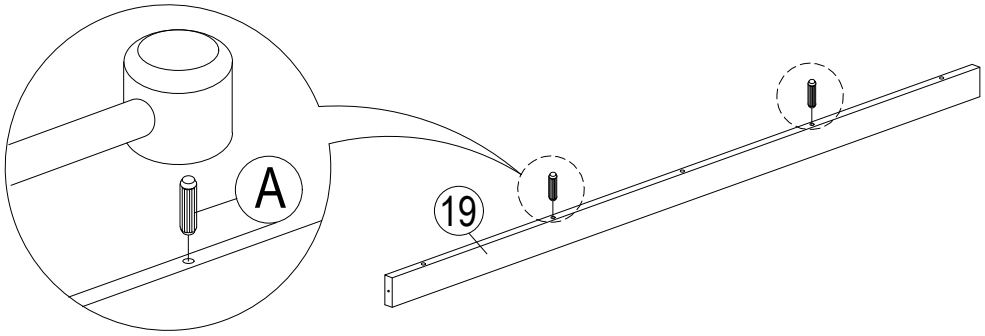

Step 27


F		M3.5x16mm Screw	2pcs
P		2 Pin Stopper	2pcs

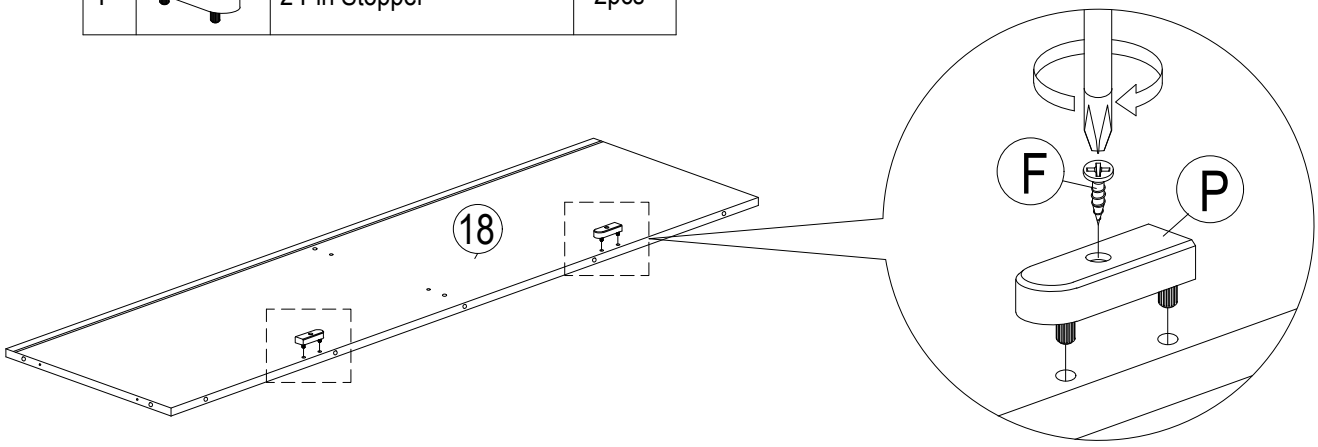

Assembly Instruction

Step 28

C		33mm Myfix	3pcs

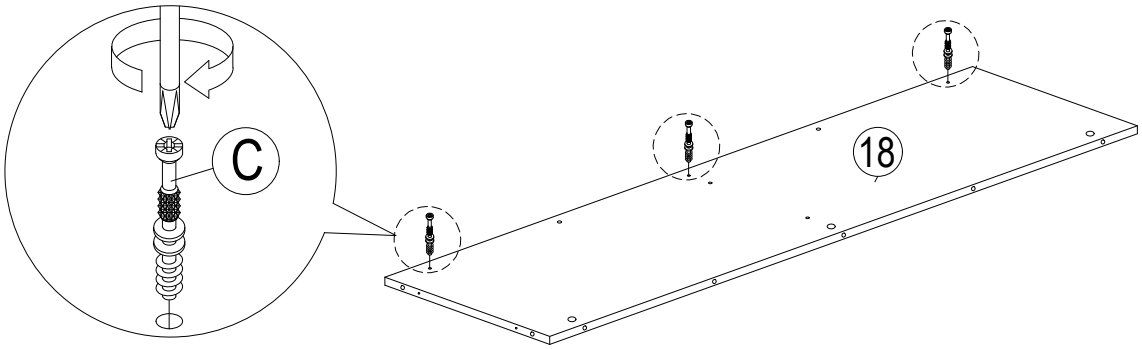

Step 29

B		H12 Minifix	3pcs


Step 30

A		8x25mm Dowel (Wood)	2pcs
H		M4x45mm Screw	2pcs

Assembly Instruction


Step 31

C		33mm Myfix	3pcs

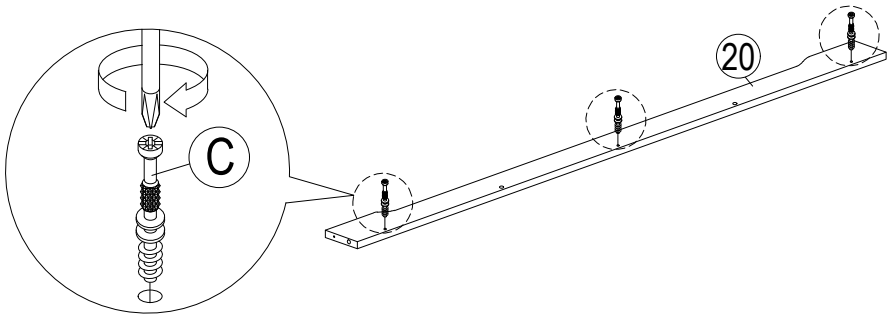


Step 32

A		8x25mm Dowel (Wood)	2pcs
B		H12 Minifix	3pcs

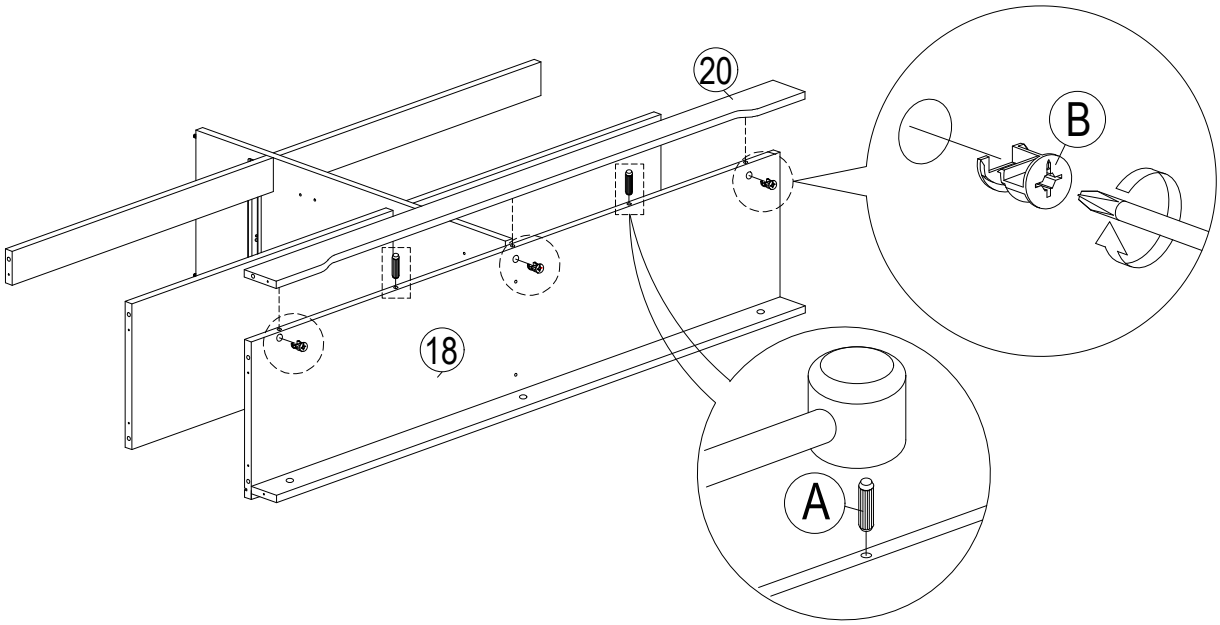

Step 33


A		8x25mm Dowel (Wood)	6pcs

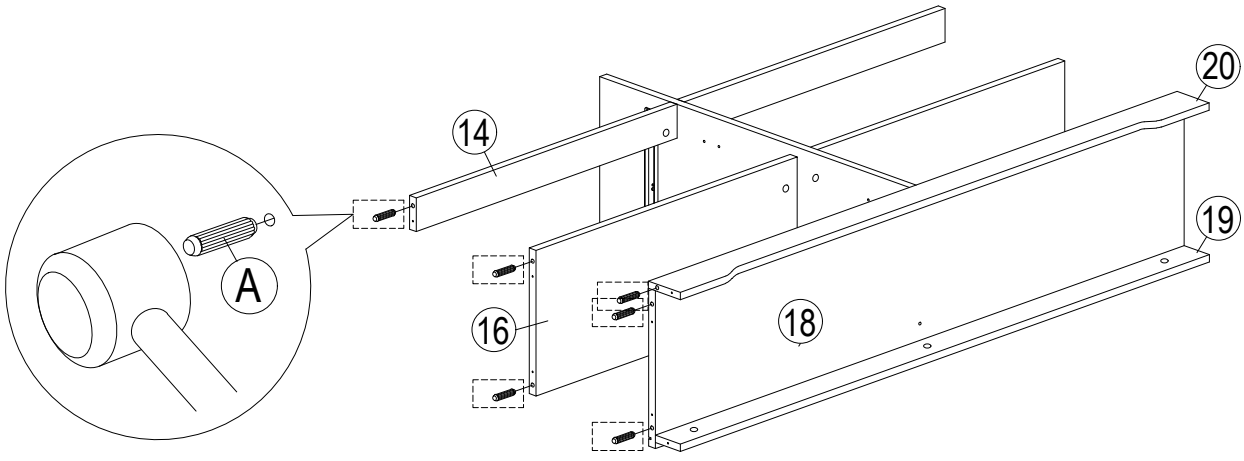


Assembly Instruction

Step 34

E		M3.5x12mm Screw	3pcs
N		Drawer Slide 300mm - L	1pc

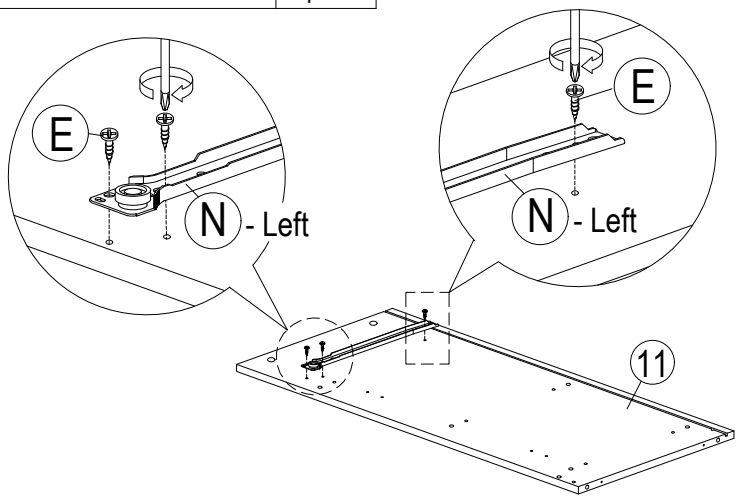

Step 35

H		M4x45mm Screw	7pcs
I		Sticker	7pcs


Step 36

E		M3.5x12mm Screw	3pcs
N		Drawer Slide 300mm - R	1pc

Assembly Instruction


Step 37

A		8x25mm Dowel (Wood)	6pcs

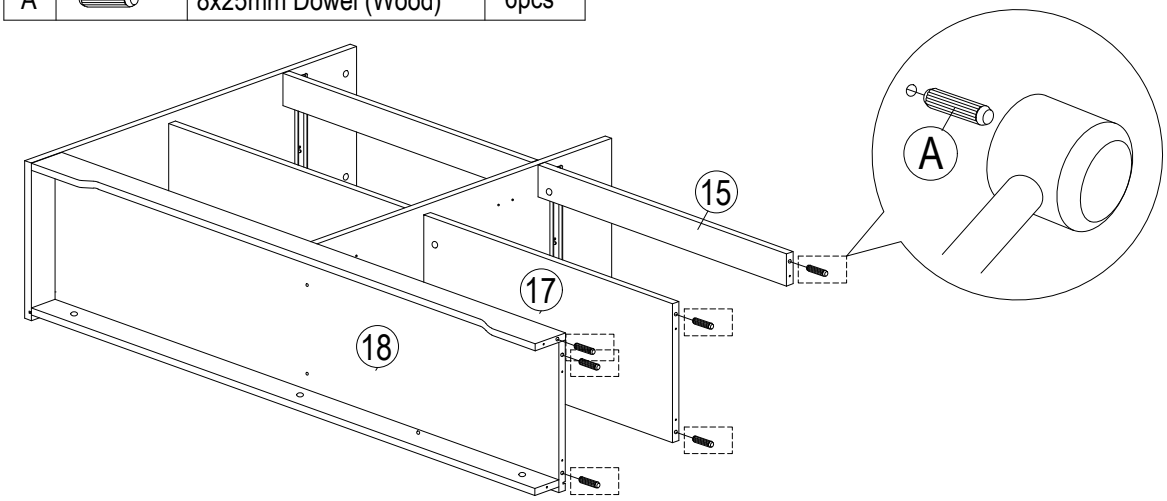



Step 38

H		M4x45mm Screw	7pcs
I		Sticker	7pcs

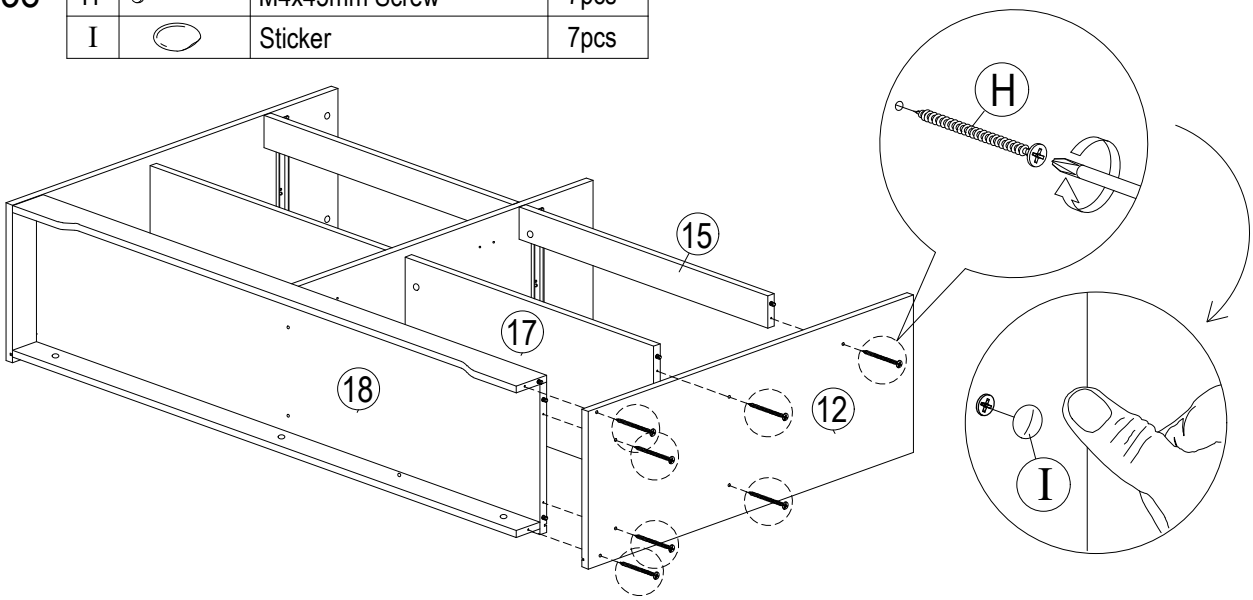

Step 39


O		H-Profile (678x3mm)	2pcs

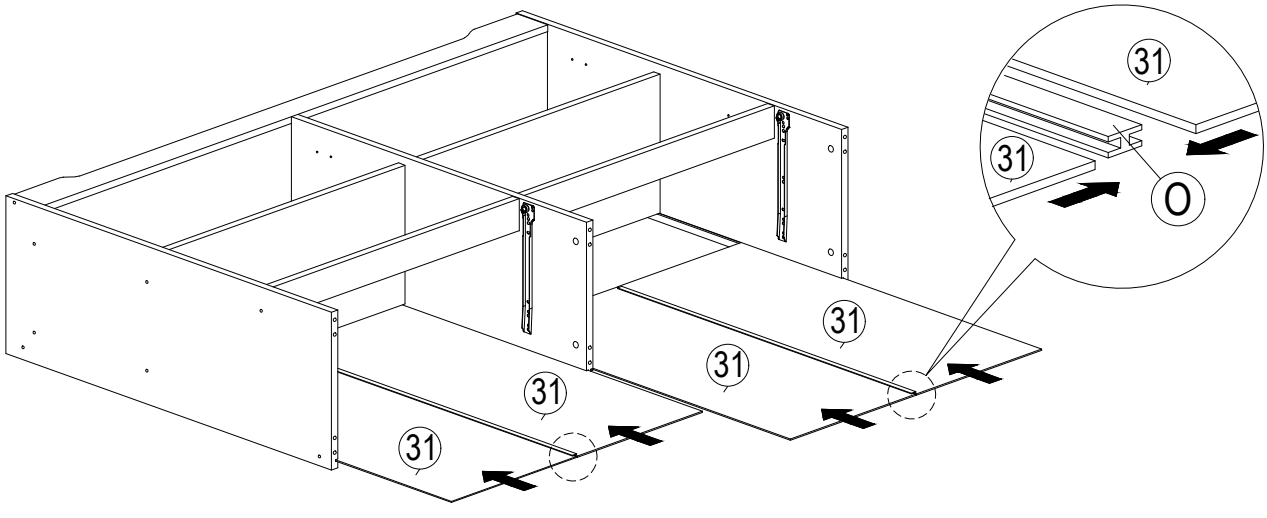

Assembly Instruction


Step 40

C		H12 Minifix	6pcs

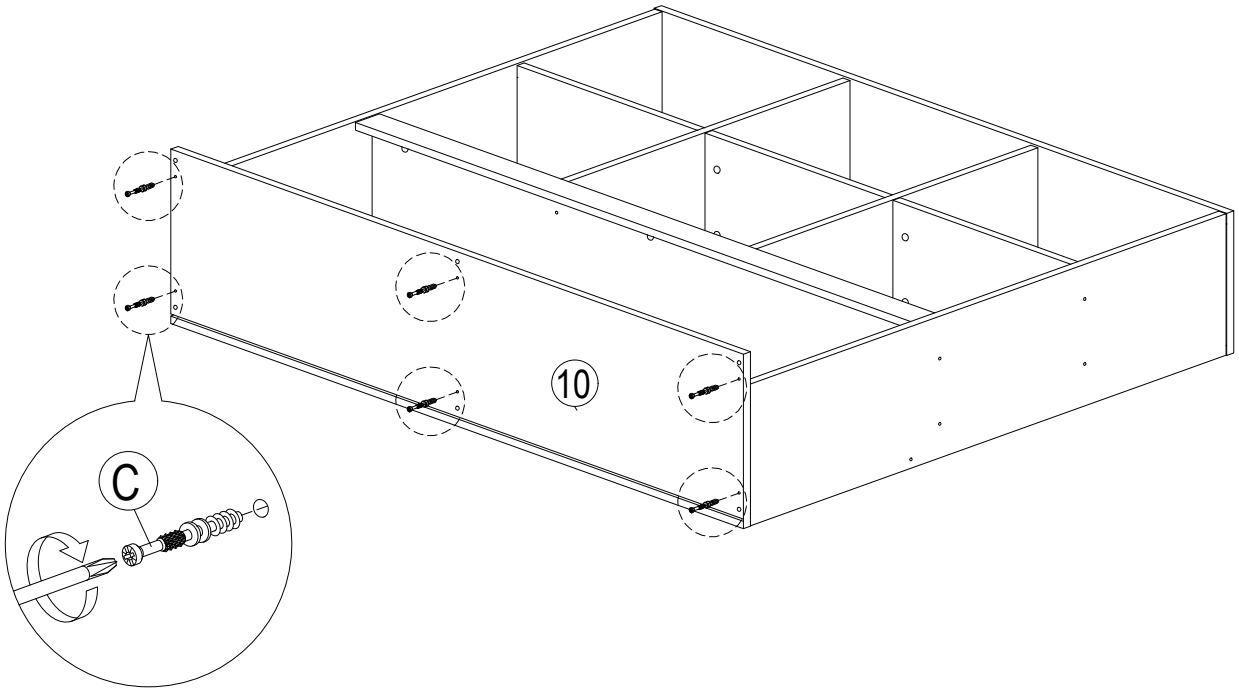

Step 41


A		8x25mm Dowel (Wood)	6pcs

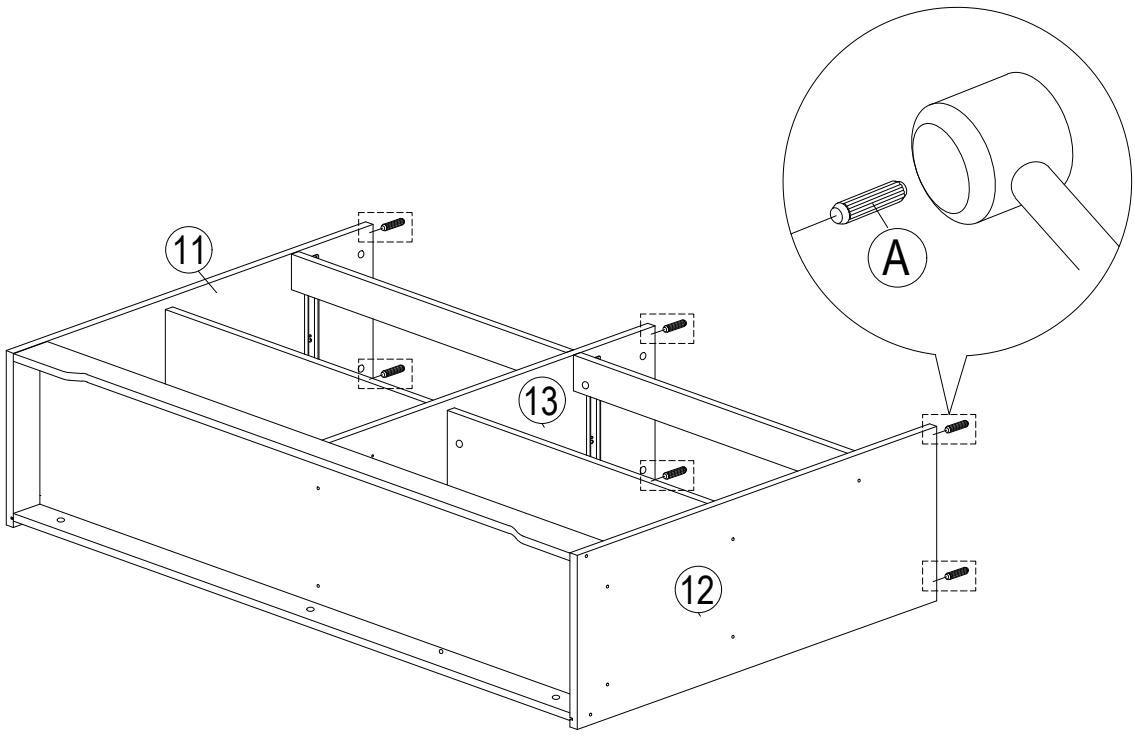

Assembly Instruction


Step 42

B		H12 Minifix	6pcs

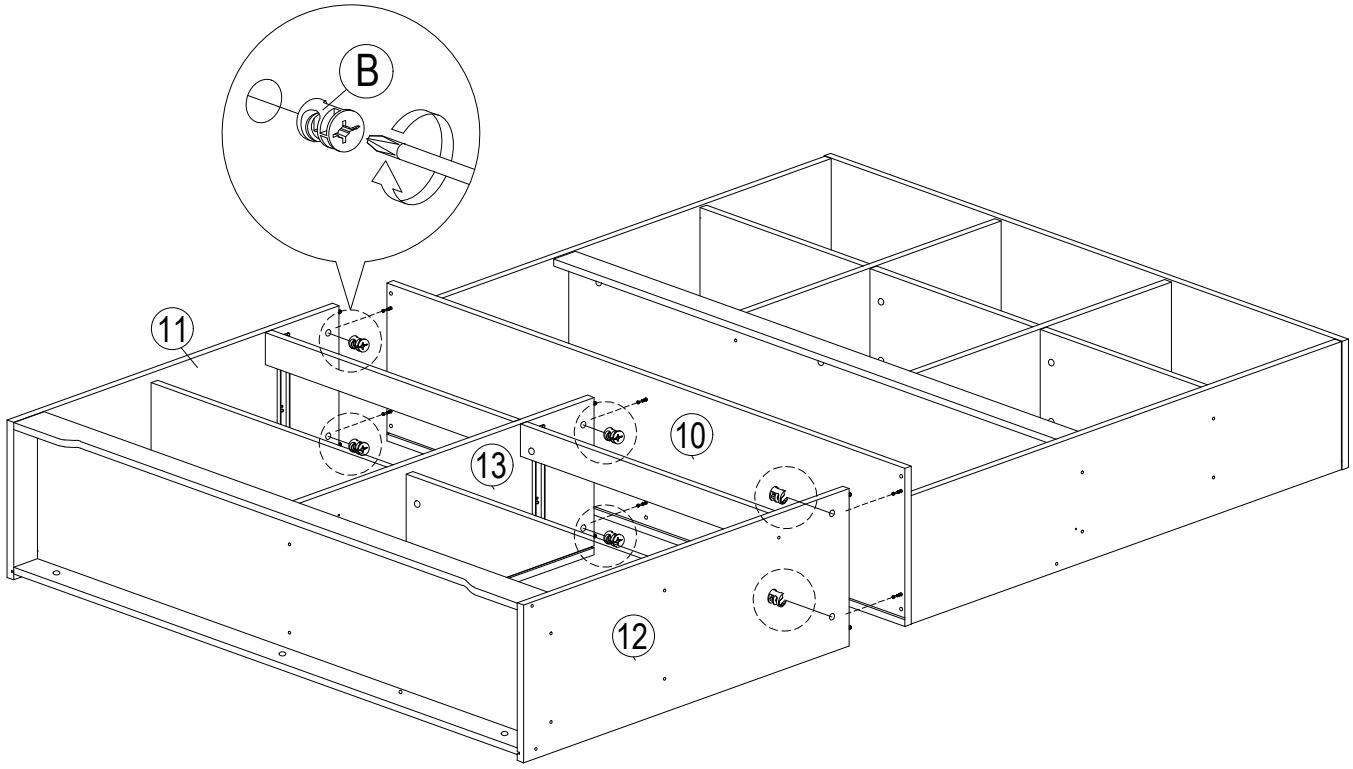

Step 43

J		5/8 Nail With Pin	5pcs

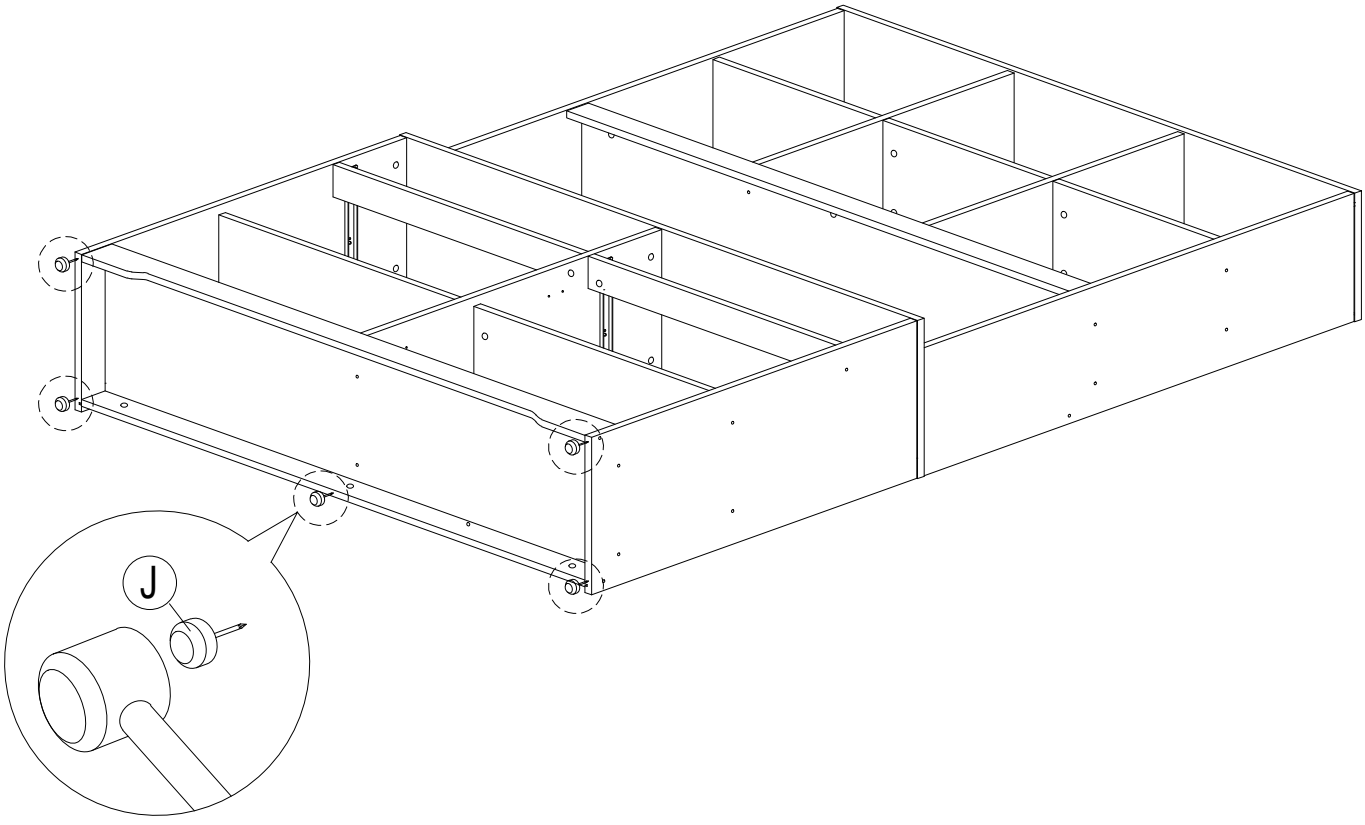


Assembly Instruction

Step 44

F		3.5x16mm Screw	36pcs

K		Pyramid Angle Bar Corner Block	36pcs

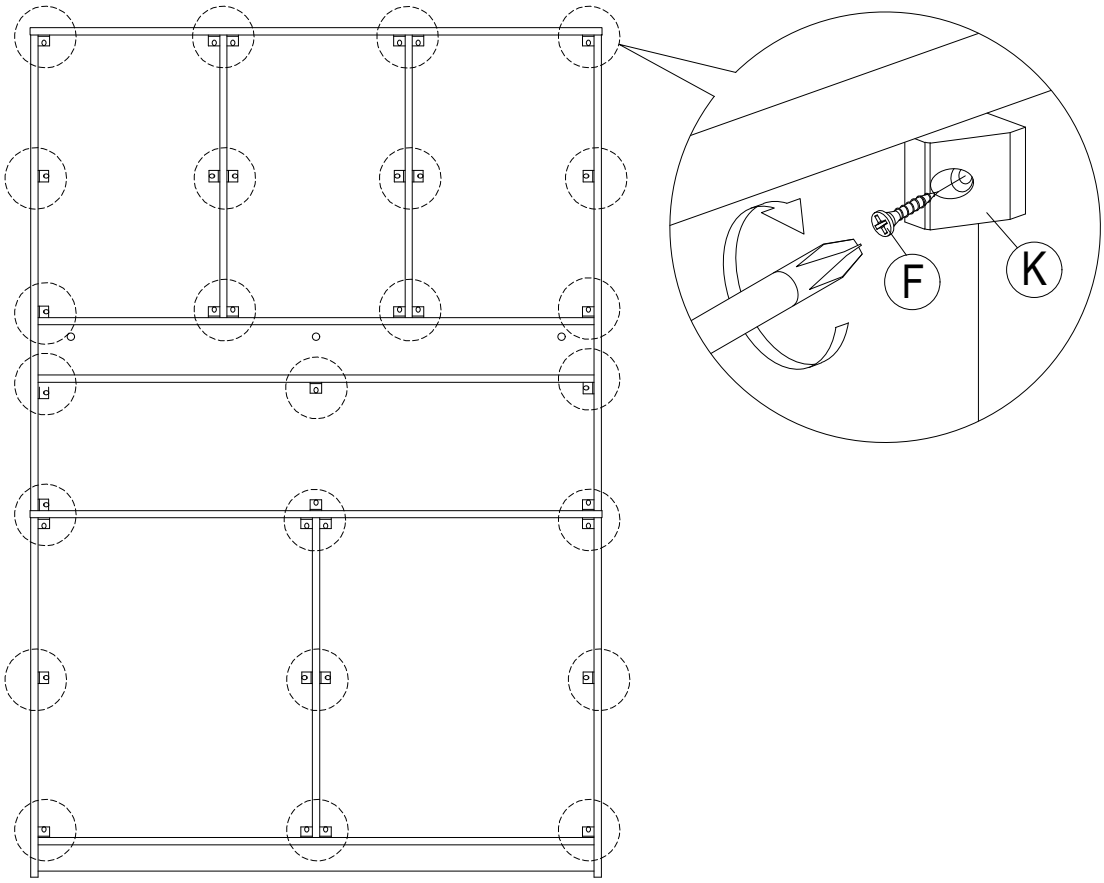


Back View

Step 45

F		3.5x16mm Screw	16pcs

L		Hinges ERT Pump 7/8	8pcs

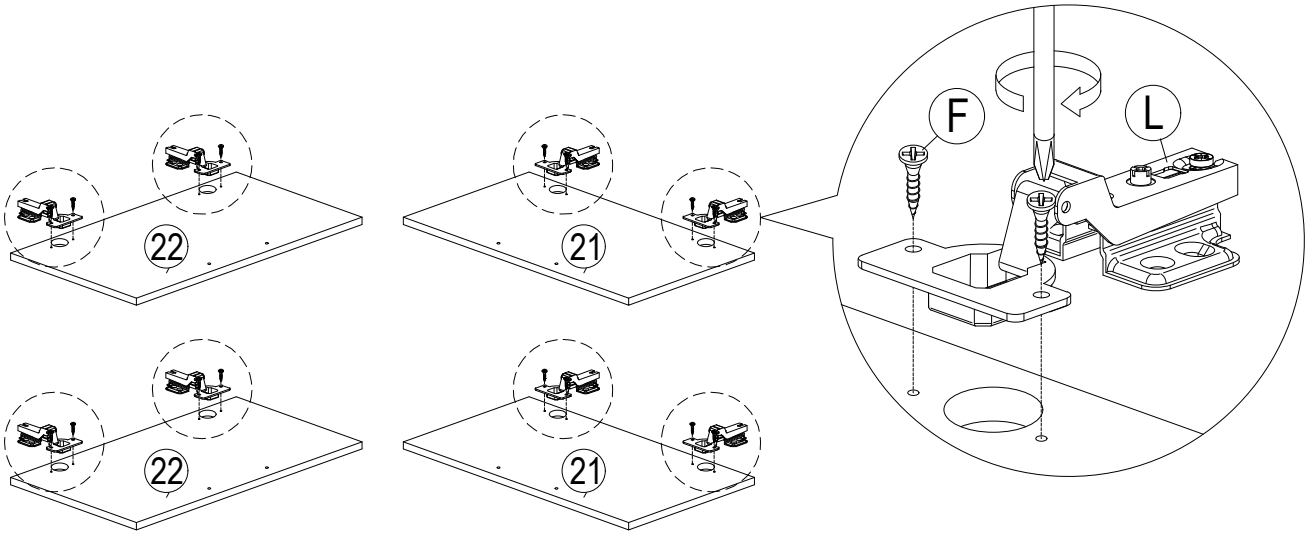


Assembly Instruction

Step 46


F		M3.5x16mm Screw	16pcs
G		M4x28mm Screw	4pcs

M		Handle KT1010.128	2pcs

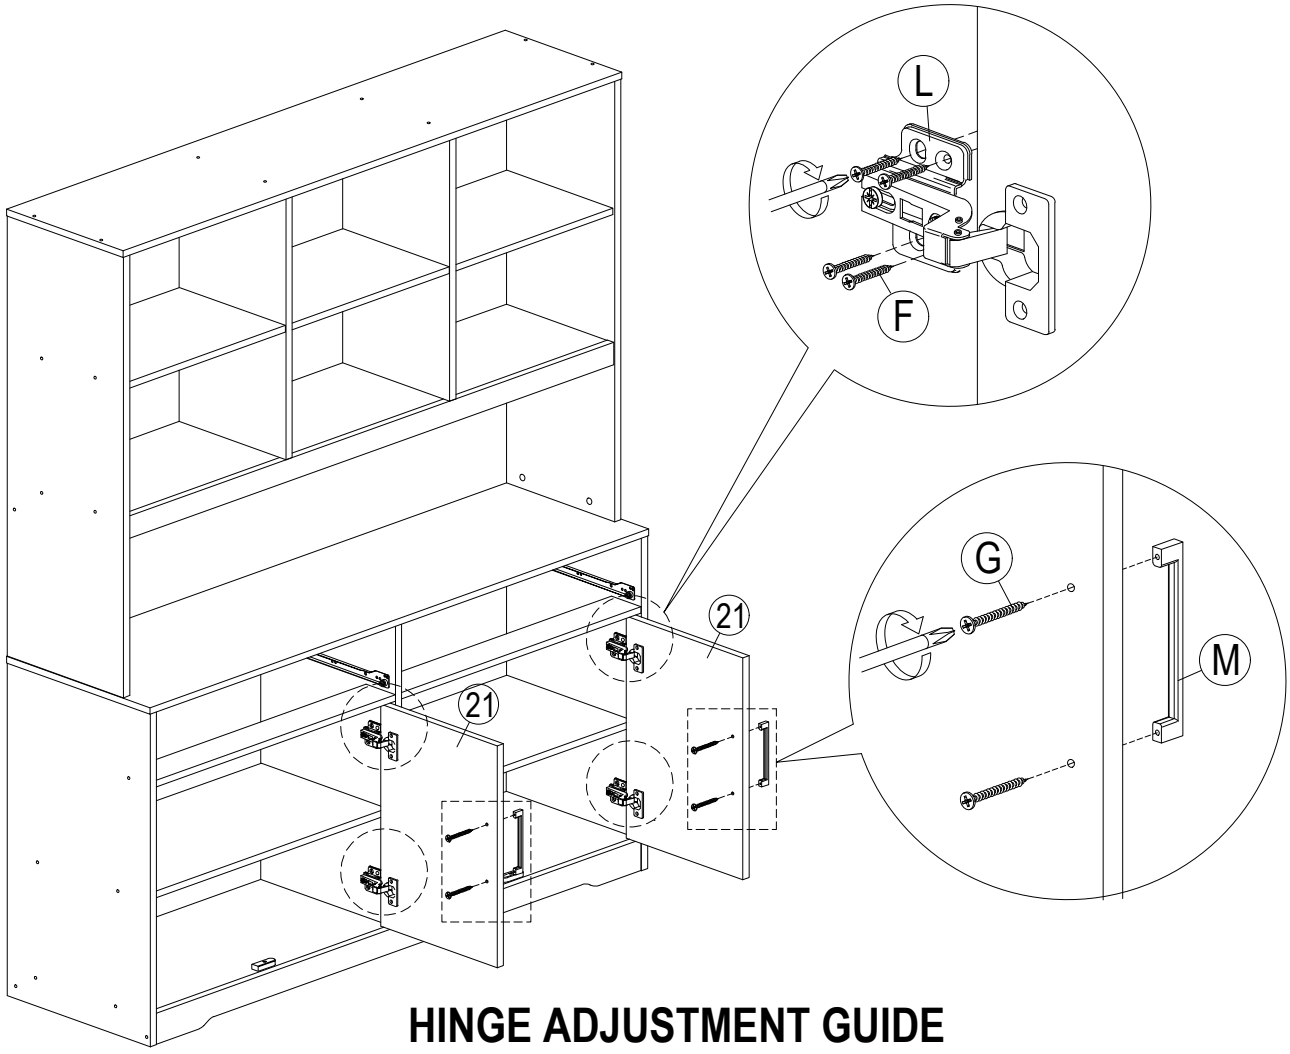

HINGE ADJUSTMENT GUIDE

It may be necessary to adjust the hinges so that the doors align.
Use the instructions below as a guide.

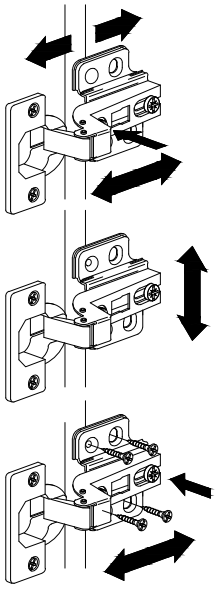

To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

To adjust the door vertically loosen thr screw as shown and move up and down as needed.


To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

Assembly Instruction

Step 47


F		M3.5x16mm Screw	16pcs
G		M4x28mm Screw	4pcs

M		Handle KT1010.128	2pcs

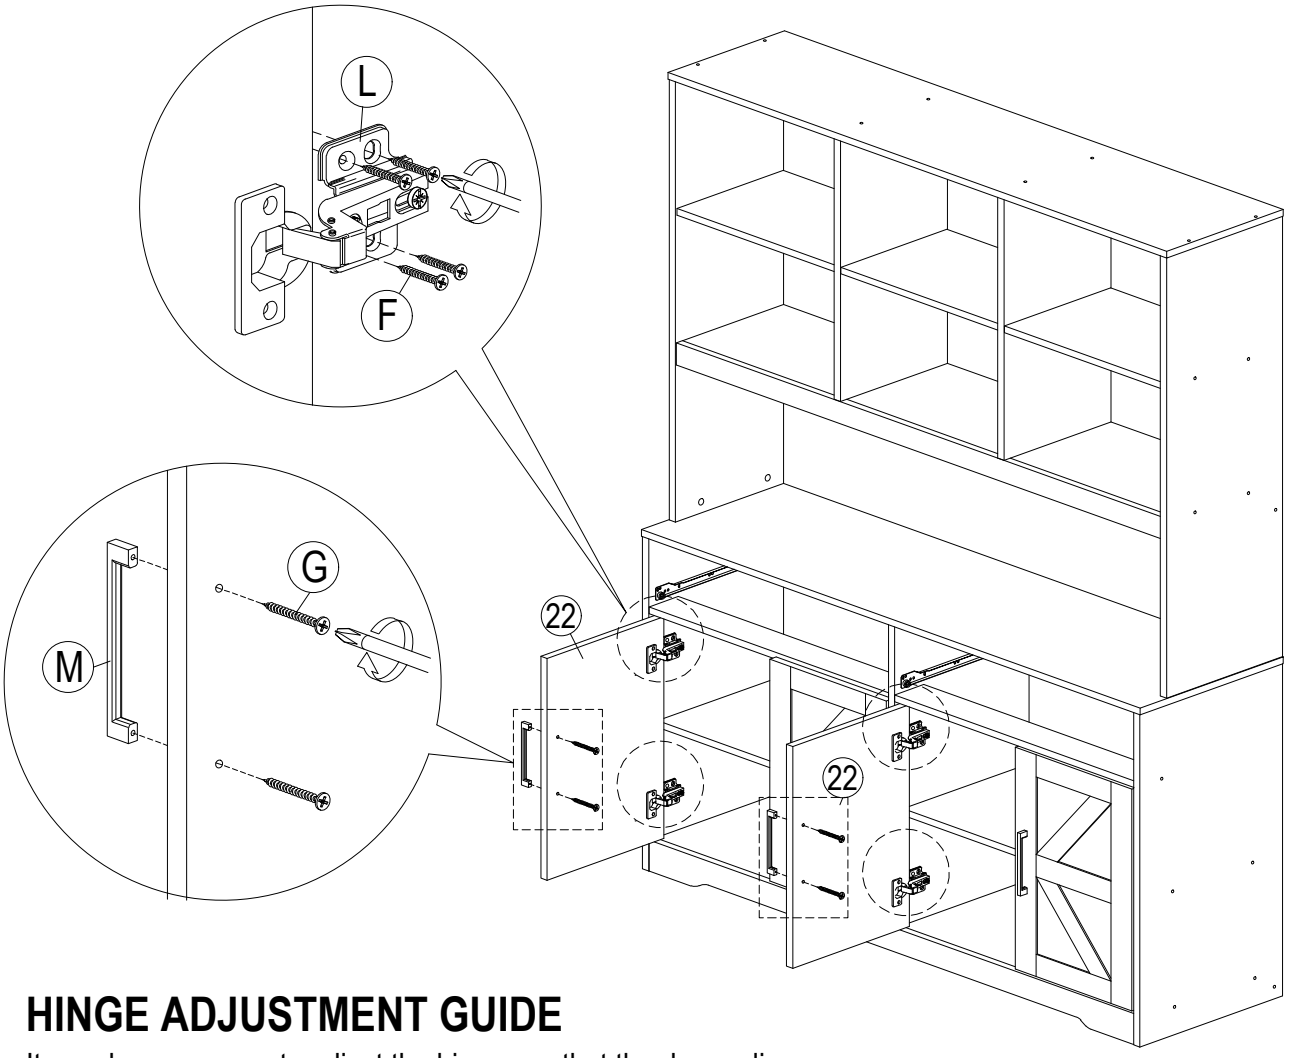


HINGE ADJUSTMENT GUIDE


It may be necessary to adjust the hinges so that the doors align.
Use the instructions below as a guide.

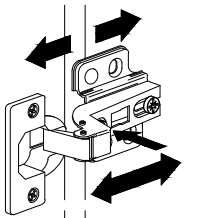

To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

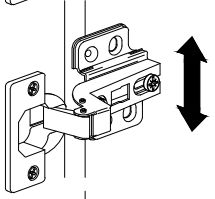

To adjust the door vertically loosen thr screw as shown and move up and down as needed.

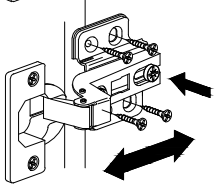


To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.


Assembly Instruction


Step 48

A		8x25mm Dowel (Wood)	4pcs
H		M4x45mm Screw	8pcs

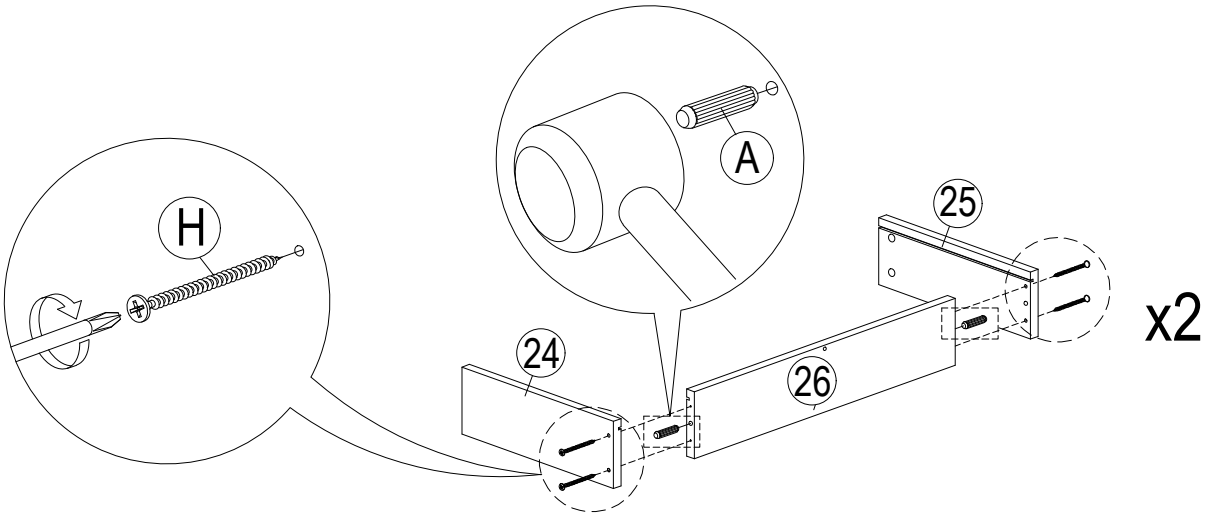


Step 49

H		M4x45mm Screw	2pcs

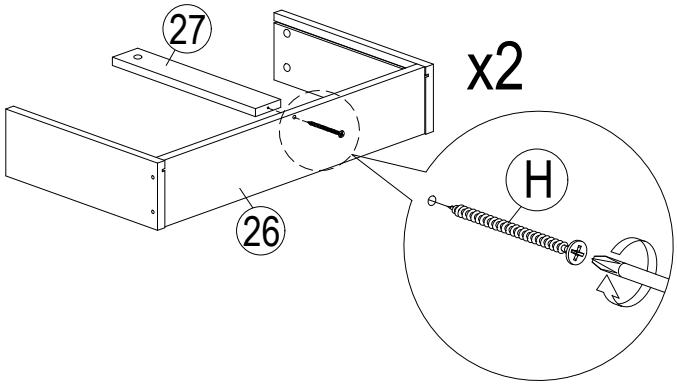


Step 50

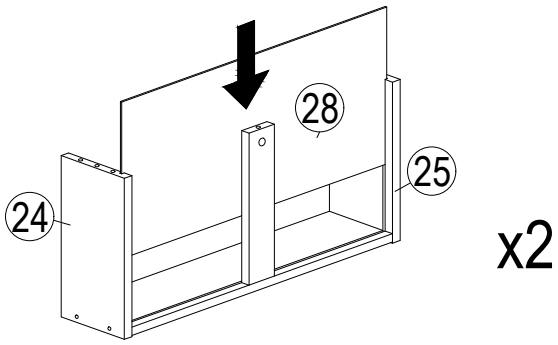


Step 51

C		33 Myfix	10pcs

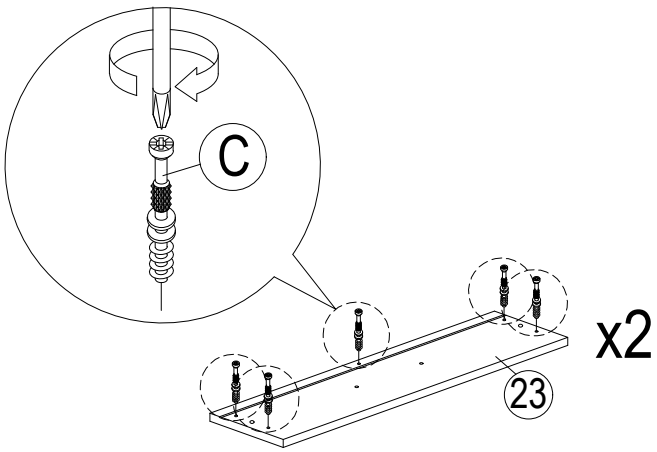

Step 52


A		8x25mm Dowel (Wood)	4pcs

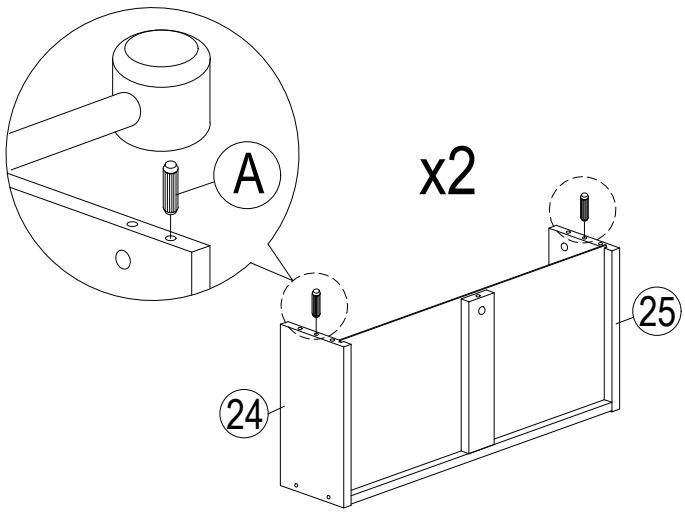

Assembly Instruction


Step 53

B		H12 Minifix	2pcs

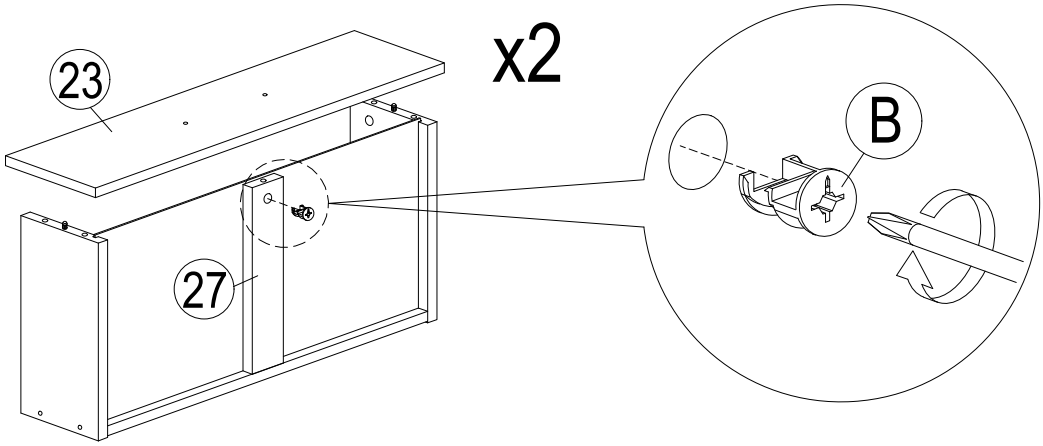

Step 54


B		H12 Minifix	8pcs

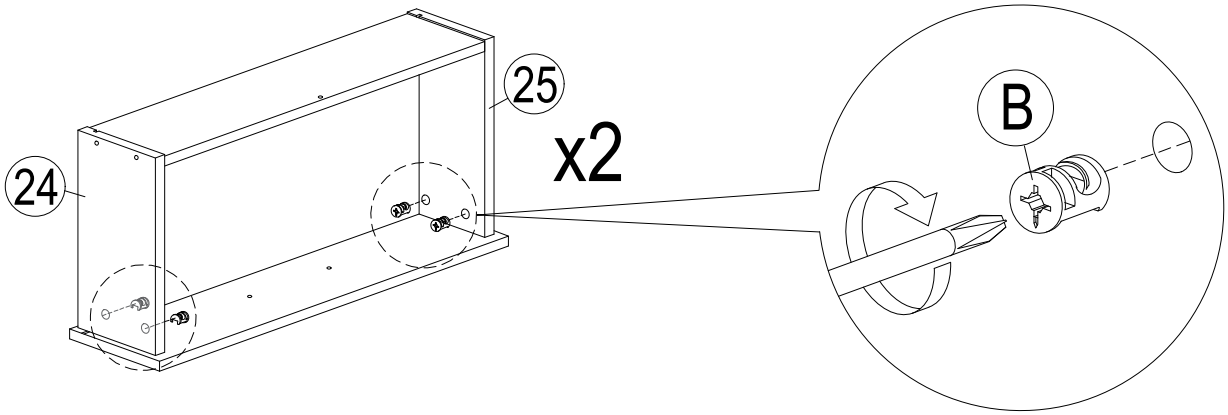

Step 55

G		M4x28mm Screw	4pcs

M		Handle KT1010.128	2pcs

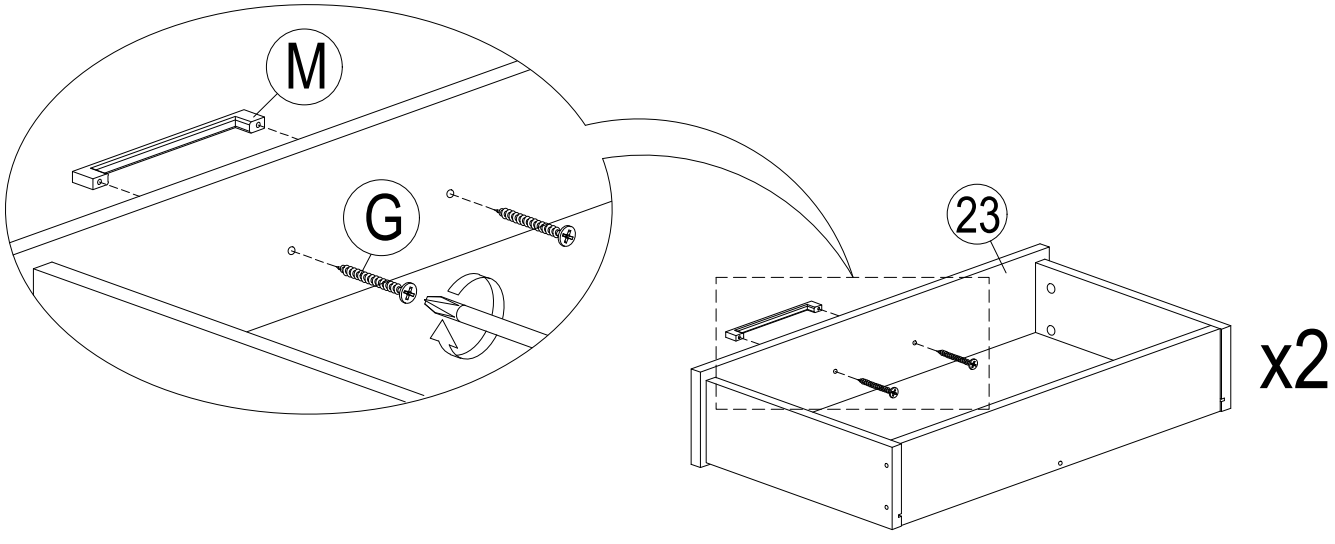


Assembly Instruction

Step 56

F		M3.5x16mm Screw	6pcs


N		Drawer Slide 300mm - L	2pcs

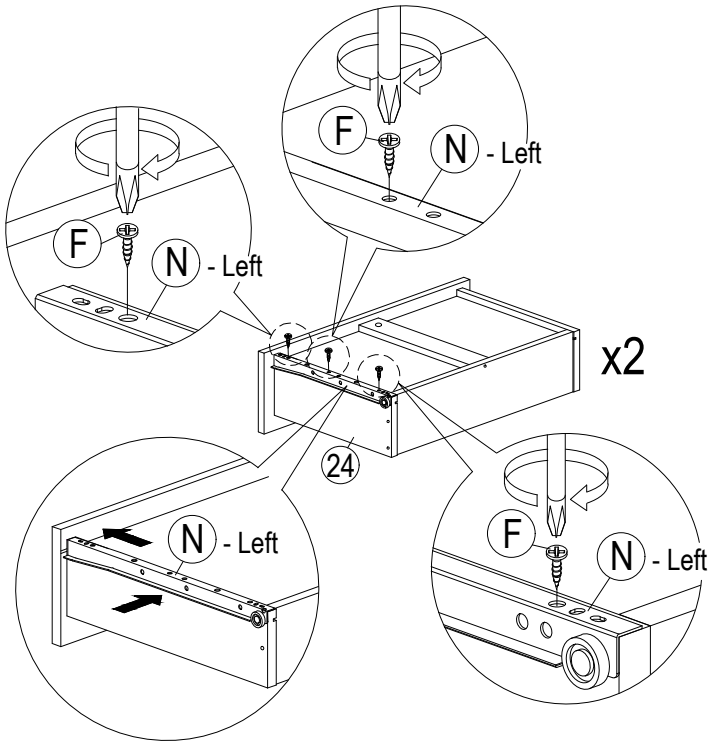

Step 57


F		M3.5x16mm Screw	6pcs

N		Drawer Slide 300mm - R	2pcs

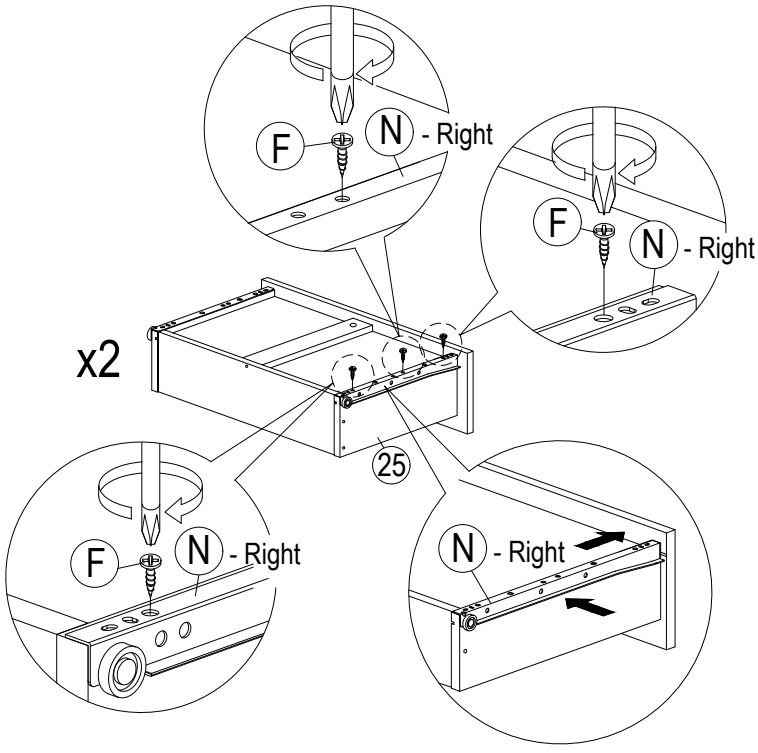


Assembly Instruction

Step 58

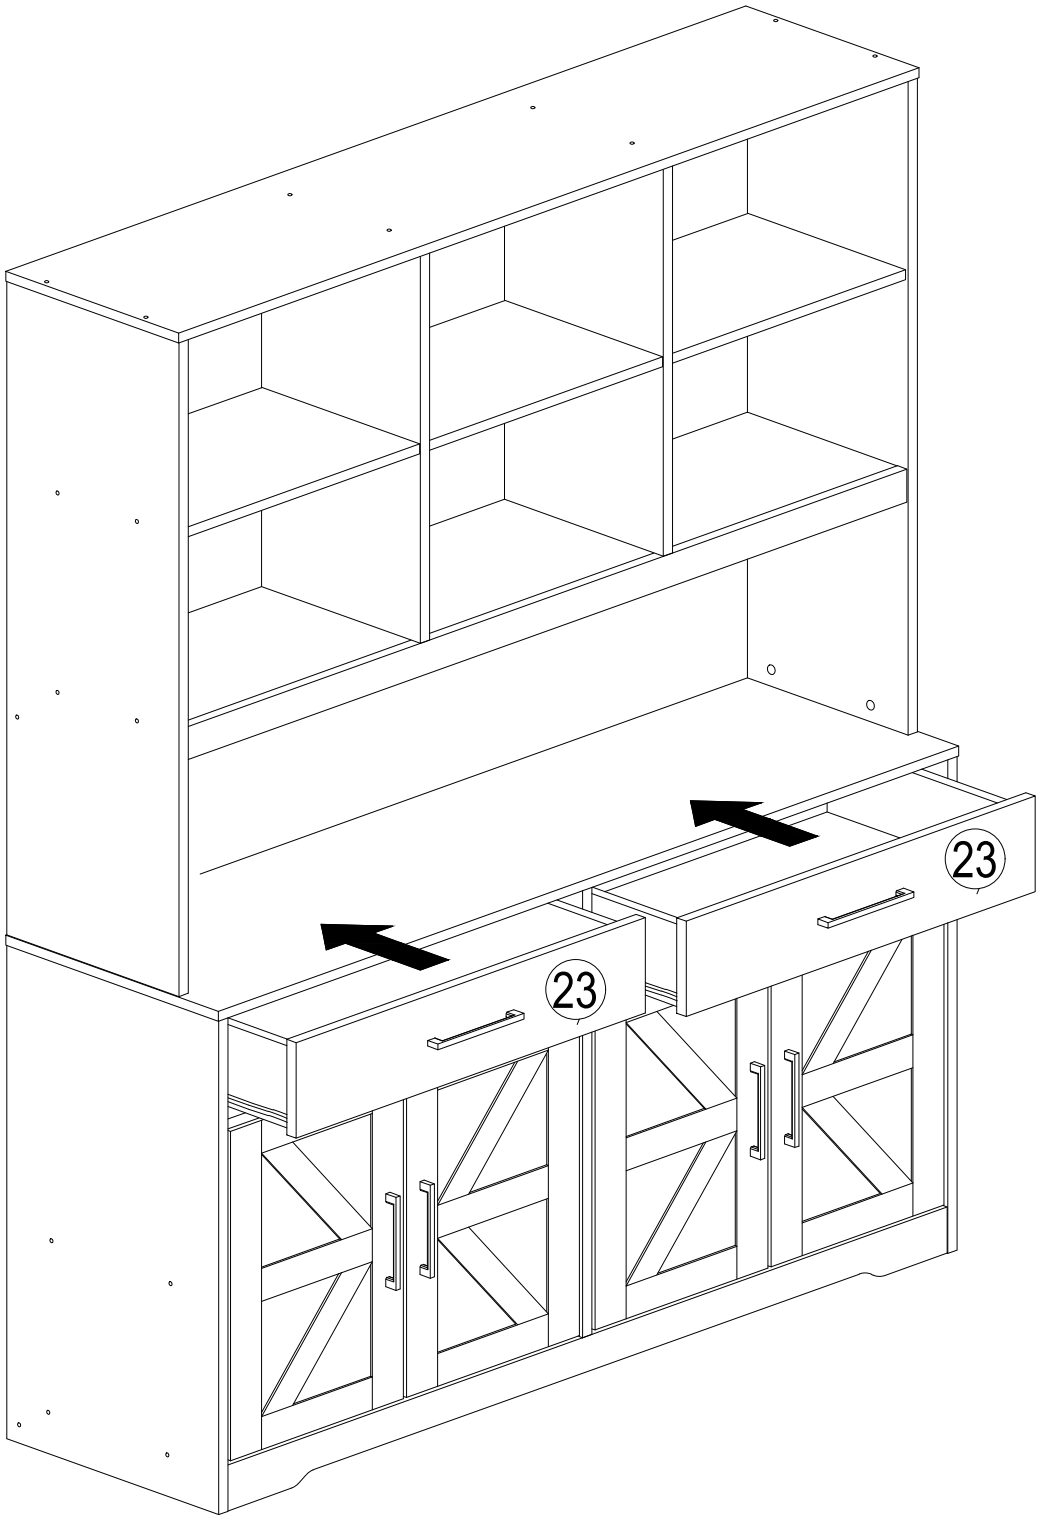

FITTING OF ANTI-TIP SAFETY STRAP

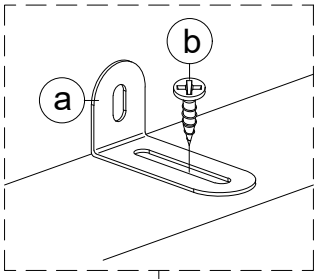



STEP 1:


- Attach the L-bracket (a) to the furniture in the solid part on the top panel a few inches away from the side of the unit.
- Screw (b) through the longest hole of (a).




STEP 2:

- Mark the wall before drilling a hole.
- Drill a hole & insert the wall plug (d).
- Close the furniture to the wall and attach the L- bracket to the wall by using screw (c).

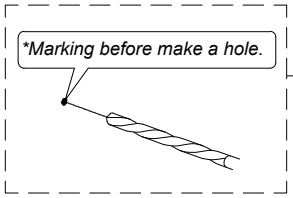

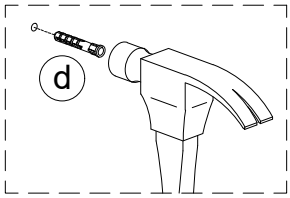

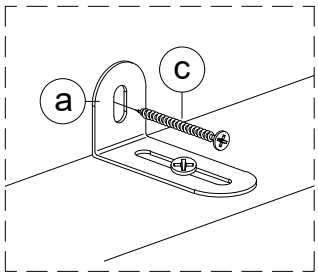

a **L-Bracket (1.2x24x90mm) 2pcs** 	b **M3.5x12mm Screw 2pcs** 	c **M4x38mm Screw 2pcs** 	d **Ø6x25mm Wall Plug 2pcs** 