


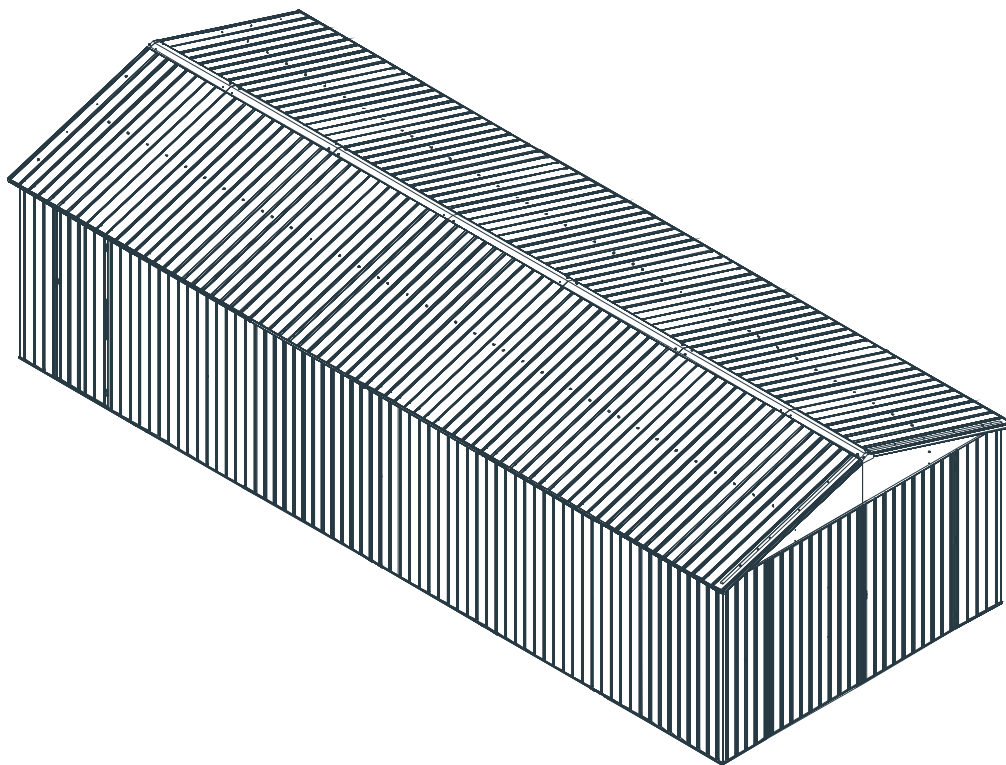

12' X 30'

Steel Garage

ASSEMBLY MANUAL



MODEL#: LGCF1794

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com



PLAN AHEAD

Before beginning installation, check local building codes regarding footings, location and other requirements. Study and understand this instruction. Important information and helpful tips will make your installation easier and more enjoyable.

Tools and Materials: There are some basic tools and materials you will need for the installation. Decide which method of anchoring and the type of foundation you wish to use in order to form a complete list of the materials you will need.

BEFORE YOU BEGIN

Assembly Instruction: Instructions are supplied in this manual and contain all appropriate information for your installation. Review all instructions before you begin, and during assembly, follow the step sequence carefully for correct results.

Parts List: Check to be sure that you have all the necessary parts and quantities in your package. These are packaged within the carton. Note that extra fasteners have been supplied for your convenience.

Explosion Diagram: All parts except screws and bolts are shown in this diagram, review all parts before you begin. Familiarize yourself with the hardware and fasteners for easier use during installation.

Pre-assembly



1. Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Please use a Phillips screw driver.



6. For ease of construction, you may need a drill.



7. You may need a safety goggle.



8. Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-Gaskets must be used.

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

▲ Use bolts to secure the frame to the ground to against the strong wind.

 Please stand inside the shed frame when installing the panels for convenience.

ASSEMBLY TIPS & TOOLS

Watch the Weather Closely: Be sure the day you choose to install your building is dry and calm. Do **NOT** attempt to assemble your building on a windy day. Be careful on wet or muddy ground.

Use Teamwork: Two or more people are required to assemble your building. One person can hold the parts or panels in place while the other person fastens them together and handles the tools. This makes the process of assembling your building faster and safer.


Tools and Materials: Here is a list of some basic tools and materials you will need to assemble your building. Decide which method of anchoring and the type of base you will use to make a complete list of the materials you will need.

WHAT YOU NEED




- Work Gloves
- Safety Glasses
- Step Ladder
- No. 2 Phillips Screwdriver (Magnetic Tip Preferred)
- Utility Knife or Scissors
- Pliers
- Carpenter's Level
- Tape Measure

RECOMMENDED TIME SAVERS

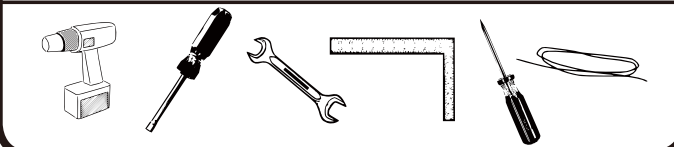

- Power Drill (Cordless, Variable Speed)
- Nut Driver or Wrench
- Square
- String (for squaring the frame)
- Awl (to align holes)

BASE PREPARATION TOOLS

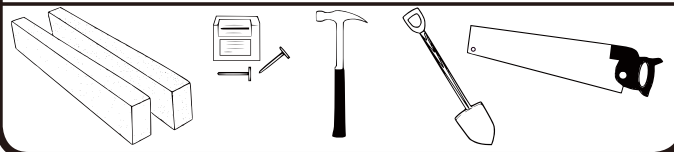

- Lumber and/or Concrete
- Hammer and Nails
- Spade or Shovel
- Hand Saw or Power Saw


How to Select and Prepare Your Building Site: Before you start to assemble your building, you will want to decide on a good location. The best location is a level area with good drainage.

- Allow enough working space so it is not difficult to move parts into position for assembly. Be sure there will be enough space at the entrance for the doors to completely open. Also, there needs to be enough space outside the building to be able to fasten the panel screws from the outside.
- Before assembling any parts, your base should be constructed and an anchoring system should be ready to use.

SAFETY PRECAUTIONS...

*Safety precautions **MUST** be followed at all times throughout the construction of your building!*

sharp edges

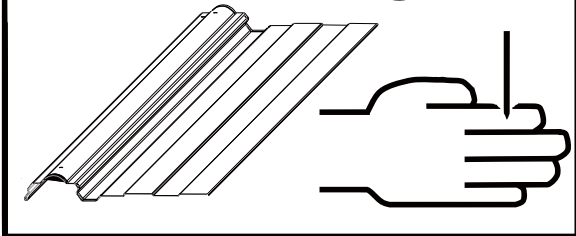


Care must be taken when handling various pieces of your building since many contain sharp edges. Please wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your building.

no children or pets at worksite




Keep children and pets away from the worksite during construction and until the building is completely assembled. This will help avoid distractions and any accidents which may occur.

don't focus weight on roof

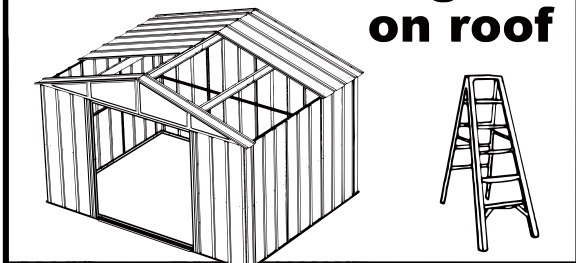

NEVER concentrate your weight on the roof of the building. When using a step ladder make sure that it is fully open and on even ground before climbing on it.

always practice proper tool safety

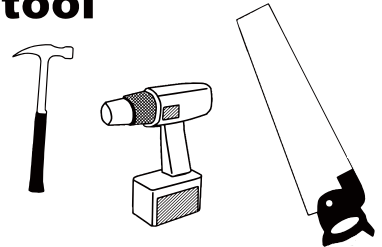


Practice caution with the tools being used in the assembly of this building. Be especially familiar with the operation of all power tools.

beware of wind




Do NOT attempt to assemble your building on a windy day. The large panels can catch the wind like a "sail", causing them to be whipped around making construction difficult and unsafe.


Do NOT attempt to assemble your building before double checking that you have all the parts indicated in the parts lists as well as all hardware. Any building left partially assembled may be seriously damaged by even light winds.

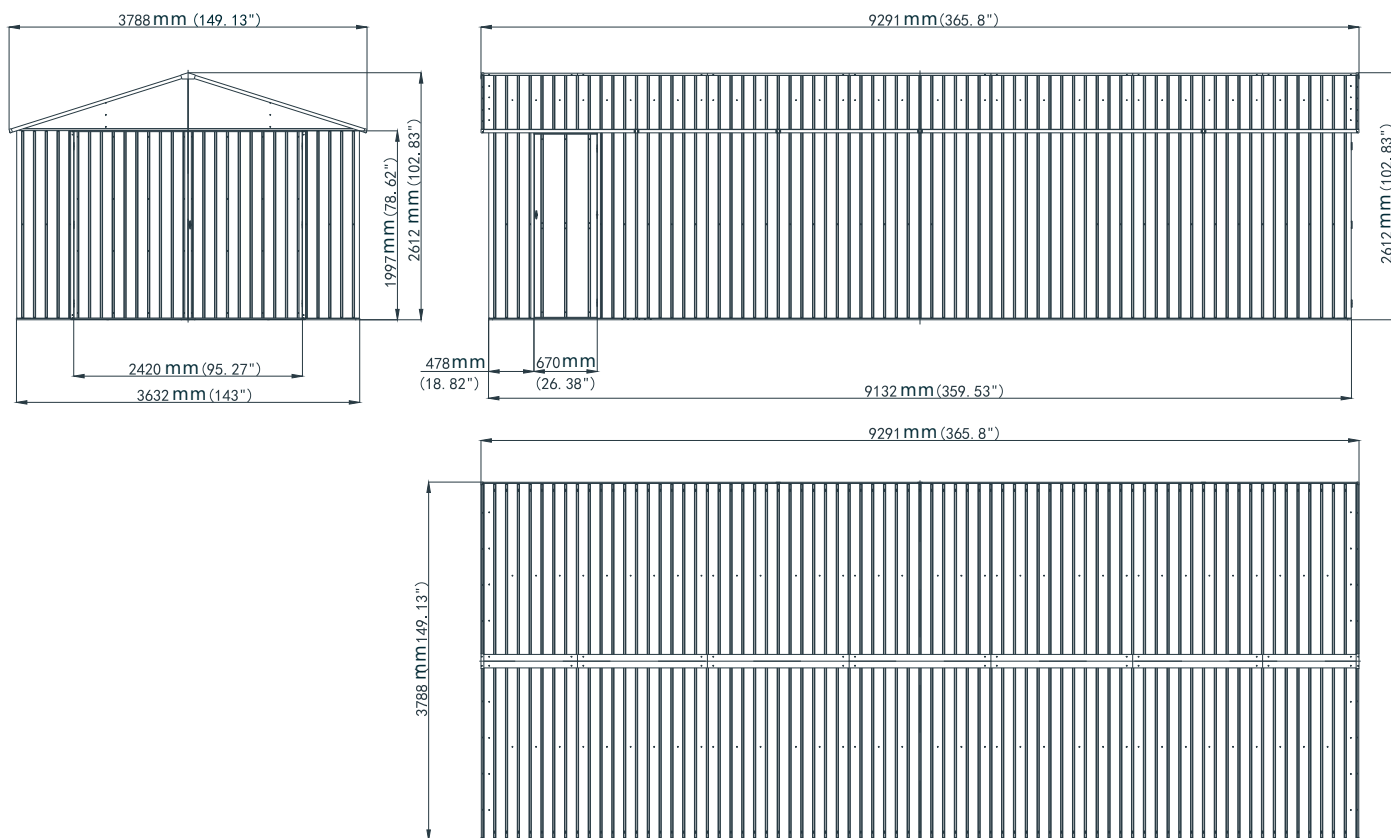

Garden shed
LGCF1794
12' X 30'

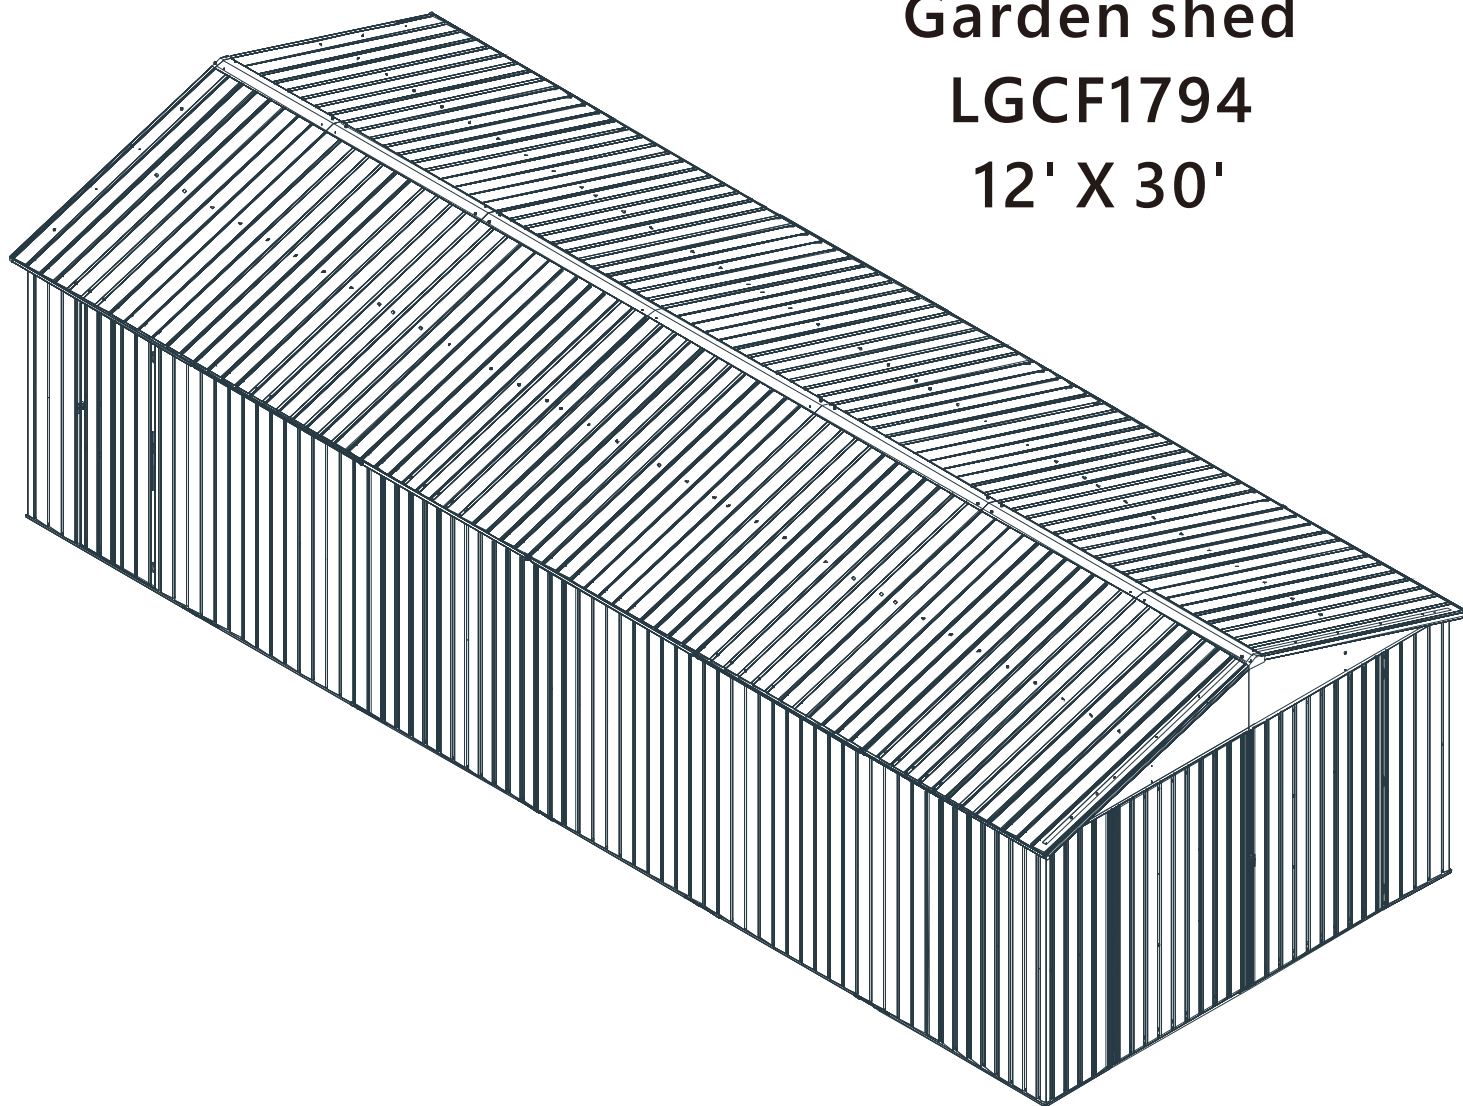

The Base For Your Building

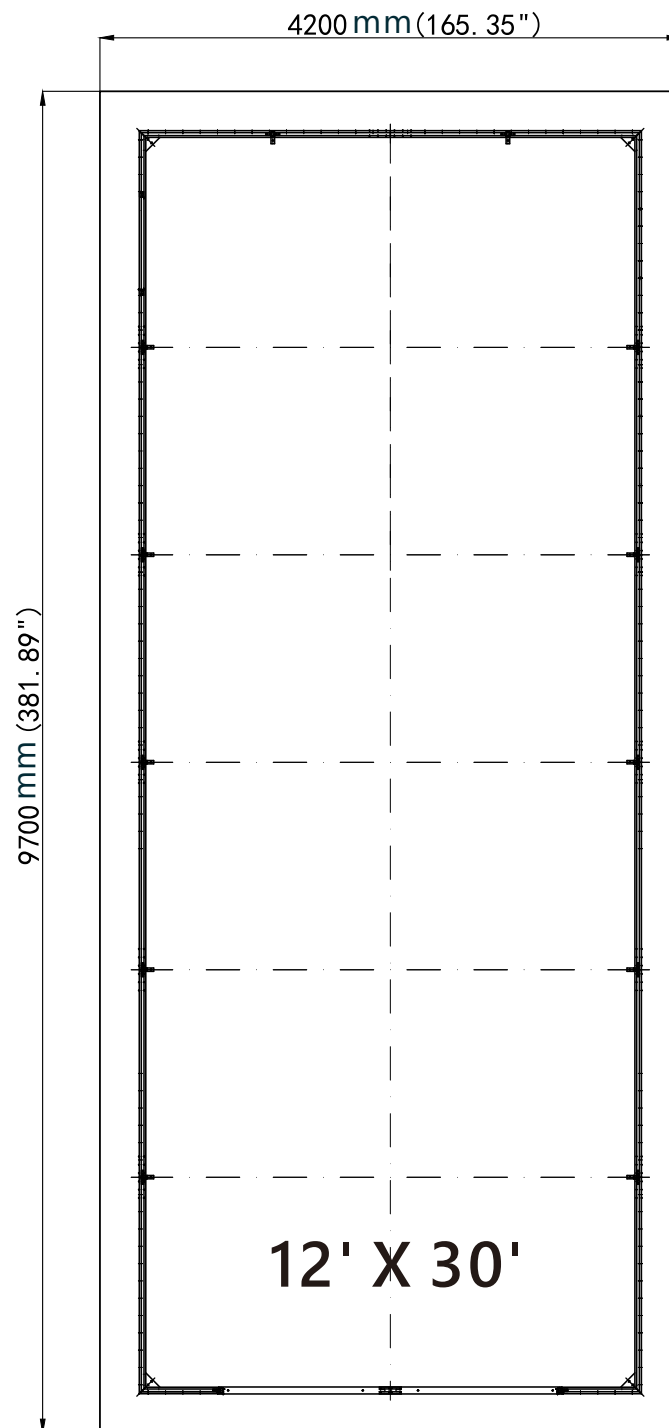

Concrete Slab


The slab should be at least 4" (10.2 cm) thick. It must be level and flat to provide good support for the frame.










Prepare the Site/Construct a Base





1. Dig a square, 6" (15.2 cm) deep into the ground (remove grass).
2. Fill up to 4" (10.2 cm) in the square with gravel and tamp firm.
3. Cover gravel with a sheet of 6 mil plastic.
4. Construct a wood frame using four planks of 2x4 (38 mm x 89 mm) lumber.
5. Pour in concrete to fill in the hole and the frame giving a total of 4" (10.2 cm) thick concrete. Be sure surface is level.
























Note: Before beginning construction, check local building codes regarding footings, location and other requirements.


Base Frame Dimension

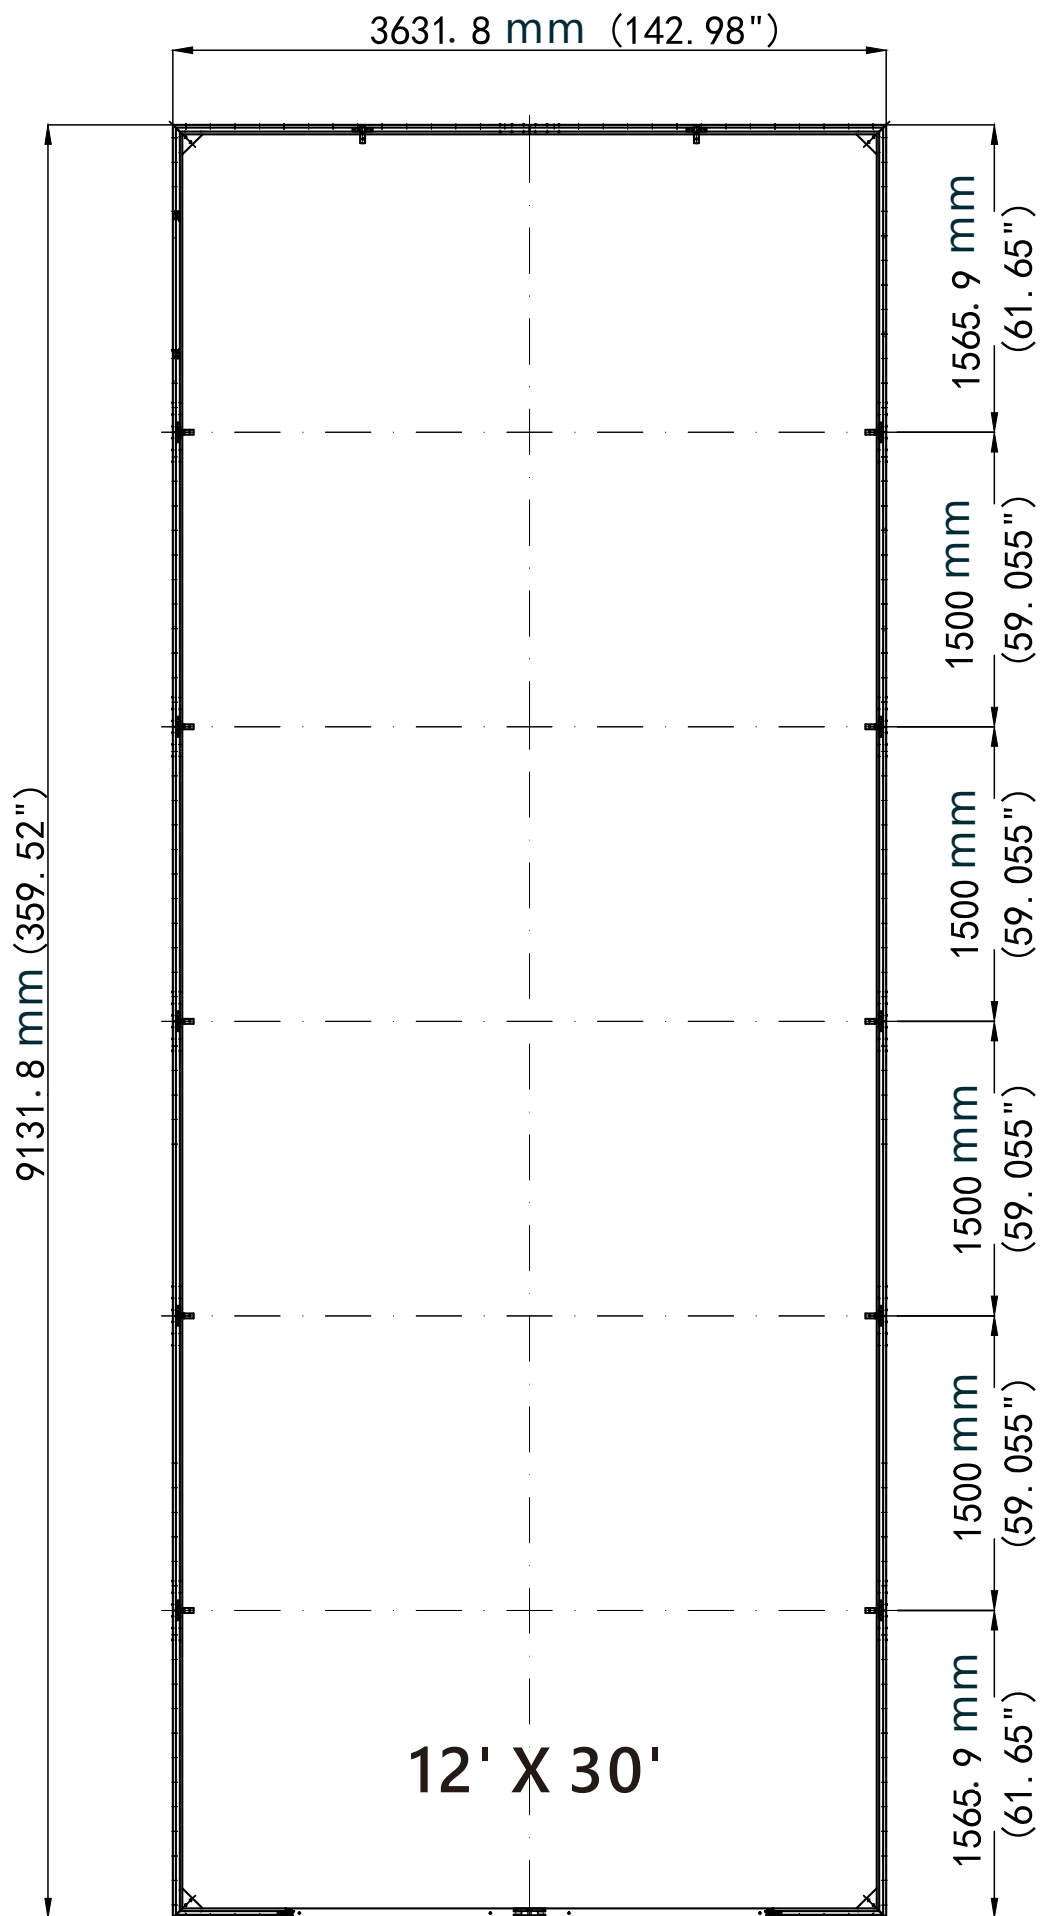















 573 A1 x1		 573 A2 x1	
 1814 A3 x1		 1814 A4 x1	
 1564 A5 x1		 1564 A6 x2	
 1564 A7 x1		 1500 A8 x8	
 1240,5 A9 x2		 A10 x11  A11 x4	
 A12 x1	 A13 x12	 2000 C12 x1	

 2016, 5 B1 x1	 2016, 5 B2 x1	 2015 B3 x1	 2015 B4 x1	 2004 B5 x1	 2004 B6 x1	 2019 B7 x2
 1996 B8 x10	 1844 B9 x10			 1900 B10 x5		
	 B11 x20			 550 B12 x5		
	 B13 x10			 B14 x10		
	 B15 x2	 B16 x26		 B17 x2		

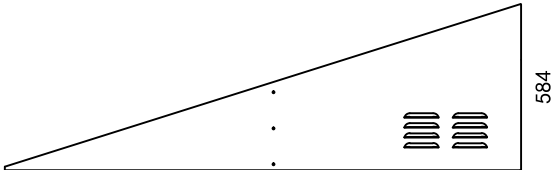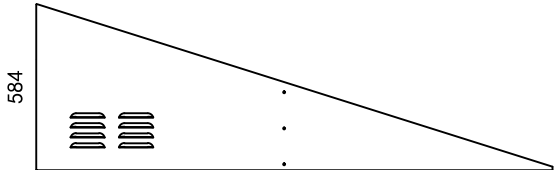 1792 C1 x1	 1792 C2 x1
 1792 C3 x1	 1792 C4 x1
 1552 C5 x1	 1532 C6 x2
 1552 C7 x1	 1500 C8 x8
 C9 x11	 C10 x4  C11 x1
 584 1813 D1 x2	 584 1813 D2 x2
 D3 x2  D4 x2	 D x4
 1568 E1 x2	 1568 E2 x2
 1500 E3 x8	 600 E4 x10  600 E5 x5
 1555 F1 x2	 1555 F2 x2
 1474,5 F3 x8	
 G x4  G1 28	 543 G2 x2
 916 G3 x2	 1673 G4 x1
 443 G5 x1	 400 G6 x1
 1516 G7 x3	 1473 G8 x8











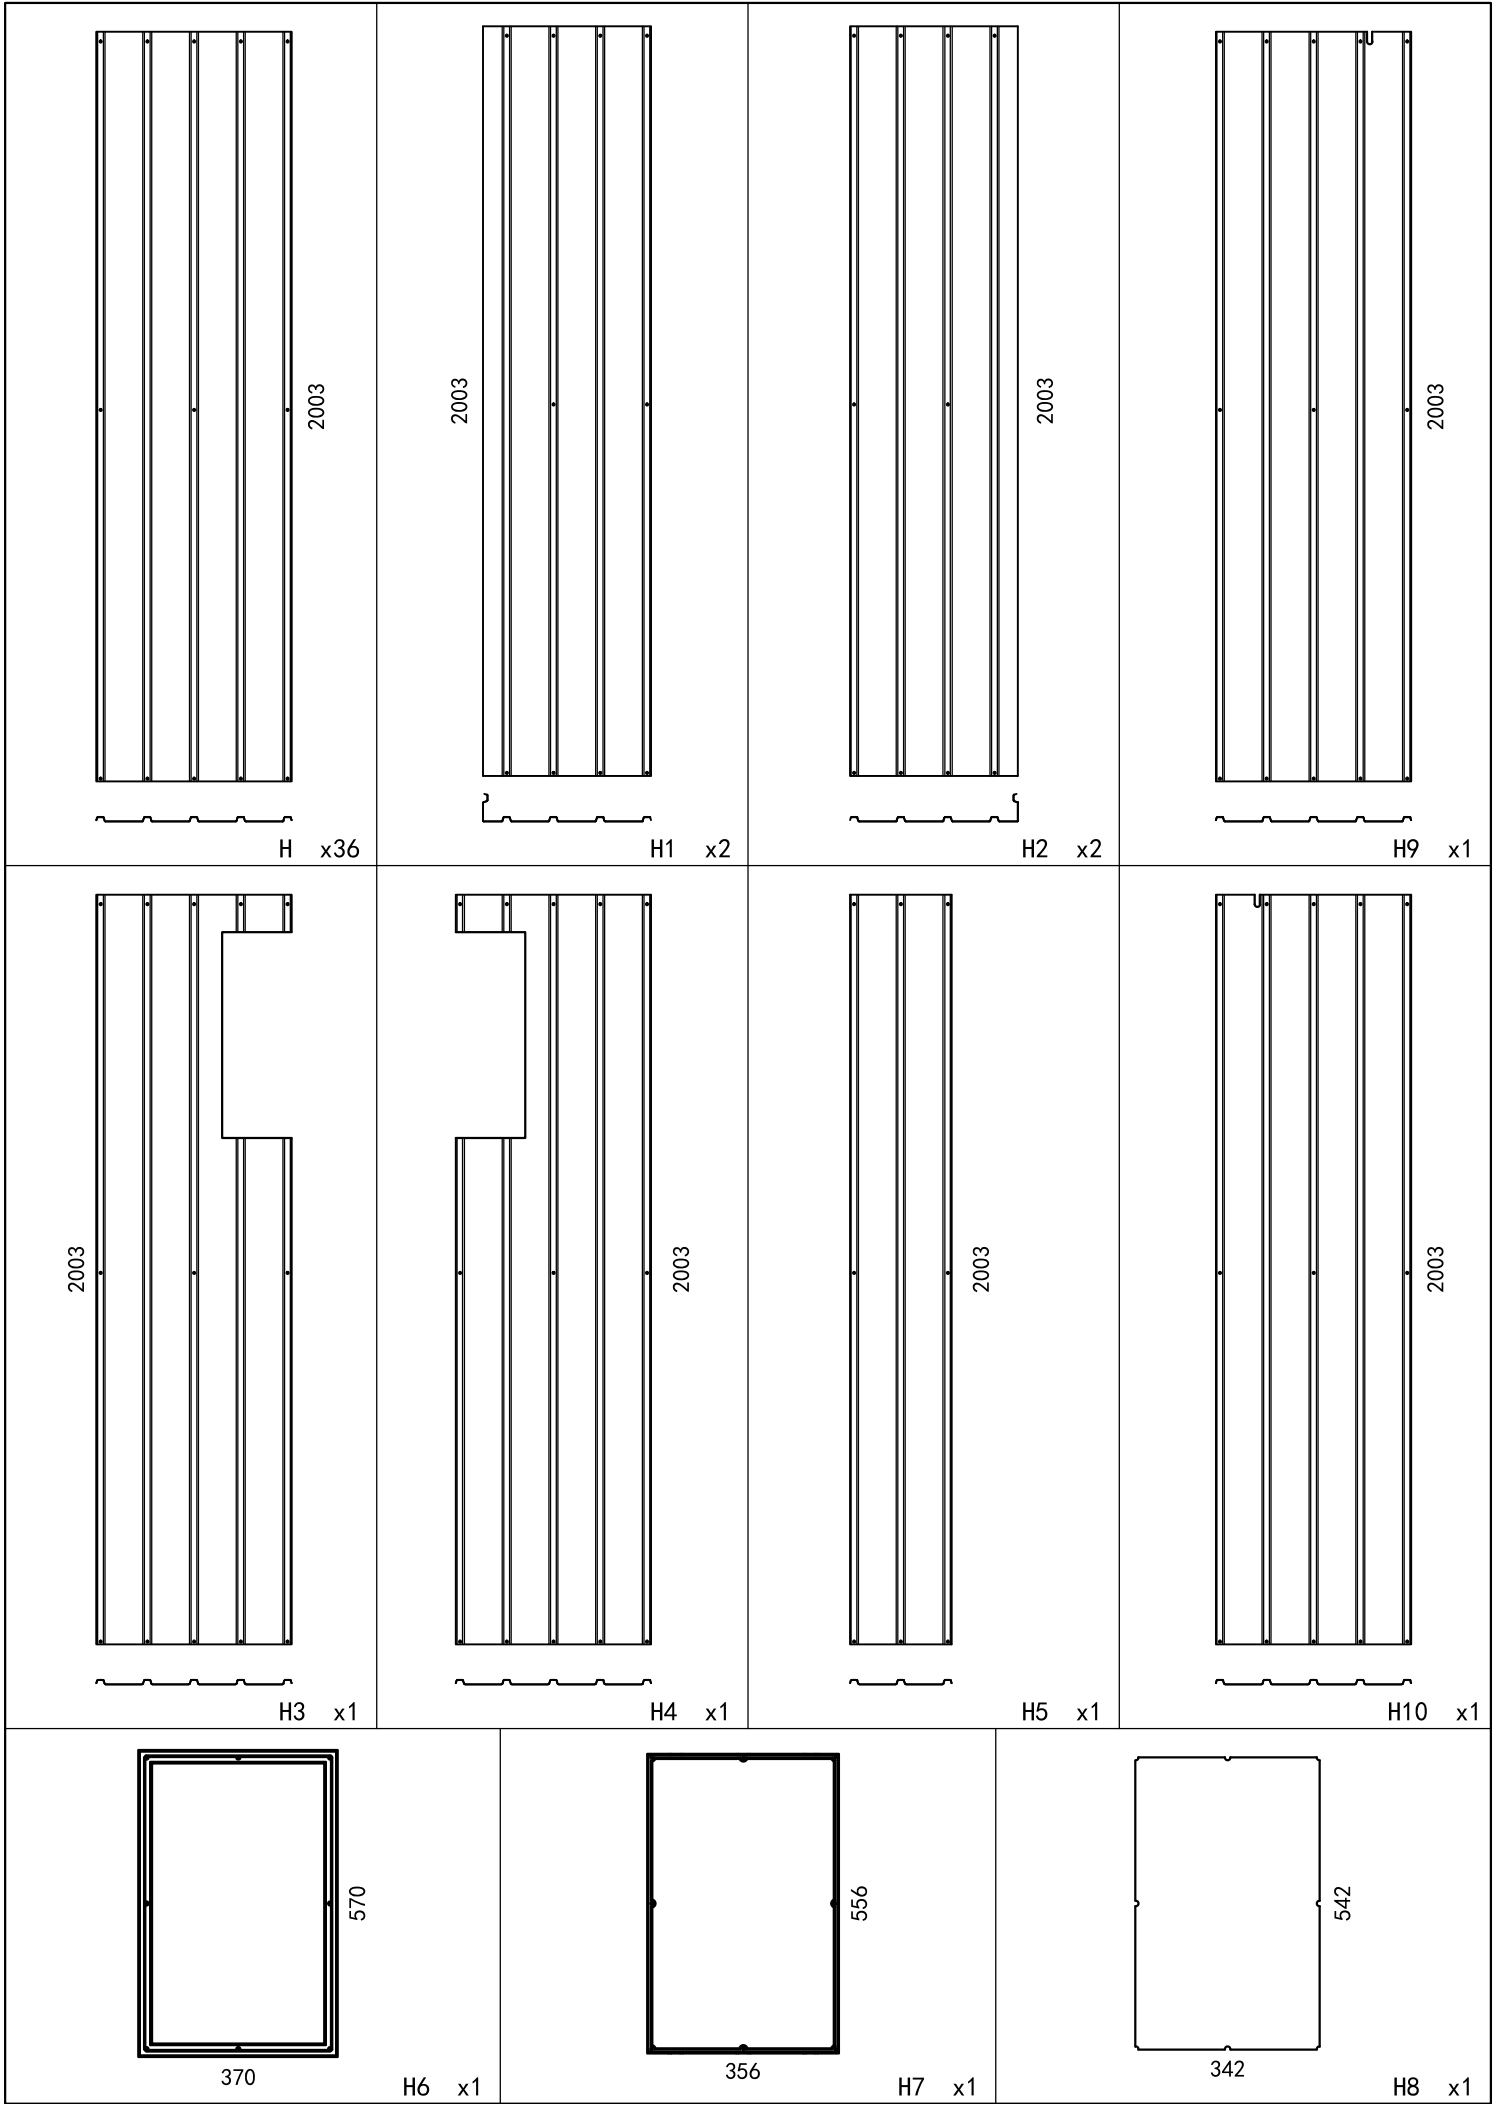





1794(12'X30')- Sheet 3

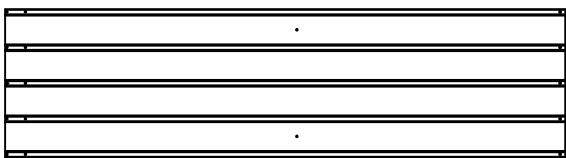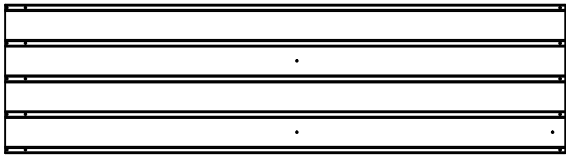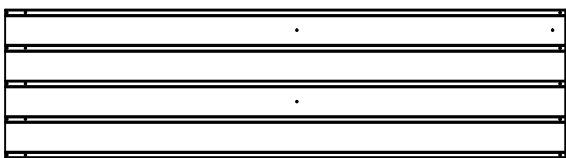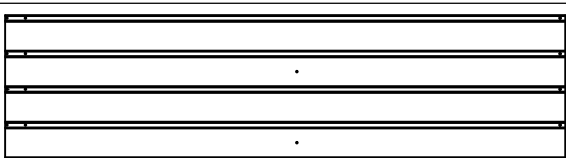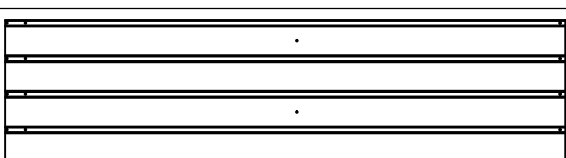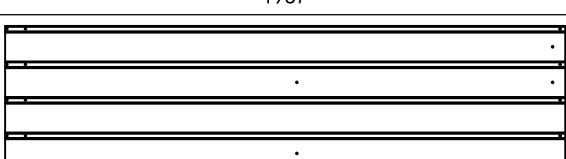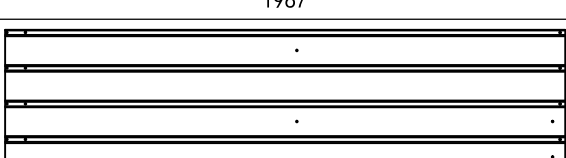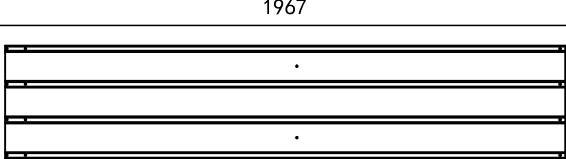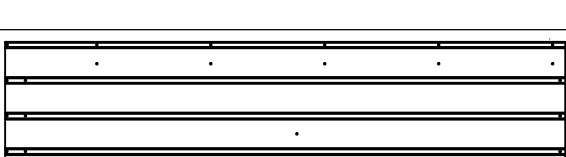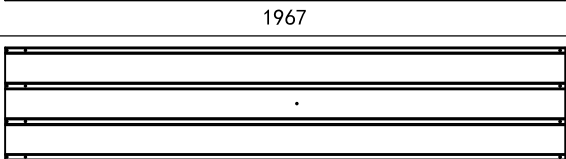
 1967 J9 x6	 1960 K2 x2
 1967 J8 x8	 1960 K1 x2
 1967 J7 x8	 1641,5 K3 x2
 1967 J6 x2	 1641,5 K4 x2
 1967 J5 x2	 1500 K5 x8
 1967 J4 x2	 K x2  K6 x10
 1967 J3 x2	 K7 x2  K8 x2
 1967 J2 x2	 1000 L x2
 1967 J1 x2	 1375 L1 x2
 1967 J x4	 1500 L2 x3
	 L3 x6  L4 x218

Front Door

Side Door

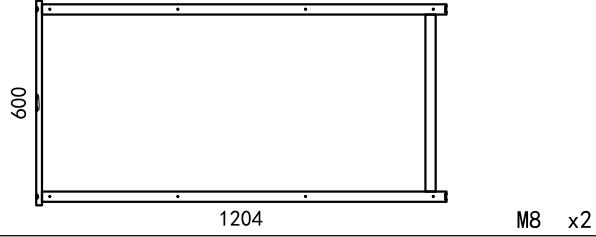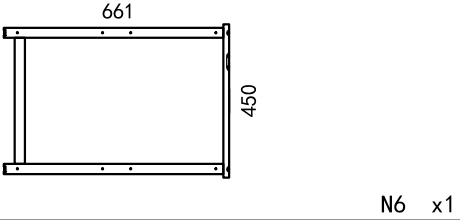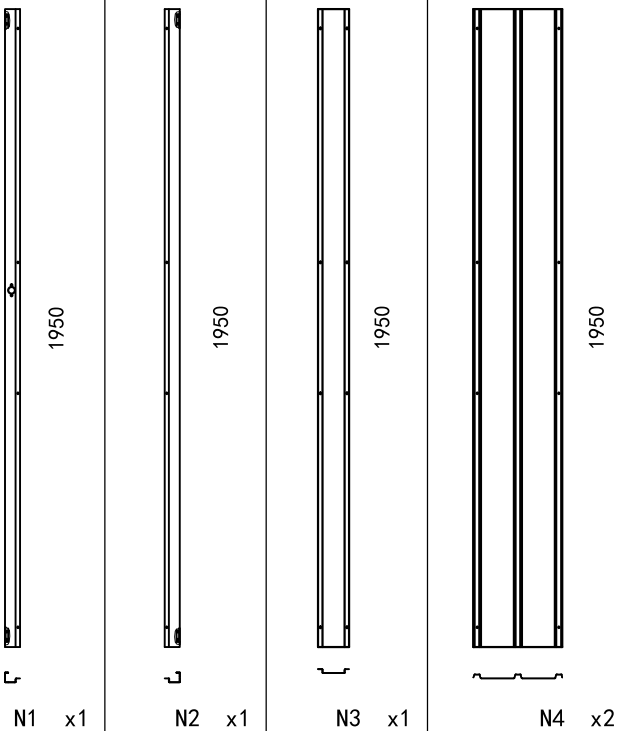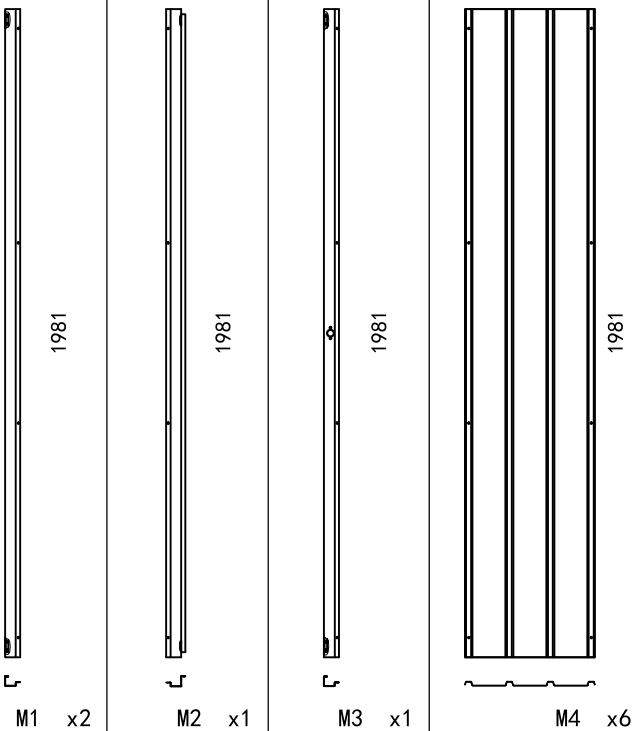


	M5x8	1#	x8
	M5x10	2#	x28
	M6x12	3#	x208
	M6x16	4#	x4
 		5#	x4
	ST3.5x16	6#	x8
  	M4x6	7#	x266
   	M4x8	8#	x46
   	M4x10	9#	x60
	M4x8	10#	x60
 	M4x8	11#	x42
  	M4x8	12#	x24
 	4x10	13#	x681
	4x20	14#	x146
	4x22	15#	x72
 	4x16	16#	x96
 	4x12	17#	x427

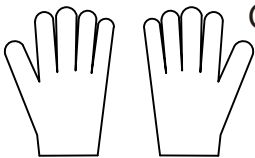


Gloves





Allen Key



Hole Position Correct Drill




Screw driver

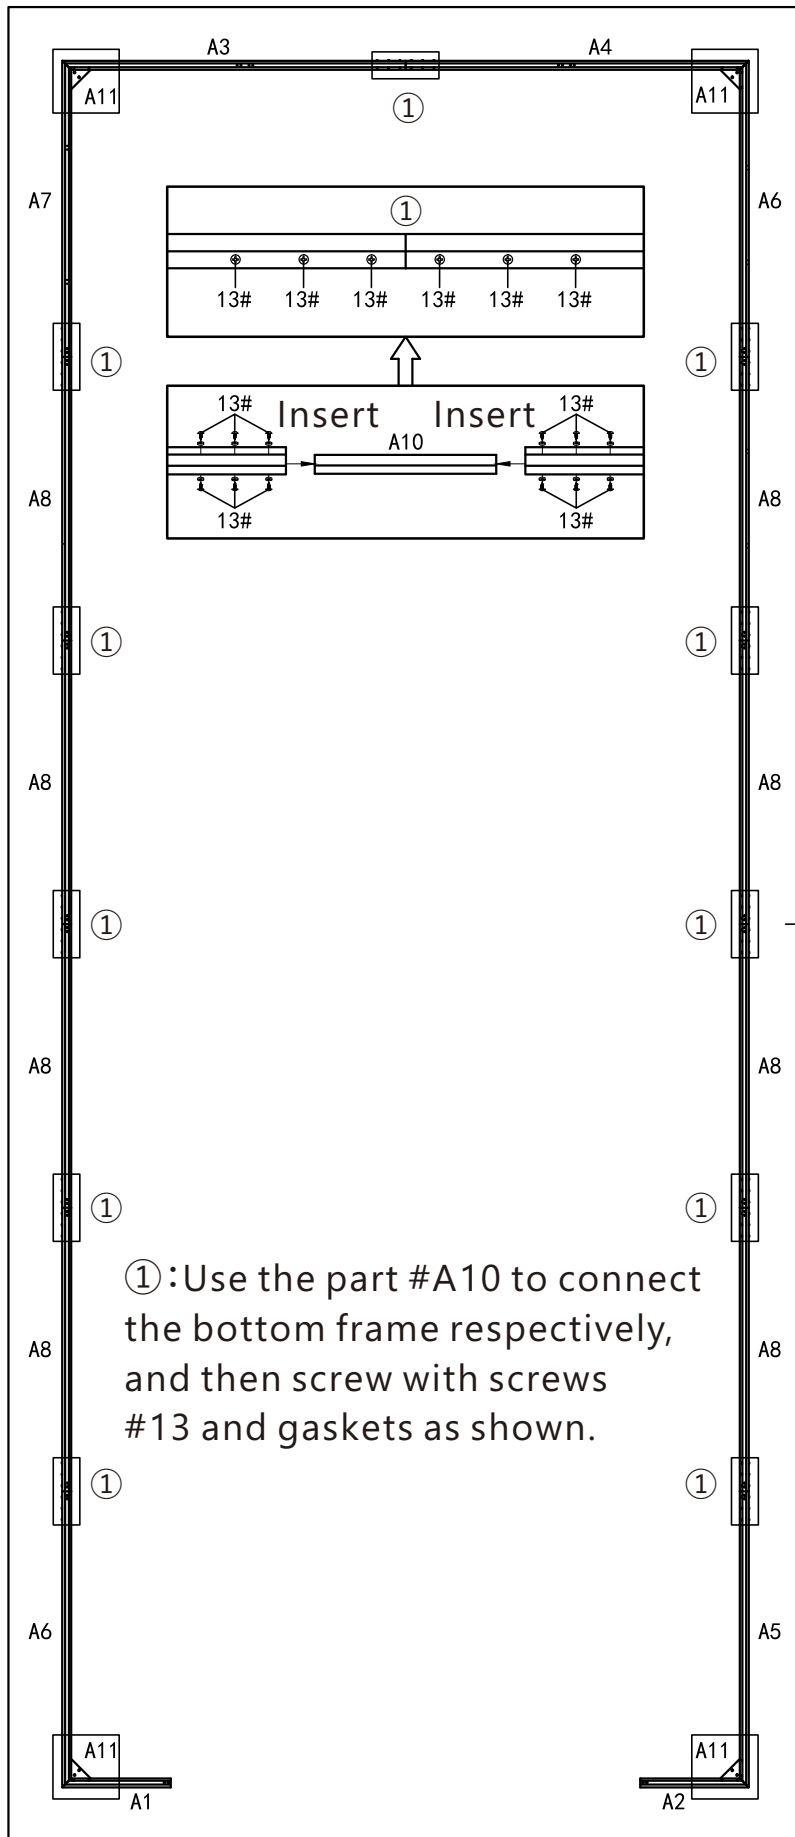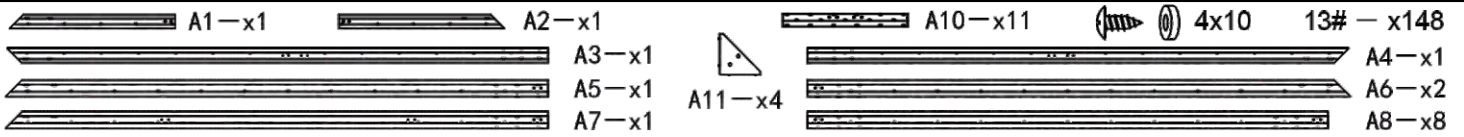

foundation

①: Use the part #A10 to connect the bottom frame respectively, and then screw with screws #13 and gaskets as shown.

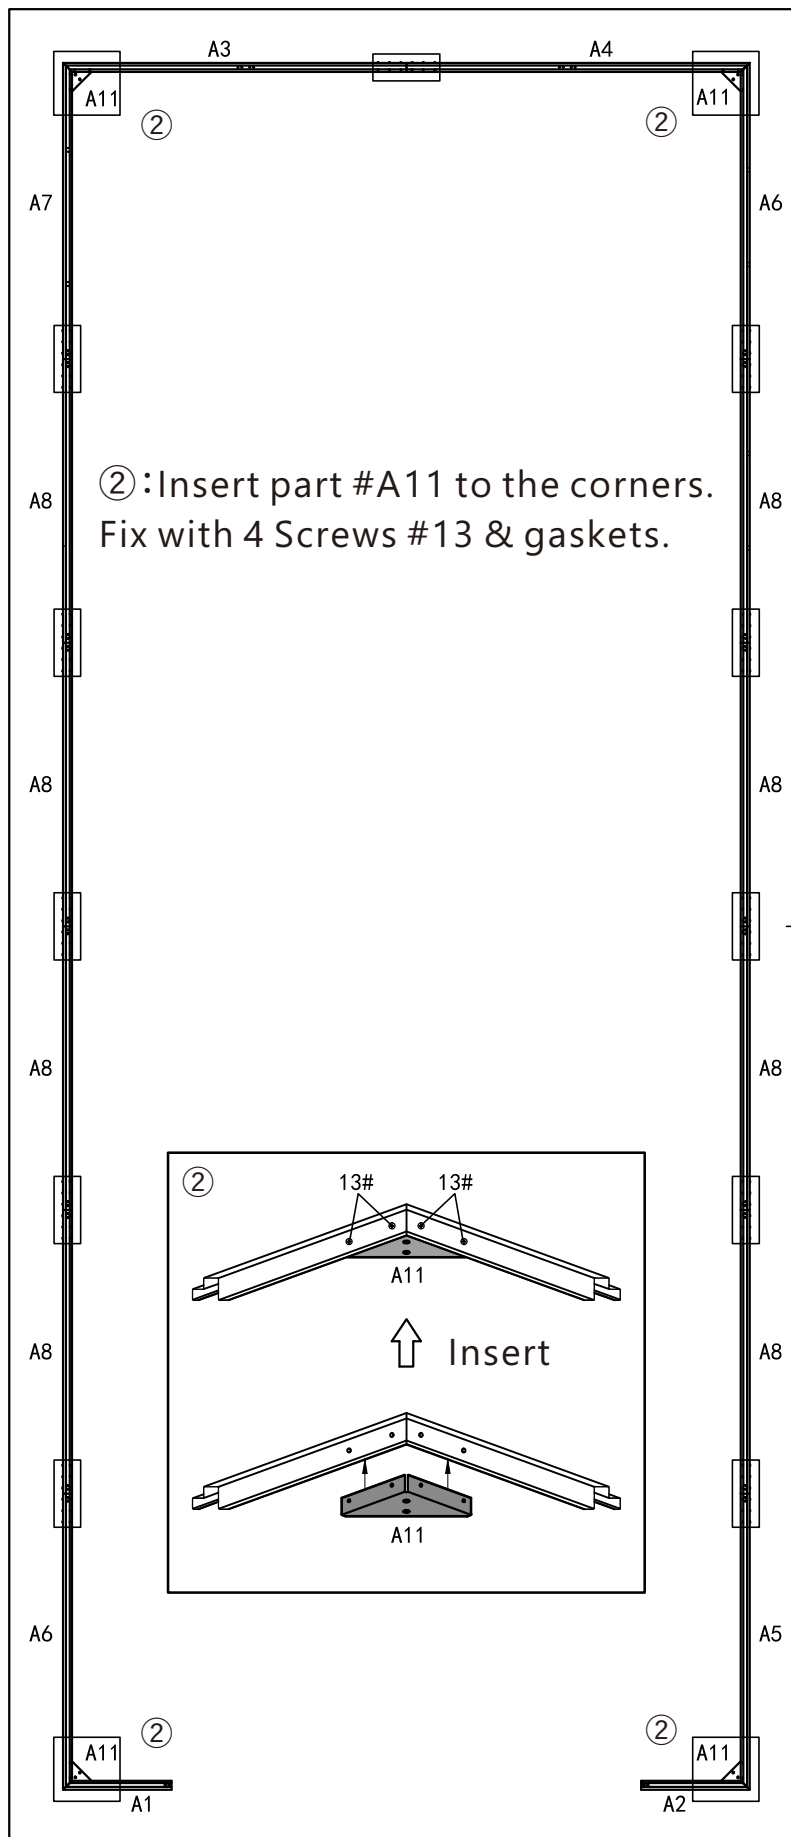

foundation

B8—x10
B9—x10
B10—x5

B11—x20



B12—x5



M6x12 3# — x200




B13—x10

B14—x10


B9

B12

B9

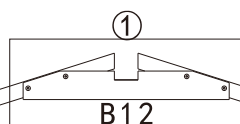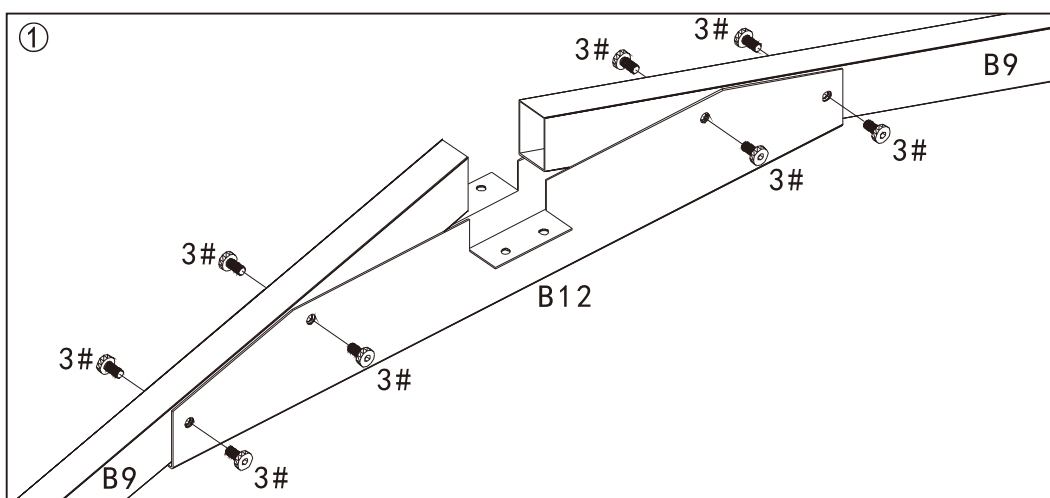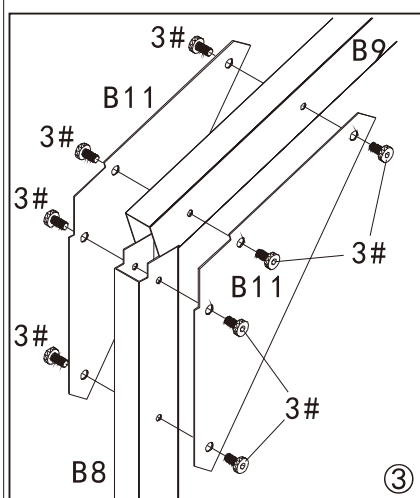


Total 5 components

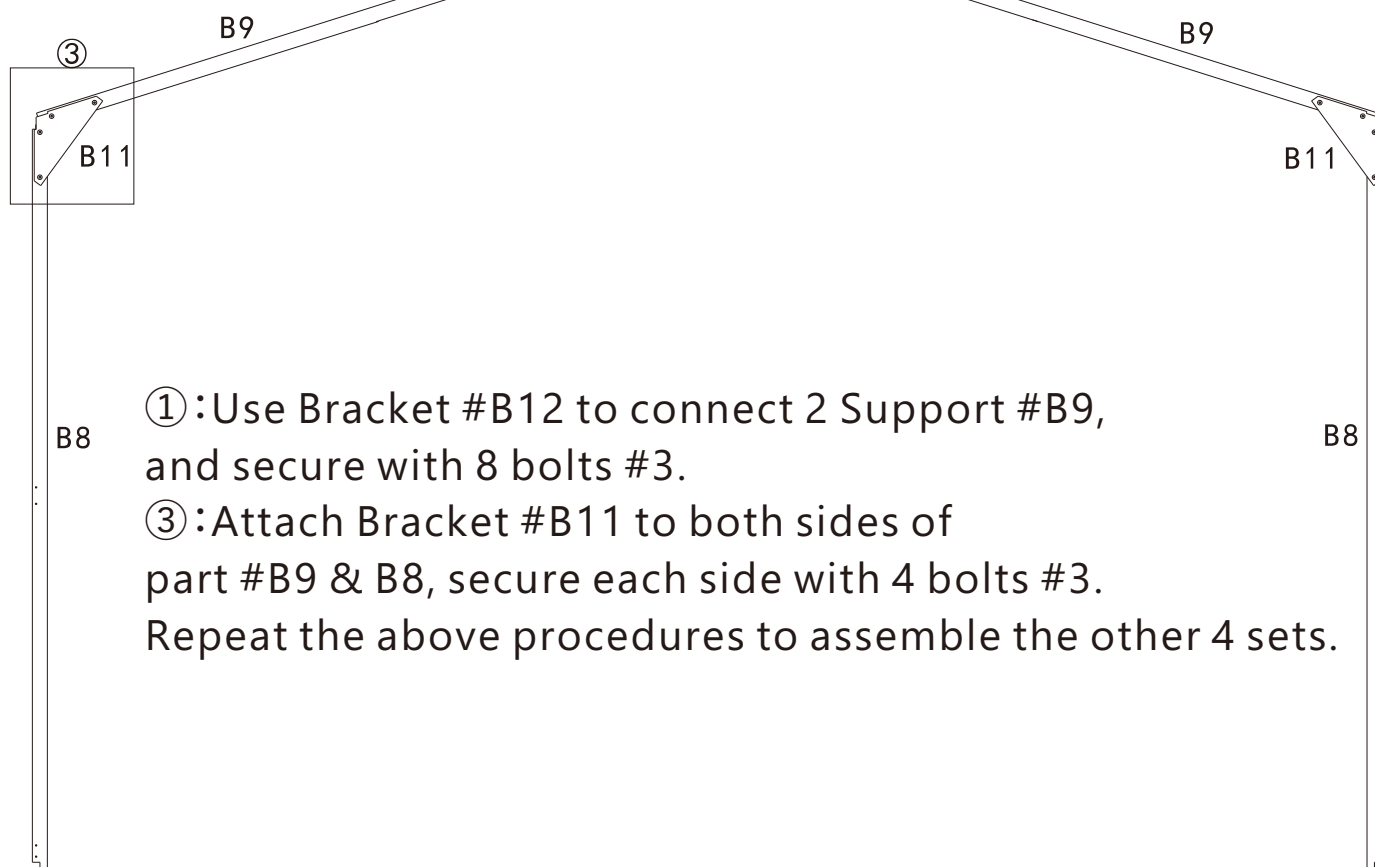


①: Use Bracket #B12 to connect 2 Support #B9,
and secure with 8 bolts #3.


③: Attach Bracket #B11 to both sides of
part #B9 & B8, secure each side with 4 bolts #3.
Repeat the above procedures to assemble the other 4 sets.

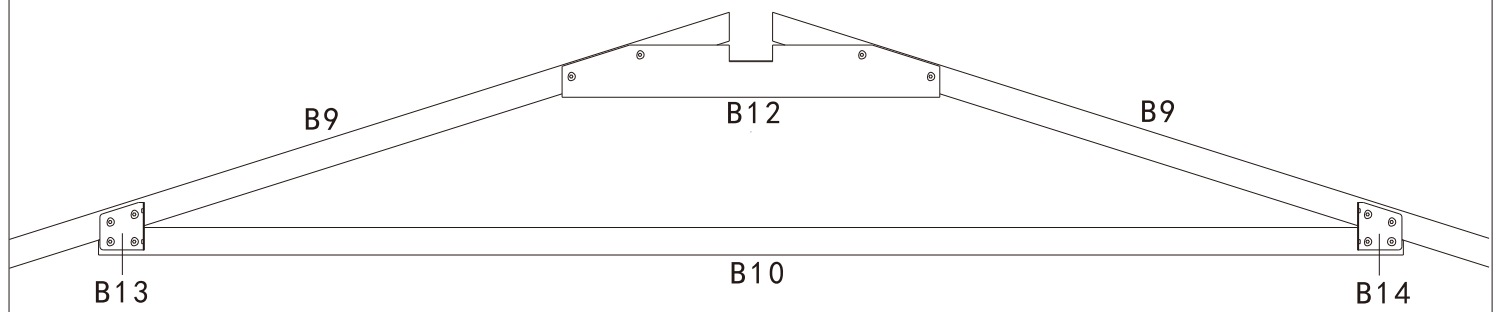

②: Attach Bracket #B13 & #B14 to both sides of part #B9 & B10, secure each side with 4 bolts #3.
Repeat the above procedures to assemble the other 4 sets.

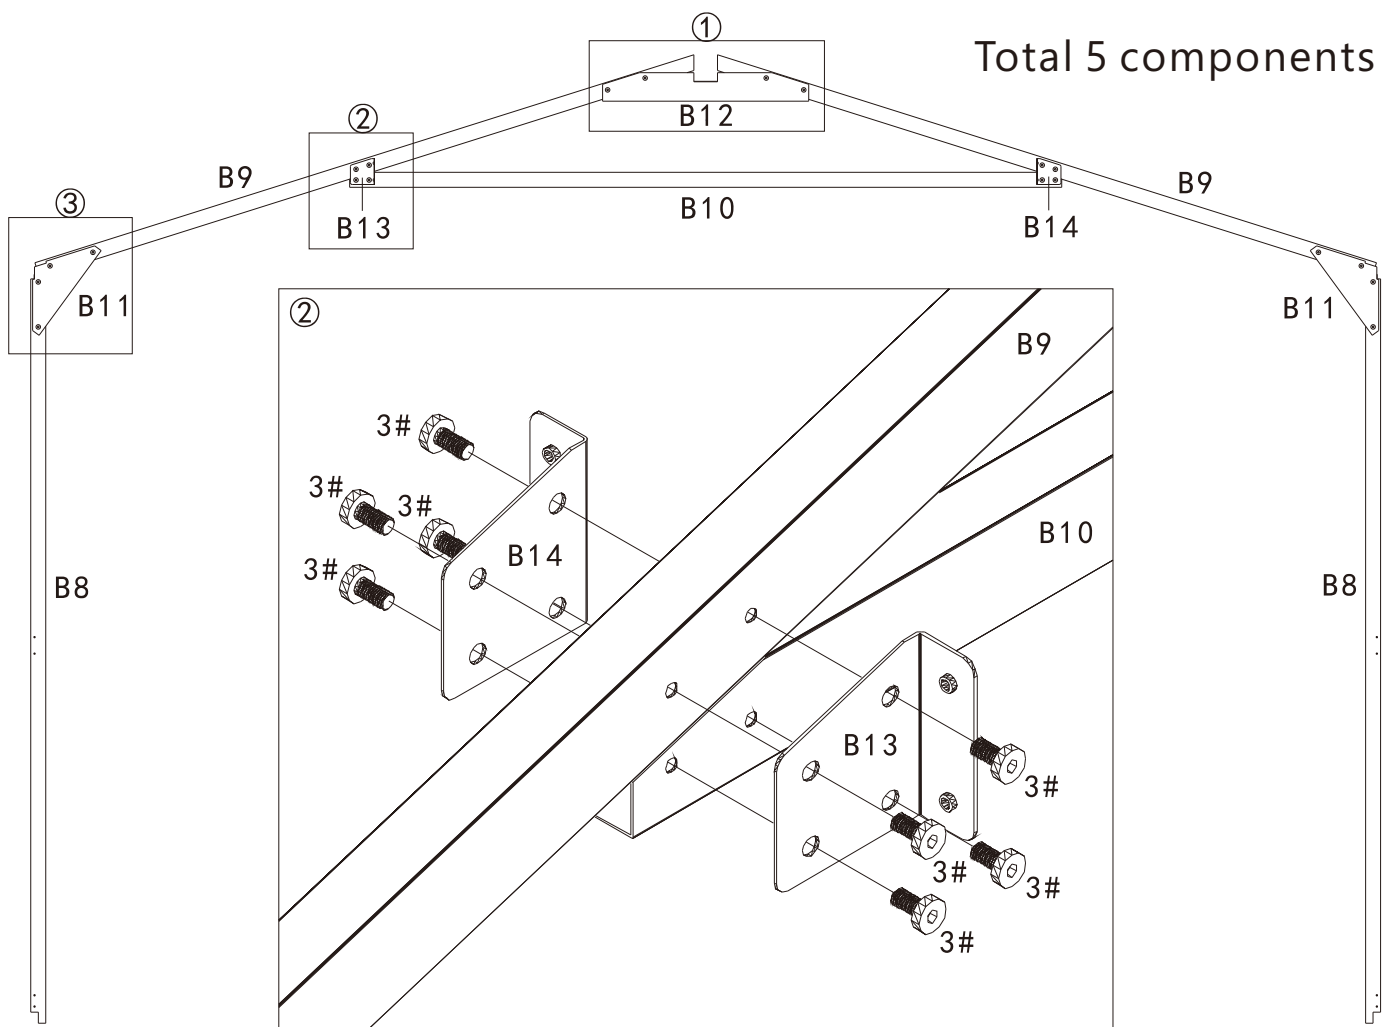

G8—x8



G1—x16





4x12


17# — x32

Insert #G1 into #G8, and secure with 2 screws #17 and gaskets.
Repeat the above procedures to assemble the other 7 sets.

G8

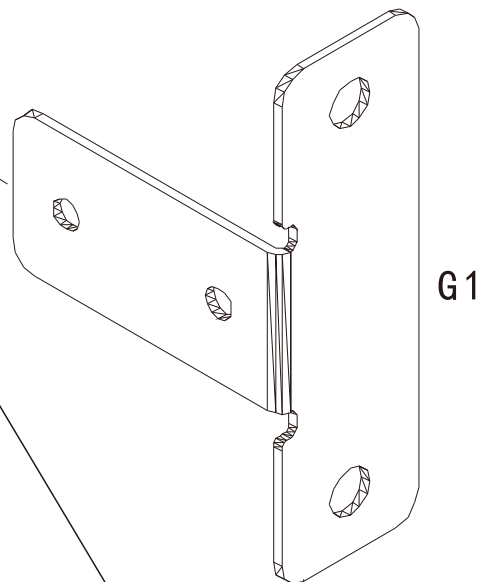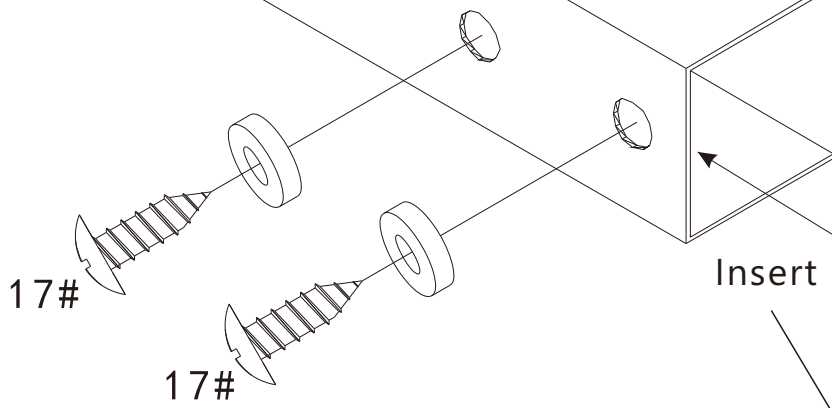


G1

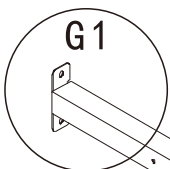

G1

G8

X8

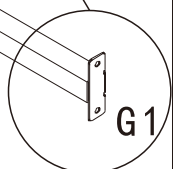



G1




B16—x20



4x12 17# — x112

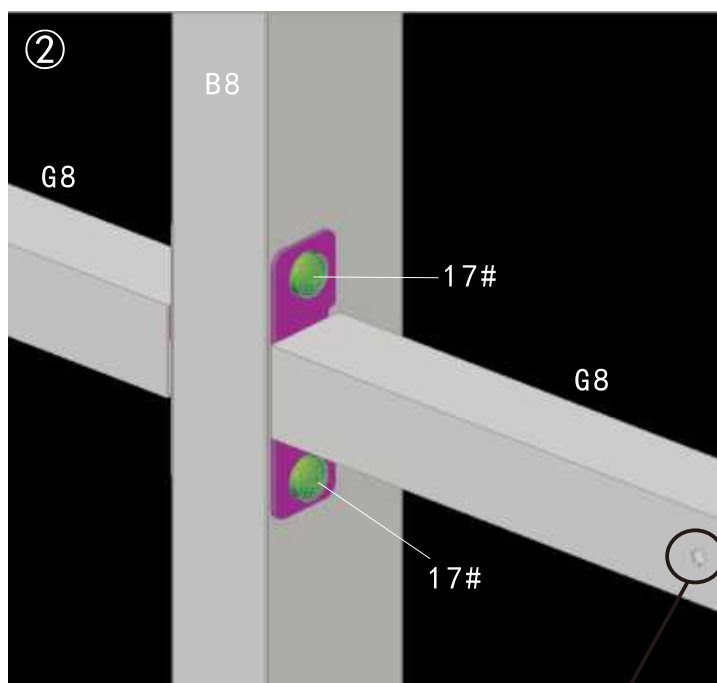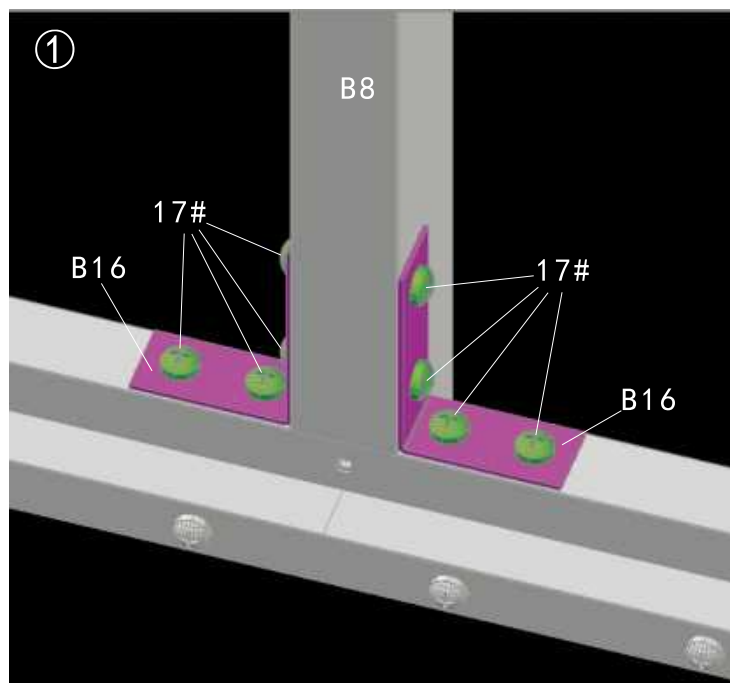




(make sure the holes on the support tubes are facing outward)

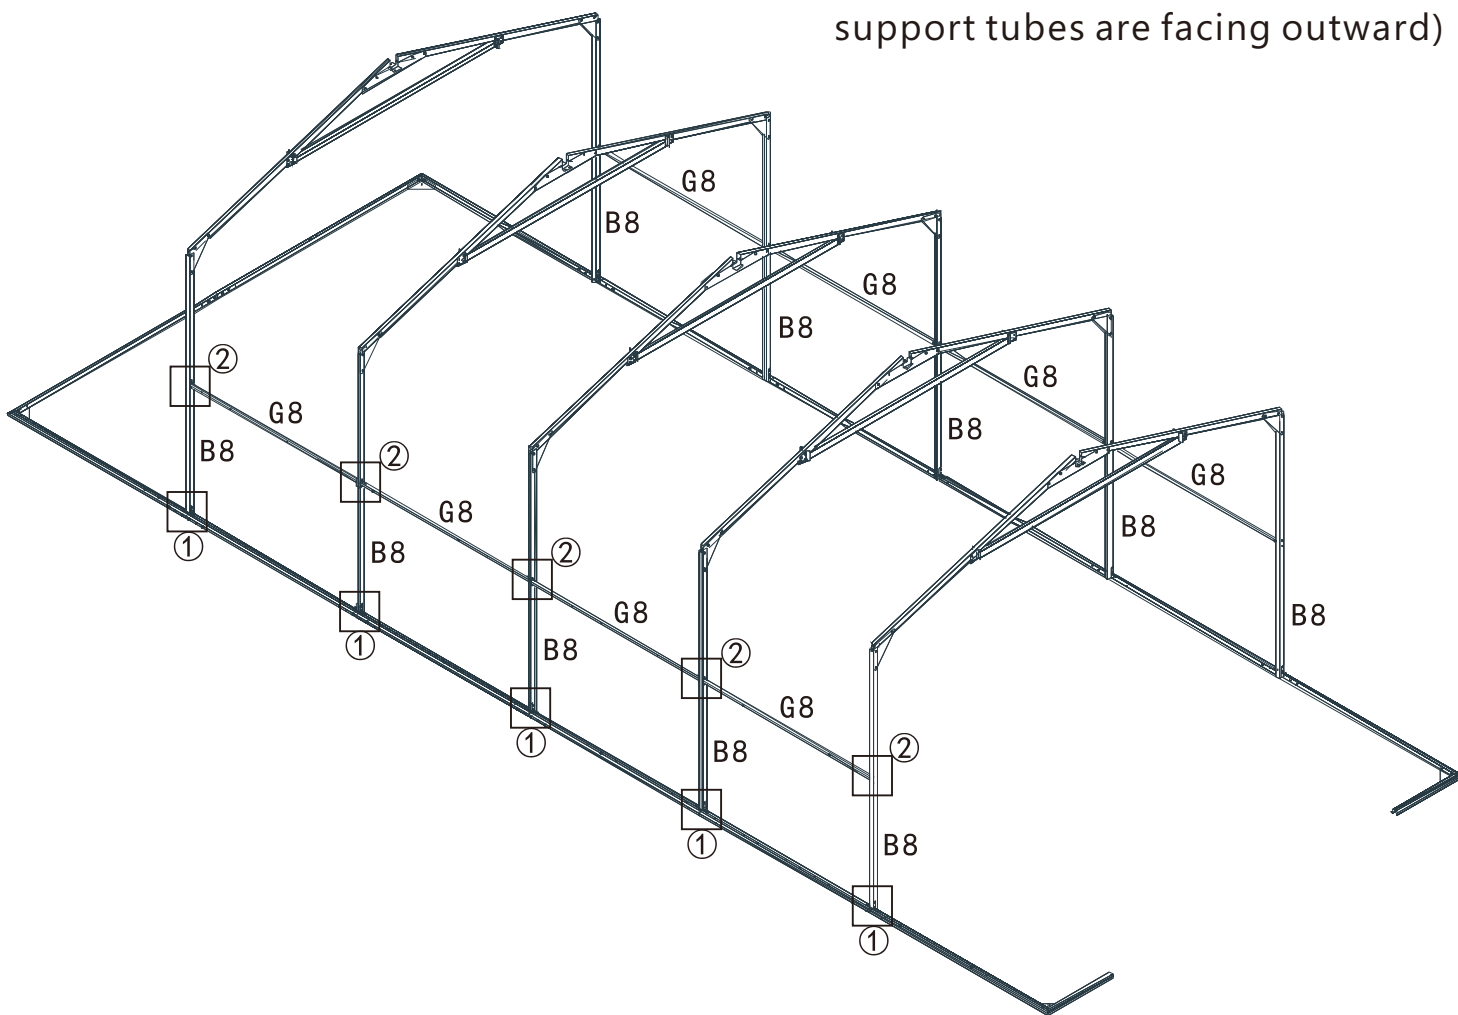


①: Use 8 screws #17 and 2 Brackets #B16 to secure #B8 to the base frame.

②: Use 2 screws #17 to connect the support tube #G8 to #B8.

Repeat the above procedures to assemble the other sides.

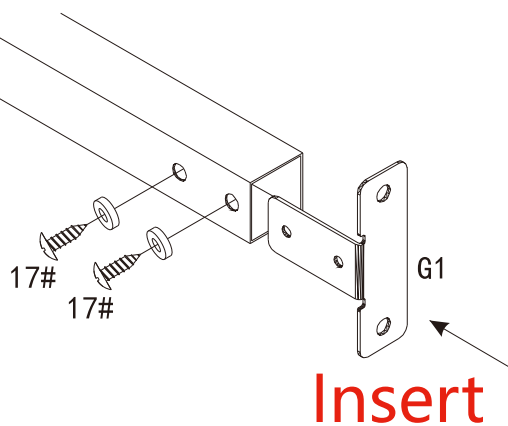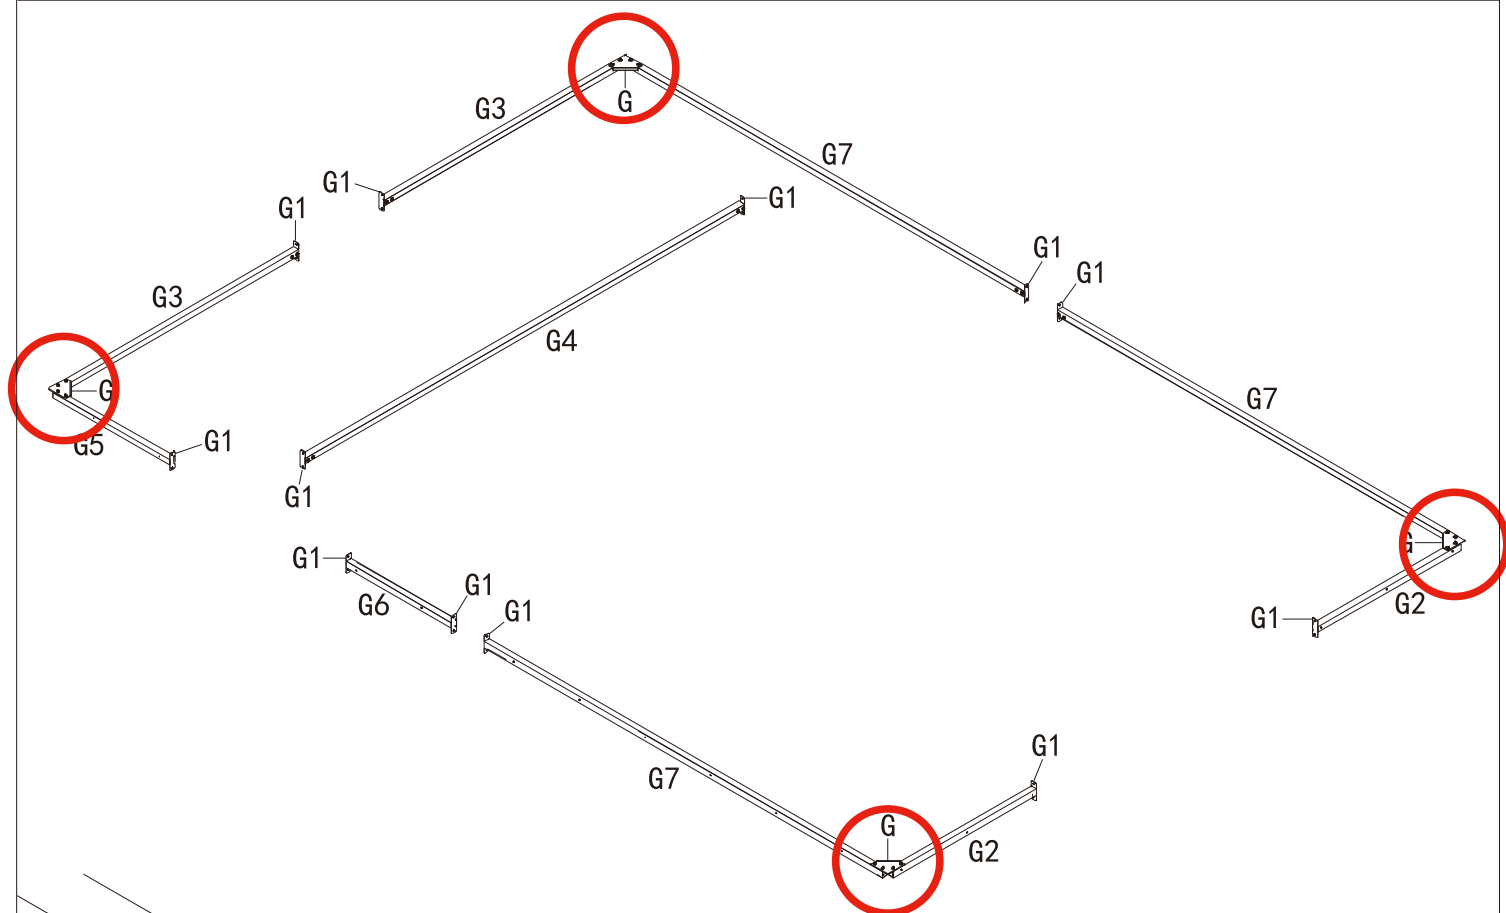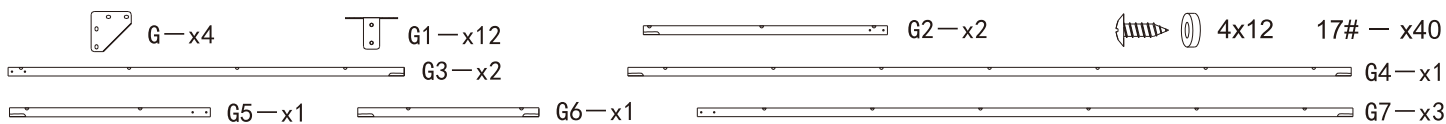

Insert Bracket #G1 and secure with 2 screws #17 and gaskets for each connection as shown. Install Bracket #G at the corners and secure with 4 screws #17 and gaskets for each corner as shown.

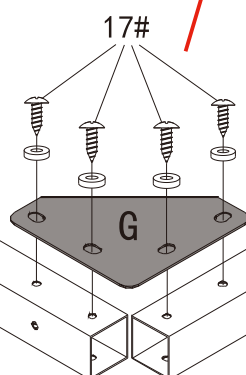




A9—x2




A12—x1



M5x8 1# — x8

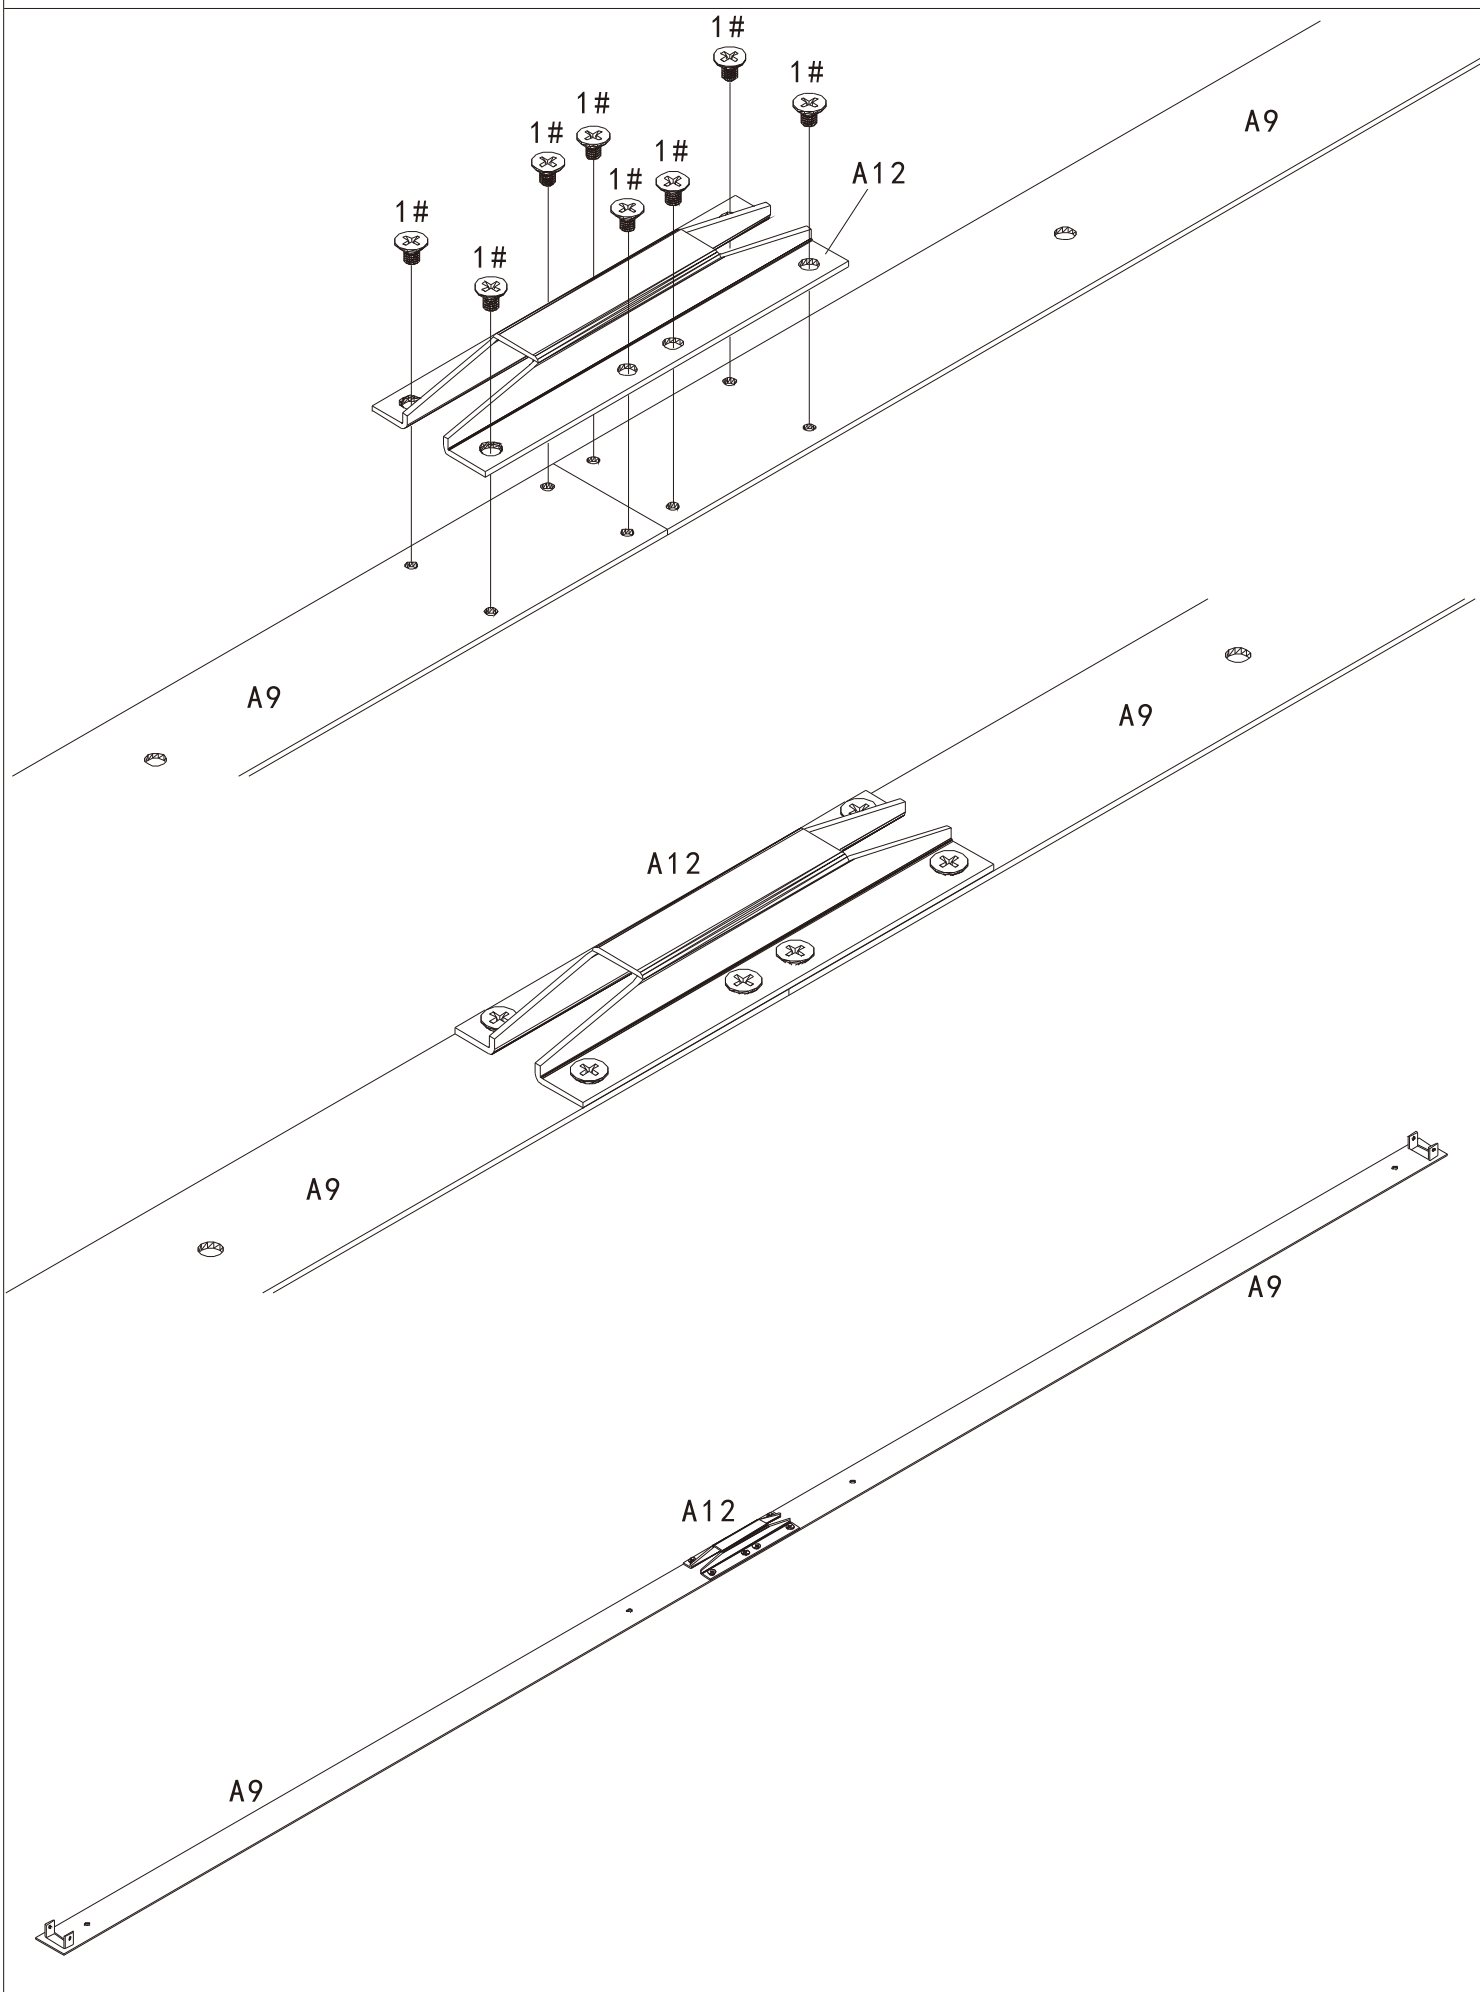

B15—x2



M5x10 2# — x4


$$2\# - x4$$

M6x12 3# — x8

3# — x8






4x12 17# — x8

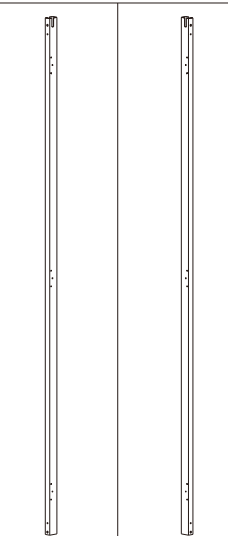


B1 — x1


B2-x1

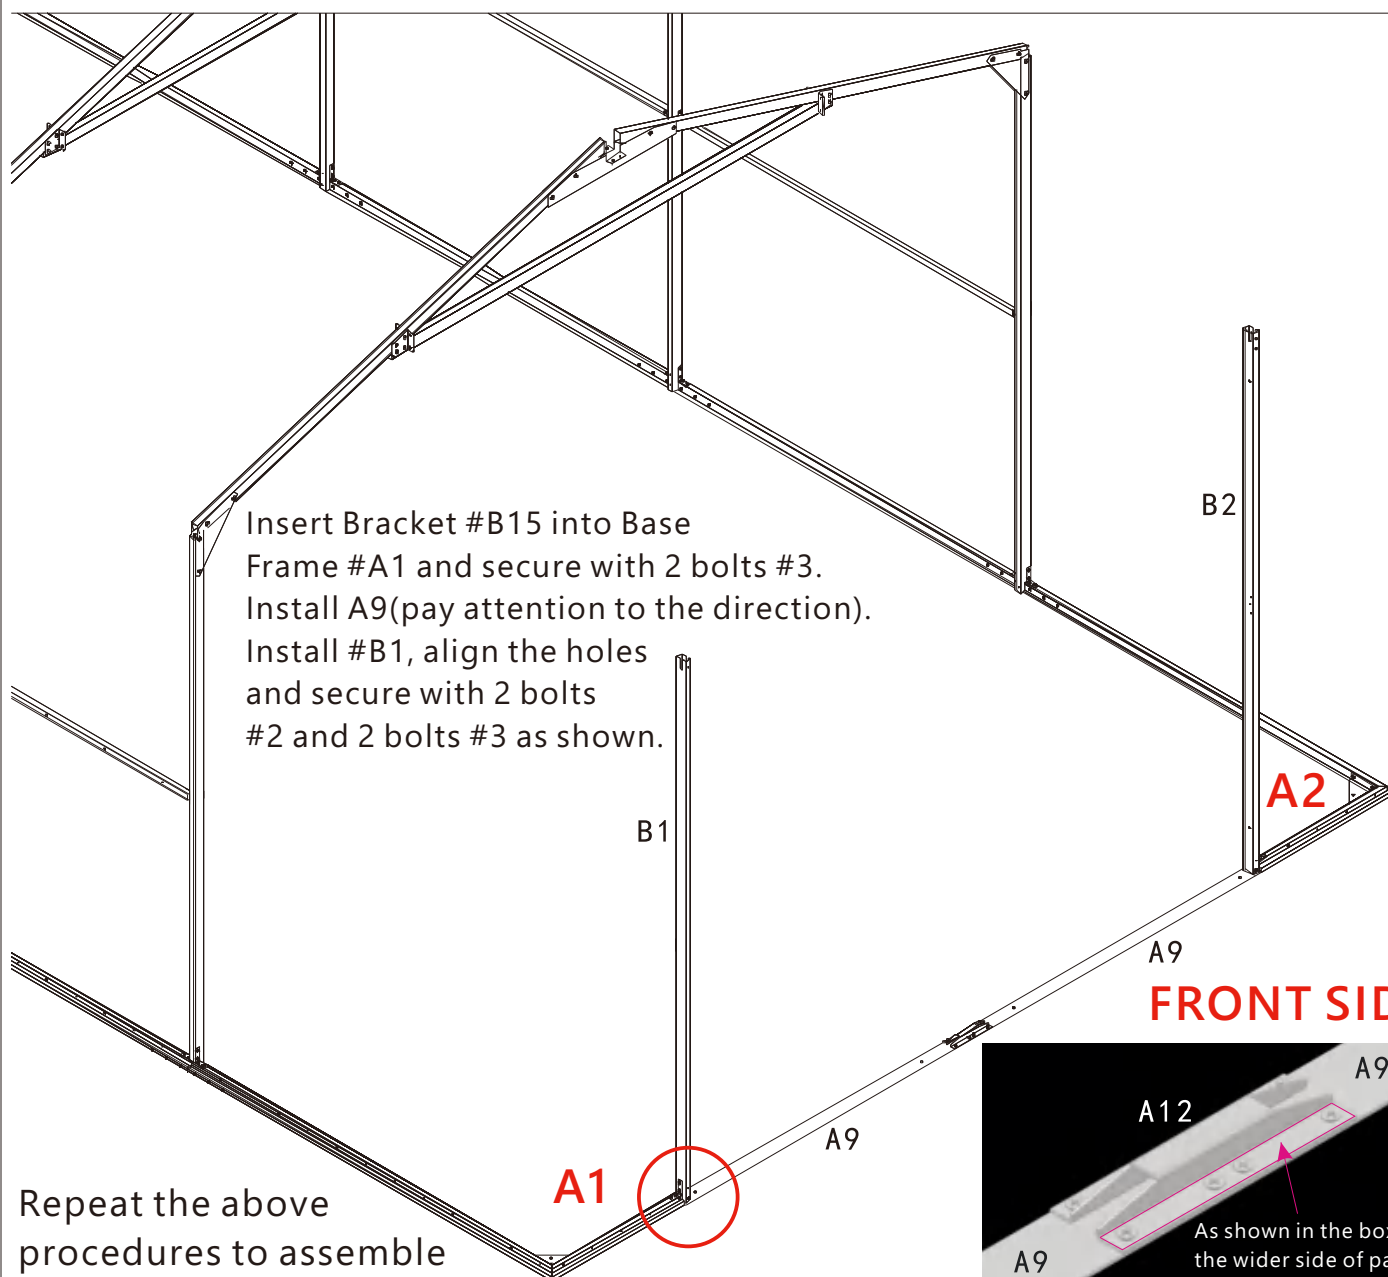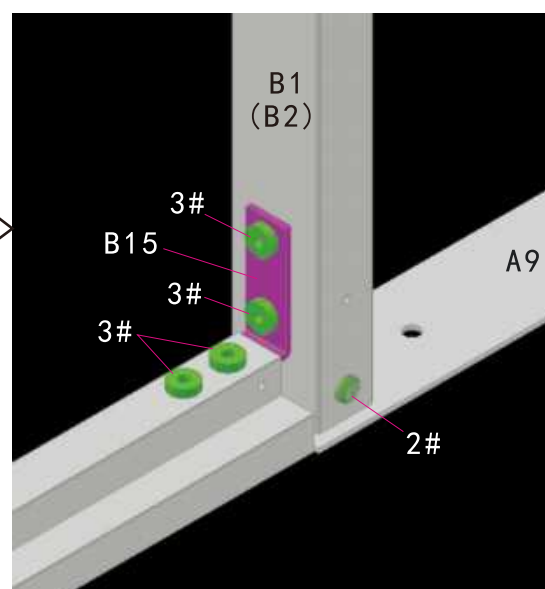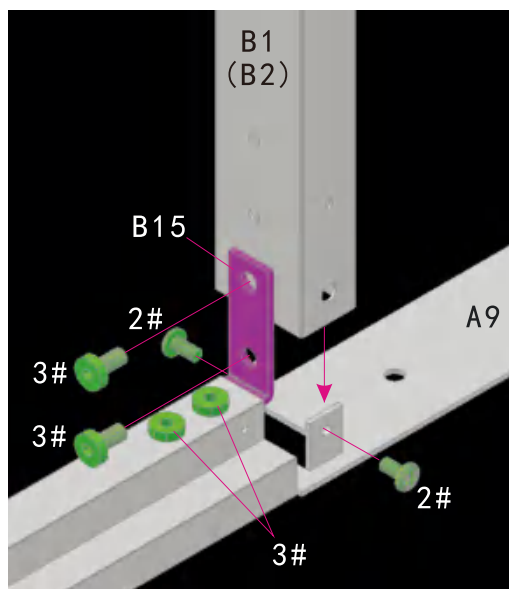

Repeat the above procedures to assemble #B2 with Base Frame #A2.

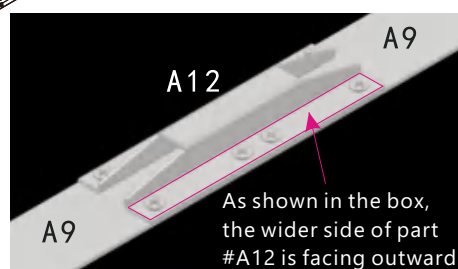


As shown in the box,
the wider side of part
#A12 is facing outward.

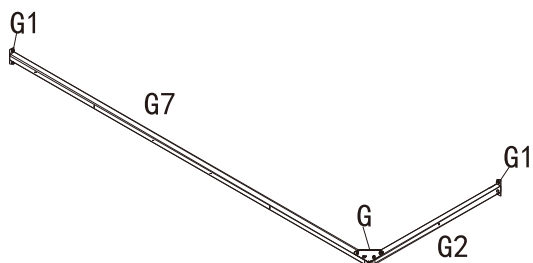

already assembled

Install part #G2 & G7 (already assembled in page 05),
securing with 2 screws #17 for each connection.
Repeat the above procedures to assemble another side.

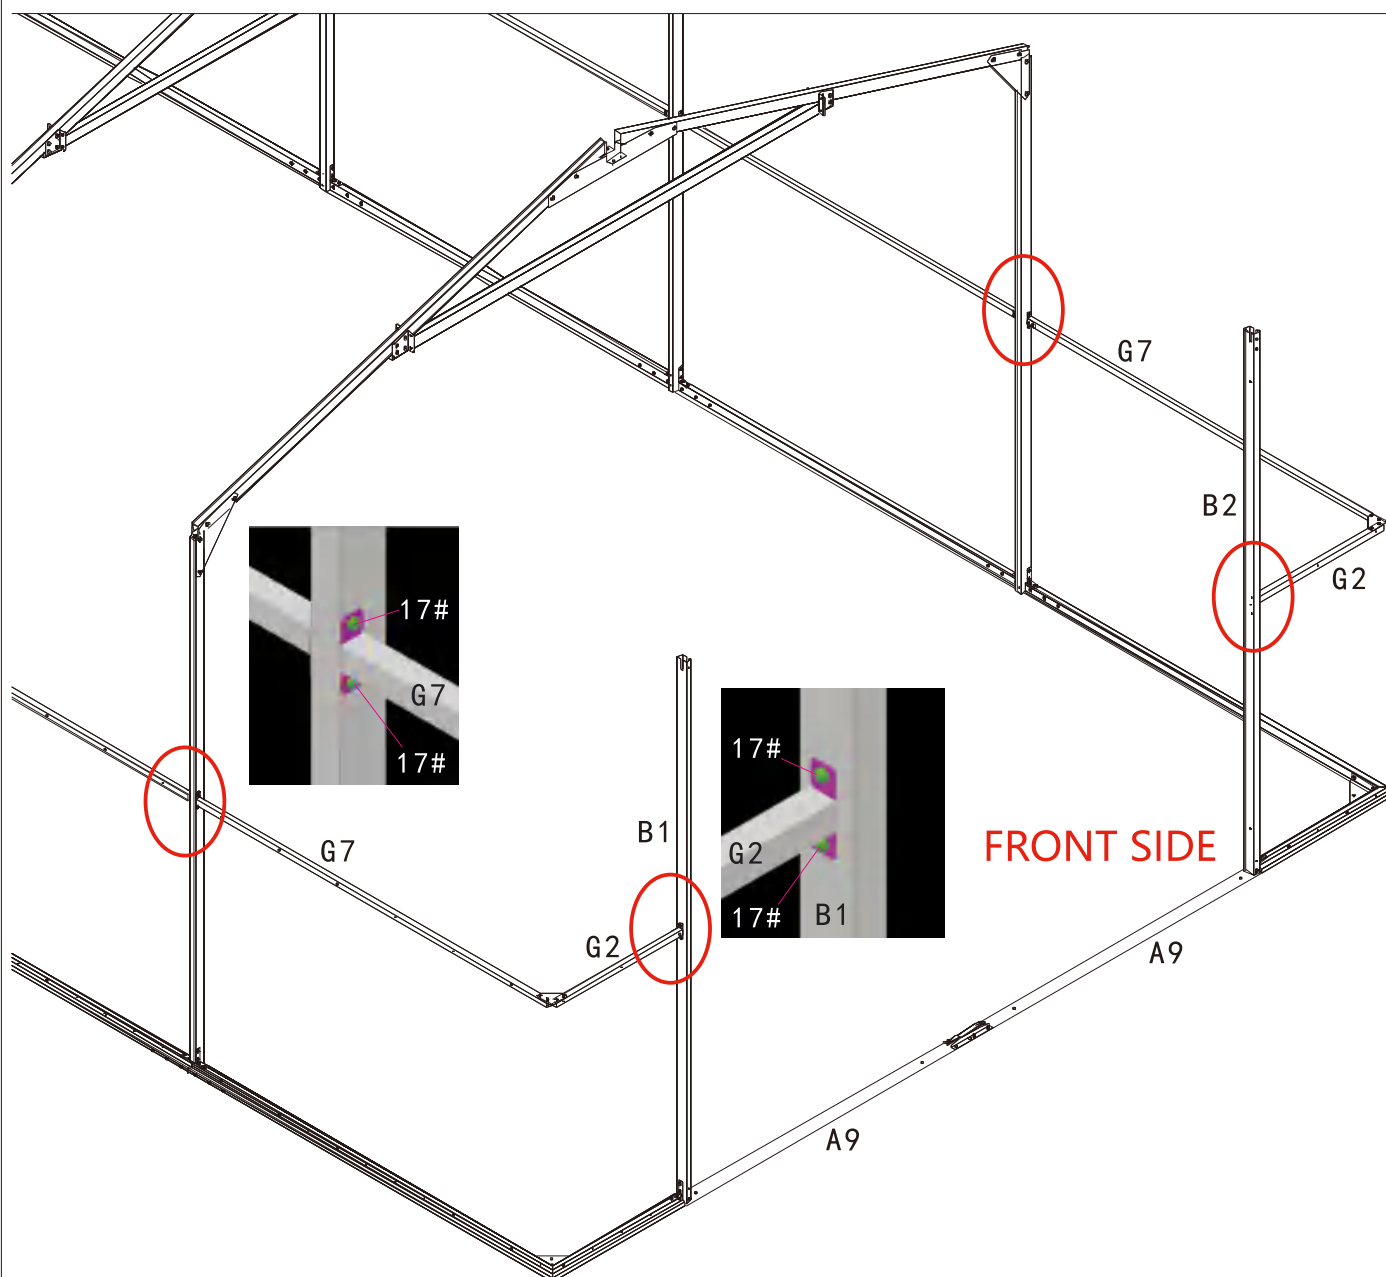

4x12



17# - x24




B16-x4




B7-x2


FRONT SIDE

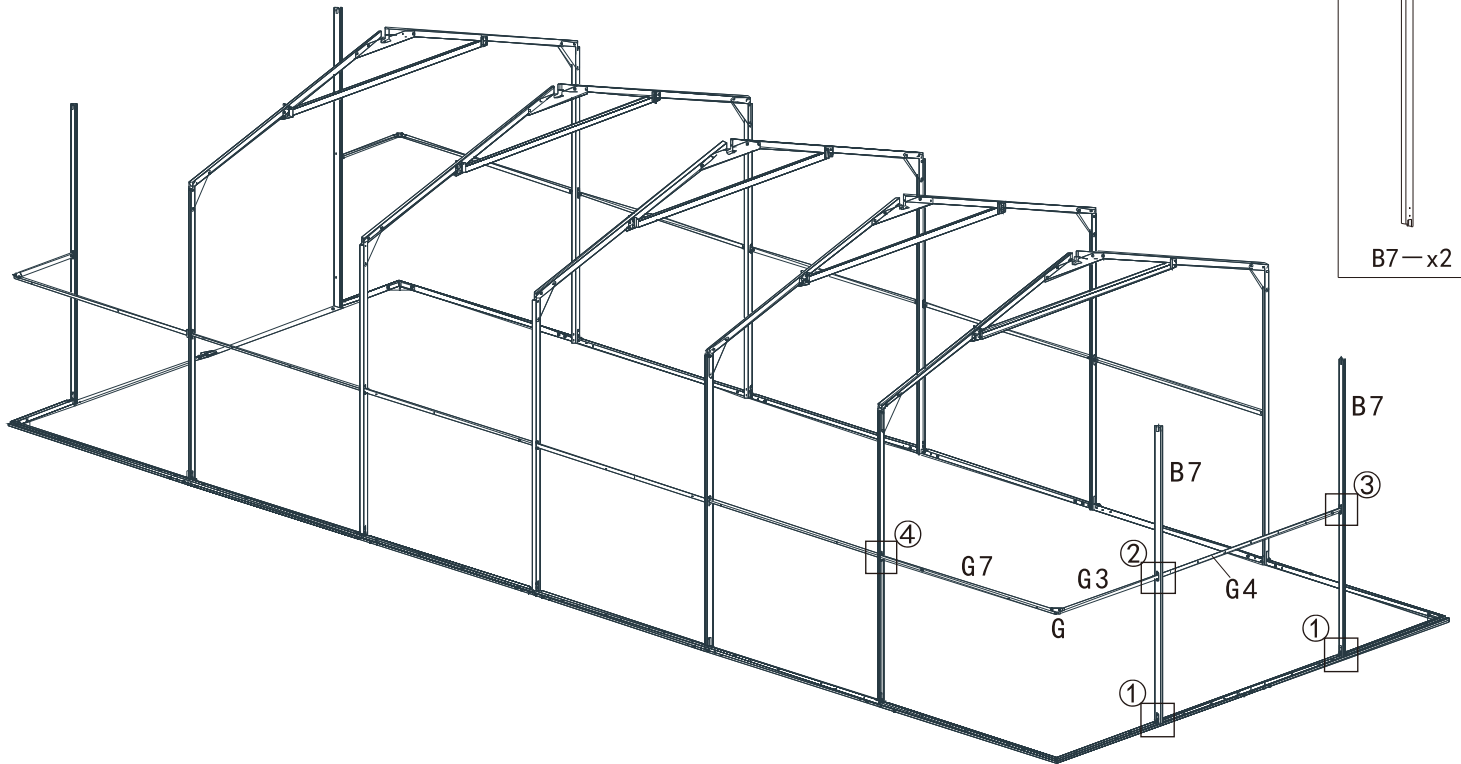

BACK SIDE

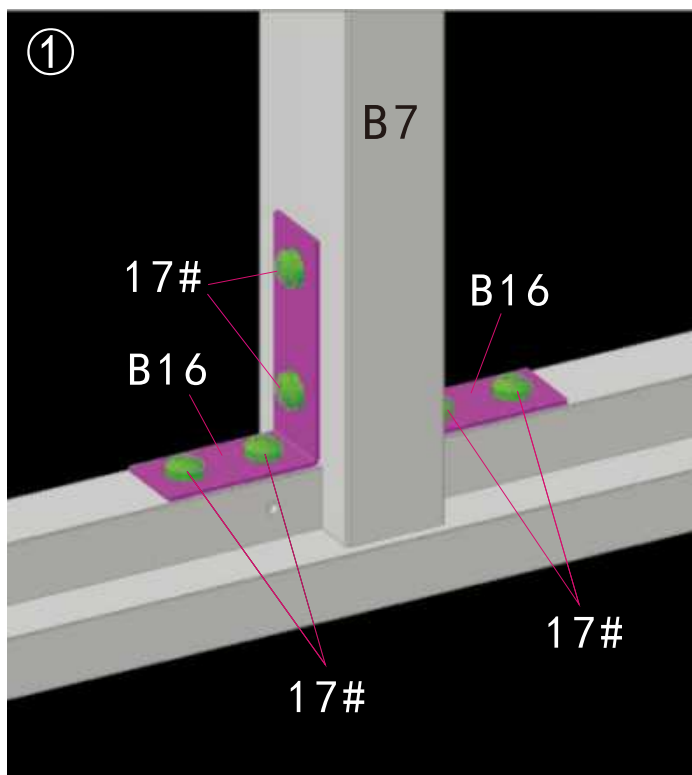


①: Install #B7 and connect it to the bottom frame by using 2 Brackets #B16, securing with 8 screws #17. Repeat the above procedure to assemble the other side.

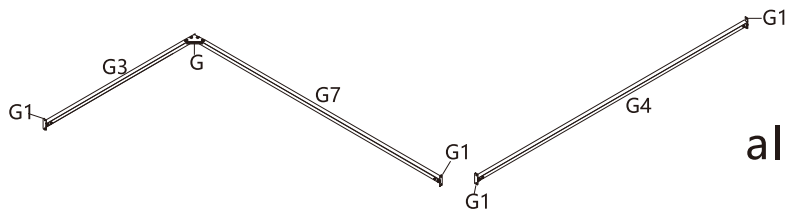




already assembled



FRONT SIDE

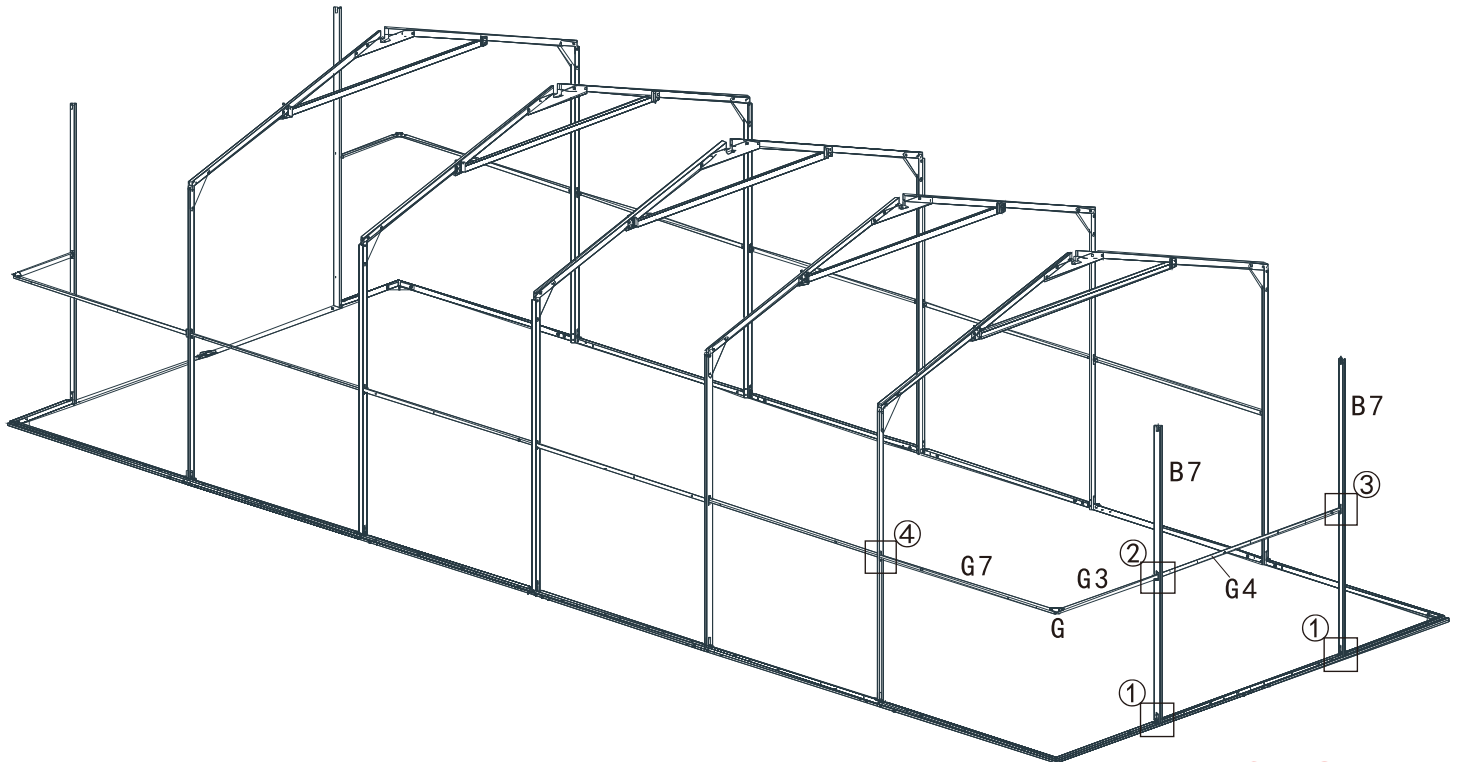

BACK SIDE

②, ③, & ④: Use screws #17 to install part #G3 & G7 & G4 to the frame (make sure the holes on the support tubes are facing outward).

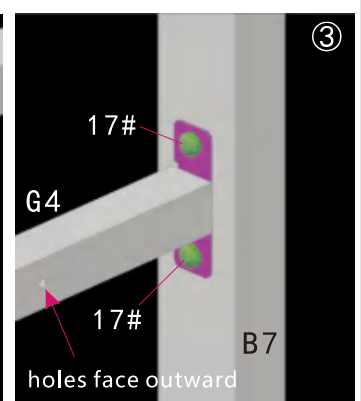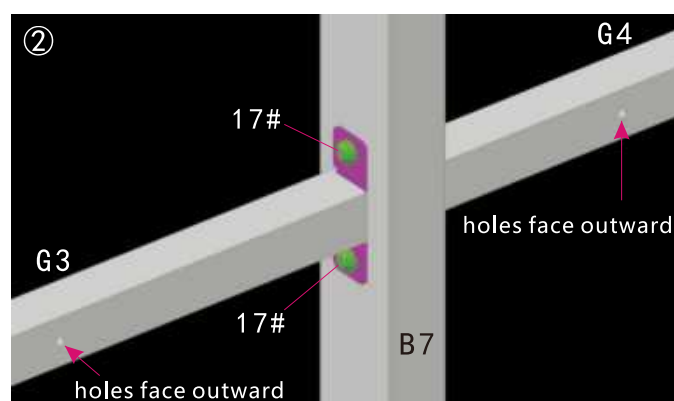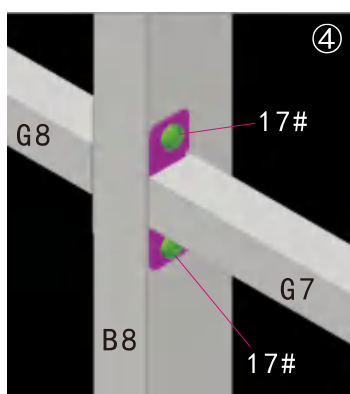


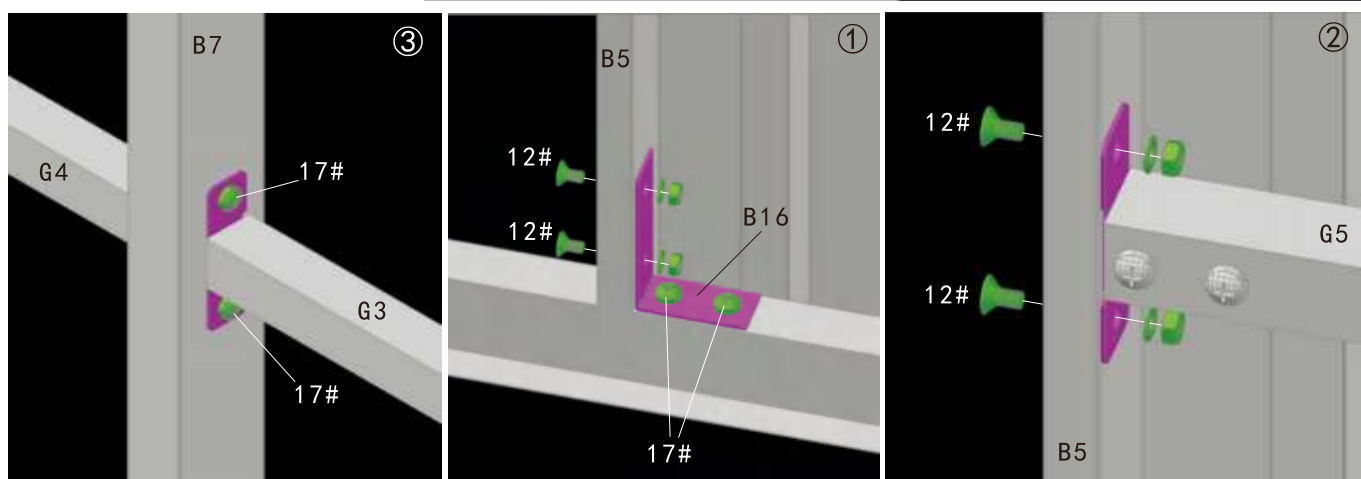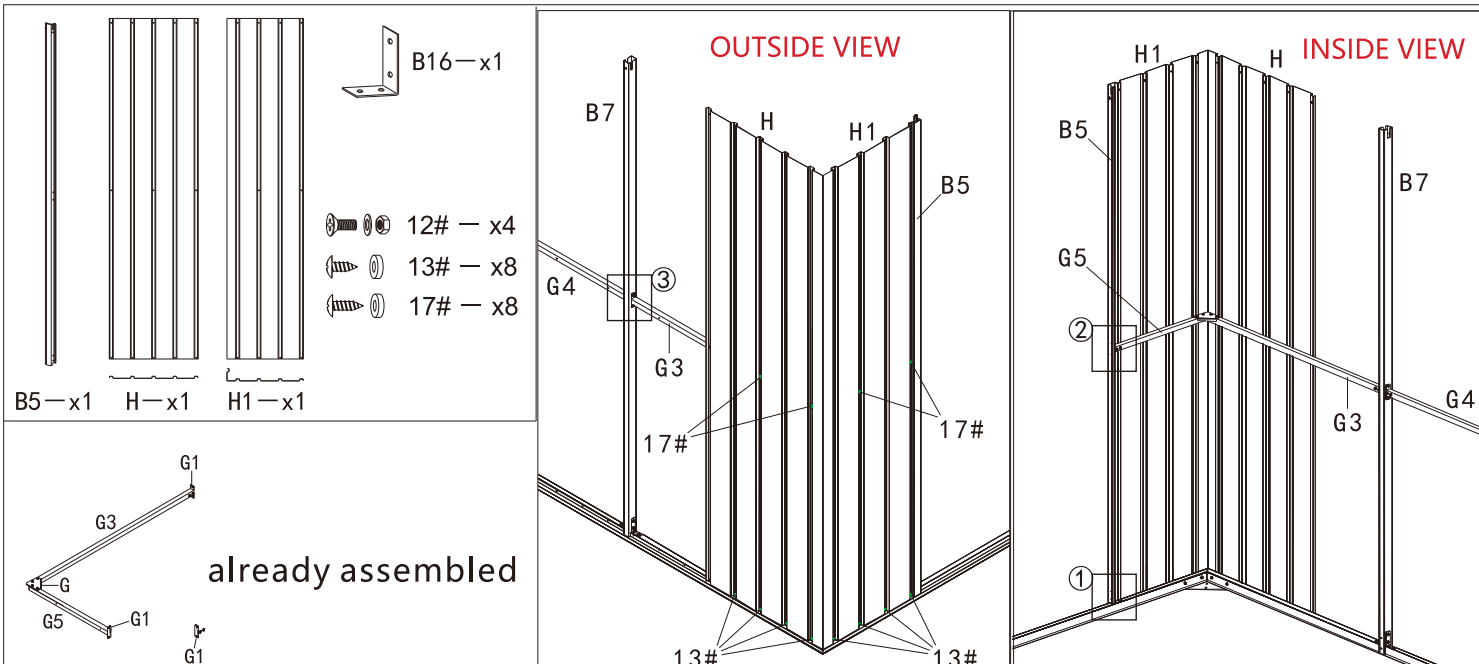

OUTSIDE VIEW

INSIDE VIEW


INSIDE VIEW

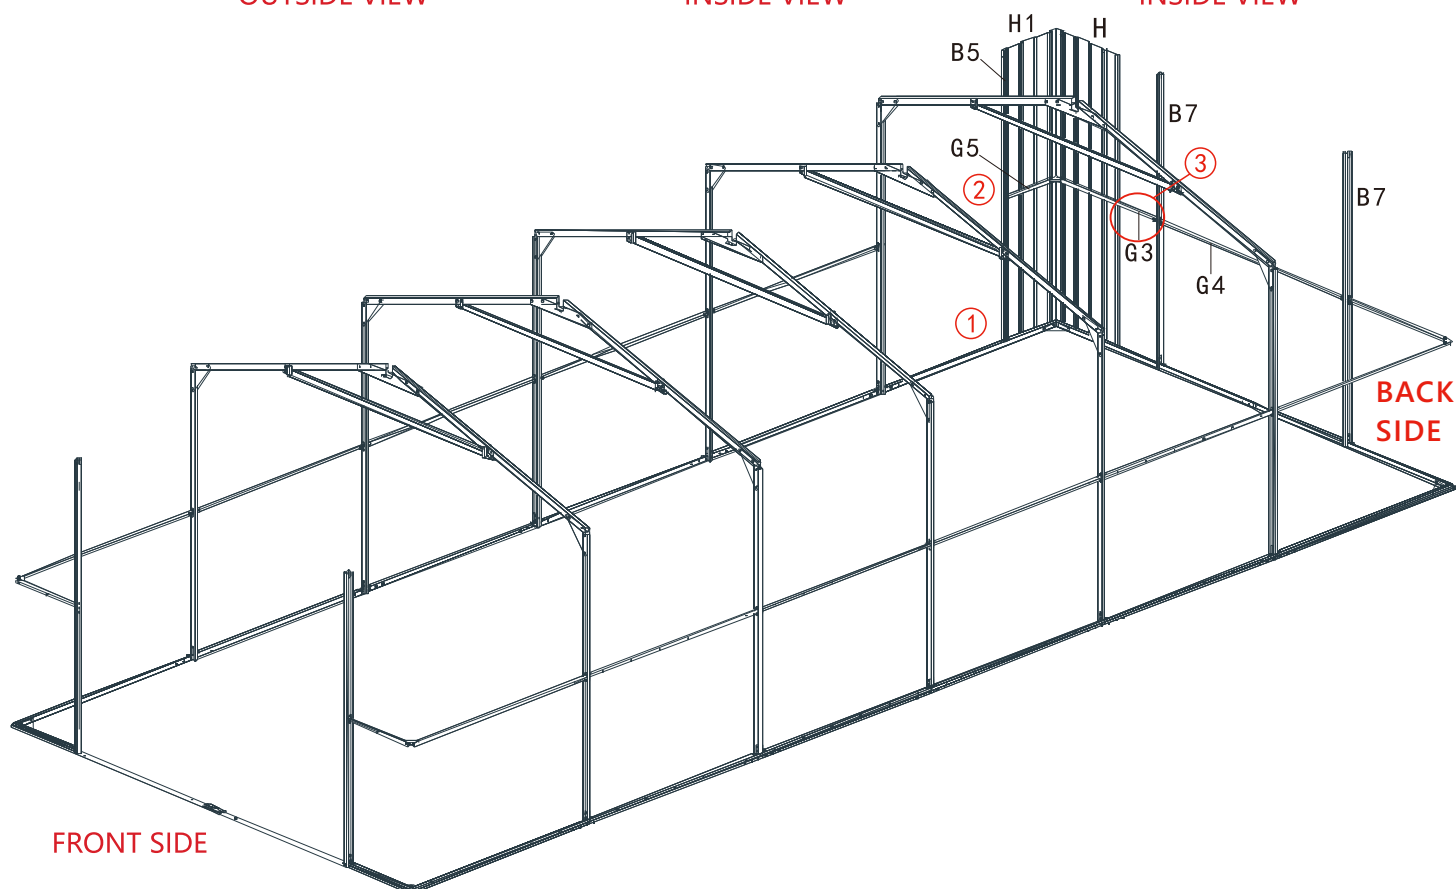

①: Install #B5 and connect it to the bottom frame using B16. Securing with 2 bolts and nuts #12 and 2 screws # 17.

②: Use 2 Bolts and nuts #12 to install #G5 to #B5.

③: Use 2 Screws #17 to install #G3 to #B7. Make sure the holes on the support tubes are facing outward.

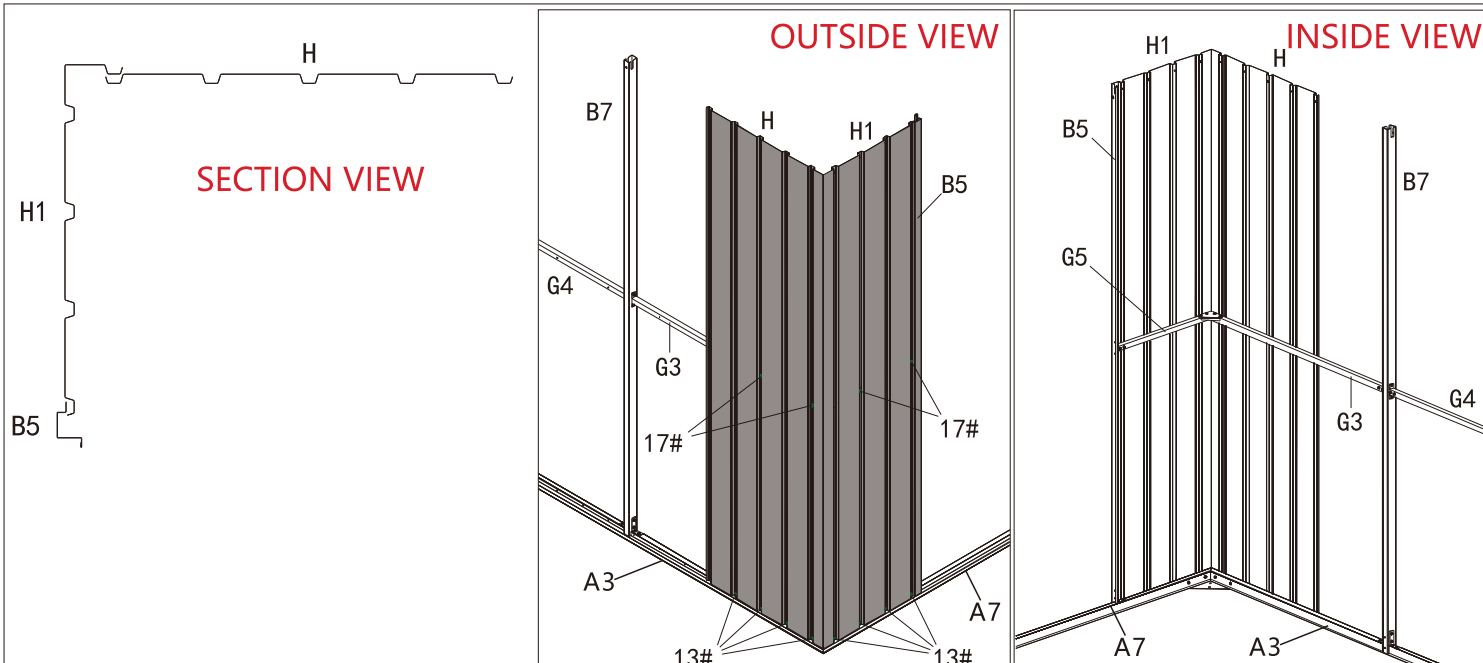





Use 4 screws #17 to secure Wall panel # H and H1 to the support tube #G3 & G5.

Use 8 screws #13 to secure Wall panel # H and H1 to the base frame #A3 & A7.

Wall Panel #H1 is wrapped on the outside of #H.

#B5 is wrapped on the outside of #H1



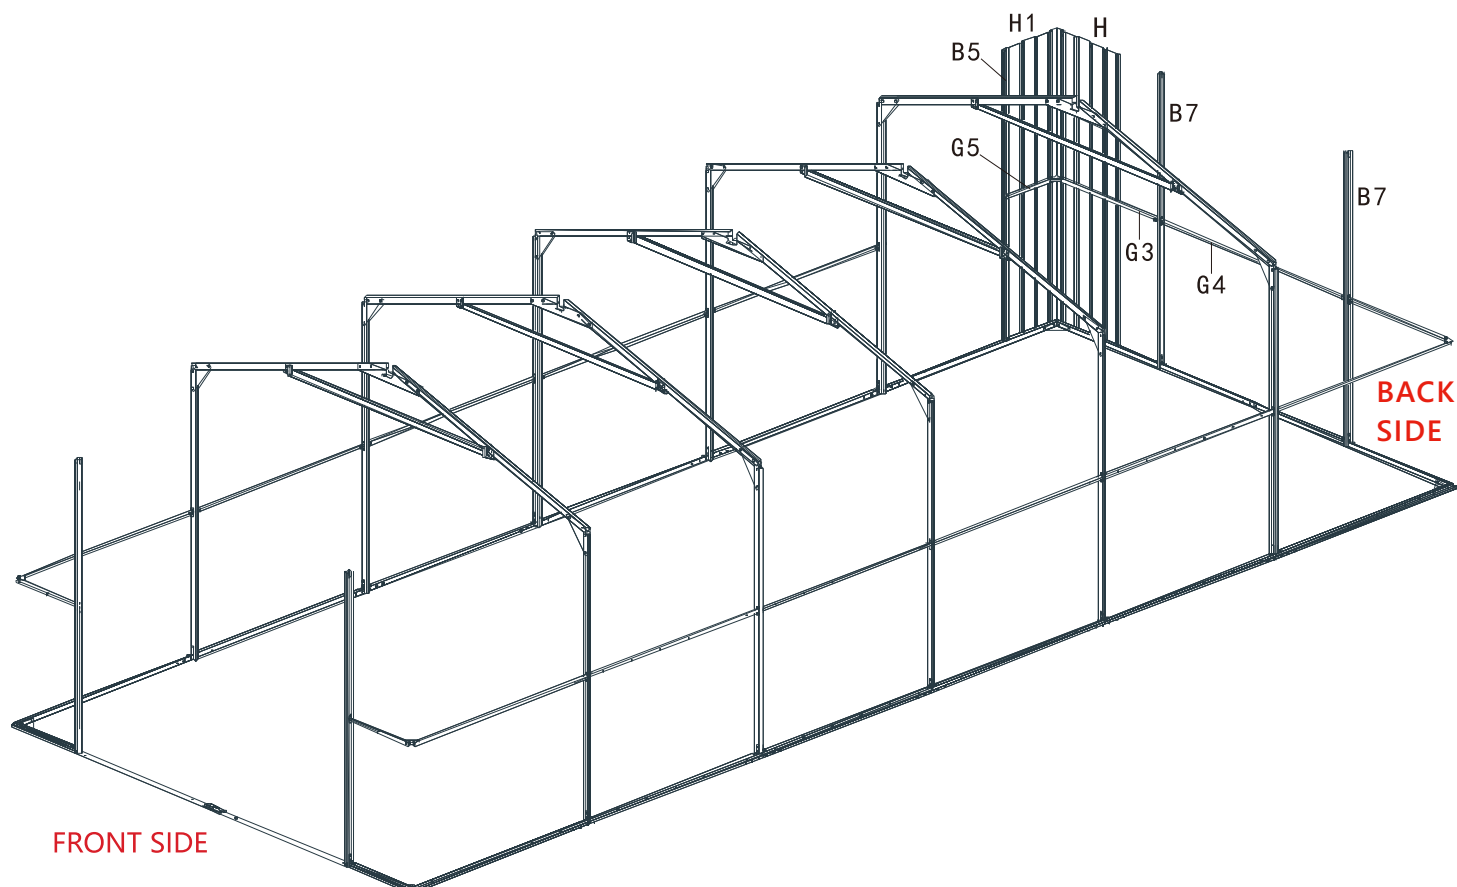


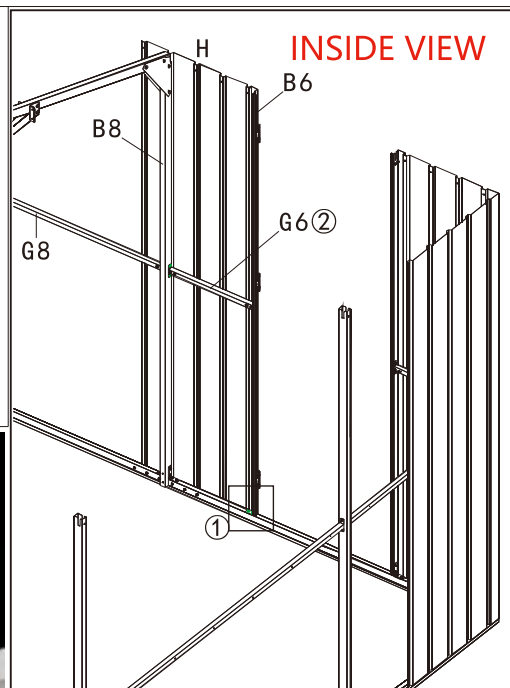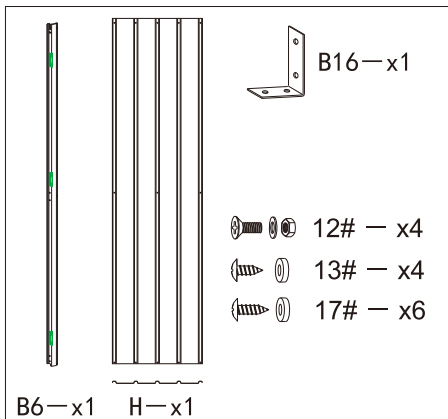

①: Install #B6 and connect it to the bottom frame using B16, securing with 2 bolts and nuts #12 and 2 screws #17.


②: Use 2 Bolts and nuts #12 to install one side of #G6 to #B6; Use 2 Screws #17 to install another side of #G6 to #B8.


Make sure the holes on the support tubes are facing outward.

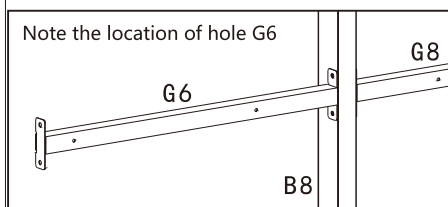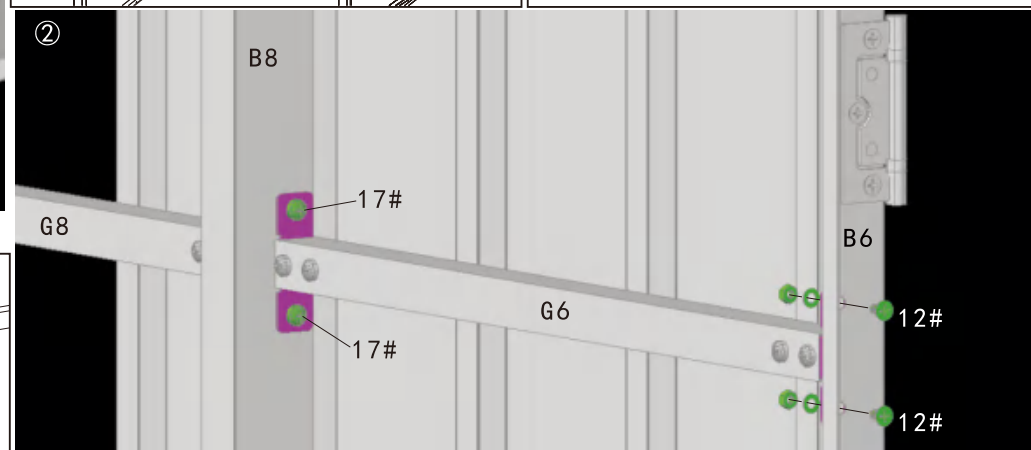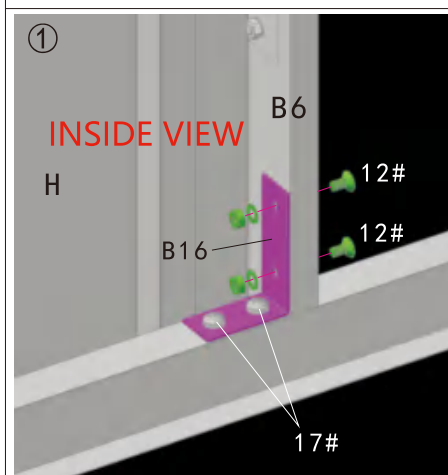

OUTSIDE VIEW

INSIDE VIEW

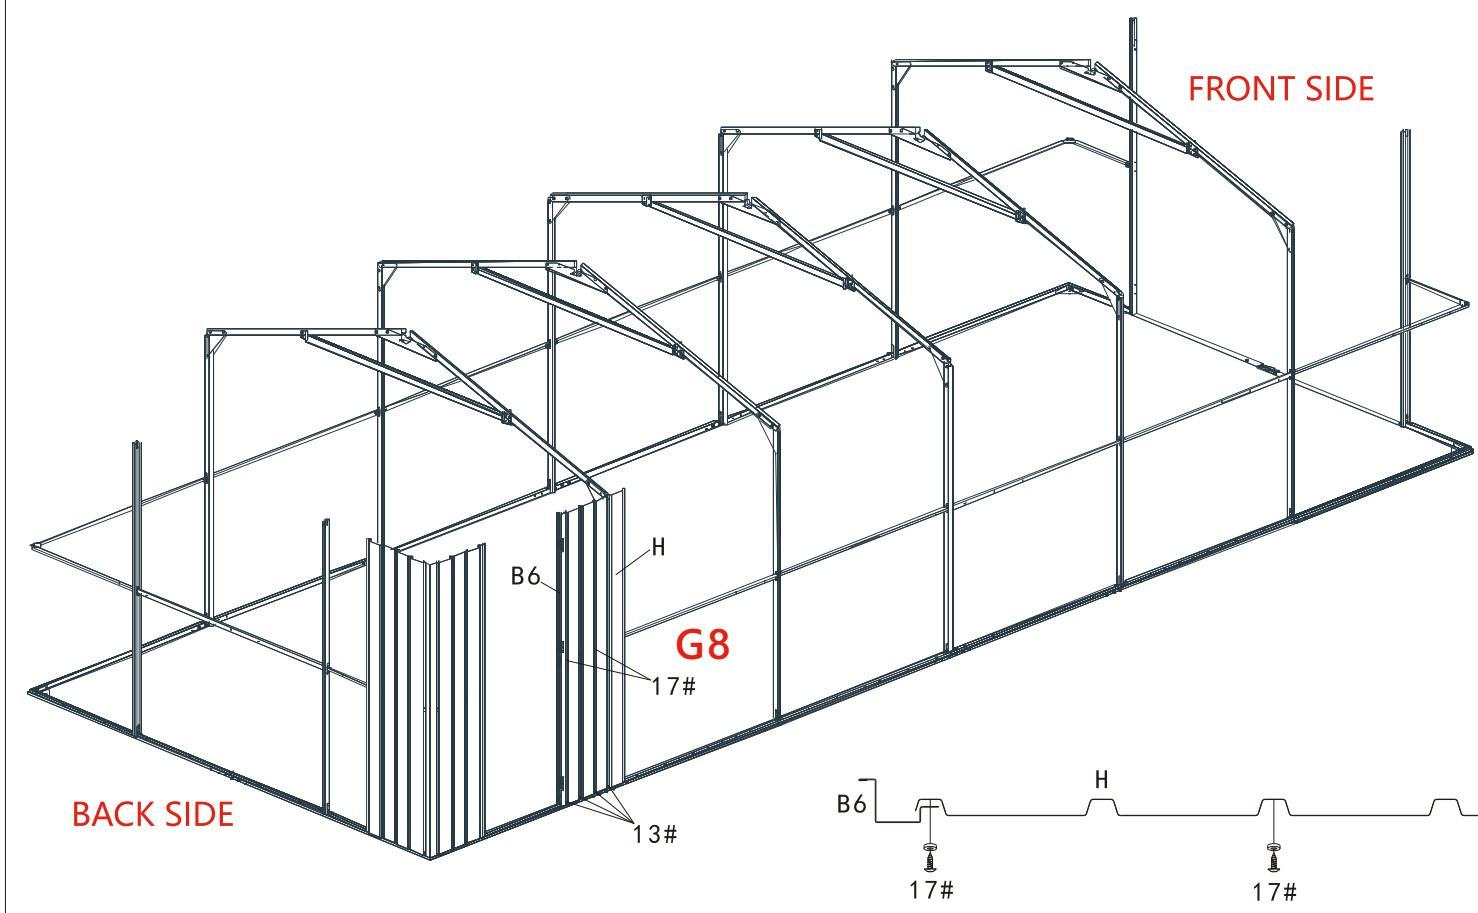


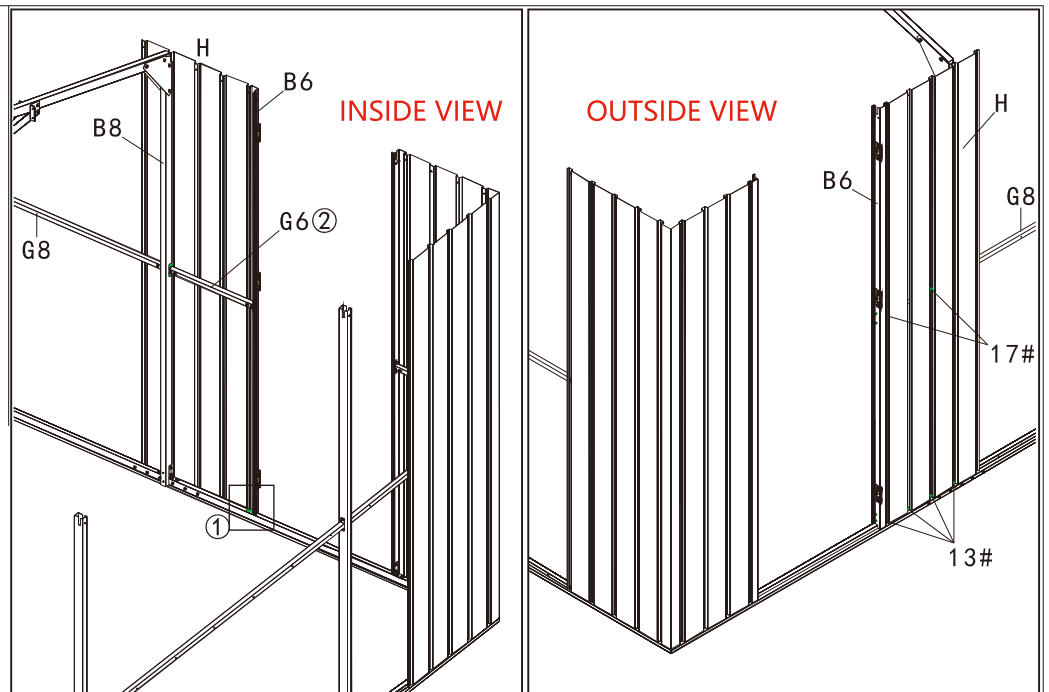


Use 2 screws #17 to secure Wall panel # H to the support tube #G6.

Use 4 screws #13 to secure Wall panel # H to the base frame.

#B6 is wrapped on the outside of #H.

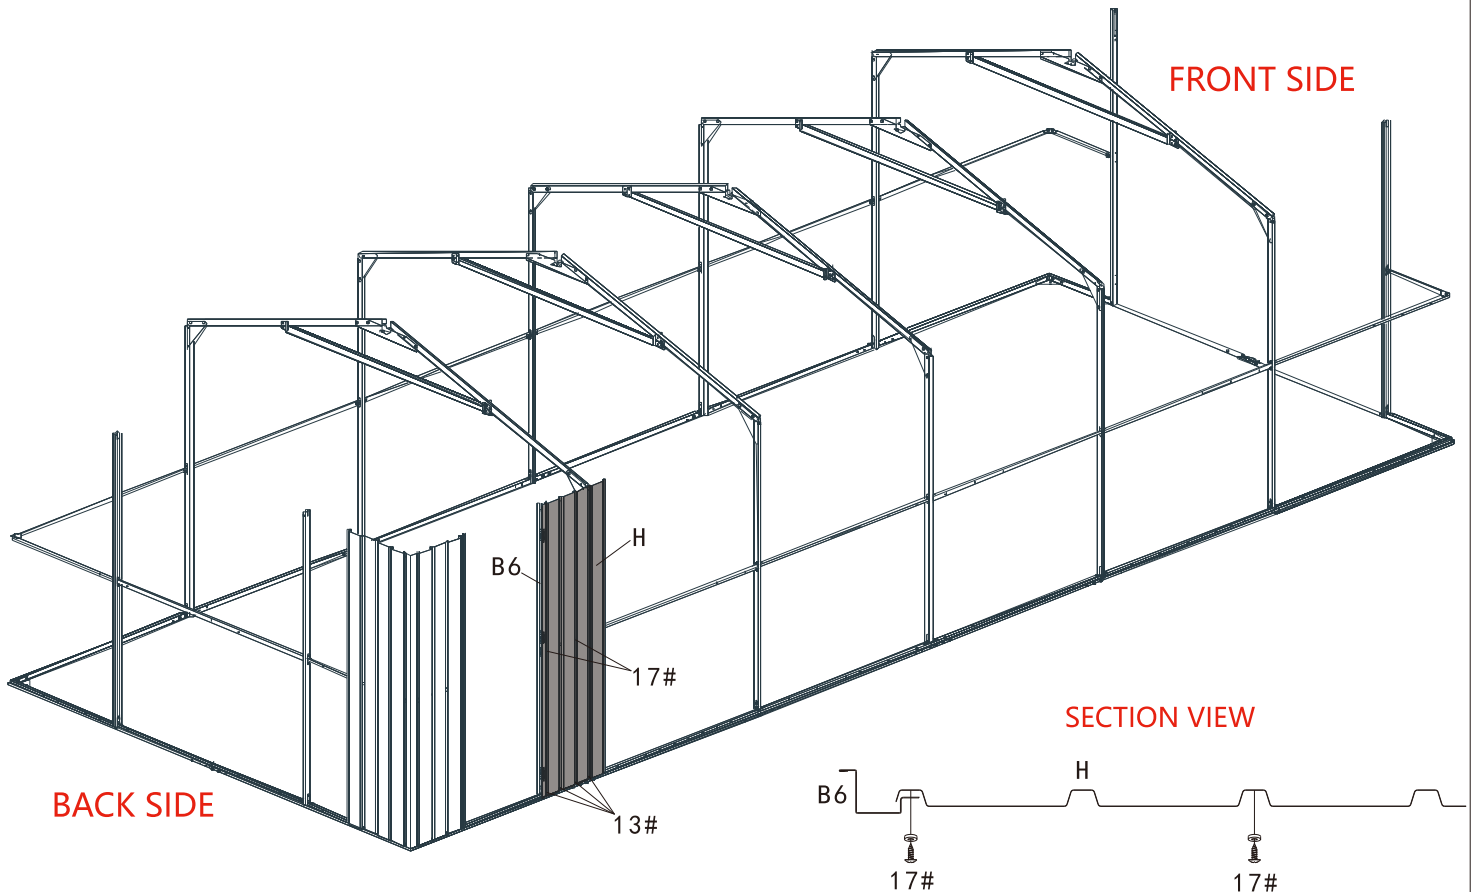


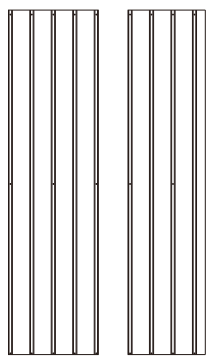


H—x1 H2—x1

13# — x7
17# — x3

INSIDE VIEW

OUTSIDE VIEW

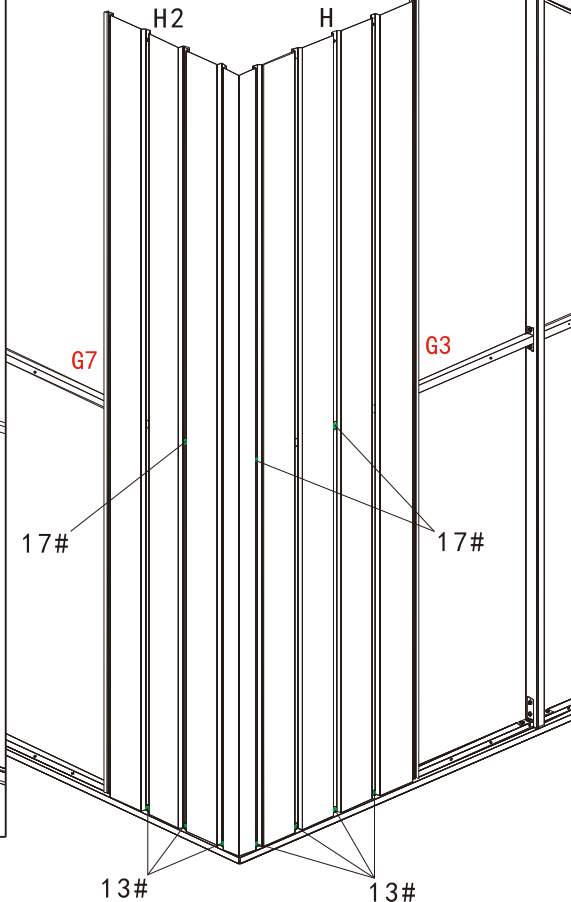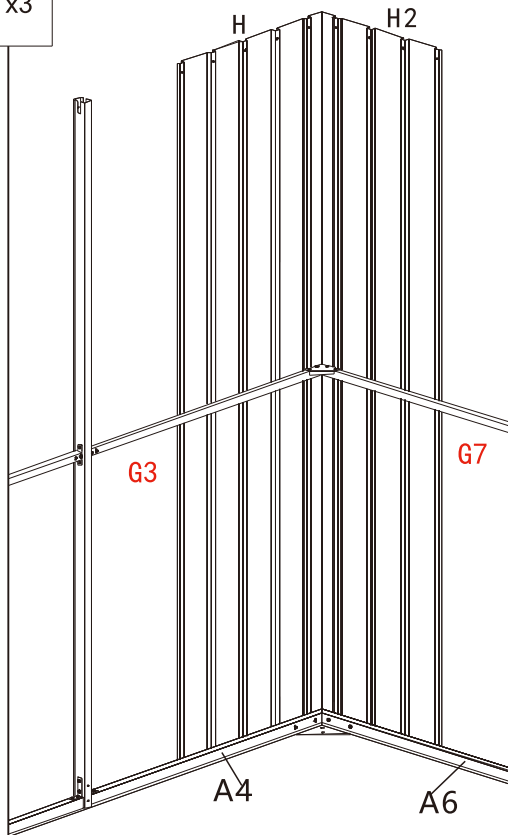


Use 3 screws #17 to secure Wall panel # H and H2 to the support tube #G3 & G7.

Use 7 screws #13 to secure Wall panel # H and H2 to the base frame #A4 & A6 .


Wall Panel #H2 is wrapped on the outside of #H.

FRONT SIDE

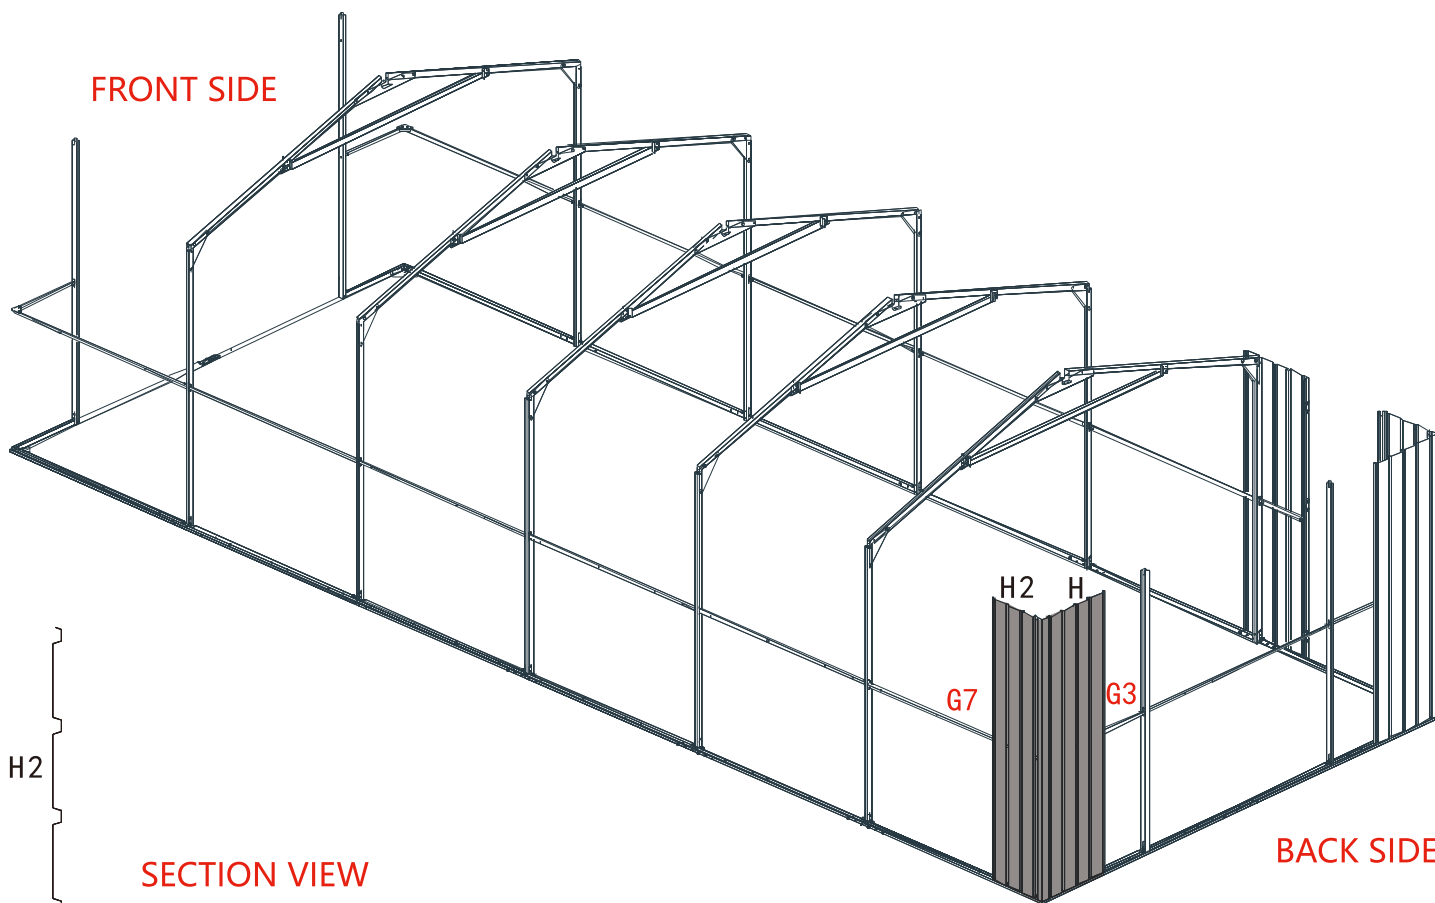

SECTION VIEW

BACK SIDE

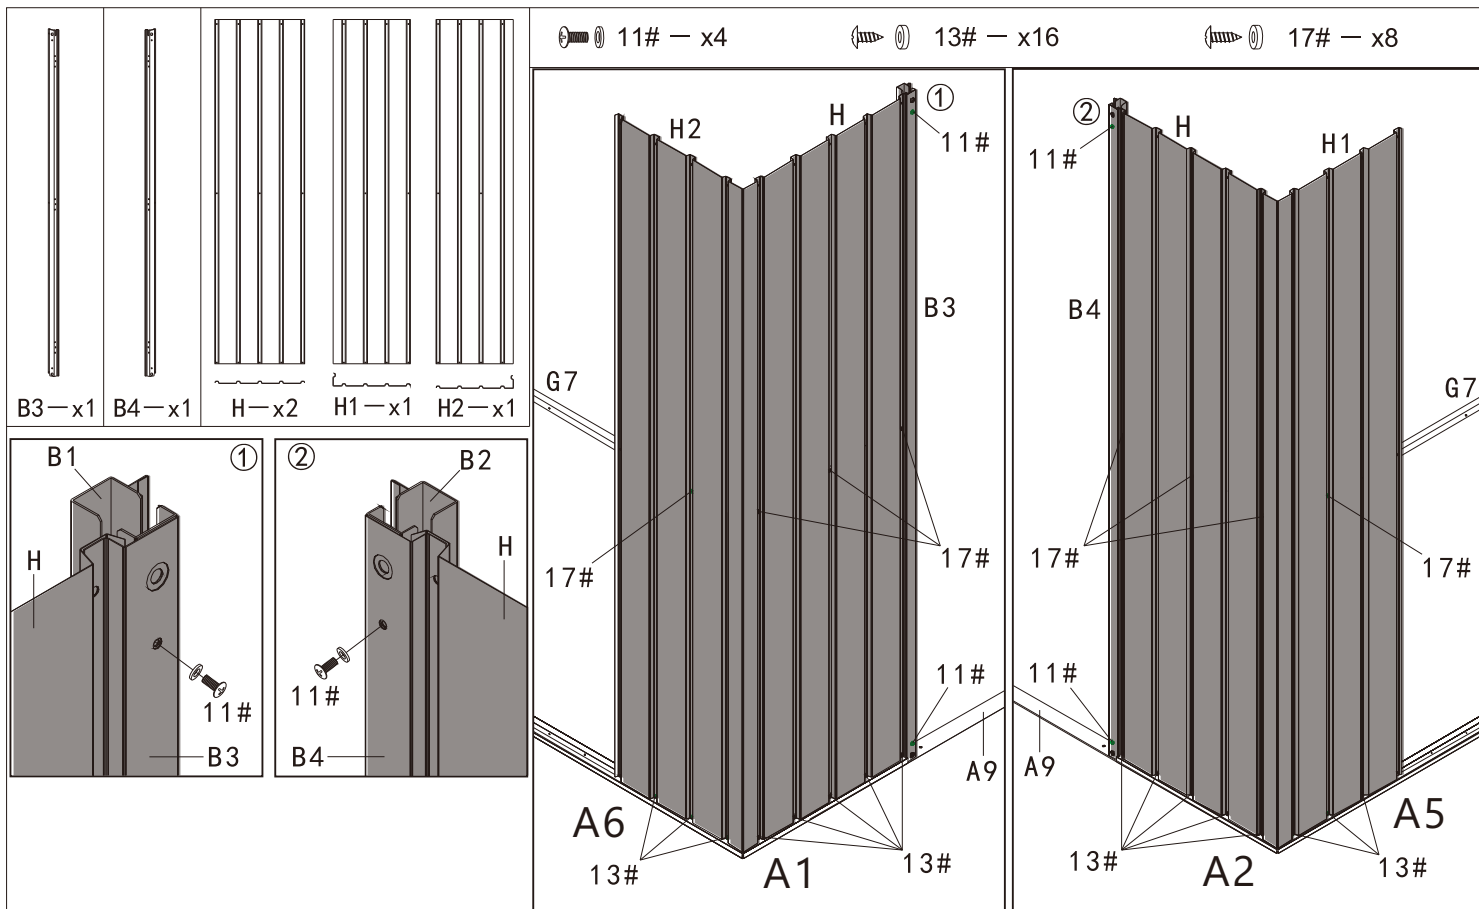

BACK SIDE

SECTION VIEW

SECTION VIEW

FRONT SIDE

1794(12X30)-12-1

①: Install #H and #B3 to #B1, align the holes and secure with 2 screws #11 (One screw #11 at the top and one at the bottom).

#B3 is wrapped on the outside of Wall Panel #H.

Use 4 screws #17 to secure Wall panel # H and H2 to the support tube #G2 & G7.

Use 8 screws #13 to secure Wall panel # H and H2 to the base frame #A1 & A6.

Wall Panel #H2 is wrapped on the outside of #H.


②: Install #H and #B4 to #B2, align the holes and secure with 2 screws #11 (One screw #11 at the top and one at the bottom).

#B4 is wrapped on the outside of Wall Panel #H.

Use 4 screws #17 to secure Wall panel # H and H1 to the support tube #G2 & G7.


Use 8 screws #13 to secure Wall panel # H and H2 to the base frame #A2 & A5.

Wall Panel #H1 is wrapped on the outside of #H.

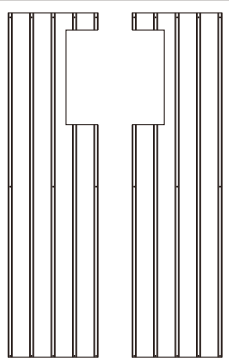

H3—x1


H4—x1



H6—x1



H7—x1




H8—x1

6# — x8

13# — x8


17# — x4

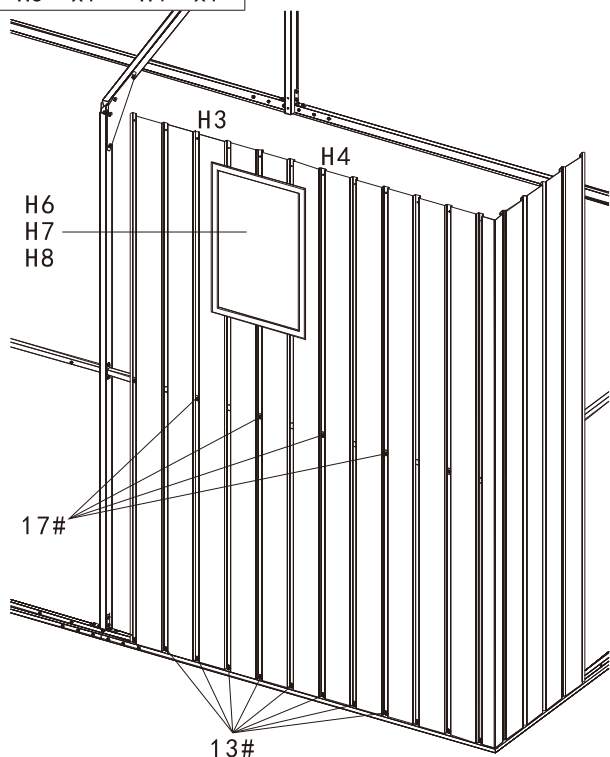

Use 4 screws #17 to secure wall panels # H3 and H4 to the support tube #G7.



Use 8 screws #13 to secure wall panels # H3 and H4 to the base frame #A6.

FRONT SIDE

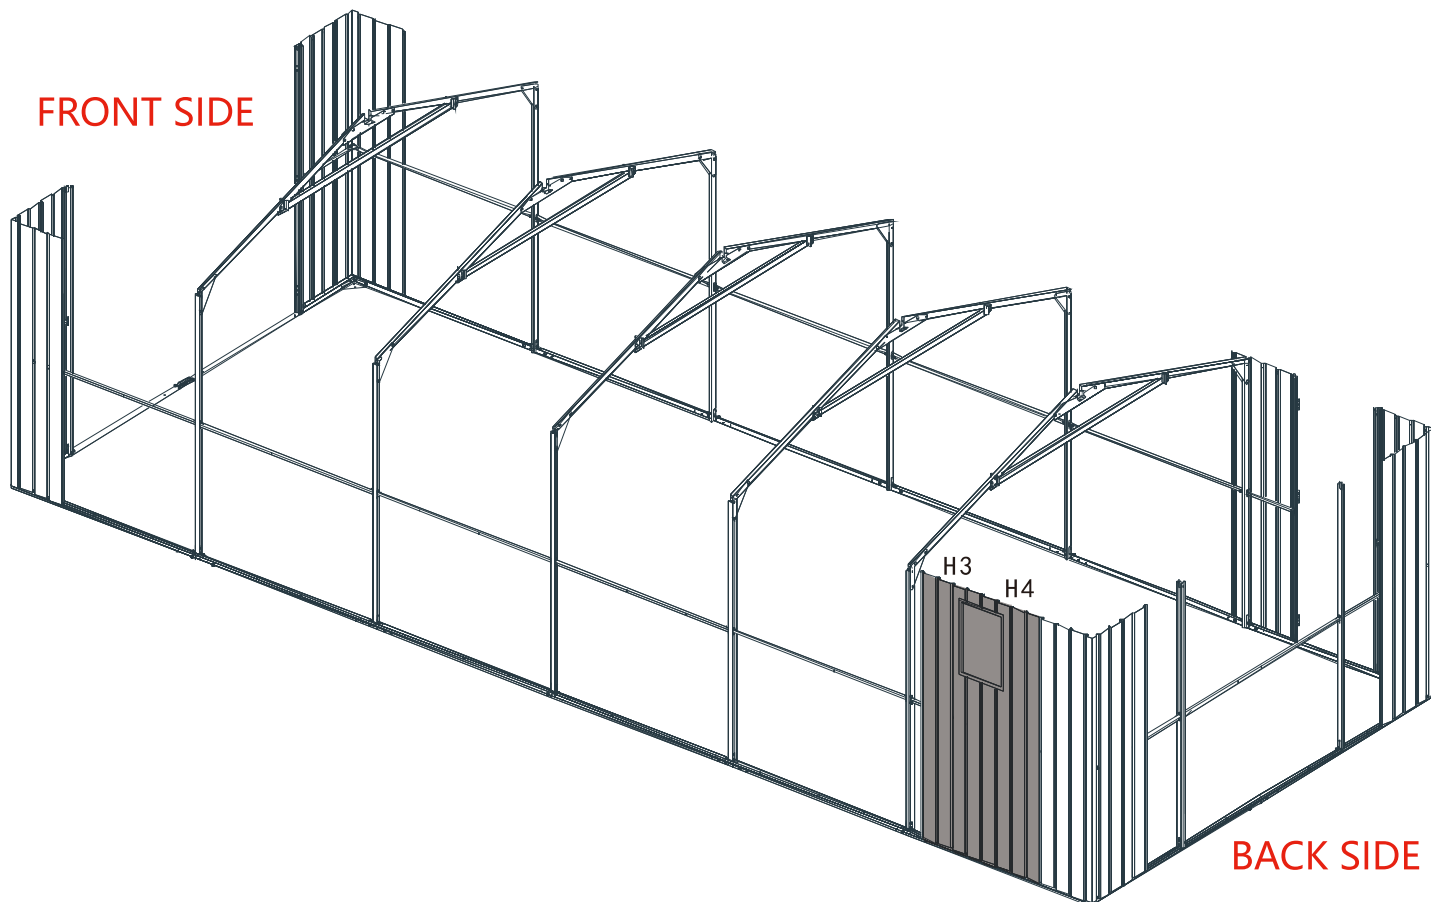


BACK SIDE

Side Window Assembly:
Insert part #H6 to the wall
panel #H3/H4 (from outside
to inside), place transparent
board #H8, align the holes
and use 8 screws #6 to fix
part #H7 & part #H6 (from
inside to outside).

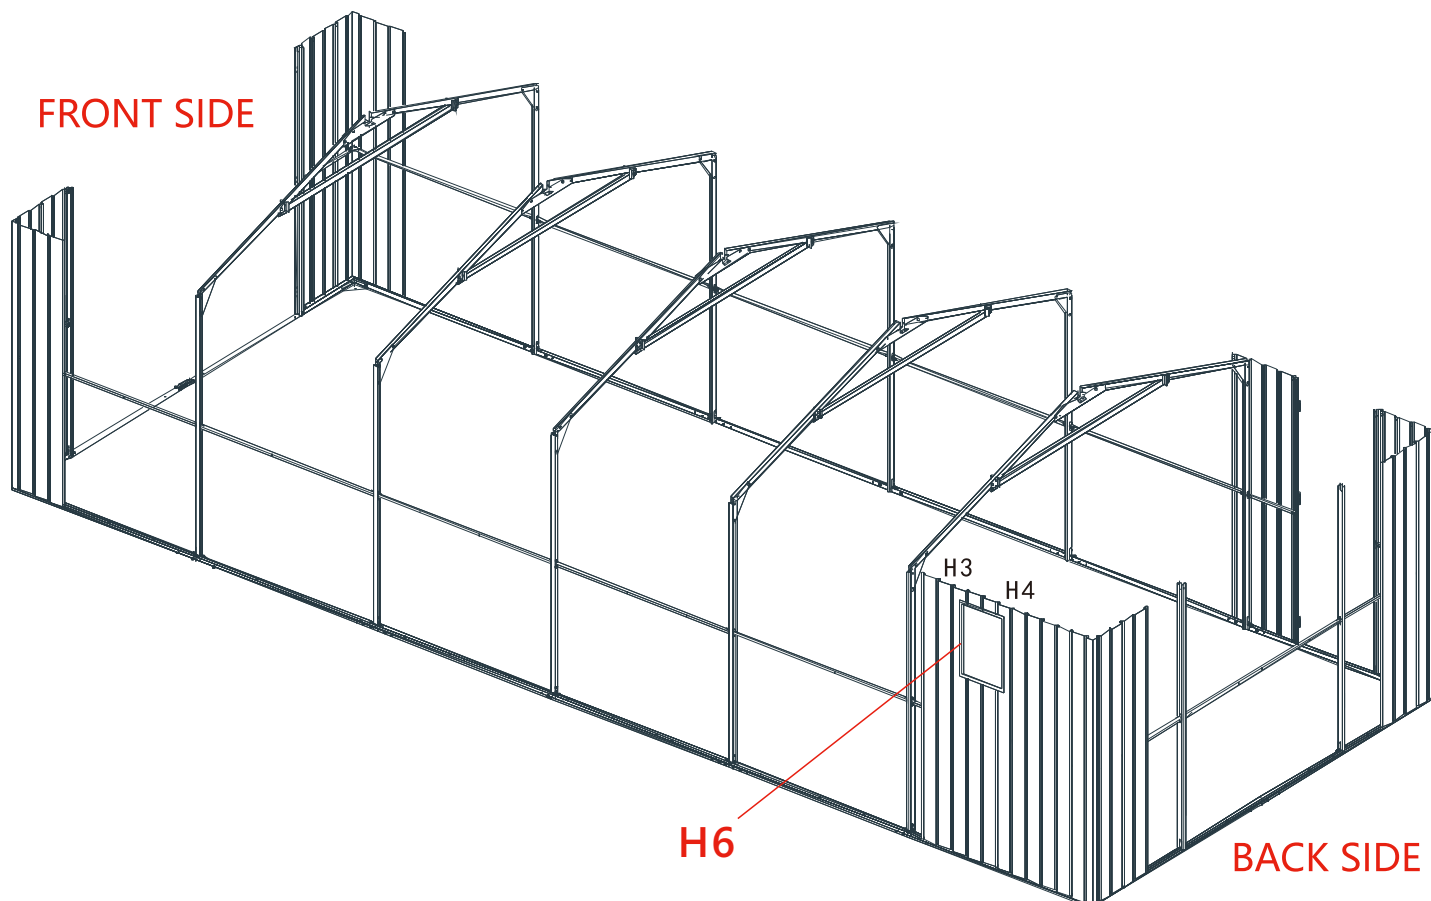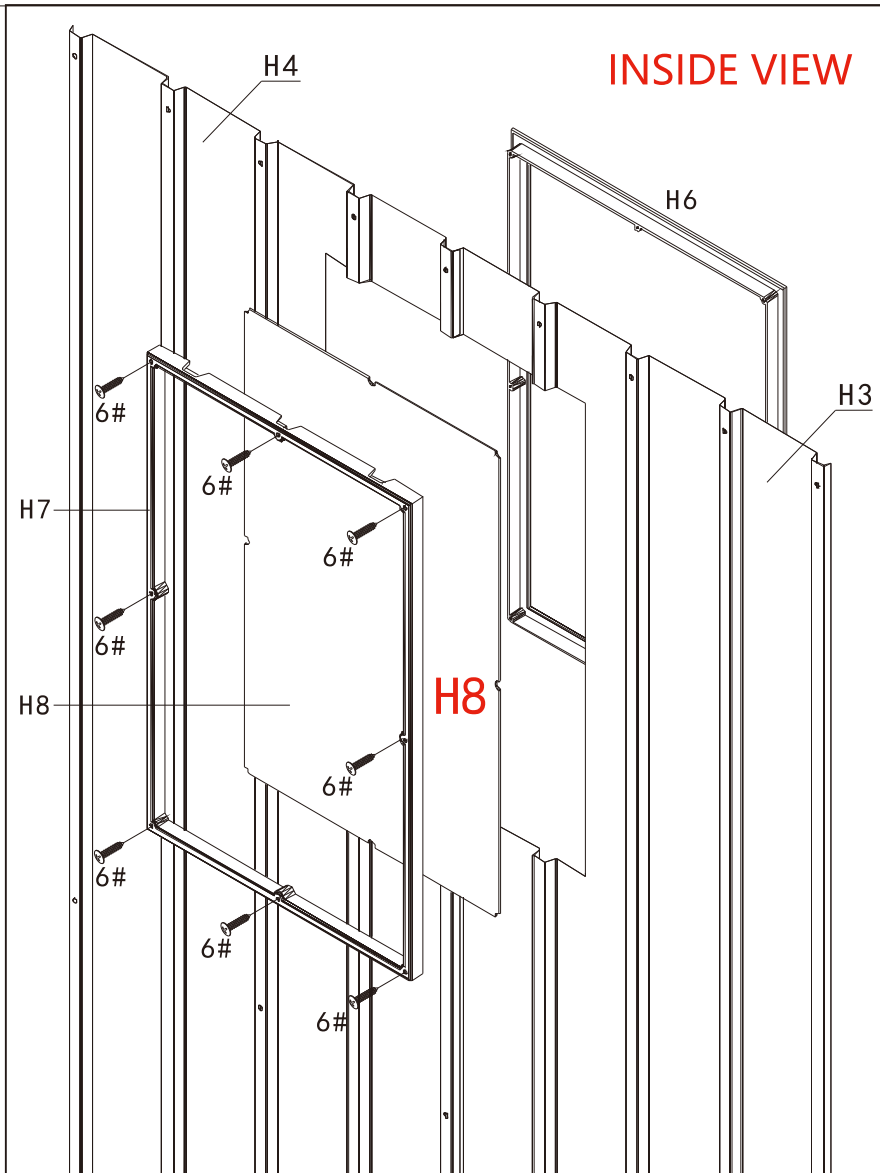


13# — x8

17# — x4

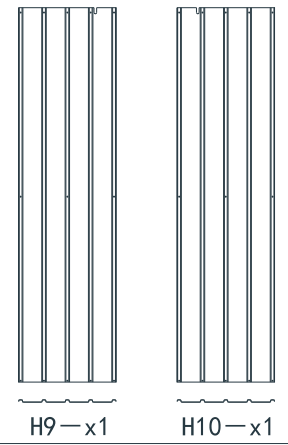


FRONT SIDE

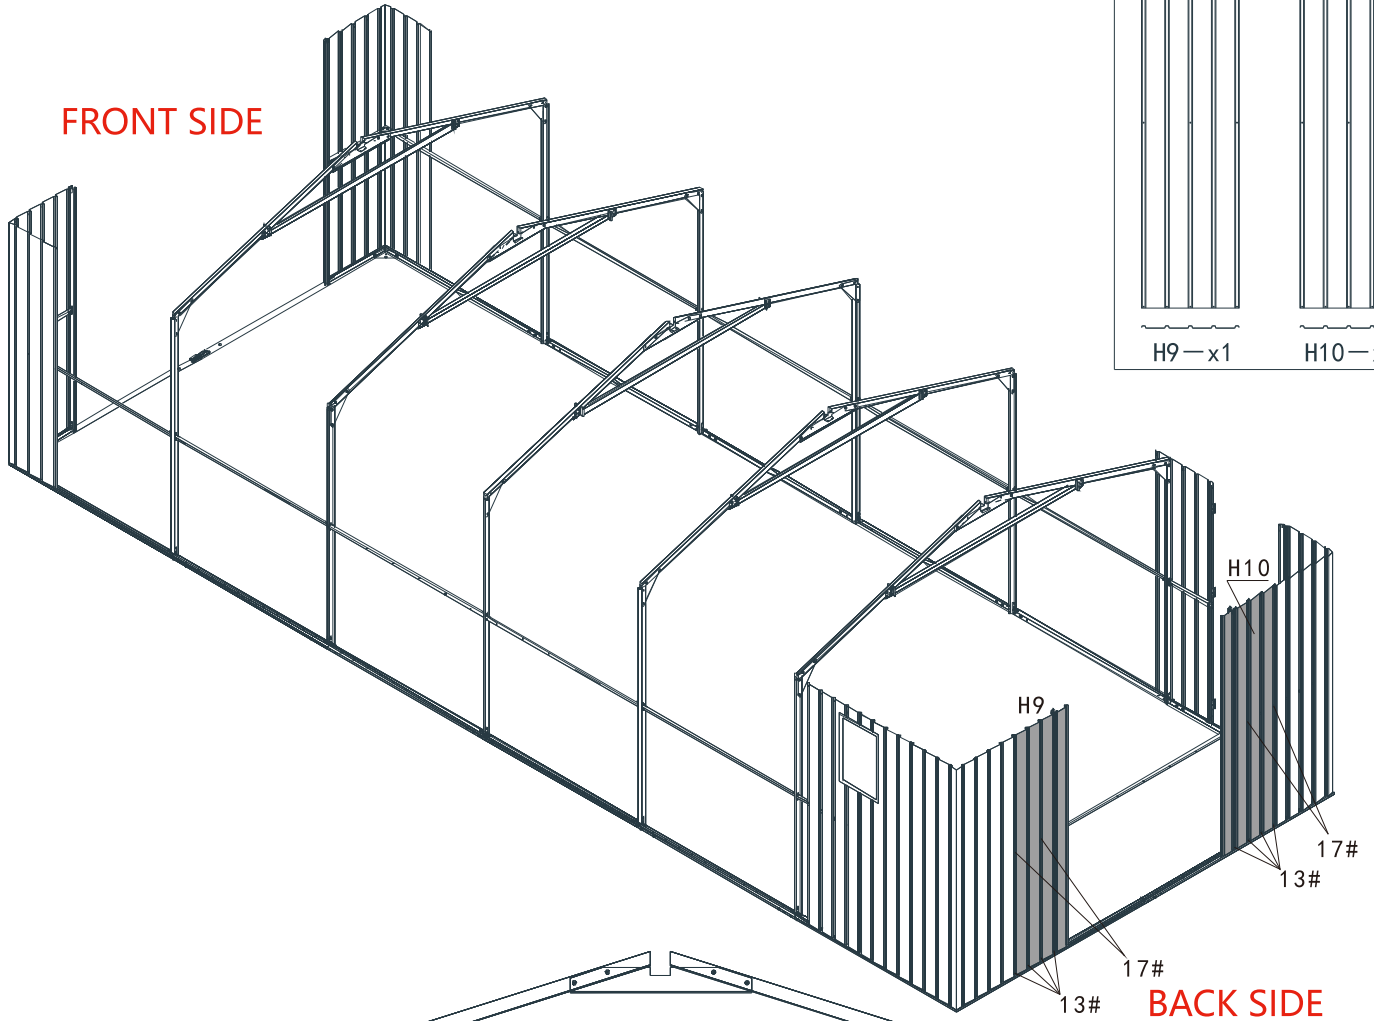



B7

G4

OUTSIDE VIEW

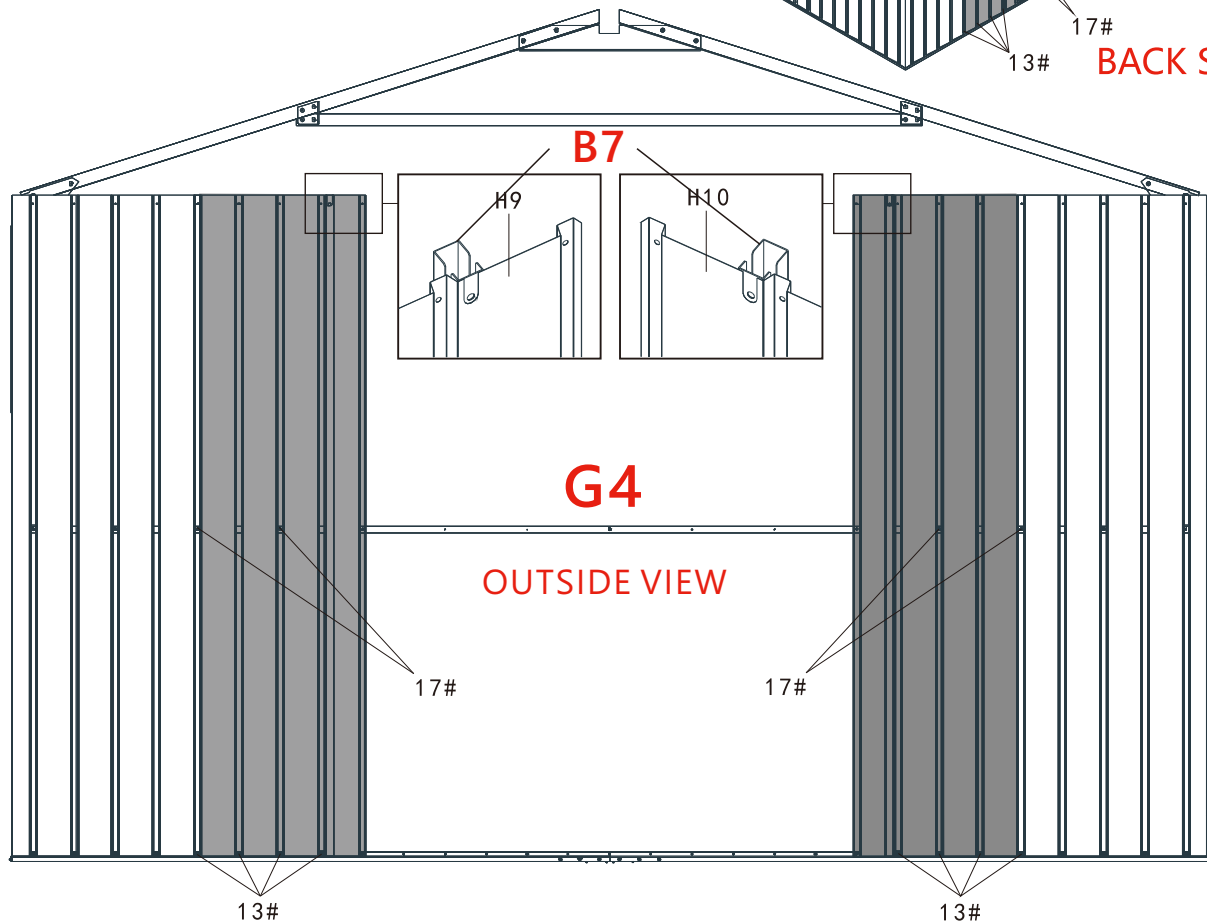


Use 4 screws #17 to secure wall panels # H9 and H10 to the support tube.
Use 8 screws #13 to secure wall panels # H9 and H10 to the base frame.

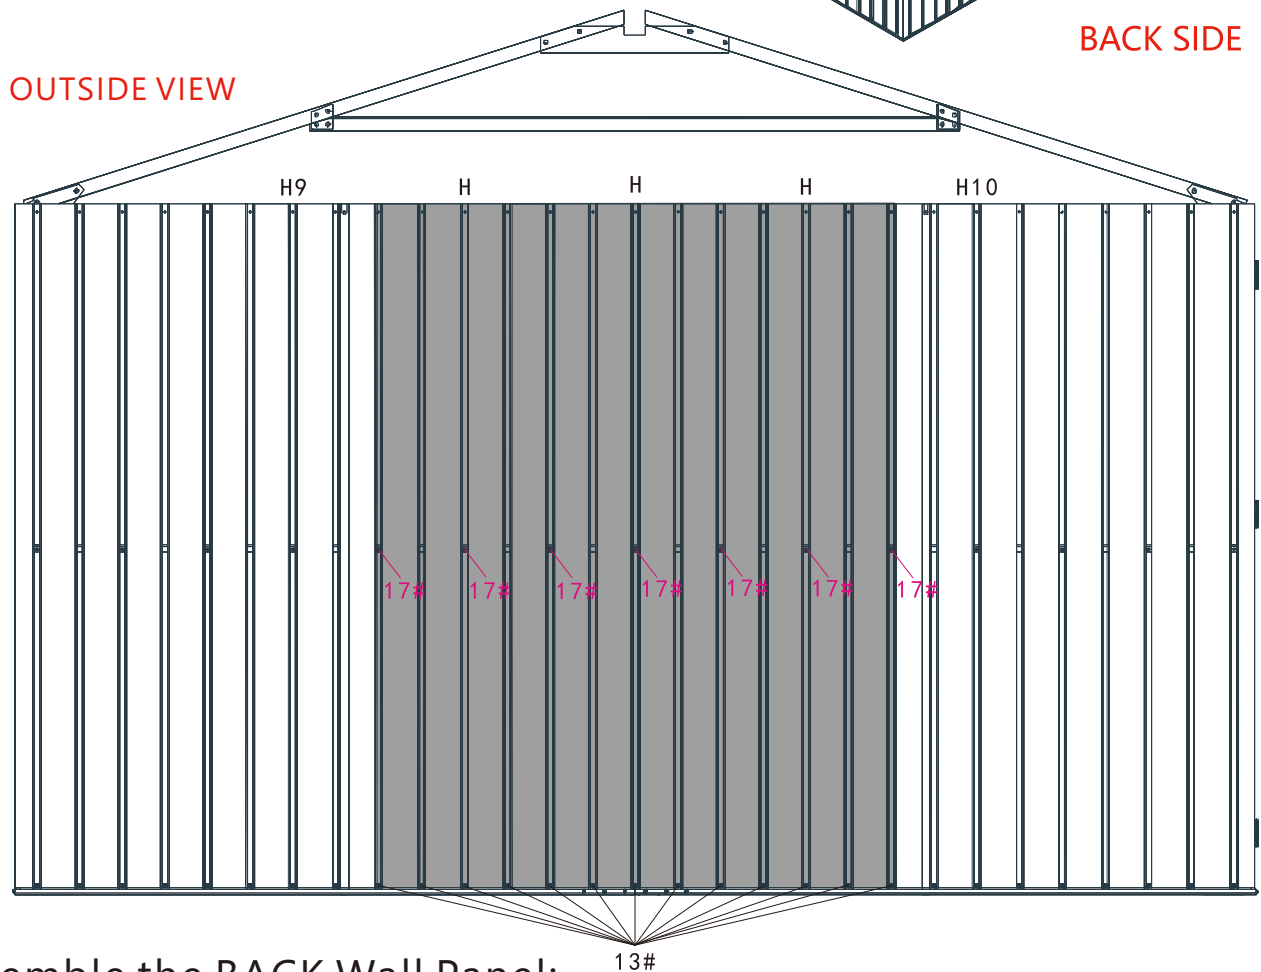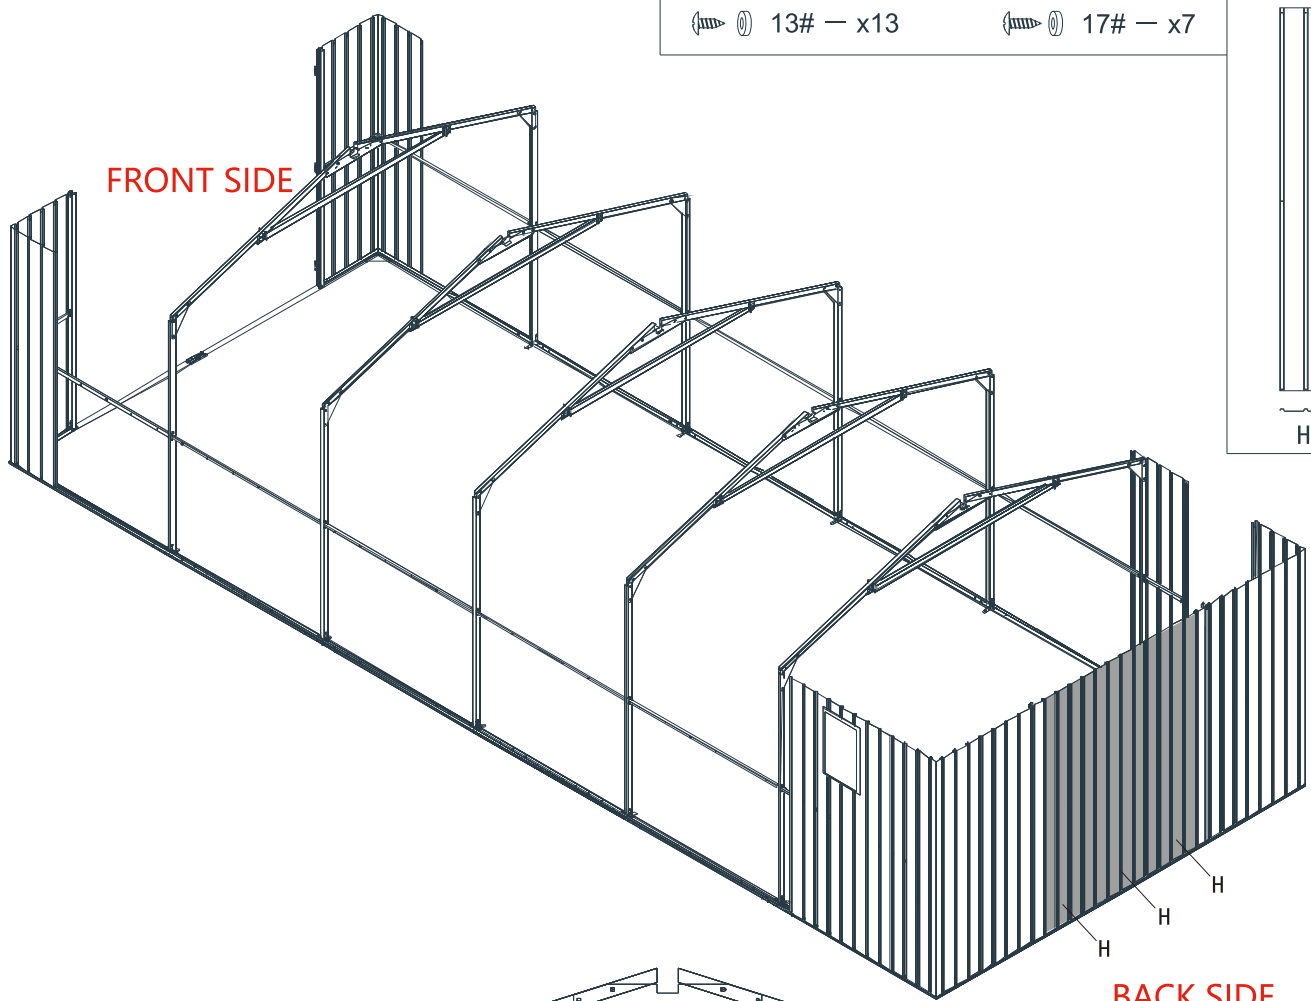

Assemble the BACK Wall Panel:

Use 7 screws #17 to secure 3 wall panels # H to the support tube #G4.

Use 13 screws #13 to secure 3 wall panels # H to the base frame.



H—x14




H5—x1

13# — x59


17# — x30

Use 30 screws #17 to secure 14 wall panels #H and 1 wall panel #H5 to the support tubes.

Use 59 screws #13 to secure 14 wall panels #H and 1 wall panel #H5 to the base frame.

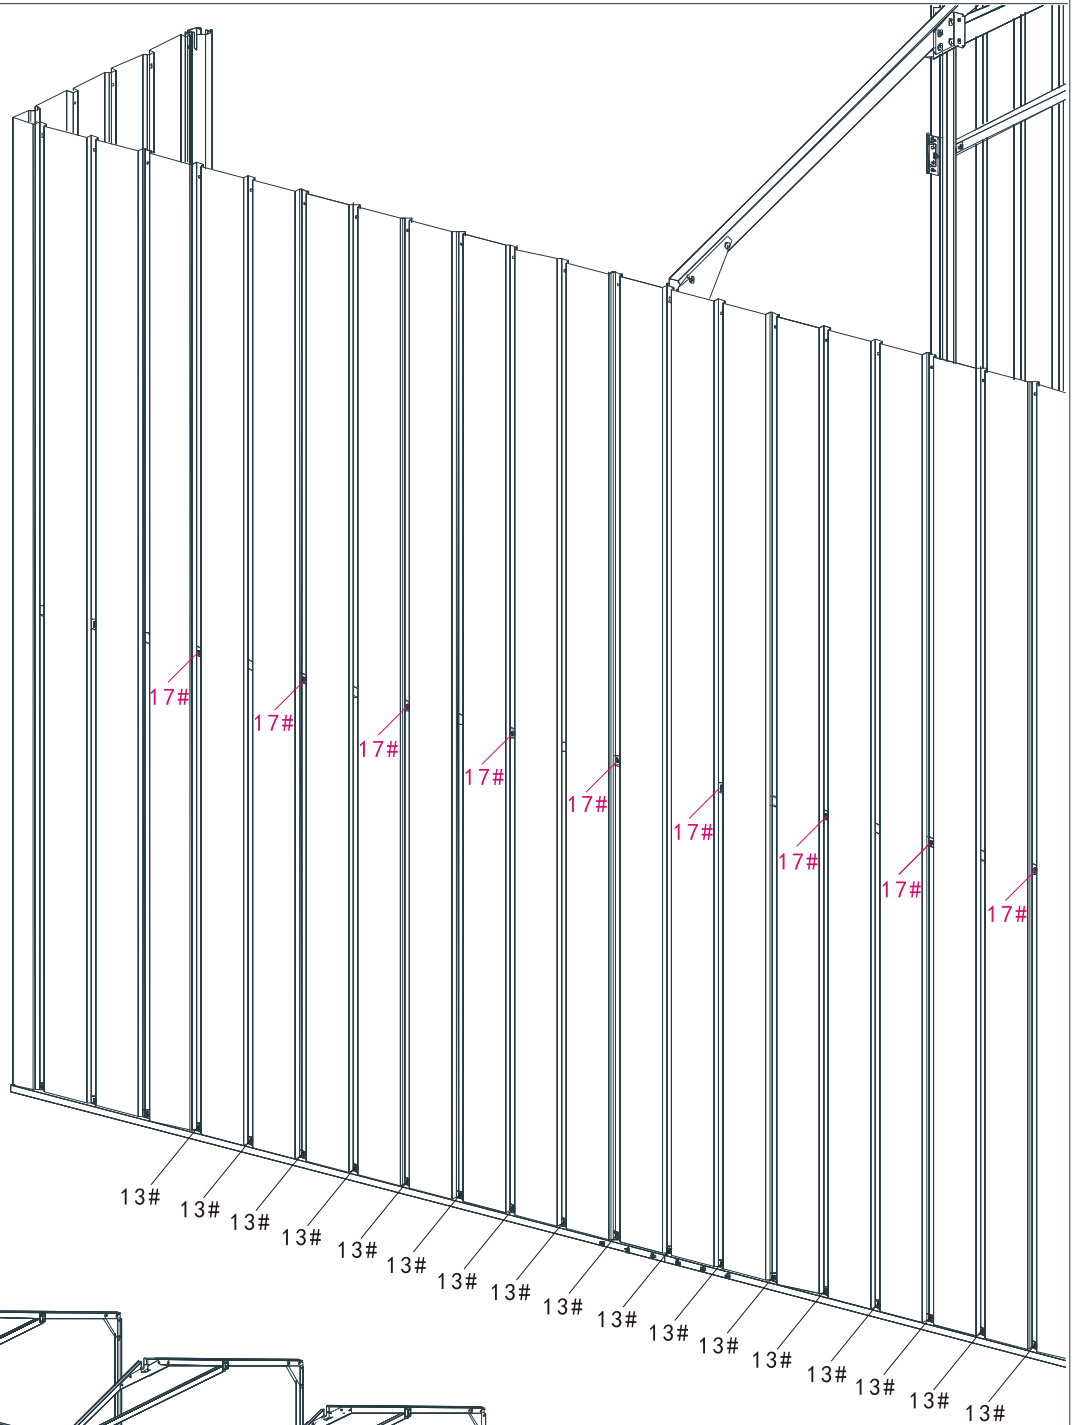

FRONT SIDE

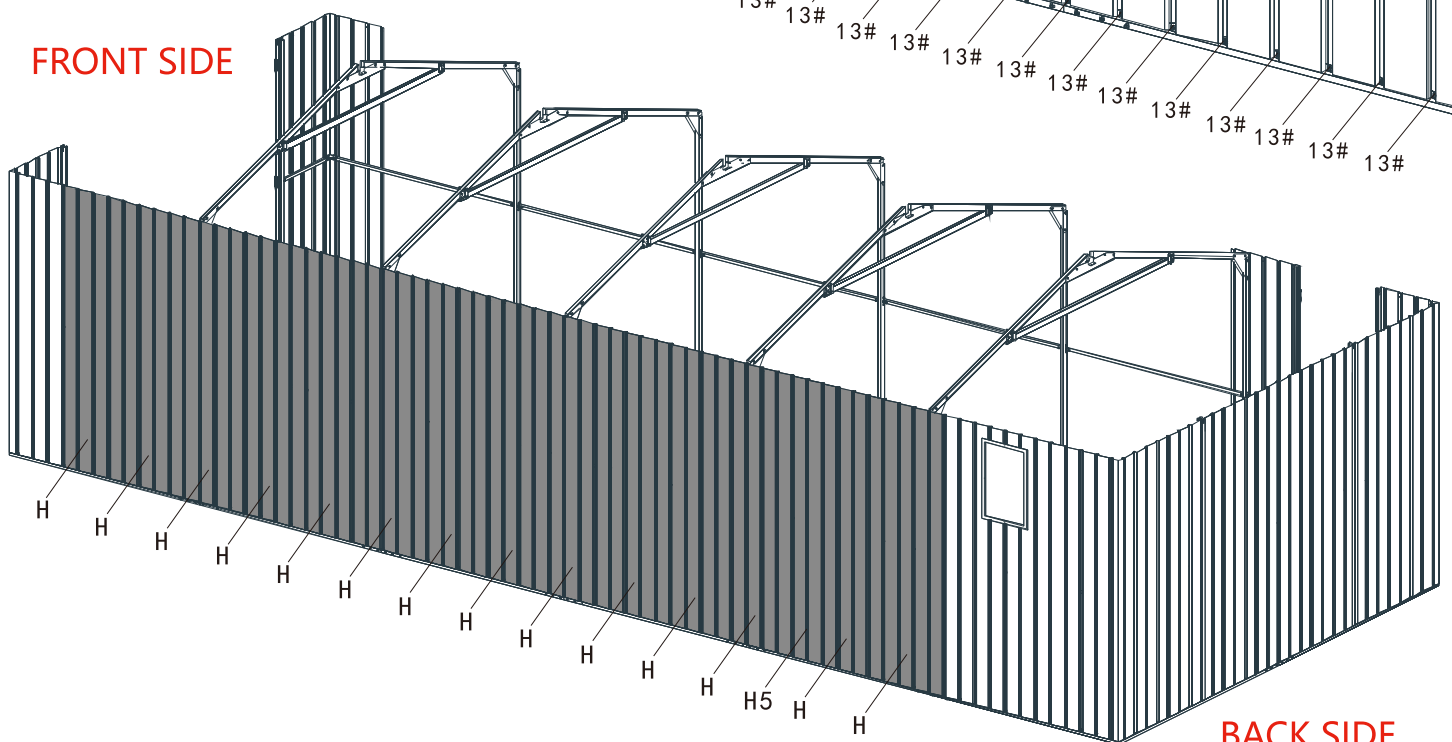


BACK SIDE



H-x14

13# - x57




17# - x29

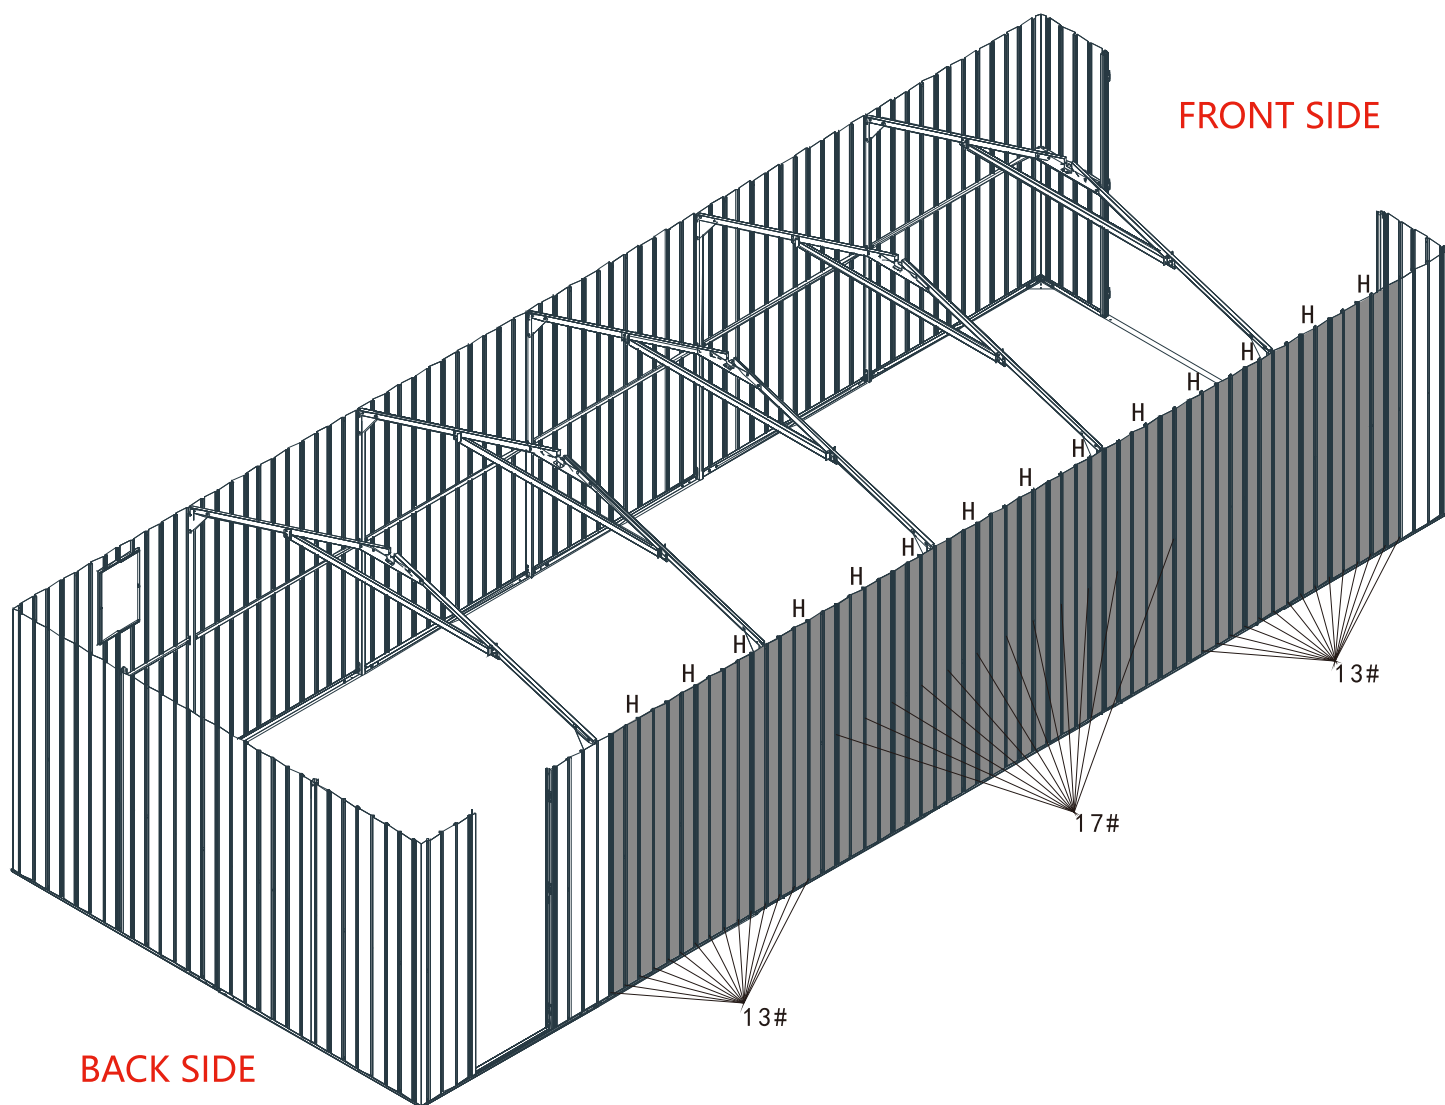

Assemble the SIDE Wall Panel:



Use 29 screws #17 to secure 14 Wall panels #H to the support tube.

Use 57 screws #13 to secure 14 Wall panels #H to the base frame.

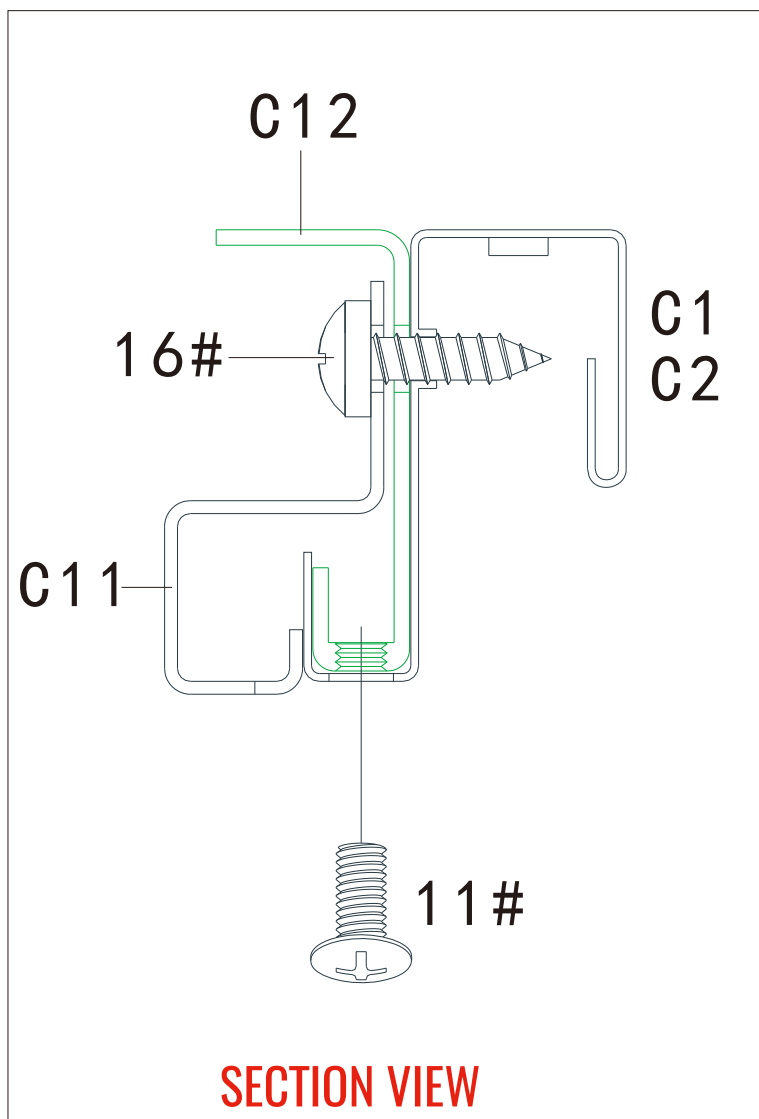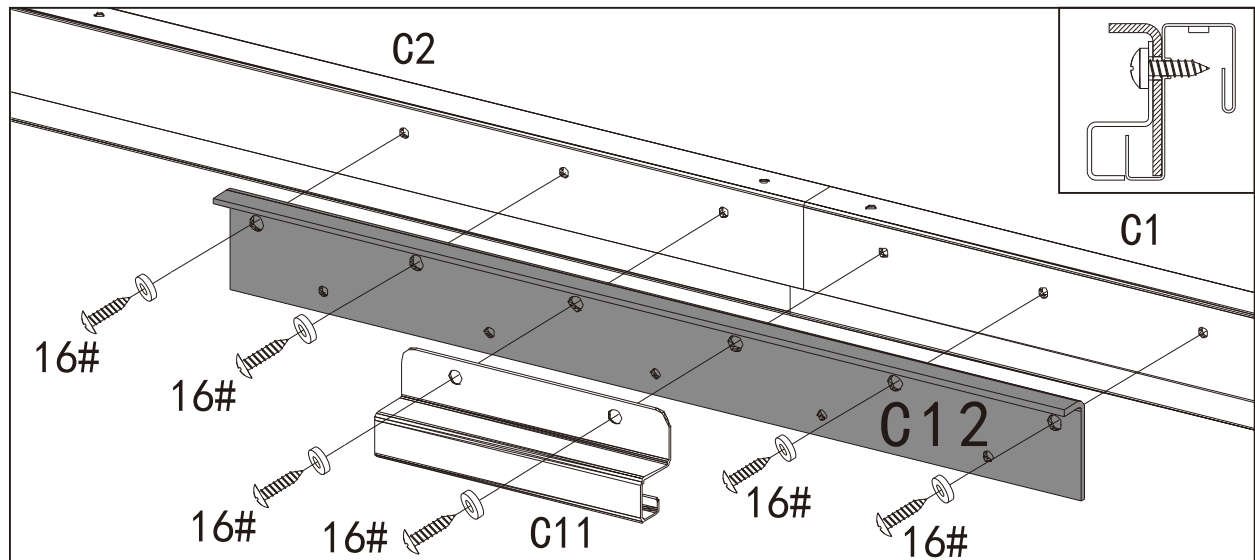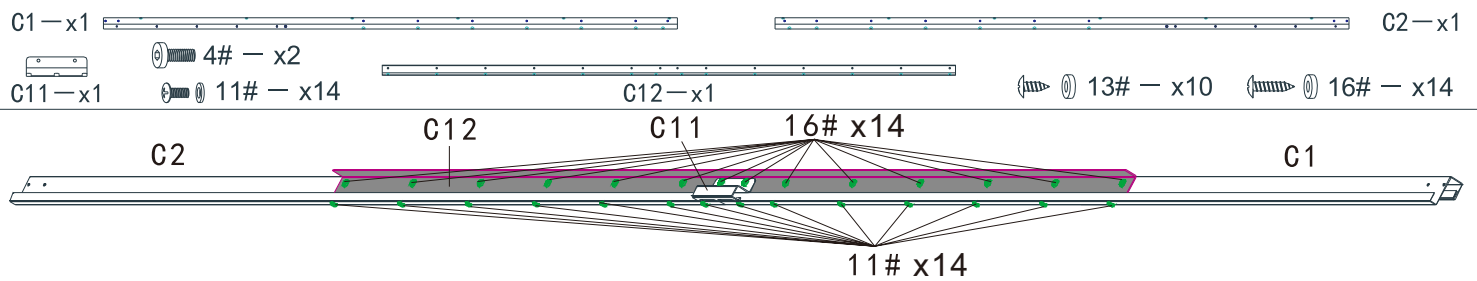

Connect part #C1 & #C2, insert part #C12 & #C11 on the inside of part #C1/C2, align the holes and fix with 14 screws #16, 14 screws #11 and gaskets.

Install the Top Frame # C1, C2 onto the front side,
securing with 10 screws #13 and 2 bolts #4.

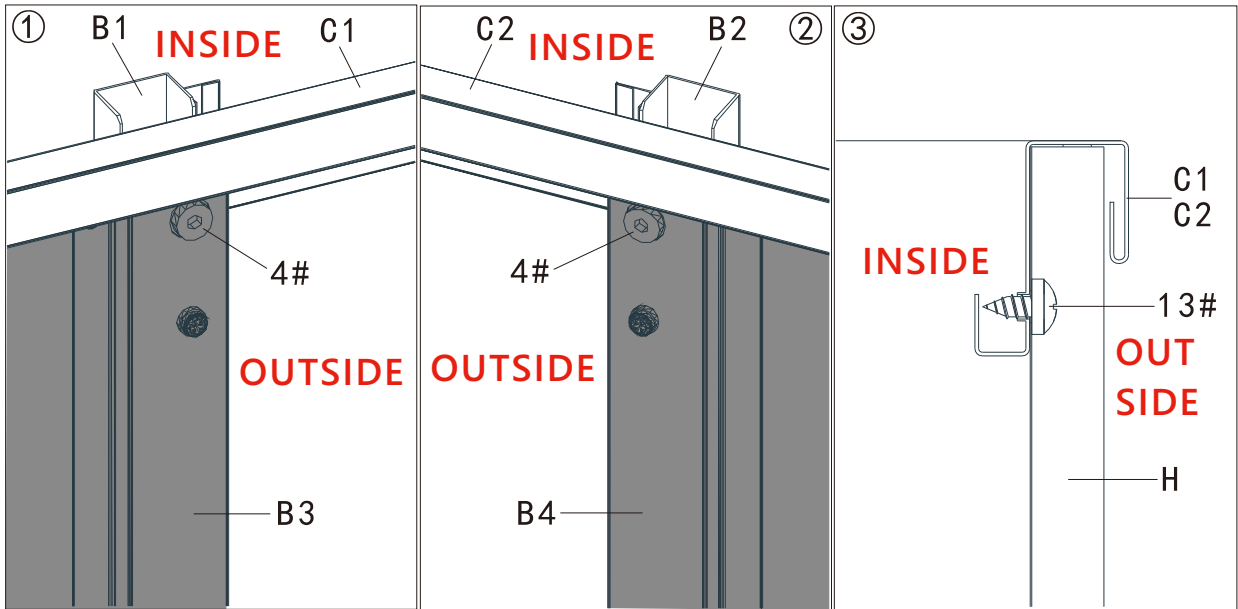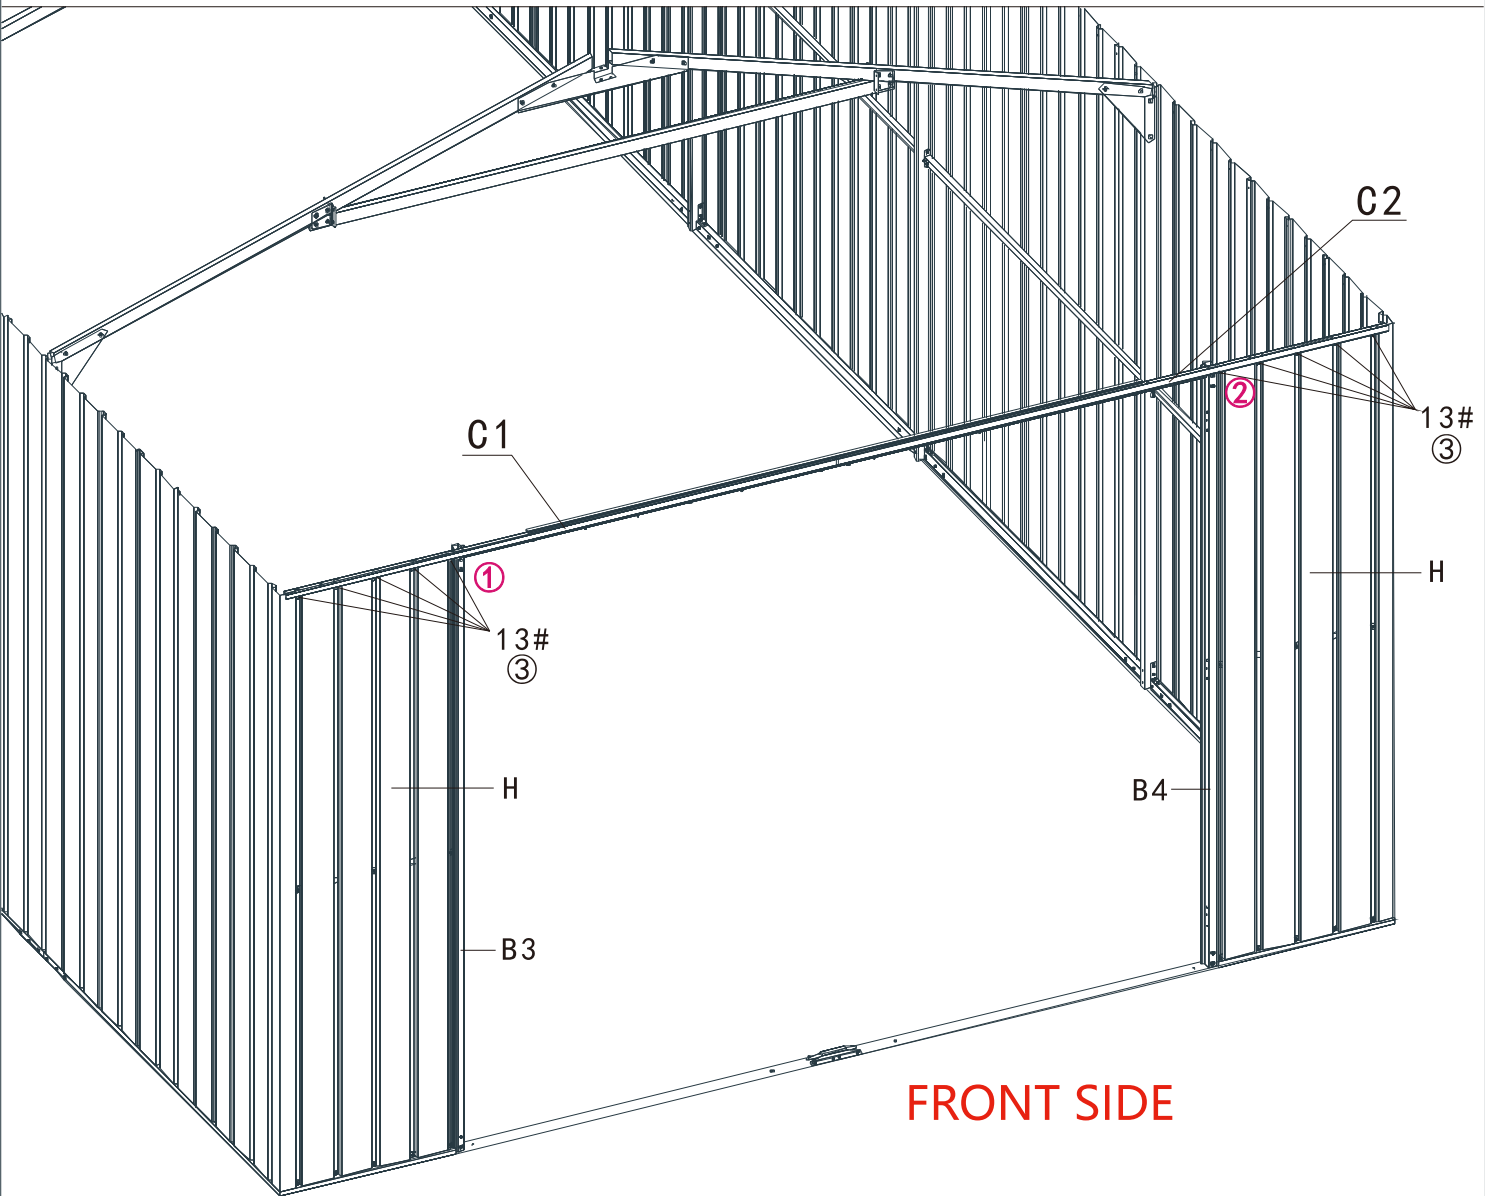

C3—x1


C4—x1

C9—x1


4# — x2

13# — x29

16# — x6



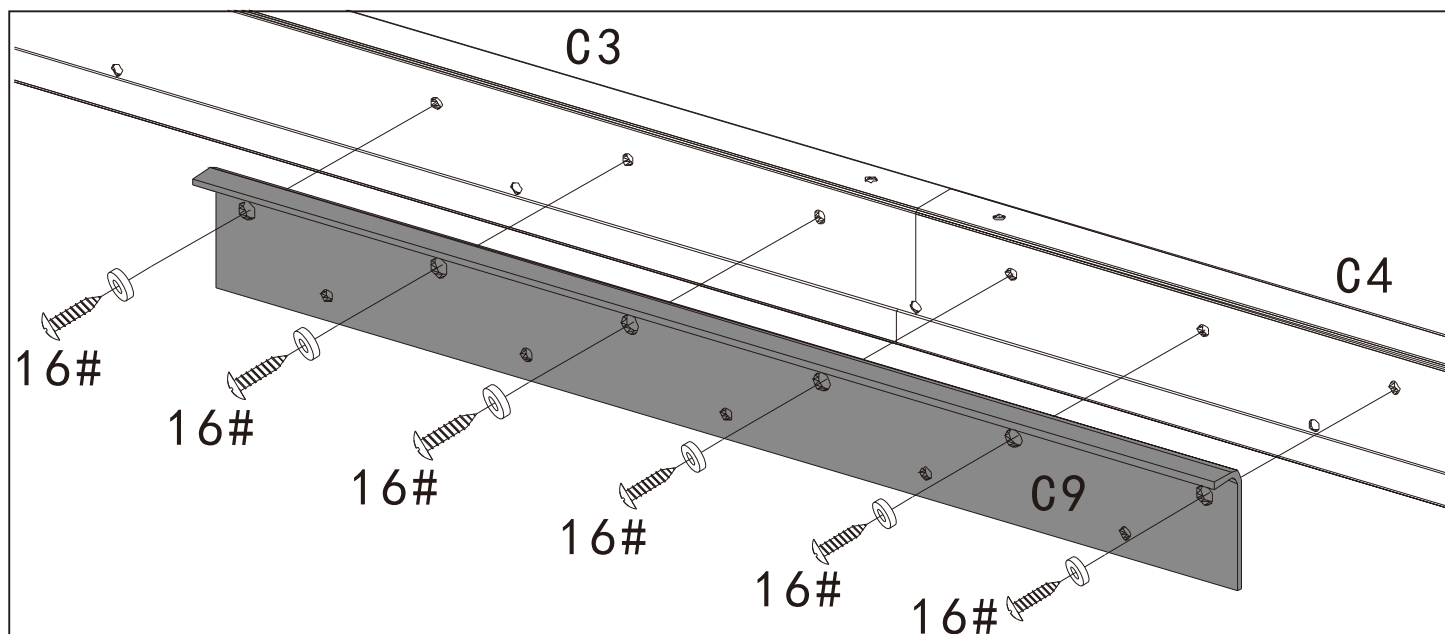


Connect part #C3 & #C4, insert part #C9 on the inside of part #C3/C4, align the holes and fix with 6 screws #16 and gaskets.

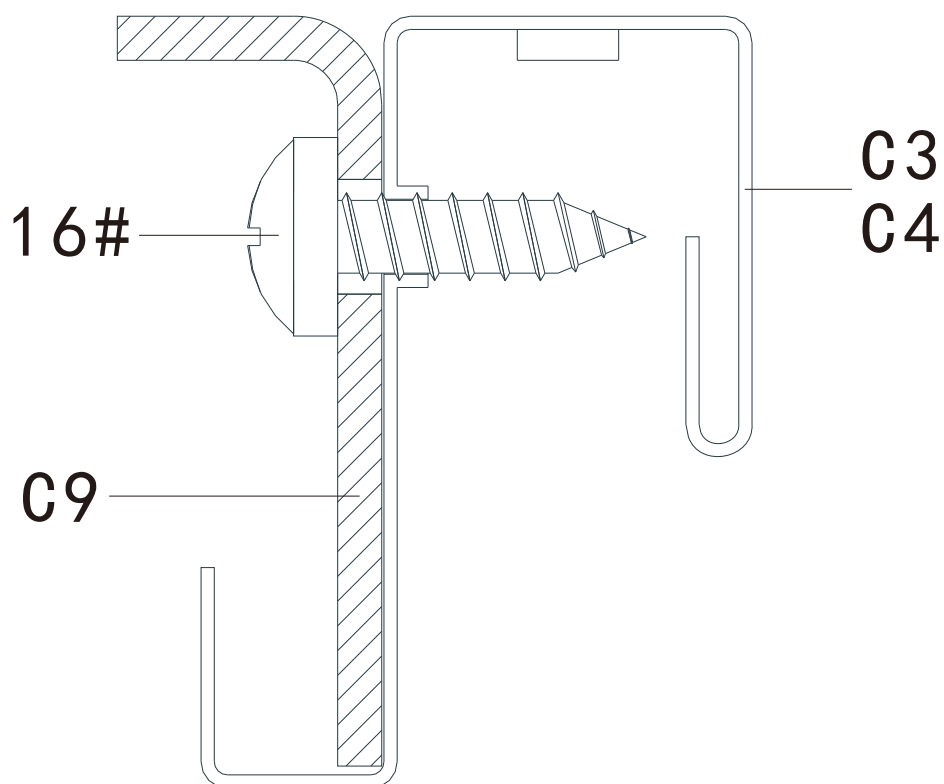


SECTION VIEW



Install the Top Frame C3, C4 onto the back side,
securing with 29 screws #13 and 2 bolts #4.

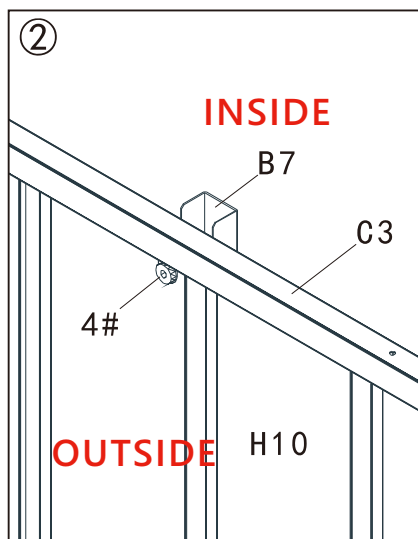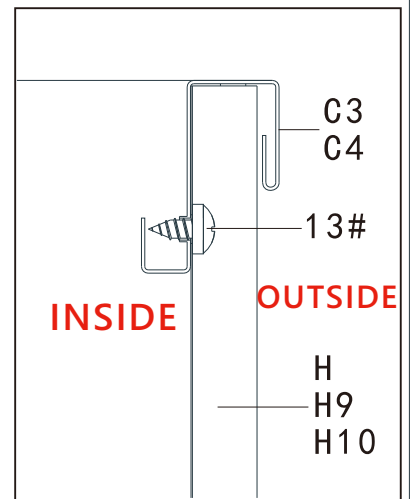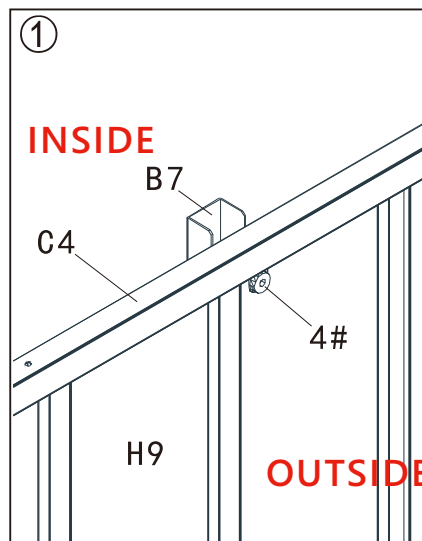

SECTION VIEW

BACK SIDE

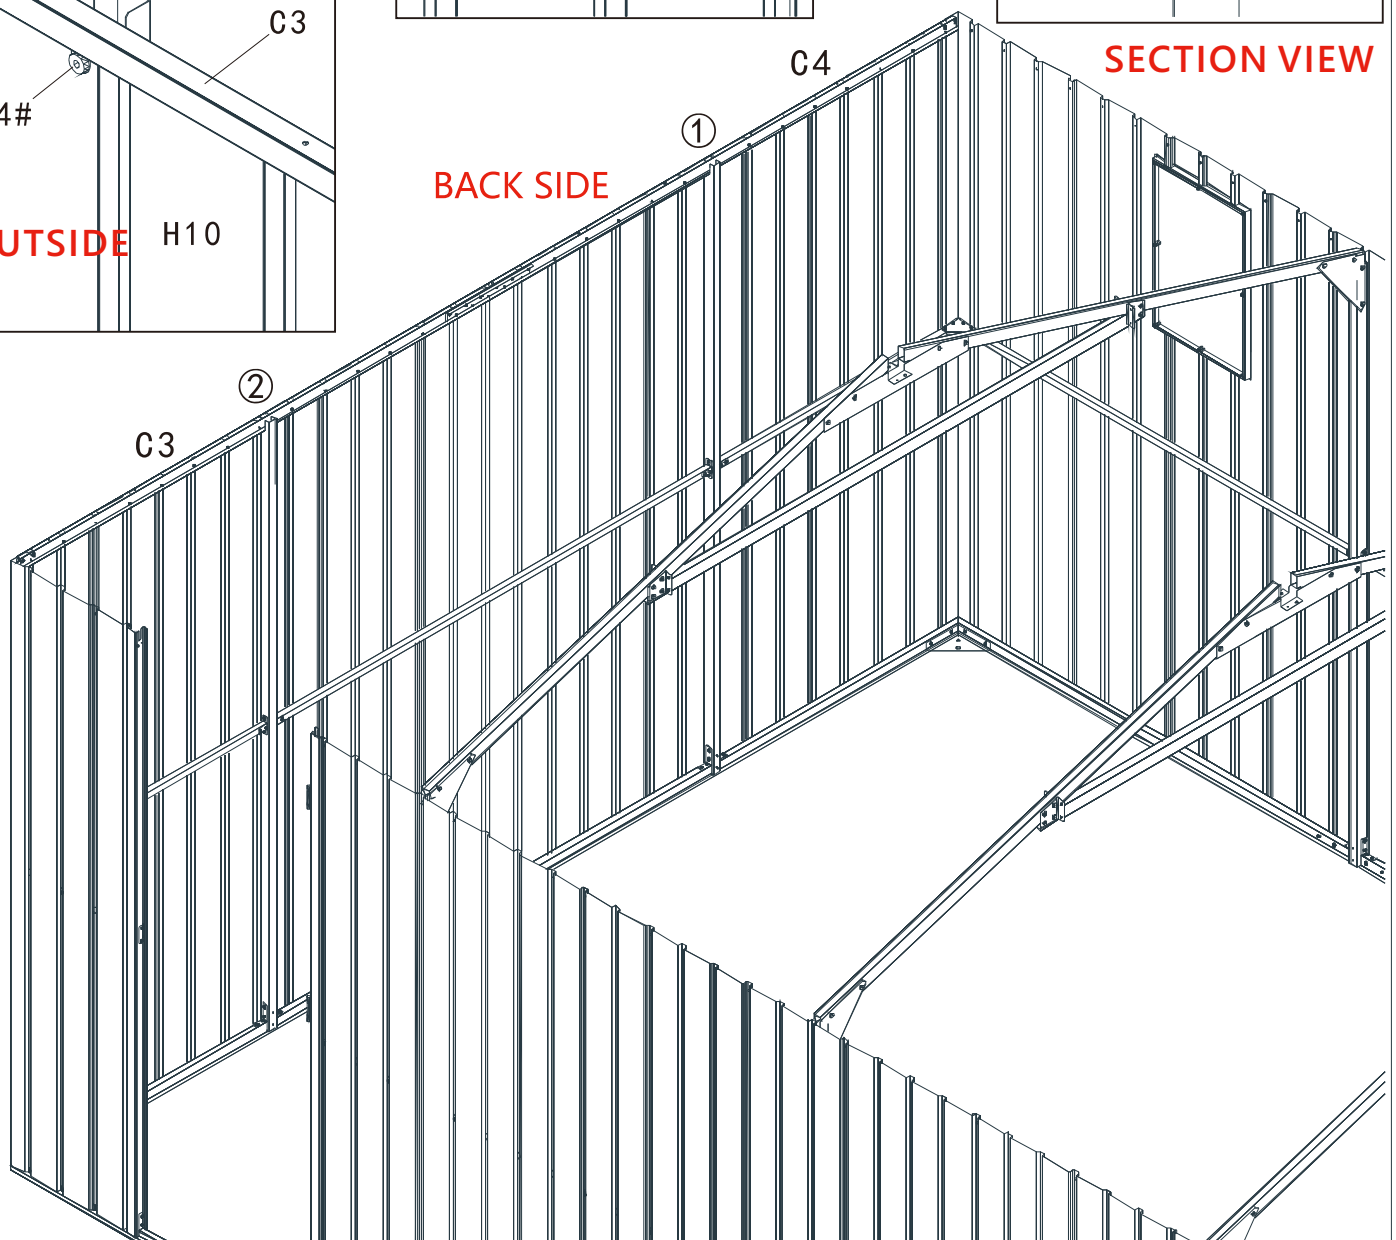


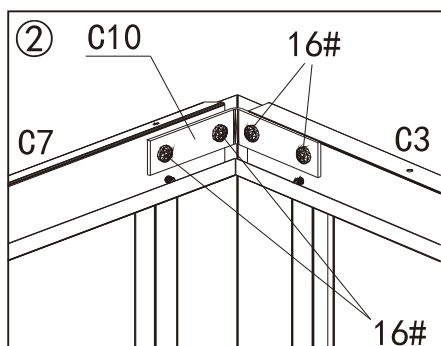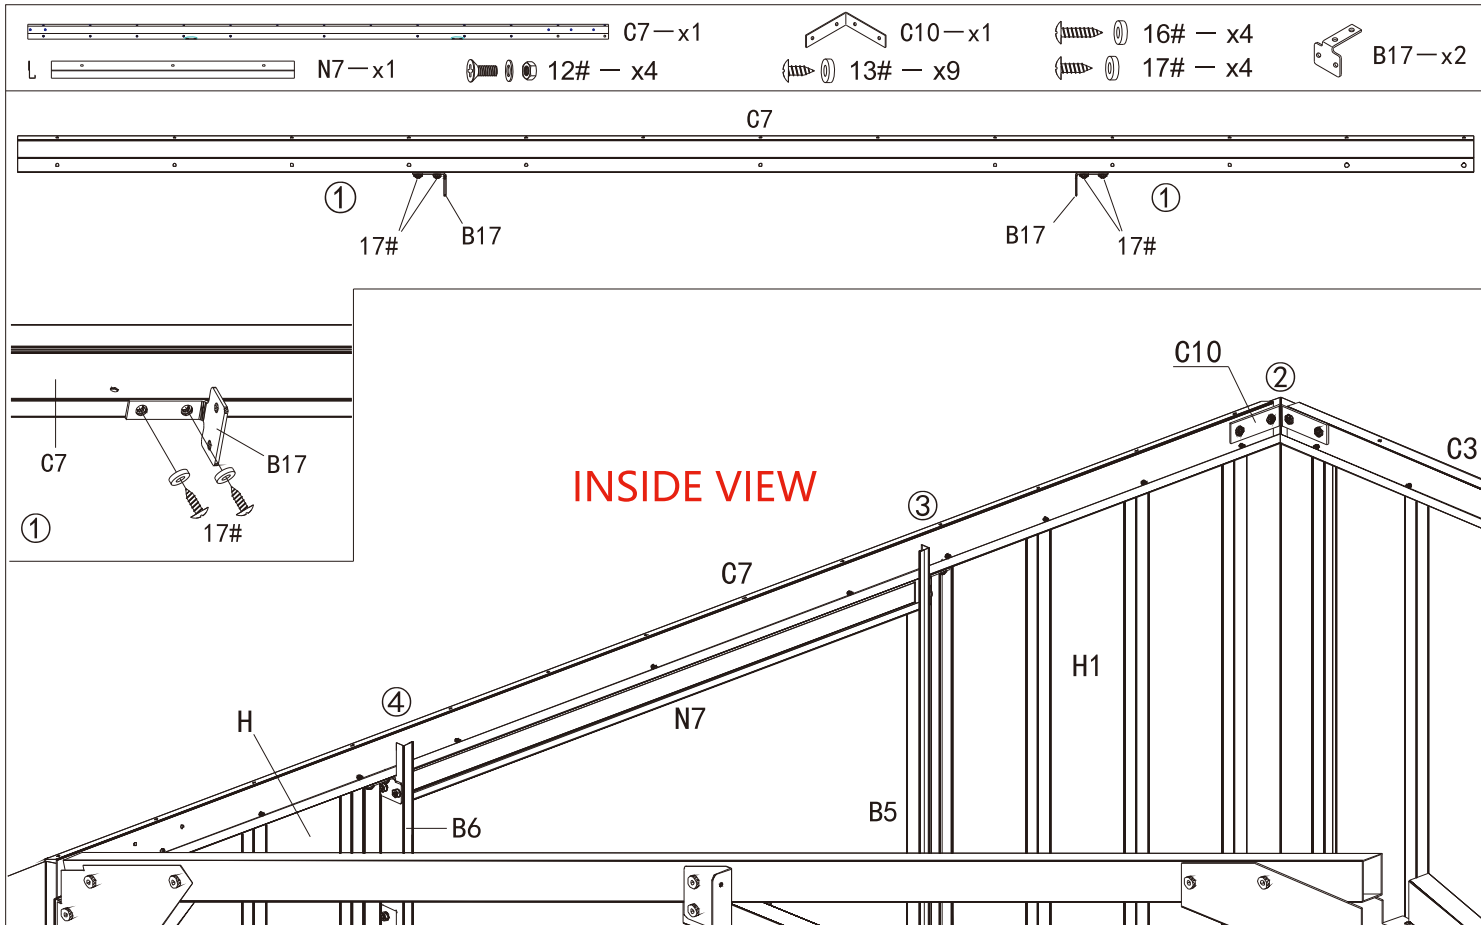


①: Use 4 screws #17 to install 2 Bracket #B17 below #C7.

②: Clip C7 into the top of H/H1. Use 4 screws #16 and Bracket #C10 to connect top frame #C7 & C3.



③/④: Use 2 bolts and nuts #12 to secure Bracket # B17 to #B5/B6.

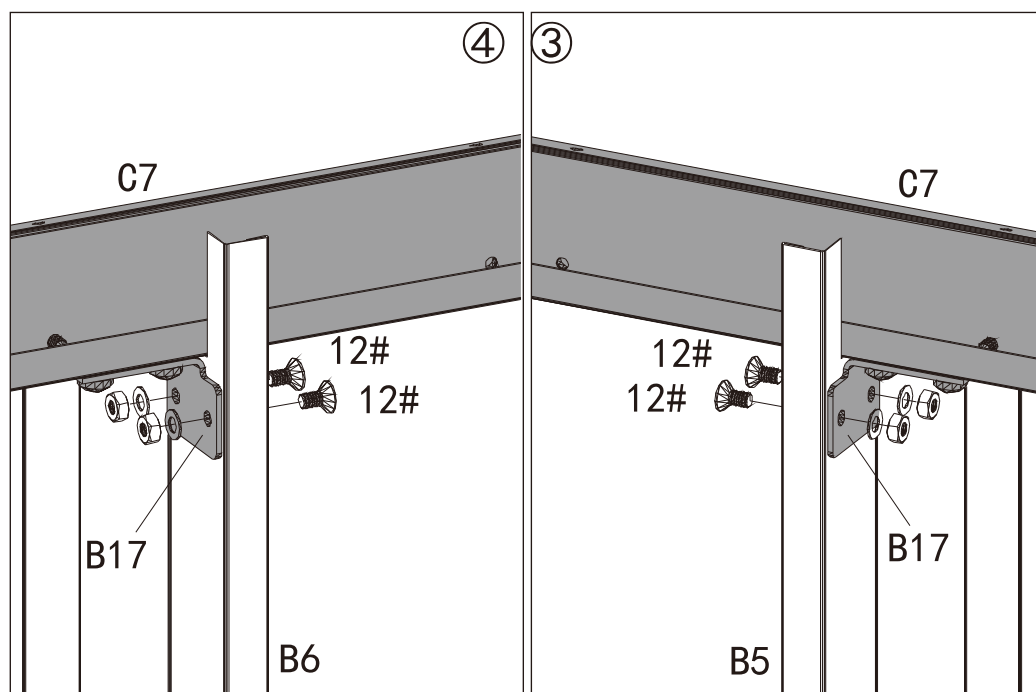

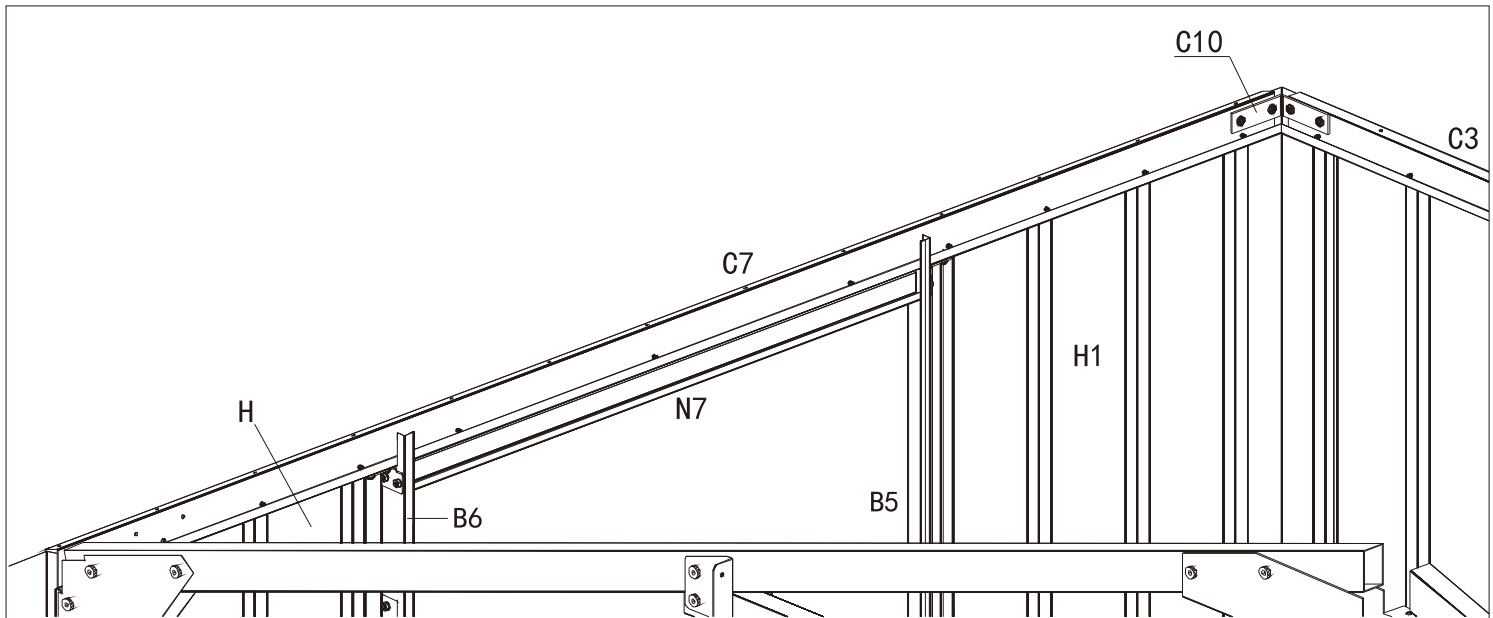

⑤: Use 6 screws #13 to secure top frame #C7 with H/H1.

⑥: Use 3 screws #13 to secure #N7 with #C7.

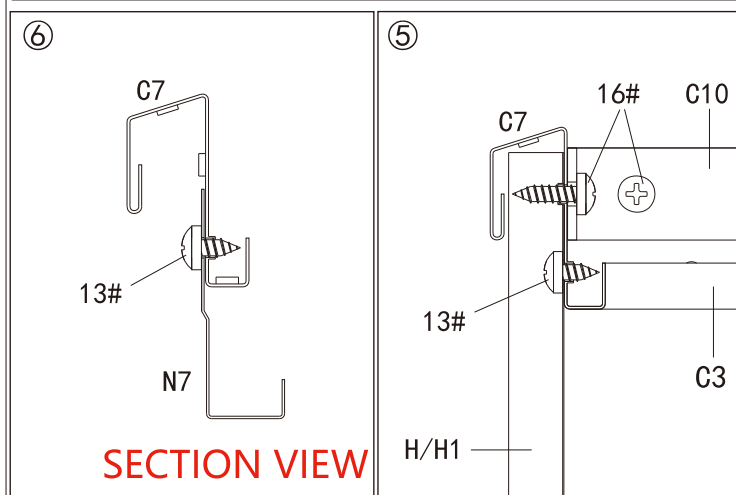
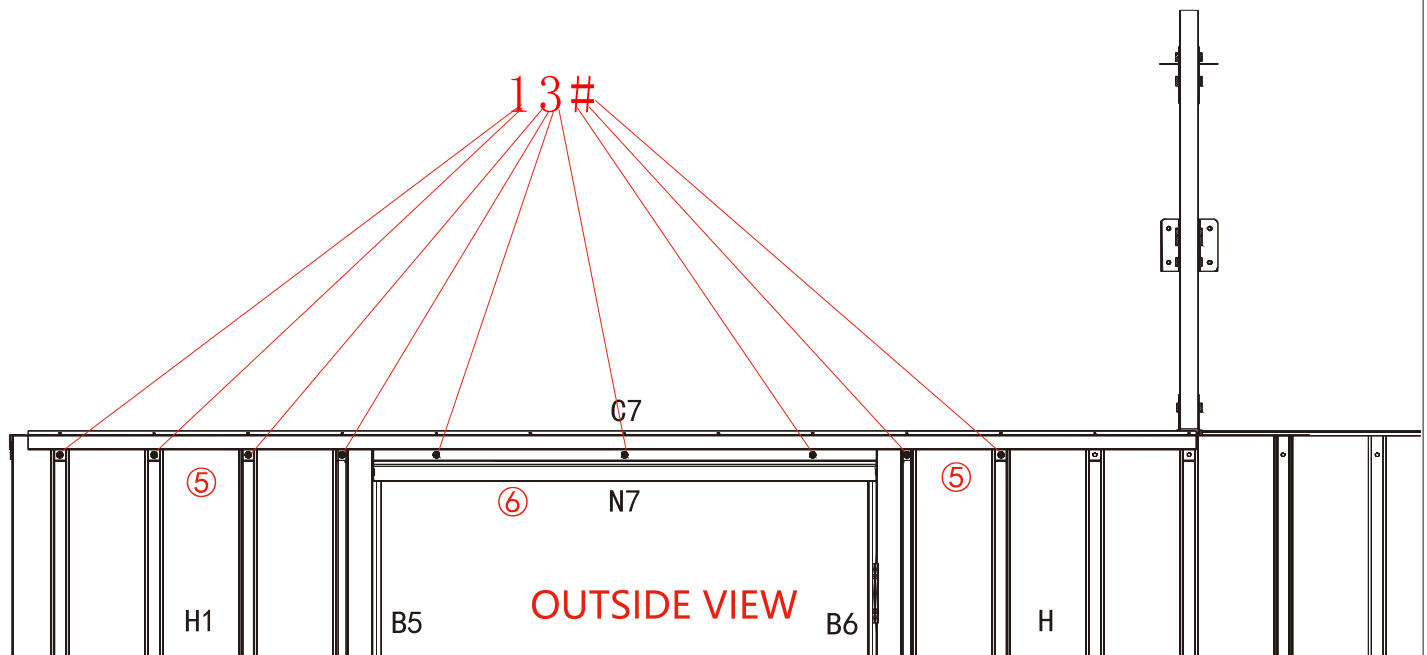


C6-x1

C10-x1


13# - x11

16# - x4

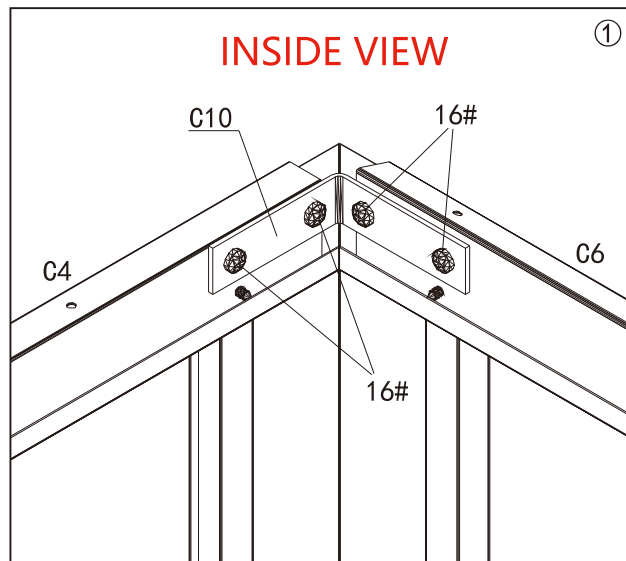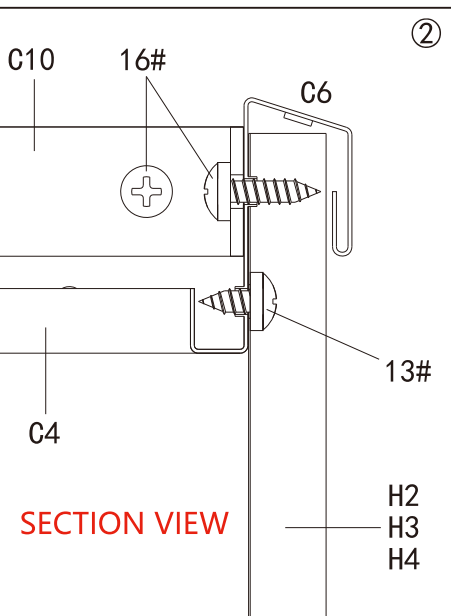

①: Place top frame #C6 on the side wall, use 4 screws #16 and Bracket #C10 to connect top frame #C4 & C6.


②: Use 11 screws #13 to secure top frame #C6 with side panel #H2,H3 & H4.

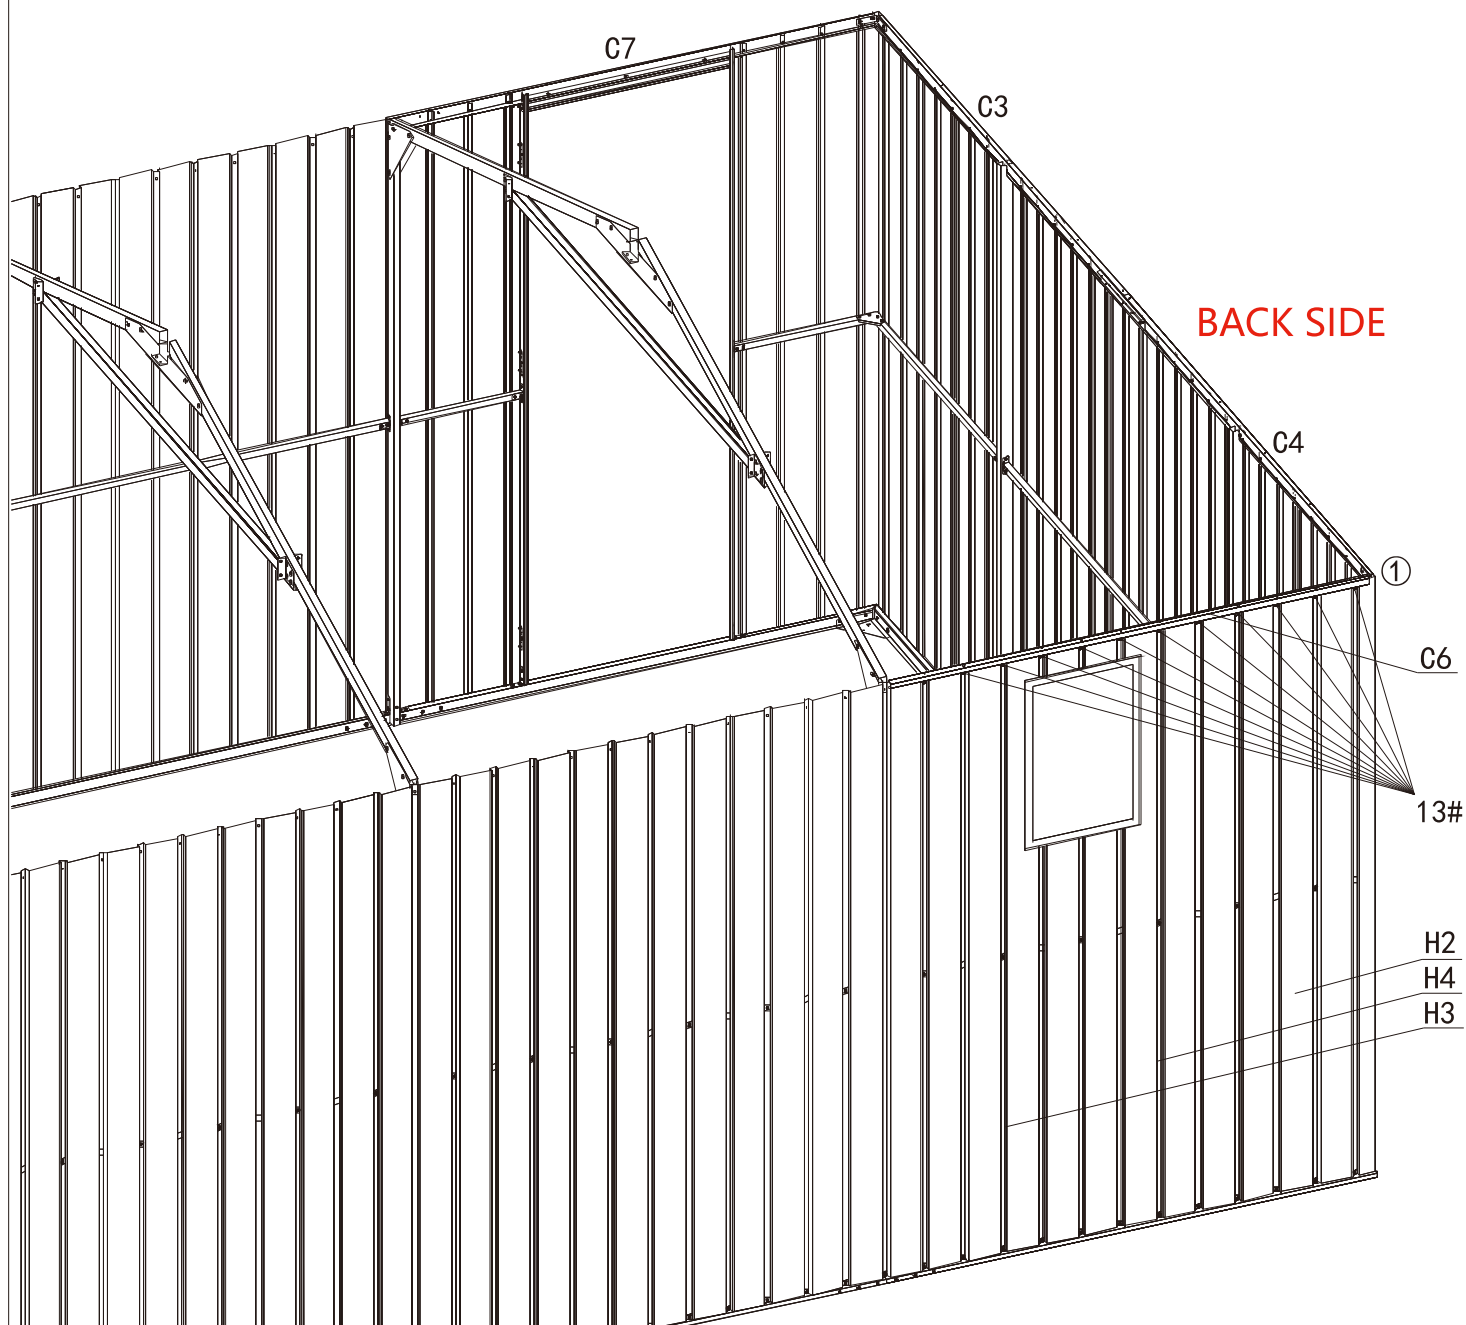




C5-x1

C6-x1






C10-x2



R-x2

13# - x22


16# - x8

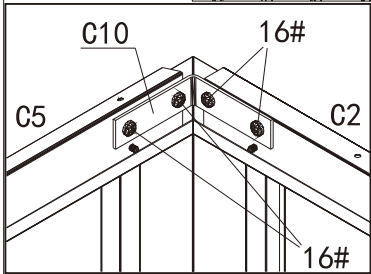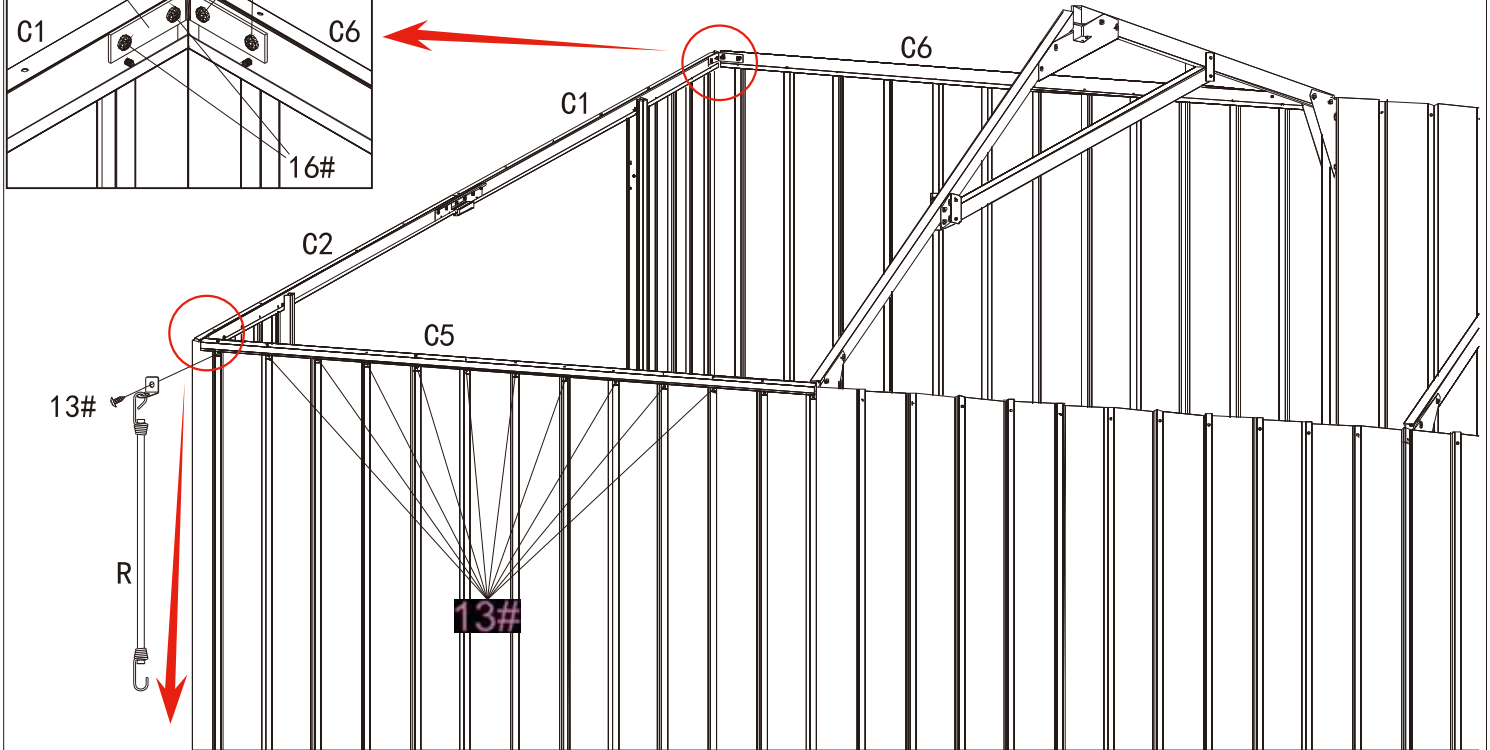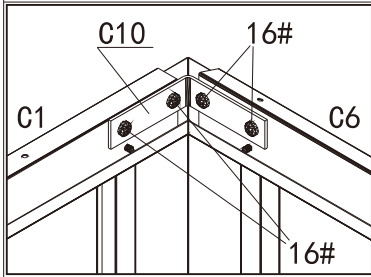


Place top frame #C5 on the side wall, use 4 screws #16 and Bracket #C10 to connect top frame #C2 & C5. Use 10 screws #13 to secure top frame #C5 with side panel.


Repeat above procedures to connect top frame #C1 & C6.

Use screws #13 to install Windbreak rope hook #R to each side wall as shown.

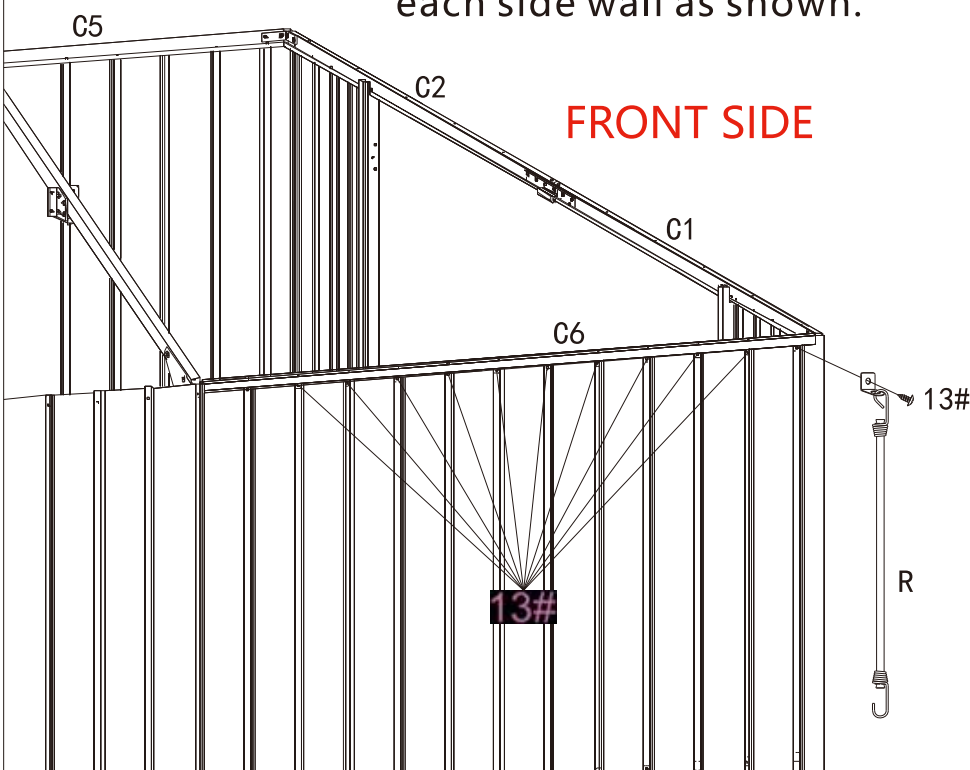

FRONT SIDE

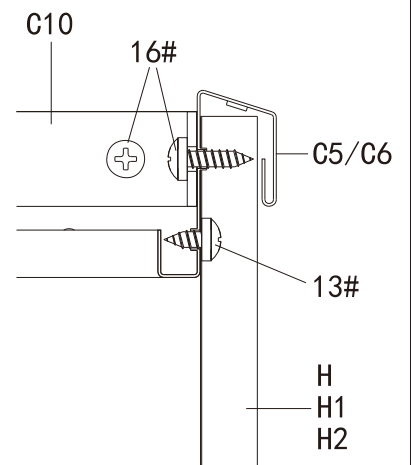


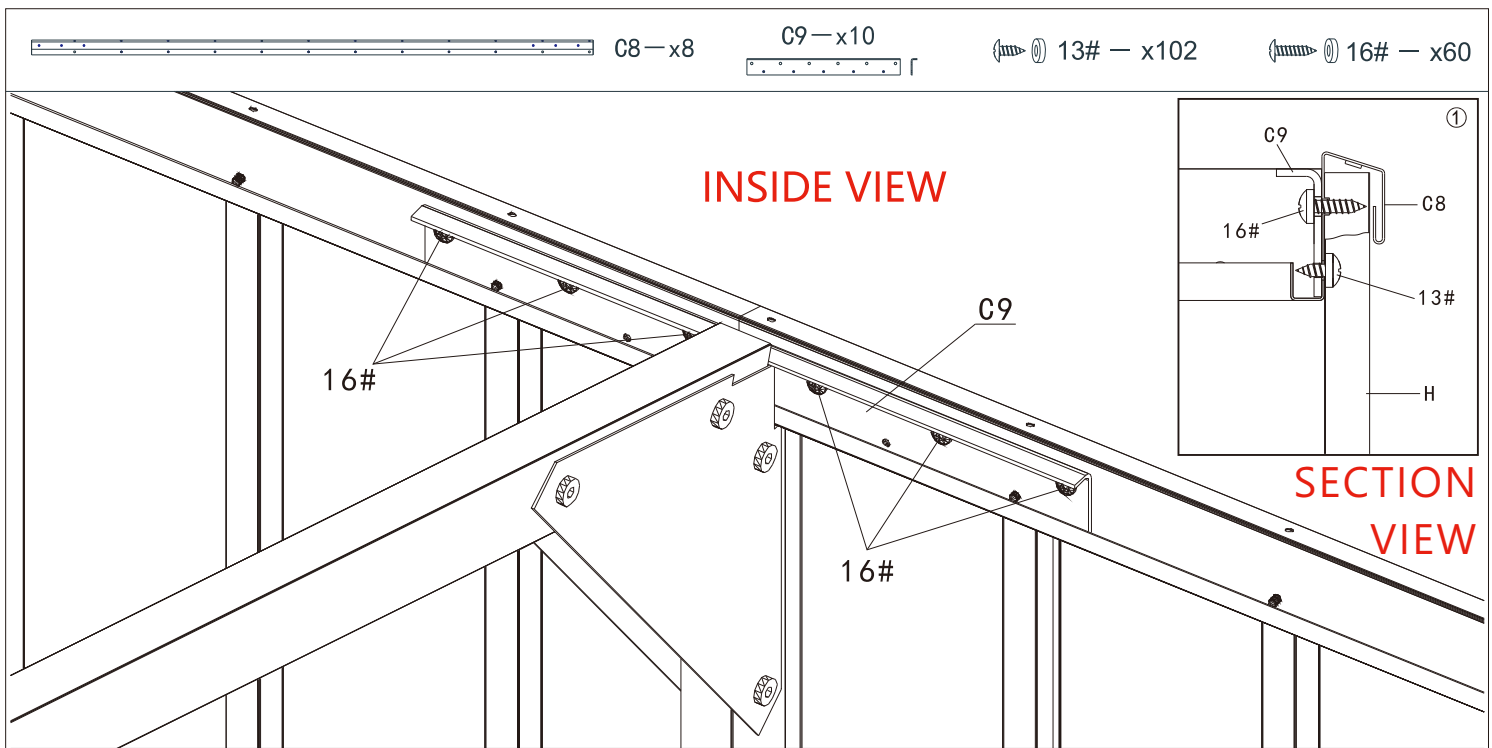

①: Install top frame #C8 and #C9 as shown. Align the holes, and use 6 screws #16 to secure top frame C8 & #C9 with the side wall (from inside to outside).


Repeat the above procedure to assemble the other 9 sides.

BACK SIDE

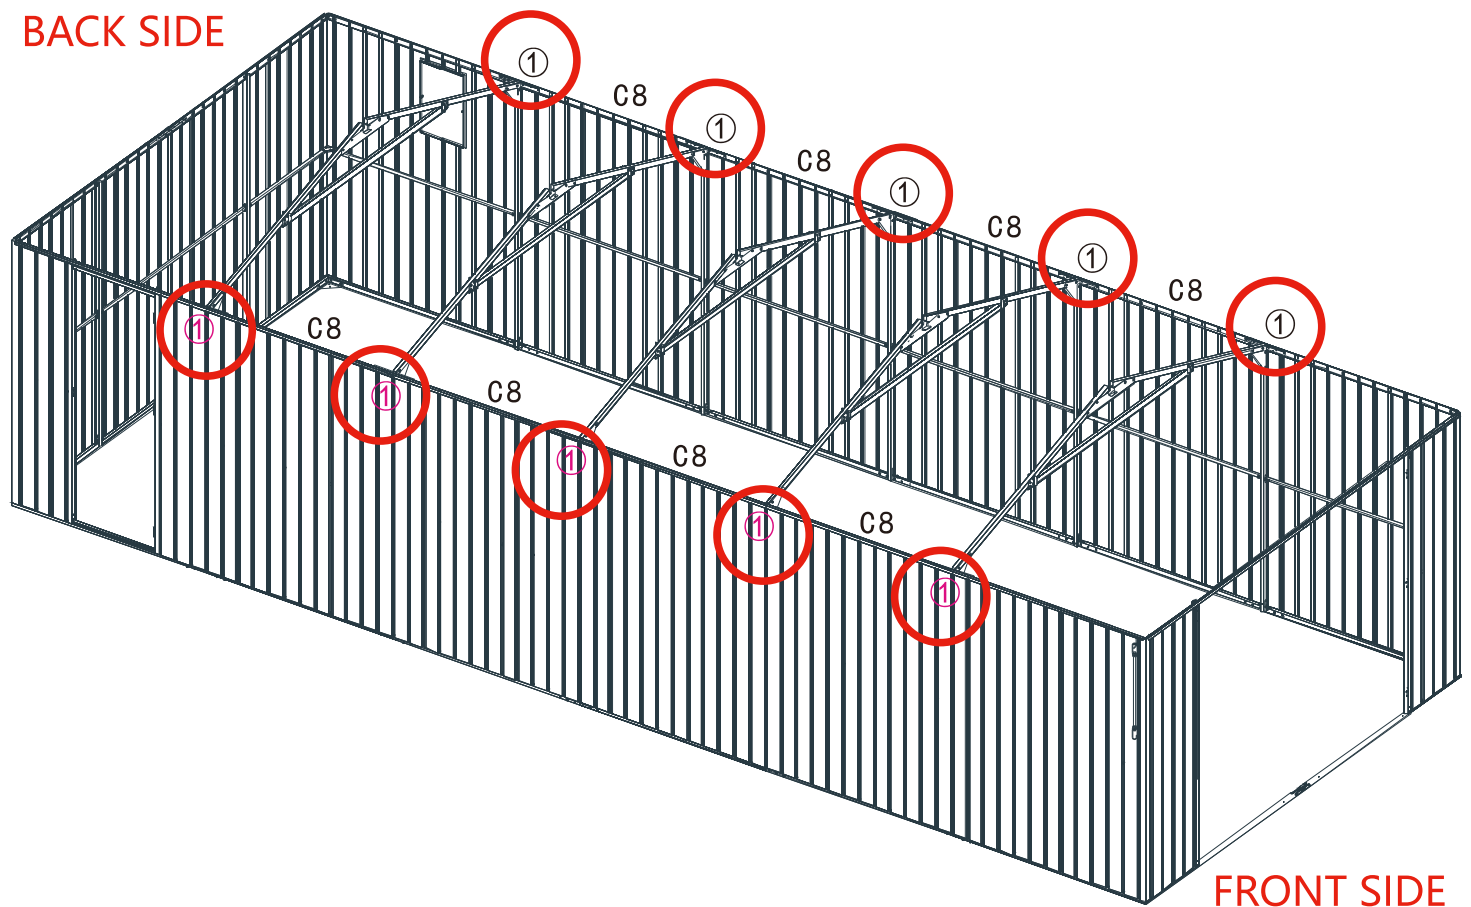



Use 51 screws #13 to secure top frame #C8 to side wall (from outside to inside).

Repeat the above procedure to assemble another side.

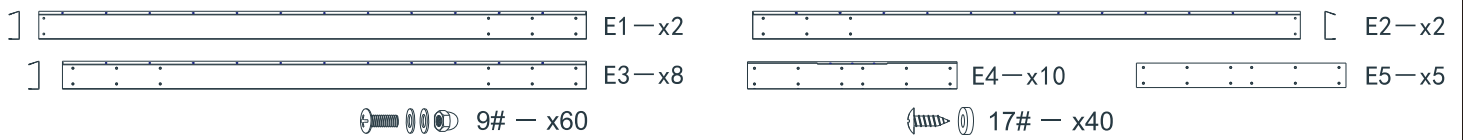


Centre Beam Assembly:



Use the connectors #E4 & E5 to connect E1/E3/E3/E2 as shown in the box. Secure each connection with 12 screws #9, gaskets and nuts.

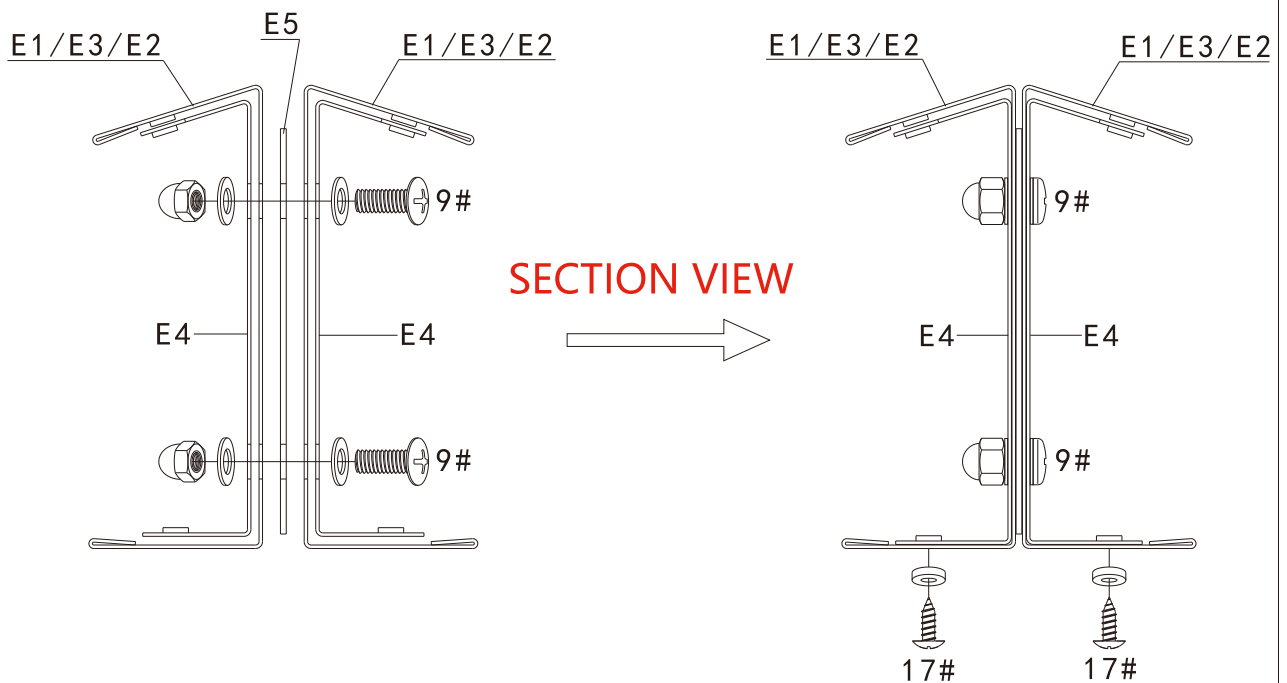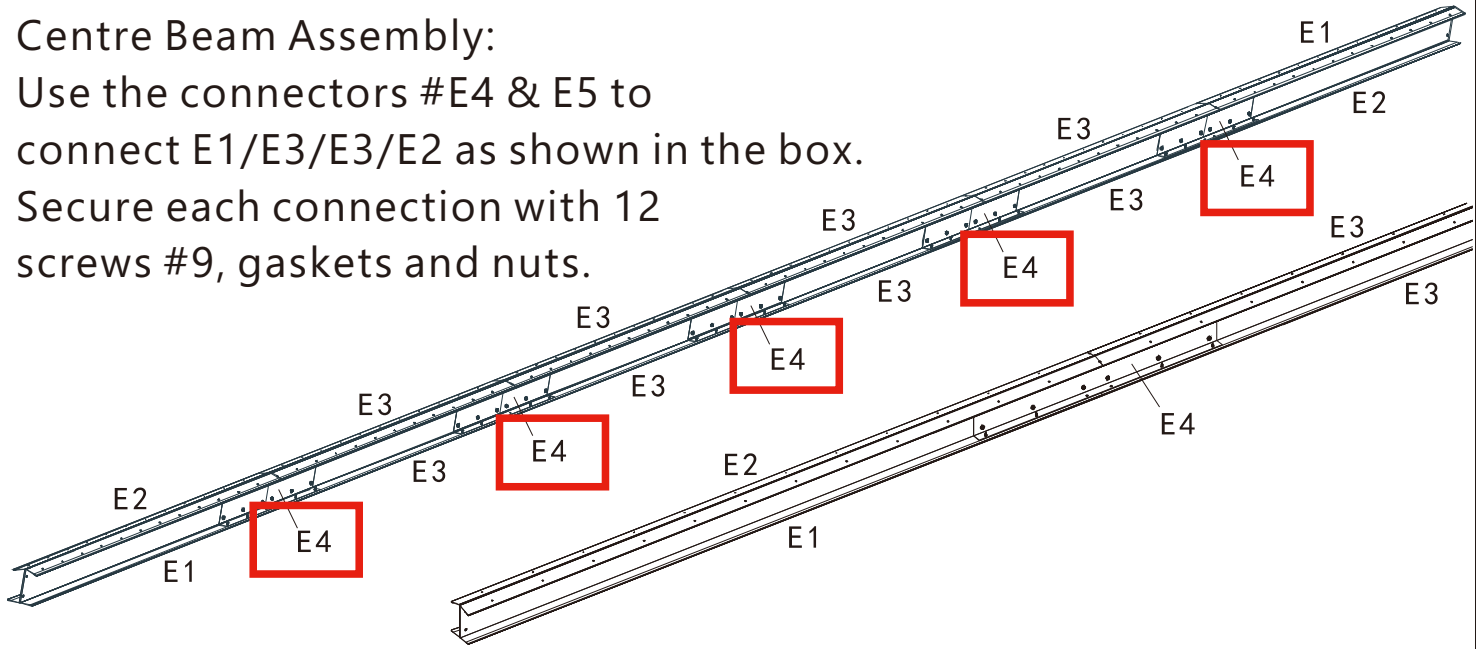


SCREW MOUNTING LOCATIONS FOR EACH JOINT

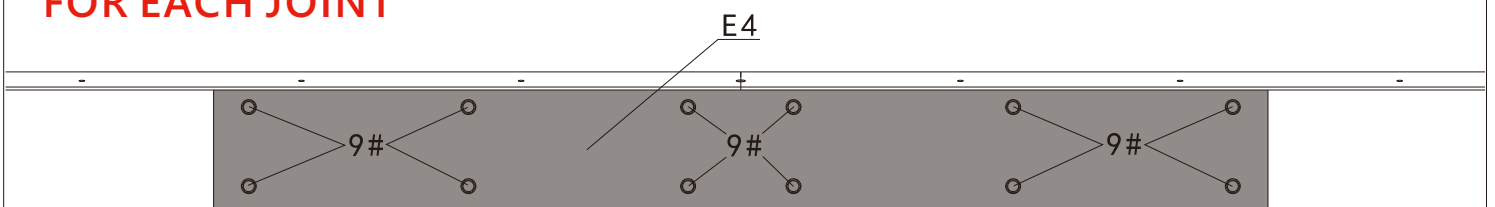

Use 8 screws #17 to secure each connection (from bottom to top).

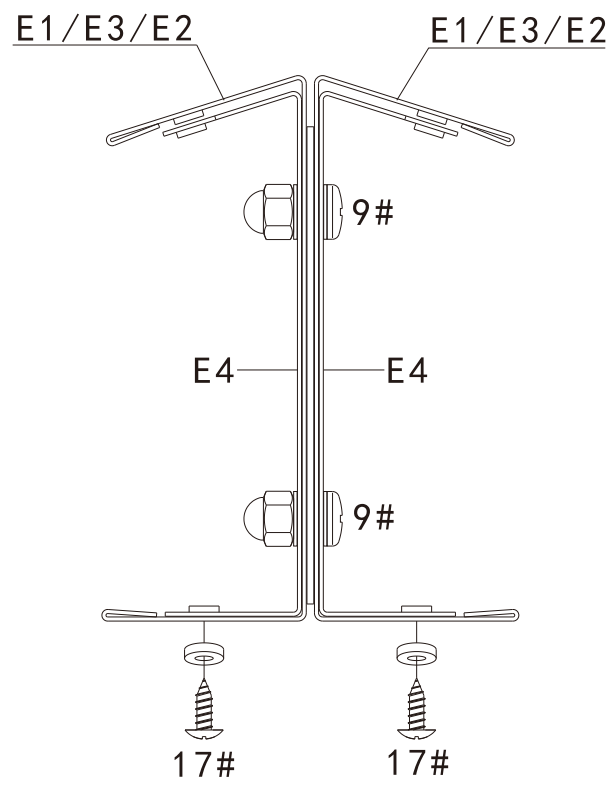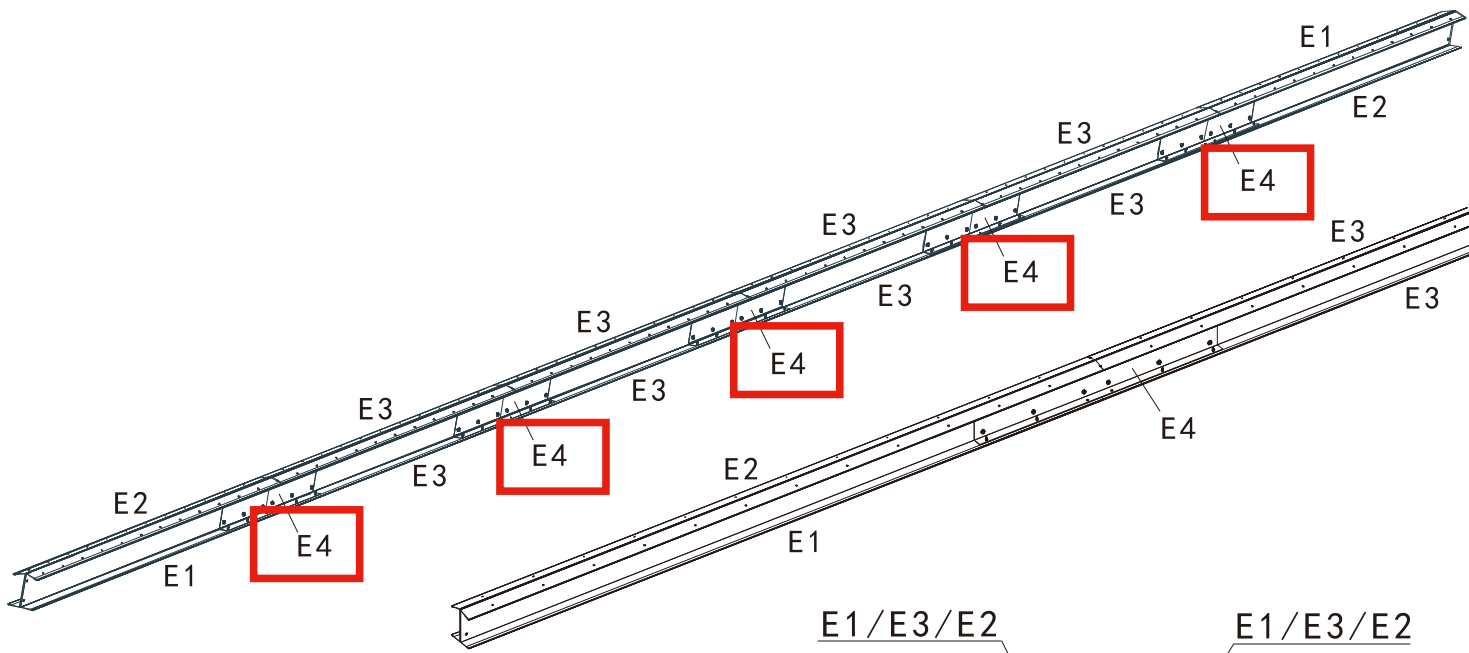


**SCREW MOUNTING LOCATIONS
FOR EACH JOINT**

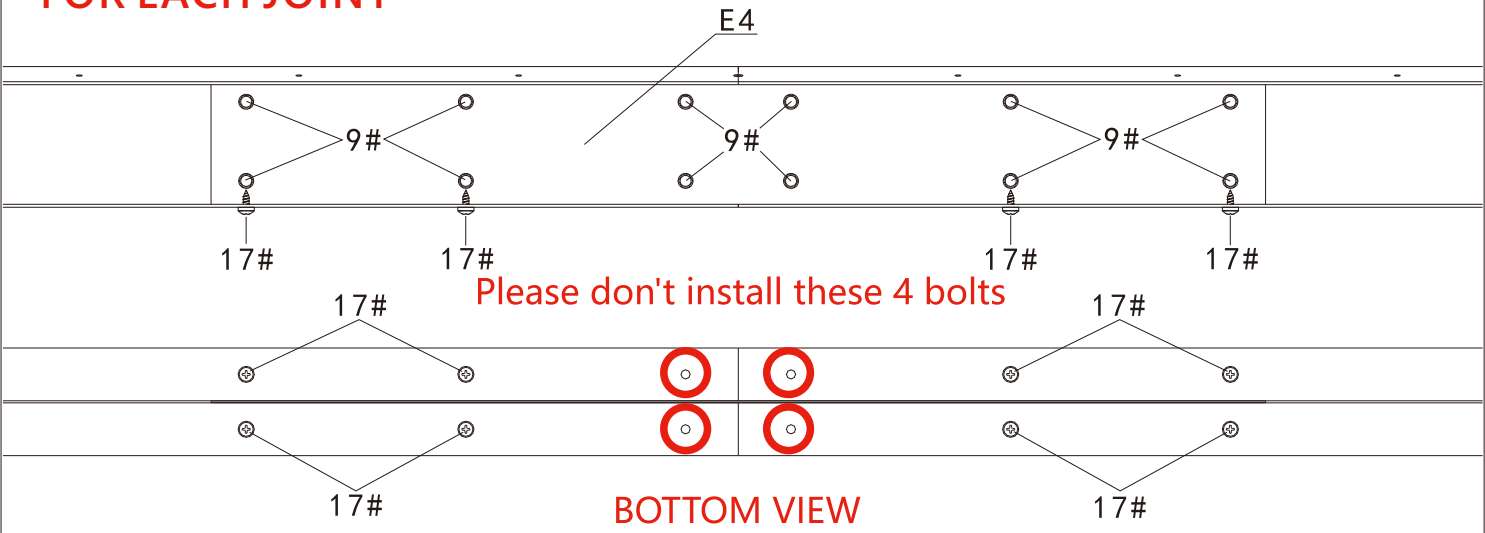

Install the Centre Beam


 17# — x20

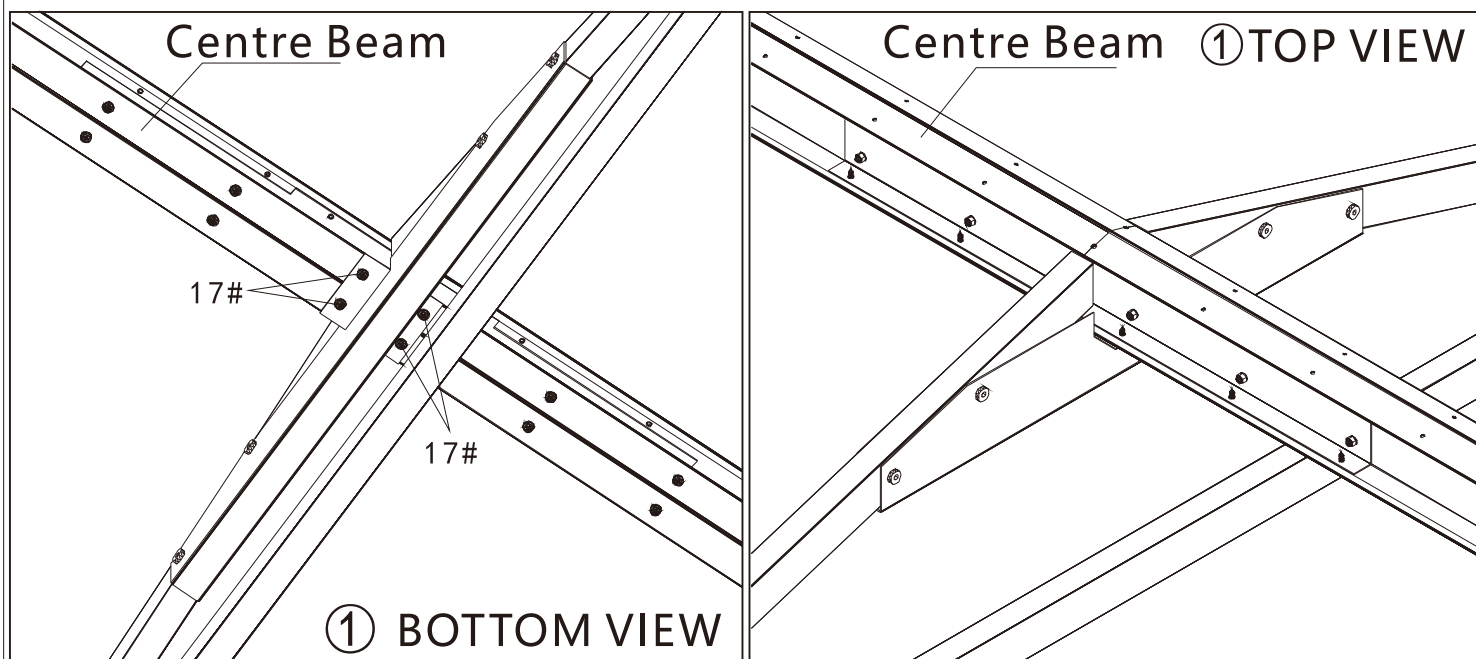


①: Install the centre beam, securing it with 4 screws #17 (from bottom to top).





Repeat the above procedure to assemble the other 4 groups.

Top Beam Assembly





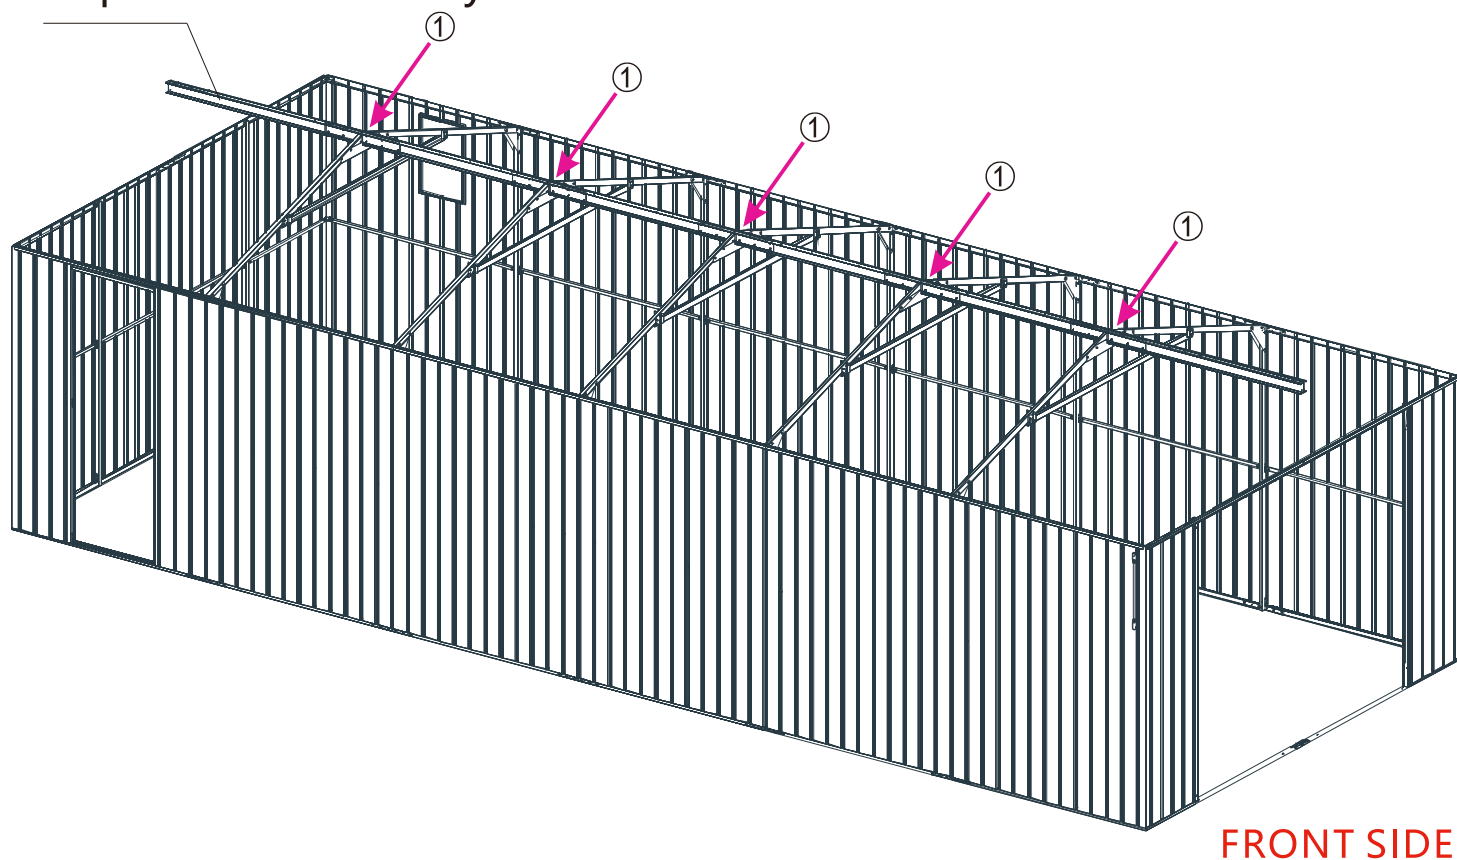


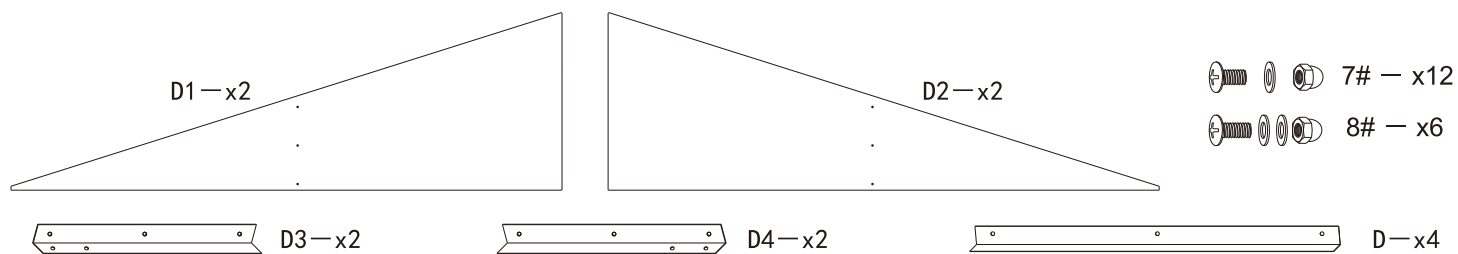

Note the orientation of D3 and D4 during installation.

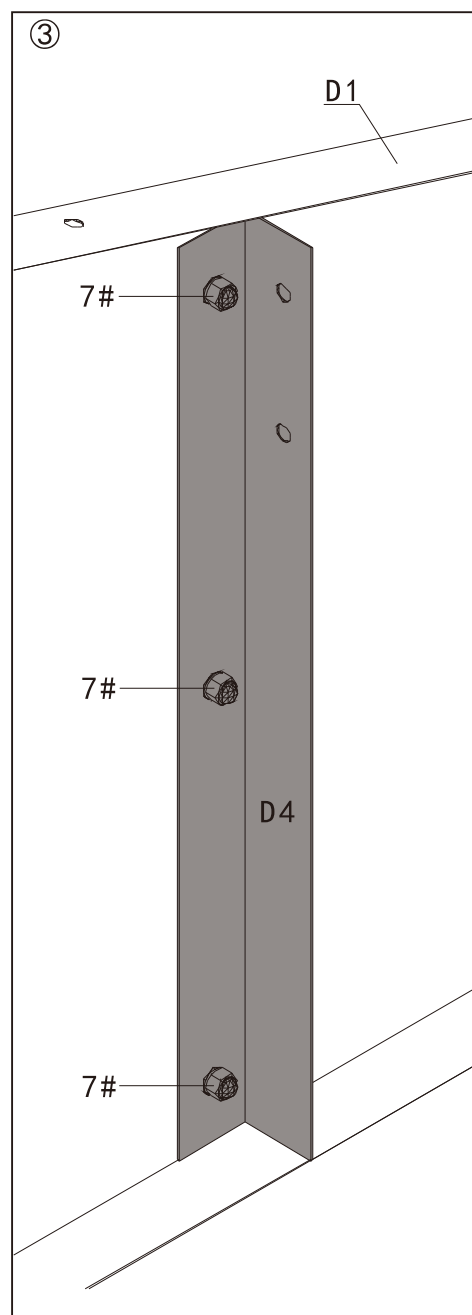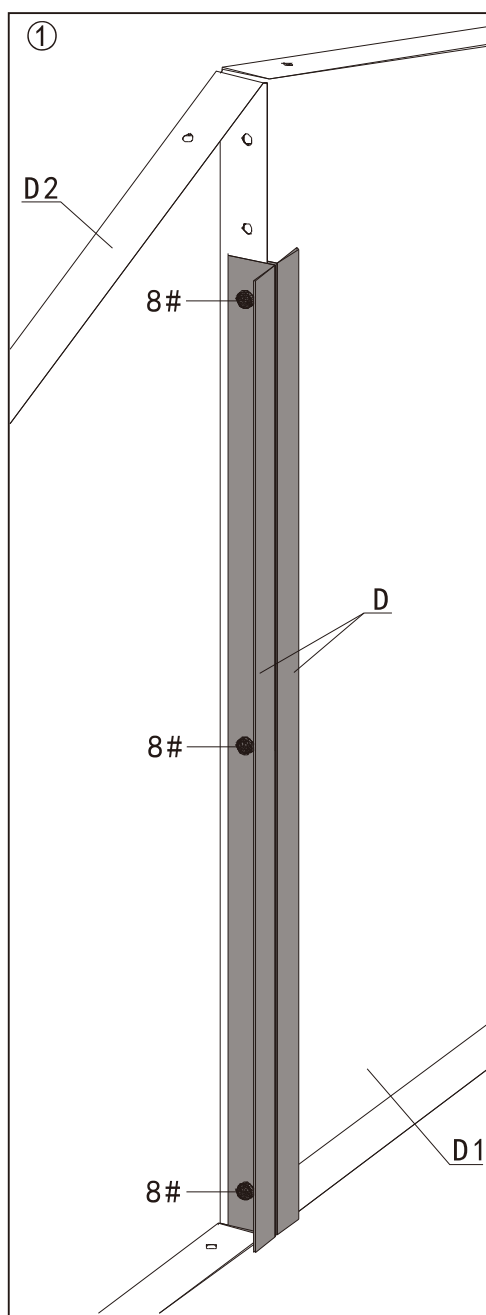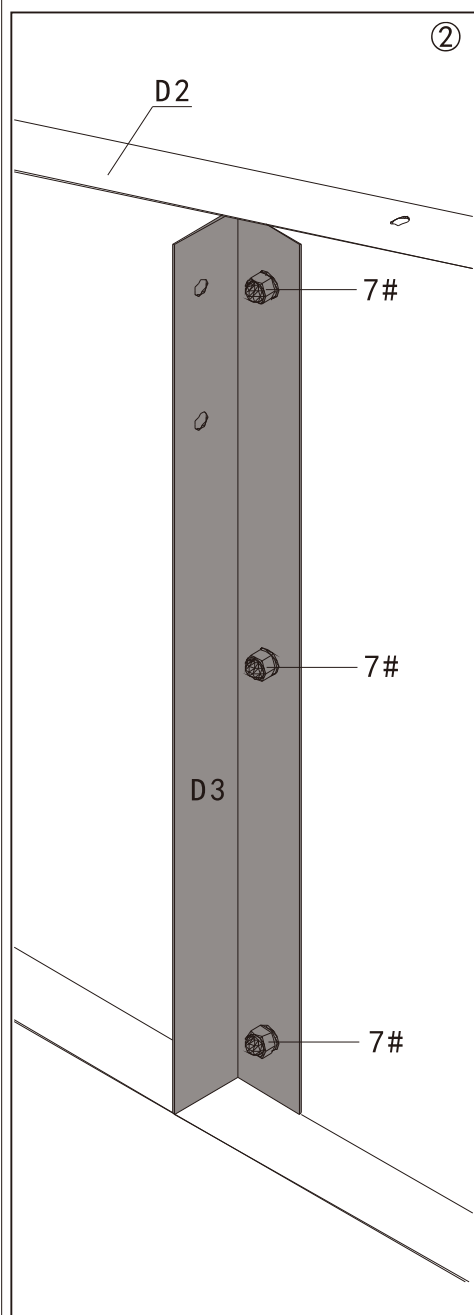
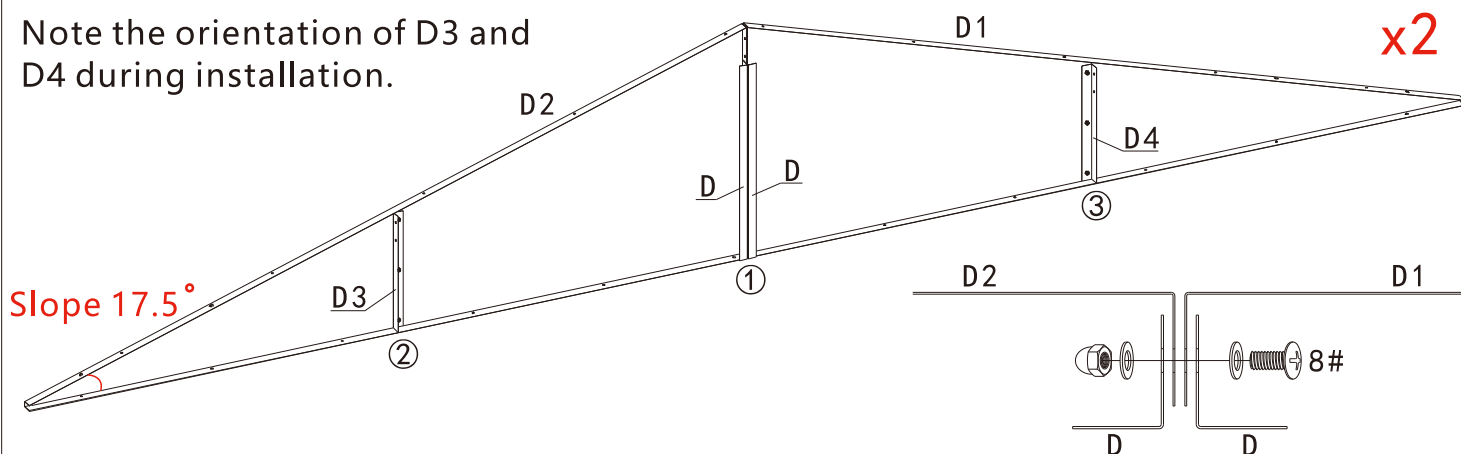


-  8# — x4
 13# — x24

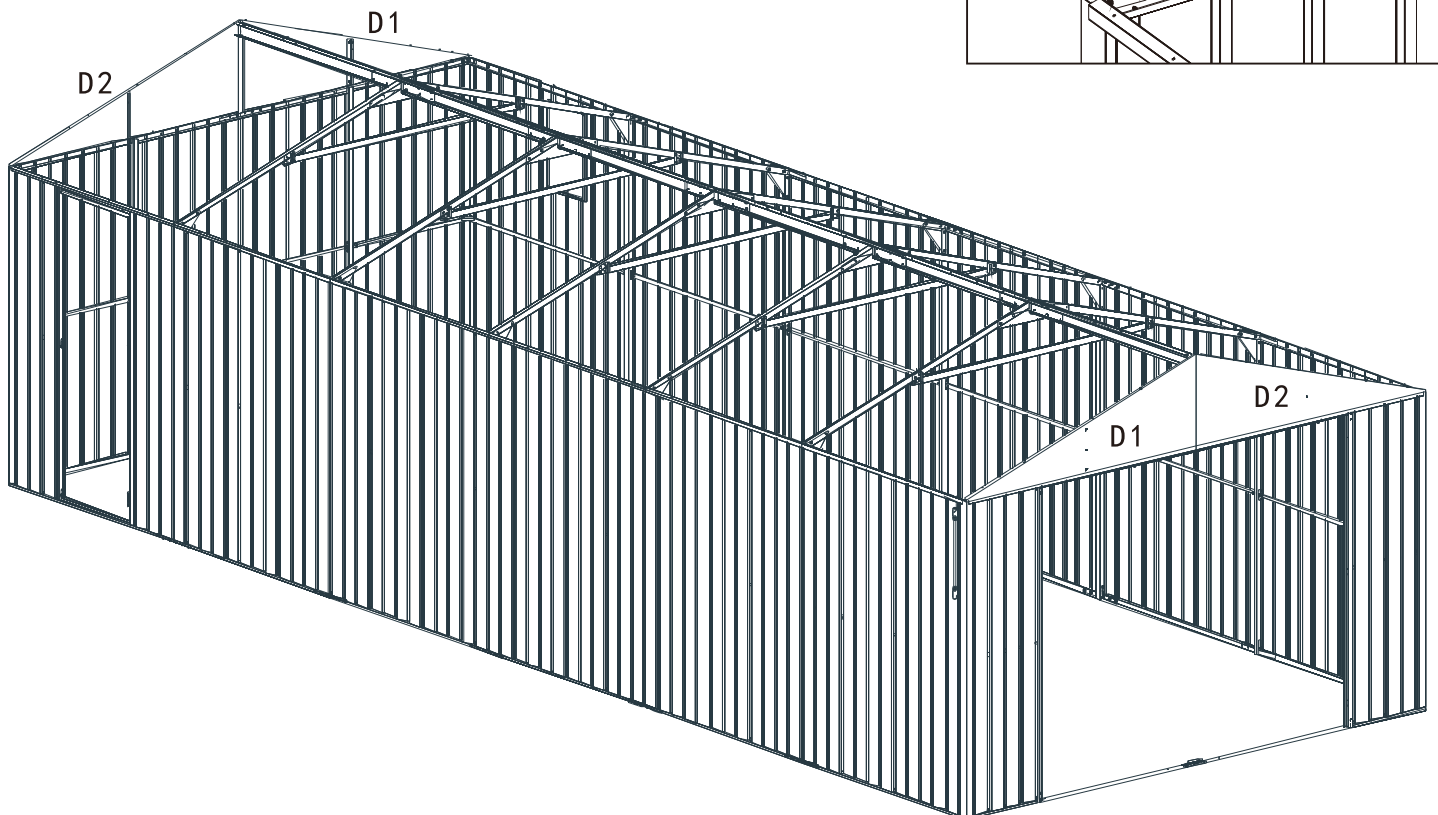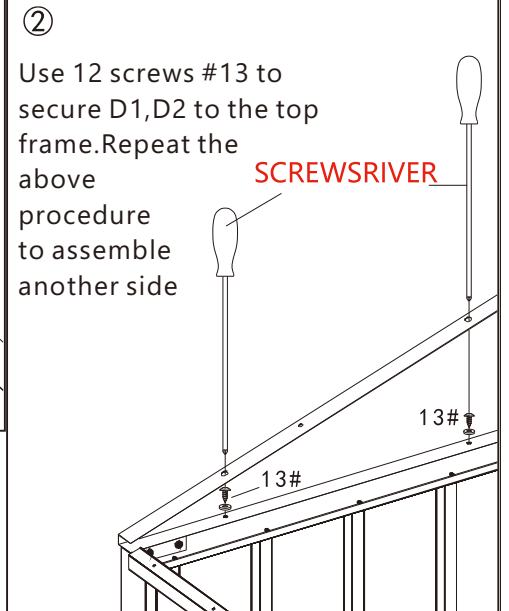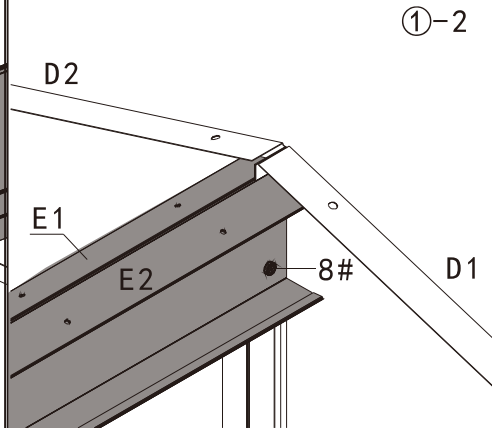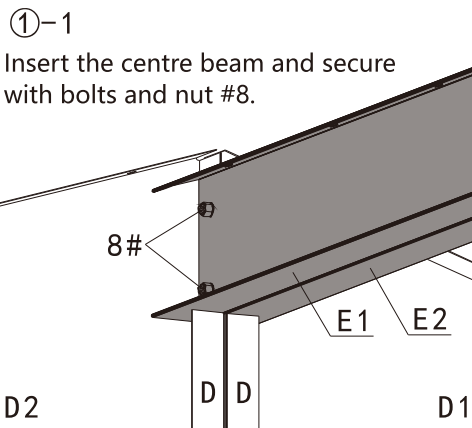
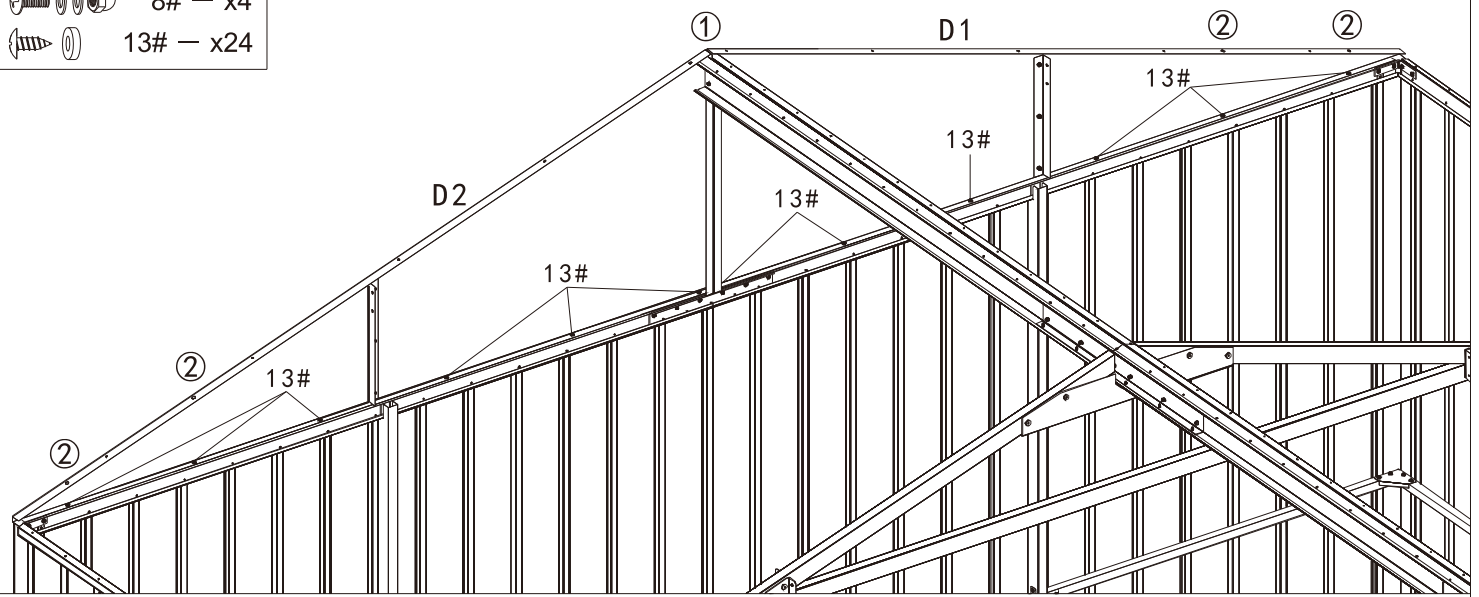


1  F1—x2  F2—x2
 1  F3—x8  7# — x8  17# — x40



Make sure the notch faces outward


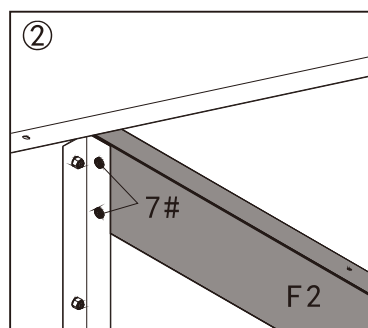
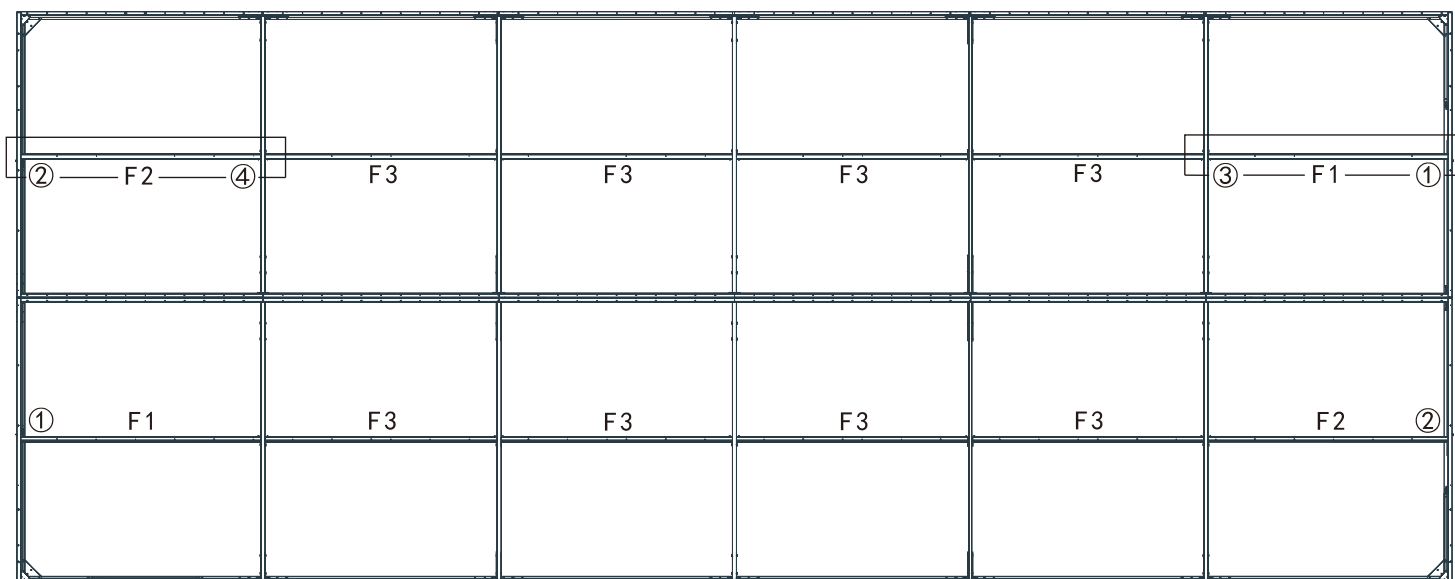


Side Beam Assembly

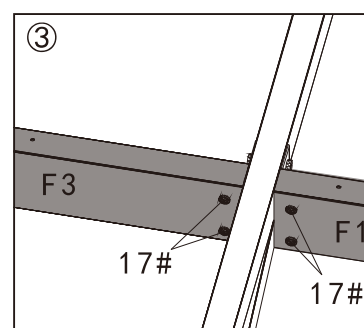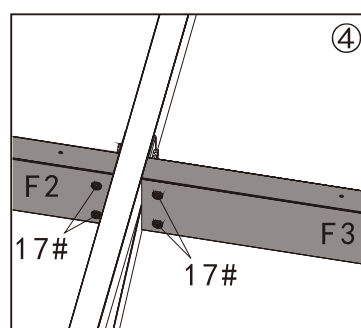


Note the installation direction of #F1/F2/F3(see the next page)

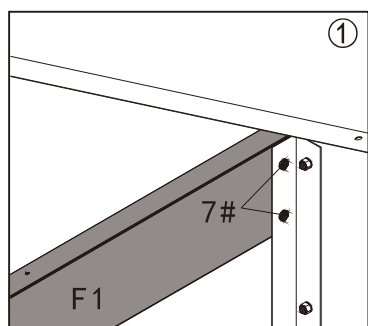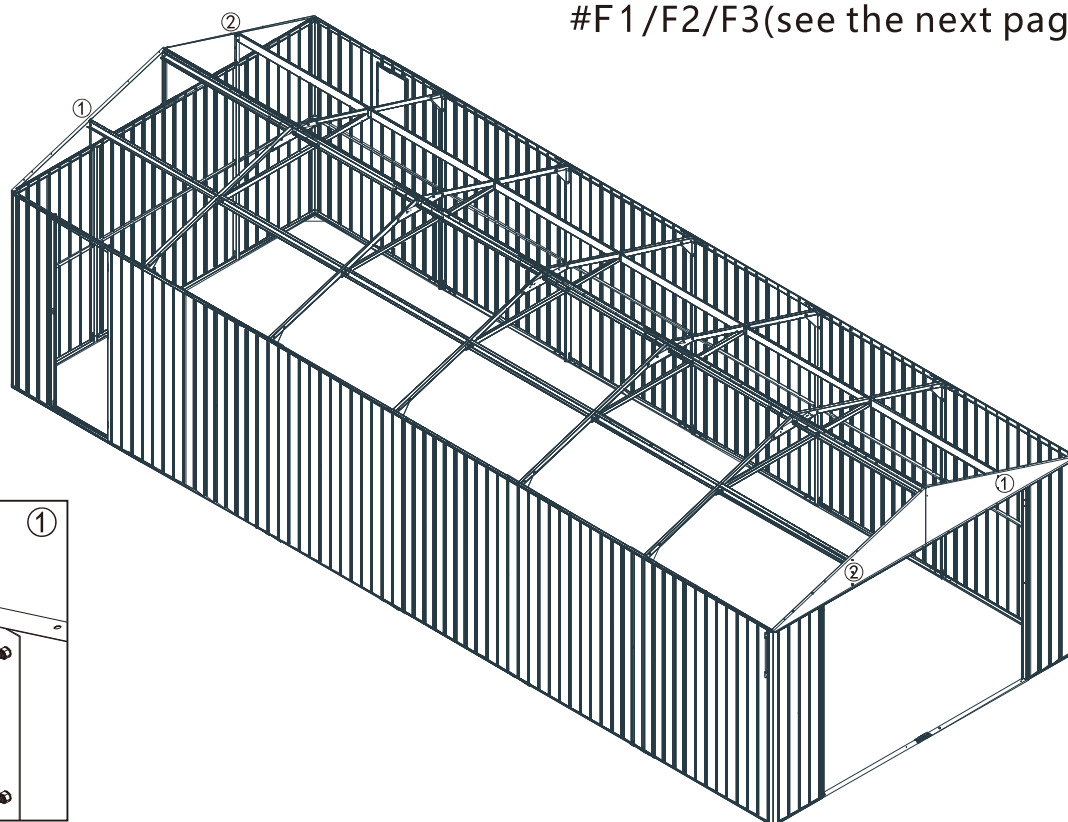

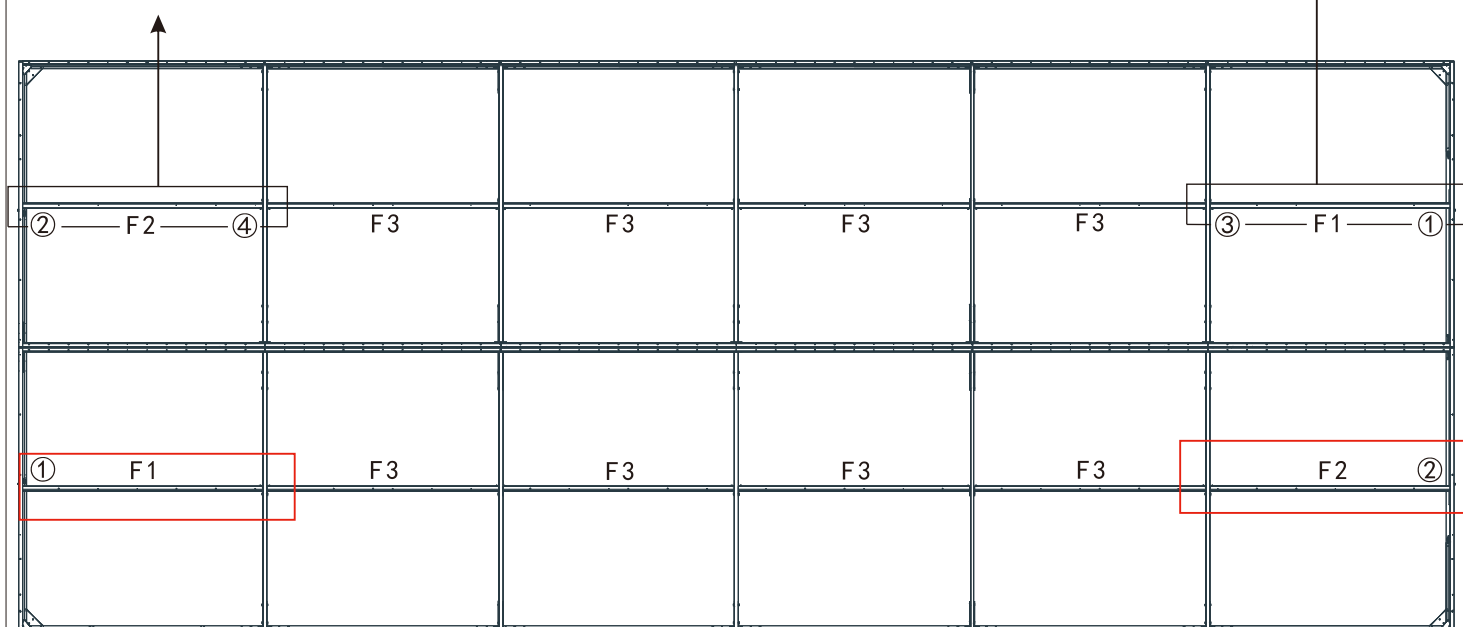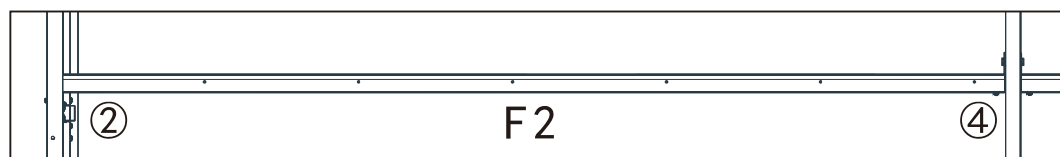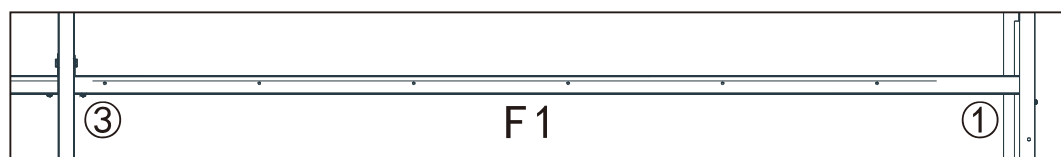




Note the installation direction of #F2/F1.

Adjust the Base Frame

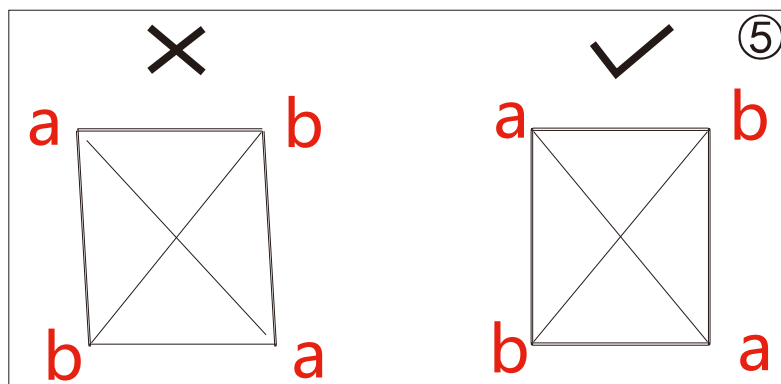


Before installing the ground fixing bolts, adjust the angle of the base and the wall to a rectangle: diagonal a-a=b-b.


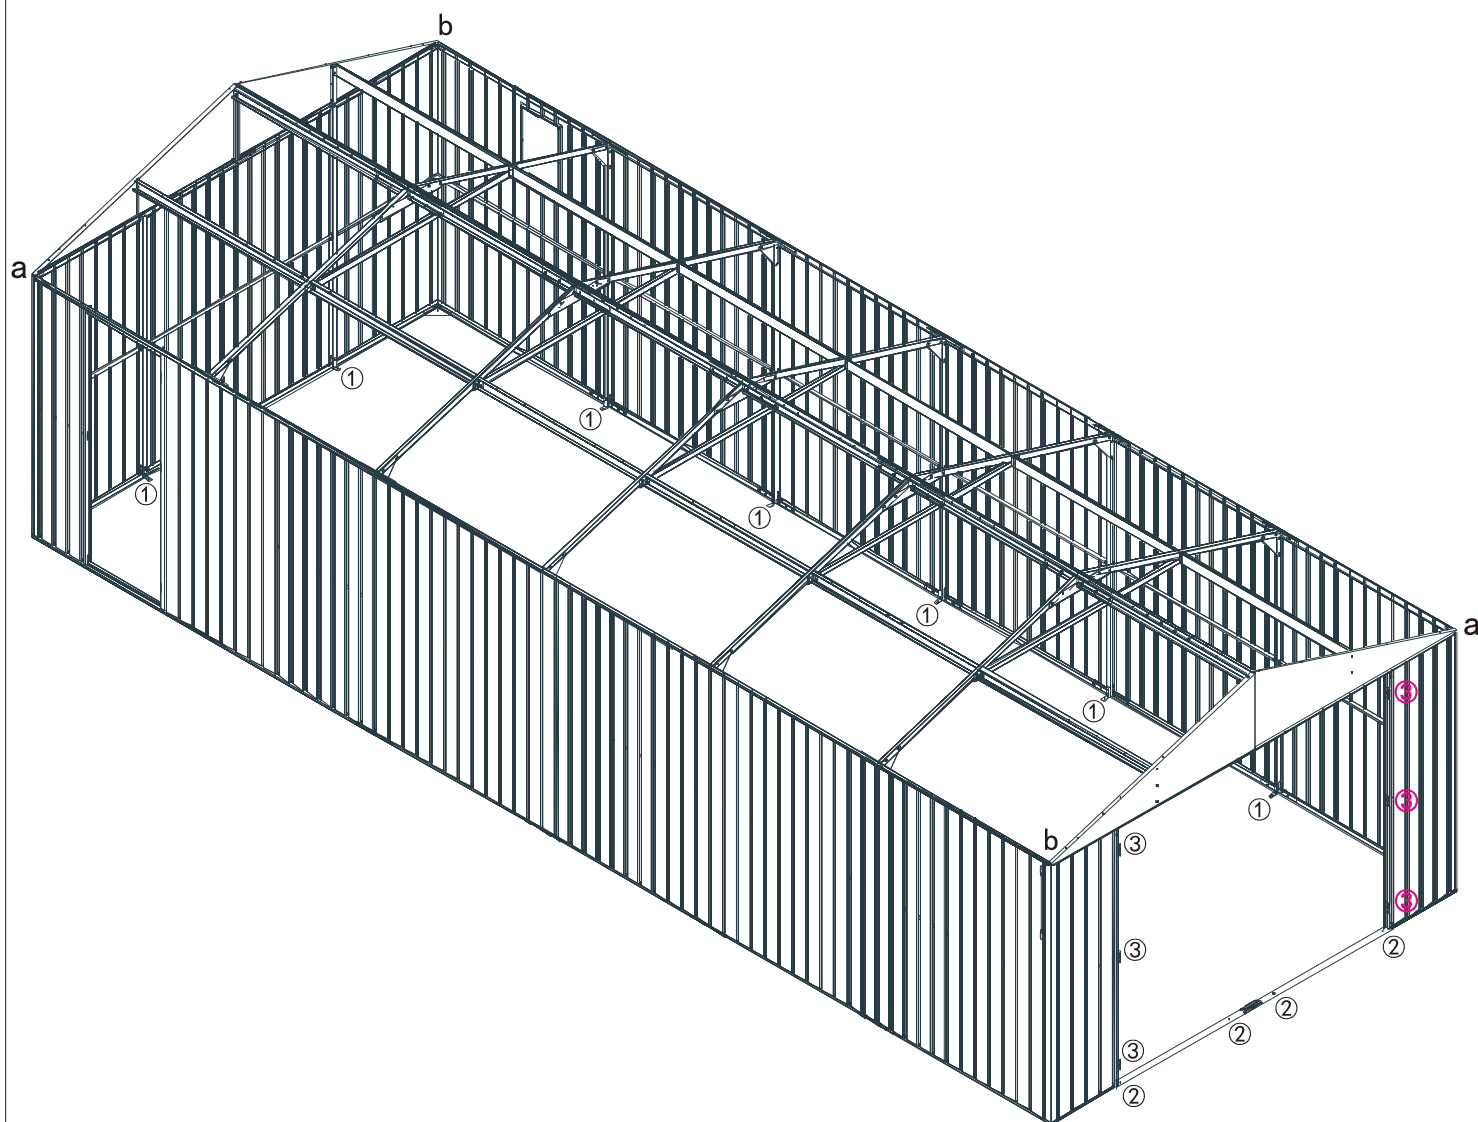


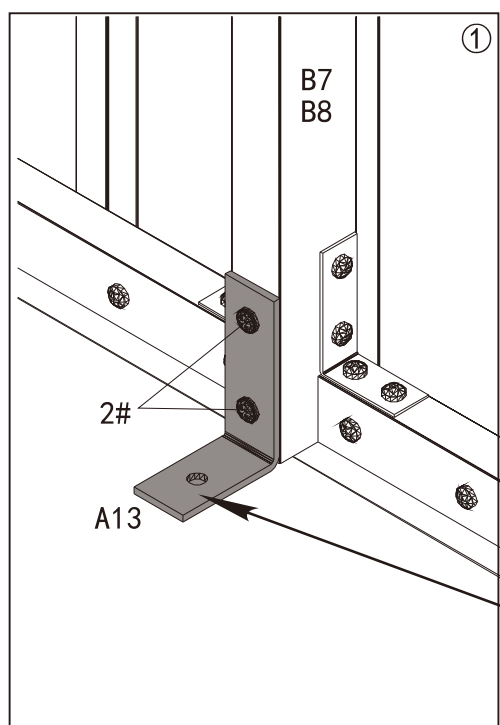
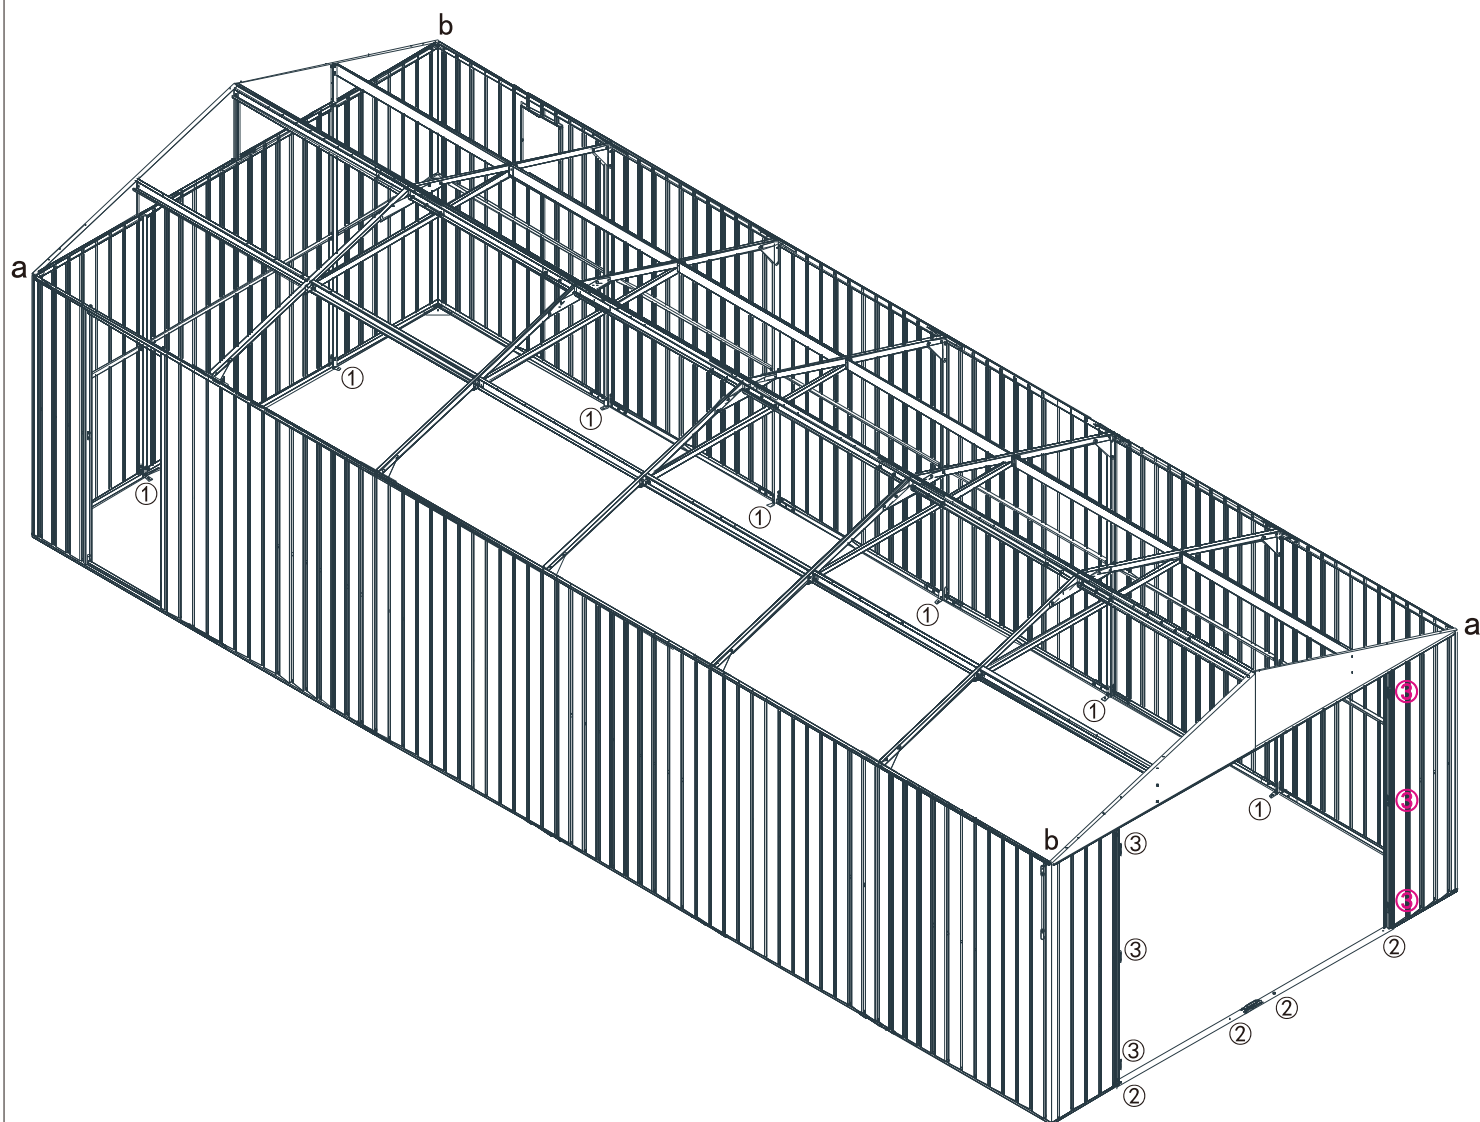


①: You need to prepare expansion bolts by yourself to secure the base frame to the ground.

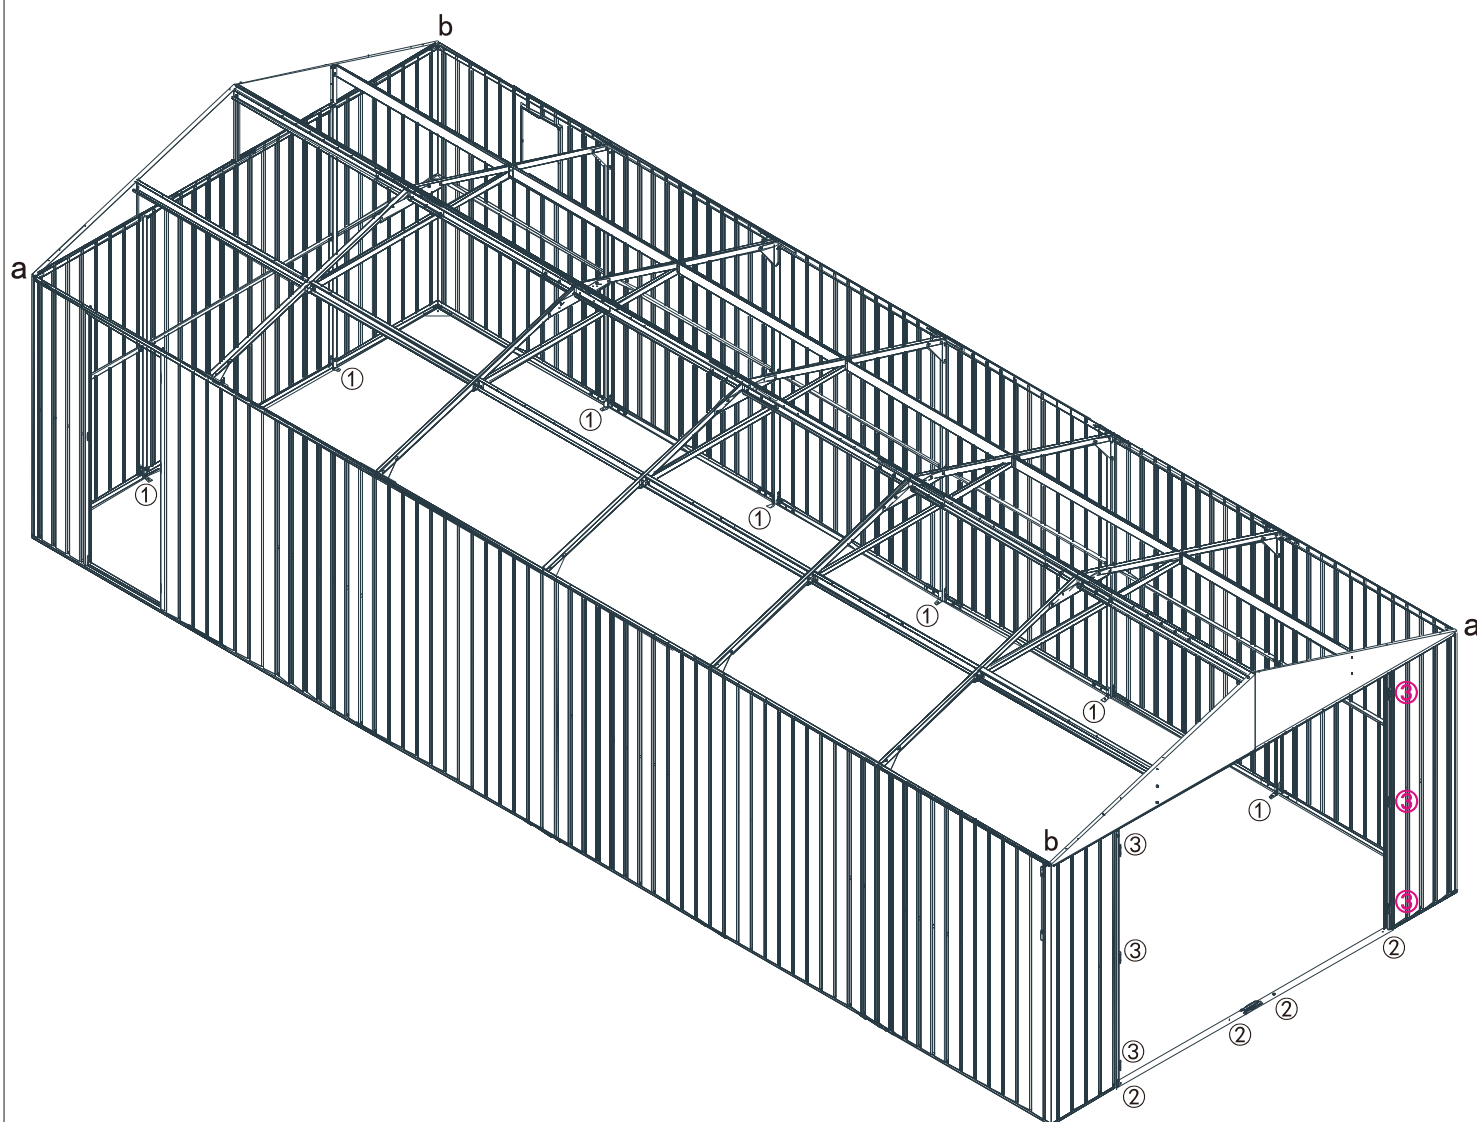



②: Before installing the drywall anchor, it is necessary to punch holes in the ground. Use 4 Screws #5 to secure #A9 to the ground.
 ③: Install the Front Door hinges.

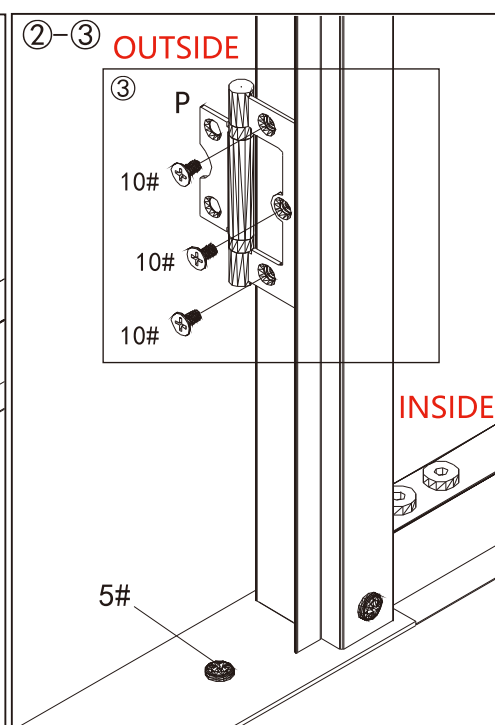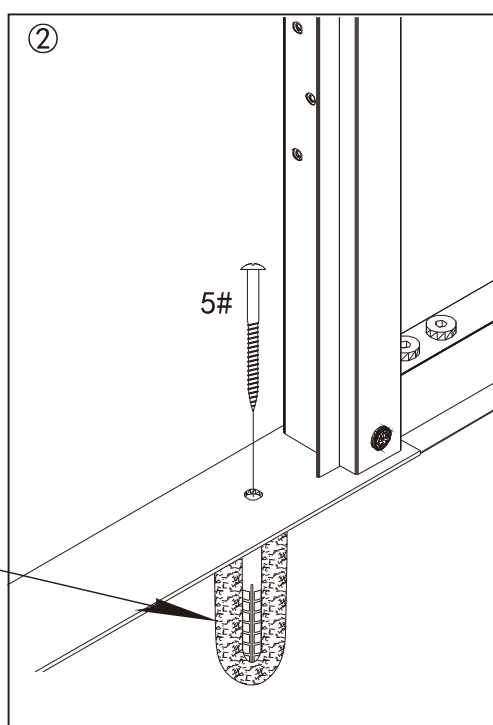

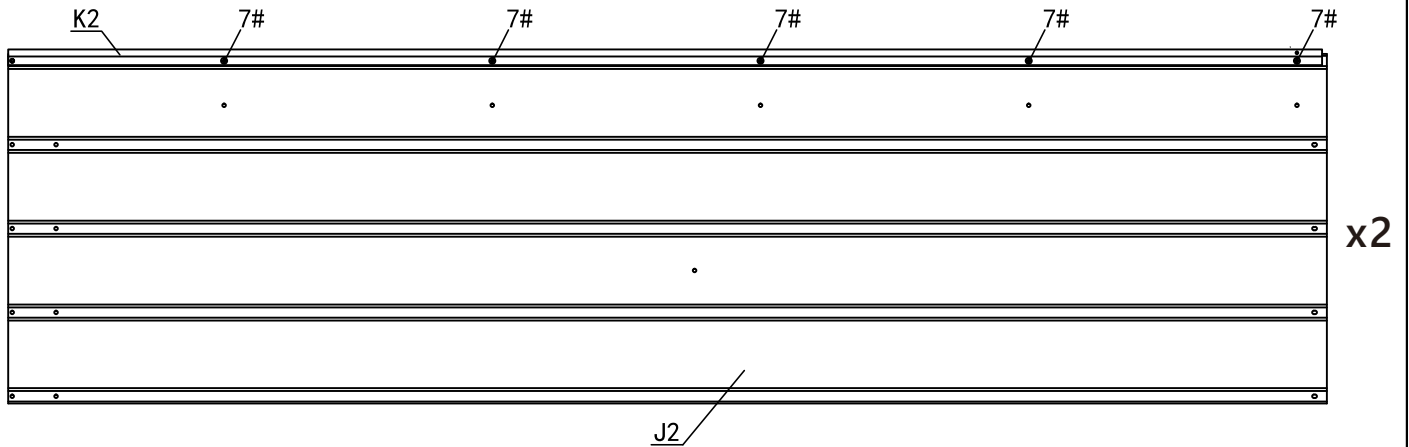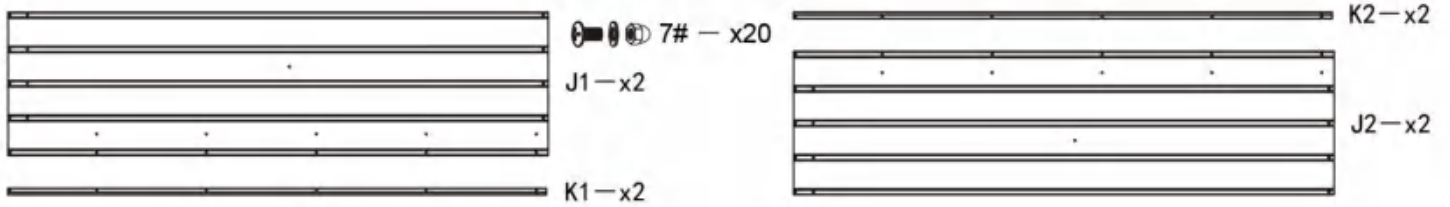


Install part #K2 to the one side of part #J2 with 5 bolts 7# gaskets and nuts.

Install part #K1 to the one side of part #J1 with 5 bolts 7# gaskets and nuts.

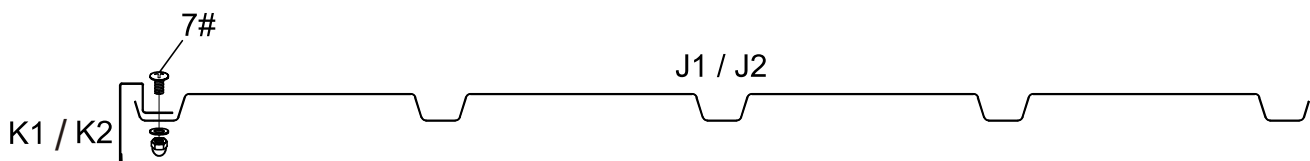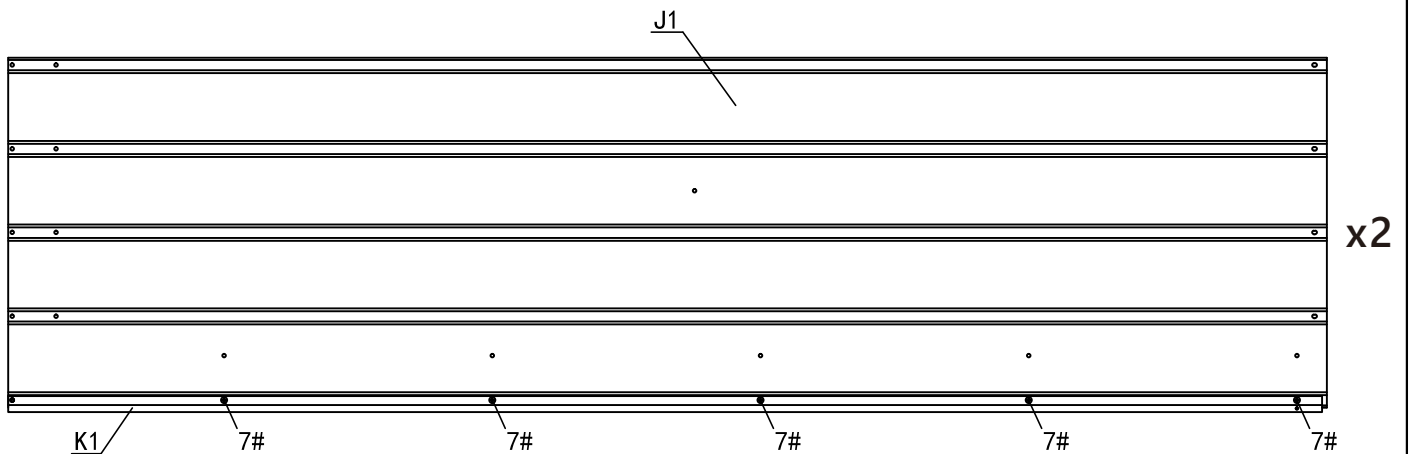


Adjust the top frame

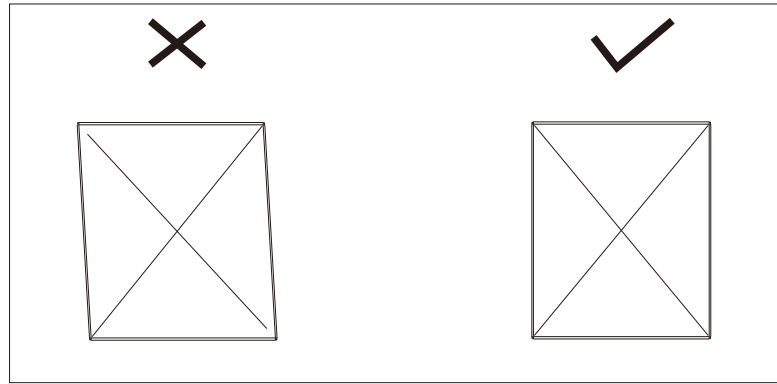

Attention: The roof panels can be installed in order or reverse order.



If there is a deviation between the roof panels and the top frame installation hole, it is generally caused by the diagonal size deviation of the top frame .

The diagonal distance of the top frame should be measured and adjusted.

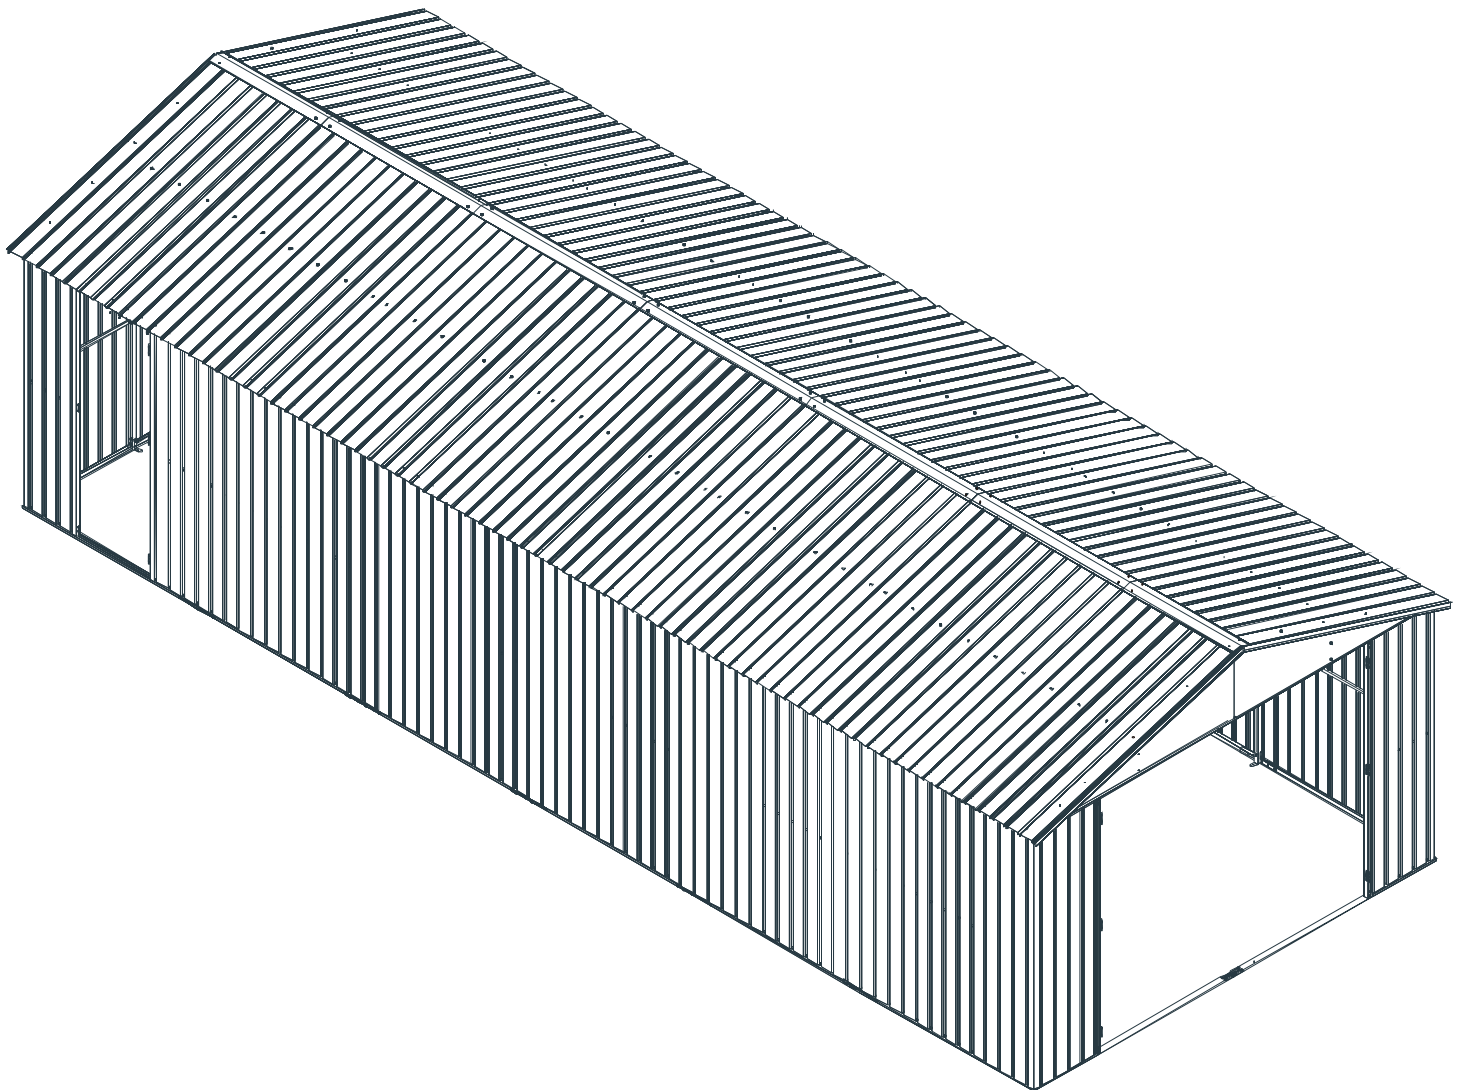

Please stand inside the shed frame when installing the panels for convenience.


 L4-x16
  7# - x16
  14# - x12
 13# - x12
 15# - x4

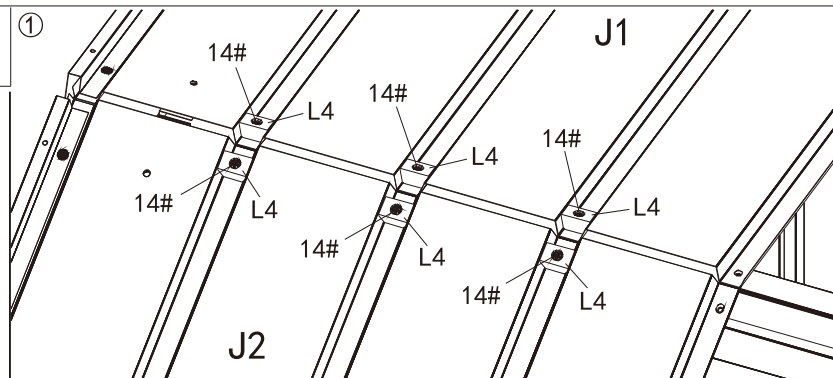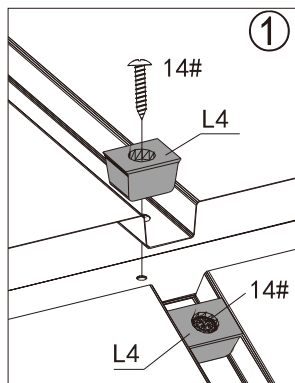

Install roof panel #J1 & J2.

①: Use 6 screws #14 to secure 6 black rubber #L4 and roof panels to the centre beam.

(Make sure the large end of black rubber facing upwards). Repeat the above procedures to assemble another side.

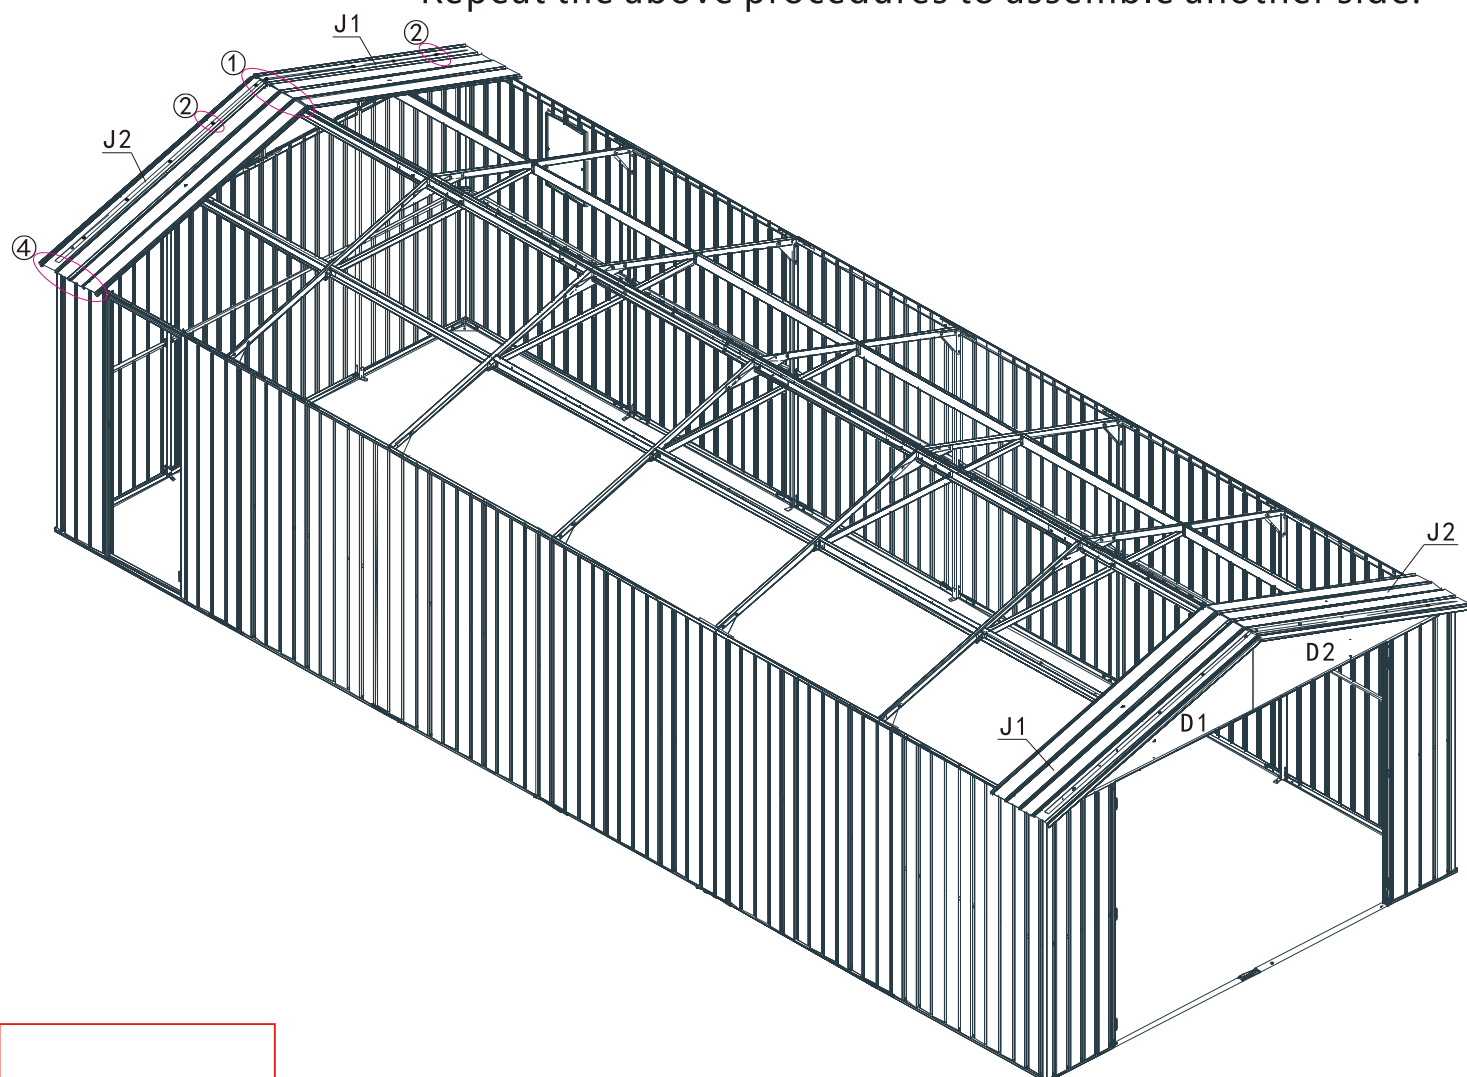



Top View

Side Beam



Centre Beam

Side Beam



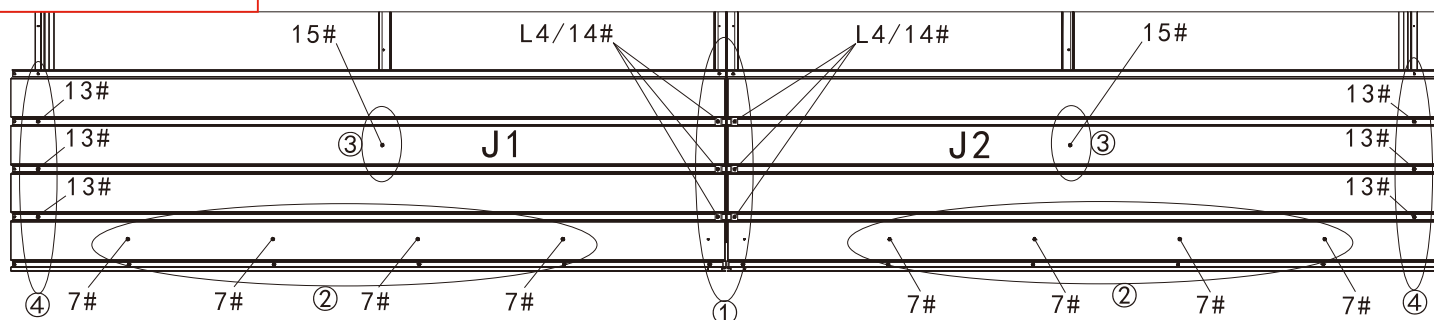


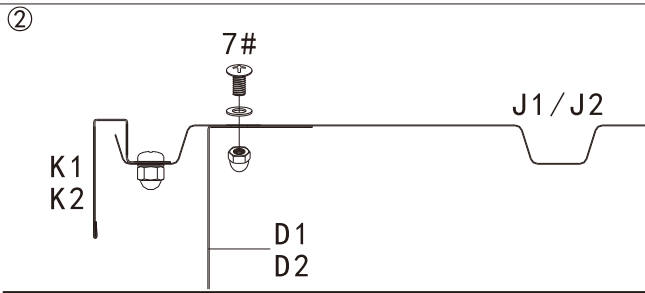

②: The roof panel J1/J2 is fixed with top frame D1/D2 by using 8 bolts #7, gaskets and nuts. Repeat the above procedures to assemble another side.

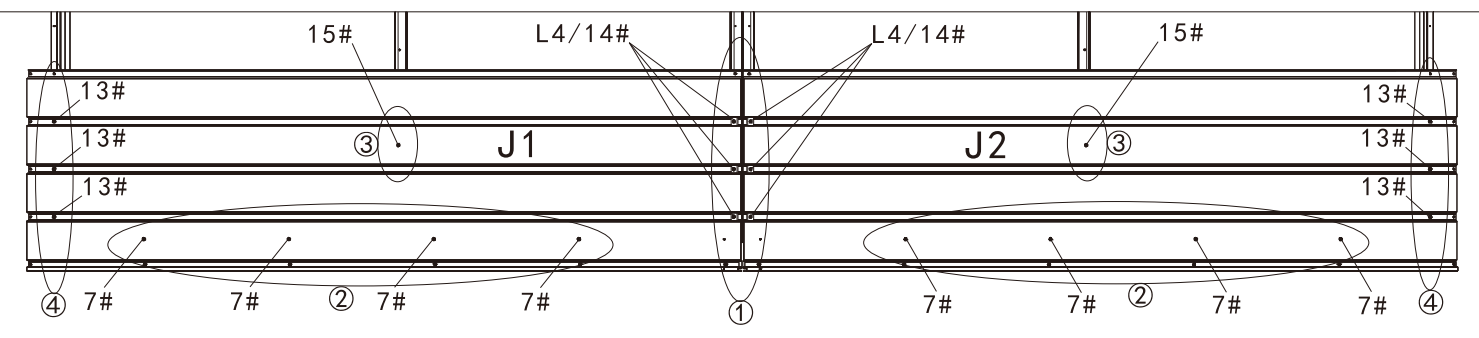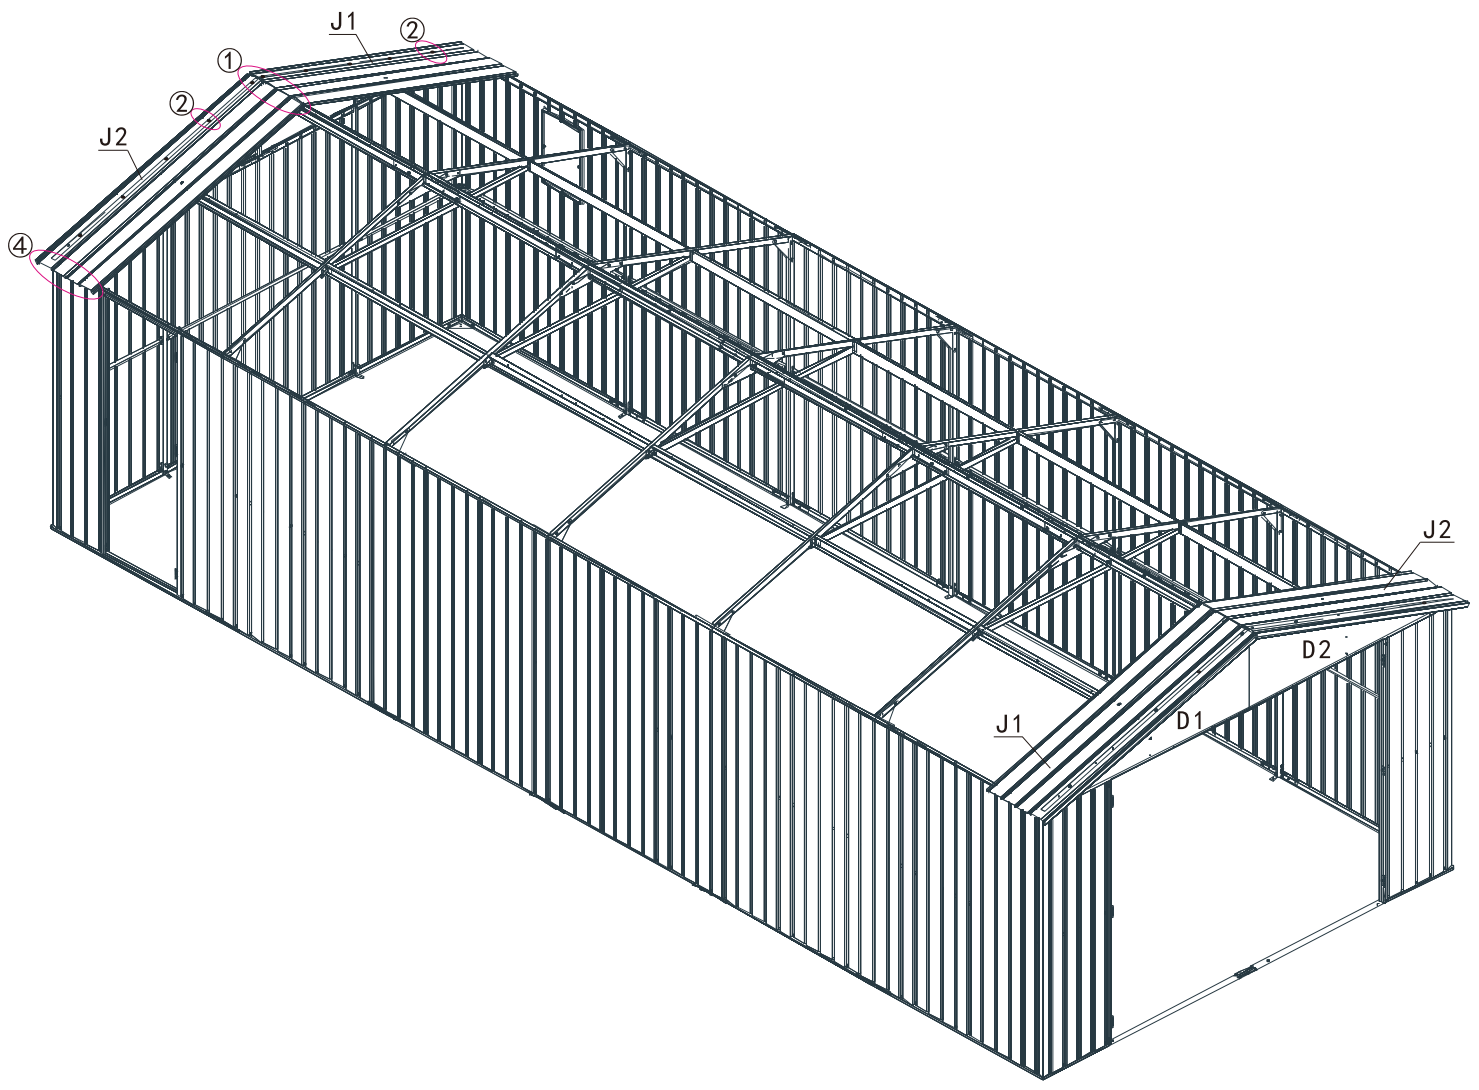

③: Black rubber #L4 shall be inserted at the gap between roof panels and side top beam, then fix with 2 screws #15 to prevent rainwater intrusion.
 (Place the rubber under J1 and J2, with the large end facing down).
 Repeat the above procedures to assemble another side.

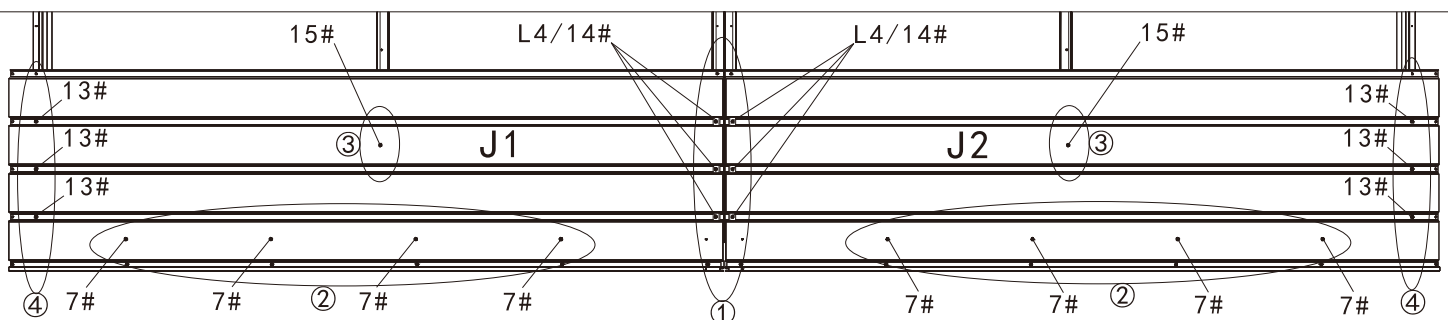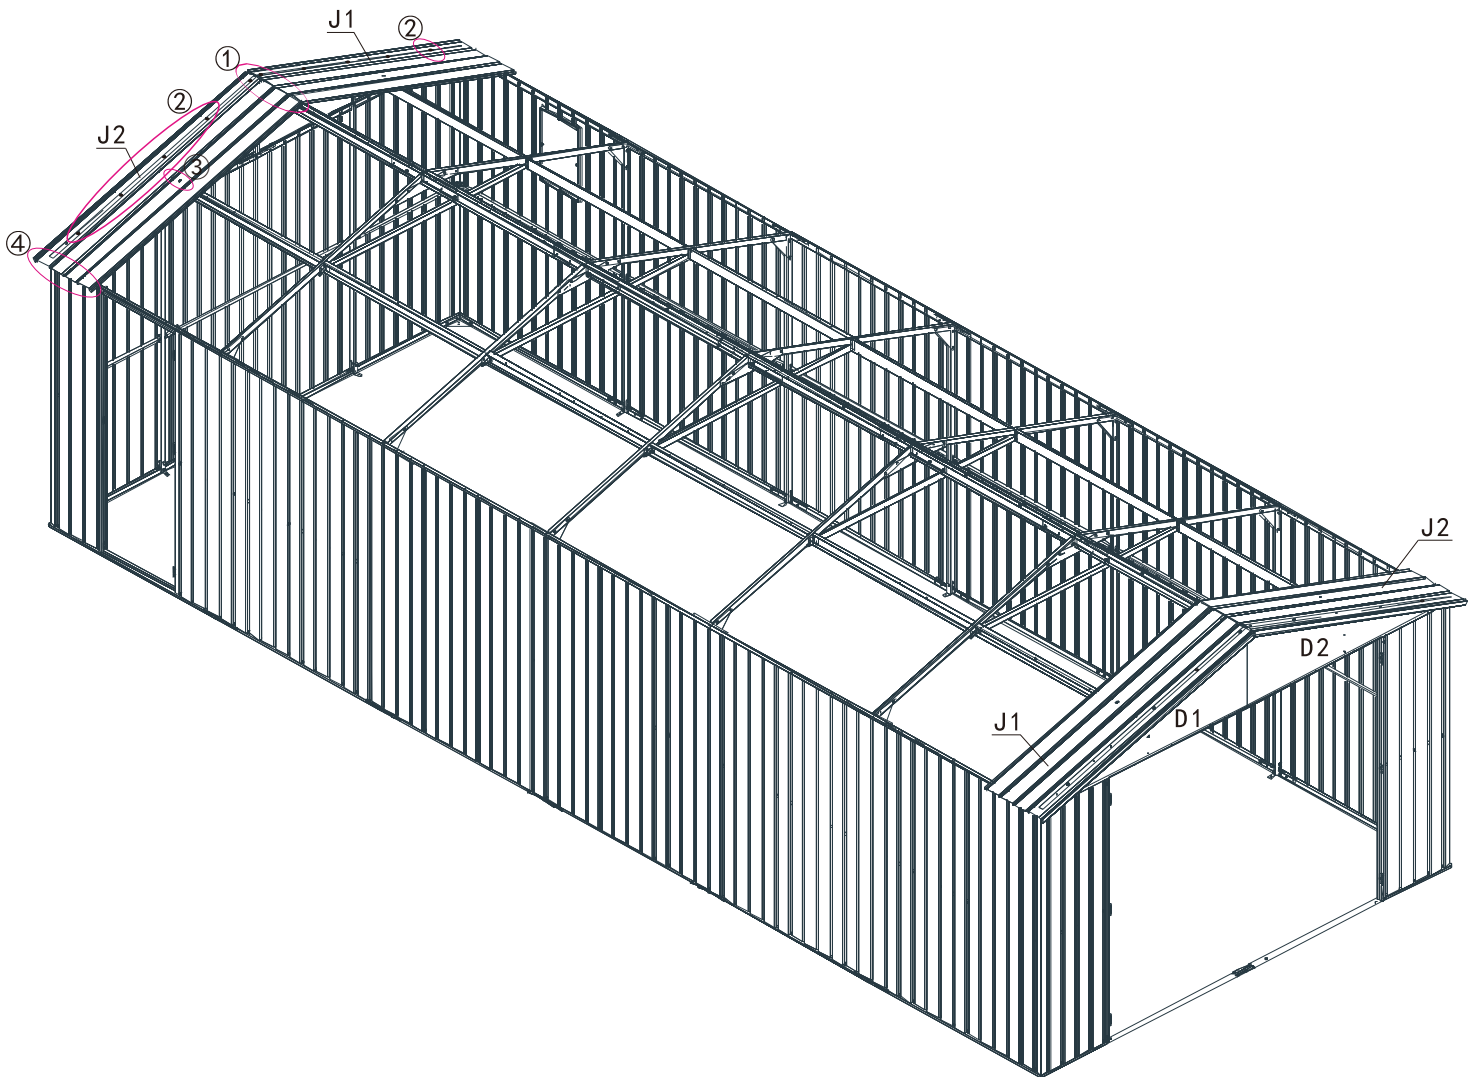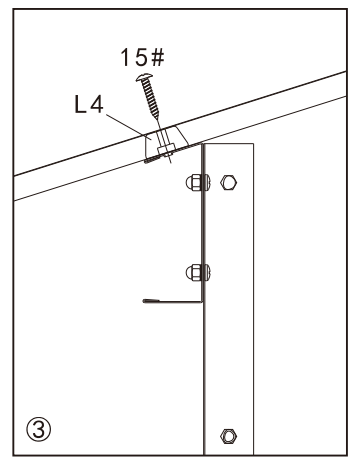

④: The roof panel is fixed to the side top frame by using 6 screws #13.





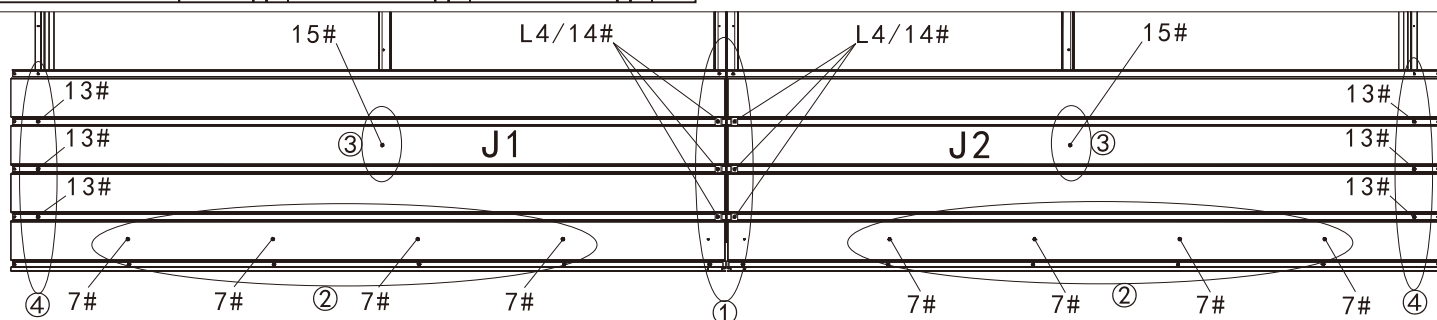


Diagram of the installation location of the roof panels.



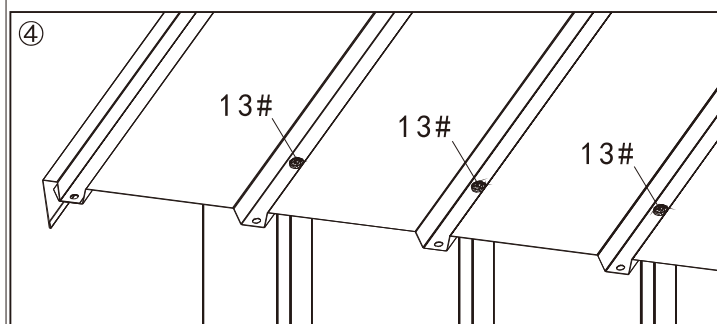
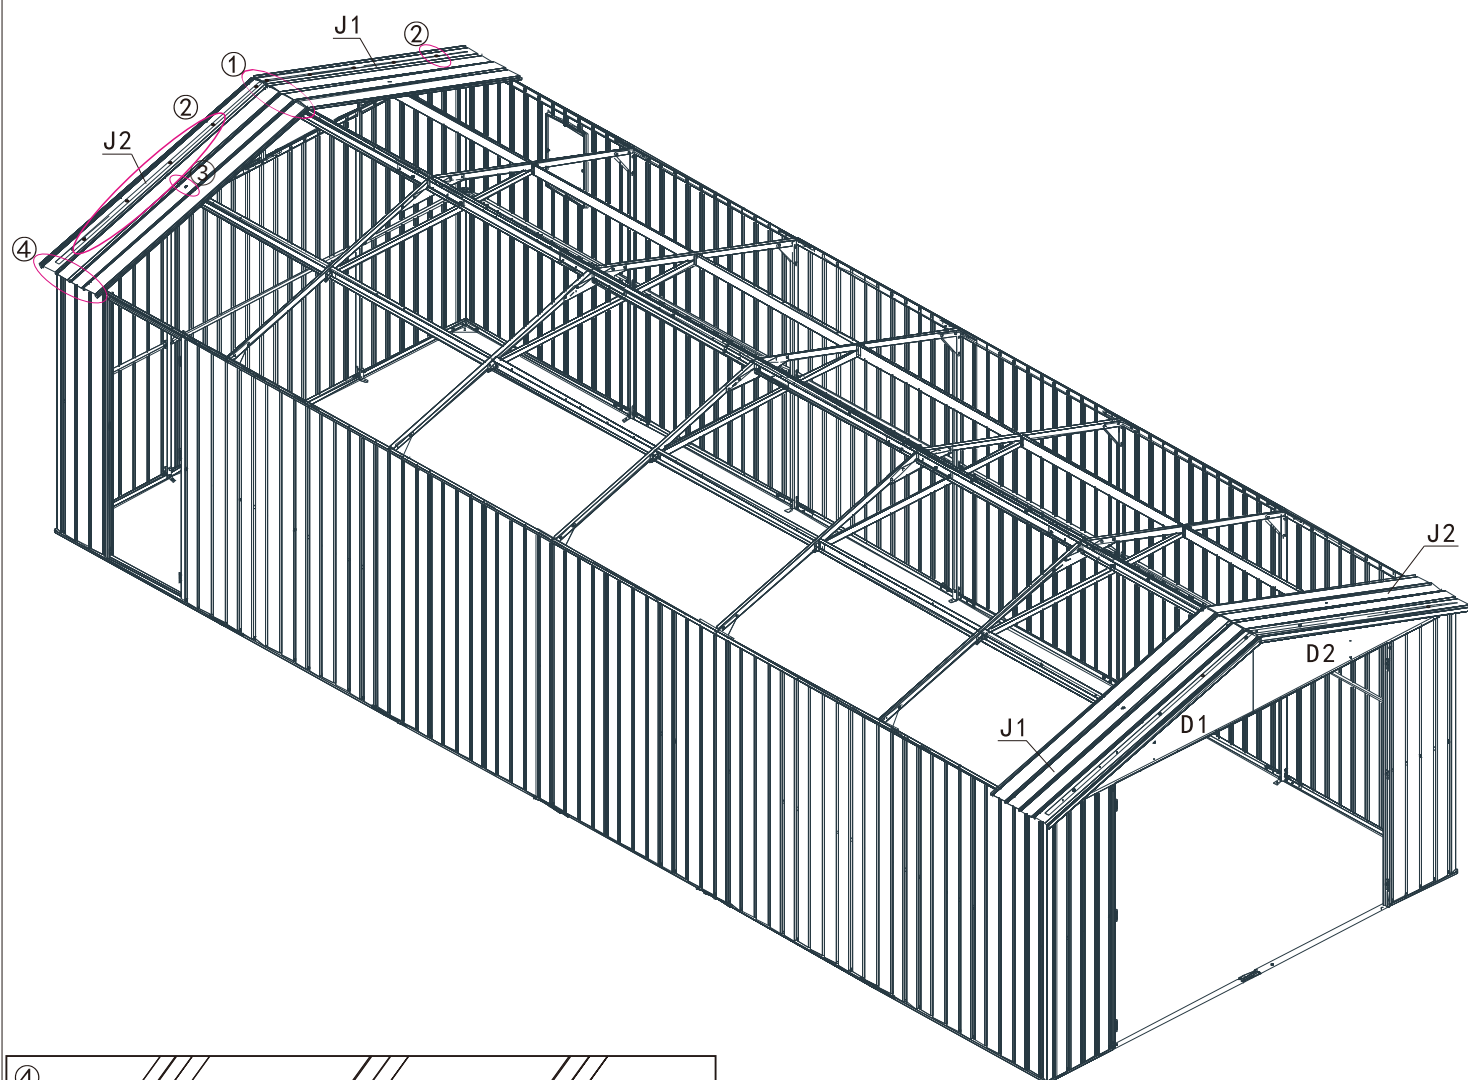
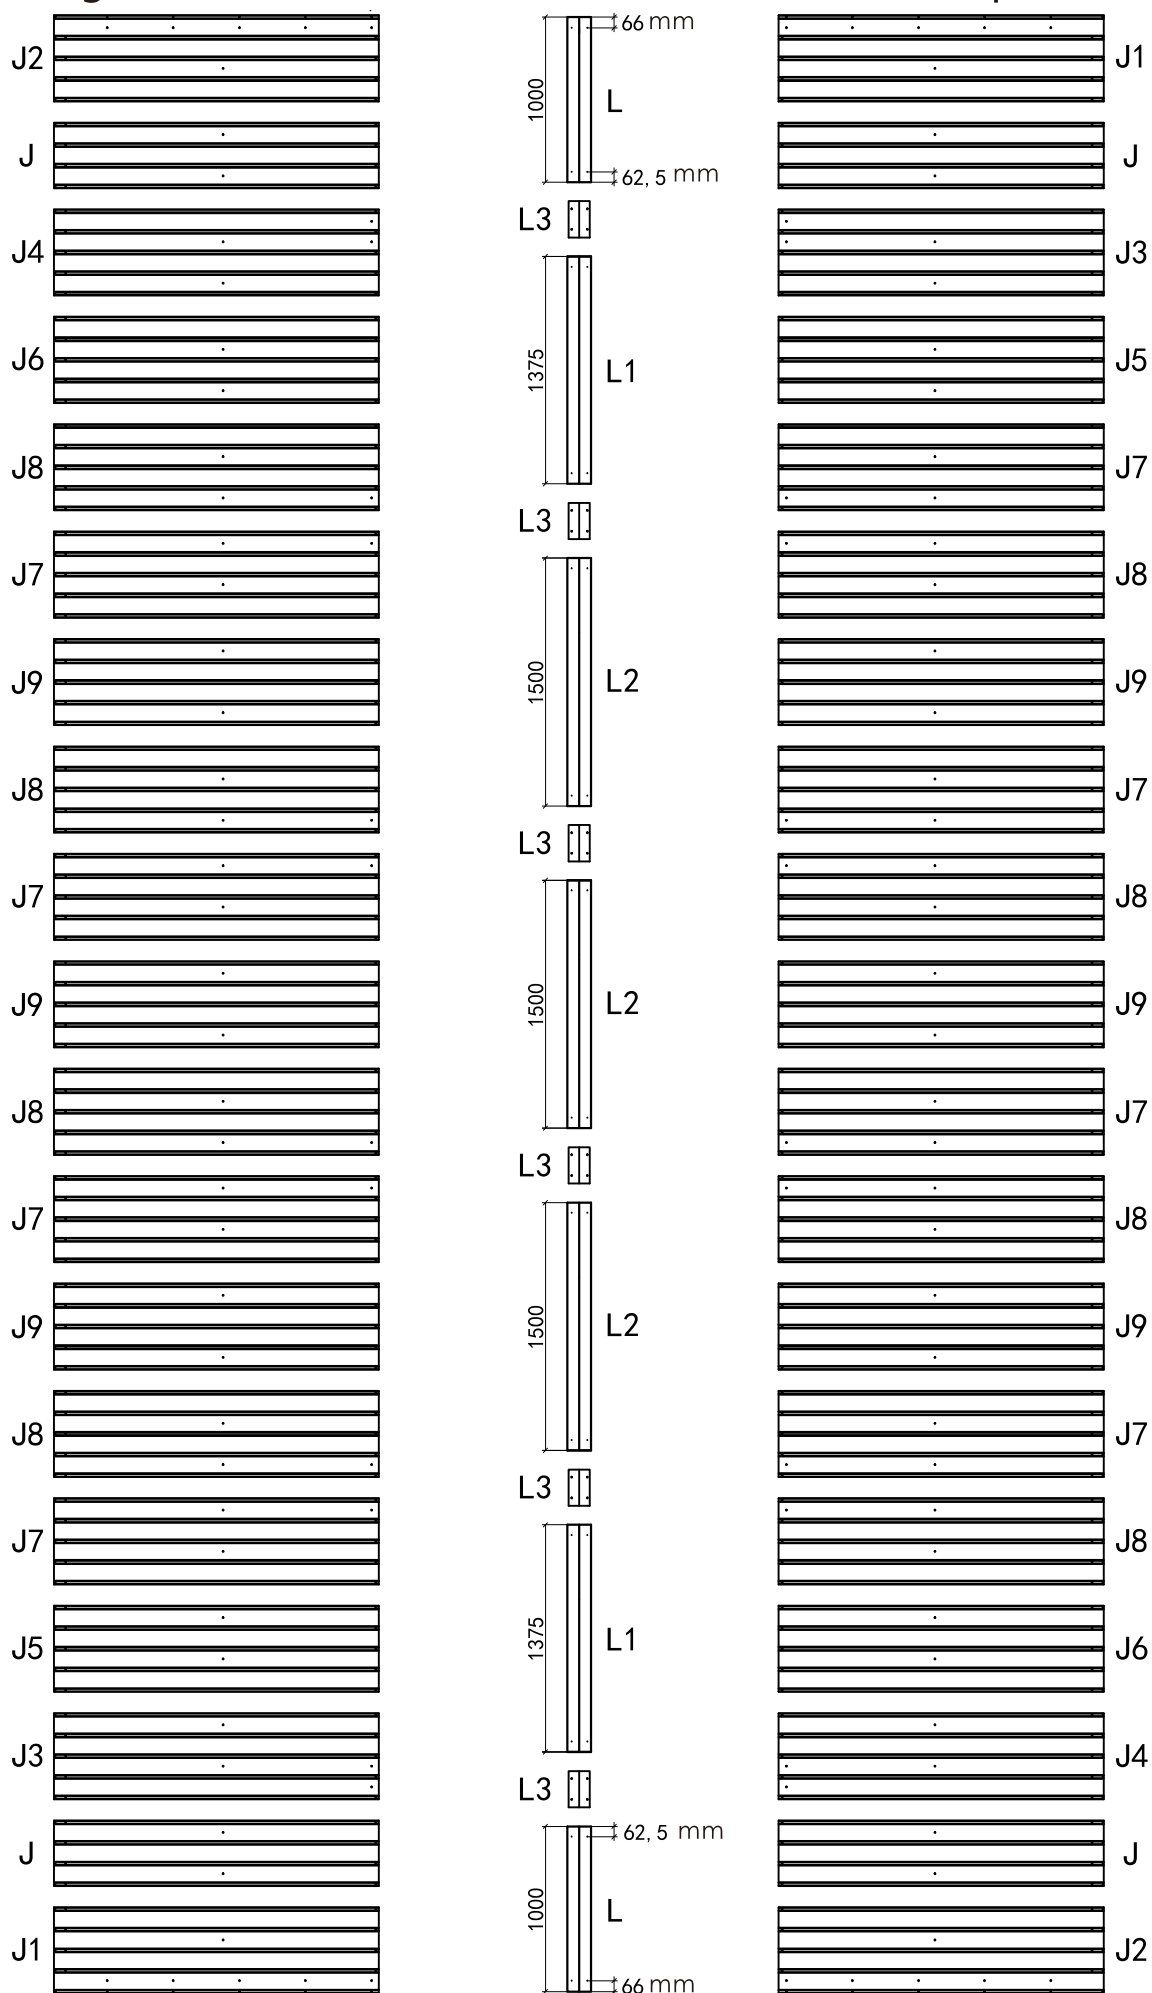


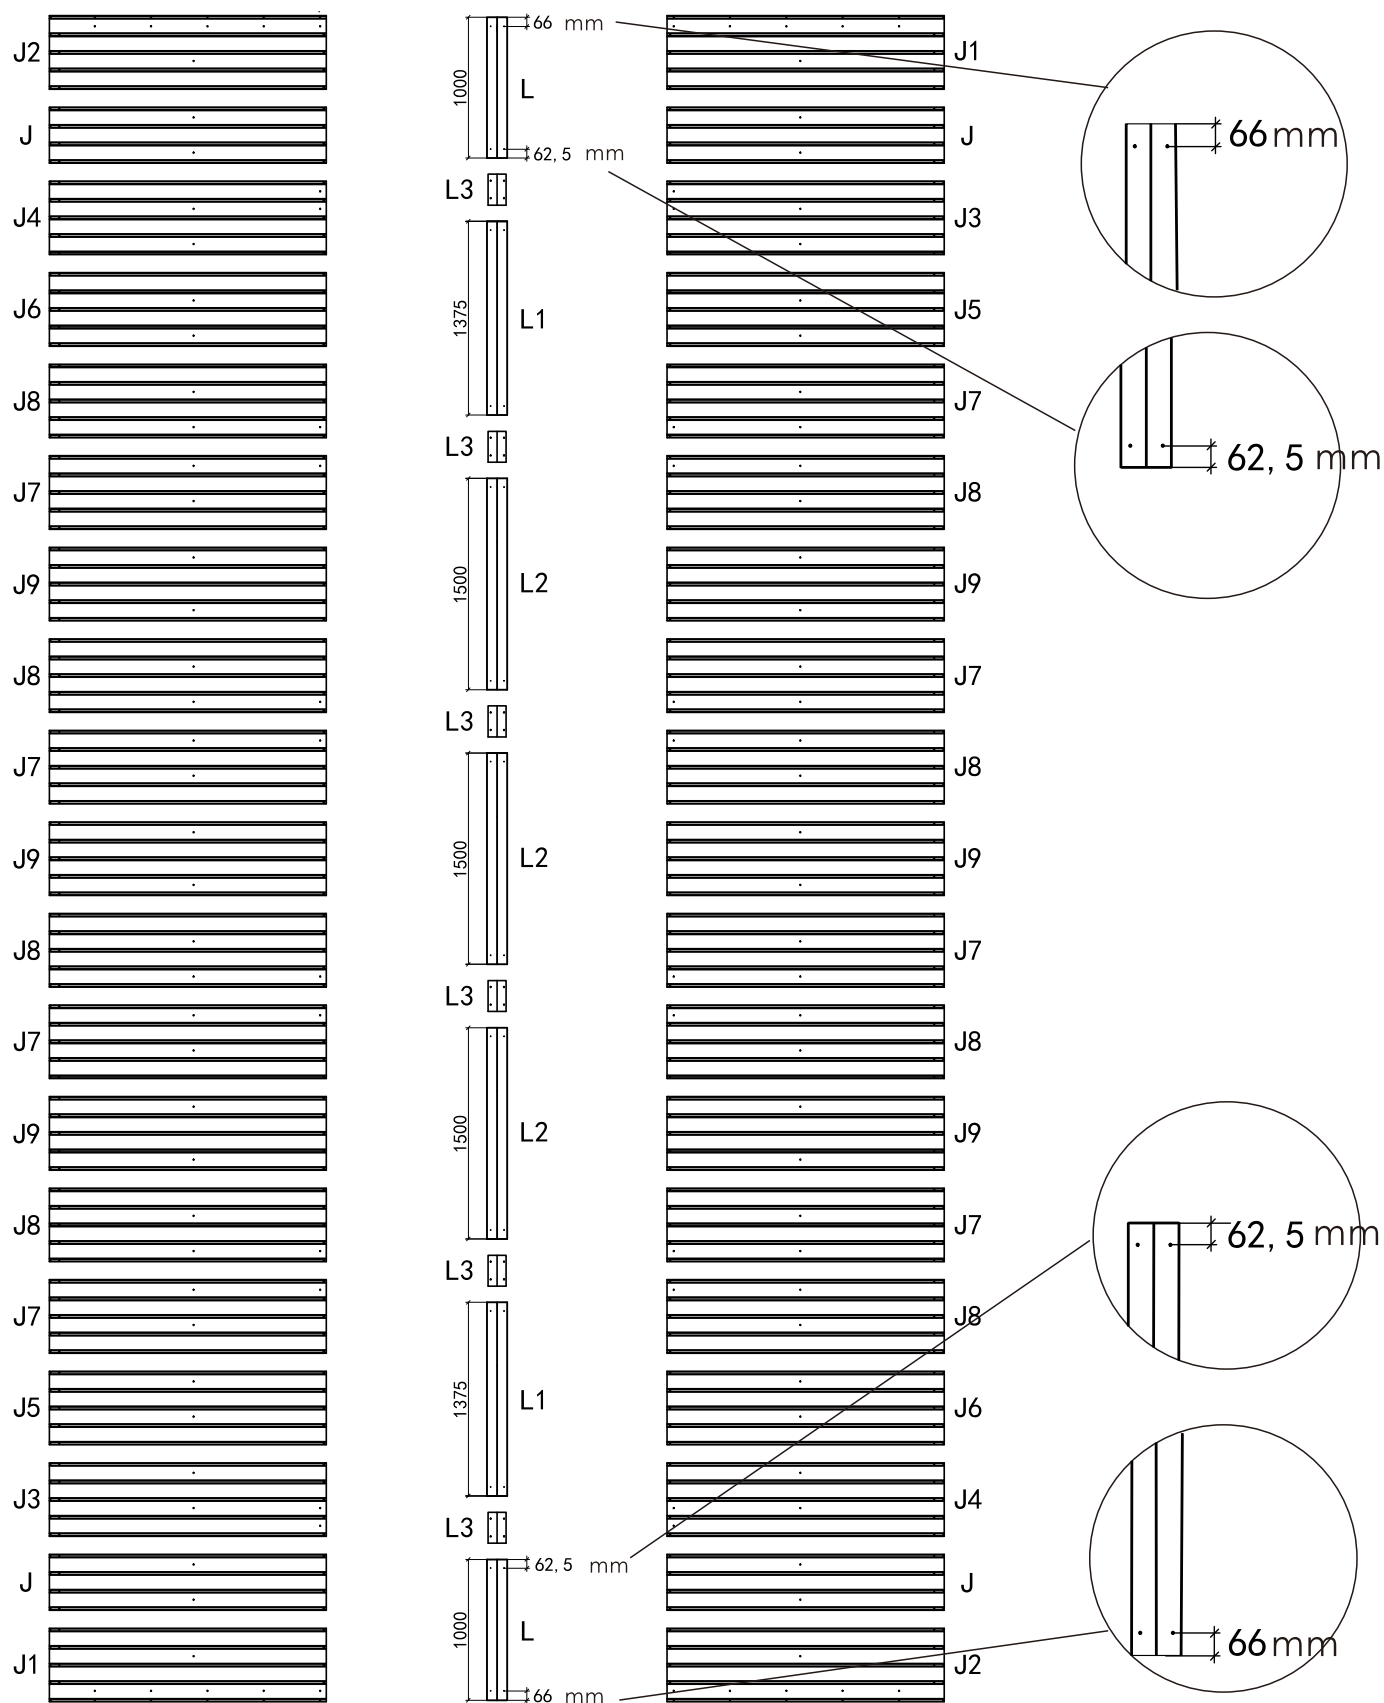

Please stand inside the shed frame when installing the panels for convenience.


Install the roof panels while covering with #L/L1/L2/L3 as you can.

Pay attention to the installation direction of #L.

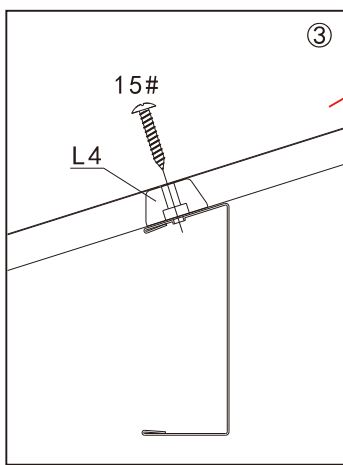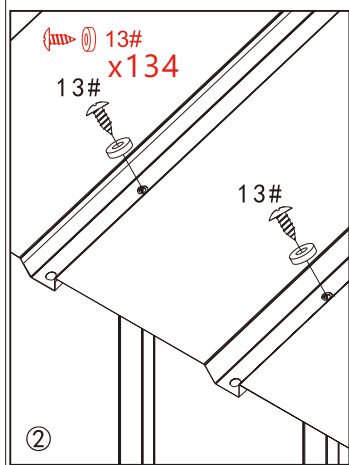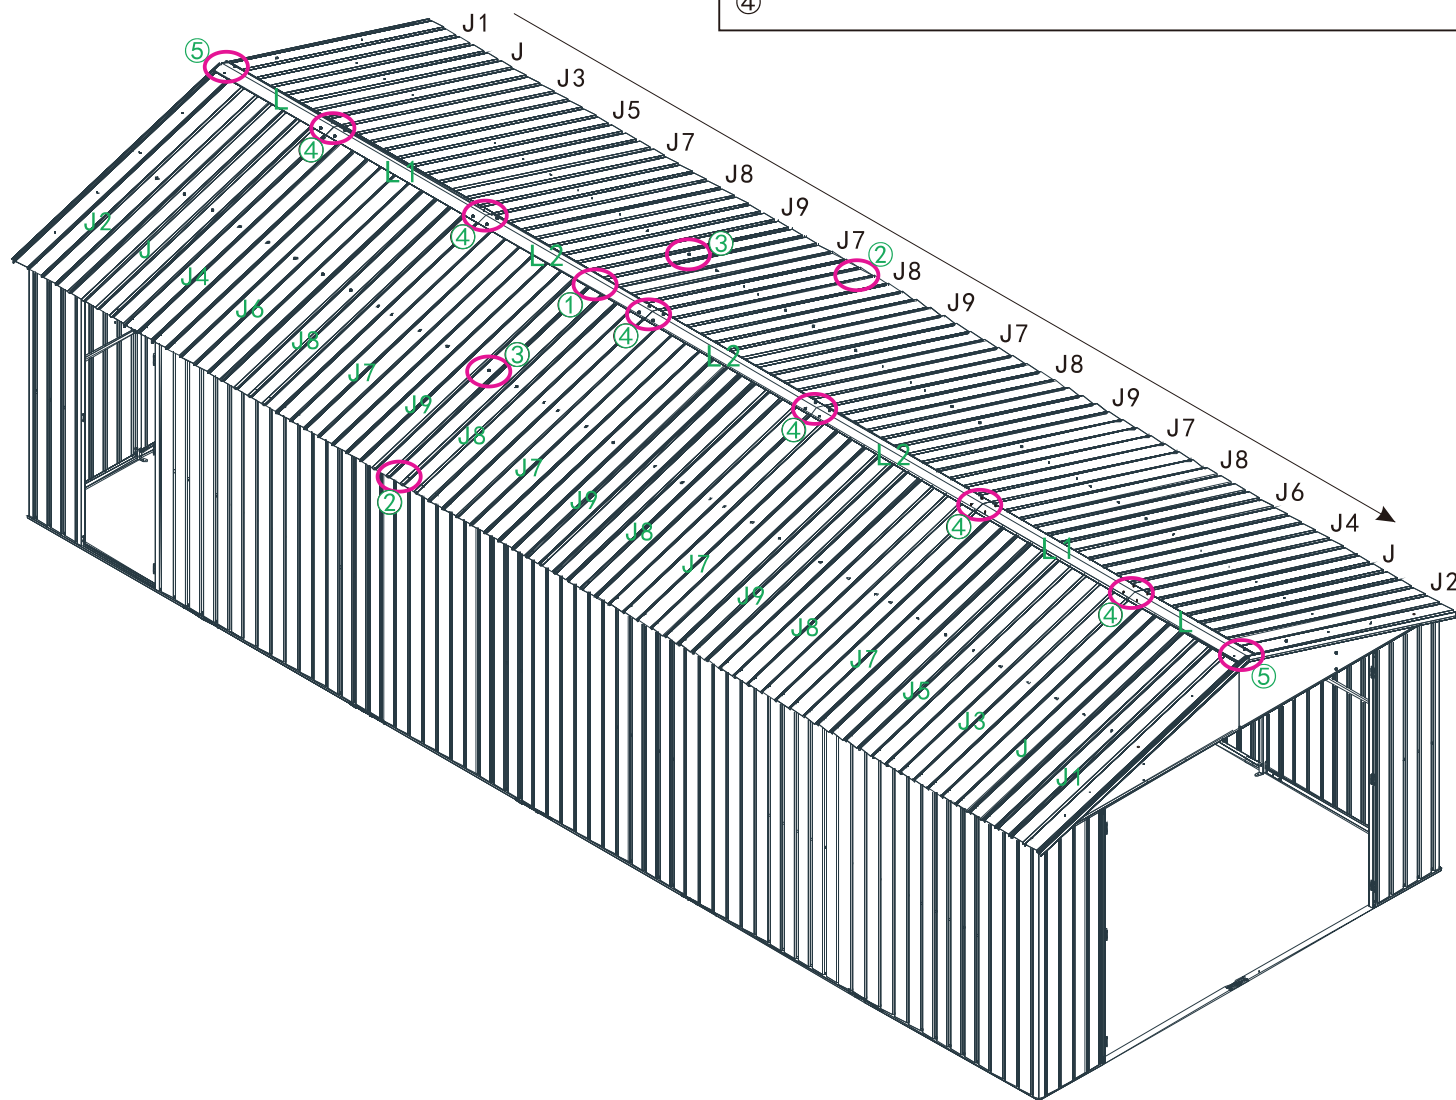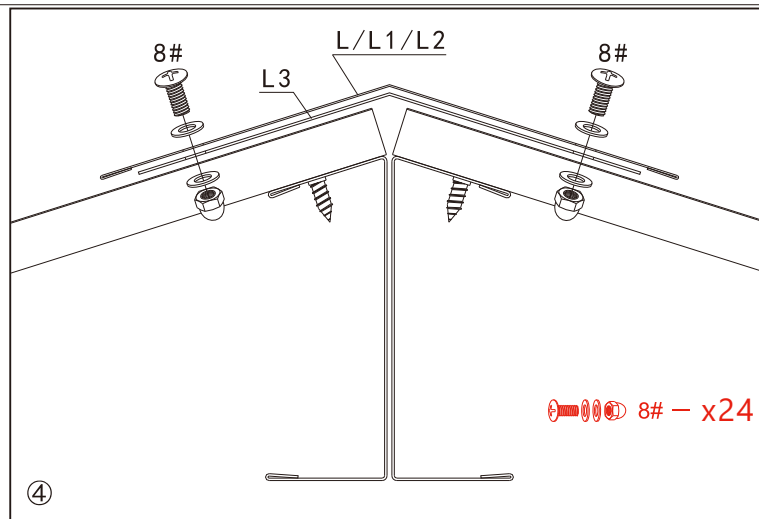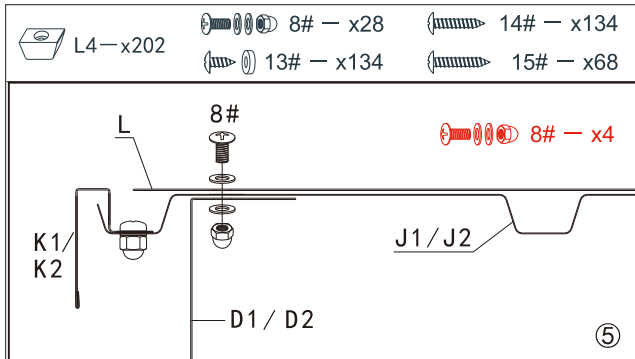

L4-x 68
 15# - x68

L4-x134
 14# - x134

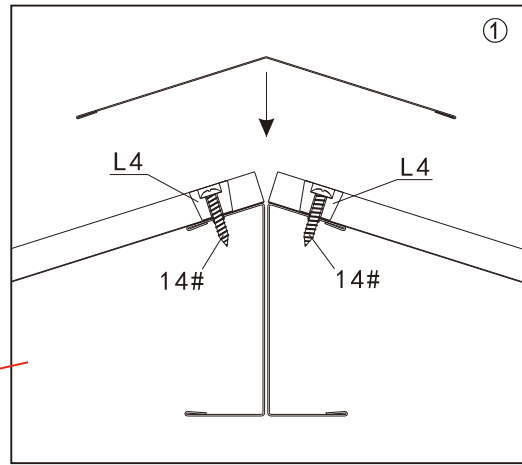





- ①: Use 134 screws #14 to secure 134 black rubber #L4 and roof panels to the centre beam.(Make sure the large end of black rubber facing upwards).**
- ②: The roof panels are fixed to the side top frame by using 134 screws #13.**
- ③: Black rubbers #L4 shall be inserted at the gap between roof panels and side top beam, then fix with 68 screws #15 to prevent rainwater intrusion.
(Place the rubber under the roof panels, with the large end facing down).**
- ④: Use 24 bolts #8, gaskets and nuts to fix part #L/L1/L2/L3 to the roof top.
(part #L/#L1/L2 should cover on part#L3).
Pay attention to the installation direction of #L.**
- ⑤: Use 4 bolts #8, gaskets and nuts to fix part #L with roof panel #J1/J2 and part #D1/D2.**


	K3—x2		K—x2		K6—x10		7# — x186
	K4—x2		K7—x2		K8—x2		8# — x8
	K5—x8						17# — x4

①: Use 2 screws #17 to install part #K as shown.



②/③: Install part #K7/K8 to 4 corners of the roof, fix with 2 bolts #8, gaskets And nuts.

Repeat the above producers to assemble the other 3 corners.

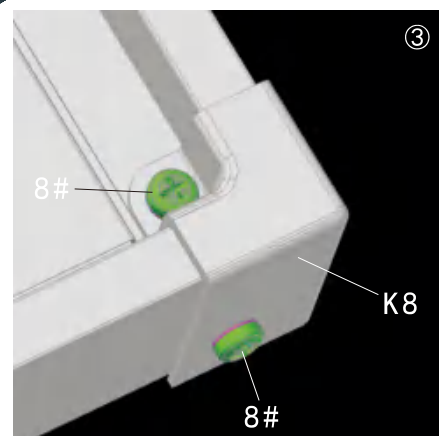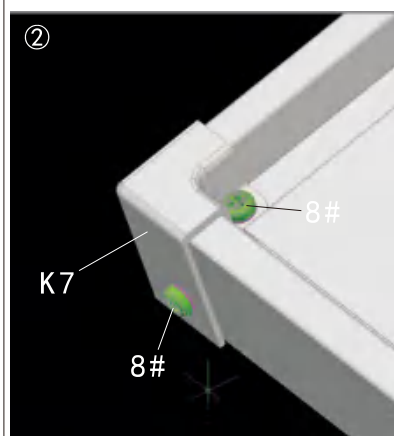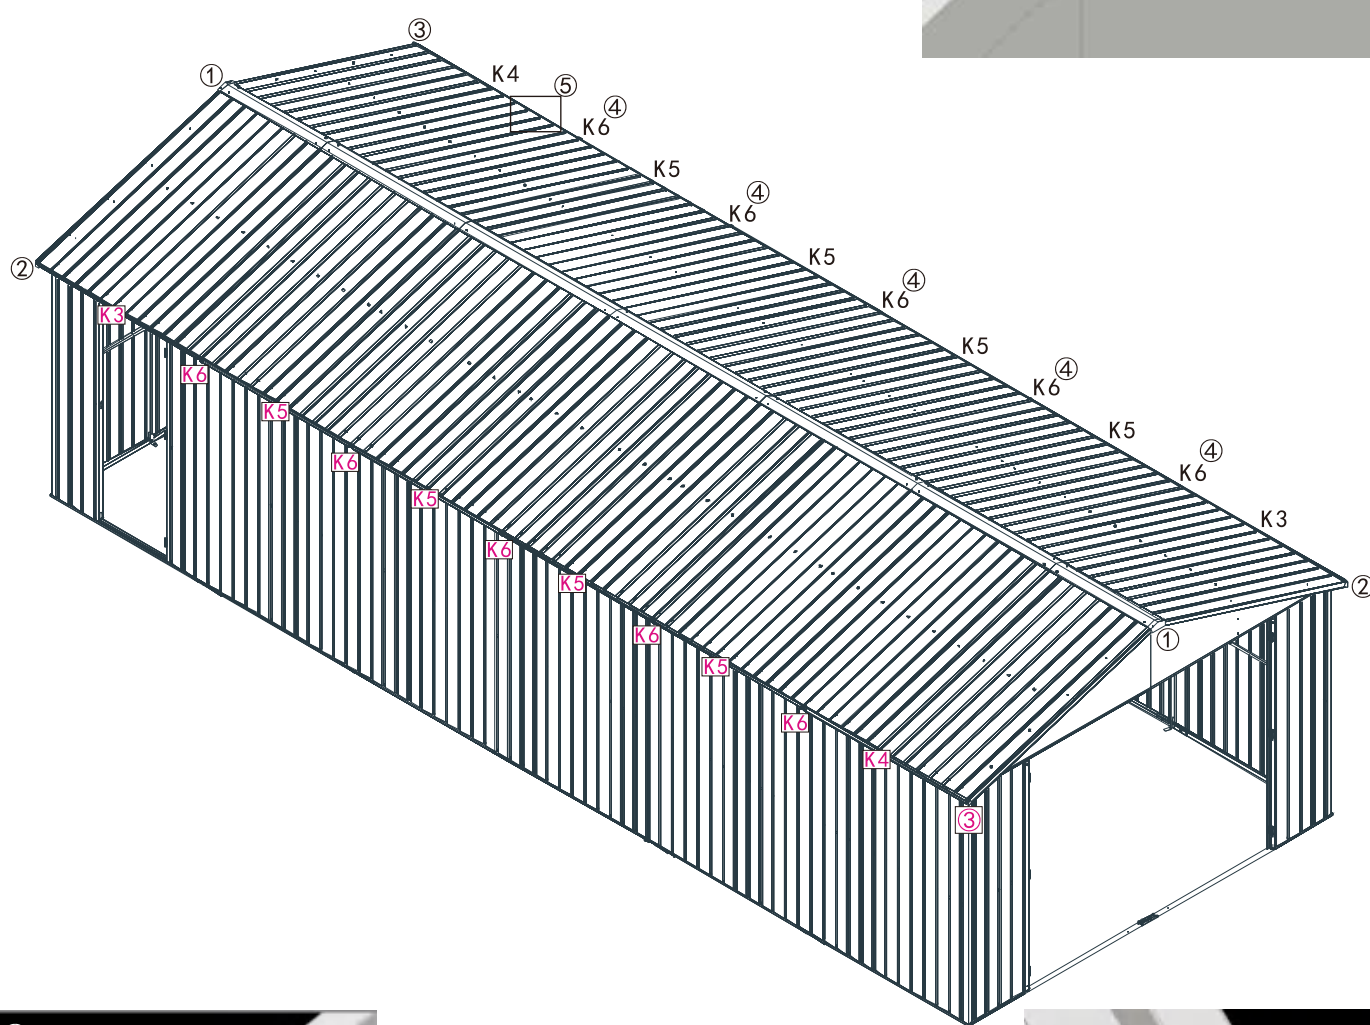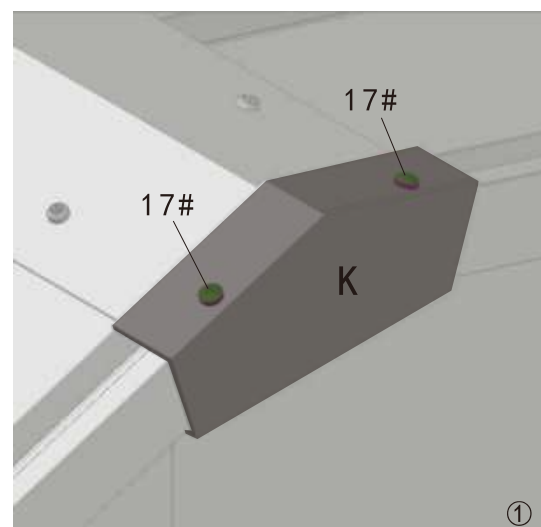

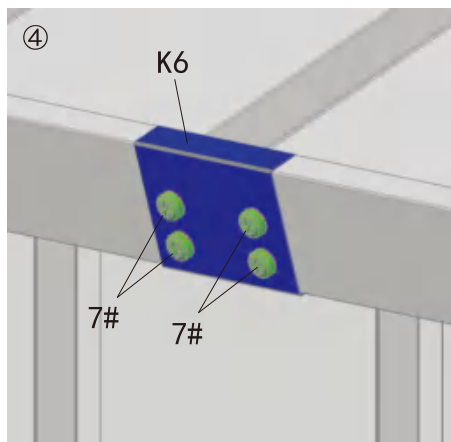


④: Use 4 bolts #7, gaskets and nuts to cover part #K6 on the connection of Finishing bar #K3,K4,K5.
Repeat the above producers to assemble the other 9 sides.

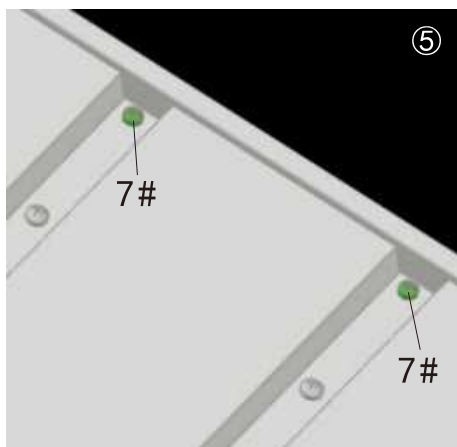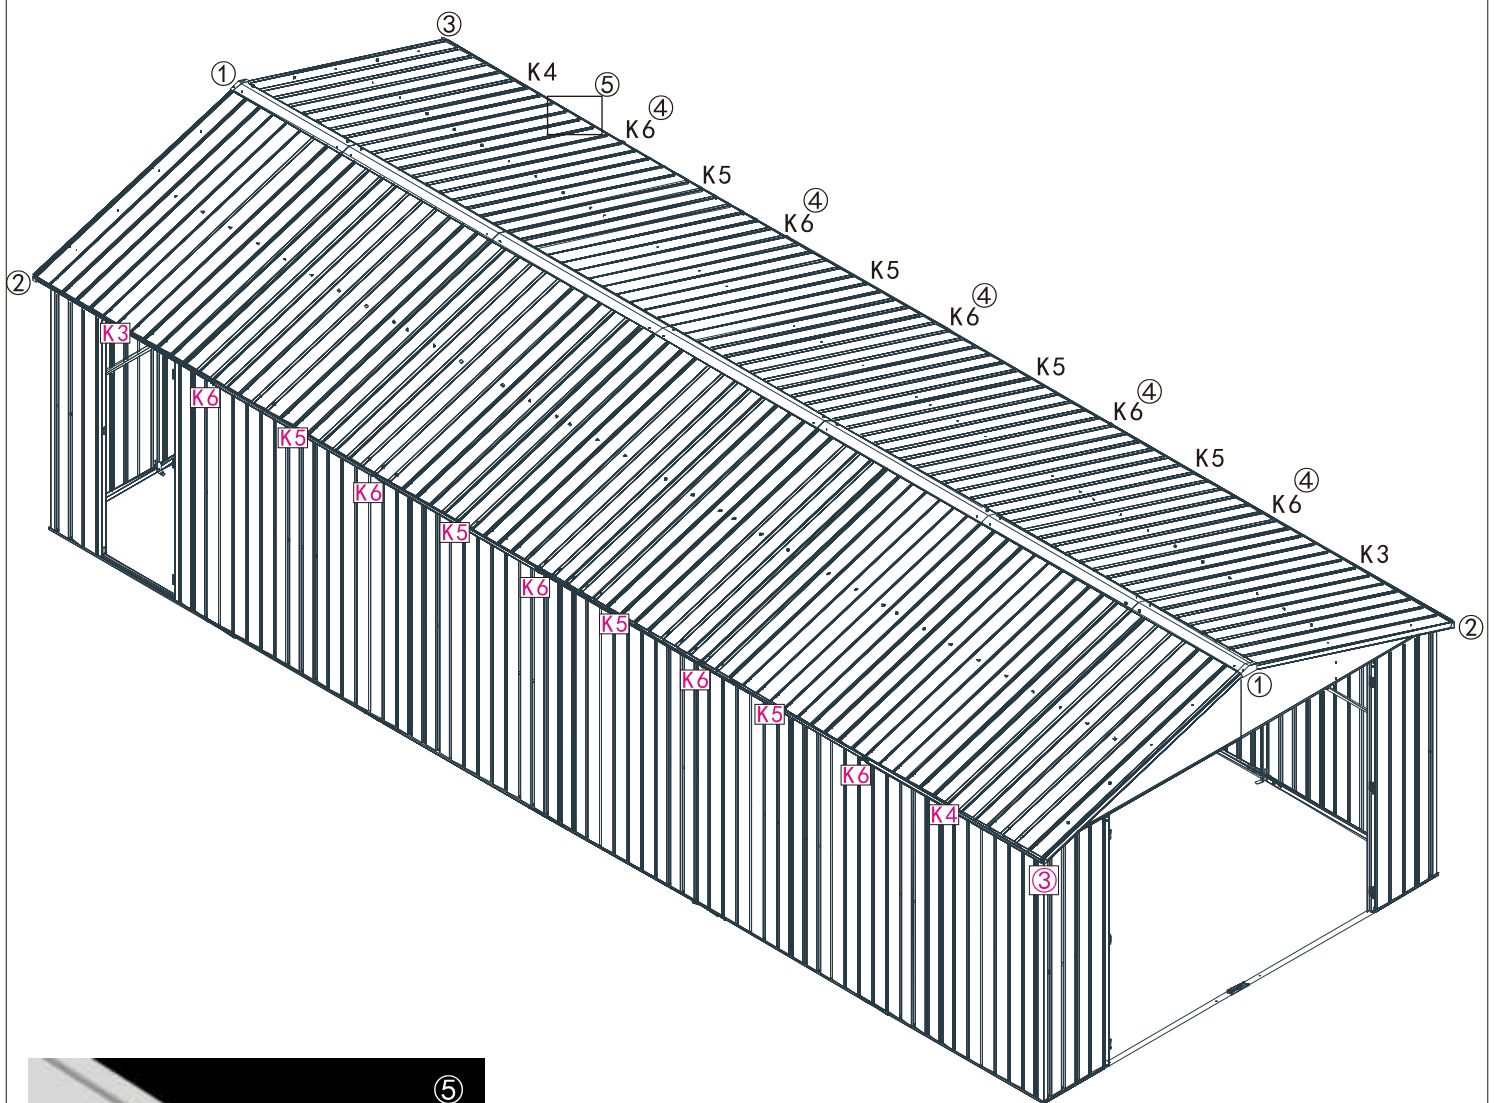


⑤: Use 73 bolts #7, gaskets and nuts to fix part #K3,K4 & K5 on the cornice of roof panel.
Repeat the above producers to assemble the another side.


Front Door Assembly (Right Side)

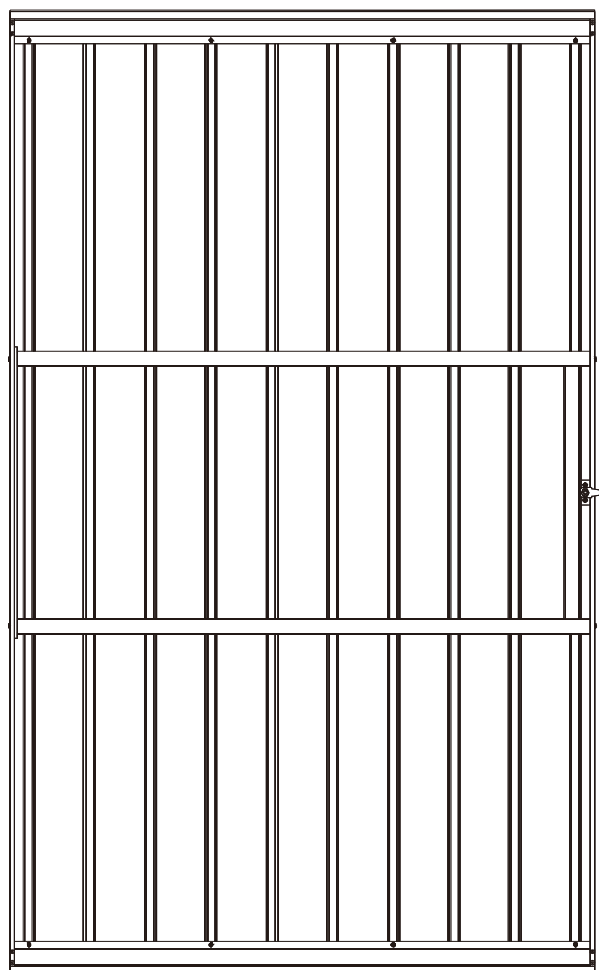

BACK SIDE

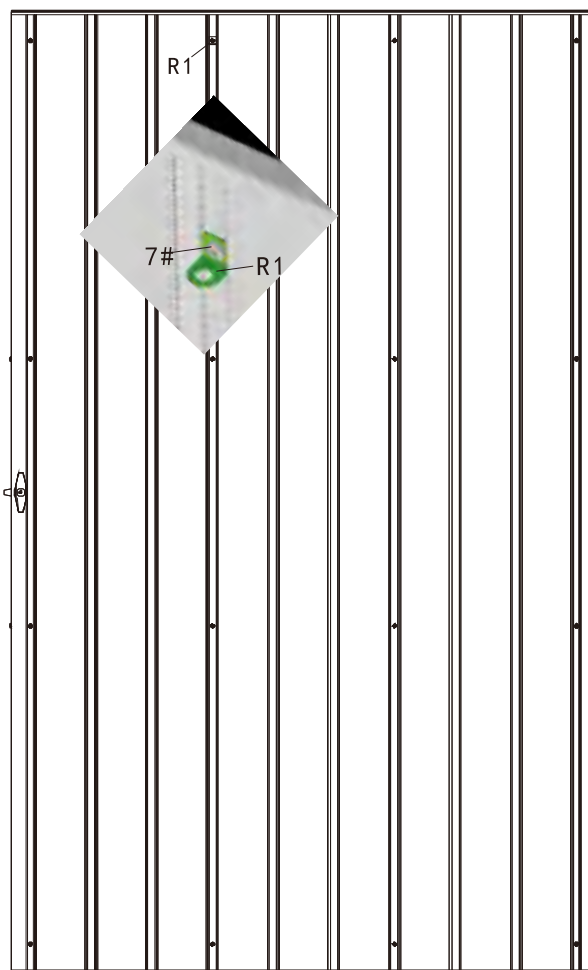


FRONT SIDE

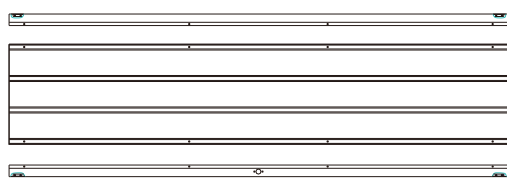

M1—x1

M4—x3

M3—x1

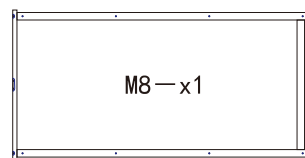


M8—x1



10# — x4



11# — x8

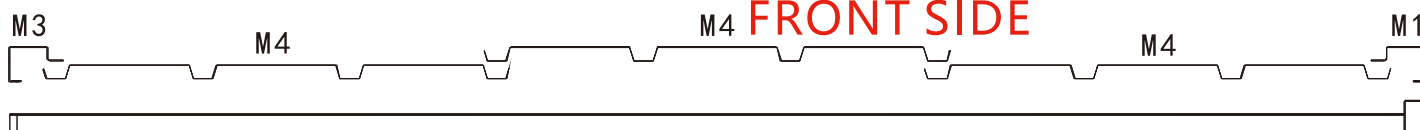


FRONT SIDE

①

BACK SIDE


②

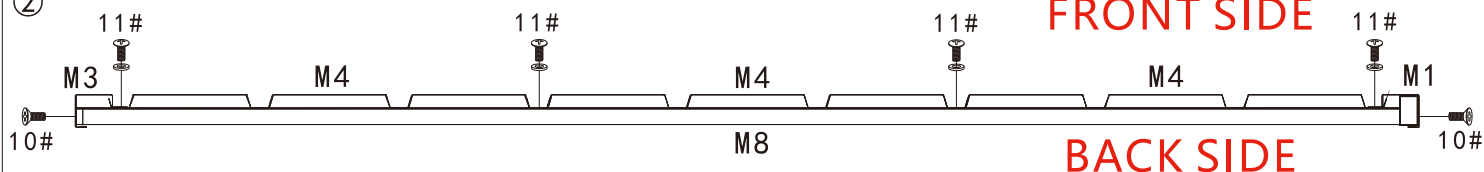

FRONT SIDE

BACK SIDE


③

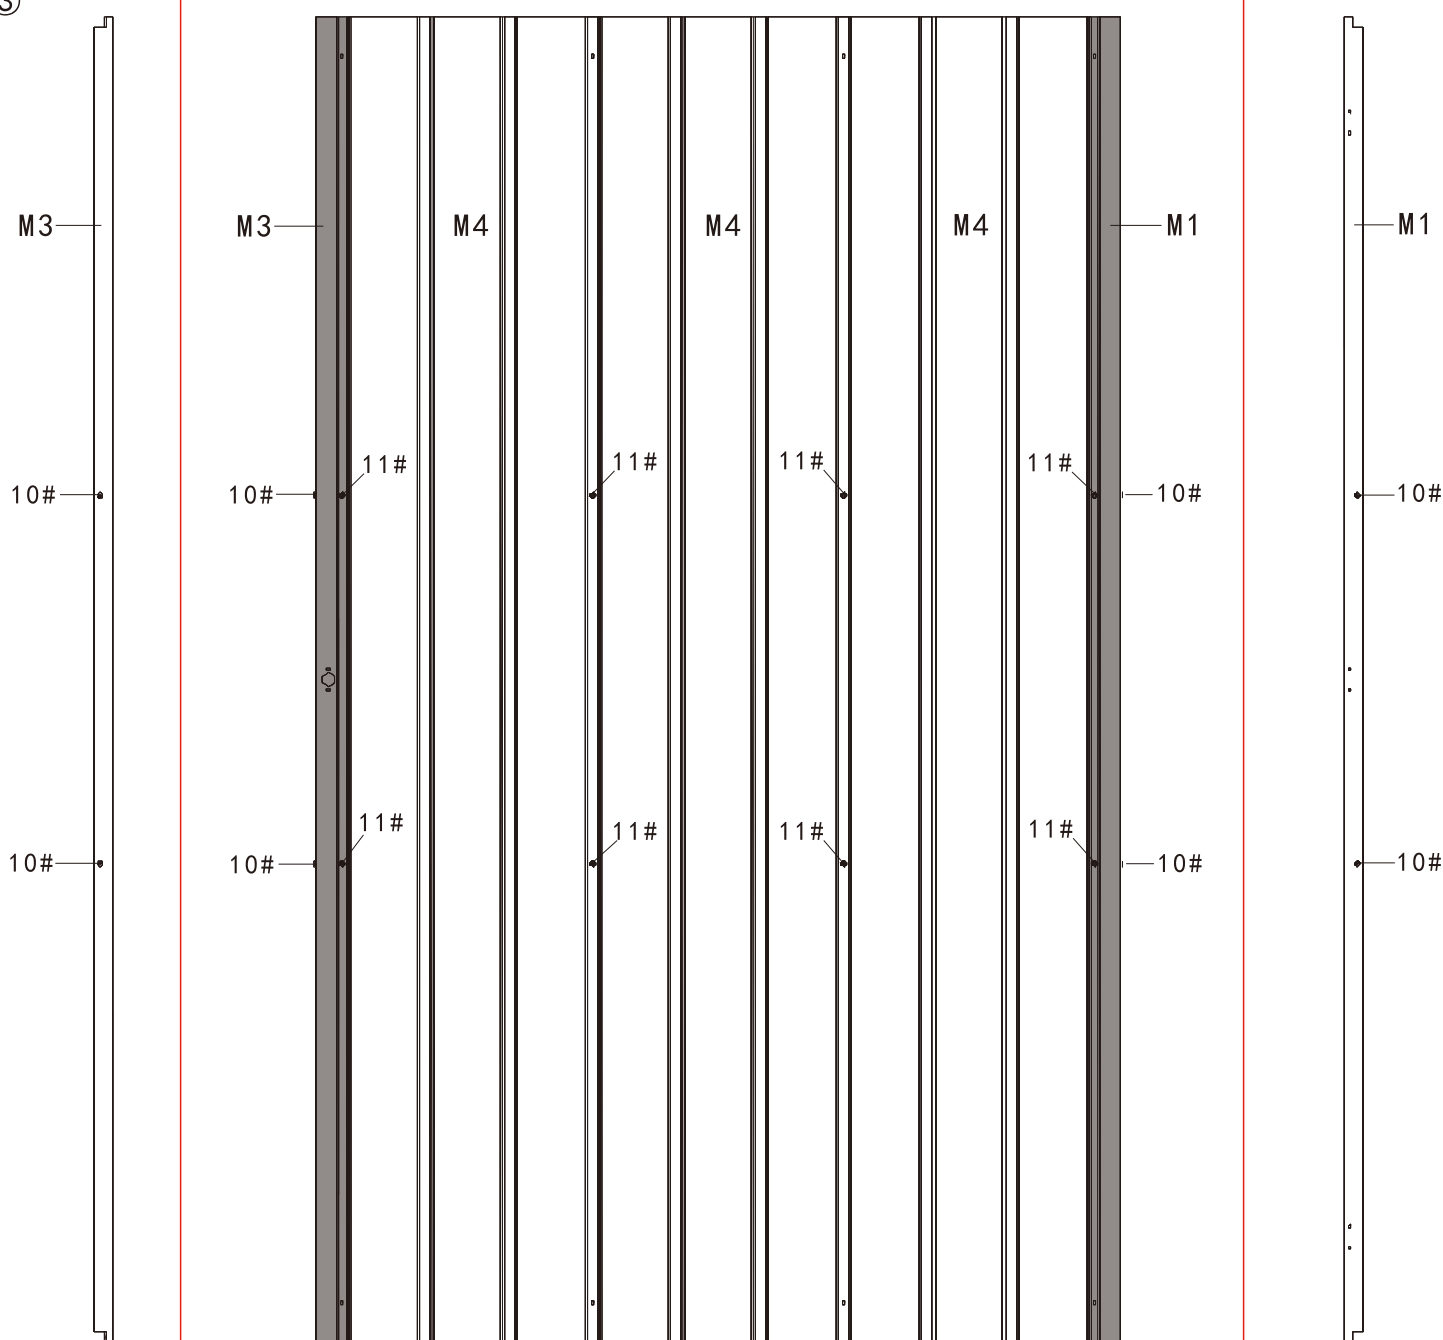


SIDE VIEW

FRONT SIDE






SIDE VIEW




BACK SIDE

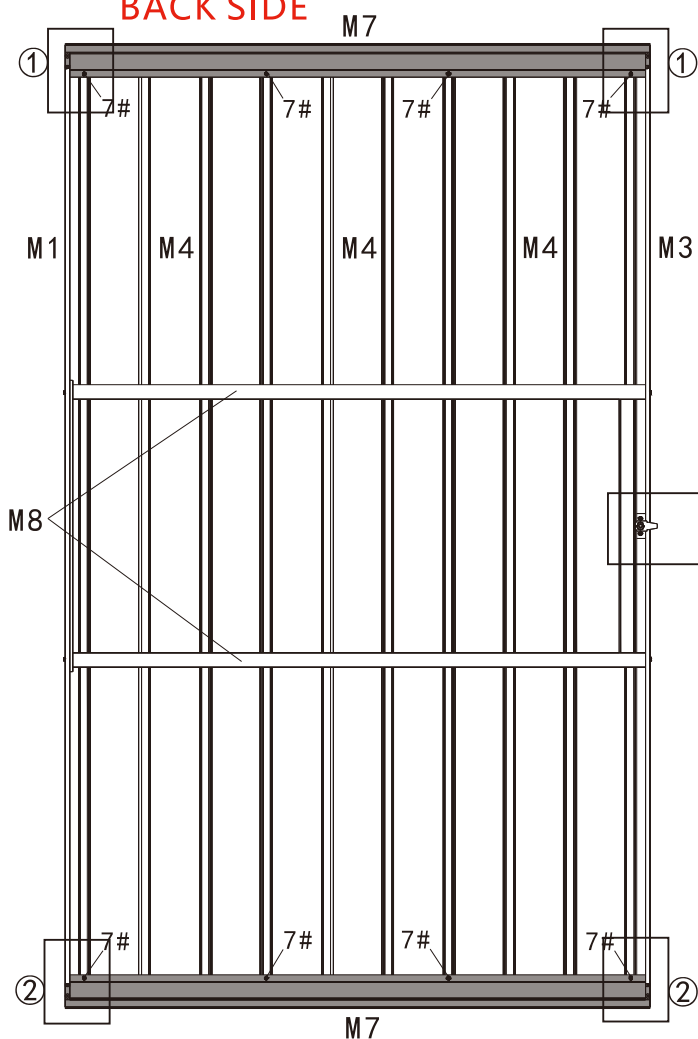


FRONT SIDE

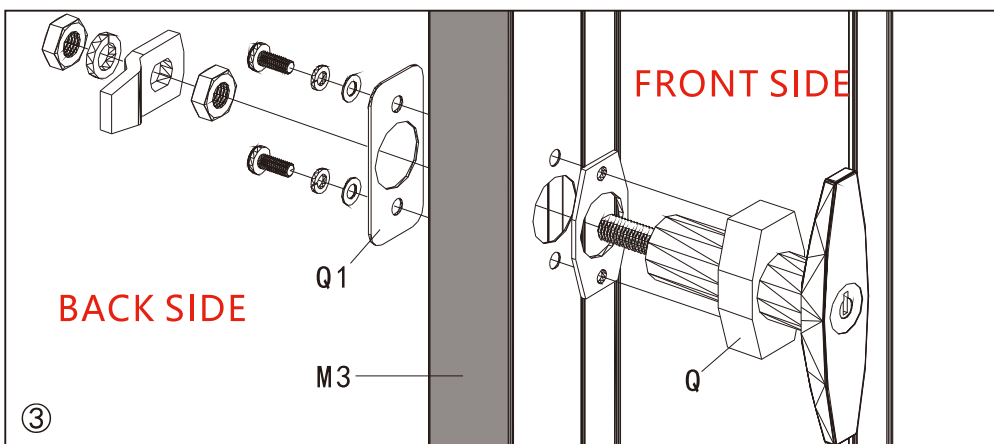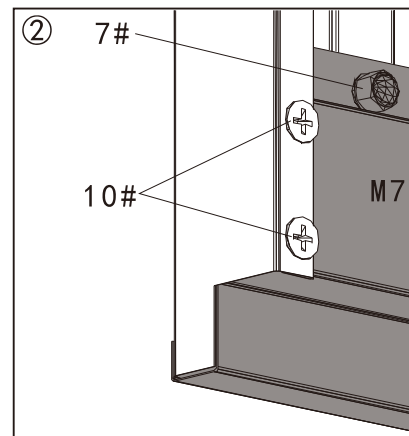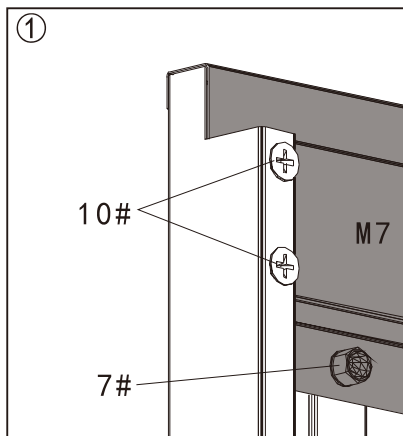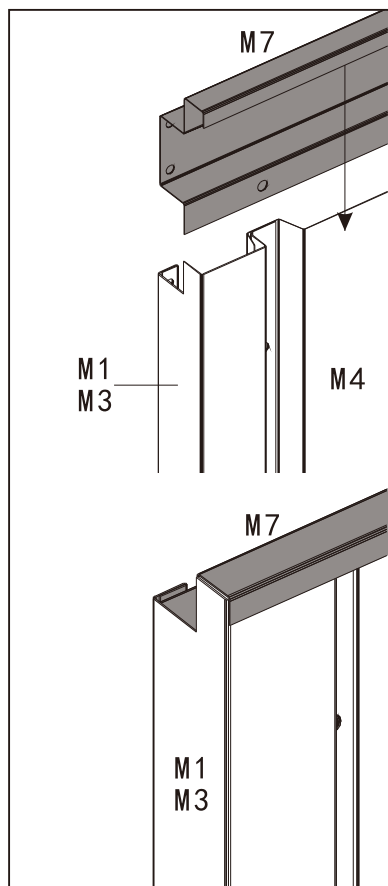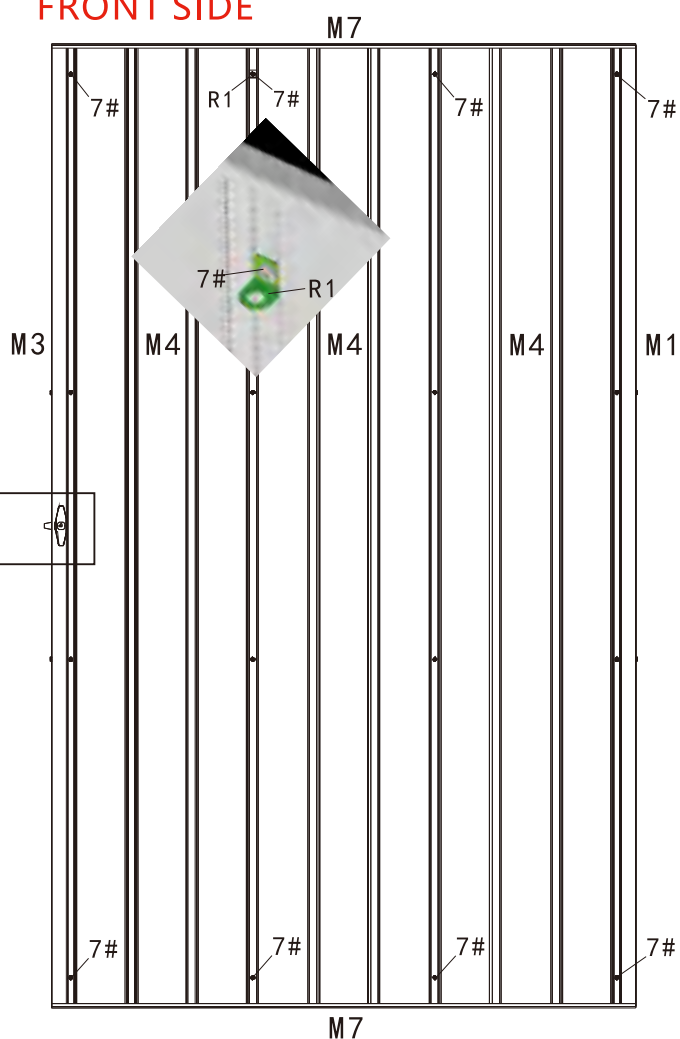


Front Door Assembly (Left Side)

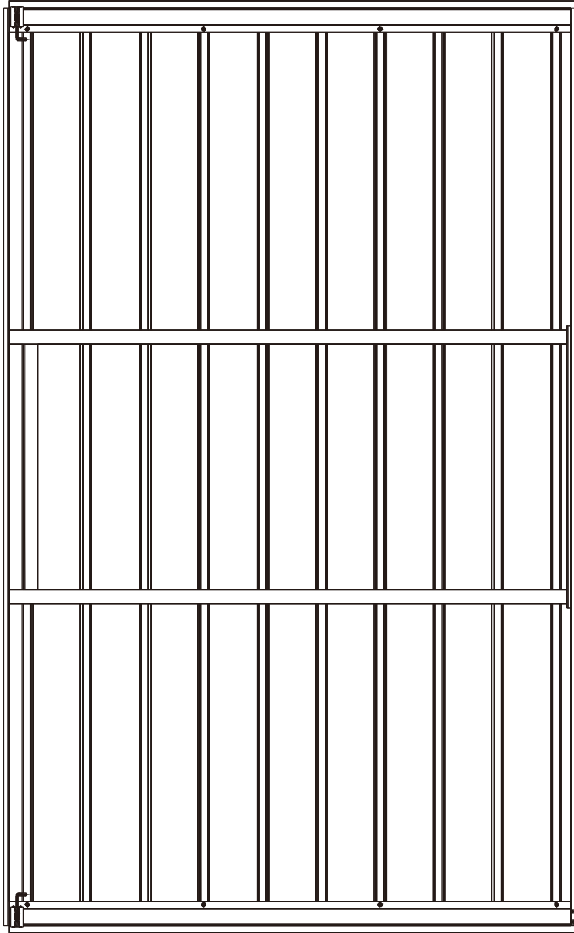

BACK SIDE

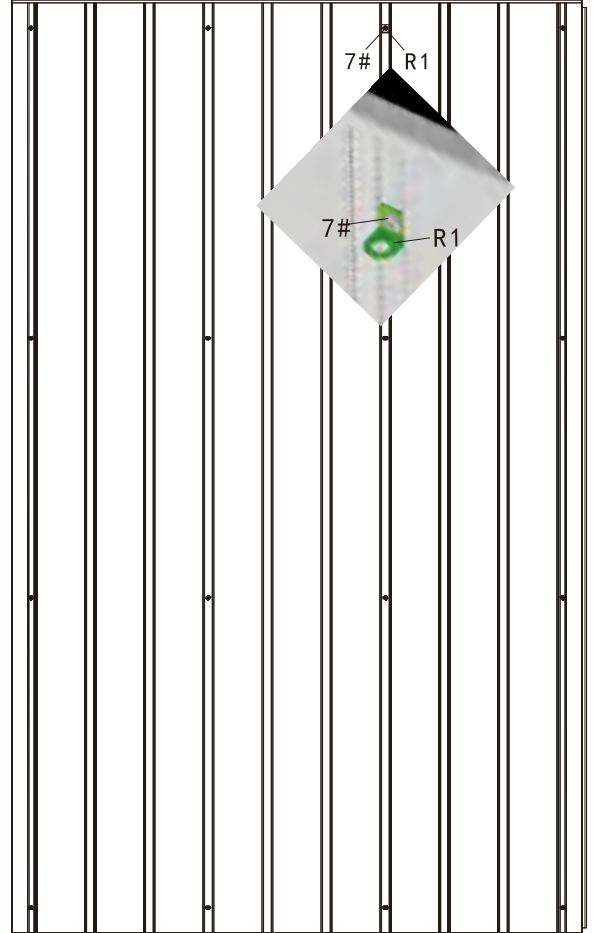


FRONT SIDE

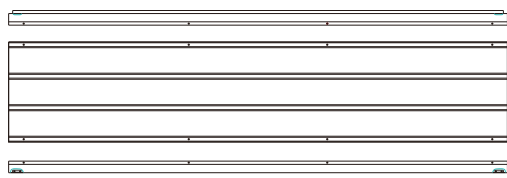

M2-x1

M4-x3

M1-x1

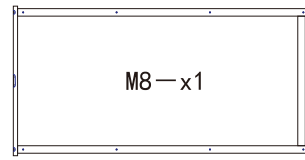


M8-x1



10# - x4




11# - x8

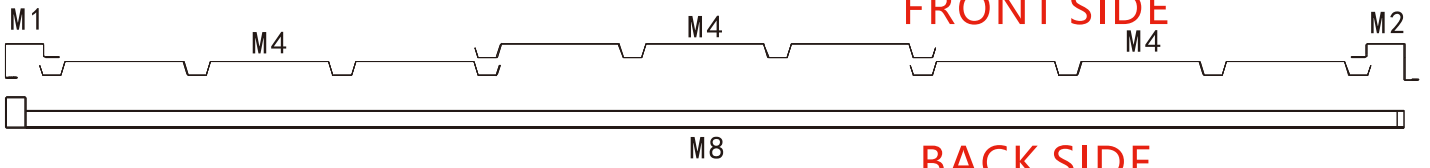

FRONT SIDE

BACK SIDE


①

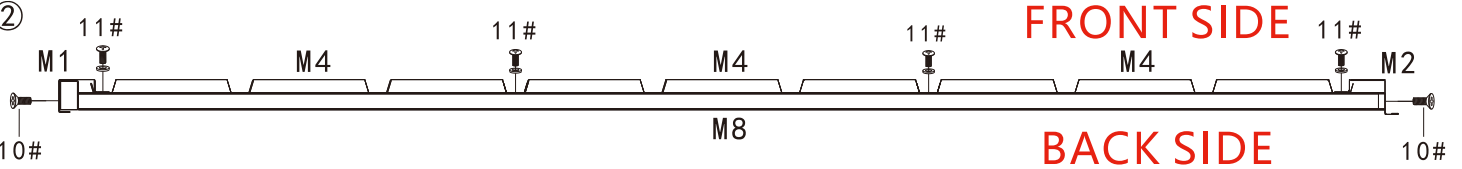

FRONT SIDE

BACK SIDE

②

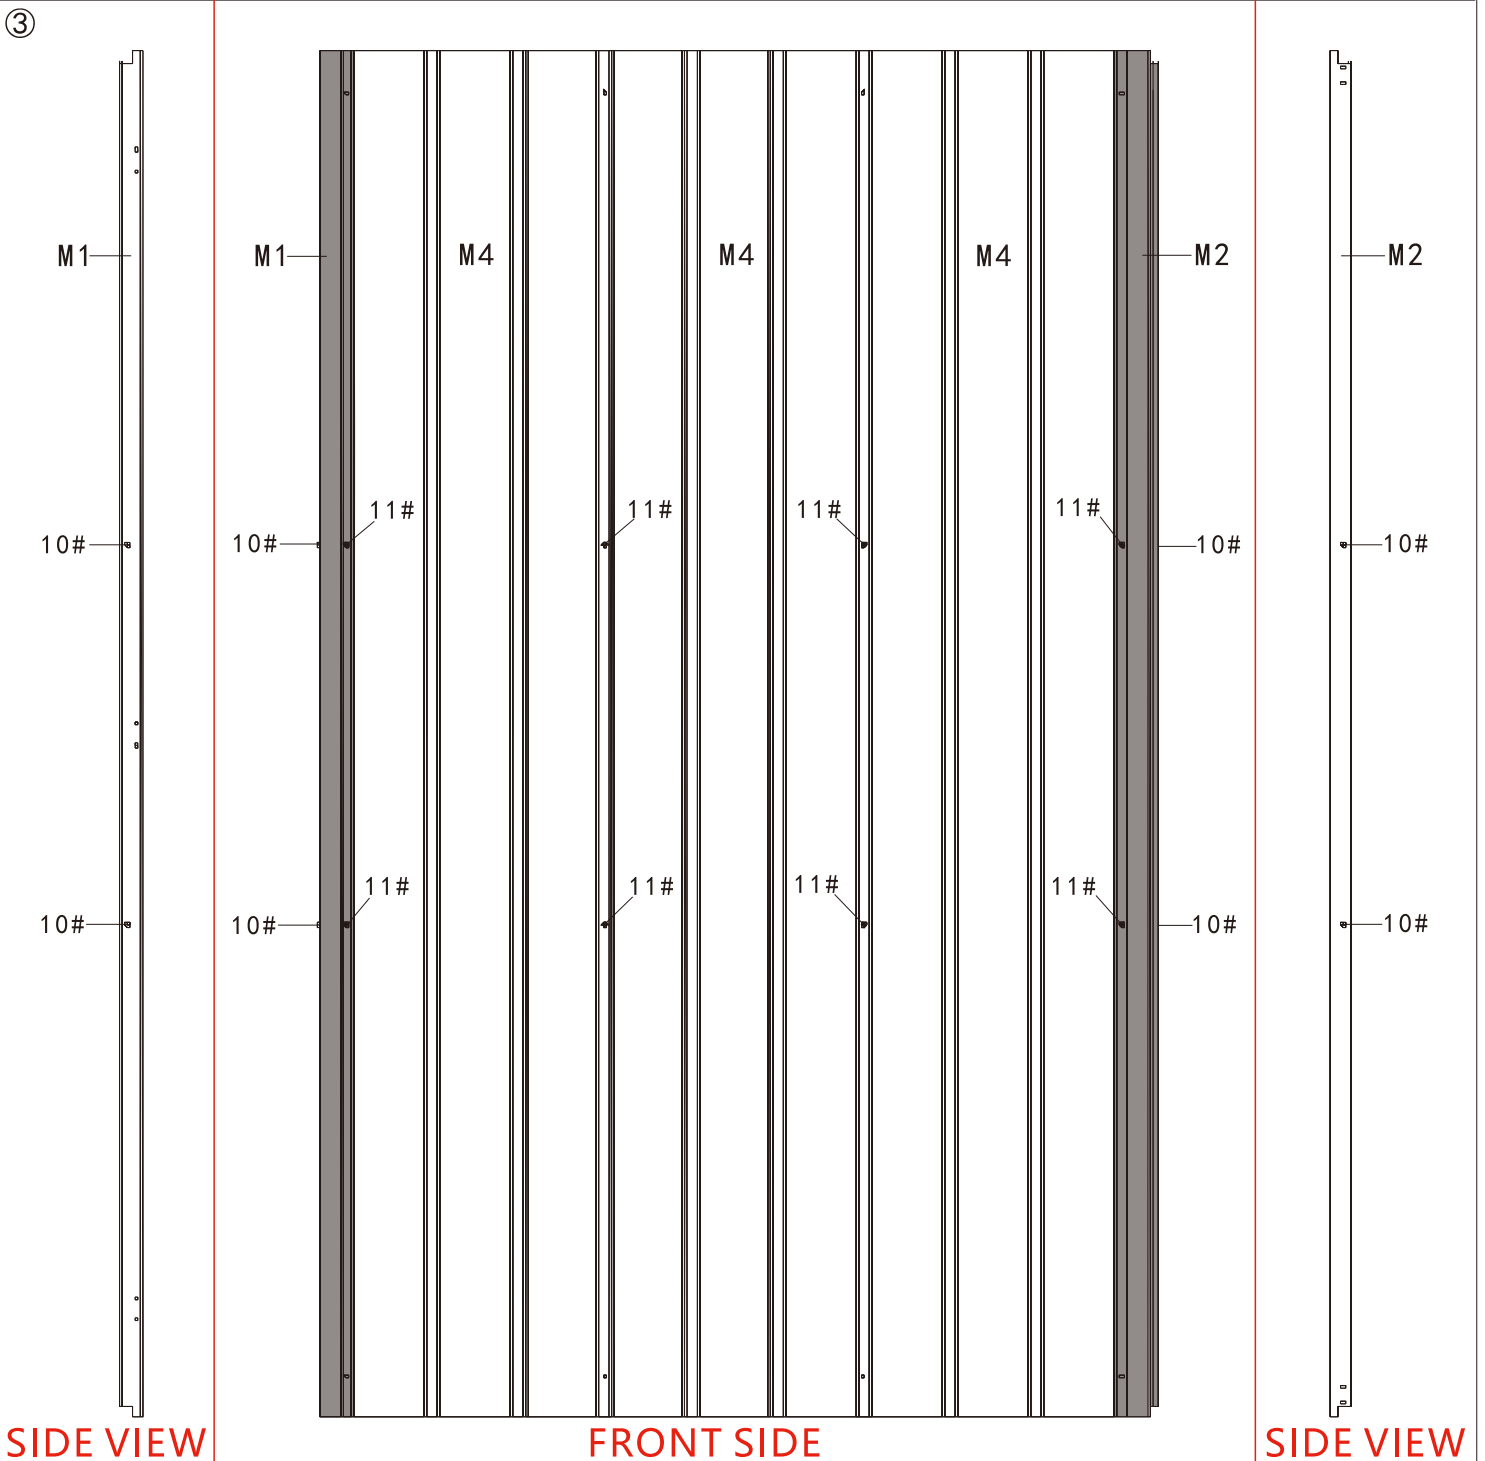

③

SIDE VIEW

FRONT SIDE

SIDE VIEW

1794(12X30)-36-2









M5—x1
M6—x1

R1—x1


10# — x8
7# — x8

BACK SIDE


FRONT SIDE

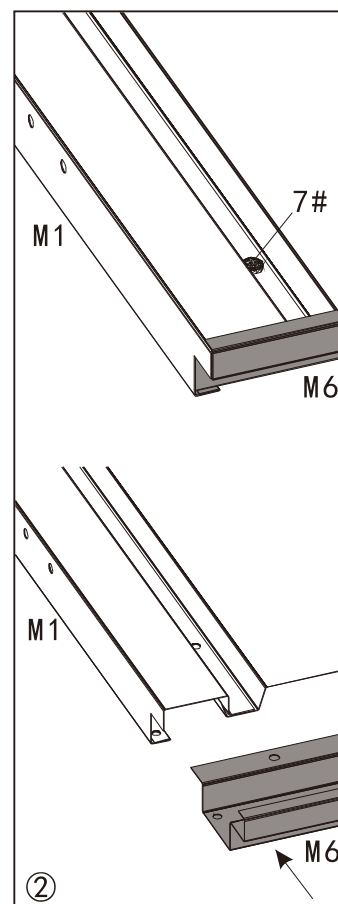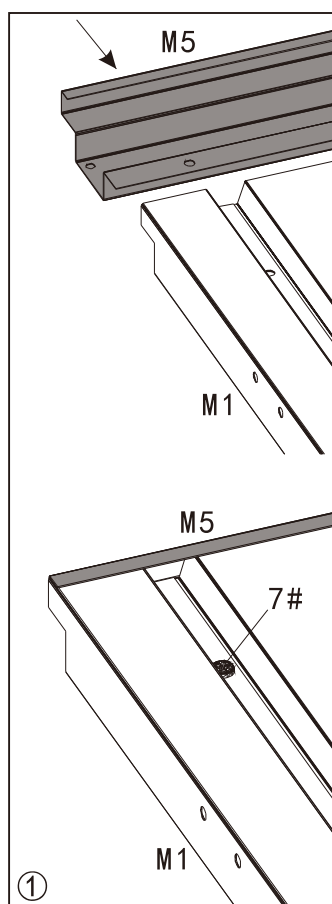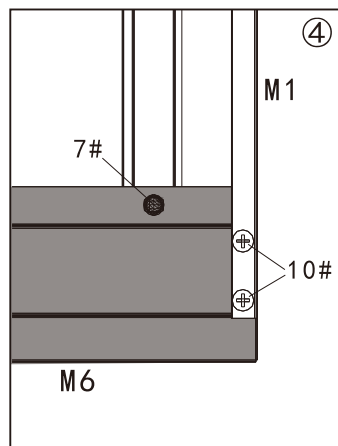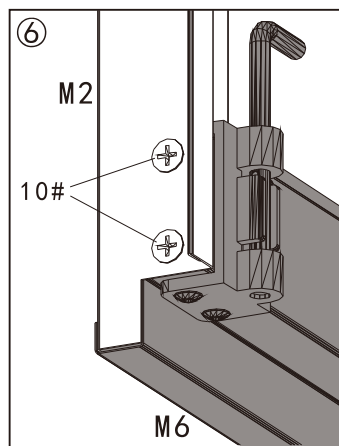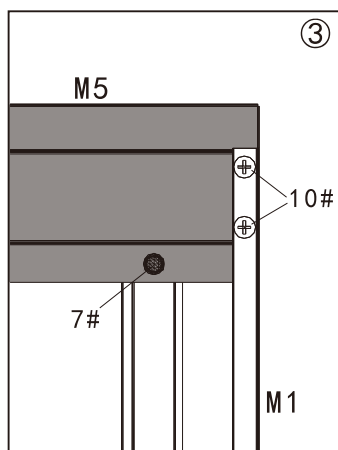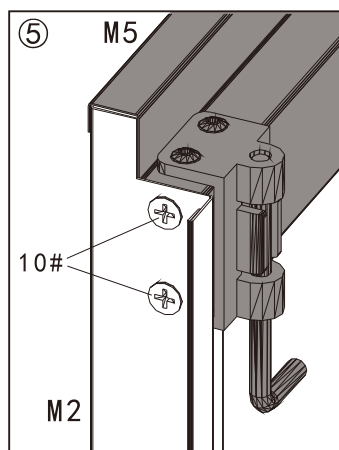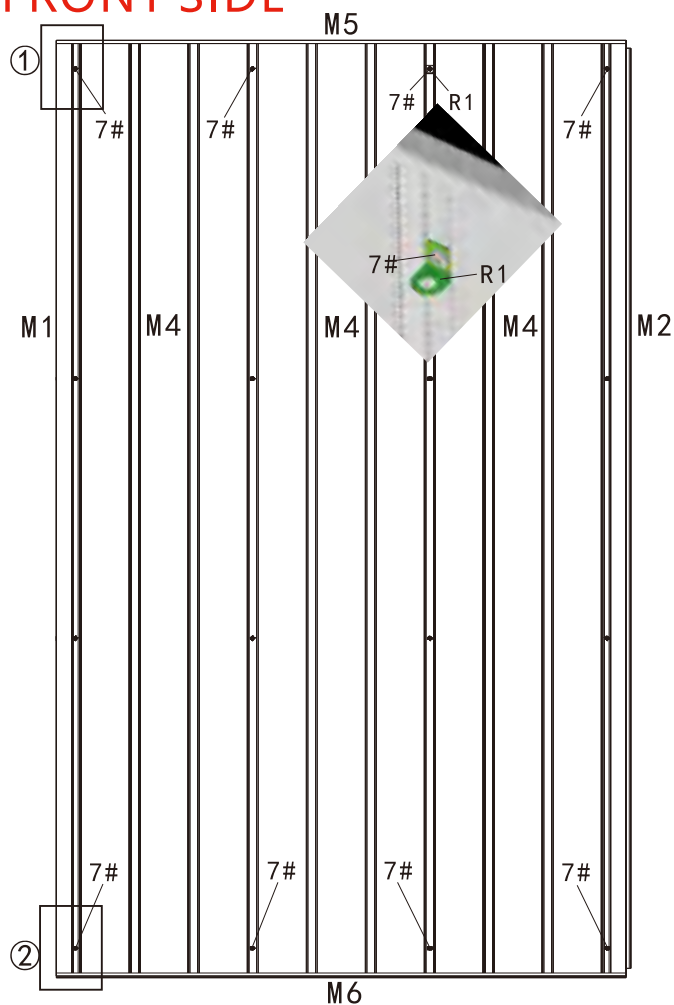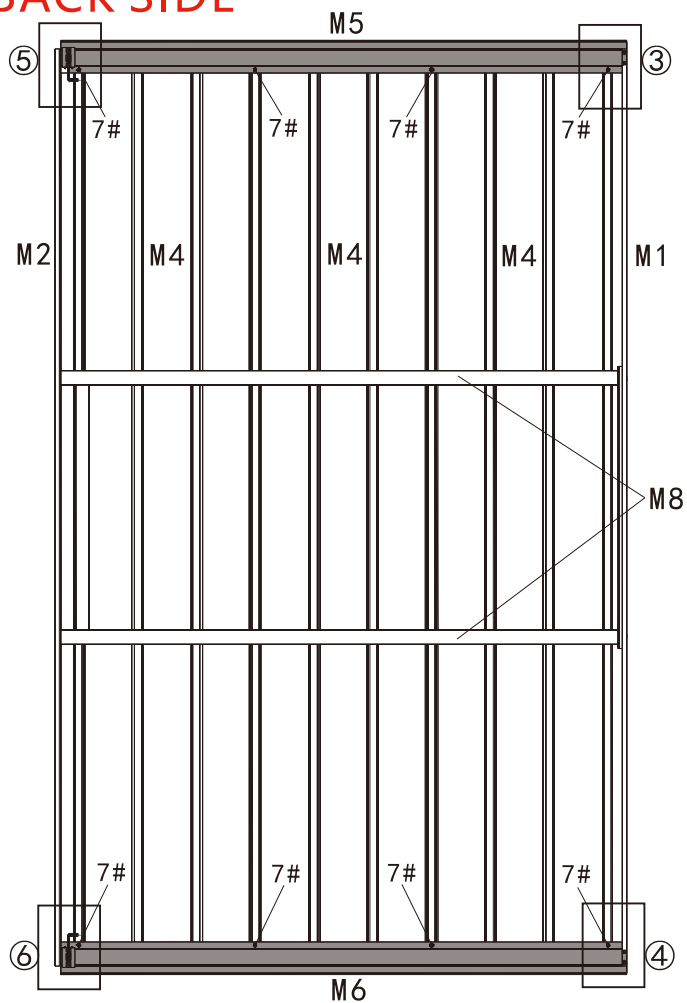





Side Door Assembly

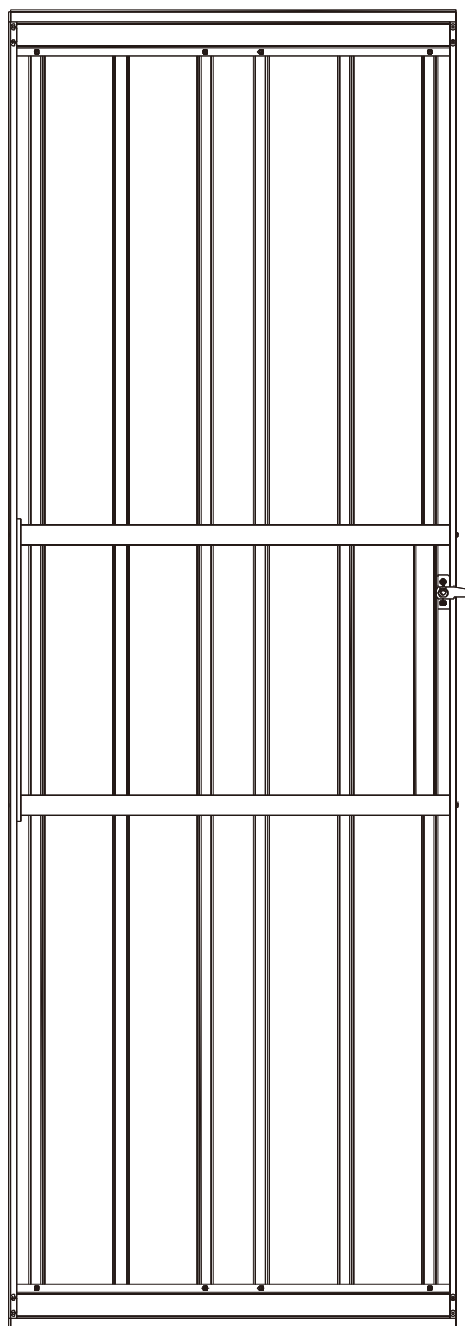

BACK SIDE

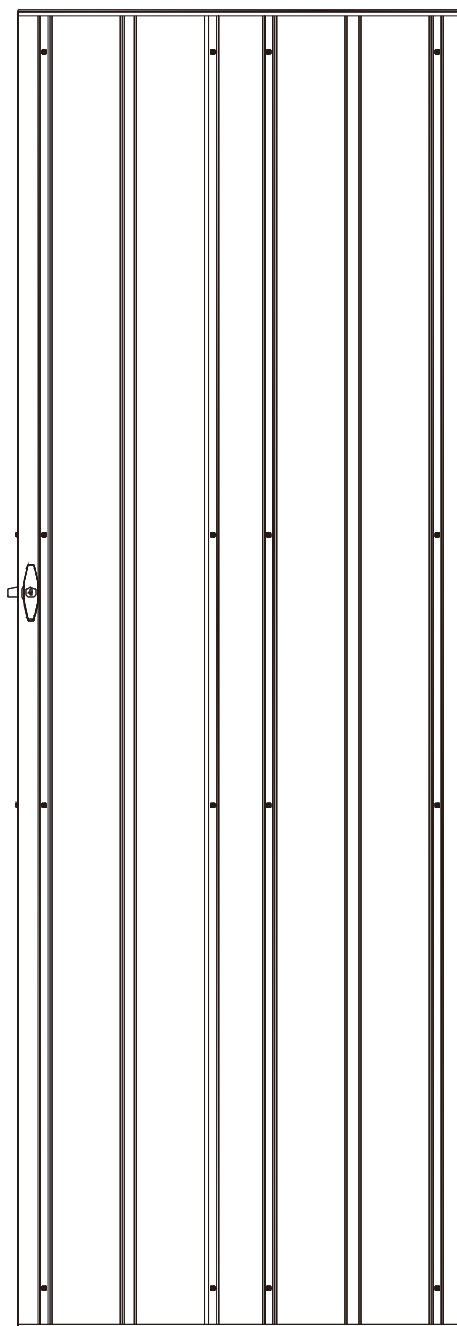

FRONT SIDE

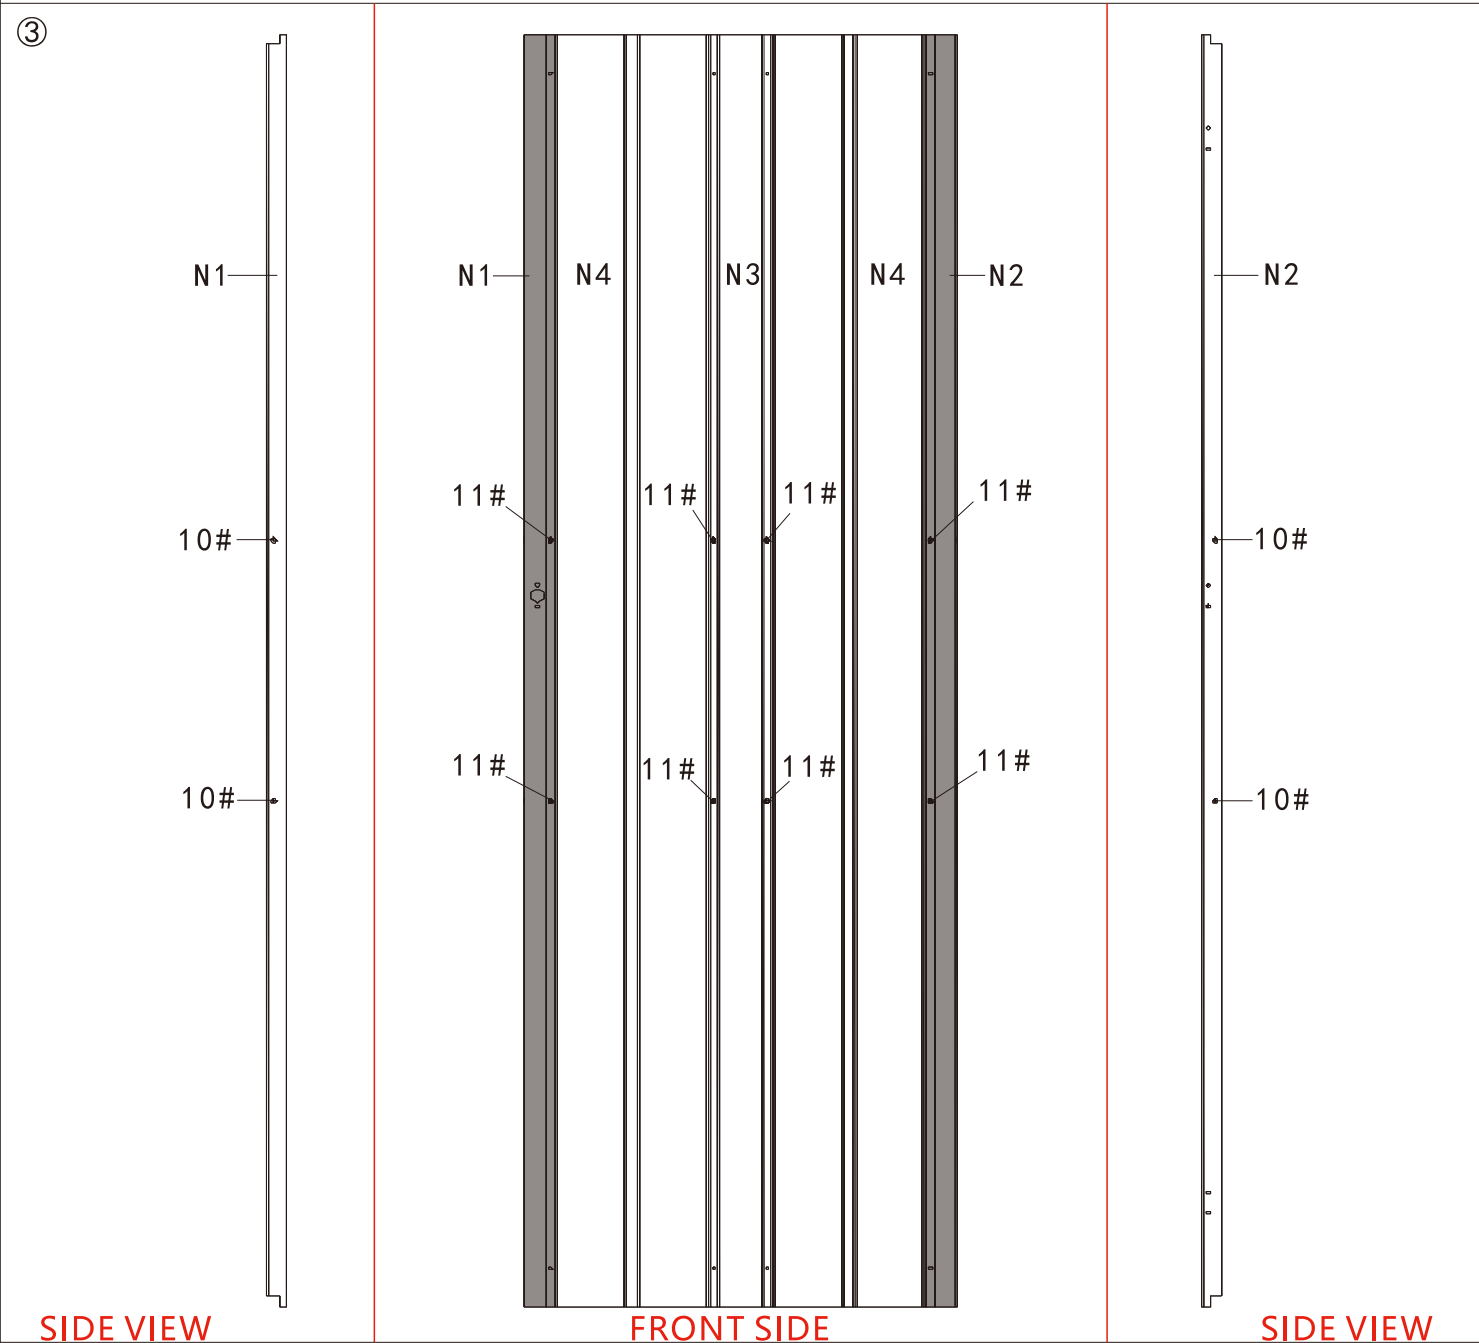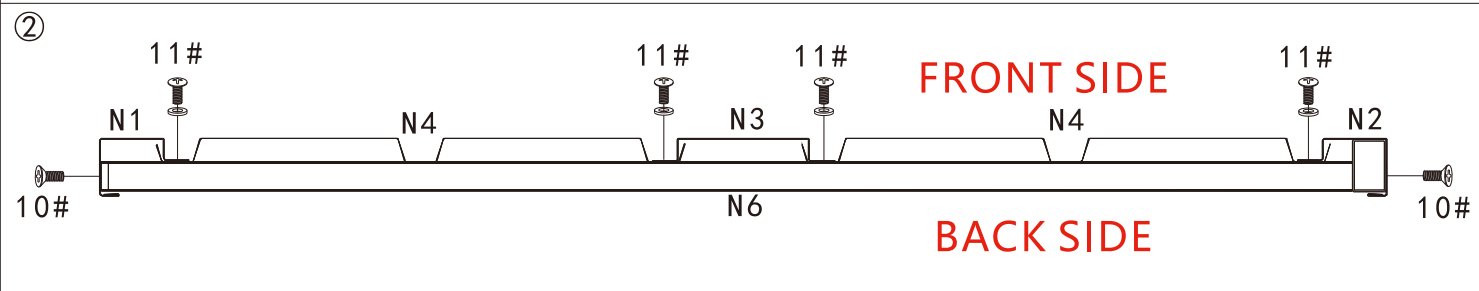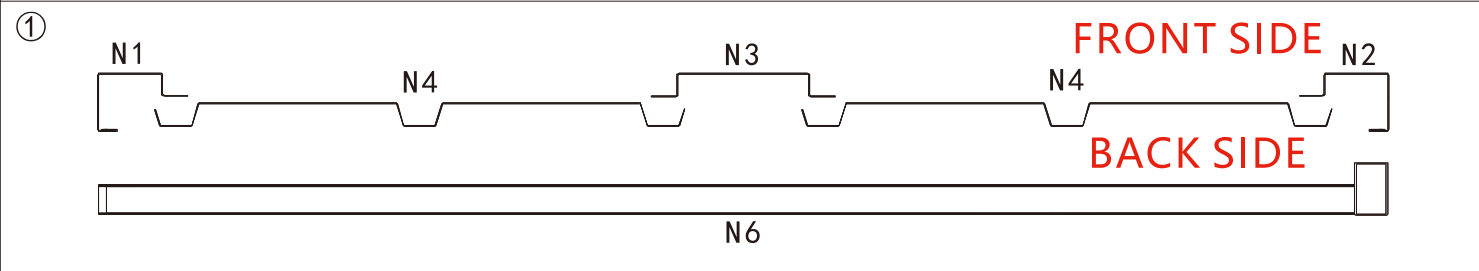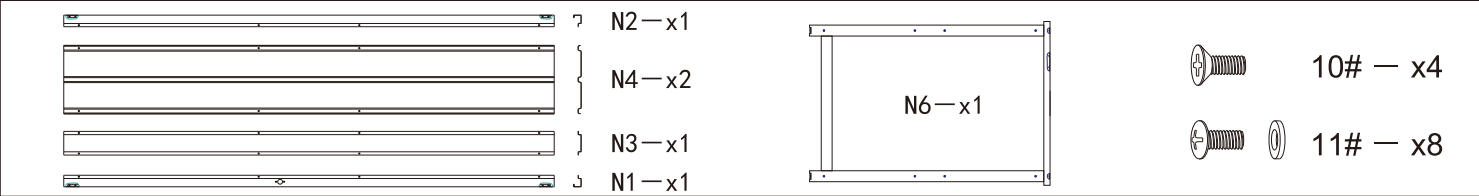



N5—x2



10# — x8



7# — x8









Q—x1



Q1—x1

BACK SIDE

FRONT SIDE

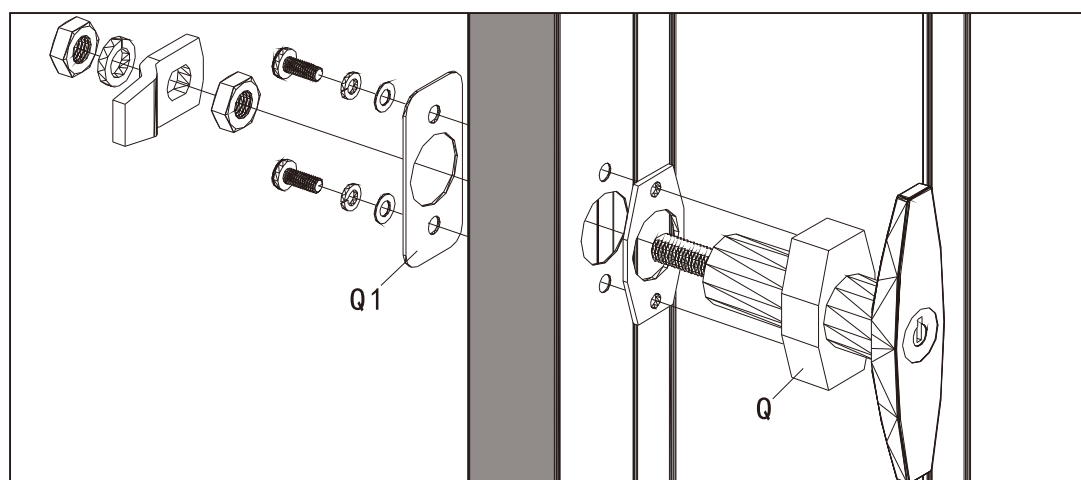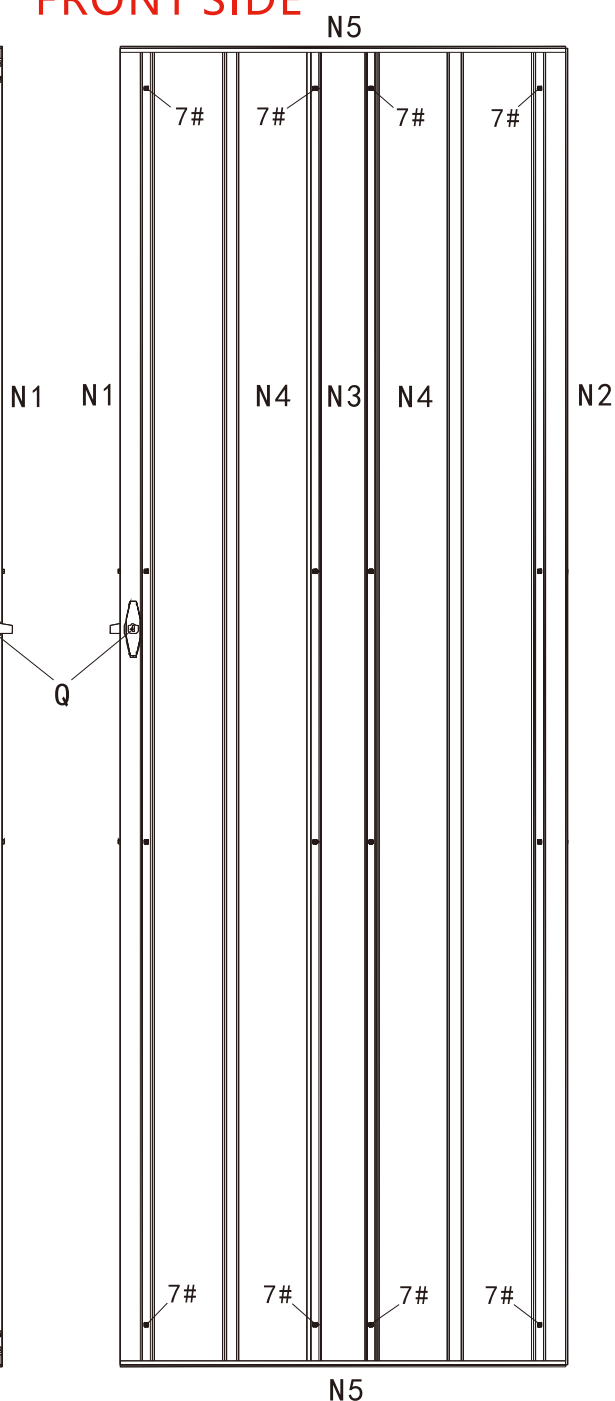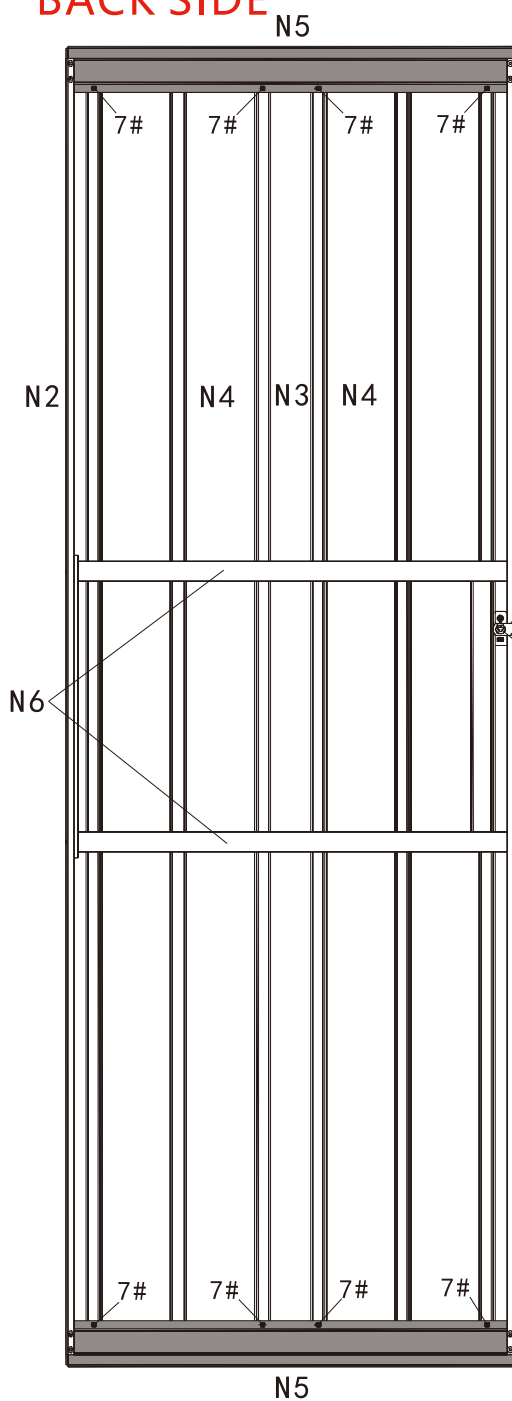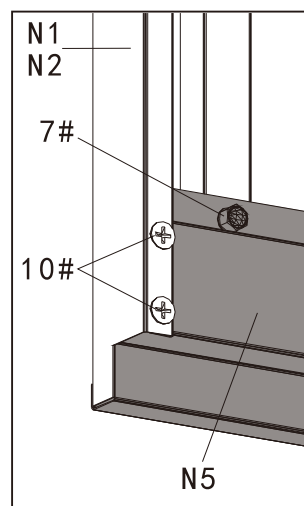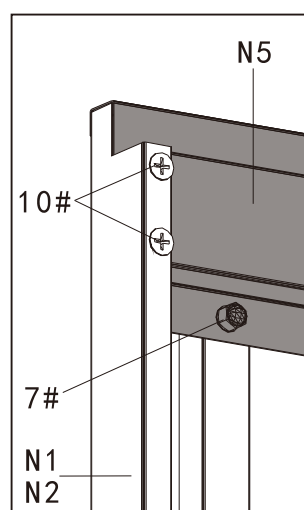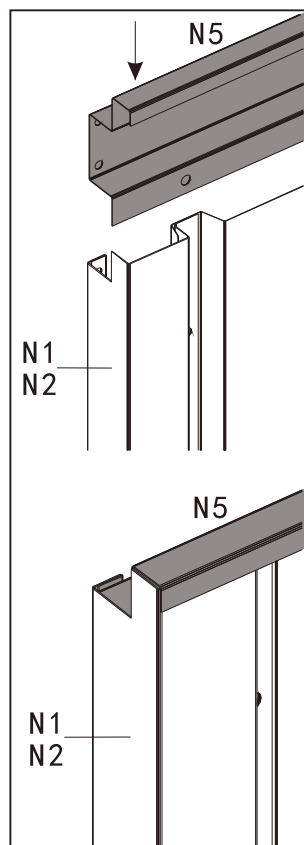

1794(12X30)-37-3





P1—x6



10# — x6






12# — x12

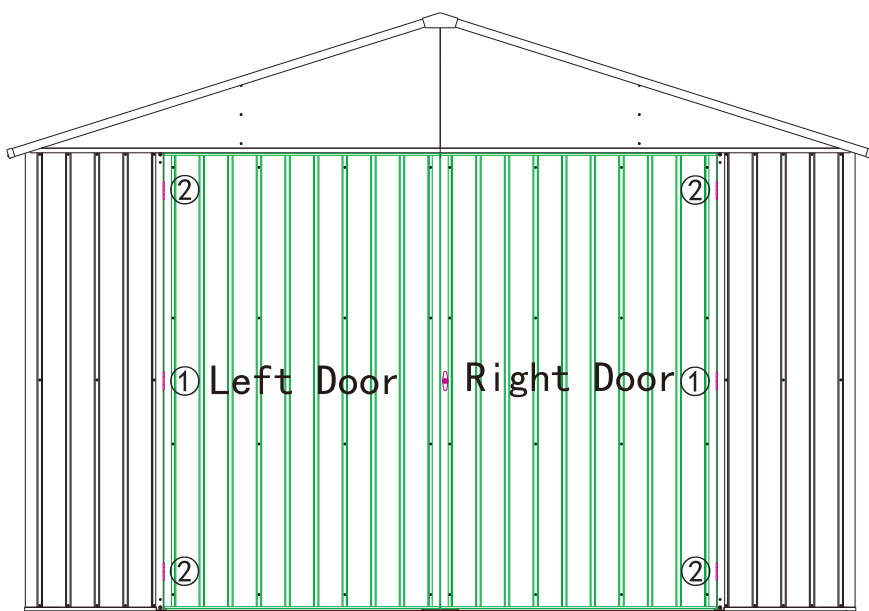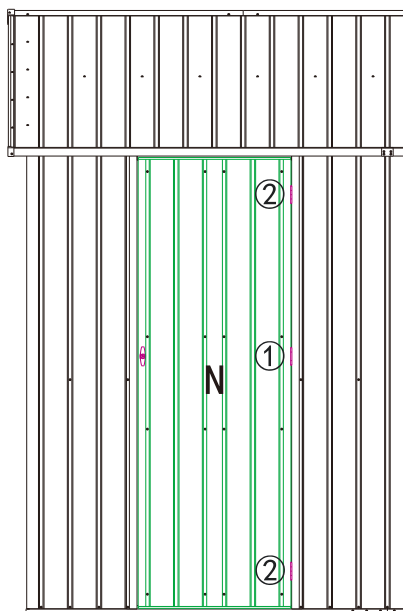

Front Door M (There is a latch on the left door/There is a handle on the right door) & Side Door #N Assembly:

①: Use 2 Bolts #10 to secure the hinge to the door frame.






②: Use 2 Bolts #12, gaskets and nuts to secure the hinge and Lining board #P1 to the door frame.
(Lining board #P1 is on the inside of the door frame).

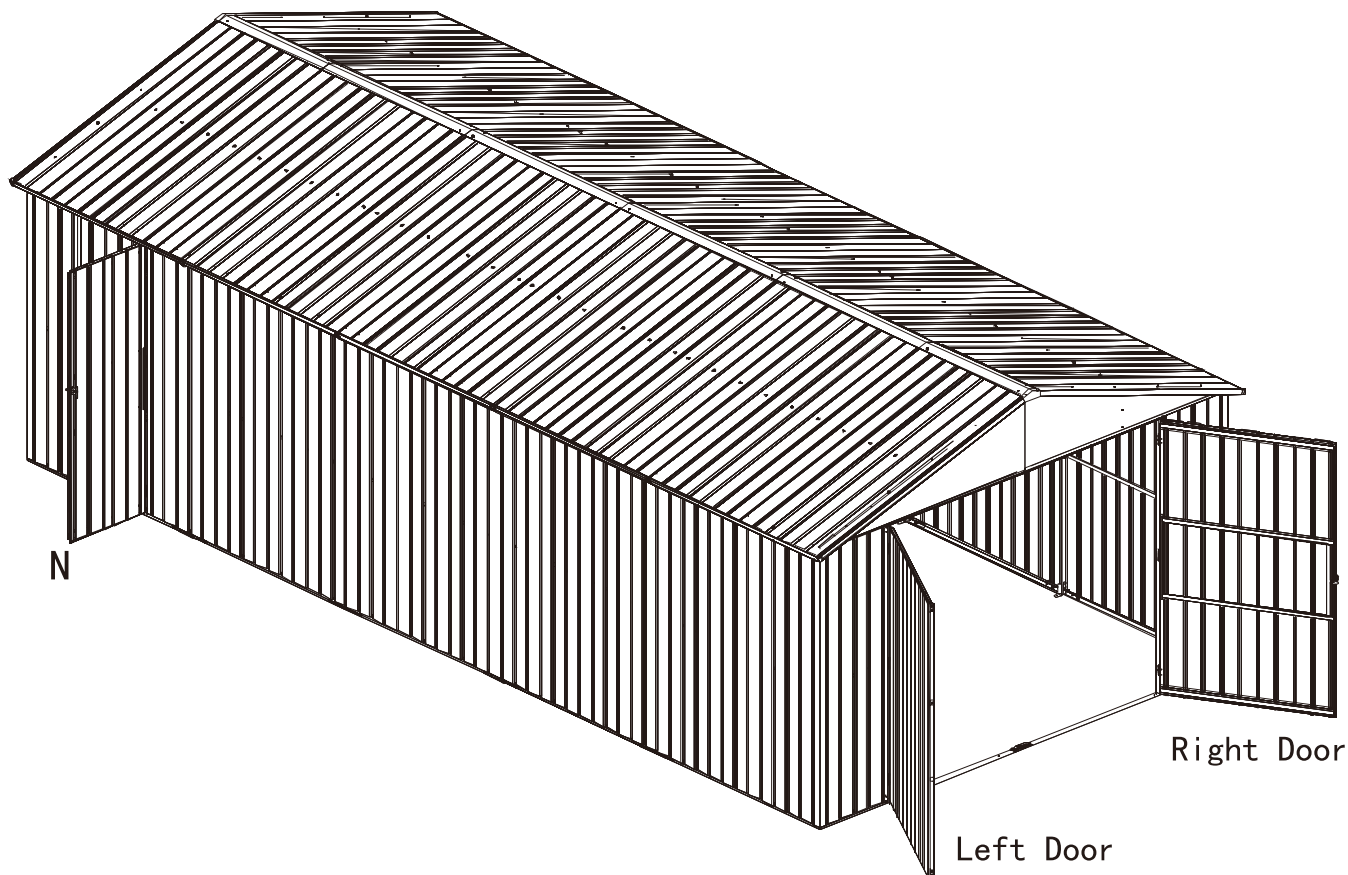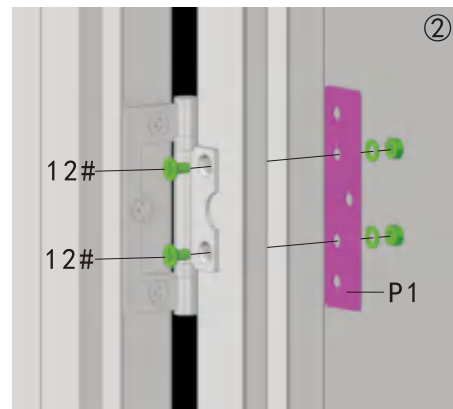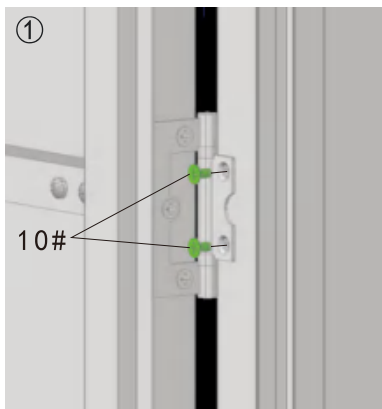


①/②: Insert the latch and lock the left door.


③: Open the door: insert the key, rotate 180 counterclockwise, and rotate the handle counterclockwise to open the door.

Lock the door: close the door, insert the key, rotate the handle clockwise, then rotate the key 180 clockwise and pull the key out.

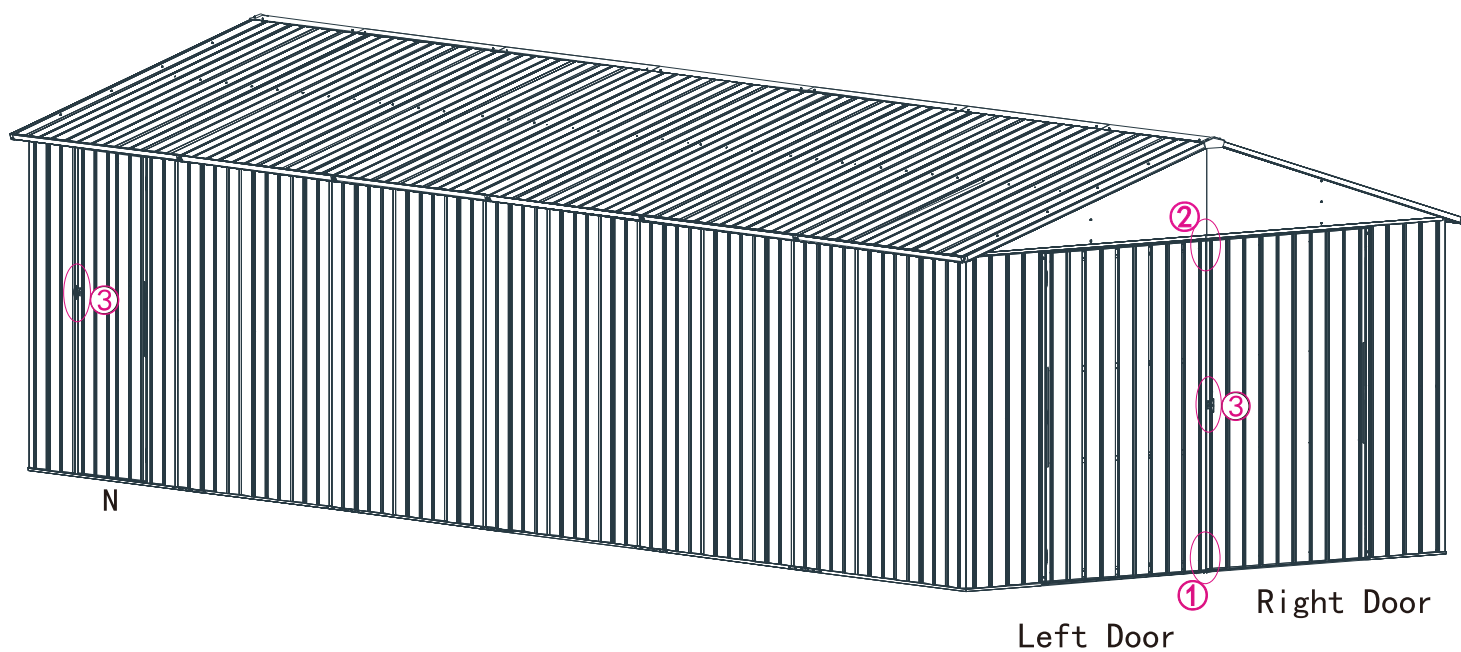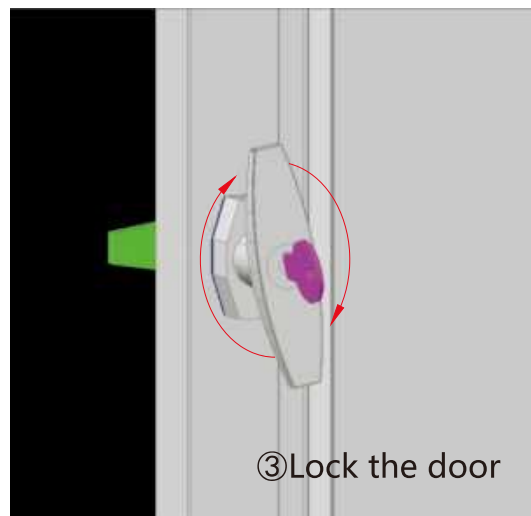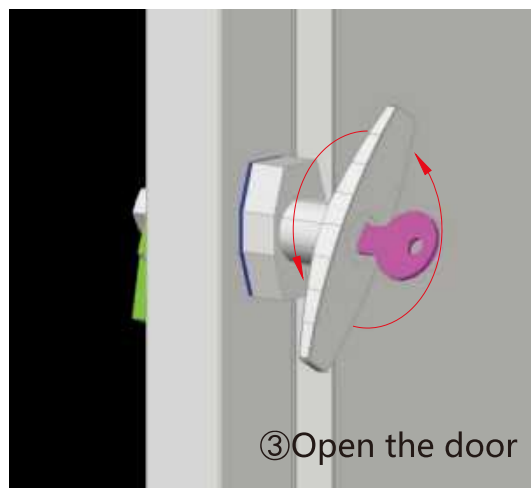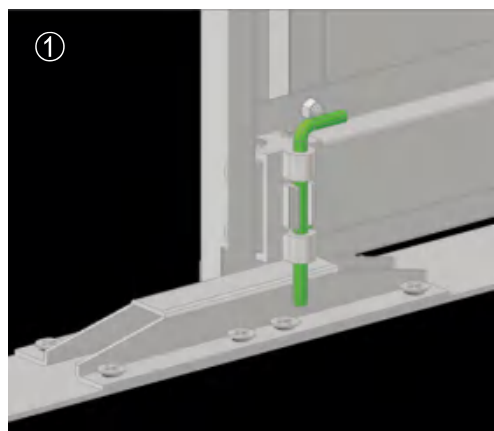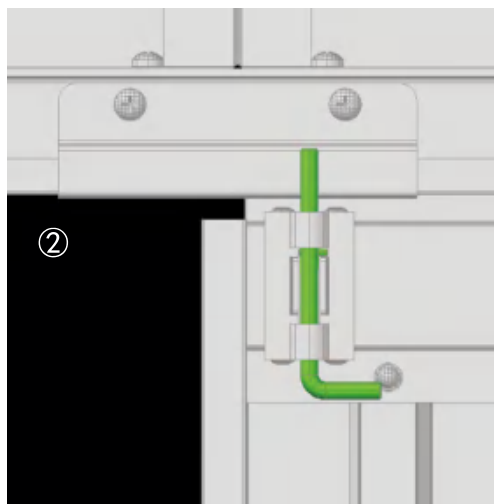

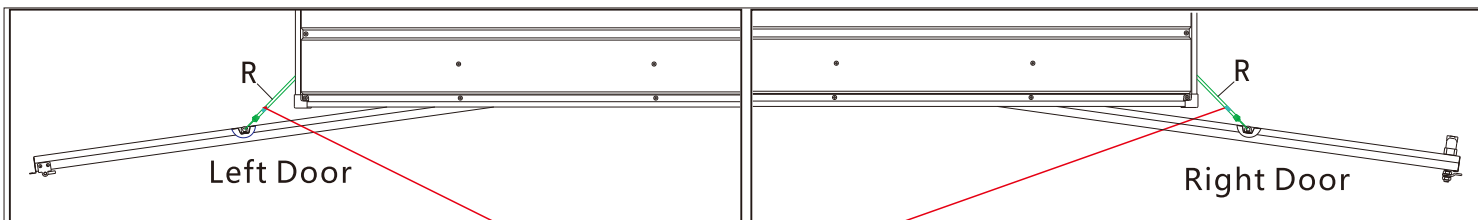

Use Windbreak rope hook #R to fix the door when opening.

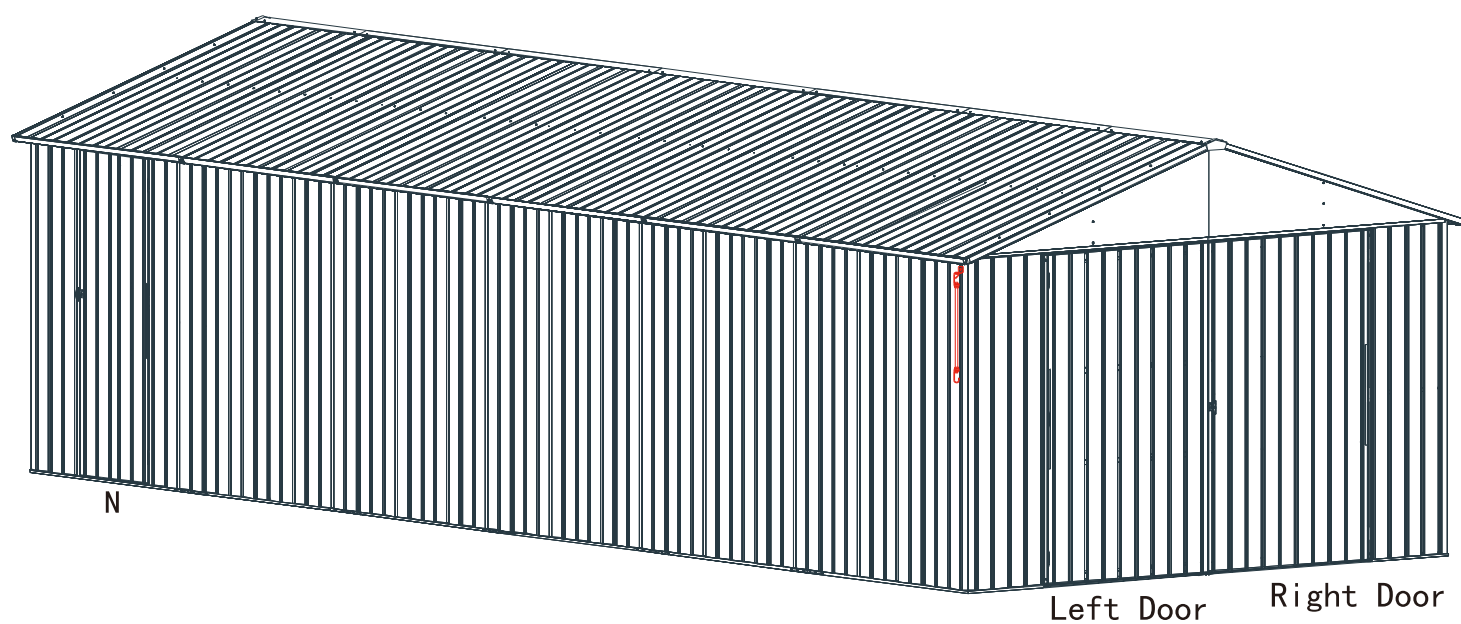



Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:



After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.