


INSTALLATION INSTRUCTIONS

Model#PV09

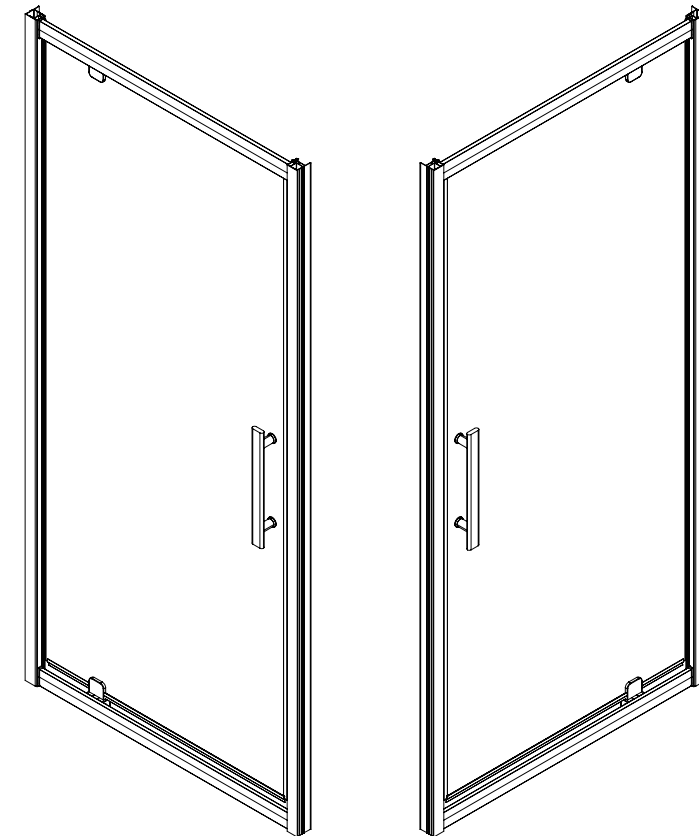

**THANK YOU FOR PURCHASING OUR PRODUCTS.
FOR IMMEDIATE HELP WITH ASSEMBLY OR
PRODUCT INFORMATION EMAIL US:**



Global Customer Support
Toll-Free:1-844-660-3960
Email: SUPPORT@CUSTOMERSERVICEYIBAL.COM
Hours: Mon-Fri, 9:00 AM - 5:00 PM (EST)

NOTE:Please include your order /Dand the product model numberinyour email.

▲ **Important Notice Before Installation:**

Please prepare Silicone Sealant in advance (not included). It is crucial to use the Silicone Sealant in the final step to prevent the risk of water leakage. Refer to Page 12 for its application location.


◆ **General Information**

Inspect the product immediately upon receipt for transit damage, missing parts, or manufacturing defects. Claims for damage reported later will not be accepted. Handle the product with care, avoiding impacts or shock loading to the glass edges and surfaces.

◆ **Safety Notes**

Safety glass cannot be modified or reworked. Read all instructions carefully before installation. Exercise extreme caution when drilling into walls to avoid hidden pipes or electrical wiring.

Note: This product is heavy—two-person installation is recommended.



◆ **Aftercare instructions**

Clean the shower regularly with mild soap and water. This is especially important in hard water areas to prevent lime scale buildup. Avoid: Gritty or abrasive cleaners. Chemical use: Strong chemicals may be used with caution. Contact the cleaner manufacturer if unsure. Retain these instructions for future reference.


◆ **Adjustments**

The aluminum track can be adjusted by up to 4 inches (10 cm) for width modifications. If the adjusted width is smaller, the entrance size will be reduced accordingly.


◆ **Installation Tips**

Measure the finished opening before installation to confirm the correct model size. The door features reversible installation (it can be installed to open from either the left or right side) by following the same steps.

Tools Required






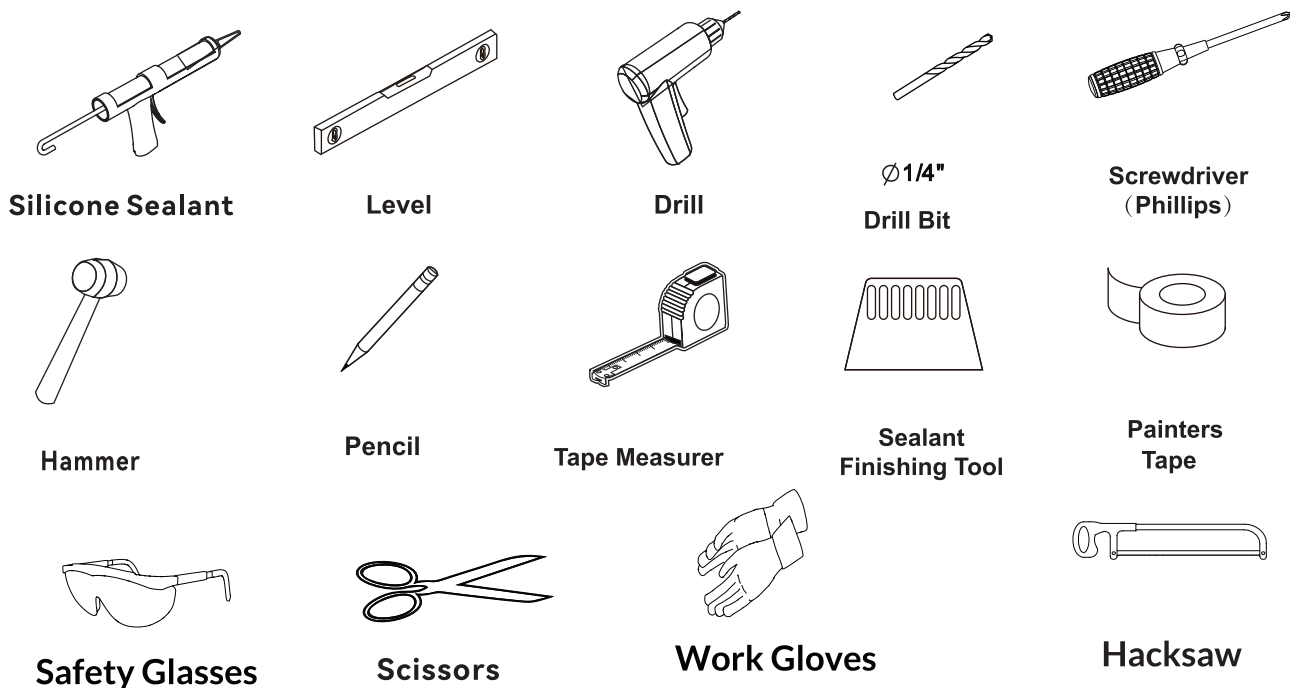


PARTS LIST

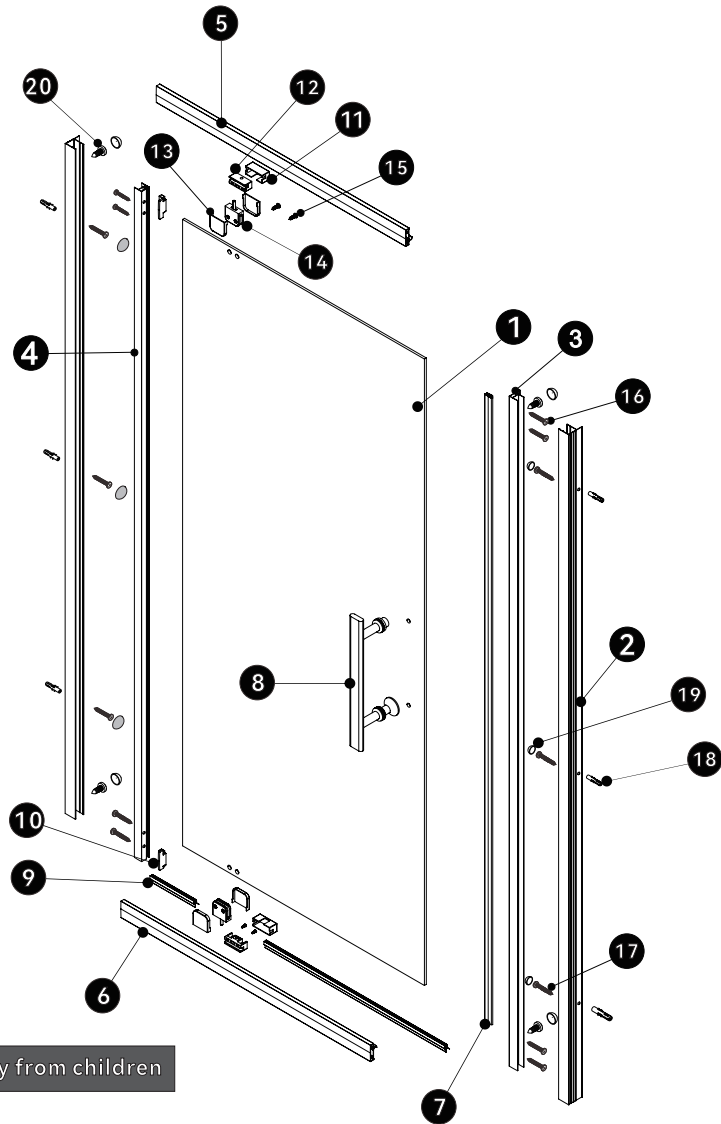

! keep small parts away from children


PACKING LIST

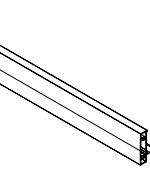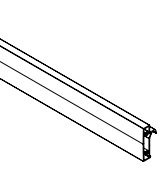Pivot Door	Wall Jamb	Magnetic Wall Jamb	Linking Pillar	Top Rail	Bottom Rail	Magnetic Seal	Shower Door Handle
							
1 1 PCS	2 2 PCS	3 1 PCS	4 1 PCS	5 1 PCS	6 1 PCS	7 1 PCS	8 1 PCS
Door Sweep	Top and Bottom Rail Bracket	Pivot Base Cover	Pivot Base	Pivot Cover	Pivot Assembly	ST4 × 12 Self-Tapping	ST3 × 32 Self-Tapping
							
9 2 PCS	10 1 PCS	11 2 PCS	12 2 PCS	13 4 PCS	14 2 PCS	15 4 PCS	16 8 PCS
ST4 × 32 Self-Tapping	M6 Wall Anchor	Wall Jamb Screw Cap	St4x10 Self Tapping	1/8" Twist Drill			
							
17 6 PCS	18 6 PCS	19 10 PCS	20 4 PCS	21 1 PCS			

INSTALLATION STEPS
STEP 1-Measurement

Model Dimensions

A Product Height	B Installation width	C Opening Width	D Entrance Height
72"	28"~ 29.5"	20"	68"
	30"~ 31.5"	22"	
	32"~33.5"	24"	
	34"~35.5"	26"	

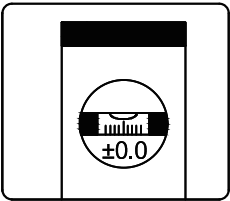


The installation wall must be plumb.

3/8" (10 mm) out-of-plumb adjustment is allowed within the wall profile.




Verify that the threshold and walls are level.

The threshold must be level.

2 3/8" minimum threshold height is required.

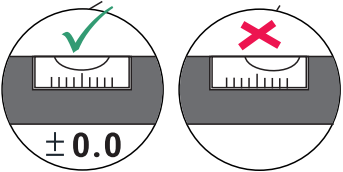

Threshold must be level

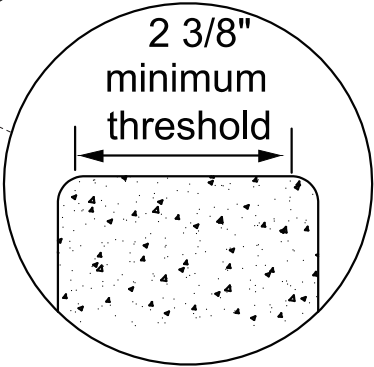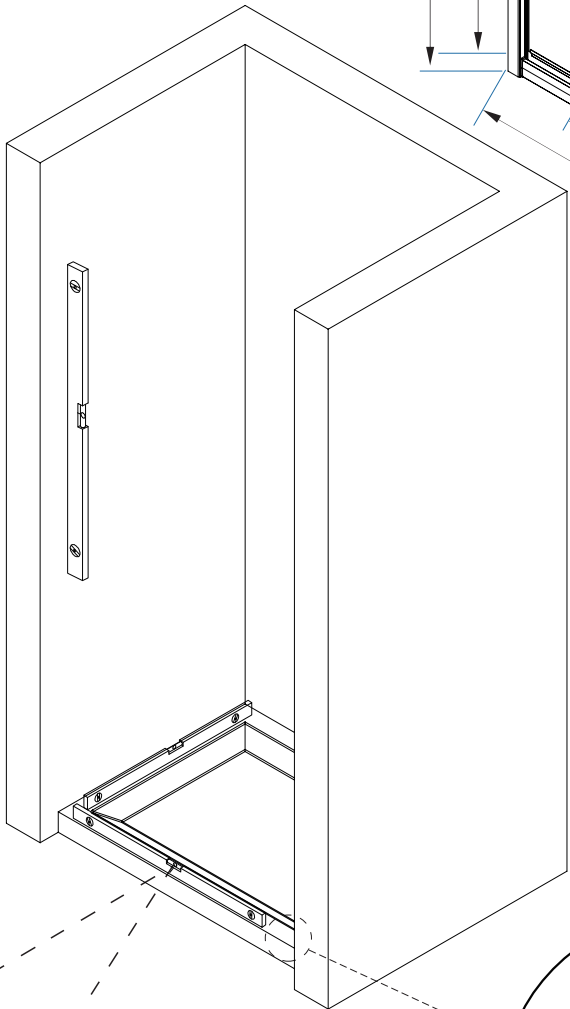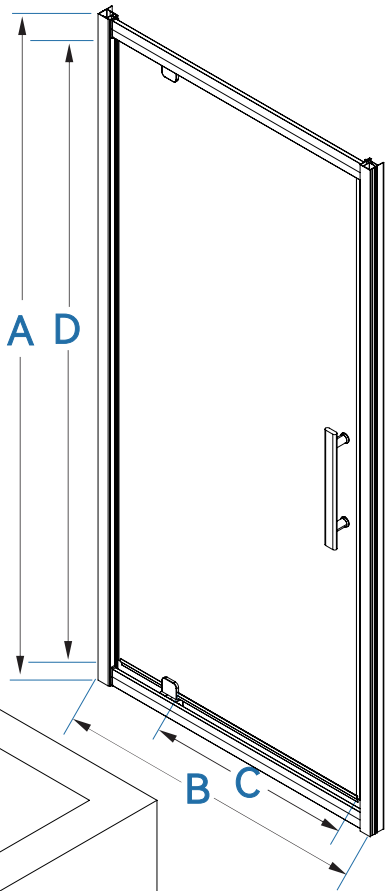


3.

INSTALLATION STEPS
STEP 2-Wall Jamb Installation


Parts Required:

Part No.	Description	Qty
5	Wall Jamb	2
18	M6 Wall Anchor	6

1. Use a level to ensure the wall jamb is perfectly plumb. Mark the drilling points through the mounting holes.

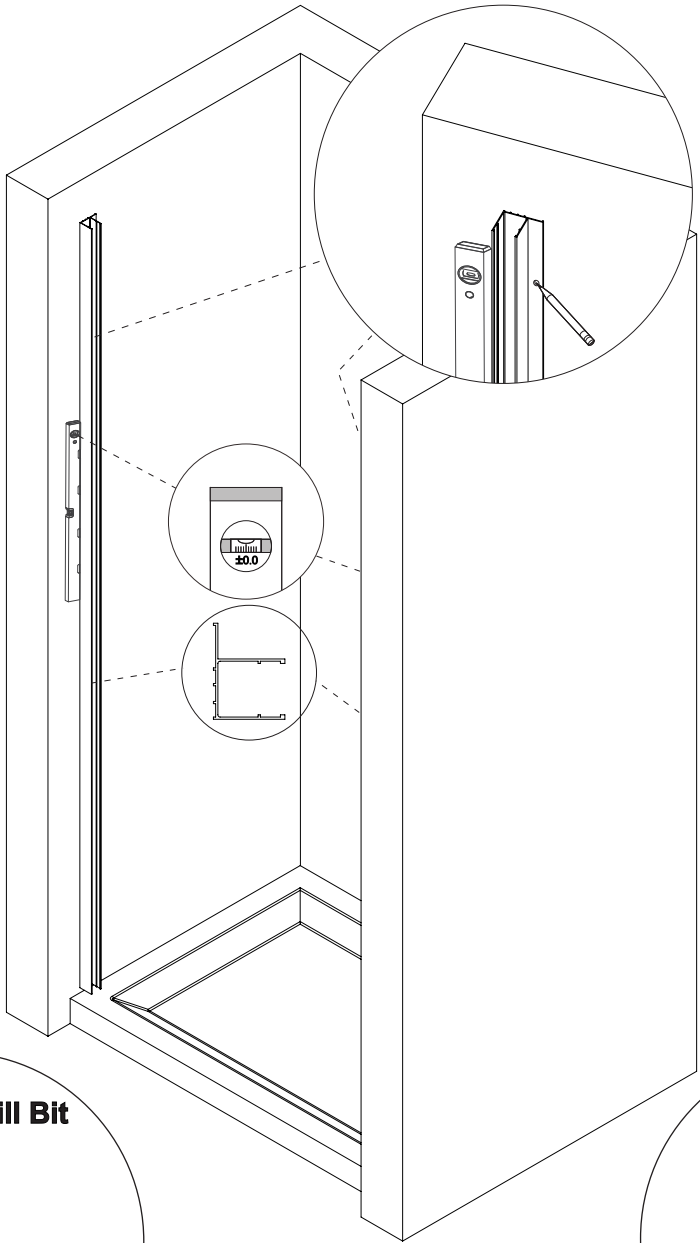

2.Using a power drill, drill holes at the marked locations.

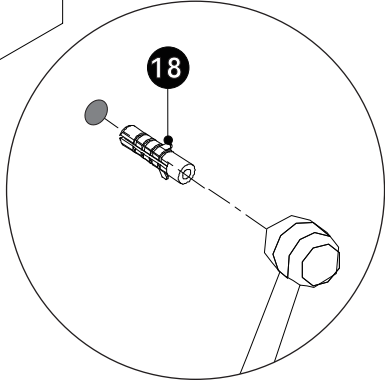


3.Gently tap the M6 wall anchors (#18) into the drilled holes until they are flush with the wall surface.


4.

INSTALLATION STEPS

STEP 3-Shower Enclosure Frame Assembly

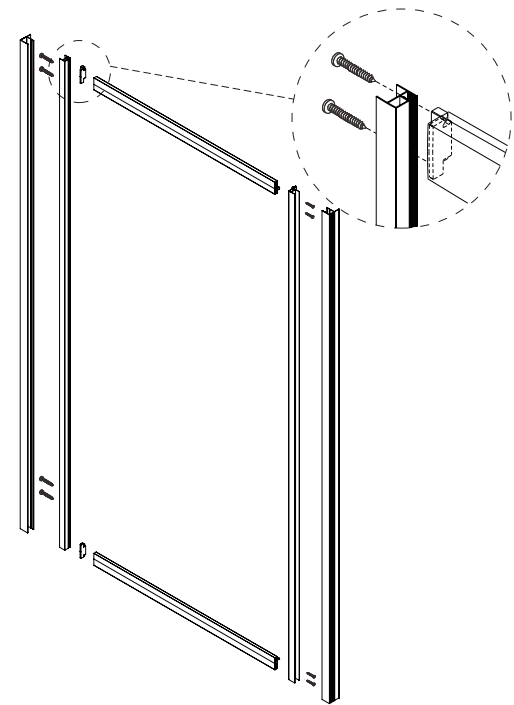


1. Connect top rail (#6) and bottom rail (#7) using top & bottom rail bracket (#10) and linking pillar (#4), then secure the assembly with ST3x32 self-tapping (#16).

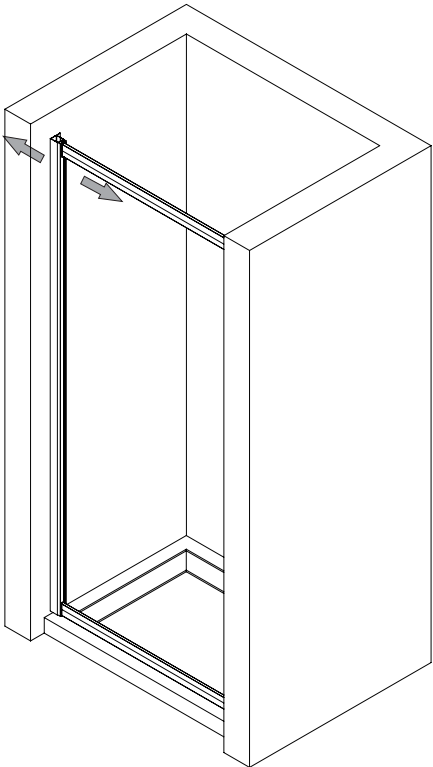

2.Position the frame into the opening. Push one side profile firmly against the wall.

Parts Required:


Part No.	Description	Qty
16	ST3 × 32 self-tapping	8
10	Top & Bottom Rail Bracket	1
2	Wall Jamb	2
17	ST4 × 32 Self-Tapping	6
3	Magnetic Wall Jamb	1
4	Linking Pillar	1
6	Top Rail	1
7	Bottom Rail	1

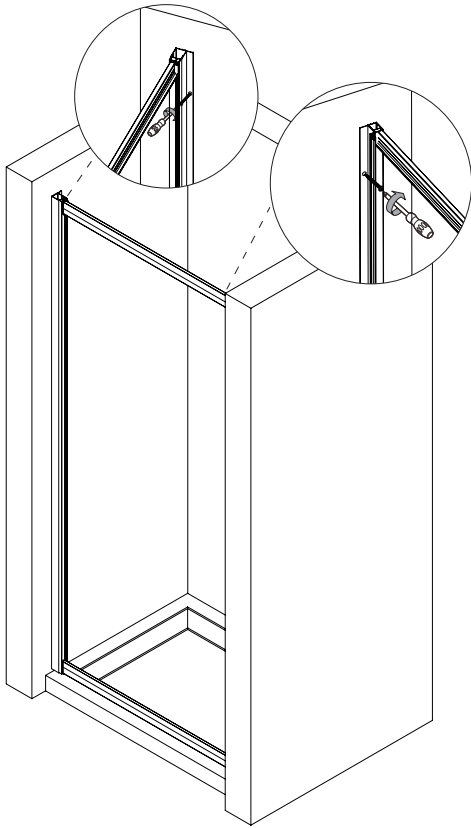


3. Secure the wall jambs (#2) to the wall using a Phillips screwdriver and ST4x32 elf-tapping screws (#17).

INSTALLATION STEPS


STEP 4- Secure the door jamb with screws

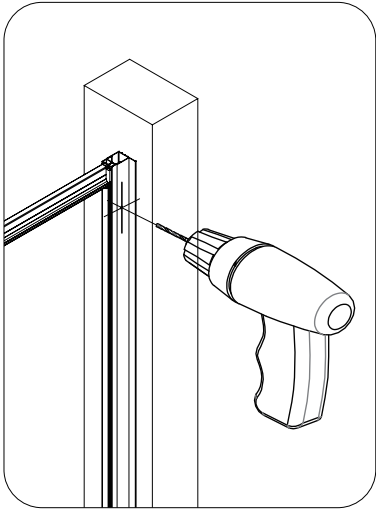

1. After final adjustment, use a 1/8" drill (#21) bit to drill poilt holes on the wall jamb (#2) and the magnetic wall jamb (#3).

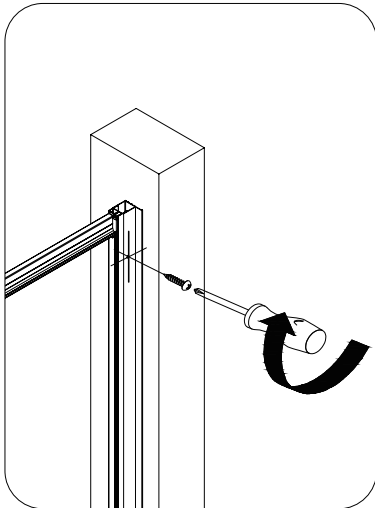


2. Secre the St4x10 self tapping (#20) with a Phillips screwdriver.

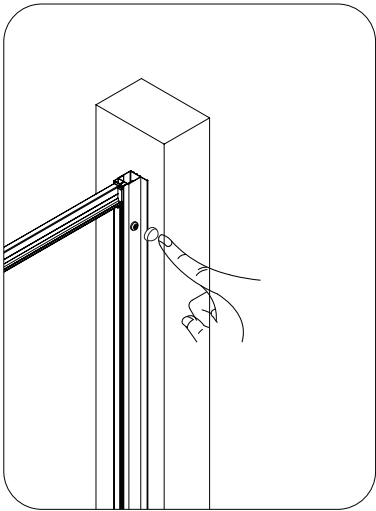

3. Secure the wall jamb screw cap (#19) to the screw holes positions.

Parts Required:


Part No.	Description	Qty
19	Wall Jamb Screw Cap	4
20	St4x10 Self Tapping	4
21	Ø 1/8" Twist Drill	1

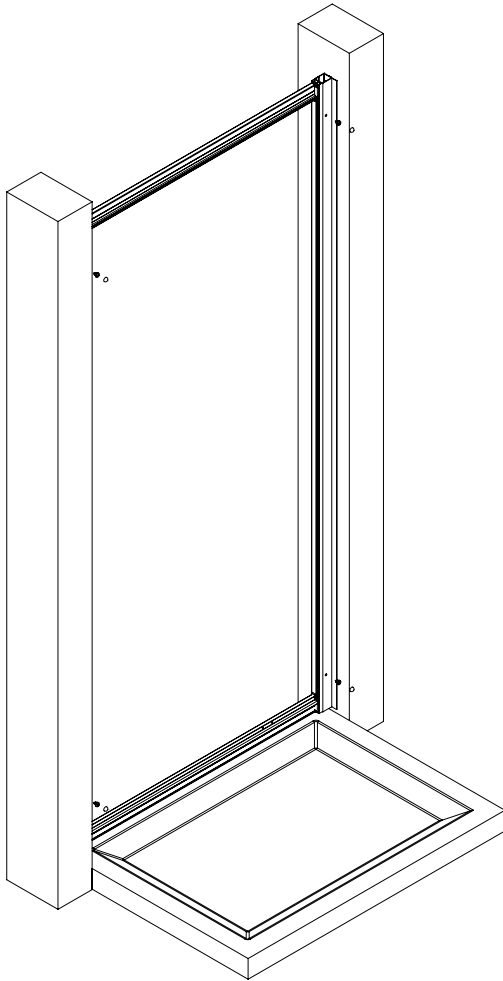


INSTALLATION STEPS
STEP 5-Pivot Assembly Installation

Parts Required:


Part No.	Description	Qty
14	Pivot Assembly	2
15	ST4 × 12 Self-Tapping	2
12	Pivot Base	1

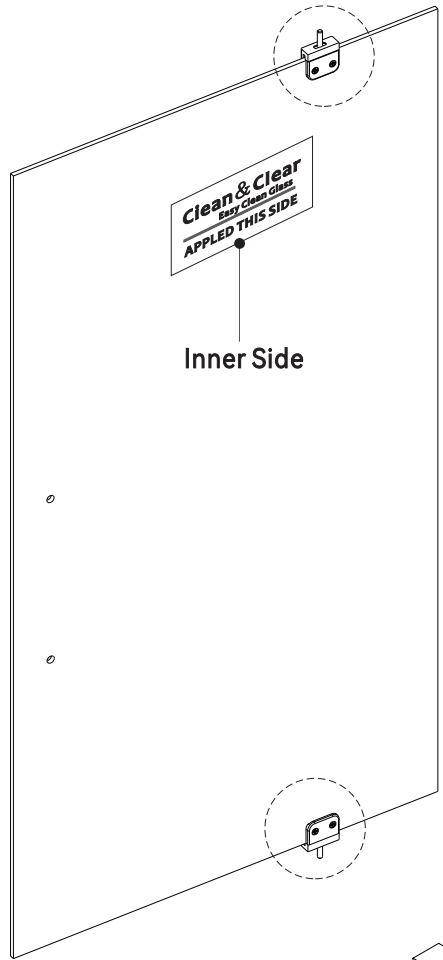



Inner Side

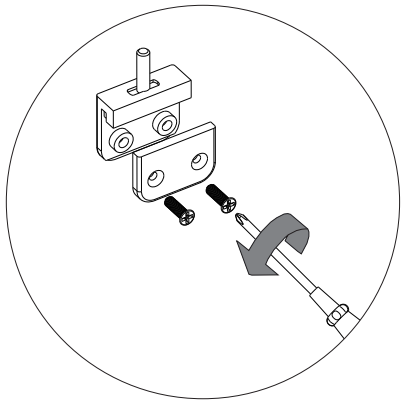

1. Use a Phillips screwdriver to remove the screws from the pivot assembly (#14) and detach the clamp plate.

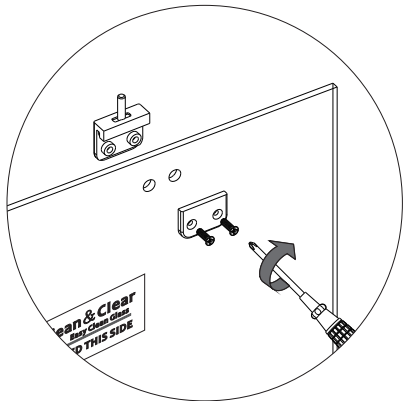

2. Install the pivot assembly onto the top and bottom of the glass door.

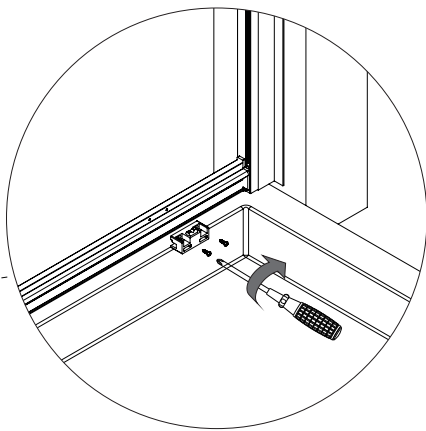
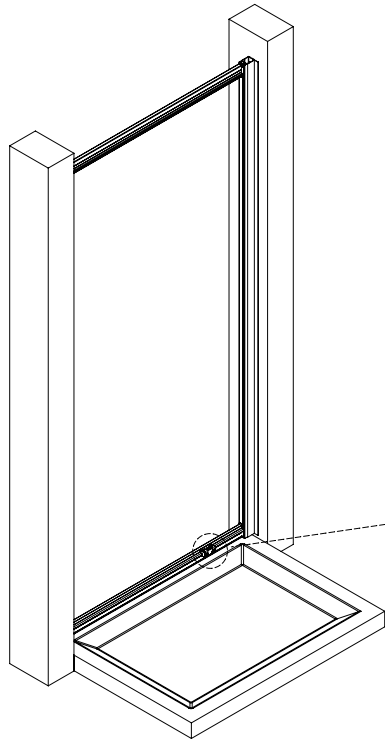


3. Secure the pivot base (#12) to the bottom rail using the ST4x12 self-tapping screws (#15).


INSTALLATION STEPS
STEP 6-Pivot Door Installation

Parts Required:



Part No.	Description	Qty
12	Pivot Base	1
15	ST4 x 12 Self-Tapping	2

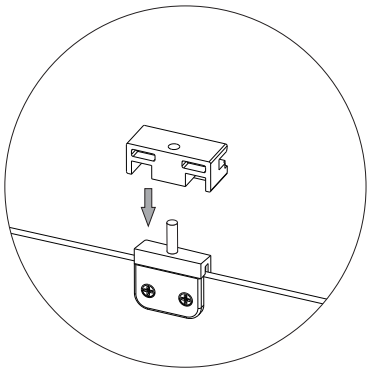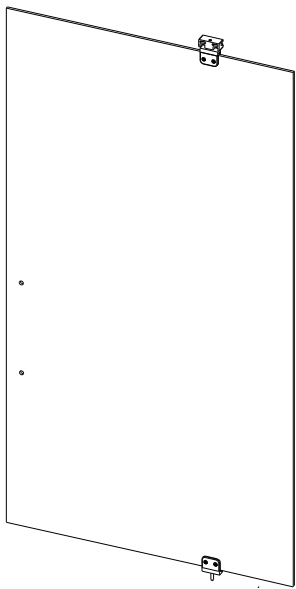


1. Position the pivot base (#12) over the top pivot assembly (#14) that is already attached to the door.

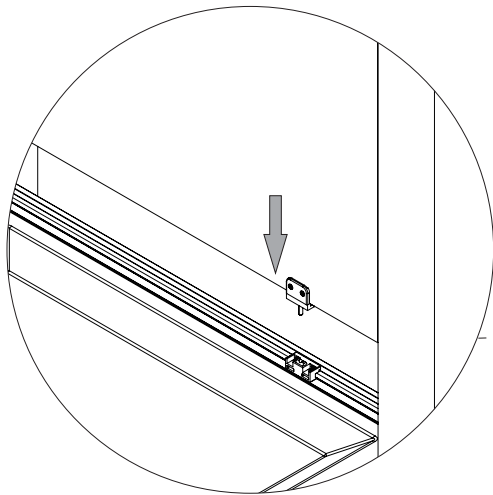

2. Insert the bottom pivot assembly (#14) of the door panel into the pivot base (#12).

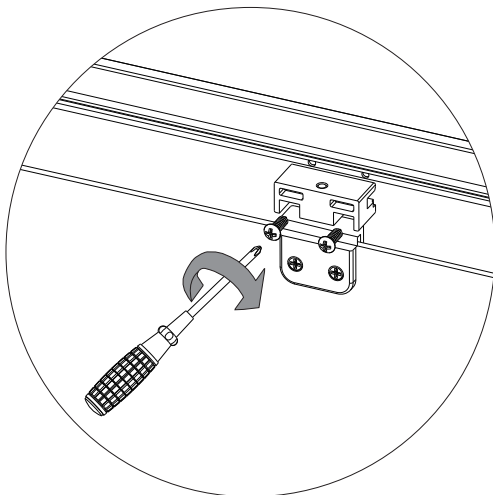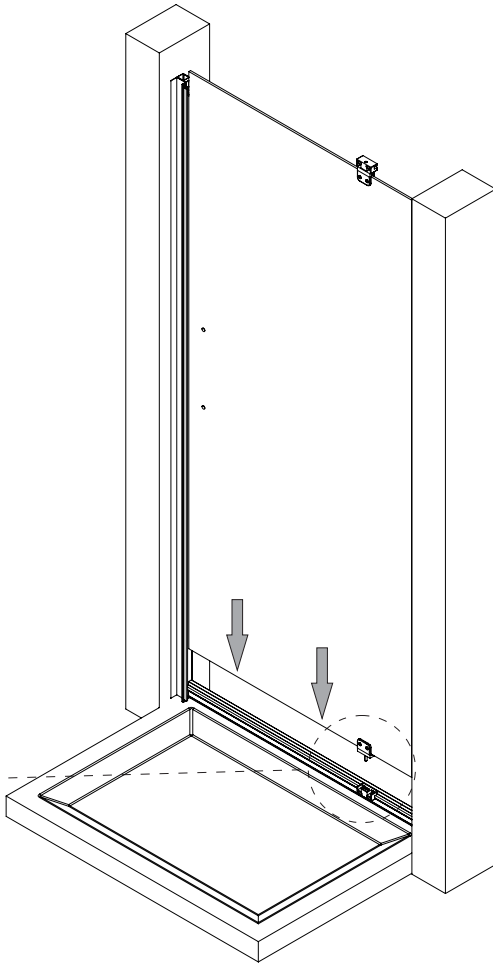


3. Align the pivot base with the pre-drilled hole in the top rail. Secure it using an ST4x12 self-tapping screw (#15).

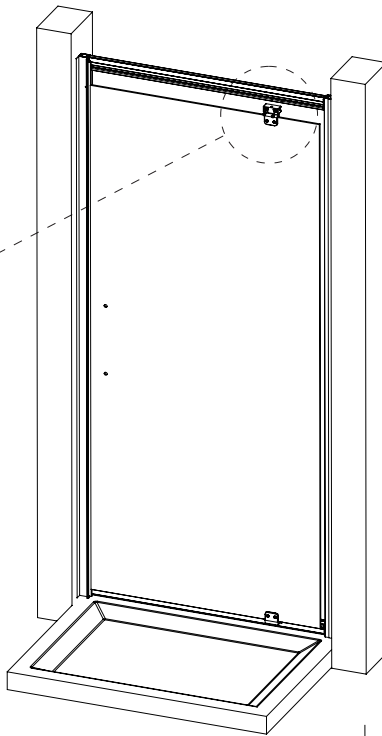

INSTALLATION STEPS
STEP 7-Magnetic Seal and Door Sweep
Installation

Parts Required:


Part No.	Description	Qty
7	Magnetic Seal	1
9	Door Sweep	1

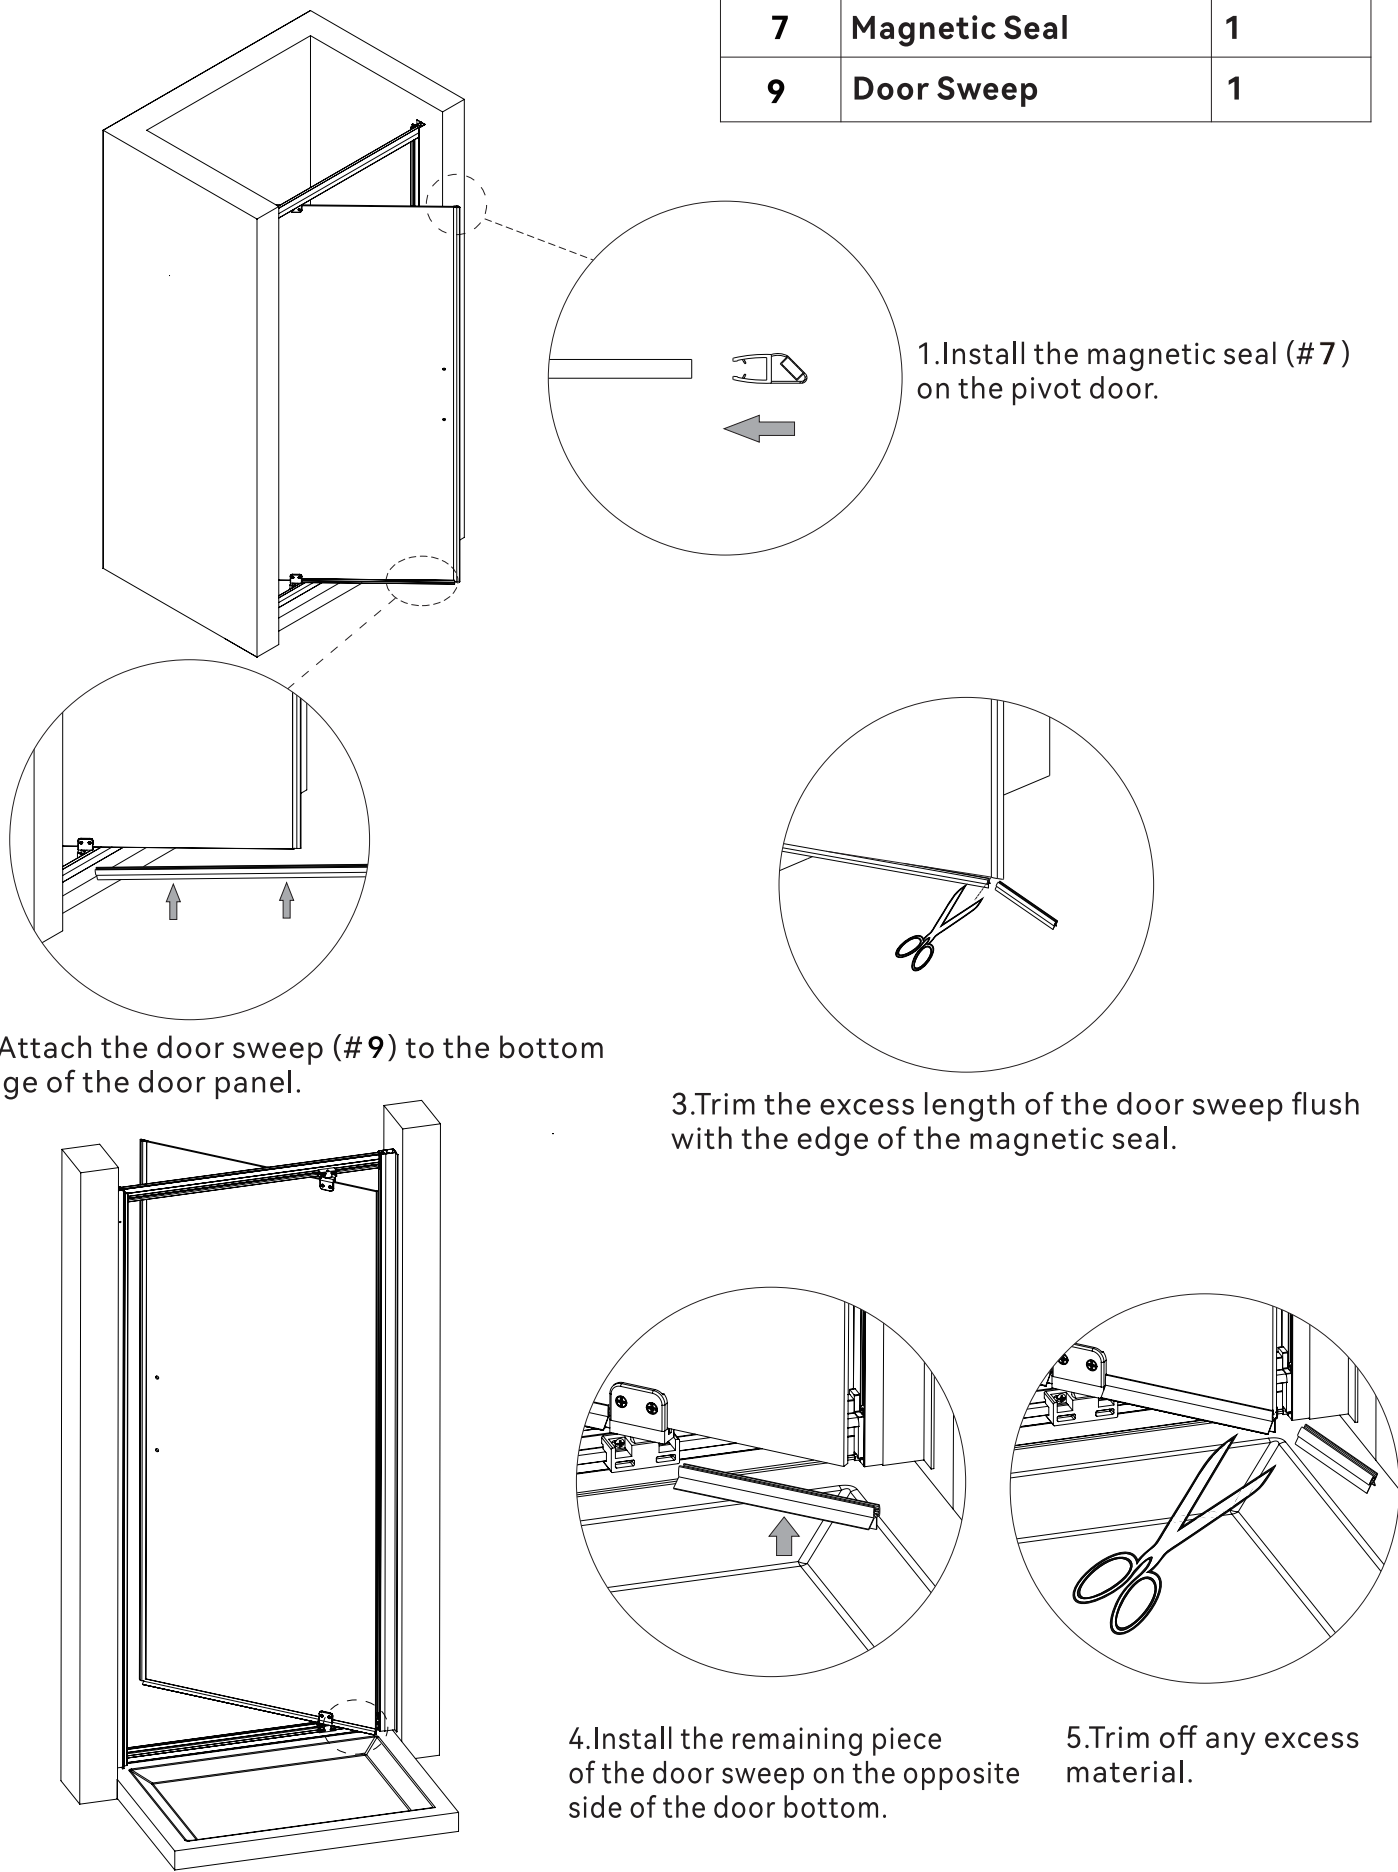

INSTALLATION STEPS
STEP 8- Handle Installation

Parts Required:



Part No.	Description	Qty
8	Shower Door Handle	1

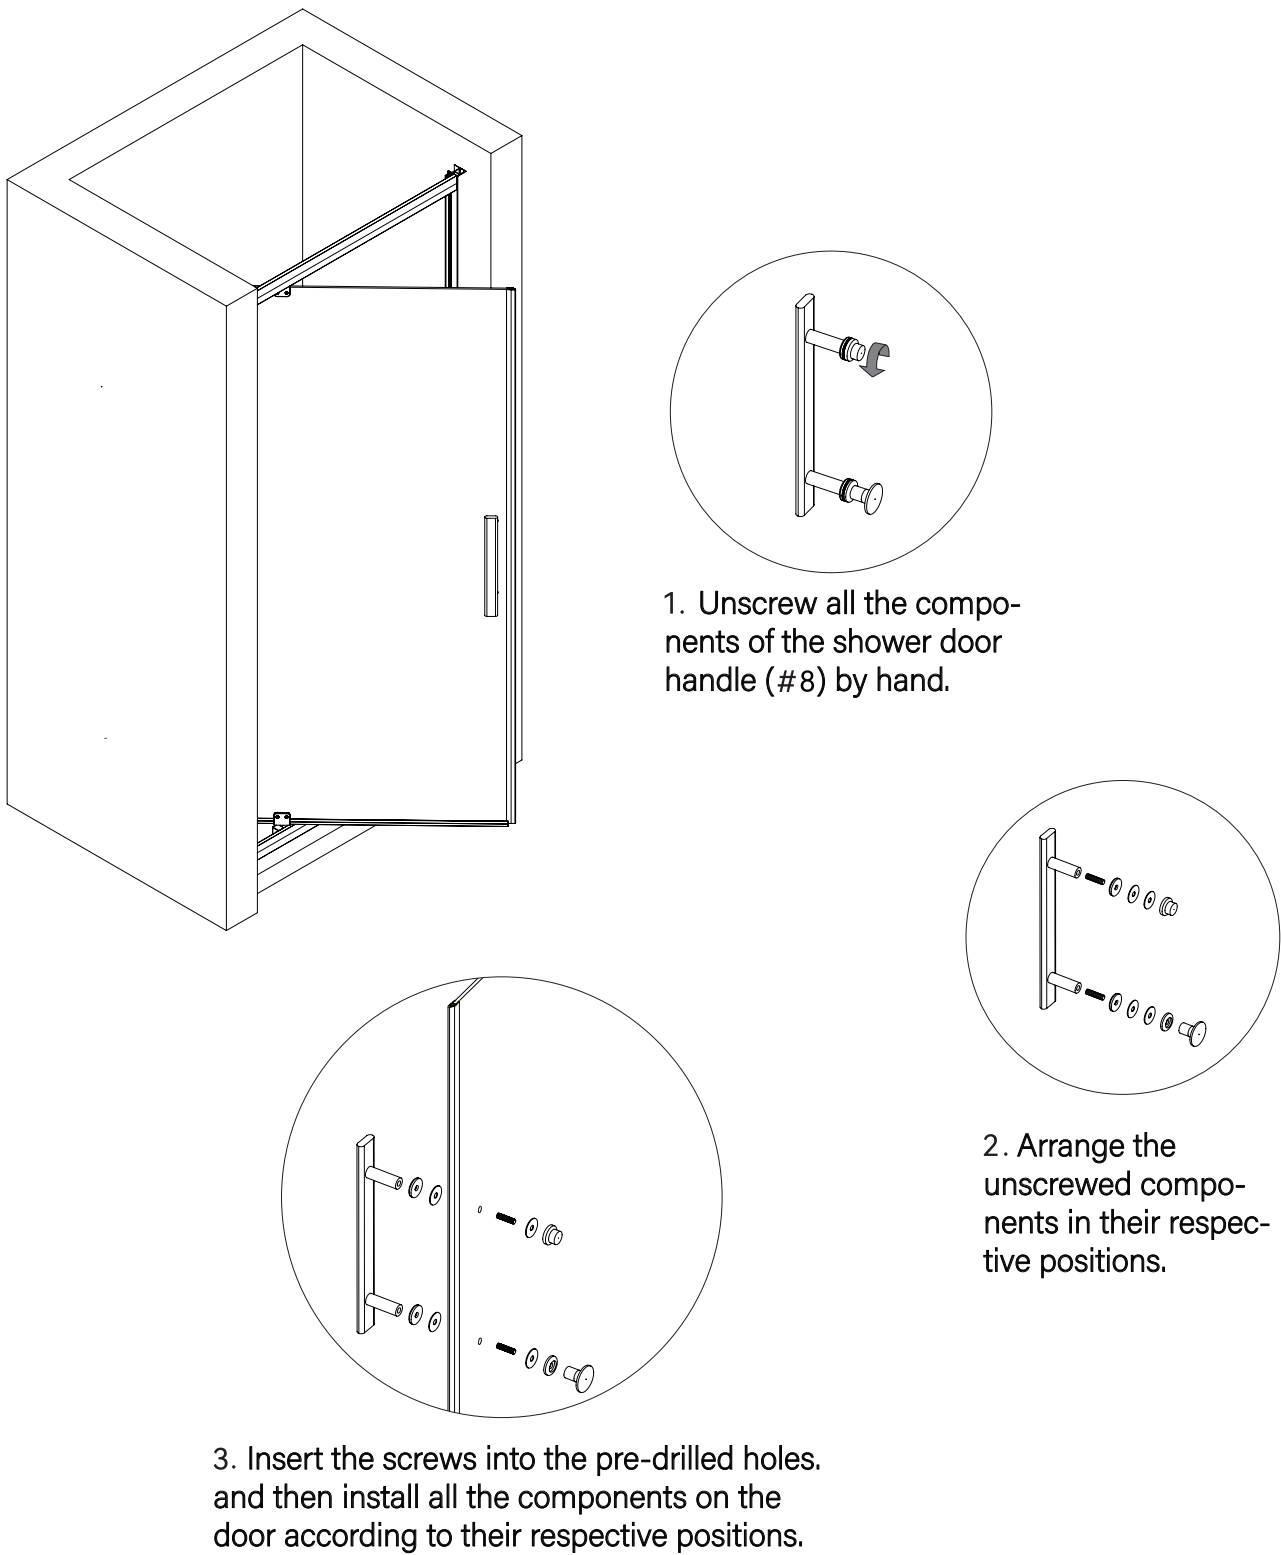



INSTALLATION STEPS
STEP 9-Covers and Caps Installation

Parts Required:


Part No.	Description	Qty
13	Pivot Cover	4
19	Wall Jamb Screw Cap	6
11	Pivot Base Cover	2

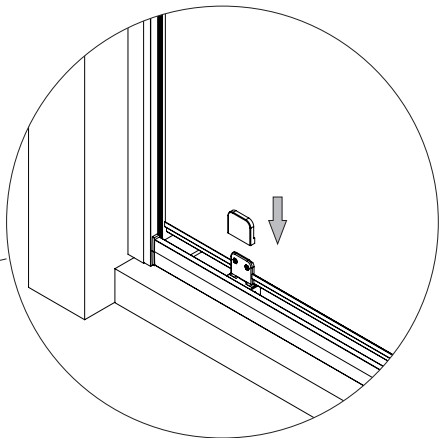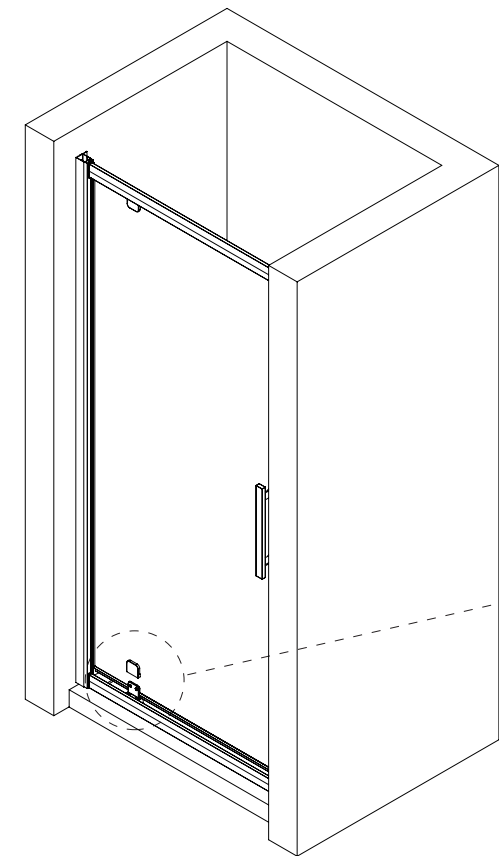

1.Snap the pivot covers (#13) onto the pivot assemblies.

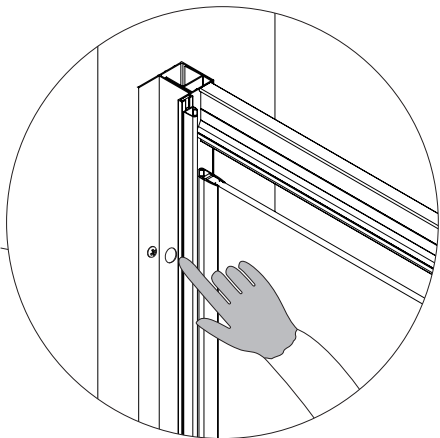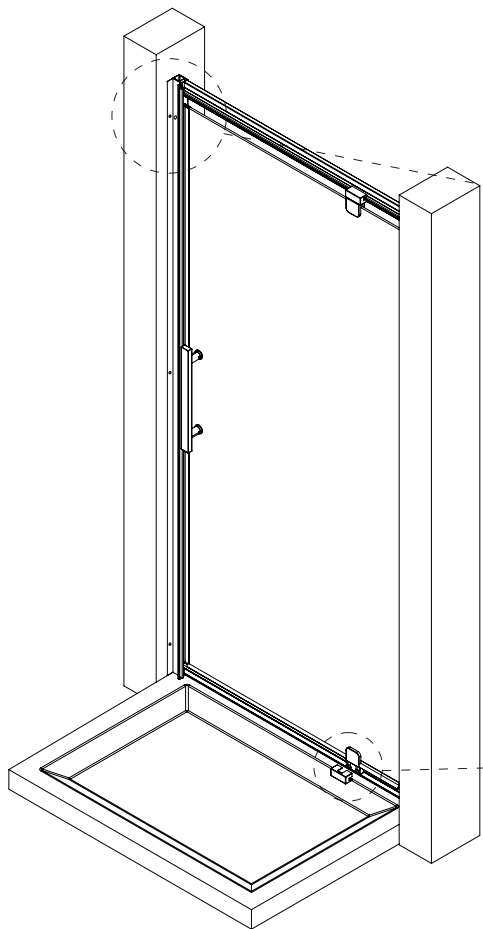


2.Press the wall jamb screw caps (#19) onto the ends of the screws.

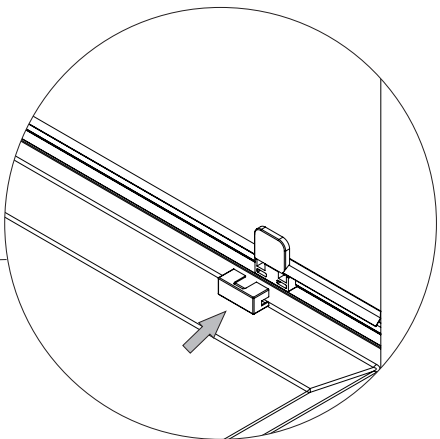

3.Install the pivot base covers (#11).

INSTALLATION STEPS
STEP 10 - Sealing (Before First Use)

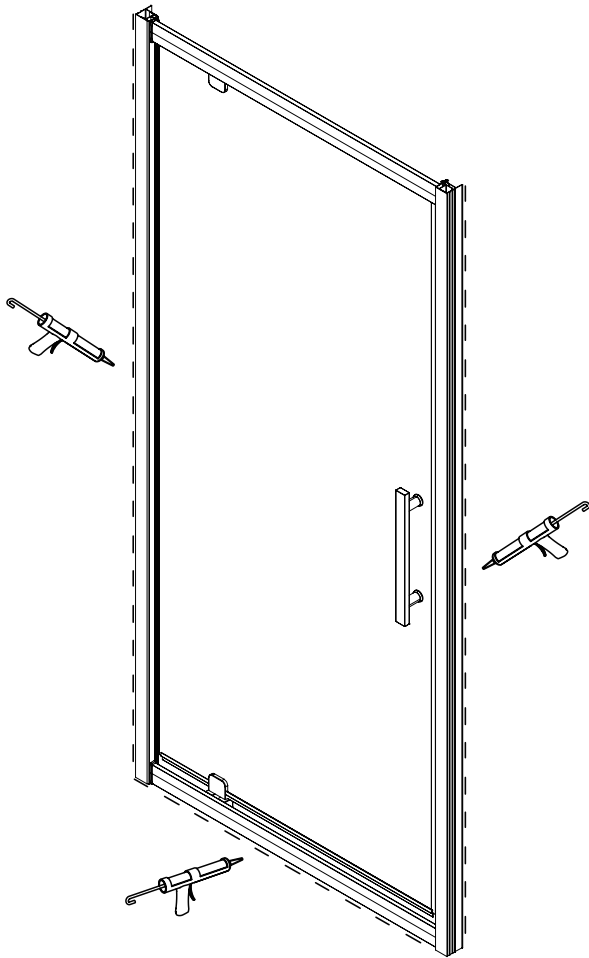

24 HOURS

Application:
Apply a continuous bead of clear, waterproof silicone sealant to:

All wall joints

The interior and exterior edges of the shower threshold

Curing:

Allow the sealant to cure for 24 hours before using the shower.

Avoid all water contact with the sealed areas for the first 48 hours.

Do not clean or touch the sealing during the curing period.

Sealant Specification:

Use 100% silicone, bathroom-grade sealant only.