

Curbside Mailboxes

Applies to Mailbox Model Numbers:

SCF-1003, SCB-1005, STB-1007, SCC-1008, SCS-1014,
SCB-1015, SCH-1016, SCS-1018, SCS-1019


Mailbox Includes:

- One (1) fully assembled mailbox
- Four (4) 1 1/4" (no. 8) mounting screws
- One (1) wood mounting board **(optional)**

Assembly Instructions:

- Attach wood mounting board to any mailbox post
- Four 1 1/4" screws are supplied for attaching the mailbox to the wood mounting board.

(Make sure board does not interfere with door operation.)

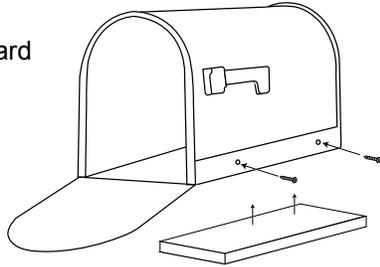

Curbside Mailboxes with NO mounting board required.

Applies to Mailbox Model Numbers:


SCT-1010 and SCK-1017

Mailbox Includes:

- One (1) fully assembled mailbox
- Four (4) M6x20 Bolts,
- Four (4) M6 Nuts & Lock Washers

Assembly Instructions:

- Place M6x20 bolts through the floor of the mailbox mounting bracket
- Secure bolts with supplied M6 Nuts & Lock Washers

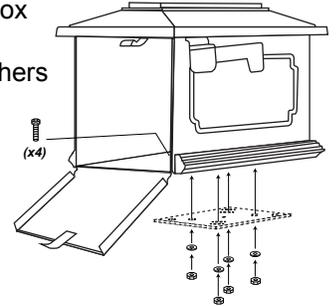

Curbside Mailboxes with Paper Tubes

Applies to Mailbox Model Numbers:



SCF-2003, SCB-2005, STB-2007, SCC-2008, SCT-2010,
SCS-2014, SCB-2015, SCH-2016, SCK-2017

Mailbox Includes:

- One (1) fully assembled mailbox and paper tube
- Four (4) M6x20 Bolts,
- Four (4) M6 Nuts & Lock Washers

Assembly Instructions:

- Place M6x20 bolts through the bottom of the paper tube and the mailbox mounting bracket
- Secure bolts with supplied M6 Nuts & Lock Washers

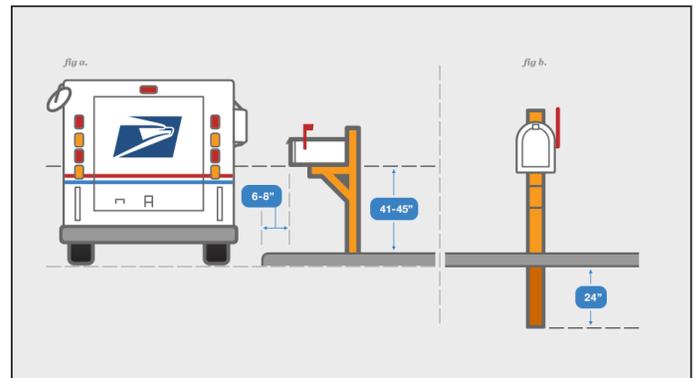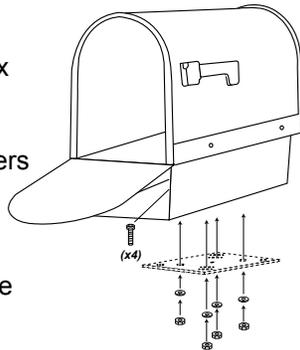

Customers are encouraged to contact the local post office before installing the mailbox to ensure its correct placement and height at the street.

Generally, mailboxes are installed at a height of 41 - 45 inches from the road surface to inside floor of the mailbox or point of mail entry (locked designs) and are set back 6-8 inches from front face of curb or road edge to the mailbox door.

SL 10/06/2021-REV
SL 09/10/2019