

INSTALLATION INSTRUCTIONS




Step 1

First, install the baffle. Align the left and right cabinets, then fasten the baffle between the two cabinets with screws from the inside out.

Use the angle iron as a connector. Align the holes of both side cabinets with the angle iron, then screw them tight to lock everything together."




Reference Picture

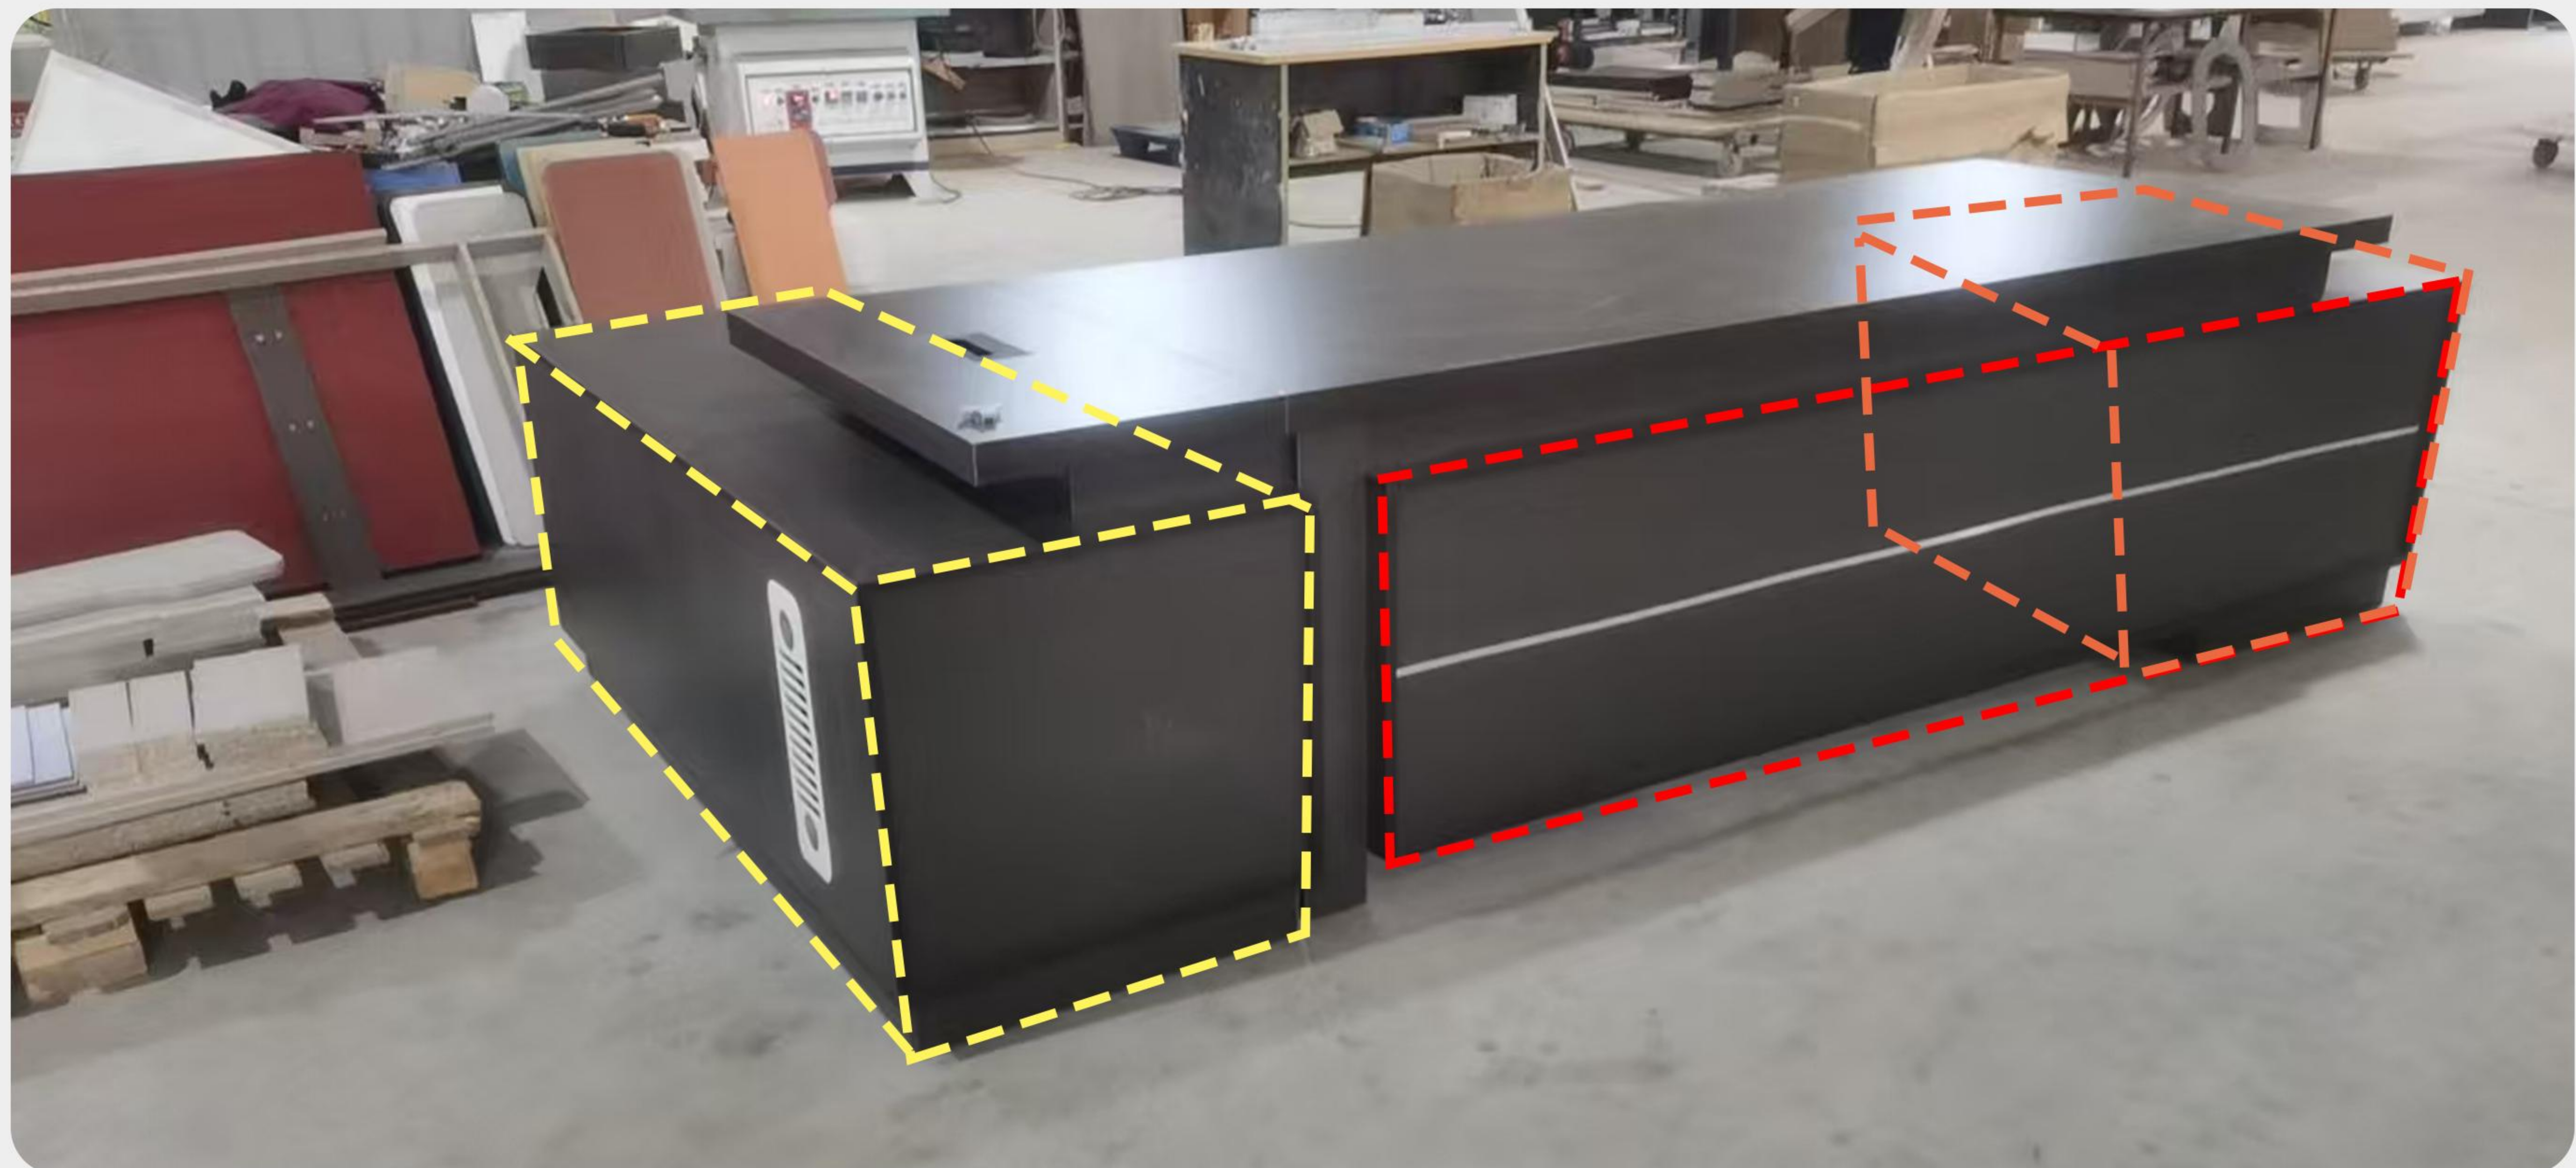

Step2

Then place the long wooden blocks on top of the cabinet and the shelf, align them properly, and secure them from the inside out using screws.

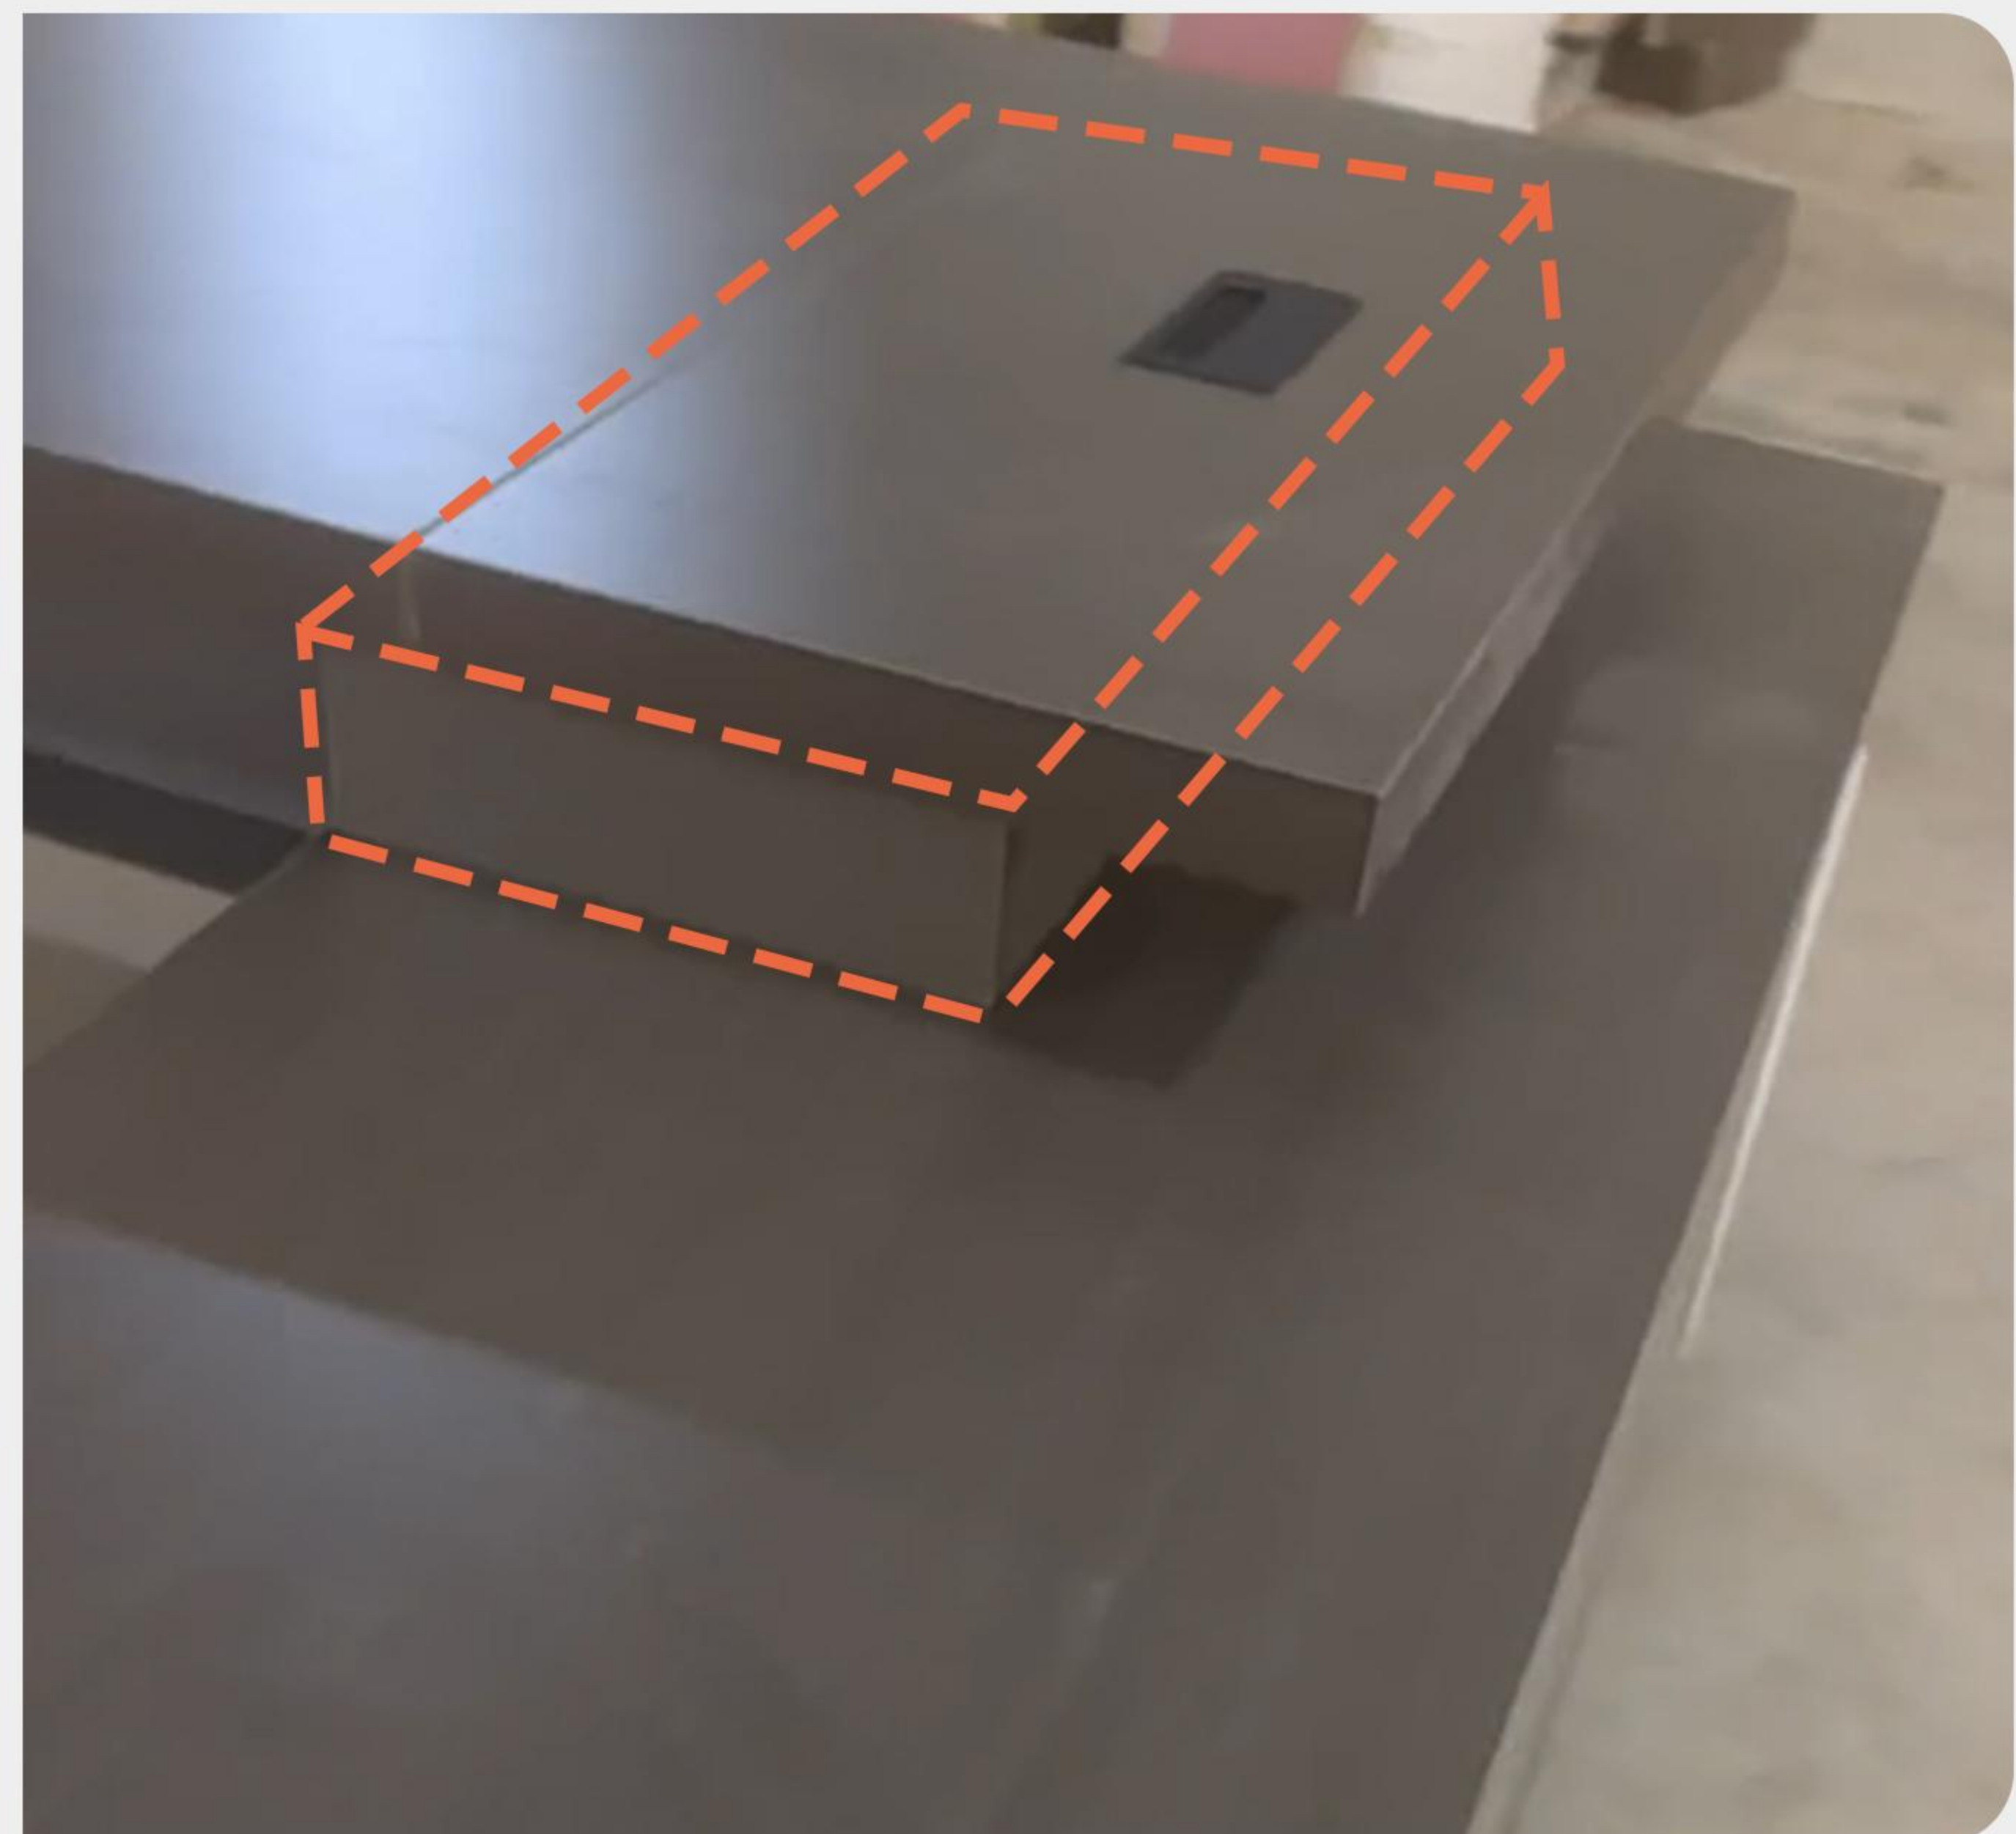

Step3

Finally, install the desktop. After placing the desktop flat and aligning it properly, secure it from the inside out using screws.

