

Universal Welded Wire Pen Assembly Instructions (See Page 2 for how to include Extension Kit)

STEP 1

Lay out front, back and side panels as shown. Side panels are the same height as the low sides of the front and back as pictured in Step 2.



STEP 2

Starting with the back and side panel, attach the two panels together with the back panel on the **outside** using the two clamps in the cut out spaces provided.

*NOTE: If you are removing the knock-out panel, take it out before step 3.



STEP 3

Attach opposite side panel and then front panel (with two clamps per corner) making sure that the front and back panels are on the **outside** of the side panels.



STEP 4

Clamp roof panels to top of cage using two clamps per side. Keeping the cage and roof corners square is very important.



STEP 5

Repeat Step 4 for the 2nd roof panel.





AVAILABLE OPTIONS SHOWN

Wood Chicken Nesting Hutch
Dog House | 5' x 5' Shade Top | Extension Kit





Universal Welded Wire Pen Extension Kit Assembly Instructions

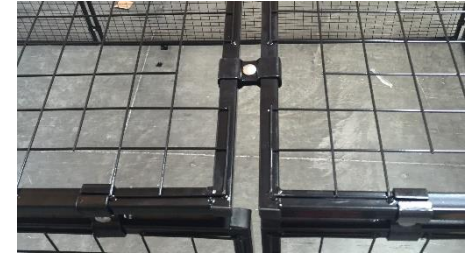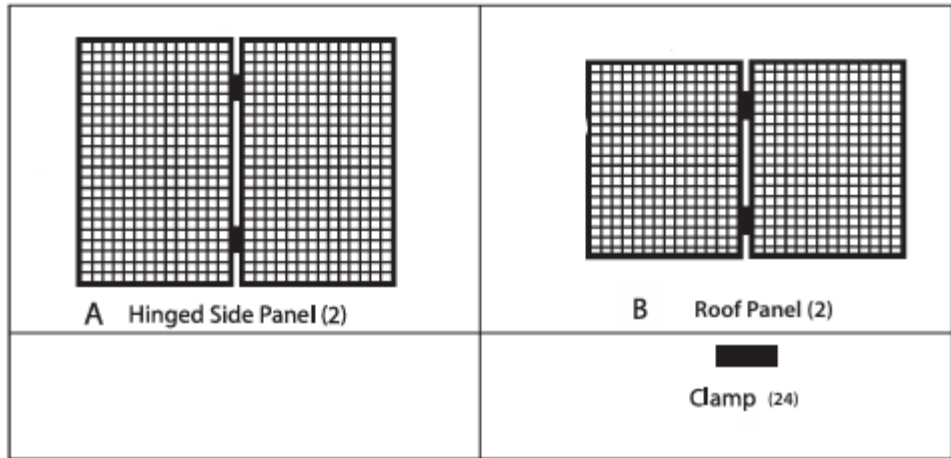

The roof panels that come with the Welded Wire Pen are wider than the roof panels that are in the Extension Kit.

1. The wider roof panels that come with the Welded Wire Pen attach to the front and back sides of the extended Welded Wire Pen as shown.
2. The Roof panels that come with the Extension Kit are for the two middle roof sections. The Extension Kit side panels are the same size as the side panels that come in the Welded Wire Pen, so they can go on either side.
3. Attach Extension Kit roof panels to the side panels as well as between the middle of the roof panels using the two clamps per panel as shown.

Important Note:

A flat level surface is recommended for assembly.

Visit our website to see our complete line of products.
www.RuggedRanch.net

Don't forget to complete your Universal Welded Wire Pen by adding the optional Wooden Chicken Hutch or Dog House! Both accessories attach outside the pen via knock-out, back panel to save room inside.

